THIRD EDITION

# LINEAR SYSTEMS AND SIGNALS

B.P. LATHI ROGER GREEN

OXFORD UNIVERSITY PRESS

### LINEAR SYSTEMS AND SIGNALS

### THE OXFORD SERIES IN ELECTRICAL AND COMPUTER ENGINEERING

Adel S. Sedra, Series Editor

Allen and Holberg, CMOS Analog Circuit Design, 3rd edition Boncelet, Probability, Statistics, and Random Signals Bobrow, Elementary Linear Circuit Analysis, 2nd edition Bobrow, Fundamentals of Electrical Engineering, 2nd edition Campbell, Fabrication Engineering at the Micro- and Nanoscale, 4th edition Chen, Digital Signal Processing Chen, Linear System Theory and Design, 4th edition Chen, Signals and Systems, 3rd edition Comer, Digital Logic and State Machine Design, 3rd edition Comer, Microprocessor-Based System Design Cooper and McGillem, Probabilistic Methods of Signal and System Analysis, 3rd edition Dimitrijev, Principles of Semiconductor Device, 2nd edition Dimitrijev, Understanding Semiconductor Devices Fortney, Principles of Electronics: Analog & Digital Franco, Electric Circuits Fundamentals Ghausi, Electronic Devices and Circuits: Discrete and Integrated Guru and Hiziroğlu, Electric Machinery and Transformers, 3rd edition Houts, Signal Analysis in Linear Systems Jones, Introduction to Optical Fiber Communication Systems Krein, Elements of Power Electronics, 2nd Edition Kuo, Digital Control Systems, 3rd edition Lathi and Green, Linear Systems and Signals, 3rd edition Lathi and Ding, Modern Digital and Analog Communication Systems, 5th edition Lathi, Signal Processing and Linear Systems Martin, Digital Integrated Circuit Design Miner, Lines and Electromagnetic Fields for Engineers Mitra, Signals and Systems Parhami, Computer Architecture Parhami, Computer Arithmetic, 2nd edition Roberts and Sedra, SPICE, 2nd edition Roberts, Taenzler, and Burns, An Introduction to Mixed-Signal IC Test and Measurement, 2nd edition Roulston, An Introduction to the Physics of Semiconductor Devices Sadiku, Elements of Electromagnetics, 7th edition Santina, Stubberud, and Hostetter, Digital Control System Design, 2nd edition Sarma, Introduction to Electrical Engineering Schaumann, Xiao, and Van Valkenburg, Design of Analog Filters, 3rd edition Schwarz and Oldham, Electrical Engineering: An Introduction, 2nd edition Sedra and Smith, Microelectronic Circuits, 7th edition Stefani, Shahian, Savant, and Hostetter, Design of Feedback Control Systems, 4th edition Tsividis, Operation and Modeling of the MOS Transistor, 3rd edition Van Valkenburg, Analog Filter Design Warner and Grung, Semiconductor Device Electronics Wolovich, Automatic Control Systems Yariv and Yeh, Photonics: Optical Electronics in Modern Communications, 6th edition Żak, Systems and Control



# LINEAR SYSTEMS AND SIGNALS

THIRD EDITION

B. P. Lathi and R. A. Green

New York Oxford OXFORD UNIVERSITY PRESS 2018 Oxford University Press is a department of the University of Oxford. It furthers the University's objective of excellence in research, scholarship, and education by publishing worldwide.

Oxford New York Auckland Cape Town Dar es Salaam Hong Kong Karachi Kuala Lumpur Madrid Melbourne Mexico City Nairobi New Delhi Shanghai Taipei Toronto

With offices in Argentina Austria Brazil Chile Czech Republic France Greece Guatemala Hungary Italy Japan Poland Portugal Singapore South Korea Switzerland Thailand Turkey Ukraine Vietnam

Copyright © 2018 by Oxford University Press

For titles covered by Section 112 of the US Higher Education Opportunity Act, please visit www.oup.com/us/he for the latest information about pricing and alternate formats.

Published by Oxford University Press. 198 Madison Avenue, New York, NY 10016 http://www.oup.com

Oxford is a registered trademark of Oxford University Press.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior permission of Oxford University Press.

Library of Congress Cataloging-in-Publication Data Names: Lathi, B. P. (Bhagwandas Pannalal), author. | Green, R. A. (Roger A.), author. Title: Linear systems and signals / B.P. Lathi and R.A. Green. Description: Third Edition. | New York : Oxford University Press, [2018] | Series: The Oxford Series in Electrical and Computer Engineering Identifiers: LCCN 2017034962 | ISBN 9780190200176 (hardcover : acid-free paper) Subjects: LCSH: Signal processing–Mathematics. | System analysis. | Linear time invariant systems. | Digital filters (Mathematics) Classification: LCC TK5102.5 L298 2017 | DDC 621.382/2–dc23 LC record available at https://lccn.loc.gov/2017034962

ISBN 978-0-19-020017-6

Printing number: 9 8 7 6 5 4 3 2 1

Printed by R.R. Donnelly in the United States of America

### **CONTENTS**

PREFACE xv

### B BACKGROUND

- B.1 Complex Numbers 1
  - B.1-1 A Historical Note 1
  - B.1-2 Algebra of Complex Numbers 5
- B.2 Sinusoids 16
  - B.2-1 Addition of Sinusoids 18
  - B.2-2 Sinusoids in Terms of Exponentials 20
- B.3 Sketching Signals 20
  - B.3-1 Monotonic Exponentials 20
  - B.3-2 The Exponentially Varying Sinusoid 22
- B.4 Cramer's Rule 23
- B.5 Partial Fraction Expansion 25
  - B.5-1 Method of Clearing Fractions 26
  - B.5-2 The Heaviside "Cover-Up" Method 27
  - B.5-3 Repeated Factors of Q(x) 31
  - B.5-4 A Combination of Heaviside "Cover-Up" and Clearing Fractions 32
  - B.5-5 Improper F(x) with m = n 34
  - B.5-6 Modified Partial Fractions 35
- B.6 Vectors and Matrices 36
  - B.6-1 Some Definitions and Properties 37
  - B.6-2 Matrix Algebra 38
- B.7 MATLAB: Elementary Operations 42
  - B.7-1 MATLAB Overview 42
  - B.7-2 Calculator Operations 43
  - B.7-3 Vector Operations 45
  - B.7-4 Simple Plotting 46
  - B.7-5 Element-by-Element Operations 48
  - B.7-6 Matrix Operations 49
  - B.7-7 Partial Fraction Expansions 53
- B.8 Appendix: Useful Mathematical Formulas 54
  - B.8-1 Some Useful Constants 54

- B.8-2 Complex Numbers 54
- B.8-3 Sums 54
- B.8-4 Taylor and Maclaurin Series 55
- B.8-5 Power Series 55
- B.8-6 Trigonometric Identities 55
- B.8-7 Common Derivative Formulas 56
- B.8-8 Indefinite Integrals 57
- B.8-9 L'Hôpital's Rule 58
- B.8-10 Solution of Quadratic and Cubic Equations 58

References 58 Problems 59

#### **1 SIGNALS AND SYSTEMS**

- 1.1 Size of a Signal 64
  - 1.1-1 Signal Energy 65
  - 1.1-2 Signal Power 65
- 1.2 Some Useful Signal Operations 71
  - 1.2-1 Time Shifting 71
  - 1.2-2 Time Scaling 73
  - 1.2-3 Time Reversal 76
  - 1.2-4 Combined Operations 77
- 1.3 Classification of Signals 78
  - 1.3-1 Continuous-Time and Discrete-Time Signals 78
  - 1.3-2 Analog and Digital Signals 78
  - 1.3-3 Periodic and Aperiodic Signals 79
  - 1.3-4 Energy and Power Signals 82
  - 1.3-5 Deterministic and Random Signals 82
- 1.4 Some Useful Signal Models 82
  - 1.4-1 The Unit Step Function u(t) 83
  - 1.4-2 The Unit Impulse Function  $\delta(t)$  86
  - 1.4-3 The Exponential Function  $e^{st}$  89
- 1.5 Even and Odd Functions 92
  - 1.5-1 Some Properties of Even and Odd Functions 92
  - 1.5-2 Even and Odd Components of a Signal 93
- 1.6 Systems 95
- 1.7 Classification of Systems 97
  - 1.7-1 Linear and Nonlinear Systems 97
  - 1.7-2 Time-Invariant and Time-Varying Systems 102
  - 1.7-3 Instantaneous and Dynamic Systems 103
  - 1.7-4 Causal and Noncausal Systems 104
  - 1.7-5 Continuous-Time and Discrete-Time Systems 107
  - 1.7-6 Analog and Digital Systems 109
  - 1.7-7 Invertible and Noninvertible Systems 109
  - 1.7-8 Stable and Unstable Systems 110

- 1.8 System Model: Input–Output Description 111
  - 1.8-1 Electrical Systems 111
  - 1.8-2 Mechanical Systems 114
  - 1.8-3 Electromechanical Systems 118
- 1.9 Internal and External Descriptions of a System 119
- 1.10 Internal Description: The State-Space Description 121
- 1.11 MATLAB: Working with Functions 126
  - 1.11-1 Anonymous Functions 126
  - 1.11-2 Relational Operators and the Unit Step Function 128
  - 1.11-3 Visualizing Operations on the Independent Variable 130
  - 1.11-4 Numerical Integration and Estimating Signal Energy 131
- 1.12 Summary 133

References 135 Problems 136

### 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

- 2.1 Introduction 150
- 2.2 System Response to Internal Conditions: The Zero-Input Response 151
   2.2-1 Some Insights into the Zero-Input Behavior of a System 161
- 2.3 The Unit Impulse Response h(t) 163
- 2.4 System Response to External Input: The Zero-State Response 168
  - 2.4-1 The Convolution Integral 170
  - 2.4-2 Graphical Understanding of Convolution Operation 178
  - 2.4-3 Interconnected Systems 190
  - 2.4-4 A Very Special Function for LTIC Systems:
    - The Everlasting Exponential  $e^{st}$  193
  - 2.4-5 Total Response 195
- 2.5 System Stability 196
  - 2.5-1 External (BIBO) Stability 196
  - 2.5-2 Internal (Asymptotic) Stability 198
  - 2.5-3 Relationship Between BIBO and Asymptotic Stability 199
- 2.6 Intuitive Insights into System Behavior 203
  - 2.6-1 Dependence of System Behavior on Characteristic Modes 203
  - 2.6-2 Response Time of a System: The System Time Constant 205
  - 2.6-3 Time Constant and Rise Time of a System 206
  - 2.6-4 Time Constant and Filtering 207
  - 2.6-5 Time Constant and Pulse Dispersion (Spreading) 209
  - 2.6-6 Time Constant and Rate of Information Transmission 209
  - 2.6-7 The Resonance Phenomenon 210
- 2.7 MATLAB: M-Files 212
  - 2.7-1 Script M-Files 213
  - 2.7-2 Function M-Files 214

- 2.7-3 For-Loops 215
- 2.7-4 Graphical Understanding of Convolution 217
- 2.8 Appendix: Determining the Impulse Response 220
- 2.9 Summary 221

References 223 Problems 223

### 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

- 3.1 Introduction 237
  - 3.1-1 Size of a Discrete-Time Signal 238
- 3.2 Useful Signal Operations 240
- 3.3 Some Useful Discrete-Time Signal Models 245
  - 3.3-1 Discrete-Time Impulse Function  $\delta[n]$  245
  - 3.3-2 Discrete-Time Unit Step Function u[n] 246
  - 3.3-3 Discrete-Time Exponential  $\gamma^n$  247
  - 3.3-4 Discrete-Time Sinusoid  $\cos(\Omega n + \theta)$  251
  - 3.3-5 Discrete-Time Complex Exponential  $e^{j\Omega n}$  252
- 3.4 Examples of Discrete-Time Systems 253
  - 3.4-1 Classification of Discrete-Time Systems 262
- 3.5 Discrete-Time System Equations 2653.5-1 Recursive (Iterative) Solution of Difference Equation 266
- 3.6 System Response to Internal Conditions: The Zero-Input Response 270
- 3.7 The Unit Impulse Response h[n] 277
  - 3.7-1 The Closed-Form Solution of h[n] 278
- 3.8 System Response to External Input: The Zero-State Response 280
  - 3.8-1 Graphical Procedure for the Convolution Sum 288
  - 3.8-2 Interconnected Systems 294
  - 3.8-3 Total Response 297
- 3.9 System Stability 298
  - 3.9-1 External (BIBO) Stability 298
  - 3.9-2 Internal (Asymptotic) Stability 299
  - 3.9-3 Relationship Between BIBO and Asymptotic Stability 301
- 3.10 Intuitive Insights into System Behavior 305
- 3.11 MATLAB: Discrete-Time Signals and Systems 306
  - 3.11-1 Discrete-Time Functions and Stem Plots 306
  - 3.11-2 System Responses Through Filtering 308
  - 3.11-3 A Custom Filter Function 310
  - 3.11-4 Discrete-Time Convolution 311
- 3.12 Appendix: Impulse Response for a Special Case 313
- 3.13 Summary 313

Problems 314

# 4 CONTINUOUS-TIME SYSTEM ANALYSIS USING THE LAPLACE TRANSFORM

- 4.1 The Laplace Transform 330
  - 4.1-1 Finding the Inverse Transform 338
- 4.2 Some Properties of the Laplace Transform 349
  - 4.2-1 Time Shifting 349
  - 4.2-2 Frequency Shifting 353
  - 4.2-3 The Time-Differentiation Property 354
  - 4.2-4 The Time-Integration Property 356
  - 4.2-5 The Scaling Property 357
  - 4.2-6 Time Convolution and Frequency Convolution 357
- 4.3 Solution of Differential and Integro-Differential Equations 360
  - 4.3-1 Comments on Initial Conditions at  $0^-$  and at  $0^+$  363
  - 4.3-2 Zero-State Response 366
  - 4.3-3 Stability 371
  - 4.3-4 Inverse Systems 373
- 4.4 Analysis of Electrical Networks: The Transformed Network 373
  - 4.4-1 Analysis of Active Circuits 382
- 4.5 Block Diagrams 386
- 4.6 System Realization 388
  - 4.6-1 Direct Form I Realization 389
  - 4.6-2 Direct Form II Realization 390
  - 4.6-3 Cascade and Parallel Realizations 393
  - 4.6-4 Transposed Realization 396
  - 4.6-5 Using Operational Amplifiers for System Realization 399
- 4.7 Application to Feedback and Controls 404
  - 4.7-1 Analysis of a Simple Control System 406
- 4.8 Frequency Response of an LTIC System 412
  - 4.8-1 Steady-State Response to Causal Sinusoidal Inputs 418
- 4.9 Bode Plots 419
  - 4.9-1 Constant  $Ka_1a_2/b_1b_3$  422
  - 4.9-2 Pole (or Zero) at the Origin 422
  - 4.9-3 First-Order Pole (or Zero) 424
  - 4.9-4 Second-Order Pole (or Zero) 426
  - 4.9-5 The Transfer Function from the Frequency Response 435
- 4.10 Filter Design by Placement of Poles and Zeros of H(s) 436
  - 4.10-1 Dependence of Frequency Response on Poles and Zeros of H(s) 436
  - 4.10-2 Lowpass Filters 439
  - 4.10-3 Bandpass Filters 441
  - 4.10-4 Notch (Bandstop) Filters 441
  - 4.10-5 Practical Filters and Their Specifications 444
- 4.11 The Bilateral Laplace Transform 445

х

- 4.11-1 Properties of the Bilateral Laplace Transform 451
- 4.11-2 Using the Bilateral Transform for Linear System Analysis 452
- 4.12 MATLAB: Continuous-Time Filters 455
  - 4.12-1 Frequency Response and Polynomial Evaluation 456
  - 4.12-2 Butterworth Filters and the Find Command 459
  - 4.12-3 Using Cascaded Second-Order Sections for Butterworth Filter Realization 461
  - 4.12-4 Chebyshev Filters 463
- 4.13 Summary 466

References 468 Problems 468

### 5 DISCRETE-TIME SYSTEM ANALYSIS USING THE *z*-TRANSFORM

- 5.1 The *z*-Transform 488
  - 5.1-1 Inverse Transform by Partial Fraction Expansion and Tables 495
  - 5.1-2 Inverse *z*-Transform by Power Series Expansion 499
- 5.2 Some Properties of the *z*-Transform 501
  - 5.2-1 Time-Shifting Properties 501
  - 5.2-2 *z*-Domain Scaling Property (Multiplication by  $\gamma^n$ ) 505
  - 5.2-3 z-Domain Differentiation Property (Multiplication by n) 506
  - 5.2-4 Time-Reversal Property 506
  - 5.2-5 Convolution Property 507
- 5.3 *z*-Transform Solution of Linear Difference Equations 510
  - 5.3-1 Zero-State Response of LTID Systems: The Transfer Function 514
  - 5.3-2 Stability 518
  - 5.3-3 Inverse Systems 519
- 5.4 System Realization 519
- 5.5 Frequency Response of Discrete-Time Systems 526
  - 5.5-1 The Periodic Nature of Frequency Response 532
  - 5.5-2 Aliasing and Sampling Rate 536
- 5.6 Frequency Response from Pole-Zero Locations 538
- 5.7 Digital Processing of Analog Signals 547
- 5.8 The Bilateral z-Transform 554
  - 5.8-1 Properties of the Bilateral *z*-Transform 559
  - 5.8-2 Using the Bilateral *z*-Transform for Analysis of LTID Systems 560
- 5.9 Connecting the Laplace and *z*-Transforms 563
- 5.10 MATLAB: Discrete-Time IIR Filters 565
  - 5.10-1 Frequency Response and Pole-Zero Plots 566
  - 5.10-2 Transformation Basics 567
  - 5.10-3 Transformation by First-Order Backward Difference 568
  - 5.10-4 Bilinear Transformation 569
  - 5.10-5 Bilinear Transformation with Prewarping 570
  - 5.10-6 Example: Butterworth Filter Transformation 571

xi

5.10-7 Problems Finding Polynomial Roots 572

5.10-8 Using Cascaded Second-Order Sections to Improve Design 572

5.11 Summary 574

References 575 Problems 575

### 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

- 6.1 Periodic Signal Representation by Trigonometric Fourier Series 593
  - 6.1-1 The Fourier Spectrum 598
  - 6.1-2 The Effect of Symmetry 607
  - 6.1-3 Determining the Fundamental Frequency and Period 609
- 6.2 Existence and Convergence of the Fourier Series 612
  - 6.2-1 Convergence of a Series 613
  - 6.2-2 The Role of Amplitude and Phase Spectra in Waveshaping 615
- 6.3 Exponential Fourier Series 621
  - 6.3-1 Exponential Fourier Spectra 624
  - 6.3-2 Parseval's Theorem 632
  - 6.3-3 Properties of the Fourier Series 635
- 6.4 LTIC System Response to Periodic Inputs 637
- 6.5 Generalized Fourier Series: Signals as Vectors 641
  - 6.5-1 Component of a Vector 642
  - 6.5-2 Signal Comparison and Component of a Signal 643
  - 6.5-3 Extension to Complex Signals 645
  - 6.5-4 Signal Representation by an Orthogonal Signal Set 647
- 6.6 Numerical Computation of  $D_n$  659
- 6.7 MATLAB: Fourier Series Applications 661
  - 6.7-1 Periodic Functions and the Gibbs Phenomenon 661
  - 6.7-2 Optimization and Phase Spectra 664
- 6.8 Summary 667

References 668 Problems 669

# 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

- 7.1 Aperiodic Signal Representation by the Fourier Integral 6807.1-1 Physical Appreciation of the Fourier Transform 687
- 7.2 Transforms of Some Useful Functions 689
  - 7.2-1 Connection Between the Fourier and Laplace Transforms 700
- 7.3 Some Properties of the Fourier Transform 701
- 7.4 Signal Transmission Through LTIC Systems 721
  - 7.4-1 Signal Distortion During Transmission 723
  - 7.4-2 Bandpass Systems and Group Delay 726

#### xii Contents

- 7.5 Ideal and Practical Filters 730
- 7.6 Signal Energy 733
- 7.7 Application to Communications: Amplitude Modulation 736
  - 7.7-1 Double-Sideband, Suppressed-Carrier (DSB-SC) Modulation 737
  - 7.7-2 Amplitude Modulation (AM) 742
  - 7.7-3 Single-Sideband Modulation (SSB) 746
  - 7.7-4 Frequency-Division Multiplexing 749
- 7.8 Data Truncation: Window Functions 749
  - 7.8-1 Using Windows in Filter Design 755
- 7.9 MATLAB: Fourier Transform Topics 755
  - 7.9-1 The Sinc Function and the Scaling Property 757
  - 7.9-2 Parseval's Theorem and Essential Bandwidth 758
  - 7.9-3 Spectral Sampling 759
  - 7.9-4 Kaiser Window Functions 760
- 7.10 Summary 762

References 763 Problems 764

## 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

- 8.1 The Sampling Theorem 7768.1-1 Practical Sampling 781
- 8.2 Signal Reconstruction 785
  - 8.2-1 Practical Difficulties in Signal Reconstruction 788
  - 8.2-2 Some Applications of the Sampling Theorem 796
- 8.3 Analog-to-Digital (A/D) Conversion 799
- 8.4 Dual of Time Sampling: Spectral Sampling 802
- 8.5 Numerical Computation of the Fourier Transform: The Discrete Fourier Transform 805
  - 8.5-1 Some Properties of the DFT 818
  - 8.5-2 Some Applications of the DFT 820
- 8.6 The Fast Fourier Transform (FFT) 824
- 8.7 MATLAB: The Discrete Fourier Transform 827
  - 8.7-1 Computing the Discrete Fourier Transform 827
  - 8.7-2 Improving the Picture with Zero Padding 829
  - 8.7-3 Quantization 831
- 8.8 Summary 834

References 835 Problems 835

### 9 FOURIER ANALYSIS OF DISCRETE-TIME SIGNALS

- 9.1 Discrete-Time Fourier Series (DTFS) 845
  - 9.1-1 Periodic Signal Representation by Discrete-Time Fourier Series 846
  - 9.1-2 Fourier Spectra of a Periodic Signal x[n] 848
- 9.2 Aperiodic Signal Representation
  - by Fourier Integral 855
    - 9.2-1 Nature of Fourier Spectra 858
    - 9.2-2 Connection Between the DTFT and the *z*-Transform 866
- 9.3 Properties of the DTFT 867
- 9.4 LTI Discrete-Time System Analysis by DTFT 878
  - 9.4-1 Distortionless Transmission 880
  - 9.4-2 Ideal and Practical Filters 882
- 9.5 DTFT Connection with the CTFT 883
  - 9.5-1 Use of DFT and FFT for Numerical Computation of the DTFT 885
- 9.6 Generalization of the DTFT to the *z*-Transform 886
- 9.7 MATLAB: Working with the DTFS and the DTFT 889
  - 9.7-1 Computing the Discrete-Time Fourier Series 889
  - 9.7-2 Measuring Code Performance 891
  - 9.7-3 FIR Filter Design by Frequency Sampling 892
- 9.8 Summary 898

Reference 898 Problems 899

### **10 STATE-SPACE ANALYSIS**

- 10.1 Mathematical Preliminaries 909
  - 10.1-1 Derivatives and Integrals of a Matrix 909
  - 10.1-2 The Characteristic Equation of a Matrix:
    - The Cayley–Hamilton Theorem 910
  - 10.1-3 Computation of an Exponential and a Power of a Matrix 912
- 10.2 Introduction to State Space 913
- 10.3 A Systematic Procedure to Determine State Equations 916
  - 10.3-1 Electrical Circuits 916
  - 10.3-2 State Equations from a Transfer Function 919
- 10.4 Solution of State Equations 926
  - 10.4-1 Laplace Transform Solution of State Equations 927
  - 10.4-2 Time-Domain Solution of State Equations 933
- 10.5 Linear Transformation of a State Vector 939
  - 10.5-1 Diagonalization of Matrix A 943
- 10.6 Controllability and Observability 947
  - 10.6-1 Inadequacy of the Transfer Function Description of a System 953

10.7 State-Space Analysis of Discrete-Time Systems 953

10.7-1 Solution in State Space 955

10.7-2 The z-Transform Solution 959

10.8 MATLAB: Toolboxes and State-Space Analysis 961

10.8-1 z-Transform Solutions to Discrete-Time, State-Space Systems 961

10.8-2 Transfer Functions from State-Space Representations 964

10.8-3 Controllability and Observability of Discrete-Time Systems 965

10.8-4 Matrix Exponentiation and the Matrix Exponential 968

10.9 Summary 969

References 970 Problems 970

INDEX 975

### PREFACE

This book, *Linear Systems and Signals*, presents a comprehensive treatment of signals and linear systems at an introductory level. Following our preferred style, it emphasizes a physical appreciation of concepts through heuristic reasoning and the use of metaphors, analogies, and creative explanations. Such an approach is much different from a purely deductive technique that uses mere mathematical manipulation of symbols. There is a temptation to treat engineering subjects as a branch of applied mathematics. Such an approach is a perfect match to the public image of engineering as a dry and dull discipline. It ignores the physical meaning behind various derivations and deprives students of intuitive grasp and the enjoyable experience of logical uncovering of the subject matter. In this book, we use mathematics not so much to prove axiomatic theory as to support and enhance physical and intuitive understanding. Wherever possible, theoretical results are interpreted heuristically and are enhanced by carefully chosen examples and analogies.

This third edition, which closely follows the organization of the second edition, has been refined in many ways. Discussions are streamlined, adding or trimming material as needed. Equation, example, and section labeling is simplified and improved. Computer examples are fully updated to reflect the most current version of MATLAB. Hundreds of added problems provide new opportunities to learn and understand topics. We have taken special care to improve the text without the topic creep and bloat that commonly occurs with each new edition of a text.

### **NOTABLE FEATURES**

The notable features of this book include the following.

- 1. Intuitive and heuristic understanding of the concepts and physical meaning of mathematical results are emphasized throughout. Such an approach not only leads to deeper appreciation and easier comprehension of the concepts, but also makes learning enjoyable for students.
- 2. Often, students lack an adequate background in basic material such as complex numbers, sinusoids, hand-sketching of functions, Cramer's rule, partial fraction expansion, and matrix algebra. We include a background chapter that addresses these basic and pervasive topics in electrical engineering. Response by students has been unanimously enthusiastic.
- 3. There are hundreds of worked examples in addition to drills (usually with answers) for students to test their understanding. Additionally, there are over 900 end-of-chapter problems of varying difficulty.
- 4. Modern electrical engineering practice requires the use of computer calculation and simulation, most often using the software package MATLAB. Thus, we integrate

MATLAB into many of the worked examples throughout the book. Additionally, each chapter concludes with a section devoted to learning and using MATLAB in the context and support of book topics. Problem sets also contain numerous computer problems.

- 5. The discrete-time and continuous-time systems may be treated in sequence, or they may be integrated by using a parallel approach.
- 6. The summary at the end of each chapter proves helpful to students in summing up essential developments in the chapter.
- 7. There are several historical notes to enhance students' interest in the subject. This information introduces students to the historical background that influenced the development of electrical engineering.

### ORGANIZATION

The book may be conceived as divided into five parts:

- 1. Introduction (Chs. B and 1).
- 2. Time-domain analysis of linear time-invariant (LTI) systems (Chs. 2 and 3).
- 3. Frequency-domain (transform) analysis of LTI systems (Chs. 4 and 5).
- 4. Signal analysis (Chs. 6, 7, 8, and 9).
- 5. State-space analysis of LTI systems (Ch. 10).

The organization of the book permits much flexibility in teaching the continuous-time and discrete-time concepts. The natural sequence of chapters is meant to integrate continuous-time and discrete-time analysis. It is also possible to use a sequential approach in which all the continuous-time analysis is covered first (Chs. 1, 2, 4, 6, 7, and 8), followed by discrete-time analysis (Chs. 3, 5, and 9).

### **SUGGESTIONS FOR USING THIS BOOK**

The book can be readily tailored for a variety of courses spanning 30 to 45 lecture hours. Most of the material in the first eight chapters can be covered at a brisk pace in about 45 hours. The book can also be used for a 30-lecture-hour course by covering only analog material (Chs. 1, 2, 4, 6, 7, and possibly selected topics in Ch. 8). Alternately, one can also select Chs. 1 to 5 for courses purely devoted to systems analysis or transform techniques. To treat continuous- and discrete-time systems by using an integrated (or parallel) approach, the appropriate sequence of chapters is 1, 2, 3, 4, 5, 6, 7, and 8. For a sequential approach, where the continuous-time analysis is followed by discrete-time analysis, the proper chapter sequence is 1, 2, 4, 6, 7, 8, 3, 5, and possibly 9 (depending on the time available).

### MATLAB

MATLAB is a sophisticated language that serves as a powerful tool to better understand engineering topics, including control theory, filter design, and, of course, linear systems and signals. MATLAB's flexible programming structure promotes rapid development and analysis. Outstanding visualization capabilities provide unique insight into system behavior and signal character. As with any language, learning MATLAB is incremental and requires practice. This book provides two levels of exposure to MATLAB. First, MATLAB is integrated into many examples throughout the text to reinforce concepts and perform various computations. These examples utilize standard MATLAB functions as well as functions from the control system, signal-processing, and symbolic math toolboxes. MATLAB has many more toolboxes available, but these three are commonly available in most engineering departments.

A second and deeper level of exposure to MATLAB is achieved by concluding each chapter with a separate MATLAB section. Taken together, these eleven sections provide a self-contained introduction to the MATLAB environment that allows even novice users to quickly gain MATLAB proficiency and competence. These sessions provide detailed instruction on how to use MATLAB to solve problems in linear systems and signals. Except for the very last chapter, special care has been taken to avoid the use of toolbox functions in the MATLAB sessions. Rather, readers are shown the process of developing their own code. In this way, those readers without toolbox access are not at a disadvantage. All of this book's MATLAB code is available for download at the OUP companion website www.oup.com/us/lathi.

### **CREDITS AND ACKNOWLEDGMENTS**

The portraits of Gauss, Laplace, Heaviside, Fourier, and Michelson have been reprinted courtesy of the Smithsonian Institution Libraries. The likenesses of Cardano and Gibbs have been reprinted courtesy of the Library of Congress. The engraving of Napoleon has been reprinted courtesy of Bettmann/Corbis. The many fine cartoons throughout the text are the work of Joseph Coniglio, a former student of Dr. Lathi.

Many individuals have helped us in the preparation of this book, as well as its earlier editions. We are grateful to each and every one for helpful suggestions and comments. Book writing is an obsessively time-consuming activity, which causes much hardship for an author's family. We both are grateful to our families for their enormous but invisible sacrifices.

B. P. Lathi R. A. Green



### BACKGROUND

The topics discussed in this chapter are not entirely new to students taking this course. You have already studied many of these topics in earlier courses or are expected to know them from your previous training. Even so, this background material deserves a review because it is so pervasive in the area of signals and systems. Investing a little time in such a review will pay big dividends later. Furthermore, this material is useful not only for this course but also for several courses that follow. It will also be helpful later, as reference material in your professional career.

### **B.1 COMPLEX NUMBERS**

*Complex numbers* are an extension of ordinary numbers and are an integral part of the modern number system. Complex numbers, particularly *imaginary numbers*, sometimes seem mysterious and unreal. This feeling of unreality derives from their unfamiliarity and novelty rather than their supposed nonexistence! Mathematicians blundered in calling these numbers "imaginary," for the term immediately prejudices perception. Had these numbers been called by some other name, they would have become demystified long ago, just as irrational numbers or negative numbers were. Many futile attempts have been made to ascribe some physical meaning to imaginary numbers. However, this effort is needless. In mathematics we assign symbols and operations any meaning we wish as long as internal consistency is maintained. The history of mathematics is full of entities that were unfamiliar and held in abhorence until familiarity made them acceptable. This fact will become clear from the following historical note.

### **B.1-1** A Historical Note

Among early people the number system consisted only of natural numbers (positive integers) needed to express the number of children, cattle, and quivers of arrows. These people had no need for fractions. Whoever heard of two and one-half children or three and one-fourth cows!

However, with the advent of agriculture, people needed to measure continuously varying quantities, such as the length of a field and the weight of a quantity of butter. The number system, therefore, was extended to include fractions. The ancient Egyptians and Babylonians knew how

to handle fractions, but *Pythagoras* discovered that some numbers (like the diagonal of a unit square) could not be expressed as a whole number or a fraction. Pythagoras, a number mystic, who regarded numbers as the essence and principle of all things in the universe, was so appalled at his discovery that he swore his followers to secrecy and imposed a death penalty for divulging this secret [1]. These numbers, however, were included in the number system by the time of Descartes, and they are now known as *irrational numbers*.

Until recently, *negative numbers* were not a part of the number system. The concept of negative numbers must have appeared absurd to early man. However, the medieval Hindus had a clear understanding of the significance of positive and negative numbers [2, 3]. They were also the first to recognize the existence of absolute negative quantities [4]. The works of *Bhaskar* (1114–1185) on arithmetic (Lilavati) and algebra (Bijaganit) not only use the decimal system but also give rules for dealing with negative quantities. Bhaskar recognized that positive numbers have two square roots [5]. Much later, in Europe, the men who developed the banking system that arose in Florence and Venice during the late Renaissance (fifteenth century) are credited with introducing a crude form of negative numbers. The seemingly absurd subtraction of 7 from 5 seemed reasonable when bankers began to allow their clients to draw seven gold ducats while their deposit stood at five. All that was necessary for this purpose was to write the difference, 2, on the debit side of a ledger [6].

Thus, the number system was once again broadened (generalized) to include negative numbers. The acceptance of negative numbers made it possible to solve equations such as x+5=0, which had no solution before. Yet for equations such as  $x^2 + 1 = 0$ , leading to  $x^2 = -1$ , the solution could not be found in the real number system. It was therefore necessary to define a completely new kind of number with its square equal to -1. During the time of Descartes and Newton, imaginary (or complex) numbers came to be accepted as part of the number system, but they were still regarded as algebraic fiction. The Swiss mathematician *Leonhard Euler* introduced the notation *i* (for *imaginary*) around 1777 to represent  $\sqrt{-1}$ . Electrical engineers use the notation *j* instead of *i* to avoid confusion with the notation *i* often used for electrical current. Thus,

$$j^2 = -1$$
 and  $\sqrt{-1} = \pm j$ 

This notation allows us to determine the square root of any negative number. For example,

$$\sqrt{-4} = \sqrt{4} \times \sqrt{-1} = \pm 2j$$

When imaginary numbers are included in the number system, the resulting numbers are called *complex numbers*.

### ORIGINS OF COMPLEX NUMBERS

Ironically (and contrary to popular belief), it was not the solution of a quadratic equation, such as  $x^2 + 1 = 0$ , but a cubic equation with real roots that made imaginary numbers plausible and acceptable to early mathematicians. They could dismiss  $\sqrt{-1}$  as pure nonsense when it appeared as a solution to  $x^2 + 1 = 0$  because this equation has no real solution. But in 1545, *Gerolamo Cardano* of Milan published *Ars Magna* (The Great Art), the most important algebraic work of the Renaissance. In this book, he gave a method of solving a general cubic equation in which a root of a negative number appeared in an intermediate step. According to his method, the solution to a

third-order equation<sup>†</sup>

$$x^3 + ax + b = 0$$

is given by

$$x = \sqrt[3]{-\frac{b}{2} + \sqrt{\frac{b^2}{4} + \frac{a^3}{27}}} + \sqrt[3]{-\frac{b}{2} - \sqrt{\frac{b^2}{4} + \frac{a^3}{27}}}$$

For example, to find a solution of  $x^3 + 6x - 20 = 0$ , we substitute a = 6, b = -20 in the foregoing equation to obtain

$$x = \sqrt[3]{10 + \sqrt{108}} + \sqrt[3]{10 - \sqrt{108}} = \sqrt[3]{20.392} - \sqrt[3]{0.392} = 2$$

We can readily verify that 2 is indeed a solution of  $x^3 + 6x - 20 = 0$ . But when Cardano tried to solve the equation  $x^3 - 15x - 4 = 0$  by this formula, his solution was

$$x = \sqrt[3]{2 + \sqrt{-121}} + \sqrt[3]{2 - \sqrt{-121}}$$

What was Cardano to make of this equation in the year 1545? In those days, negative numbers were themselves suspect, and a square root of a negative number was doubly preposterous! Today, we know that

$$(2\pm j)^3 = 2\pm j11 = 2\pm \sqrt{-121}$$

Therefore, Cardano's formula gives

$$x = (2+j) + (2-j) = 4$$

We can readily verify that x = 4 is indeed a solution of  $x^3 - 15x - 4 = 0$ . Cardano tried to explain halfheartedly the presence of  $\sqrt{-121}$  but ultimately dismissed the whole enterprise as being "as subtle as it is useless." A generation later, however, *Raphael Bombelli* (1526–1573), after examining Cardano's results, proposed acceptance of imaginary numbers as a necessary vehicle that would transport the mathematician from the *real* cubic equation to its *real* solution. In other words, although we begin and end with real numbers, we seem compelled to move into an unfamiliar world of imaginaries to complete our journey. To mathematicians of the day, this proposal seemed incredibly strange [7]. Yet they could not dismiss the idea of imaginary numbers so easily because this concept yielded the real solution of an equation. It took two more centuries for the full importance of complex numbers to become evident in the works of Euler, Gauss, and Cauchy. Still, Bombelli deserves credit for recognizing that such numbers have a role to play in algebra [7].

<sup>&</sup>lt;sup>†</sup> This equation is known as the *depressed cubic* equation. A general cubic equation

 $y^3 + py^2 + qy + r = 0$ 

can always be reduced to a depressed cubic form by substituting y = x - (p/3). Therefore, any general cubic equation can be solved if we know the solution to the depressed cubic. The depressed cubic was independently solved, first by *Scipione del Ferro* (1465–1526) and then by *Niccolo Fontana* (1499–1557). The latter is better known in the history of mathematics as *Tartaglia* ("Stammerer"). Cardano learned the secret of the depressed cubic is reduced to a depressed cubic.

#### CHAPTER B BACKGROUND

4

In 1799 the German mathematician *Karl Friedrich Gauss*, at the ripe age of 22, proved the fundamental theorem of algebra, namely that every algebraic equation in one unknown has a root in the form of a complex number. He showed that every equation of the *n*th order has exactly *n* solutions (roots), no more and no less. Gauss was also one of the first to give a coherent account of complex numbers and to interpret them as points in a complex plane. It is he who introduced the term *complex numbers* and paved the way for their general and systematic use. The number system was once again broadened or generalized to include imaginary numbers. Ordinary (or real) numbers became a special case of generalized (or complex) numbers.

The utility of complex numbers can be understood readily by an analogy with two neighboring countries X and Y, as illustrated in Fig. B.1. If we want to travel from City a to City b (both in



Gerolamo Cardano



Karl Friedrich Gauss

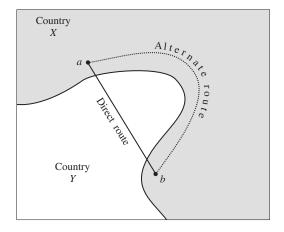


Figure B.1 Use of complex numbers can reduce the work.

Country X), the shortest route is through Country Y, although the journey begins and ends in Country X. We may, if we desire, perform this journey by an alternate route that lies exclusively in X, but this alternate route is longer. In mathematics we have a similar situation with real numbers (Country X) and complex numbers (Country Y). Most real-world problems start with real numbers, and the final results must also be in real numbers. But the derivation of results is considerably simplified by using complex numbers as an intermediary. It is also possible to solve any real-world problem by an alternate method, using real numbers exclusively, but such procedures would increase the work needlessly.

### **B.1-2** Algebra of Complex Numbers


A complex number (a,b) or a + jb can be represented graphically by a point whose Cartesian coordinates are (a,b) in a complex plane (Fig. B.2). Let us denote this complex number by z so that


$$z = a + jb \tag{B.1}$$

This representation is the Cartesian (or rectangular) form of complex number z. The numbers a and b (the abscissa and the ordinate) of z are the *real part* and the *imaginary part*, respectively, of z. They are also expressed as

Re 
$$z = a$$
 and Im  $z = b$ 

Note that in this plane all real numbers lie on the horizontal axis, and all imaginary numbers lie on the vertical axis.

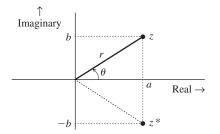

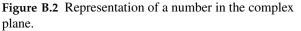

Complex numbers may also be expressed in terms of polar coordinates. If  $(r, \theta)$  are the polar coordinates of a point z = a + jb (see Fig. B.2), then

$$a = r \cos \theta$$
 and  $b = r \sin \theta$ 

Consequently,

$$z = a + jb = r\cos\theta + jr\sin\theta = r(\cos\theta + j\sin\theta)$$
(B.2)

Euler's formula states that

$$e^{j\theta} = \cos\theta + j\sin\theta \tag{B.3}$$

6

To prove Euler's formula, we use a Maclaurin series to expand  $e^{i\theta}$ ,  $\cos \theta$ , and  $\sin \theta$ :

$$e^{j\theta} = 1 + j\theta + \frac{(j\theta)^2}{2!} + \frac{(j\theta)^3}{3!} + \frac{(j\theta)^4}{4!} + \frac{(j\theta)^5}{5!} + \frac{(j\theta)^6}{6!} + \cdots$$
  
=  $1 + j\theta - \frac{\theta^2}{2!} - j\frac{\theta^3}{3!} + \frac{\theta^4}{4!} + j\frac{\theta^5}{5!} - \frac{\theta^6}{6!} - \cdots$   
 $\cos \theta = 1 - \frac{\theta^2}{2!} + \frac{\theta^4}{4!} - \frac{\theta^6}{6!} + \frac{\theta^8}{8!} \cdots$   
 $\sin \theta = \theta - \frac{\theta^3}{3!} + \frac{\theta^5}{5!} - \frac{\theta^7}{7!} + \cdots$ 

Clearly, it follows that  $e^{j\theta} = \cos \theta + j \sin \theta$ . Using Eq. (B.3) in Eq. (B.2) yields

$$z = re^{j\theta} \tag{B.4}$$

This representation is the polar form of complex number *z*.

Summarizing, a complex number can be expressed in rectangular form a + jb or polar form  $re^{j\theta}$  with

$$\begin{array}{l} a = r\cos\theta \\ b = r\sin\theta \end{array} \quad \text{and} \quad \begin{array}{l} r = \sqrt{a^2 + b^2} \\ \theta = \tan^{-1}\left(\frac{b}{a}\right) \end{array}$$
(B.5)

Observe that *r* is the distance of the point *z* from the origin. For this reason, *r* is also called the *magnitude* (or *absolute value*) of *z* and is denoted by |z|. Similarly,  $\theta$  is called the angle of *z* and is denoted by  $\angle z$ . Therefore, we can also write polar form of Eq. (B.4) as

$$z = |z|e^{j \angle z}$$
 where  $|z| = r$  and  $\angle z = \theta$ 

Using polar form, we see that the reciprocal of a complex number is given by

$$\frac{1}{z} = \frac{1}{re^{j\theta}} = \frac{1}{r}e^{-j\theta} = \frac{1}{|z|}e^{-j\angle z}$$

### CONJUGATE OF A COMPLEX NUMBER

We define  $z^*$ , the *conjugate* of z = a + jb, as

$$z^* = a - jb = re^{-j\theta} = |z|e^{-j\angle z}$$
(B.6)

The graphical representations of a number z and its conjugate  $z^*$  are depicted in Fig. B.2. Observe that  $z^*$  is a mirror image of z about the horizontal axis. *To find the conjugate of any number, we need only replace j with -j in that number* (which is the same as changing the sign of its angle).

The sum of a complex number and its conjugate is a real number equal to twice the real part of the number:

$$z + z^* = (a + jb) + (a - jb) = 2a = 2 \operatorname{Re} z$$

Thus, we see that the real part of complex number z can be computed as

$$\operatorname{Re} z = \frac{z + z^*}{2} \tag{B.7}$$

7

Similarly, the imaginary part of complex number z can be computed as

$$\operatorname{Im} z = \frac{z - z^*}{2j} \tag{B.8}$$

The product of a complex number z and its conjugate is a real number  $|z|^2$ , the square of the magnitude of the number:

$$zz^* = |z|e^{j\angle z}|z|e^{-j\angle z} = |z|^2$$
 (B.9)

### UNDERSTANDING SOME USEFUL IDENTITIES

In a complex plane,  $re^{i\theta}$  represents a point at a distance r from the origin and at an angle  $\theta$  with the horizontal axis, as shown in Fig. B.3a. For example, the number -1 is at a unit distance from the origin and has an angle  $\pi$  or  $-\pi$  (more generally,  $\pi$  plus any integer multiple of  $2\pi$ ), as seen from Fig. B.3b. Therefore,

$$-1 = e^{j(\pi + 2\pi n)}$$
 *n* integer

The number 1, on the other hand, is also at a unit distance from the origin, but has an angle 0 (more generally, 0 plus any integer multiple of  $2\pi$ ). Therefore,

$$1 = e^{j2\pi n} \qquad n \text{ integer} \tag{B.10}$$

The number j is at a unit distance from the origin and its angle is  $\frac{\pi}{2}$  (more generally,  $\frac{\pi}{2}$  plus any integer multiple of  $2\pi$ ), as seen from Fig. B.3b. Therefore,

$$j = e^{j(\frac{\pi}{2} + 2\pi n)}$$
 *n* integer

Similarly,

$$-i = e^{j(-\frac{\pi}{2} + 2\pi n)}$$
 *n* integer

Notice that the angle of any complex number is only known within an integer multiple of  $2\pi$ .

This discussion shows the usefulness of the graphic picture of  $re^{j\theta}$ . This picture is also helpful in several other applications. For example, to determine the limit of  $e^{(\alpha+j\omega)t}$  as  $t \to \infty$ , we note that  $e^{(\alpha+j\omega)t} = e^{\alpha t}e^{j\omega t}$ 

**Figure B.3** Understanding some useful identities in terms of  $re^{j\theta}$ .

#### CHAPTER B BACKGROUND

8

Now the magnitude of  $e^{j\omega t}$  is unity regardless of the value of  $\omega$  or t because  $e^{j\omega t} = re^{j\theta}$  with r = 1. Therefore,  $e^{\alpha t}$  determines the behavior of  $e^{(\alpha + j\omega)t}$  as  $t \to \infty$  and

$$\lim_{t \to \infty} e^{(\alpha + j\omega)t} = \lim_{t \to \infty} e^{\alpha t} e^{j\omega t} = \begin{cases} 0 & \alpha < 0 \\ \infty & \alpha > 0 \end{cases}$$

In future discussions, you will find it very useful to remember  $re^{i\theta}$  as a number at a distance r from the origin and at an angle  $\theta$  with the horizontal axis of the complex plane.

### A WARNING ABOUT COMPUTING ANGLES WITH CALCULATORS

From the Cartesian form a + jb, we can readily compute the polar form  $re^{j\theta}$  [see Eq. (B.5)]. Calculators provide ready conversion of rectangular into polar and vice versa. However, if a calculator computes an angle of a complex number by using an inverse tangent function  $\theta = \tan^{-1}(b/a)$ , proper attention must be paid to the quadrant in which the number is located. For instance,  $\theta$  corresponding to the number -2 - j3 is  $\tan^{-1}(-3/-2)$ . This result is not the same as  $\tan^{-1}(3/2)$ . The former is  $-123.7^{\circ}$ , whereas the latter is 56.3°. A calculator cannot make this distinction and can give a correct answer only for angles in the first and fourth quadrants.<sup>†</sup> A calculator will read  $\tan^{-1}(-3/-2)$  as  $\tan^{-1}(3/2)$ , which is clearly wrong. When you are computing inverse trigonometric functions, if the angle appears in the second or third quadrant, the answer of the calculator is off by 180°. The correct answer is obtained by adding or subtracting 180° to the value found with the calculator (either adding or subtracting yields the correct answer). For this reason, it is advisable to draw the point in the complex plane and determine the quadrant in which the point lies. This issue will be clarified by the following examples.

### **EXAMPLE B.1** Cartesian to Polar Form

Express the following numbers in polar form: (a) 2+j3, (b) -2+j1, (c) -2-j3, and (d) 1-j3.

**(a)** 

$$|z| = \sqrt{2^2 + 3^2} = \sqrt{13}$$
  $\angle z = \tan^{-1}(\frac{3}{2}) = 56.3^{\circ}$ 

In this case the number is in the first quadrant, and a calculator will give the correct value of  $56.3^{\circ}$ . Therefore (see Fig. B.4a), we can write

$$2+j3 = \sqrt{13} e^{j56.3^{\circ}}$$

**(b)** 

$$|z| = \sqrt{(-2)^2 + 1^2} = \sqrt{5}$$
  $\angle z = \tan^{-1}\left(\frac{1}{-2}\right) = 153.4^{\circ}$ 

In this case the angle is in the second quadrant (see Fig. B.4b), and therefore the answer given by the calculator,  $\tan^{-1}(1/-2) = -26.6^{\circ}$ , is off by 180°. The correct answer is

<sup>&</sup>lt;sup>†</sup>Calculators with two-argument inverse tangent functions will correctly compute angles.

 $(-26.6 \pm 180)^{\circ} = 153.4^{\circ}$  or  $-206.6^{\circ}$ . Both values are correct because they represent the same angle. It is a common practice to choose an angle whose numerical value is less than  $180^{\circ}$ . Such a value is called the *principal value* of the angle, which in this case is  $153.4^{\circ}$ . Therefore,

$$-2+i1 = \sqrt{5}e^{i153.49}$$

(c)

$$|z| = \sqrt{(-2)^2 + (-3)^2} = \sqrt{13}$$
  $\angle z = \tan^{-1}\left(\frac{-3}{-2}\right) = -123.7^\circ$ 

In this case the angle appears in the third quadrant (see Fig. B.4c), and therefore the answer obtained by the calculator  $(\tan^{-1}(-3/-2) = 56.3^{\circ})$  is off by 180°. The correct answer is  $(56.3 \pm 180)^{\circ} = 236.3^{\circ}$  or  $-123.7^{\circ}$ . We choose the principal value  $-123.7^{\circ}$  so that (see Fig. B.4c)


$$-2 - i3 = \sqrt{13}e^{-i123.7}$$


(**d**)

$$|z| = \sqrt{1^2 + (-3)^2} = \sqrt{10}$$
  $\angle z = \tan^{-1}\left(\frac{-3}{1}\right) = -71.6^{\circ}$ 

In this case the angle appears in the fourth quadrant (see Fig. B.4d), and therefore the answer given by the calculator,  $\tan^{-1}(-3/1) = -71.6^{\circ}$ , is correct (see Fig. B.4d):

$$1 - i3 = \sqrt{10}e^{-i71.6^\circ}$$

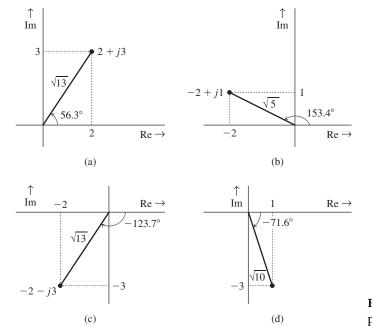

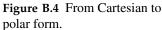

#### 10 CHAPTER B BACKGROUND

We can easily verify these results using the MATLAB abs and angle commands. To obtain units of degrees, we must multiply the radian result of the angle command by  $\frac{180}{\pi}$ . Furthermore, the angle command correctly computes angles for all four quadrants of the complex plane. To provide an example, let us use MATLAB to verify that  $-2 + j1 = \sqrt{5}e^{j153.4^\circ} = 2.2361e^{j153.4^\circ}$ .

>> abs(-2+1j)
ans = 2.2361
>> angle(-2+1j)\*180/pi
ans = 153.4349

One can also use the cart2pol command to convert Cartesian to polar coordinates. Readers, particularly those who are unfamiliar with MATLAB, will benefit by reading the overview in Sec. B.7.

### **EXAMPLE B.2** Polar to Cartesian Form

Represent the following numbers in the complex plane and express them in Cartesian form: (a)  $2e^{j\pi/3}$ , (b)  $4e^{-j3\pi/4}$ , (c)  $2e^{j\pi/2}$ , (d)  $3e^{-j3\pi}$ , (e)  $2e^{j4\pi}$ , and (f)  $2e^{-j4\pi}$ .

(a)  $2e^{j\pi/3} = 2(\cos \pi/3 + j\sin \pi/3) = 1 + j\sqrt{3}$  (see Fig. B.5a) (b)  $4e^{-j3\pi/4} = 4(\cos 3\pi/4 - j\sin 3\pi/4) = -2\sqrt{2} - j2\sqrt{2}$  (see Fig. B.5b) (c)  $2e^{j\pi/2} = 2(\cos \pi/2 + j\sin \pi/2) = 2(0 + j1) = j2$  (see Fig. B.5c) (d)  $3e^{-j3\pi} = 3(\cos 3\pi - j\sin 3\pi) = 3(-1 + j0) = -3$  (see Fig. B.5d) (e)  $2e^{j4\pi} = 2(\cos 4\pi + j\sin 4\pi) = 2(1 + j0) = 2$  (see Fig. B.5e) (f)  $2e^{-j4\pi} = 2(\cos 4\pi - j\sin 4\pi) = 2(1 - j0) = 2$  (see Fig. B.5f)

We can readily verify these results using MATLAB. First, we use the exp function to represent a number in polar form. Next, we use the real and imag commands to determine the real and imaginary components of that number. To provide an example, let us use MATLAB to verify the result of part (a):  $2e^{j\pi/3} = 1 + j\sqrt{3} = 1 + j1.7321$ .

```
>> real(2*exp(1j*pi/3))
    ans = 1.0000
>> imag(2*exp(1j*pi/3))
    imag(2*exp(1j*pi/3))
```


```
ans = 1.7321
```

Since MATLAB defaults to Cartesian form, we could have verified the entire result in one step.

```
>> 2*exp(1j*pi/3)
ans = 1.0000 + 1.7321i
```

One can also use the pol2cart command to convert polar to Cartesian coordinates.

11

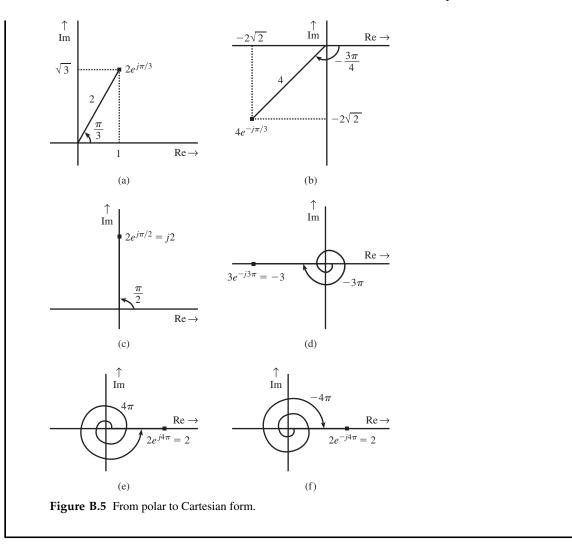

# ARITHMETICAL OPERATIONS, POWERS, AND ROOTS OF COMPLEX NUMBERS

To conveniently perform addition and subtraction, complex numbers should be expressed in Cartesian form. Thus, if

$$z_1 = 3 + i4 = 5e^{i53.1^\circ}$$

and

$$z_2 = 2 + j3 = \sqrt{13}e^{j56.3^\circ}$$

then

$$z_1 + z_2 = (3 + j4) + (2 + j3) = 5 + j7$$

### 12 CHAPTER B BACKGROUND

If  $z_1$  and  $z_2$  are given in polar form, we would need to convert them into Cartesian form for the purpose of adding (or subtracting). Multiplication and division, however, can be carried out in either Cartesian or polar form, although the latter proves to be much more convenient. This is because if  $z_1$  and  $z_2$  are expressed in polar form as

$$z_1 = r_1 e^{j\theta_1}$$
 and  $z_2 = r_2 e^{j\theta_2}$ 

then

$$z_1 z_2 = (r_1 e^{j\theta_1})(r_2 e^{j\theta_2}) = r_1 r_2 e^{j(\theta_1 + \theta_2)}$$

and

$$\frac{z_1}{z_2} = \frac{r_1 e^{j\theta_1}}{r_2 e^{j\theta_2}} = \frac{r_1}{r_2} e^{j(\theta_1 - \theta_2)}$$

Moreover,

$$z^n = (re^{j\theta})^n = r^n e^{jn\theta}$$

and

$$z^{1/n} = (re^{j\theta})^{1/n} = r^{1/n} e^{j\theta/n}$$
(B.11)

This shows that the operations of multiplication, division, powers, and roots can be carried out with remarkable ease when the numbers are in polar form.

Strictly speaking, there are *n* values for  $z^{1/n}$  (the *n*th root of *z*). To find all the *n* roots, we reexamine Eq. (B.11):

$$z^{1/n} = [re^{j\theta}]^{1/n} = [re^{j(\theta + 2\pi k)}]^{1/n} = r^{1/n}e^{j(\theta + 2\pi k)/n} \qquad k = 0, 1, 2, \dots, n-1$$
(B.12)

The value of  $z^{1/n}$  given in Eq. (B.11) is the *principal value* of  $z^{1/n}$ , obtained by taking the *n*th root of the principal value of *z*, which corresponds to the case k = 0 in Eq. (B.12).

### **EXAMPLE B.3 Multiplication and Division of Complex Numbers**

Using both polar and Cartesian forms, determine  $z_1z_2$  and  $z_1/z_2$  for the numbers

$$z_1 = 3 + j4 = 5e^{j53.1^\circ}$$
 and  $z_2 = 2 + j3 = \sqrt{13}e^{j56.3}$ 

**Multiplication: Cartesian Form** 

$$z_1 z_2 = (3+j4)(2+j3) = (6-12) + j(8+9) = -6 + j17$$

**Multiplication: Polar Form** 

$$z_1 z_2 = (5e^{j53.1^\circ}) \left(\sqrt{13}e^{j56.3^\circ}\right) = 5\sqrt{13}e^{j109.4^\circ}$$

**Division: Cartesian Form** 

$$\frac{z_1}{z_2} = \frac{3+j4}{2+j3}$$

To eliminate the complex number in the denominator, we multiply both the numerator and the denominator of the right-hand side by 2 - j3, the denominator's conjugate. This yields

$$\frac{z_1}{z_2} = \frac{(3+j4)(2-j3)}{(2+j3)(2-j3)} = \frac{18-j1}{2^2+3^2} = \frac{18-j1}{13} = \frac{18}{13} - j\frac{1}{13}$$

**Division: Polar Form** 

$$\frac{z_1}{z_2} = \frac{5e^{j53.1^\circ}}{\sqrt{13}e^{j56.3^\circ}} = \frac{5}{\sqrt{13}}e^{j(53.1^\circ - 56.3^\circ)} = \frac{5}{\sqrt{13}}e^{-j3.2^\circ}$$

It is clear from this example that multiplication and division are easier to accomplish in polar form than in Cartesian form.

These results are also easily verified using MATLAB. To provide one example, let us use Cartesian forms in MATLAB to verify that  $z_1z_2 = -6 + j17$ .

```
>> z1 = 3+4j; z2 = 2+3j;
>> z1*z2
ans = -6.0000 + 17.0000i
```

As a second example, let us use polar forms in MATLAB to verify that  $z_1/z_2 = 1.3868e^{-j3.2^\circ}$ . Since MATLAB generally expects angles be represented in the natural units of radians, we must use appropriate conversion factors in moving between degrees and radians (and vice versa).

```
>> z1 = 5*exp(1j*53.1*pi/180); z2 = sqrt(13)*exp(1j*56.3*pi/180);
>> abs(z1/z2)
    ans = 1.3868
>> angle(z1/z2)*180/pi
    ans = -3.2000
```

### **EXAMPLE B.4** Working with Complex Numbers

For  $z_1 = 2e^{i\pi/4}$  and  $z_2 = 8e^{i\pi/3}$ , find the following: (a)  $2z_1 - z_2$ , (b)  $1/z_1$ , (c)  $z_1/z_2^2$ , and (d)  $\sqrt[3]{z_2}$ .

(a) Since subtraction cannot be performed directly in polar form, we convert  $z_1$  and  $z_2$  to Cartesian form:

$$z_1 = 2e^{j\pi/4} = 2\left(\cos\frac{\pi}{4} + j\sin\frac{\pi}{4}\right) = \sqrt{2} + j\sqrt{2}$$
$$z_2 = 8e^{j\pi/3} = 8\left(\cos\frac{\pi}{3} + j\sin\frac{\pi}{3}\right) = 4 + j4\sqrt{3}$$

Therefore,

$$2z_1 - z_2 = 2(\sqrt{2} + j\sqrt{2}) - (4 + j4\sqrt{3}) = (2\sqrt{2} - 4) + j(2\sqrt{2} - 4\sqrt{3}) = -1.17 - j4.1$$

**(b)** 

$$\frac{1}{z_1} = \frac{1}{2e^{j\pi/4}} = \frac{1}{2}e^{-j\pi/4}$$

(c)

$$\frac{z_1}{z_2^2} = \frac{2e^{j\pi/4}}{(8e^{j\pi/3})^2} = \frac{2e^{j\pi/4}}{64e^{j2\pi/3}} = \frac{1}{32}e^{j(\pi/4 - 2\pi/3)} = \frac{1}{32}e^{-j(5\pi/12)}$$

(d) There are three cube roots of  $8e^{j(\pi/3)} = 8e^{j(\pi/3+2\pi k)}$ , k = 0, 1, 2.

$$\sqrt[3]{z_2} = z_2^{1/3} = \left[8e^{j(\pi/3 + 2\pi k)}\right]^{1/3} = 8^{1/3} \left(e^{j\left[(6\pi k + \pi)/3\right]}\right)^{1/3} = \begin{cases} 2e^{j\pi/9} & k = 0\\ 2e^{j7\pi/9} & k = 1\\ 2e^{j13\pi/9} & k = 2 \end{cases}$$

The value corresponding to k = 0 is termed the *principal value*.

### **EXAMPLE B.5 Standard Forms of Complex Numbers**

Consider  $X(\omega)$ , a complex function of a real variable  $\omega$ :

$$X(\omega) = \frac{2+j\omega}{3+j4\omega}$$

(a) Express  $X(\omega)$  in Cartesian form, and find its real and imaginary parts.

(b) Express  $X(\omega)$  in polar form, and find its magnitude  $|X(\omega)|$  and angle  $\angle X(\omega)$ .

$$X(\omega) = \frac{(2+j\omega)(3-j4\omega)}{(3+j4\omega)(3-j4\omega)} = \frac{(6+4\omega^2)-j5\omega}{9+16\omega^2} = \frac{6+4\omega^2}{9+16\omega^2} - j\frac{5\omega}{9+16\omega^2}$$

This is the Cartesian form of  $X(\omega)$ . Clearly, the real and imaginary parts  $X_r(\omega)$  and  $X_i(\omega)$  are given by

$$X_r(\omega) = \frac{6+4\omega^2}{9+16\omega^2}$$
 and  $X_i(\omega) = \frac{-5\omega}{9+16\omega^2}$ 

<sup>(</sup>a) To obtain the real and imaginary parts of  $X(\omega)$ , we must eliminate imaginary terms in the denominator of  $X(\omega)$ . This is readily done by multiplying both the numerator and the denominator of  $X(\omega)$  by  $3 - j4\omega$ , the conjugate of the denominator  $3 + j4\omega$  so that

$$X(\omega) = \frac{2+j\omega}{3+j4\omega} = \frac{\sqrt{4+\omega^2} e^{j\tan^{-1}(\omega/2)}}{\sqrt{9+16\omega^2} e^{j\tan^{-1}(4\omega/3)}} = \sqrt{\frac{4+\omega^2}{9+16\omega^2}} e^{j[\tan^{-1}(\omega/2)-\tan^{-1}(4\omega/3)]}$$

This is the polar representation of  $X(\omega)$ . Observe that

$$|X(\omega)| = \sqrt{\frac{4+\omega^2}{9+16\omega^2}}$$
 and  $\angle X(\omega) = \tan^{-1}\left(\frac{\omega}{2}\right) - \tan^{-1}\left(\frac{4\omega}{3}\right)$ 

### LOGARITHMS OF COMPLEX NUMBERS

To take the natural logarithm of a complex number z, we first express z in general polar form as

$$z = re^{j\theta} = re^{j(\theta \pm 2\pi k)}$$
  $k = 0, 1, 2, 3, \dots$ 

Taking the natural logarithm, we see that

$$\ln z = \ln \left( r e^{j(\theta \pm 2\pi k)} \right) = \ln r \pm j(\theta + 2\pi k) \qquad k = 0, 1, 2, 3, \dots$$

The value of  $\ln z$  for k = 0 is called the *principal value* of  $\ln z$  and is denoted by  $\ln z$ . In this way, we see that

$$\ln 1 = \ln(1e^{\pm j2\pi k}) = \pm j2\pi k \qquad k = 0, 1, 2, 3, \dots$$
$$\ln(-1) = \ln[1e^{\pm j\pi(2k+1)}] = \pm j(2k+1)\pi \qquad k = 0, 1, 2, 3, \dots$$
$$\ln j = \ln(e^{j\pi(1\pm 4k)/2}) = j\frac{\pi(1\pm 4k)}{2} \qquad k = 0, 1, 2, 3, \dots$$
$$j^{j} = e^{j\ln j} = e^{-\pi(1\pm 4k)/2} \qquad k = 0, 1, 2, 3, \dots$$

In all of these cases, setting k = 0 yields the principal value of the expression.

We can further our logarithm skills by noting that the familiar properties of logarithms hold for complex arguments. Therefore, we have

$$\log(z_1 z_2) = \log z_1 + \log z_2$$
  

$$\log(z_1/z_2) = \log z_1 - \log z_2$$
  

$$a^{(z_1+z_2)} = a^{z_1} \times a^{z_2}$$
  

$$z^c = e^{c \ln z}$$
  

$$a^z = e^{z \ln a}$$

### **B.2** SINUSOIDS

Consider the sinusoid

$$x(t) = C\cos\left(2\pi f_0 t + \theta\right) \tag{B.13}$$

We know that

$$\cos \varphi = \cos \left( \varphi + 2n\pi \right) \qquad n = 0, \pm 1, \pm 2, \pm 3, \dots$$

Therefore,  $\cos \varphi$  repeats itself for every change of  $2\pi$  in the angle  $\varphi$ . For the sinusoid in Eq. (B.13), the angle  $2\pi f_0 t + \theta$  changes by  $2\pi$  when *t* changes by  $1/f_0$ . Clearly, this sinusoid repeats every  $1/f_0$  seconds. As a result, there are  $f_0$  repetitions per second. This is the *frequency* of the sinusoid, and the repetition interval  $T_0$  given by

$$T_0 = \frac{1}{f_0}$$
 (B.14)

is the *period*. For the sinusoid in Eq. (B.13), C is the *amplitude*,  $f_0$  is the *frequency* (in hertz), and  $\theta$  is the phase. Let us consider two special cases of this sinusoid when  $\theta = 0$  and  $\theta = -\pi/2$  as follows:

$$x(t) = C\cos 2\pi f_0 t \qquad (\theta = 0)$$

and

$$x(t) = C\cos(2\pi f_0 t - \pi/2) = C\sin 2\pi f_0 t \qquad (\theta = -\pi/2)$$

The angle or phase can be expressed in units of degrees or radians. Although the radian is the proper unit, in this book we shall often use the degree unit because students generally have a better feel for the relative magnitudes of angles expressed in degrees rather than in radians. For example, we relate better to the angle  $24^{\circ}$  than to 0.419 radian. Remember, however, when in doubt, use the radian unit and, above all, be consistent. In other words, in a given problem or an expression, do not mix the two units.

It is convenient to use the variable  $\omega_0$  (*radian frequency*) to express  $2\pi f_0$ :

$$\omega_0 = 2\pi f_0 \tag{B.15}$$

With this notation, the sinusoid in Eq. (B.13) can be expressed as

$$x(t) = C\cos\left(\omega_0 t + \theta\right)$$

in which the period  $T_0$  and frequency  $\omega_0$  are given by [see Eqs. (B.14) and (B.15)]

$$T_0 = \frac{1}{\omega_0 / 2\pi} = \frac{2\pi}{\omega_0}$$
 and  $\omega_0 = \frac{2\pi}{T_0}$ 

Although we shall often refer to  $\omega_0$  as the frequency of the signal  $\cos(\omega_0 t + \theta)$ , it should be clearly understood that  $\omega_0$  is the *radian frequency*; the *hertzian frequency* of this sinusoid is  $f_0 = \omega_0/2\pi$ ).

The signals  $C \cos \omega_0 t$  and  $C \sin \omega_0 t$  are illustrated in Figs. B.6a and B.6b, respectively. A general sinusoid  $C \cos (\omega_0 t + \theta)$  can be readily sketched by shifting the signal  $C \cos \omega_0 t$  in Fig. B.6a by the appropriate amount. Consider, for example,

$$x(t) = C\cos\left(\omega_0 t - 60^\circ\right)$$

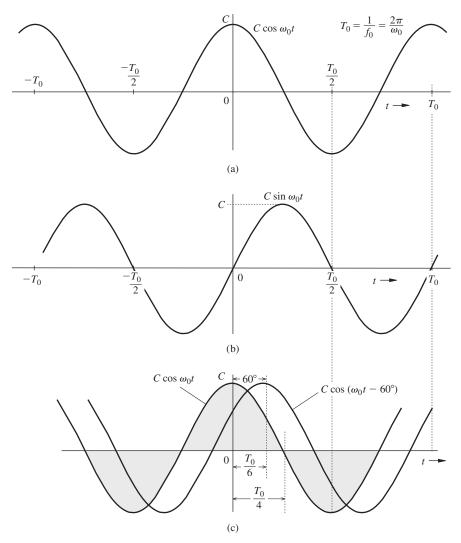


Figure B.6 Sketching a sinusoid.

This signal can be obtained by shifting (delaying) the signal  $C \cos \omega_0 t$  (Fig. B.6a) to the right by a phase (angle) of 60°. We know that a sinusoid undergoes a 360° change of phase (or angle) in one cycle. A quarter-cycle segment corresponds to a 90° change of angle. We therefore shift (delay) the signal in Fig. B.6a by two-thirds of a quarter-cycle segment to obtain  $C \cos (\omega_0 t - 60^\circ)$ , as shown in Fig. B.6c.

Observe that if we delay  $C \cos \omega_0 t$  in Fig. B.6a by a quarter-cycle (angle of 90° or  $\pi/2$  radians), we obtain the signal  $C \sin \omega_0 t$ , depicted in Fig. B.6b. This verifies the well-known trigonometric identity

$$C\cos\left(\omega_0 t - \pi/2\right) = C\sin\omega_0 t$$

Alternatively, if we advance  $C \sin \omega_0 t$  by a quarter-cycle, we obtain  $C \cos \omega_0 t$ . Therefore,

$$C\sin\left(\omega_0 t + \pi/2\right) = C\cos\omega_0 t$$

These observations mean that  $\sin \omega_0 t$  lags  $\cos \omega_0 t$  by  $90^{\circ}(\pi/2 \text{ radians})$  and that  $\cos \omega_0 t$  leads  $\sin \omega_0 t$  by  $90^{\circ}$ .

## **B.2-1** Addition of Sinusoids

Two sinusoids having the same frequency but different phases add to form a single sinusoid of the same frequency. This fact is readily seen from the well-known trigonometric identity

 $C\cos\theta\cos\omega_0 t - C\sin\theta\sin\omega_0 t = C\cos(\omega_0 t + \theta)$ 

Setting  $a = C \cos \theta$  and  $b = -C \sin \theta$ , we see that

$$a\cos\omega_0 t + b\sin\omega_0 t = C\cos(\omega_0 t + \theta) \tag{B.16}$$

From trigonometry, we know that

$$C = \sqrt{a^2 + b^2}$$
 and  $\theta = \tan^{-1}\left(\frac{-b}{a}\right)$  (B.17)

Equation (B.17) shows that C and  $\theta$  are the magnitude and angle, respectively, of a complex number a - jb. In other words,  $a - jb = Ce^{j\theta}$ . Hence, to find C and  $\theta$ , we convert a - jb to polar form and the magnitude and the angle of the resulting polar number are C and  $\theta$ , respectively.

The process of adding two sinusoids with the same frequency can be clarified by using *phasors* to represent sinusoids. We represent the sinusoid  $C \cos(\omega_0 t + \theta)$  by a phasor of length C at an angle  $\theta$  with the horizontal axis. Clearly, the sinusoid  $a \cos \omega_0 t$  is represented by a horizontal phasor of length  $a(\theta = 0)$ , while  $b \sin \omega_0 t = b \cos(\omega_0 t - \pi/2)$  is represented by a vertical phasor of length b at an angle  $-\pi/2$  with the horizontal (Fig. B.7). Adding these two phasors results in a phasor of length C at an angle  $\theta$ , as depicted in Fig. B.7. From this figure, we verify the values of C and  $\theta$  found in Eq. (B.17). Proper care should be exercised in computing  $\theta$ , as explained on page 8 ("A Warning About Computing Angles with Calculators").

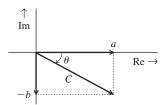


Figure B.7 Phasor addition of sinusoids.

## **EXAMPLE B.6** Addition of Sinusoids

In the following cases, express x(t) as a single sinusoid:

(a)  $x(t) = \cos \omega_0 t - \sqrt{3} \sin \omega_0 t$ 

**(b)**  $x(t) = -3\cos\omega_0 t + 4\sin\omega_0 t$ 

(a) In this case, a = 1 and  $b = -\sqrt{3}$ . Using Eq. (B.17) yields

$$C = \sqrt{1^2 + (\sqrt{3})^2} = 2$$
 and  $\theta = \tan^{-1}\left(\frac{\sqrt{3}}{1}\right) = 60^\circ$ 

Therefore,

$$x(t) = 2\cos\left(\omega_0 t + 60^\circ\right)$$

We can verify this result by drawing phasors corresponding to the two sinusoids. The sinusoid  $\cos \omega_0 t$  is represented by a phasor of unit length at a zero angle with the horizontal. The phasor  $\sin \omega_0 t$  is represented by a unit phasor at an angle of  $-90^\circ$  with the horizontal. Therefore,  $-\sqrt{3}\sin \omega_0 t$  is represented by a phasor of length  $\sqrt{3}$  at 90° with the horizontal, as depicted in Fig. B.8a. The two phasors added yield a phasor of length 2 at 60° with the horizontal (also shown in Fig. B.8a).

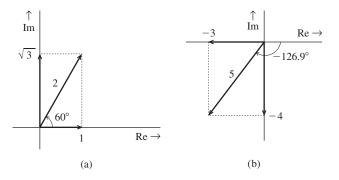


Figure B.8 Phasor addition of sinusoids.

Alternately, we note that  $a - jb = 1 + j\sqrt{3} = 2e^{j\pi/3}$ . Hence, C = 2 and  $\theta = \pi/3$ . Observe that a phase shift of  $\pm \pi$  amounts to multiplication by -1. Therefore, x(t) can also be expressed alternatively as

$$x(t) = -2\cos(\omega_0 t + 60^\circ \pm 180^\circ) = -2\cos(\omega_0 t - 120^\circ) = -2\cos(\omega_0 t + 240^\circ)$$

In practice, the principal value, that is,  $-120^{\circ}$ , is preferred.

(b) In this case, a = -3 and b = 4. Using Eq. (B.17) yields

$$C = \sqrt{(-3)^2 + 4^2} = 5$$
 and  $\theta = \tan^{-1}\left(\frac{-4}{-3}\right) = -126.9^{\circ}$ 

Observe that

$$\tan^{-1}\left(\frac{-4}{-3}\right) \neq \tan^{-1}\left(\frac{4}{3}\right) = 53.1^{\circ}$$

Therefore,

$$x(t) = 5\cos(\omega_0 t - 126.9^\circ)$$

This result is readily verified in the phasor diagram in Fig. B.8b. Alternately,  $a-jb = -3-j4 = 5e^{-j126.9^\circ}$ , a fact readily confirmed using MATLAB.

>> C = abs(-3+4j)
C = 5
>> theta = angle(-3+4j)\*180/pi
theta = 126.8699

```
Hence, C = 5 and \theta = -126.8699^{\circ}.
```

We can also perform the reverse operation, expressing  $C \cos(\omega_0 t + \theta)$  in terms of  $\cos \omega_0 t$  and  $\sin \omega_0 t$  by again using the trigonometric identity

$$C\cos(\omega_0 t + \theta) = C\cos\theta\cos\omega_0 t - C\sin\theta\sin\omega_0 t$$

For example,

$$10\cos\left(\omega_0 t - 60^\circ\right) = 5\cos\omega_0 t + 5\sqrt{3}\sin\omega_0 t$$

## **B.2-2** Sinusoids in Terms of Exponentials

From Eq. (B.3), we know that  $e^{j\varphi} = \cos \varphi + j \sin \varphi$  and  $e^{-j\varphi} = \cos \varphi - j \sin \varphi$ . Adding these two expressions and dividing by 2 provide an expression for cosine in terms of complex exponentials, while subtracting and scaling by 2j provide an expression for sine. That is,

$$\cos \varphi = \frac{1}{2} (e^{j\varphi} + e^{-j\varphi}) \quad \text{and} \quad \sin \varphi = \frac{1}{2j} (e^{j\varphi} - e^{-j\varphi}) \quad (B.18)$$

# **B.3 SKETCHING SIGNALS**

In this section, we discuss the sketching of a few useful signals, starting with exponentials.

## **B.3-1** Monotonic Exponentials

The signal  $e^{-at}$  decays monotonically, and the signal  $e^{at}$  grows monotonically with t (assuming a > 0), as depicted in Fig. B.9. For the sake of simplicity, we shall consider an exponential  $e^{-at}$  starting at t = 0, as shown in Fig. B.10a.

The signal  $e^{-at}$  has a unit value at t = 0. At t = 1/a, the value drops to 1/e (about 37% of its initial value), as illustrated in Fig. B.10a. This time interval over which the exponential reduces by


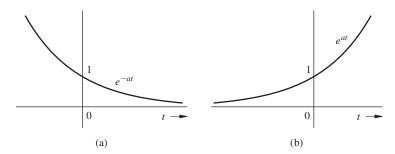


Figure B.9 Monotonic exponentials.

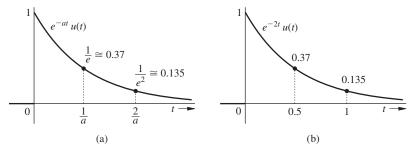

**Figure B.10** Sketching (a)  $e^{-at}$  and (b)  $e^{-2t}$ .

a factor *e* (i.e., drops to about 37% of its value) is known as the *time constant* of the exponential. Therefore, the time constant of  $e^{-at}$  is 1/a. Observe that the exponential is reduced to 37% of its initial value over any time interval of duration 1/a. This can be shown by considering any set of instants  $t_1$  and  $t_2$  separated by one time constant so that

$$t_2 - t_1 = \frac{1}{a}$$

Now the ratio of  $e^{-at_2}$  to  $e^{-at_1}$  is given by

$$\frac{e^{-at_2}}{e^{-at_1}} = e^{-a(t_2 - t_1)} = \frac{1}{e} \approx 0.37$$

We can use this fact to sketch an exponential quickly. For example, consider

$$x(t) = e^{-2t}$$

The time constant in this case is 0.5. The value of x(t) at t = 0 is 1. At t = 0.5 (one time constant), it is 1/e (about 0.37). The value of x(t) continues to drop further by the factor 1/e (37%) over the next half-second interval (one time constant). Thus, x(t) at t = 1 is  $(1/e)^2$ . Continuing in this

manner, we see that  $x(t) = (1/e)^3$  at t = 1.5, and so on. A knowledge of the values of x(t) at t = 0, 0.5, 1, and 1.5 allows us to sketch the desired signal, as shown in Fig. B.10b.<sup>†</sup>

For a monotonically growing exponential  $e^{at}$ , the waveform increases by a factor *e* over each interval of 1/a seconds.

## **B.3-2** The Exponentially Varying Sinusoid

We now discuss sketching an exponentially varying sinusoid

$$x(t) = Ae^{-at}\cos(\omega_0 t + \theta)$$

Let us consider a specific example:

$$x(t) = 4e^{-2t}\cos(6t - 60^{\circ})$$

We shall sketch  $4e^{-2t}$  and  $\cos(6t - 60^\circ)$  separately and then multiply them:

- (a) Sketching  $4e^{-2t}$ . This monotonically decaying exponential has a time constant of 0.5 second and an initial value of 4 at t = 0. Therefore, its values at t = 0.5, 1, 1.5, and 2 are 4/e,  $4/e^2$ ,  $4/e^3$ , and  $4/e^4$ , or about 1.47, 0.54, 0.2, and 0.07, respectively. Using these values as a guide, we sketch  $4e^{-2t}$ , as illustrated in Fig. B.11a.
- (b) Sketching  $\cos(6t 60^\circ)$ . The procedure for sketching  $\cos(6t 60^\circ)$  is discussed in Sec. B.2 (Fig. B.6c). Here, the period of the sinusoid is  $T_0 = 2\pi/6 \approx 1$ , and there is a phase delay of  $60^\circ$ , or two-thirds of a quarter-cycle, which is equivalent to a delay of about  $(60/360)(1) \approx 1/6$  seconds (see Fig. B.11b).
- (c) Sketching  $4e^{-2t} \cos(6t 60^\circ)$ . We now multiply the waveforms in steps (a) and (b). This multiplication amounts to forcing the sinusoid  $4 \cos(6t 60^\circ)$  to decrease exponentially with a time constant of 0.5. The initial amplitude (at t = 0) is 4, decreasing to 4/e (=1.47) at t = 0.5, to 1.47/e (=0.54) at t = 1, and so on. This is depicted in Fig. B.11c. Note that when  $\cos(6t 60^\circ)$  has a value of unity (peak amplitude),

$$4e^{-2t}\cos(6t - 60^\circ) = 4e^{-2t}$$

Therefore,  $4e^{-2t}\cos(6t-60^\circ)$  touches  $4e^{-2t}$  at the instants at which the sinusoid  $\cos(6t-60^\circ)$  is at its positive peaks. Clearly,  $4e^{-2t}$  is an envelope for positive amplitudes of  $4e^{-2t}\cos(6t-60^\circ)$ . Similar argument shows that  $4e^{-2t}\cos(6t-60^\circ)$  touches  $-4e^{-2t}$  at its negative peaks. Therefore,  $-4e^{-2t}$  is an envelope for negative amplitudes of  $4e^{-2t}\cos(6t-60^\circ)$ . Thus, to sketch  $4e^{-2t}\cos(6t-60^\circ)$ , we first draw the envelopes  $4e^{-2t}$  and  $-4e^{-2t}$  (the mirror image of  $4e^{-2t}$  about the horizontal axis), and then sketch the sinusoid  $\cos(6t-60^\circ)$ , with these envelopes acting as constraints on the sinusoid's amplitude (see Fig. B.11c).

In general,  $Ke^{-at}\cos(\omega_0 t + \theta)$  can be sketched in this manner, with  $Ke^{-at}$  and  $-Ke^{-at}$  constraining the amplitude of  $\cos(\omega_0 t + \theta)$ .

<sup>&</sup>lt;sup>†</sup> If we wish to refine the sketch further, we could consider intervals of half the time constant over which the signal decays by a factor  $1/\sqrt{e}$ . Thus, at t = 0.25,  $x(t) = 1/\sqrt{e}$ , and at t = 0.75,  $x(t) = 1/e\sqrt{e}$ , and so on.

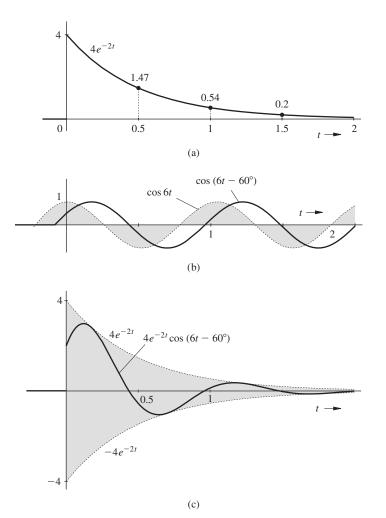


Figure B.11 Sketching an exponentially varying sinusoid.

# **B.4 CRAMER'S RULE**

Cramer's rule offers a very convenient way to solve simultaneous linear equations. Consider a set of *n* linear simultaneous equations in *n* unknowns  $x_1, x_2, \ldots, x_n$ :

$$a_{11}x_{1} + a_{12}x_{2} + \dots + a_{1n}x_{n} = y_{1}$$

$$a_{21}x_{1} + a_{22}x_{2} + \dots + a_{2n}x_{n} = y_{2}$$

$$\vdots$$

$$a_{n1}x_{1} + a_{n2}x_{2} + \dots + a_{nn}x_{n} = y_{n}$$
(B.19)

These equations can be expressed in matrix form as

$$\begin{bmatrix} a_{11} & a_{12} & \cdots & a_{1n} \\ a_{21} & a_{22} & \cdots & a_{2n} \\ \vdots & \vdots & \cdots & \vdots \\ a_{n1} & a_{n2} & \cdots & a_{nn} \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \\ \vdots \\ x_n \end{bmatrix} = \begin{bmatrix} y_1 \\ y_2 \\ \vdots \\ y_n \end{bmatrix}$$
(B.20)

We denote the matrix on the left-hand side formed by the elements  $a_{ij}$  as **A**. The determinant of **A** is denoted by  $|\mathbf{A}|$ . If the determinant  $|\mathbf{A}|$  is not zero, Eq. (B.19) has a unique solution given by Cramer's formula

$$x_k = \frac{|\mathbf{D}_k|}{|\mathbf{A}|} \qquad k = 1, 2, \dots, n \tag{B.21}$$

where  $|\mathbf{D}_k|$  is obtained by replacing the *k*th column of  $|\mathbf{A}|$  by the column on the right-hand side of Eq. (B.20) (with elements  $y_1, y_2, \ldots, y_n$ ).

We shall demonstrate the use of this rule with an example.

# EXAMPLE B.7 Using Cramer's Rule to Solve a System of Equations

Use Cramer's rule to solve the following simultaneous linear equations in three unknowns:

$$2x_1 + x_2 + x_3 = 3$$
  

$$x_1 + 3x_2 - x_3 = 7$$
  

$$x_1 + x_2 + x_3 = 1$$

In matrix form, these equations can be expressed as

<b>2</b>	1	1	$\begin{bmatrix} x_1 \end{bmatrix}$		3 ]
1	3	-1	<i>x</i> <sub>2</sub>	=	7
1	1	1	$\begin{bmatrix} x_1 \\ x_2 \\ x_3 \end{bmatrix}$		1

Here,

$$|\mathbf{A}| = \begin{vmatrix} 2 & 1 & 1 \\ 1 & 3 & -1 \\ 1 & 1 & 1 \end{vmatrix} = 4$$

Since  $|\mathbf{A}| = 4 \neq 0$ , a unique solution exists for  $x_1$ ,  $x_2$ , and  $x_3$ . This solution is provided by Cramer's rule [Eq. (B.21)] as follows:

$$x_1 = \frac{1}{|\mathbf{A}|} \begin{vmatrix} 3 & 1 & 1 \\ 7 & 3 & -1 \\ 1 & 1 & 1 \end{vmatrix} = \frac{8}{4} = 2$$

$$x_{2} = \frac{1}{|\mathbf{A}|} \begin{vmatrix} 2 & 3 & 1 \\ 1 & 7 & -1 \\ 1 & 1 & 1 \end{vmatrix} = \frac{4}{4} = 1$$
$$x_{3} = \frac{1}{|\mathbf{A}|} \begin{vmatrix} 2 & 1 & 3 \\ 1 & 3 & 7 \\ 1 & 1 & 1 \end{vmatrix} = \frac{-8}{4} = -2$$

MATLAB is well suited to compute Cramer's formula, so these results are easy to verify. To provide an example, let us verify that  $x_1 = 2$  using MATLAB's det command to compute the needed matrix determinants.

```
>> x1 = det([3 1 1;7 3 -1;1 1 1])/det([2 1 1;1 3 -1;1 1 1])
x1 = 2.0000
```

# **B.5 PARTIAL FRACTION EXPANSION**

In the analysis of linear time-invariant systems, we encounter functions that are ratios of two polynomials in a certain variable, say, x. Such functions are known as *rational functions*. A rational function F(x) can be expressed as

$$F(x) = \frac{b_m x^m + b_{m-1} x^{m-1} + \dots + b_1 x + b_0}{x^n + a_{n-1} x^{n-1} + \dots + a_1 x + a_0} = \frac{P(x)}{Q(x)}$$
(B.22)

The function F(x) is *improper* if  $m \ge n$  and *proper* if m < n.<sup>†</sup> An improper function can always be separated into the sum of a polynomial in *x* and a proper function. Consider, for example, the function

$$F(x) = \frac{2x^3 + 9x^2 + 11x + 2}{x^2 + 4x + 3}$$

Because this is an improper function, we divide the numerator by the denominator until the remainder has a lower degree than the denominator.

$$\begin{array}{r} x^{2} + 4x + 3 \\ x^{2} + 4x + 3 \end{array} \underbrace{\begin{array}{r} 2x + 1 \\ \hline 2x^{3} + 9x^{2} + 11x + 2 \\ \underline{2x^{3} + 8x^{2} + 6x} \\ x^{2} + 5x + 2 \\ \underline{x^{2} + 4x + 3} \\ \underline{x^{2} + 4x + 3} \\ x - 1 \end{array}}$$

<sup>&</sup>lt;sup>†</sup> Some sources classify F(x) as strictly proper if m < n, proper if  $m \le n$ , and improper if m > n.

Therefore, F(x) can be expressed as

$$F(x) = \frac{2x^3 + 9x^2 + 11x + 2}{x^2 + 4x + 3} = \underbrace{2x + 1}_{\text{polynomial in } x} + \underbrace{\frac{x - 1}{\frac{x^2 + 4x + 3}{\frac{x^2 + 4x + 3}}}}}_{\text{proper function}}$$

A proper function can be further expanded into partial fractions. The remaining discussion in this section is concerned with various ways of doing this.

### **B.5-1** Method of Clearing Fractions

A rational function can be written as a sum of appropriate partial fractions with unknown coefficients, which are determined by clearing fractions and equating the coefficients of similar powers on the two sides. This procedure is demonstrated by the following example.

## **EXAMPLE B.8 Method of Clearing Fractions**

Expand the following rational function F(x) into partial fractions:

$$F(x) = \frac{x^3 + 3x^2 + 4x + 6}{(x+1)(x+2)(x+3)^2}$$

This function can be expressed as a sum of partial fractions with denominators (x + 1), (x+2), (x+3), and  $(x+3)^2$ , as follows:

$$F(x) = \frac{x^3 + 3x^2 + 4x + 6}{(x+1)(x+2)(x+3)^2} = \frac{k_1}{x+1} + \frac{k_2}{x+2} + \frac{k_3}{x+3} + \frac{k_4}{(x+3)^2}$$

To determine the unknowns  $k_1, k_2, k_3$ , and  $k_4$ , we clear fractions by multiplying both sides by  $(x+1)(x+2)(x+3)^2$  to obtain

$$x^{3} + 3x^{2} + 4x + 6 = k_{1}(x^{3} + 8x^{2} + 21x + 18) + k_{2}(x^{3} + 7x^{2} + 15x + 9)$$
  
+  $k_{3}(x^{3} + 6x^{2} + 11x + 6) + k_{4}(x^{2} + 3x + 2)$   
=  $x^{3}(k_{1} + k_{2} + k_{3}) + x^{2}(8k_{1} + 7k_{2} + 6k_{3} + k_{4})$   
+  $x(21k_{1} + 15k_{2} + 11k_{3} + 3k_{4}) + (18k_{1} + 9k_{2} + 6k_{3} + 2k_{4})$ 

Equating coefficients of similar powers on both sides yields

$$k_1 + k_2 + k_3 = 1$$

$$8k_1 + 7k_2 + 6k_3 + k_4 = 3$$

$$21k_1 + 15k_2 + 11k_3 + 3k_4 = 4$$

$$18k_1 + 9k_2 + 6k_3 + 2k_4 = 6$$

Solution of these four simultaneous equations yields

$$k_1 = 1, \qquad k_2 = -2, \qquad k_3 = 2, \qquad k_4 = -3$$

Therefore,

$$F(x) = \frac{1}{x+1} - \frac{2}{x+2} + \frac{2}{x+3} - \frac{3}{(x+3)^2}$$

Although this method is straightforward and applicable to all situations, it is not necessarily the most efficient. We now discuss other methods that can reduce numerical work considerably.

# B.5-2 The Heaviside "Cover-Up" Method

## DISTINCT FACTORS OF Q(x)

We shall first consider the partial fraction expansion of F(x) = P(x)/Q(x), in which all the factors of Q(x) are distinct (not repeated). Consider the proper function

$$F(x) = \frac{b_m x^m + b_{m-1} x^{m-1} + \dots + b_1 x + b_0}{x^n + a_{n-1} x^{n-1} + \dots + a_1 x + a_0} \qquad m < n$$
$$= \frac{P(x)}{(x - \lambda_1)(x - \lambda_2) \cdots (x - \lambda_n)}$$

As seen in Ex. B.8, F(x) can be expressed as the sum of partial fractions

$$F(x) = \frac{k_1}{x - \lambda_1} + \frac{k_2}{x - \lambda_2} + \dots + \frac{k_n}{x - \lambda_n}$$
(B.23)

To determine the coefficient  $k_1$ , we multiply both sides of Eq. (B.23) by  $x - \lambda_1$  and then let  $x = \lambda_1$ . This yields

$$(x - \lambda_1)F(x)|_{x = \lambda_1} = k_1 + \frac{k_2(x - \lambda_1)}{(x - \lambda_2)} + \frac{k_3(x - \lambda_1)}{(x - \lambda_3)} + \dots + \frac{k_n(x - \lambda_1)}{(x - \lambda_n)}\Big|_{x = \lambda_1}$$

On the right-hand side, all the terms except  $k_1$  vanish. Therefore,

$$k_1 = (x - \lambda_1)F(x)|_{x = \lambda_1}$$

Similarly, we can show that

$$k_r = (x - \lambda_r)F(x)|_{x = \lambda_r}$$
  $r = 1, 2, ..., n$  (B.24)

This procedure also goes under the name method of residues.

# EXAMPLE B.9 Heaviside "Cover-Up" Method

Expand the following rational function F(x) into partial fractions:

$$F(x) = \frac{2x^2 + 9x - 11}{(x+1)(x-2)(x+3)} = \frac{k_1}{x+1} + \frac{k_2}{x-2} + \frac{k_3}{x+3}$$

To determine  $k_1$ , we let x = -1 in (x + 1)F(x). Note that (x + 1)F(x) is obtained from F(x) by omitting the term (x + 1) from its denominator. Therefore, to compute  $k_1$  corresponding to the factor (x + 1), we cover up the term (x + 1) in the denominator of F(x) and then substitute x = -1 in the remaining expression. [Mentally conceal the term (x + 1) in F(x) with a finger and then let x = -1 in the remaining expression.] The steps in covering up the function

$$F(x) = \frac{2x^2 + 9x - 11}{(x+1)(x-2)(x+3)}$$

are as follows.

**Step 1.** Cover up (conceal) the factor (x + 1) from F(x):

$$\frac{2x^2 + 9x - 11}{(x+1)(x-2)(x+3)}$$

**Step 2.** Substitute x = -1 in the remaining expression to obtain  $k_1$ :

$$k_1 = \frac{2 - 9 - 11}{(-1 - 2)(-1 + 3)} = \frac{-18}{-6} = 3$$

Similarly, to compute  $k_2$ , we cover up the factor (x - 2) in F(x) and let x = 2 in the remaining function, as follows:

$$k_{2} = \frac{2x^{2} + 9x - 11}{(x+1)(x-2)(x+3)} \bigg|_{x=2} = \frac{8 + 18 - 11}{(2+1)(2+3)} = \frac{15}{15} = 1$$

and

$$k_3 = \frac{2x^2 + 9x - 11}{(x+1)(x-2)(x+3)} \bigg|_{x=-3} = \frac{18 - 27 - 11}{(-3+1)(-3-2)} = \frac{-20}{10} = -2$$

Therefore,

$$F(x) = \frac{2x^2 + 9x - 11}{(x+1)(x-2)(x+3)} = \frac{3}{x+1} + \frac{1}{x-2} - \frac{2}{x+3}$$

### COMPLEX FACTORS OF Q(x)

The procedure just given works regardless of whether the factors of Q(x) are real or complex. Consider, for example,

$$F(x) = \frac{4x^2 + 2x + 18}{(x+1)(x^2 + 4x + 13)} = \frac{4x^2 + 2x + 18}{(x+1)(x+2-j3)(x+2+j3)}$$
$$= \frac{k_1}{x+1} + \frac{k_2}{x+2-j3} + \frac{k_3}{x+2+j3}$$
(B.25)

where

$$k_1 = \left[\frac{4x^2 + 2x + 18}{(x+1)(x^2 + 4x + 13)}\right]_{x=-1} = 2$$

Similarly,

$$k_{2} = \left[\frac{4x^{2} + 2x + 18}{(x+1)(x+2-j3)(x+2+j3)}\right]_{x=-2+j3} = 1 + j2 = \sqrt{5}e^{j63.43^{\circ}}$$
$$k_{3} = \left[\frac{4x^{2} + 2x + 18}{(x+1)(x+2-j3)(x+2+j3)}\right]_{x=-2-j3} = 1 - j2 = \sqrt{5}e^{-j63.43^{\circ}}$$

Therefore,

$$F(x) = \frac{2}{x+1} + \frac{\sqrt{5}e^{j63.43^{\circ}}}{x+2-j3} + \frac{\sqrt{5}e^{-j63.43^{\circ}}}{x+2+j3}$$

The coefficients  $k_2$  and  $k_3$  corresponding to the complex-conjugate factors are also conjugates of each other. This is generally true when the coefficients of a rational function are real. In such a case, we need to compute only one of the coefficients.

## QUADRATIC FACTORS

Often we are required to combine the two terms arising from complex-conjugate factors into one quadratic factor. For example, F(x) in Eq. (B.25) can be expressed as

$$F(x) = \frac{4x^2 + 2x + 18}{(x+1)(x^2 + 4x + 13)} = \frac{k_1}{x+1} + \frac{c_1x + c_2}{x^2 + 4x + 13}$$

The coefficient  $k_1$  is found by the Heaviside method to be 2. Therefore,

$$\frac{4x^2 + 2x + 18}{(x+1)(x^2 + 4x + 13)} = \frac{2}{x+1} + \frac{c_1x + c_2}{x^2 + 4x + 13}$$
(B.26)

The values of  $c_1$  and  $c_2$  are determined by clearing fractions and equating the coefficients of similar powers of x on both sides of the resulting equation. Clearing fractions on both sides of Eq. (B.26) yields

$$4x^{2} + 2x + 18 = 2(x^{2} + 4x + 13) + (c_{1}x + c_{2})(x + 1)$$
$$= (2 + c_{1})x^{2} + (8 + c_{1} + c_{2})x + (26 + c_{2})$$

Equating terms of similar powers yields  $c_1 = 2, c_2 = -8$ , and

$$\frac{4x^2 + 2x + 18}{(x+1)(x^2 + 4x + 13)} = \frac{2}{x+1} + \frac{2x-8}{x^2 + 4x + 13}$$

### SHORTCUTS

The values of  $c_1$  and  $c_2$  in Eq. (B.26) can also be determined by using shortcuts. After computing  $k_1 = 2$  by the Heaviside method as before, we let x = 0 on both sides of Eq. (B.26) to eliminate  $c_1$ . This gives us

$$\frac{18}{13} = 2 + \frac{c_2}{13} \qquad \Rightarrow \qquad c_2 = -8$$

To determine  $c_1$ , we multiply both sides of Eq. (B.26) by x and then let  $x \to \infty$ . Remember that when  $x \to \infty$ , only the terms of the highest power are significant. Therefore,

$$4 = 2 + c_1 \qquad \Rightarrow \qquad c_1 = 2$$

In the procedure discussed here, we let x = 0 to determine  $c_2$  and then multiply both sides by x and let  $x \to \infty$  to determine  $c_1$ . However, nothing is sacred about these values (x = 0 or  $x = \infty$ ). We use them because they reduce the number of computations involved. We could just as well use other convenient values for x, such as x = 1. Consider the case

$$F(x) = \frac{2x^2 + 4x + 5}{x(x^2 + 2x + 5)} = \frac{k}{x} + \frac{c_1 x + c_2}{x^2 + 2x + 5}$$

We find k = 1 by the Heaviside method in the usual manner. As a result,

$$\frac{2x^2 + 4x + 5}{x(x^2 + 2x + 5)} = \frac{1}{x} + \frac{c_1 x + c_2}{x^2 + 2x + 5}$$
(B.27)

If we try letting x = 0 to determine  $c_1$  and  $c_2$ , we obtain  $\infty$  on both sides. So let us choose x = 1. This yields

$$\frac{11}{8} = 1 + \frac{c_1 + c_2}{8} \qquad \text{or} \qquad c_1 + c_2 = 3$$

We can now choose some other value for x, such as x = 2, to obtain one more relationship to use in determining  $c_1$  and  $c_2$ . In this case, however, a simple method is to multiply both sides of Eq. (B.27) by x and then let  $x \to \infty$ . This yields

$$2 = 1 + c_1 \implies c_1 = 1$$

Since  $c_1 + c_2 = 3$ , we see that  $c_2 = 2$  and therefore,

$$F(x) = \frac{1}{x} + \frac{x+2}{x^2 + 2x + 5}$$

## **B.5-3** Repeated Factors of Q(x)

If a function F(x) has a repeated factor in its denominator, it has the form

$$F(x) = \frac{P(x)}{(x-\lambda)^r (x-\alpha_1)(x-\alpha_2)\cdots(x-\alpha_j)}$$

Its partial fraction expansion is given by

$$F(x) = \frac{a_0}{(x-\lambda)^r} + \frac{a_1}{(x-\lambda)^{r-1}} + \dots + \frac{a_{r-1}}{(x-\lambda)} + \frac{k_1}{x-\alpha_1} + \frac{k_2}{x-\alpha_2} + \dots + \frac{k_j}{x-\alpha_j}$$
(B.28)

The coefficients  $k_1, k_2, \ldots, k_j$  corresponding to the unrepeated factors in this equation are determined by the Heaviside method, as before [Eq. (B.24)]. To find the coefficients  $a_0, a_1, a_2, \ldots, a_{r-1}$ , we multiply both sides of Eq. (B.28) by  $(x - \lambda)^r$ . This gives us

$$(x - \lambda)^{r} F(x) = a_{0} + a_{1}(x - \lambda) + a_{2}(x - \lambda)^{2} + \dots + a_{r-1}(x - \lambda)^{r-1} + k_{1} \frac{(x - \lambda)^{r}}{x - \alpha_{1}} + k_{2} \frac{(x - \lambda)^{r}}{x - \alpha_{2}} + \dots + k_{n} \frac{(x - \lambda)^{r}}{x - \alpha_{n}}$$
(B.29)

If we let  $x = \lambda$  on both sides of Eq. (B.29), we obtain

$$(x-\lambda)^r F(x)|_{x=\lambda} = a_0$$

Therefore,  $a_0$  is obtained by concealing the factor  $(x - \lambda)^r$  in F(x) and letting  $x = \lambda$  in the remaining expression (the Heaviside "cover-up" method). If we take the derivative (with respect to x) of both sides of Eq. (B.29), the right-hand side is  $a_1$ + terms containing a factor  $(x - \lambda)$  in their numerators. Letting  $x = \lambda$  on both sides of this equation, we obtain

$$\left. \frac{d}{dx} \left[ (x - \lambda)^r F(x) \right] \right|_{x = \lambda} = a_1$$

Thus,  $a_1$  is obtained by concealing the factor  $(x - \lambda)^r$  in F(x), taking the derivative of the remaining expression, and then letting  $x = \lambda$ . Continuing in this manner, we find

$$a_{j} = \frac{1}{j!} \left. \frac{d^{j}}{dx^{j}} \left[ (x - \lambda)^{r} F(x) \right] \right|_{x = \lambda}$$
(B.30)

Observe that  $(x - \lambda)^r F(x)$  is obtained from F(x) by omitting the factor  $(x - \lambda)^r$  from its denominator. Therefore, the coefficient  $a_j$  is obtained by concealing the factor  $(x - \lambda)^r$  in F(x), taking the *j*th derivative of the remaining expression, and then letting  $x = \lambda$  (while dividing by *j*!).

## **EXAMPLE B.10** Partial Fraction Expansion with Repeated Factors

Expand F(x) into partial fractions if

$$F(x) = \frac{4x^3 + 16x^2 + 23x + 13}{(x+1)^3(x+2)}$$

The partial fractions are

$$F(x) = \frac{a_0}{(x+1)^3} + \frac{a_1}{(x+1)^2} + \frac{a_2}{x+1} + \frac{k}{x+2}$$

The coefficient k is obtained by concealing the factor (x + 2) in F(x) and then substituting x = -2 in the remaining expression:

$$k = \frac{4x^3 + 16x^2 + 23x + 13}{(x+1)^3(x+2)} \bigg|_{x=-2} = 1$$

To find  $a_0$ , we conceal the factor  $(x + 1)^3$  in F(x) and let x = -1 in the remaining expression:

$$a_0 = \frac{4x^3 + 16x^2 + 23x + 13}{(x+1)^3(x+2)} \bigg|_{x=-1} = 2$$

To find  $a_1$ , we conceal the factor  $(x + 1)^3$  in F(x), take the derivative of the remaining expression, and then let x = -1:

$$a_1 = \frac{d}{dx} \left[ \frac{4x^3 + 16x^2 + 23x + 13}{(x+1)^3(x+2)} \right]_{x=-1} = 1$$

Similarly,

$$a_{2} = \frac{1}{2!} \frac{d^{2}}{dx^{2}} \left[ \frac{4x^{3} + 16x^{2} + 23x + 13}{(x+1)^{3}(x+2)} \right]_{x=-1} = 3$$

Therefore,

$$F(x) = \frac{2}{(x+1)^3} + \frac{1}{(x+1)^2} + \frac{3}{x+1} + \frac{1}{x+2}$$

## B.5-4 A Combination of Heaviside "Cover-Up" and Clearing Fractions

For multiple roots, especially of higher order, the Heaviside expansion method, which requires repeated differentiation, can become cumbersome. For a function that contains several repeated and unrepeated roots, a hybrid of the two procedures proves to be the best. The simpler coefficients

are determined by the Heaviside method, and the remaining coefficients are found by clearing fractions or shortcuts, thus incorporating the best of the two methods. We demonstrate this procedure by solving Ex. B.10 once again by this method.

In Ex. B.10, coefficients k and  $a_0$  are relatively simple to determine by the Heaviside expansion method. These values were found to be  $k_1 = 1$  and  $a_0 = 2$ . Therefore,

$$\frac{4x^3 + 16x^2 + 23x + 13}{(x+1)^3(x+2)} = \frac{2}{(x+1)^3} + \frac{a_1}{(x+1)^2} + \frac{a_2}{x+1} + \frac{1}{x+2}$$

We now multiply both sides of this equation by  $(x + 1)^3(x + 2)$  to clear the fractions. This yields

$$4x^{3} + 16x^{2} + 23x + 13 = 2(x+2) + a_{1}(x+1)(x+2) + a_{2}(x+1)^{2}(x+2) + (x+1)^{3}$$
$$= (1+a_{2})x^{3} + (a_{1}+4a_{2}+3)x^{2} + (5+3a_{1}+5a_{2})x + (4+2a_{1}+2a_{2}+1)$$

Equating coefficients of the third and second powers of *x* on both sides, we obtain

$$\frac{1+a_2=4}{a_1+4a_2+3=16} \implies \begin{array}{c} a_1=1\\ a_2=3 \end{array}$$

We may stop here if we wish because the two desired coefficients,  $a_1$  and  $a_2$ , are now determined. However, equating the coefficients of the two remaining powers of x yields a convenient check on the answer. Equating the coefficients of the  $x^1$  and  $x^0$  terms, we obtain

$$23 = 5 + 3a_1 + 5a_2$$
$$13 = 4 + 2a_1 + 2a_2 + 1$$

These equations are satisfied by the values  $a_1 = 1$  and  $a_2 = 3$ , found earlier, providing an additional check for our answers. Therefore,

$$F(x) = \frac{2}{(x+1)^3} + \frac{1}{(x+1)^2} + \frac{3}{x+1} + \frac{1}{x+2}$$

which agrees with the earlier result.

### A COMBINATION OF HEAVISIDE "COVER-UP" AND SHORTCUTS

In Ex. B.10, after determining the coefficients  $a_0 = 2$  and k = 1 by the Heaviside method as before, we have

$$\frac{4x^3 + 16x^2 + 23x + 13}{(x+1)^3(x+2)} = \frac{2}{(x+1)^3} + \frac{a_1}{(x+1)^2} + \frac{a_2}{x+1} + \frac{1}{x+2}$$

There are only two unknown coefficients,  $a_1$  and  $a_2$ . If we multiply both sides of this equation by x and then let  $x \to \infty$ , we can eliminate  $a_1$ . This yields

$$4 = a_2 + 1 \implies a_2 = 3$$

Therefore,

$$\frac{4x^3 + 16x^2 + 23x + 13}{(x+1)^3(x+2)} = \frac{2}{(x+1)^3} + \frac{a_1}{(x+1)^2} + \frac{3}{x+1} + \frac{1}{x+2}$$

There is now only one unknown  $a_1$ , which can be readily found by setting x equal to any convenient value, say, x = 0. This yields

$$\frac{13}{2} = 2 + a_1 + 3 + \frac{1}{2} \implies a_1 = 1$$

which agrees with our earlier answer.

There are other possible shortcuts. For example, we can compute  $a_0$  (coefficient of the highest power of the repeated root), subtract this term from both sides, and then repeat the procedure.

## **B.5-5** Improper F(x) with m = n

A general method of handling an improper function is indicated in the beginning of this section. However, for the special case of when the numerator and denominator polynomials of F(x) have the same degree (m = n), the procedure is the same as that for a proper function. We can show that for

$$F(x) = \frac{b_n x^n + b_{n-1} x^{n-1} + \dots + b_1 x + b_0}{x^n + a_{n-1} x^{n-1} + \dots + a_1 x + a_0}$$
  
=  $b_n + \frac{k_1}{x - \lambda_1} + \frac{k_2}{x - \lambda_2} + \dots + \frac{k_n}{x - \lambda_n}$ 

the coefficients  $k_1, k_2, \ldots, k_n$  are computed as if F(x) were proper. Thus,

$$k_r = (x - \lambda_r)F(x)|_{x=\lambda_r}$$

For quadratic or repeated factors, the appropriate procedures discussed in Secs. B.5-2 or B.5-3 should be used as if F(x) were proper. In other words, when m = n, the only difference between the proper and improper case is the appearance of an extra constant  $b_n$  in the latter. Otherwise, the procedure remains the same. The proof is left as an exercise for the reader.

# **EXAMPLE B.11** Partial Fraction Expansion of Improper Rational Function

Expand F(x) into partial fractions if

$$F(x) = \frac{3x^2 + 9x - 20}{x^2 + x - 6} = \frac{3x^2 + 9x - 20}{(x - 2)(x + 3)}$$

Here, m = n = 2 with  $b_n = b_2 = 3$ . Therefore,

$$F(x) = \frac{3x^2 + 9x - 20}{(x - 2)(x + 3)} = 3 + \frac{k_1}{x - 2} + \frac{k_2}{x + 3}$$

2

35

in which

$$k_1 = \frac{3x^2 + 9x - 20}{(x-2)(x+3)} \bigg|_{x=2} = \frac{12 + 18 - 20}{(2+3)} = \frac{10}{5} =$$

and

$$k_2 = \frac{3x^2 + 9x - 20}{(x-2)(x+3)} \bigg|_{x=-3} = \frac{27 - 27 - 20}{(-3-2)} = \frac{-20}{-5} = 4$$

Therefore,

$$F(x) = \frac{3x^2 + 9x - 20}{(x - 2)(x + 3)} = 3 + \frac{2}{x - 2} + \frac{4}{x + 3}$$

## **B.5-6 Modified Partial Fractions**

In finding the inverse *z*-transform (Ch. 5), we require partial fractions of the form  $kx/(x - \lambda_i)^r$  rather than  $k/(x - \lambda_i)^r$ . This can be achieved by expanding F(x)/x into partial fractions. Consider, for example,

$$F(x) = \frac{5x^2 + 20x + 18}{(x+2)(x+3)^2}$$

Dividing both sides by *x* yields

$$\frac{F(x)}{x} = \frac{5x^2 + 20x + 18}{x(x+2)(x+3)^2}$$

Expansion of the right-hand side into partial fractions as usual yields

$$\frac{F(x)}{x} = \frac{5x^2 + 20x + 18}{x(x+2)(x+3)^2} = \frac{a_1}{x} + \frac{a_2}{x+2} + \frac{a_3}{(x+3)} + \frac{a_4}{(x+3)^2}$$

Using the procedure discussed earlier, we find  $a_1 = 1$ ,  $a_2 = 1$ ,  $a_3 = -2$ , and  $a_4 = 1$ . Therefore,

$$\frac{F(x)}{x} = \frac{1}{x} + \frac{1}{x+2} - \frac{2}{x+3} + \frac{1}{(x+3)^2}$$

Now multiplying both sides by *x* yields

$$F(x) = 1 + \frac{x}{x+2} - \frac{2x}{x+3} + \frac{x}{(x+3)^2}$$

This expresses F(x) as the sum of partial fractions having the form  $kx/(x - \lambda_i)^r$ .

# **B.6 VECTORS AND MATRICES**

An entity specified by *n* numbers in a certain order (ordered *n*-tuple) is an *n*-dimensional vector. Thus, an ordered *n*-tuple  $(x_1, x_2, ..., x_n)$  represents an *n*-dimensional vector **x**. A vector may be represented as a row (*row vector*):

$$\mathbf{x} = [\begin{array}{cccc} x_1 & x_2 & \cdots & x_n \end{array}]$$

or as a column (column vector):

$$\mathbf{x} = \begin{bmatrix} x_1 \\ x_2 \\ \vdots \\ x_n \end{bmatrix}$$

Simultaneous linear equations can be viewed as the transformation of one vector into another. Consider, for example, the *m* simultaneous linear equations

$$y_{1} = a_{11}x_{1} + a_{12}x_{2} + \dots + a_{1n}x_{n}$$
  

$$y_{2} = a_{21}x_{1} + a_{22}x_{2} + \dots + a_{2n}x_{n}$$
  

$$\vdots$$
  

$$y_{m} = a_{m1}x_{1} + a_{m2}x_{2} + \dots + a_{mn}x_{n}$$
  
(B.31)

If we define two column vectors  $\mathbf{x}$  and  $\mathbf{y}$  as

$$\mathbf{x} = \begin{bmatrix} x_1 \\ x_2 \\ \vdots \\ x_n \end{bmatrix} \quad \text{and} \quad \mathbf{y} = \begin{bmatrix} y_1 \\ y_2 \\ \vdots \\ y_m \end{bmatrix}$$

then Eq. (B.31) may be viewed as the relationship or the function that transforms vector  $\mathbf{x}$  into vector  $\mathbf{y}$ . Such a transformation is called a *linear transformation* of vectors. To perform a linear transformation, we need to define the array of coefficients  $a_{ij}$  appearing in Eq. (B.31). This array is called a *matrix* and is denoted by  $\mathbf{A}$  for convenience:

$$\mathbf{A} = \begin{bmatrix} a_{11} & a_{12} & \cdots & a_{1n} \\ a_{21} & a_{22} & \cdots & a_{2n} \\ \vdots & \vdots & \cdots & \vdots \\ a_{m1} & a_{m2} & \cdots & a_{mn} \end{bmatrix}$$

A matrix with *m* rows and *n* columns is called a matrix of order (m, n) or an  $(m \times n)$  matrix. For the special case of m = n, the matrix is called a *square matrix* of order *n*.

It should be stressed at this point that a matrix is not a number such as a determinant, but an array of numbers arranged in a particular order. It is convenient to abbreviate the representation of matrix **A** with the form  $(a_{ij})_{m \times n}$ , implying a matrix of order  $m \times n$  with  $a_{ij}$  as its *ij*th element. In practice, when the order  $m \times n$  is understood or need not be specified, the notation can be

abbreviated to  $(a_{ij})$ . Note that the first index *i* of  $a_{ij}$  indicates the row and the second index *j* indicates the column of the element  $a_{ij}$  in matrix **A**.

Equation (B.31) may now be expressed in a matrix form as

$$\begin{bmatrix} y_1 \\ y_2 \\ \vdots \\ y_m \end{bmatrix} = \begin{bmatrix} a_{11} & a_{12} & \cdots & a_{1n} \\ a_{21} & a_{22} & \cdots & a_{2n} \\ \vdots & \vdots & \cdots & \vdots \\ a_{m1} & a_{m2} & \cdots & a_{mn} \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \\ \vdots \\ x_n \end{bmatrix} \quad \text{or} \quad \mathbf{y} = \mathbf{A}\mathbf{x}$$
(B.32)

At this point, we have not defined the multiplication of a matrix by a vector. The quantity **Ax** is not meaningful until such an operation has been defined.

### **B.6-1** Some Definitions and Properties

A square matrix whose elements are zero everywhere except on the main diagonal is a *diagonal matrix*. An example of a diagonal matrix is

Γ	2	0	0	٦
	0	1	0	
L	0	0	5	

A diagonal matrix with unity for all its diagonal elements is called an *identity matrix* or a *unit matrix*, denoted by **I**. This is a square matrix:

	1	0	0	• • •	0 ]
	0	1	0	• • •	0
I =	0	0	1	 	0
-	:	:	:		:
	0	0	0		1

The order of the unit matrix is sometimes indicated by a subscript. Thus,  $\mathbf{I}_n$  represents the  $n \times n$  unit matrix (or identity matrix). However, we shall omit the subscript since order is easily understood by context.

A matrix having all its elements zero is a zero matrix.

A square matrix **A** is a symmetric matrix if  $a_{ij} = a_{ji}$  (symmetry about the main diagonal).

Two matrices of the same order are said to be *equal* if they are equal element by element. Thus, if

$$\mathbf{A} = (a_{ij})_{m \times n}$$
 and  $\mathbf{B} = (b_{ij})_{m \times n}$ 

then  $\mathbf{A} = \mathbf{B}$  only if  $a_{ii} = b_{ii}$  for all *i* and *j*.

If the rows and columns of an  $m \times n$  matrix **A** are interchanged so that the elements in the *i*th row now become the elements of the *i*th column (for i = 1, 2, ..., m), the resulting matrix is called the *transpose* of **A** and is denoted by  $\mathbf{A}^T$ . It is evident that  $\mathbf{A}^T$  is an  $n \times m$  matrix. For example, if

$$\mathbf{A} = \begin{bmatrix} 2 & 1 \\ 3 & 2 \\ 1 & 3 \end{bmatrix}, \quad \text{then} \quad \mathbf{A}^T = \begin{bmatrix} 2 & 3 & 1 \\ 1 & 2 & 3 \end{bmatrix}$$

Using the abbreviated notation, if  $\mathbf{A} = (a_{ij})_{m \times n}$ , then  $\mathbf{A}^T = (a_{ji})_{n \times m}$ . Intuitively, further notice that  $(\mathbf{A}^T)^T = \mathbf{A}$ .

## **B.6-2** Matrix Algebra

We shall now define matrix operations, such as addition, subtraction, multiplication, and division of matrices. The definitions should be formulated so that they are useful in the manipulation of matrices.

## ADDITION OF MATRICES

For two matrices **A** and **B**, both of the same order  $(m \times n)$ ,

$$\mathbf{A} = \begin{bmatrix} a_{11} & a_{12} & \cdots & a_{1n} \\ a_{21} & a_{22} & \cdots & a_{2n} \\ \vdots & \vdots & \cdots & \vdots \\ a_{m1} & a_{m2} & \cdots & a_{mn} \end{bmatrix} \quad \text{and} \quad \mathbf{B} = \begin{bmatrix} b_{11} & b_{12} & \cdots & b_{1n} \\ b_{21} & b_{22} & \cdots & b_{2n} \\ \vdots & \vdots & \cdots & \vdots \\ b_{m1} & b_{m2} & \cdots & b_{mn} \end{bmatrix}$$

we define the sum  $\mathbf{A} + \mathbf{B}$  as

$$\mathbf{A} + \mathbf{B} = \begin{bmatrix} (a_{11} + b_{11}) & (a_{12} + b_{12}) & \cdots & (a_{1n} + b_{1n}) \\ (a_{21} + b_{21}) & (a_{22} + b_{22}) & \cdots & (a_{2n} + b_{2n}) \\ \vdots & \vdots & \ddots & \vdots \\ (a_{m1} + b_{m1}) & (a_{m2} + b_{m2}) & \cdots & (a_{mn} + b_{mn}) \end{bmatrix}$$

or

$$\mathbf{A} + \mathbf{B} = (a_{ij} + b_{ij})_{m \times n}$$

Note that two matrices can be added only if they are of the same order.

## MULTIPLICATION OF A MATRIX BY A SCALAR

We multiply a matrix **A** by a scalar *c* as follows:

$$c\mathbf{A} = c \begin{bmatrix} a_{11} & a_{12} & \cdots & a_{1n} \\ a_{21} & a_{22} & \cdots & a_{2n} \\ \vdots & \vdots & \cdots & \vdots \\ a_{m1} & a_{m2} & \cdots & a_{mn} \end{bmatrix} = \begin{bmatrix} ca_{11} & ca_{12} & \cdots & ca_{1n} \\ ca_{21} & ca_{22} & \cdots & ca_{2n} \\ \vdots & \vdots & \cdots & \vdots \\ ca_{m1} & ca_{m2} & \cdots & ca_{mn} \end{bmatrix} = \mathbf{A}c$$

Thus, we also observe that the scalar c and the matrix A commute: cA = Ac.

## MATRIX MULTIPLICATION

We define the product

$$AB = C$$

in which  $c_{ij}$ , the element of **C** in the *i*th row and *j*th column, is found by adding the products of the elements of **A** in the *i*th row multiplied by the corresponding elements of **B** in the *j*th column.

Thus,

$$c_{ij} = a_{i1}b_{1j} + a_{i2}b_{2j} + \dots + a_{in}b_{nj} = \sum_{k=1}^{n} a_{ik}b_{kj}$$
 (B.33)

This result is expressed as follows:

$$\begin{bmatrix} & & & \\ & & & & \\ & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\$$

Note carefully that if this procedure is to work, the number of columns of **A** must be equal to the number of rows of **B**. In other words, **AB**, the product of matrices **A** and **B**, is defined only if the number of columns of **A** is equal to the number of rows of **B**. If this condition is not satisfied, the product **AB** is not defined and is meaningless. When the number of columns of **A** is equal to the number of rows of **B**, matrix **A** is said to be *conformable* to matrix **B** for the product **AB**. Observe that if **A** is an  $m \times n$  matrix and **B** is an  $n \times p$  matrix, **A** and **B** are conformable for the product, and **C** is an  $m \times p$  matrix.

We demonstrate the use of the rule in Eq. (B.33) with the following examples.

$$\begin{bmatrix} 2 & 3 \\ 1 & 1 \\ 3 & 1 \end{bmatrix} \begin{bmatrix} 1 & 3 & 1 & 2 \\ 2 & 1 & 1 & 1 \end{bmatrix} = \begin{bmatrix} 8 & 9 & 5 & 7 \\ 3 & 4 & 2 & 3 \\ 5 & 10 & 4 & 7 \end{bmatrix}$$
$$\begin{bmatrix} 2 & 1 & 3 \end{bmatrix} \begin{bmatrix} 2 \\ 1 \\ 1 \end{bmatrix} = 8$$

In both cases, the two matrices are conformable. However, if we interchange the order of the first matrices as follows:

[	- 1	3	1	2 ]	2	3	
	2	1	1	$\begin{bmatrix} 2\\1 \end{bmatrix}$	3	1 1	

the matrices are no longer conformable for the product. It is evident that, in general,

### $AB \neq BA$

Indeed, **AB** may exist and **BA** may not exist, or vice versa, as in our examples. We shall see later that for some special matrices, AB = BA. When this is true, matrices A and B are said to *commute*. We re-emphasize that in general, matrices do not commute.

In the matrix product **AB**, matrix **A** is said to be *postmultiplied* by **B** or matrix **B** is said to be *premultiplied* by **A**. We may also verify the following relationships:

$$(\mathbf{A} + \mathbf{B})\mathbf{C} = \mathbf{A}\mathbf{C} + \mathbf{B}\mathbf{C}$$
  
 $\mathbf{C}(\mathbf{A} + \mathbf{B}) = \mathbf{C}\mathbf{A} + \mathbf{C}\mathbf{B}$ 

We can verify that any matrix **A** premultiplied or postmultiplied by the identity matrix **I** remains unchanged:

AI = IA = A

Of course, we must make sure that the order of I is such that the matrices are conformable for the corresponding product.

We give here, without proof, another important property of matrices:

$$|\mathbf{AB}| = |\mathbf{A}||\mathbf{B}|$$

where  $|\mathbf{A}|$  and  $|\mathbf{B}|$  represent determinants of matrices  $\mathbf{A}$  and  $\mathbf{B}$ .

## MULTIPLICATION OF A MATRIX BY A VECTOR

Consider Eq. (B.32), which represents Eq. (B.31). The right-hand side of Eq. (B.32) is a product of the  $m \times n$  matrix **A** and a vector **x**. If, for the time being, we treat the vector **x** as if it were an  $n \times 1$  matrix, then the product **Ax**, according to the matrix multiplication rule, yields the right-hand side of Eq. (B.31). Thus, we may multiply a matrix by a vector by treating the vector as if it were an  $n \times 1$  matrix. Note that the constraint of conformability still applies. Thus, in this case, **xA** is not defined and is meaningless.

### MATRIX INVERSION

To define the inverse of a matrix, let us consider the set of equations represented by Eq. (B.32) when m = n:

$$\begin{bmatrix} y_1 \\ y_2 \\ \vdots \\ y_n \end{bmatrix} = \begin{bmatrix} a_{11} & a_{12} & \cdots & a_{1n} \\ a_{21} & a_{22} & \cdots & a_{2n} \\ \vdots & \vdots & \cdots & \vdots \\ a_{n1} & a_{n2} & \cdots & a_{nn} \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \\ \vdots \\ x_n \end{bmatrix}$$
(B.34)

We can solve this set of equations for  $x_1, x_2, \ldots, x_n$  in terms of  $y_1, y_2, \ldots, y_n$  by using Cramer's rule [see Eq. (B.21)]. This yields

$$\begin{bmatrix} x_1\\ x_2\\ \vdots\\ x_n \end{bmatrix} = \begin{bmatrix} \frac{|\mathbf{D}_{11}|}{|\mathbf{A}|} & \frac{|\mathbf{D}_{21}|}{|\mathbf{A}|} & \cdots & \frac{|\mathbf{D}_{n1}|}{|\mathbf{A}|}\\ \frac{|\mathbf{D}_{12}|}{|\mathbf{A}|} & \frac{|\mathbf{D}_{22}|}{|\mathbf{A}|} & \cdots & \frac{|\mathbf{D}_{n2}|}{|\mathbf{A}|}\\ \vdots & \vdots & \cdots & \vdots\\ \frac{|\mathbf{D}_{1n}|}{|\mathbf{A}|} & \frac{|\mathbf{D}_{2n}|}{|\mathbf{A}|} & \cdots & \frac{|\mathbf{D}_{nn}|}{|\mathbf{A}|} \end{bmatrix} \begin{bmatrix} y_1\\ y_2\\ \vdots\\ y_n \end{bmatrix}$$
(B.35)

in which  $|\mathbf{A}|$  is the determinant of the matrix  $\mathbf{A}$  and  $|\mathbf{D}_{ij}|$  is the *cofactor* of element  $a_{ij}$  in the matrix  $\mathbf{A}$ . The cofactor of element  $a_{ij}$  is given by  $(-1)^{i+j}$  times the determinant of the

 $(n-1) \times (n-1)$  matrix that is obtained when the *i*th row and the *j*th column in matrix **A** are deleted.

We can express Eq. (B.34) in compact matrix form as

$$\mathbf{y} = \mathbf{A}\mathbf{x} \tag{B.36}$$

We now define  $A^{-1}$ , the inverse of a square matrix A, with the property

 $\mathbf{A}^{-1}\mathbf{A} = \mathbf{I}$  (unit matrix)

Then, premultiplying both sides of Eq. (B.36) by  $A^{-1}$ , we obtain

$$\mathbf{A}^{-1}\mathbf{y} = \mathbf{A}^{-1}\mathbf{A}\mathbf{x} = \mathbf{I}\mathbf{x} = \mathbf{x}$$

or

$$\mathbf{x} = \mathbf{A}^{-1}\mathbf{y} \tag{B.37}$$

A comparison of Eq. (B.37) with Eq. (B.35) shows that

$$\mathbf{A}^{-1} = \frac{1}{|\mathbf{A}|} \begin{bmatrix} |\mathbf{D}_{11}| & |\mathbf{D}_{21}| & \cdots & |\mathbf{D}_{n1}| \\ |\mathbf{D}_{12}| & |\mathbf{D}_{22}| & \cdots & |\mathbf{D}_{n2}| \\ \vdots & \vdots & \cdots & \vdots \\ |\mathbf{D}_{1n}| & |\mathbf{D}_{2n}| & \cdots & |\mathbf{D}_{nn}| \end{bmatrix}$$

One of the conditions necessary for a unique solution of Eq. (B.34) is that the number of equations must equal the number of unknowns. This implies that the matrix **A** must be a square matrix. In addition, we observe from the solution as given in Eq. (B.35) that if the solution is to exist,  $|\mathbf{A}| \neq 0$ .<sup>†</sup> Therefore, the inverse exists only for a square matrix and only under the condition that the determinant of the matrix be nonzero. A matrix whose determinant is nonzero is a *nonsingular* matrix. Thus, an inverse exists only for a nonsingular, square matrix. Since  $\mathbf{A}^{-1}\mathbf{A} = \mathbf{I} = \mathbf{A}\mathbf{A}^{-1}$ , we further note that the matrices **A** and  $\mathbf{A}^{-1}$  commute.<sup>‡</sup>

The operation of matrix division can be accomplished through matrix inversion.

### **EXAMPLE B.12** Computing the Inverse of a Matrix

Let us find  $\mathbf{A}^{-1}$  if

 $\mathbf{A} = \begin{bmatrix} 2 & 1 & 1 \\ 1 & 2 & 3 \\ 3 & 2 & 1 \end{bmatrix}$ 

<sup>&</sup>lt;sup>†</sup> These two conditions imply that the number of equations is equal to the number of unknowns and that all the equations are independent.

<sup>&</sup>lt;sup>‡</sup>To prove  $AA^{-1} = I$ , notice first that we define  $A^{-1}A = I$ . Thus,  $IA = AI = A(A^{-1}A) = (AA^{-1})A$ . Subtracting  $(AA^{-1})A$ , we see that  $IA - (AA^{-1})A = 0$  or  $(I - AA^{-1})A = 0$ . This requires  $AA^{-1} = I$ .

Here,

$$|\mathbf{D}_{11}| = -4, \quad |\mathbf{D}_{12}| = 8, \quad |\mathbf{D}_{13}| = -4$$
  

$$|\mathbf{D}_{21}| = 1, \quad |\mathbf{D}_{22}| = -1, \quad |\mathbf{D}_{23}| = -1$$
  

$$|\mathbf{D}_{31}| = 1, \quad |\mathbf{D}_{32}| = -5, \quad |\mathbf{D}_{33}| = 3$$
  
and  $|\mathbf{A}| = -4$ . Therefore,  

$$\mathbf{A}^{-1} = -\frac{1}{4} \begin{bmatrix} -4 & 1 & 1\\ 8 & -1 & -5\\ -4 & -1 & 3 \end{bmatrix}$$

# **B.7 MATLAB: ELEMENTARY OPERATIONS**

## **B.7-1 MATLAB Overview**

Although MATLAB<sup>1</sup> (a registered trademark of The MathWorks, Inc.) is easy to use, it can be intimidating to new users. Over the years, MATLAB has evolved into a sophisticated computational package with thousands of functions and thousands of pages of documentation. This section provides a brief introduction to the software environment.

When MATLAB is first launched, its command window appears. When MATLAB is ready to accept an instruction or input, a command prompt (>>) is displayed in the command window. Nearly all MATLAB activity is initiated at the command prompt.

Entering instructions at the command prompt generally results in the creation of an object or objects. Many classes of objects are possible, including functions and strings, but usually objects are just data. Objects are placed in what is called the MATLAB workspace. If not visible, the workspace can be viewed in a separate window by typing workspace at the command prompt. The workspace provides important information about each object, including the object's name, size, and class.

Another way to view the workspace is the whos command. When whos is typed at the command prompt, a summary of the workspace is printed in the command window. The who command is a short version of whos that reports only the names of workspace objects.

Several functions exist to remove unnecessary data and help free system resources. To remove specific variables from the workspace, the clear command is typed, followed by the names of the variables to be removed. Just typing clear removes all objects from the workspace. Additionally, the clc command clears the command window, and the clf command clears the current figure window.

Often, important data and objects created in one session need to be saved for future use. The save command, followed by the desired filename, saves the entire workspace to a file, which has the .mat extension. It is also possible to selectively save objects by typing save followed by the filename and then the names of the objects to be saved. The load command followed by the filename is used to load the data and objects contained in a MATLAB data file (.mat file).

Although MATLAB does not automatically save workspace data from one session to the next, lines entered at the command prompt are recorded in the command history. Previous command lines can be viewed, copied, and executed directly from the command history window. From the command window, pressing the up or down arrow key scrolls through previous commands and redisplays them at the command prompt. Typing the first few characters and then pressing the arrow keys scrolls through the previous commands that start with the same characters. The arrow keys allow command sequences to be repeated without retyping.

Perhaps the most important and useful command for new users is help. To learn more about a function, simply type help followed by the function name. Helpful text is then displayed in the command window. The obvious shortcoming of help is that the function name must first be known. This is especially limiting for MATLAB beginners. Fortunately, help screens often conclude by referencing related or similar functions. These references are an excellent way to learn new MATLAB commands. Typing help help, for example, displays detailed information on the help command itself and also provides reference to relevant functions, such as the lookfor command. The lookfor command helps locate MATLAB functions based on a keyword search. Simply type lookfor followed by a single keyword, and MATLAB searches for functions that contain that keyword.

MATLAB also has comprehensive HTML-based help. The HTML help is accessed by using MATLAB's integrated help browser, which also functions as a standard web browser. The HTML help facility includes a function and topic index as well as full text-searching capabilities. Since HTML documents can contain graphics and special characters, HTML help can provide more information than the command-line help. After a little practice, it is easy to find information in MATLAB.

When MATLAB graphics are created, the print command can save figures in a common file format such as postscript, encapsulated postscript, JPEG, or TIFF. The format of displayed data, such as the number of digits displayed, is selected by using the format command. MATLAB help provides the necessary details for both these functions. When a MATLAB session is complete, the exit command terminates MATLAB.

### **B.7-2** Calculator Operations

MATLAB can function as a simple calculator, working as easily with complex numbers as with real numbers. Scalar addition, subtraction, multiplication, division, and exponentiation are accomplished using the traditional operator symbols +, -, \*, /, and  $\hat{}$ . Since MATLAB predefines  $i = j = \sqrt{-1}$ , a complex constant is readily created using Cartesian coordinates. For example,

>> z = -3-4j z = -3.0000 - 4.0000i

assigns the complex constant -3 - j4 to the variable z.

The real and imaginary components of z are extracted by using the real and imag operators. In MATLAB, the input to a function is placed parenthetically following the function name.

When a command is terminated with a semicolon, the statement is evaluated but the results are not displayed to the screen. This feature is useful when one is computing intermediate results, and it allows multiple instructions on a single line. Although not displayed, the results  $z_real = -3$  and  $z_imag = -4$  are calculated and available for additional operations such as computing |z|.

There are many ways to compute the modulus, or magnitude, of a complex quantity. Trigonometry confirms that z = -3 - i4, which corresponds to a 3-4-5 triangle, has modulus

 $|z| = |-3 - j4| = \sqrt{(-3)^2 + (-4)^2} = 5$ . The MATLAB sqrt command provides one way to compute the required square root.

>> z\_mag = sqrt(z\_real^2 + z\_imag^2)
z\_mag = 5

In MATLAB, most commands, including sqrt, accept inputs in a variety of forms, including constants, variables, functions, expressions, and combinations thereof.

The same result is also obtained by computing  $|z| = \sqrt{zz^*}$ . In this case, complex conjugation is performed by using the conj command.

More simply, MATLAB computes absolute values directly by using the abs command.

>> z\_mag = abs(z) z\_mag = 5

In addition to magnitude, polar notation requires phase information. The angle command provides the angle of a complex number.

>> z\_rad = angle(z) z\_rad = -2.2143

MATLAB expects and returns angles in a radian measure. Angles expressed in degrees require an appropriate conversion factor.

>> z\_deg = angle(z)\*180/pi
z\_deg = -126.8699

Notice, MATLAB predefines the variable  $pi = \pi$ .

It is also possible to obtain the angle of z using a two-argument arc-tangent function, atan2.

Unlike a single-argument arctangent function, the two-argument arctangent function ensures that the angle reflects the proper quadrant. MATLAB supports a full complement of trigonometric functions: standard trigonometric functions cos, sin, tan; reciprocal trigonometric functions sec, csc, cot; inverse trigonometric functions acos, asin, atan, asec, acsc, acot; and hyperbolic variations cosh, sinh, tanh, sech, csch, coth, acosh, asinh, atanh, asech, acsch, and acoth. Of course, MATLAB comfortably supports complex arguments for any trigonometric function. As with the angle command, MATLAB trigonometric functions utilize units of radians.

The concept of trigonometric functions with complex-valued arguments is rather intriguing. The results can contradict what is often taught in introductory mathematics courses. For example, a common claim is that  $|\cos(x)| \le 1$ . While this is true for real *x*, it is not necessarily true for complex *x*. This is readily verified by example using MATLAB and the cos function.

```
>> cos(1j)
ans = 1.5431
```

45

Problem B.1-19 investigates these ideas further.

Similarly, the claim that it is impossible to take the logarithm of a negative number is false. For example, the principal value of  $\ln(-1)$  is  $j\pi$ , a fact easily verified by means of Euler's equation. In MATLAB, base-10 and base-*e* logarithms are computed by using the log10 and log commands, respectively.

>> log(-1) ans = 0 + 3.1416i

## **B.7-3 Vector Operations**

The power of MATLAB becomes apparent when vector arguments replace scalar arguments. Rather than computing one value at a time, a single expression computes many values. Typically, vectors are classified as row vectors or column vectors. For now, we consider the creation of row vectors with evenly spaced, real elements. To create such a vector, the notation a:b:c is used, where a is the initial value, b designates the step size, and c is the termination value. For example, 0:2:11 creates the length-6 vector of even-valued integers ranging from 0 to 10.

>> k = 0:2:11k = 0 2 4 6 8 10

In this case, the termination value does not appear as an element of the vector. Negative and noninteger step sizes are also permissible.

>> k = 11:-10/3:0 k = 11.0000 7.6667 4.3333 1.0000

If a step size is not specified, a value of 1 is assumed.

>> k = 0:11k = 0 1 2 3 4 5 6 7 8 9 10 11

Vector notation provides the basis for solving a wide variety of problems.

For example, consider finding the three cube roots of minus one,  $w^3 = -1 = e^{j(\pi + 2\pi k)}$  for integer k. Taking the cube root of each side yields  $w = e^{j(\pi/3 + 2\pi k/3)}$ . To find the three unique solutions, use any three consecutive integer values of k and MATLAB's exp function.

>> k = 0:2; w = exp(1j\*(pi/3 + 2\*pi\*k/3))
w = 0.5000 + 0.8660i -1.0000 + 0.0000i 0.5000 - 0.8660i

The solutions, particularly w = -1, are easy to verify.

Finding the 100 unique roots of  $w^{100} = -1$  is just as simple.

A semicolon concludes the final instruction to suppress the inconvenient display of all 100 solutions. To view a particular solution, the user must use an index to specify desired elements.

MATLAB indices are integers that increase from a starting value of 1. For example, the fifth element of *w* is extracted using an index of  $5.^{\dagger}$ 

>> w(5) ans = 0.9603 + 0.2790i

Notice that this solution corresponds to k = 4. The independent variable of a function, in this case k, rarely serves as the index. Since k is also a vector, it can likewise be indexed. In this way, we can verify that the fifth value of k is indeed 4.

>> k(5) ans = 4

It is also possible to use a vector index to access multiple values. For example, index vector 98:100 identifies the last three solutions corresponding to k = [97, 98, 99].

>> w(98:100) ans = 0.9877 - 0.1564i 0.9956 - 0.0941i 0.9995 - 0.0314i

Vector representations provide the foundation to rapidly create and explore various signals. Consider the simple 10 Hz sinusoid described by  $f(t) = \sin (2\pi 10t + \pi/6)$ . Two cycles of this sinusoid are included in the interval  $0 \le t < 0.2$ . A vector t is used to uniformly represent 500 points over this interval.

>> t = 0:0.2/500:0.2-0.2/500;

Next, the function f(t) is evaluated at these points.

```
>> f = sin(2*pi*10*t+pi/6)
```

The value of f(t) at t = 0 is the first element of the vector and is thus obtained by using an index of 1.

>> f(1) ans = 0.5000

Unfortunately, MATLAB's indexing syntax conflicts with standard equation notation.<sup>‡</sup> That is, the MATLAB indexing command f(1) is not the same as the standard notation  $f(1) = f(t)|_{t=1}$ . Care must be taken to avoid confusion; remember that the index parameter rarely reflects the independent variable of a function.


# **B.7-4 Simple Plotting**

MATLAB's plot command provides a convenient way to visualize data, such as graphing f(t) against the independent variable t.

```
>> plot(t,f);
```

<sup>&</sup>lt;sup>†</sup> Some other programming languages, such as C, begin indexing at 0. Careful attention is warranted.

<sup>&</sup>lt;sup>‡</sup>MATLAB anonymous functions, considered in Sec. 1.11, are an important and useful exception.

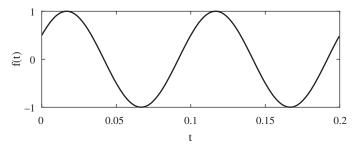

**Figure B.12**  $f(t) = \sin(2\pi 10t + \pi/6)$ .

Axis labels are added using the xlabel and ylabel commands, where the desired string must be enclosed by single quotation marks. The result is shown in Fig. B.12.

>> xlabel('t'); ylabel('f(t)')

The title command is used to add a title above the current axis.


unit circle, a fact not easily discerned from the raw numerical data.

By default, MATLAB connects data points with solid lines. Plotting discrete points, such as the 100 unique roots of  $w^{100} = -1$ , is accommodated by supplying the plot command with an additional string argument. For example, the string 'o' tells MATLAB to mark each data point with a circle rather than connecting points with lines. A full description of the supported plot options is available from MATLAB's help facilities.

```
>> plot(real(w),imag(w),'o');
>> xlabel('Re(w)'); ylabel('Im(w)'); axis equal
```

The axis equal command ensures that the scale used for the horizontal axis is equal to the scale used for the vertical axis. Without axis equal, the plot would appear elliptical rather than circular. Figure B.13 illustrates that the 100 unique roots of  $w^{100} = -1$  lie equally spaced on the

MATLAB also includes many specialized plotting functions. For example, MATLAB commands semilogx, semilogy, and loglog operate like the plot command but use base-10 logarithmic scales for the horizontal axis, vertical axis, and the horizontal and vertical axes,

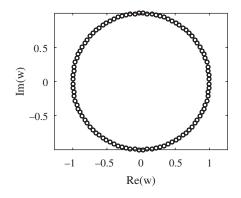

**Figure B.13** Unique roots of  $w^{100} = -1$ .

respectively. Monochrome and color images can be displayed by using the image command, and contour plots are easily created with the contour command. Furthermore, a variety of three-dimensional plotting routines are available, such as plot3, contour3, mesh, and surf. Information about these instructions, including examples and related functions, is available from MATLAB help.

## **B.7-5** Element-by-Element Operations

Suppose a new function h(t) is desired that forces an exponential envelope on the sinusoid f(t), h(t) = f(t)g(t), where  $g(t) = e^{-10t}$ . First, row vector g(t) is created.

>> g = exp(-10\*t);

Given MATLAB's vector representation of g(t) and f(t), computing h(t) requires some form of vector multiplication. There are three standard ways to multiply vectors: inner product, outer product, and element-by-element product. As a matrix-oriented language, MATLAB defines the standard multiplication operator \* according to the rules of matrix algebra: the multiplicand must be conformable to the multiplier. A  $1 \times N$  row vector times an  $N \times 1$  column vector results in the scalar-valued inner product. An  $N \times 1$  column vector times a  $1 \times M$  row vector results in the outer product, which is an  $N \times M$  matrix. Matrix algebra prohibits multiplication of two row vectors or multiplication of two column vectors. Thus, the \* operator is not used to perform element-by-element multiplication.<sup>†</sup>

Element-by-element operations require vectors to have the same dimensions. An error occurs if element-by-element operations are attempted between row and column vectors. In such cases, one vector must first be transposed to ensure both vector operands have the same dimensions. In MATLAB, most element-by-element operations are preceded by a period. For example, element-by-element multiplication, division, and exponentiation are accomplished using .\*, ./, and .^, respectively. Vector addition and subtraction are intrinsically element-by-element operations and require no period. Intuitively, we know h(t) should be the same size as both g(t) and f(t). Thus, h(t) is computed using element-by-element multiplication.


The plot command accommodates multiple curves and also allows modification of line properties. This facilitates side-by-side comparison of different functions, such as h(t) and f(t). Line characteristics are specified by using options that follow each vector pair and are enclosed in single quotes.

>> plot(t,f,'-k',t,h,':k');
>> xlabel('t'); ylabel('Amplitude');
>> legend('f(t)','h(t)');

Here, '-k' instructs MATLAB to plot f(t) using a solid black line, while ':k' instructs MATLAB to use a dotted black line to plot h(t). A legend and axis labels complete the plot, as shown in

<sup>&</sup>gt;> h = f.\*g;

<sup>&</sup>lt;sup>†</sup> While grossly inefficient, element-by-element multiplication can be accomplished by extracting the main diagonal from the outer product of two *N*-length vectors.

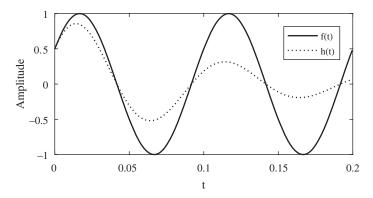

**Figure B.14** Graphical comparison of f(t) and h(t).

Fig. B.14. It is also possible, although more cumbersome, to use pull down menus to modify line properties and to add labels and legends directly in the figure window.

## **B.7-6 Matrix Operations**

Many applications require more than row vectors with evenly spaced elements; row vectors, column vectors, and matrices with arbitrary elements are typically needed.

MATLAB provides several functions to generate common, useful matrices. Given integers m, n, and vector x, the function eye(m) creates the  $m \times m$  identity matrix; the function ones(m,n) creates the  $m \times n$  matrix of all ones; the function zeros(m,n) creates the  $m \times n$  matrix of all zeros; and the function diag(x) uses vector x to create a diagonal matrix. The creation of general matrices and vectors, however, requires each individual element to be specified.

Vectors and matrices can be input spreadsheet style by using MATLAB's array editor. This graphical approach is rather cumbersome and is not often used. A more direct method is preferable.

Consider a simple row vector **r**,

$$\mathbf{r} = [1 \ 0 \ 0]$$

The MATLAB notation a:b:c cannot create this row vector. Rather, square brackets are used to create **r**.

>>  $r = [1 \ 0 \ 0]$  $r = 1 \ 0 \ 0$ 

Square brackets enclose elements of the vector, and spaces or commas are used to separate row elements.

Next, consider the  $3 \times 2$  matrix **A**,

$$\mathbf{A} = \begin{bmatrix} 2 & 3 \\ 4 & 5 \\ 0 & 6 \end{bmatrix}$$

Matrix **A** can be viewed as a three-high stack of two-element row vectors. With a semicolon to separate rows, square brackets are used to create the matrix.

>>  $A = \begin{bmatrix} 2 & 3; 4 & 5; 0 & 6 \end{bmatrix}$  A = 2 & 3 4 & 50 & 6

Each row vector needs to have the same length to create a sensible matrix.

In addition to enclosing string arguments, a single quote performs the complex conjugate transpose operation. In this way, row vectors become column vectors and vice versa. For example, a column vector  $\mathbf{c}$  is easily created by transposing row vector  $\mathbf{r}$ .

>> c = r' c = 1 0 0

Since vector  $\mathbf{r}$  is real, the complex-conjugate transpose is just the transpose. Had  $\mathbf{r}$  been complex, the simple transpose could have been accomplished by either  $\mathbf{r}$ . or  $(conj(\mathbf{r}))$ .

More formally, square brackets are referred to as a concatenation operator. A concatenation combines or connects smaller pieces into a larger whole. Concatenations can involve simple numbers, such as the six-element concatenation used to create the  $3 \times 2$  matrix **A**. It is also possible to concatenate larger objects, such as vectors and matrices. For example, vector **c** and matrix **A** can be concatenated to form a  $3 \times 3$  matrix **B**.

>> B = [c A] B = 1 2 3 0 4 50 0 6

Errors will occur if the component dimensions do not sensibly match; a  $2 \times 2$  matrix would not be concatenated with a  $3 \times 3$  matrix, for example.

Elements of a matrix are indexed much like vectors, except two indices are typically used to specify row and column.<sup> $\dagger$ </sup> Element (1, 2) of matrix **B**, for example, is 2.

>> B(1,2) ans = 2

Indices can likewise be vectors. For example, vector indices allow us to extract the elements common to the first two rows and last two columns of matrix  $\mathbf{B}$ .

```
>> B(1:2,2:3)
ans = 2 3
4 5
```

<sup>&</sup>lt;sup>†</sup> Matrix elements can also be accessed by means of a single index, which enumerates along columns. Formally, the element from row *m* and column *n* of an  $M \times N$  matrix may be obtained with a single index (n-1)M + m. For example, element (1, 2) of matrix **B** is accessed by using the index (2-1)3 + 1 = 4. That is, B(4) yields 2.

One indexing technique is particularly useful and deserves special attention. A colon can be used to specify all elements along a specified dimension. For example, B(2, :) selects all column elements along the second row of **B**.

>> B(2,:) ans = 0 4 5

Now that we understand basic vector and matrix creation, we turn our attention to using these tools on real problems. Consider solving a set of three linear simultaneous equations in three unknowns.

$$x_1 - 2x_2 + 3x_3 = 1$$
  
- $\sqrt{3}x_1 + x_2 - \sqrt{5}x_3 = \pi$   
 $3x_1 - \sqrt{7}x_2 + x_3 = e$ 

This system of equations is represented in matrix form according to Ax = y, where

$$\mathbf{A} = \begin{bmatrix} 1 & -2 & 3\\ -\sqrt{3} & 1 & -\sqrt{5}\\ 3 & -\sqrt{7} & 1 \end{bmatrix}, \qquad \mathbf{x} = \begin{bmatrix} x_1\\ x_2\\ x_3 \end{bmatrix}, \text{ and } \qquad \mathbf{y} = \begin{bmatrix} 1\\ \pi\\ e \end{bmatrix}$$

Although Cramer's rule can be used to solve Ax = y, it is more convenient to solve by multiplying both sides by the matrix inverse of **A**. That is,  $x = A^{-1}Ax = A^{-1}y$ . Solving for **x** by hand or by calculator would be tedious at best, so MATLAB is used. We first create **A** and **y**.

>> A = [1 -2 3;-sqrt(3) 1 -sqrt(5);3 -sqrt(7) 1]; y = [1;pi;exp(1)];

The vector solution is found by using MATLAB's inv function.

It is also possible to use MATLAB's left divide operator  $x = A \setminus y$  to find the same solution. The left divide is generally more computationally efficient than matrix inverses. As with matrix multiplication, left division requires that the two arguments be conformable.

Of course, Cramer's rule can be used to compute individual solutions, such as  $x_1$ , by using vector indexing, concatenation, and MATLAB's det command to compute determinants.

>> x1 = det([y,A(:,2:3)])/det(A)
x1 = -1.9999

Another nice application of matrices is the simultaneous creation of a family of curves. Consider  $h_{\alpha}(t) = e^{-\alpha t} \sin(2\pi 10t + \pi/6)$  over  $0 \le t \le 0.2$ . Figure B.14 shows  $h_{\alpha}(t)$  for  $\alpha = 0$  and  $\alpha = 10$ . Let's investigate the family of curves  $h_{\alpha}(t)$  for  $\alpha = [0, 1, ..., 10]$ . An inefficient way to solve this problem is create  $h_{\alpha}(t)$  for each  $\alpha$  of interest. This requires 11 individual cases. Instead, a matrix approach allows all 11 curves to be computed simultaneously. First, a vector is created that contains the desired values of  $\alpha$ .

>> alpha = (0:10);

By using a sampling interval of one millisecond,  $\Delta t = 0.001$ , a time vector is also created.

>> t = (0:0.001:0.2)';

The result is a length-201 column vector. By replicating the time vector for each of the 11 curves required, a time matrix T is created. This replication can be accomplished by using an outer product between t and a  $1 \times 11$  vector of ones.<sup>†</sup>

>> T = t\*ones(1,11);


The result is a  $201 \times 11$  matrix that has identical columns. Right multiplying T by a diagonal matrix created from  $\alpha$ , columns of T can be individually scaled and the final result is computed.

>> H = exp(-T\*diag(alpha)).\*sin(2\*pi\*10\*T+pi/6);

Here, H is a  $201 \times 11$  matrix, where each column corresponds to a different value of  $\alpha$ . That is,  $\mathbf{H} = [\mathbf{h}_0, \mathbf{h}_1, \dots, \mathbf{h}_{10}]$ , where  $\mathbf{h}_{\alpha}$  are column vectors. As shown in Fig. B.15, the 11 desired curves are simultaneously displayed by using MATLAB's plot command, which allows matrix arguments.

>> plot(t,H); xlabel('t'); ylabel('h(t)');

This example illustrates an important technique called vectorization, which increases execution efficiency for interpretive languages such as MATLAB. Algorithm vectorization uses matrix and

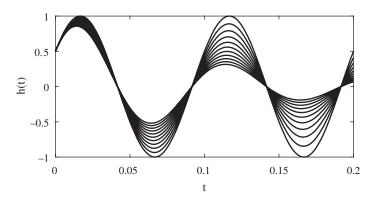

**Figure B.15**  $h_{\alpha}(t)$  for  $\alpha = [0, 1, ..., 10]$ .

<sup>&</sup>lt;sup>†</sup> The repmat command provides a more flexible method to replicate or tile objects. Equivalently, T = repmat(t,1,11).

vector operations to avoid manual repetition and loop structures. It takes practice and effort to become proficient at vectorization, but the worthwhile result is efficient, compact code.<sup> $\dagger$ </sup>

#### **B.7-7** Partial Fraction Expansions

There are a wide variety of techniques and shortcuts to compute the partial fraction expansion of rational function F(x) = B(x)/A(x), but few are more simple than the MATLAB residue command. The basic form of this command is

>> [R,P,K] = residue(B,A)

The two input vectors B and A specify the polynomial coefficients of the numerator and denominator, respectively. These vectors are ordered in descending powers of the independent variable. Three vectors are output. The vector R contains the coefficients of each partial fraction, and vector P contains the corresponding roots of each partial fraction. For a root repeated r times, the r partial fractions are ordered in ascending powers. When the rational function is not proper, the vector K contains the direct terms, which are ordered in descending powers of the independent variable.

To demonstrate the power of the residue command, consider finding the partial fraction expansion of

$$F(x) = \frac{x^5 + \pi}{\left(x + \sqrt{2}\right)\left(x - \sqrt{2}\right)^3} = \frac{x^5 + \pi}{x^4 - \sqrt{8}x^3 + \sqrt{32}x - 4}$$

By hand, the partial fraction expansion of F(x) is difficult to compute. MATLAB, however, makes short work of the expansion.

>> [R,P,K] = residue([1 0 0 0 0 pi],[1 -sqrt(8) 0 sqrt(32) -4]); R.', P.', K
R = 7.8888 5.9713 3.1107 0.1112
P = 1.4142 1.4142 1.4142 -1.4142
K = 1.0000 2.8284

Written in standard form, the partial fraction expansion of F(x) is

$$F(x) = x + 2.8284 + \frac{7.8888}{x - \sqrt{2}} + \frac{5.9713}{(x - \sqrt{2})^2} + \frac{3.1107}{(x - \sqrt{2})^3} + \frac{0.1112}{x + \sqrt{2}}$$

The signal-processing toolbox function residuez is similar to the residue command and offers more convenient expansion of certain rational functions, such as those commonly encountered in the study of discrete-time systems. Additional information about the residue and residuez commands is available from MATLAB's help facilities.

<sup>&</sup>lt;sup>†</sup> The benefits of vectorization are less pronounced in recent versions of MATLAB.

# **B.8 APPENDIX: USEFUL MATHEMATICAL FORMULAS**

We conclude this chapter with a selection of useful mathematical facts.

# **B.8-1 Some Useful Constants**

 $\pi \approx 3.1415926535$   $e \approx 2.7182818284$   $\frac{1}{e} \approx 0.3678794411$   $\log_{10} 2 \approx 0.30103$   $\log_{10} 3 \approx 0.47712$ 

# **B.8-2** Complex Numbers

$$e^{\pm j\pi/2} = \pm j$$

$$e^{\pm jn\pi} = \begin{cases} 1 & n \text{ even} \\ -1 & n \text{ odd} \end{cases}$$

$$e^{\pm j\theta} = \cos \theta \pm j \sin \theta$$

$$a + jb = re^{j\theta} \qquad r = \sqrt{a^2 + b^2}, \ \theta = \tan^{-1}\left(\frac{b}{a}\right)$$

$$(re^{j\theta})^k = r^k e^{jk\theta}$$

$$(r_1 e^{j\theta_1})(r_2 e^{j\theta_2}) = r_1 r_2 e^{j(\theta_1 + \theta_2)}$$

# B.8-3 Sums

$$\sum_{k=m}^{n} r^{k} = \frac{r^{n+1} - r^{m}}{r-1} \qquad r \neq 1$$

$$\sum_{k=0}^{n} k = \frac{n(n+1)}{2}$$

$$\sum_{k=0}^{n} k^{2} = \frac{n(n+1)(2n+1)}{6}$$

$$\sum_{k=0}^{n} kr^{k} = \frac{r + [n(r-1)-1]r^{n+1}}{(r-1)^{2}} \qquad r \neq 1$$

$$\sum_{k=0}^{n} k^{2}r^{k} = \frac{r[(1+r)(1-r^{n}) - 2n(1-r)r^{n} - n^{2}(1-r)^{2}r^{n}]}{(1-r)^{3}} \qquad r \neq 1$$

# **B.8-4** Taylor and Maclaurin Series

$$f(x) = f(a) + \frac{(x-a)}{1!}\dot{f}(a) + \frac{(x-a)^2}{2!}\ddot{f}(a) + \dots = \sum_{k=0}^{\infty} \frac{(x-a)^k}{k!}f^{(k)}(a)$$
$$f(x) = f(0) + \frac{x}{1!}\dot{f}(0) + \frac{x^2}{2!}\ddot{f}(0) + \dots = \sum_{k=0}^{\infty} \frac{x^k}{k!}f^{(k)}(0)$$

# **B.8-5** Power Series

$$e^{x} = 1 + x + \frac{x^{2}}{2!} + \frac{x^{3}}{3!} + \dots + \frac{x^{n}}{n!} + \dots$$

$$\sin x = x - \frac{x^{3}}{3!} + \frac{x^{5}}{5!} - \frac{x^{7}}{7!} + \dots$$

$$\cos x = 1 - \frac{x^{2}}{2!} + \frac{x^{4}}{4!} - \frac{x^{6}}{6!} + \frac{x^{8}}{8!} - \dots$$

$$\tan x = x + \frac{x^{3}}{3} + \frac{2x^{5}}{15} + \frac{17x^{7}}{315} + \dots \qquad x^{2} < \pi^{2}/4$$

$$\tanh x = x - \frac{x^{3}}{3} + \frac{2x^{5}}{15} - \frac{17x^{7}}{315} + \dots \qquad x^{2} < \pi^{2}/4$$

$$(1 + x)^{n} = 1 + nx + \frac{n(n-1)}{2!}x^{2} + \frac{n(n-1)(n-2)}{3!}x^{3} + \dots + \binom{n}{k}x^{k} + \dots + x^{n}$$

$$(1 + x)^{n} \approx 1 + nx \qquad |x| \ll 1$$

$$\frac{1}{1 - x} = 1 + x + x^{2} + x^{3} + \dots \qquad |x| < 1$$

# **B.8-6** Trigonometric Identities

$$e^{\pm jx} = \cos x \pm j \sin x$$
  

$$\cos x = \frac{1}{2} [e^{jx} + e^{-jx}]$$
  

$$\sin x = \frac{1}{2j} [e^{jx} - e^{-jx}]$$
  

$$\cos (x \pm \frac{\pi}{2}) = \mp \sin x$$
  

$$\sin (x \pm \frac{\pi}{2}) = \pm \cos x$$
  

$$2 \sin x \cos x = \sin 2x$$
  

$$\sin^2 x + \cos^2 x = 1$$
  

$$\cos^2 x - \sin^2 x = \cos 2x$$
  

$$\cos^2 x = \frac{1}{2} (1 + \cos 2x)$$
  

$$\sin^2 x = \frac{1}{2} (1 - \cos 2x)$$

#### 56 CHAPTER B BACKGROUND

$$\cos^{3} x = \frac{1}{4}(3\cos x + \cos 3x)$$
  

$$\sin^{3} x = \frac{1}{4}(3\sin x - \sin 3x)$$
  

$$\sin (x \pm y) = \sin x \cos y \pm \cos x \sin y$$
  

$$\cos (x \pm y) = \cos x \cos y \mp \sin x \sin y$$
  

$$\tan (x \pm y) = \frac{\tan x \pm \tan y}{1 \mp \tan x \tan y}$$
  

$$\sin x \sin y = \frac{1}{2}[\cos (x - y) - \cos (x + y)]$$
  

$$\cos x \cos y = \frac{1}{2}[\cos (x - y) + \cos (x + y)]$$
  

$$\sin x \cos y = \frac{1}{2}[\sin (x - y) + \sin (x + y)]$$
  

$$a \cos x + b \sin x = C \cos (x + \theta) \qquad C = \sqrt{a^{2} + b^{2}}, \theta = \tan^{-1} \left(\frac{-b}{a}\right)$$

# **B.8-7** Common Derivative Formulas

$$\frac{d}{dx}f(u) = \frac{d}{du}f(u)\frac{du}{dx}$$
$$\frac{d}{dx}(uv) = u\frac{dv}{dx} + v\frac{du}{dx}$$
$$\frac{d}{dx}(uv) = u\frac{dv}{dx} + v\frac{du}{dx}$$
$$\frac{d}{dx}\left(\frac{u}{v}\right) = \frac{v\frac{du}{dx} - u\frac{dv}{dx}}{v^2}$$
$$\frac{dx^n}{dx} = nx^{n-1}$$
$$\frac{d}{dx}\ln(ax) = \frac{1}{x}$$
$$\frac{d}{dx}\log(ax) = \frac{\log e}{x}$$
$$\frac{d}{dx}e^{bx} = be^{bx}$$
$$\frac{d}{dx}a^{bx} = b(\ln a)a^{bx}$$
$$\frac{d}{dx}\sin ax = a\cos ax$$
$$\frac{d}{dx}\cos ax = -a\sin ax$$
$$\frac{d}{dx}\tan ax = \frac{a}{\cos^2 ax}$$
$$\frac{d}{dx}(\sin^{-1}ax) = \frac{a}{\sqrt{1 - a^2x^2}}$$
$$\frac{d}{dx}(\tan^{-1}ax) = \frac{a}{1 + a^2x^2}$$

57

# **B.8-8** Indefinite Integrals

$$\int u dv = uv - \int v du$$

$$\int f(x)\dot{g}(x) dx = f(x)g(x) - \int \dot{f}(x)g(x) dx$$

$$\int \sin ax dx = -\frac{1}{a} \cos ax \qquad \int \cos ax dx = \frac{1}{a} \sin ax$$

$$\int \sin^2 ax dx = \frac{x}{2} - \frac{\sin 2ax}{4a} \qquad \int \cos^2 ax dx = \frac{x}{2} + \frac{\sin 2ax}{4a}$$

$$\int x\sin ax dx = \frac{1}{a^2} (\sin ax - ax \cos ax)$$

$$\int x\cos ax dx = \frac{1}{a^2} (\cos ax + ax \sin ax)$$

$$\int x^2 \sin ax dx = \frac{1}{a^3} (2ax \sin ax + 2\cos ax - a^2x^2 \cos ax)$$

$$\int x^2 \cos ax dx = \frac{1}{a^3} (2ax \cos ax - 2\sin ax + a^2x^2 \sin ax)$$

$$\int \sin ax \sin bx dx = \frac{\sin(a-b)x}{2(a-b)} - \frac{\sin(a+b)x}{2(a+b)} \qquad a^2 \neq b^2$$

$$\int \sin ax \cos bx dx = -\left[\frac{\cos(a-b)x}{2(a-b)} + \frac{\cos(a+b)x}{2(a+b)}\right] \qquad a^2 \neq b^2$$

$$\int \cos ax \cos bx dx = \frac{\sin(a-b)x}{2(a-b)} + \frac{\sin(a+b)x}{2(a+b)} \qquad a^2 \neq b^2$$

$$\int e^{ax} dx = \frac{a^{ax}}{a^2} (ax - 1)$$

$$\int x^2 e^{ax} dx = \frac{e^{ax}}{a^2} (a^2x^2 - 2ax + 2)$$

$$\int e^{ax} \sin bx dx = \frac{e^{ax}}{a^2 + b^2} (a \sin bx - b \cos bx)$$

$$\int \frac{1}{x^2 + a^2} dx = \frac{1}{a} \tan^{-1} \frac{x}{a}$$

$$\int \frac{x}{x^2 + a^2} dx = \frac{1}{2} \ln(x^2 + a^2)$$

#### B.8-9 L'Hôpital's Rule

If  $\lim f(x)/g(x)$  results in the indeterministic form 0/0 or  $\infty/\infty$ , then

$$\lim \frac{f(x)}{g(x)} = \lim \frac{\dot{f}(x)}{\dot{g}(x)}$$

# **B.8-10** Solution of Quadratic and Cubic Equations

Any quadratic equation can be reduced to the form

$$ax^2 + bx + c = 0$$

The solution of this equation is provided by

$$x = \frac{-b \pm \sqrt{b^2 - 4ac}}{2a}$$

A general cubic equation

$$y^3 + py^2 + qy + r = 0$$

may be reduced to the *depressed cubic* form

$$x^3 + ax + b = 0$$

by substituting

$$y = x - \frac{p}{3}$$

This yields

$$a = \frac{1}{3}(3q - p^2)$$
  $b = \frac{1}{27}(2p^3 - 9pq + 27r)$ 

Now let

$$A = \sqrt[3]{-\frac{b}{2} + \sqrt{\frac{b^2}{4} + \frac{a^3}{27}}} \qquad B = \sqrt[3]{-\frac{b}{2} - \sqrt{\frac{b^2}{4} + \frac{a^3}{27}}}$$

The solution of the depressed cubic is

$$x = A + B$$
,  $x = -\frac{A+B}{2} + \frac{A-B}{2}\sqrt{-3}$ ,  $x = -\frac{A+B}{2} - \frac{A-B}{2}\sqrt{-3}$ 

and

$$y = x - \frac{p}{3}$$

#### REFERENCES

- 1. Asimov, Isaac. Asimov on Numbers. Bell Publishing, New York, 1982.
- 2. Calinger, R., ed. Classics of Mathematics. Moore Publishing, Oak Park, IL, 1982.
- 3. Hogben, Lancelot. Mathematics in the Making. Doubleday, New York, 1960.

- 4. Cajori, Florian. A History of Mathematics, 4th ed. Chelsea, New York, 1985.
- Encyclopaedia Britannica. Micropaedia IV, 15th ed., vol. 11, p. 1043. Chicago, 1982. 5.
- 6. Singh, Jagjit. Great Ideas of Modern Mathematics. Dover, New York, 1959.
- Dunham, William. Journey Through Genius. Wiley, New York, 1990. 7.

# PROBLEMS

- B.1-1 Given a complex number w = x + jy, the complex conjugate of w is defined in rectangular coordinates as  $w^* = x - jy$ . Use this fact to derive complex conjugation in polar form.
- B.1-2 Express the following numbers in polar form:
  - (a)  $w_a = 1 + j$
  - (b)  $w_b = 1 + e^j$
  - (c)  $w_c = -4 + i3$
  - (d)  $w_d = (1+j)(-4+j3)$
  - (e)  $w_e = e^{j\pi/4} + 2e^{-j\pi/4}$
  - (f)  $w_f = \frac{1+j}{2i}$

(g) 
$$w_g = (1 + j)/(-4 + j3)$$


- (h)  $w_h = \frac{1-j}{\sin(i)}$
- B.1-3 Express the following numbers in Cartesian (rectangular) form:
  - (a)  $w_a = i + e^{j}$
  - (b)  $w_{\rm b} = 3e^{j\pi/4}$
  - (c)  $w_c = 1/e^j$
  - (d)  $w_d = (1+j)(-4+j3)$
  - (e)  $w_e = e^{j\pi/4} + 2e^{-j\pi/4}$
  - (f)  $w_f = e^j + 1$
  - (g)  $w_g = 1/2^j$
  - (h)  $w_{\rm h} = j^{j'}$  (*j* raised to the *j* raised to the *j*)
- **B.1-4** Showing all work and simplifying your answer, determine the real part of the following numbers:
  - (a)  $w_a = \frac{1}{j}(j 5e^{2-3j})$ (b)  $w_b = (1+j)\ln(1+j)$
- **B.1-5** Showing all work and simplifying your answer, determine the imaginary part of the following numbers:
  - (a)  $w_a = -je^{j\pi/4}$
  - (b)  $w_b = 1 2je^{2-4j}$
  - (c)  $w_c = \tan(j)$
- **B.1-6** For complex constant *w*, prove:
  - (a)  $\operatorname{Re}(w) = (w + w^*)/2$
  - (b)  $\text{Im}(w) = (w w^*)/2j$

Given w = x - jy, determine: **B.1-7** 

(a) 
$$\operatorname{Re}(e^w)$$

(b)  $\operatorname{Im}(e^w)$ 

- **B.1-8** For arbitrary complex constants  $w_1$  and  $w_2$ , prove or disprove the following:
  - (a)  $\text{Re}(jw_1) = -\text{Im}(w_1)$
  - (b)  $Im(jw_1) = Re(w_1)$
  - (c)  $\operatorname{Re}(w_1) + \operatorname{Re}(w_2) = \operatorname{Re}(w_1 + w_2)$
  - (d)  $\operatorname{Im}(w_1) + \operatorname{Im}(w_2) = \operatorname{Im}(w_1 + w_2)$
  - (e)  $\operatorname{Re}(w_1)\operatorname{Re}(w_2) = \operatorname{Re}(w_1w_2)$
  - (f)  $\text{Im}(w_1)/\text{Im}(w_2) = \text{Im}(w_1/w_2)$
- Given  $w_1 = 3 + j4$  and  $w_2 = 2e^{j\pi/4}$ . B.1-9
  - (a) Express  $w_1$  in standard polar form.
  - (b) Express  $w_2$  in standard rectangular form.
  - (c) Determine  $|w_1|^2$  and  $|w_2|^2$ .
  - (d) Express  $w_1 + w_2$  in standard rectangular form.
  - (e) Express  $w_1 w_2$  in standard polar form.
  - (f) Express  $w_1w_2$  in standard rectangular form.
  - (g) Express  $w_1/w_2$  in standard polar form.
- Repeat Prob. B.1-9 using  $w_1 = (3 + j4)^2$  and **B.1-10**  $w_2 = 2.5 j e^{-j40\pi}$
- Repeat Prob. B.1-9 using  $w_1 = j + e^{\pi/4}$  and **B.1-11**  $w_2 = \cos(j).$
- **B.1-12** Using the complex plane:
  - (a) Evaluate and locate the distinct solutions to  $(w)^4 = -1.$
  - (b) Evaluate and locate the distinct solutions to  $(w - (1 + i2))^5 = (32/\sqrt{2})(1 + i).$
  - (c) Sketch the solution to |w 2j| = 3.
  - (d) Graph  $w(t) = (1+t)e^{jt}$  for  $(-10 \le t \le 10)$ .
- The distinct solutions to  $(w w_1)^n = w_2$  lie **B.1-13** on a circle in the complex plane, as shown in Fig. PB.1-13. One solution is located on the real axis at  $\sqrt{3} + 1 = 2.732$ , and one solution is located on the imaginary axis at  $\sqrt{3} - 1 = 0.732$ . Determine  $w_1$ ,  $w_2$ , and n.

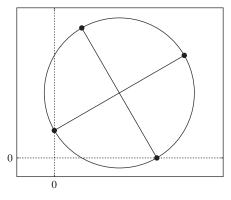



- **B.1-14** Find the distinct solutions to each of the following. Use MATLAB to graph each solution set in the complex plane.
  - (a)  $w^3 = -\frac{8}{27}$
  - (b)  $(w+1)^{s} = 1$
  - (c)  $w^2 + i = 0$
  - (d)  $16(w-1)^4 + 81 = 0$

  - (a)  $10(w + 2j)^3 = -8$ (b)  $(j w)^{1.5} = 2 + j2$ (c)  $(w 1)^{2.5} = j4\sqrt{2}$
- **B.1-15** If  $j = \sqrt{-1}$ , what is  $\sqrt{j}$ ?
- **B.1-16** Find all the values of  $\ln(-e)$ , expressing your answer in Cartesian form.
- **B.1-17** Determine all values of  $\log_{10}(-1)$ , expressing your answer in Cartesian form. Notice that the logarithm has base 10, not e.
- **B.1-18** Express the following in standard rectangular coordinates:
  - (a)  $w_a = \ln(1/(1+j))$
  - (b)  $w_b = \cos(1+j)$
  - (c)  $w_c = (1-j)^j$
- B.1-19 By constraining w to be purely imaginary, show that the equation  $\cos(w) = 2$  can be represented as a standard quadratic equation. Solve this equation for w.
- Certain integrals, although expressed in rela-B.1-20 tively simple form, are quite difficult to solve. For example,  $\int e^{-x^2} dx$  cannot be evaluated in terms of elementary functions; most calculators that perform integration cannot handle this indefinite integral. Fortunately, you are smarter than most calculators.

- (a) Express  $e^{-x^2}$  using a Taylor series expansion.
- (b) Using your series expansion for  $e^{-x^2}$ , determine  $\int e^{-x^2} dx$ .
- (c) Using a suitably truncated series, evaluate the definite integral  $\int_0^1 e^{-x^2} dx$ .
- Repeat Prob. B.1-20 for  $\int e^{-x^3} dx$ . **B.1-21**
- Repeat Prob. B.1-20 for  $\int \cos x^2 dx$ . **B.1-22**
- For each function, determine a suitable series **B.1-23** expansion. 2  $^{-1}$

(a) 
$$f_a(x) = (2 - x^2)^{-1}$$

- (b)  $f_{\rm b}(x) = (0.5)^x$
- Consider the function  $f(x) = 1 + x + x^2 + x^3$ . **B.1-24** 
  - (a) Express f(x) using a Taylor series with expansion point of a = 1. Explicitly write out every term. [Hint: See Sec. B.8-4.]
  - (b) Describe a good reason why you might want to express a function that is already a simple polynomial using such a series.
- **B.1-25** Determine the Maclaurin series expansion of each of the following. [Hint: See Sec. B.8-4.] (a)  $f_a(x) = 2^x$ 
  - (b)  $f_{\rm b}(x) = \left(\frac{1}{2}\right)^x$
- Determine the fundamental period  $T_0$ , fre-B.2-1 quency  $f_0$ , and radian frequency  $\omega_0$  for the following sinusoids:
  - (a)  $\cos(5\pi t + 3)$
  - (b)  $7\sin(\frac{2t-\pi}{3})$
- B.2-2 Determine an expression for a sinusoid that oscillates 15 times per second, that has a value of -1 at t = 0, and whose peak amplitude is 3. Use MATLAB to plot the signal over 0 < t < 1.
- Let  $x_1(t) = 2\cos(3t + 1)$  and  $x_2(t) = -3\cos(3t + 1)$ **B.2-3** (3t-2).
  - (a) Determine  $a_1$  and  $b_1$  so that  $x_1(t) =$  $a_1\cos(3t) + b_1\sin(3t).$
  - (b) Determine  $a_2$  and  $b_2$  so that  $x_2(t) =$  $a_2\cos(3t) + b_2\sin(3t).$
  - (c) Determine C and  $\theta$  so that  $x_1(t) + x_2(t) =$  $C\cos(3t+\theta)$ .
- **B.2-4** In addition to the traditional sine and cosine functions, there are the hyperbolic sine and cosine functions, which are defined by  $\sinh(w) = (e^{w} - e^{-w})/2$  and  $\cosh(w) =$  $(e^w + e^{-w})/2$ . In general, the argument is a complex constant w = x + iy.

- (a) Show that  $\cosh(w) = \cosh(x)\cos(y) + j\sinh(x)\sin(y)$ .
- (b) Determine a similar expression for sinh (w) in rectangular form that only uses functions of real arguments, such as sin (x), cosh (y), and so on.
- **B.2-5** Use Euler's identity to solve or prove the following:
  - (a) Find real, positive constants c and φ for all real t such that 2.5 cos (3t) 1.5 sin (3t + π/3) = c cos (3t + φ). Sketch the resulting sinusoid.
  - (b) Prove that  $\cos(\theta \pm \phi) = \cos(\theta)\cos(\phi) \mp \sin(\theta)\sin(\phi)$ .
  - (c) Given real constants *a*, *b*, and *α*, complex constant *w*, and the fact that

$$\int_{a}^{b} e^{wx} dx = \frac{1}{w} (e^{wb} - e^{wa})$$

evaluate the integral

$$\int_{a}^{b} e^{wx} \sin\left(\alpha x\right) dx$$

- **B.2-6** A particularly boring stretch of interstate highway has a posted speed limit of 70 mph. A highway engineer wants to install "rumble bars" (raised ridges on the side of the road) so that cars traveling the speed limit will produce quarter-second bursts of 1 kHz sound every second, a strategy that is particularly effective at startling sleepy drivers awake. Provide design specifications for the engineer.
- **B.3-1** By hand, accurately sketch the following signals over  $(0 \le t \le 1)$ :
  - (a)  $x_a(t) = e^{-t}$
  - (b)  $x_{b}(t) = \sin(2\pi 5t)$
  - (c)  $x_c(t) = e^{-t} \sin(2\pi 5t)$
- **B.3-2** In 1950, the human population was approximately 2.5 billion people. Assuming a doubling time of 40 years, formulate an exponential model for human population in the form  $p(t) = ae^{bt}$ , where *t* is measured in years. Sketch p(t) over the interval 1950  $\leq t \leq 2100$ . According to this model, in what year can we expect the population to reach the estimated 15 billion carrying capacity of the earth?
- **B.3-3** Determine an expression for an exponentially decaying sinusoid that oscillates three

times per second and whose amplitude envelope decreases by 50% every 2 seconds. Use MATLAB to plot the signal over  $-2 \le t \le 2$ .

**B.3-4** By hand, sketch the following against independent variable *t*: (a)  $\mathbf{x}(t) = \mathbf{P}_2(2e^{(-1+i2\pi)t})$ 

(a) 
$$x_a(t) = \text{Re}(2e^{(-1+j2\pi)t})$$
  
(b)  $x_b(t) = \text{Im}(3 - e^{(1-j2\pi)t})$ 

(c) 
$$x_{\rm b}(t) = \operatorname{Im}(5^{-}e^{-t})$$
  
(c)  $x_{\rm c}(t) = 3 - \operatorname{Im}(e^{(1-j2\pi)t})$ 

**B.4-1** Consider the following system of equations:

$$\begin{bmatrix} -1 & 2 \\ 3 & -4 \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \end{bmatrix} = \begin{bmatrix} 3 \\ -1 \end{bmatrix}$$

Expressing all answers in rational form (ratio of integers), use Cramer's rule to determine  $x_1$  and  $x_2$ . Perform all calculations by hand, including matrix determinants.

**B.4-2** Consider the following system of equations:

$$\begin{bmatrix} 1 & 2 & 0 \\ 0 & 3 & 4 \\ 5 & 0 & 6 \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \\ x_3 \end{bmatrix} = \begin{bmatrix} 7 \\ 8 \\ 9 \end{bmatrix}$$

Expressing all answers in rational form (ratio of integers), use Cramer's rule to determine  $x_1$ ,  $x_2$ , and  $x_3$ . Perform all calculations by hand, including matrix determinants.

**B.4-3** Consider the following system of equations.

$$x_1 + x_2 + x_3 = 1$$
  

$$x_1 + 2x_2 + 3x_3 = 3$$
  

$$x_1 - x_2 = -3$$

Use Cramer's rule to determine  $x_1$ ,  $x_2$ , and  $x_3$ . Matrix determinants can be computed by using MATLAB's det command.

**B.5-1** Determine the constants  $a_0$ ,  $a_1$ , and  $a_2$  of the partial fraction expansion

$$F(s) = \frac{s}{(s+1)^3} = \frac{a_0}{(s+1)^3} + \frac{a_1}{(s+1)^2} + \frac{a_2}{(s+1)}$$

- **B.5-2** Compute by hand the partial fraction expansions of the following rational functions:
  - (a)  $H_a(s) = \frac{s^2 + 5s + 6}{s^3 + s^2 + s + 1}$ , which has denominator poles at  $s = \pm j$  and s = -1

(b) 
$$H_{b}(s) = \frac{1}{H_{1}(s)} = \frac{s^{3}+s^{2}+s+1}{s^{2}+5s+6}$$

#### 62 CHAPTER B BACKGROUND

- (c)  $H_{c}(s) = \frac{1}{(s+1)^{2}(s^{2}+1)}$ (d)  $H_{d}(s) = \frac{s^{2}+5s+6}{3s^{2}+2s+1}$
- **B.5-3** Compute by hand the partial fraction expansions of the following rational functions: (a)  $F_a(x) = \frac{(x-1)(x-2)}{(x-3)^2}$ (b)  $F_b(x) = \frac{(x-1)^2}{(3x-1)(2x-1)}$ (c)  $F_c(x) = \frac{(x-1)^2}{(3x-1)^2(2x-1)}$ (d)  $F_d(x) = \frac{x^2 - 5x + 6}{2x^2 + 8x + 6}$ (e)  $F_e(x) = \frac{2x^2 - 3x - 11}{x^2 - x - 2}$ (f)  $F_f(x) = \frac{3 + 2x^2}{-3 + 2x + x^2}$ (c)  $F_b(x) = x^3 + 2x^2 + 3x + 4$ 
  - (g)  $F_g(x) = \frac{x^3 + 2x^2 + 3x + 4}{x^2 + 1}$ (h)  $F_h(x) = \frac{1 + 2x + 3x^2}{x^2 + 5x + 6}$ (i)  $F_i(x) = \frac{3x^3 - x^2 + 14x + 4}{x^2 + 4}$ (j)  $F_j(x) = \frac{2x^{-1} - 1 + 2x}{x - 5 + 6x^{-1}}$

(k) 
$$F_k(x) = 3 \frac{-5x^2 - 9x + 23}{x^2 + x - 2}$$

**B.6-1** A system of equations in terms of unknowns  $x_1$  and  $x_2$  and arbitrary constants *a*, *b*, *c*, *d*, *e*, and *f* is given by

$$ax_1 + bx_2 = c$$
$$dx_1 + ex_2 = f$$

- (a) Represent this system of equations in matrix form.
- (b) Identify specific constants *a*, *b*, *c*, *d*, *e*, and *f* such that *x*<sub>1</sub> = 3 and *x*<sub>2</sub> = −2. Are the constants you selected unique?
- (c) Identify nonzero constants a, b, c, d, e, and f such that no solutions x<sub>1</sub> and x<sub>2</sub> exist.
- (d) Identify nonzero constants a, b, c, d, e, and f such that an infinite number of solutions x1 and x2 exist.
- **B.6-2** Using a matrix approach, solve the following system of equations:

$$x_1 + x_2 + x_3 + x_4 = 4$$
  

$$x_1 + x_2 + x_3 - x_4 = 2$$
  

$$x_1 + x_2 - x_3 - x_4 = 0$$
  

$$x_1 - x_2 - x_3 - x_4 = -2$$

**B.6-3** Using a matrix approach, solve the following system of equations:

$$x_1 + x_2 + x_3 + x_4 = 1$$
  

$$x_1 - 2x_2 + 3x_3 = 2$$
  

$$x_1 - x_3 + 7x_4 = 3$$
  

$$-2x_2 + 3x_3 - 4x_4 = 4$$

**B.6-4** A signal  $f(t) = a\cos(3t) + b\sin(3t)$  reaches a peak amplitude of 5 at t = 1.8799 and has a zero crossing at t = 0.3091. Use a matrix-based approach to determine the constants *a* and *b*.

#### B.6-5 Define

$$\mathbf{x} = \begin{bmatrix} 1 & 3 \\ -2 & 4 \end{bmatrix}, \quad \mathbf{y} = \begin{bmatrix} -5 \\ 2 \end{bmatrix},$$
  
and 
$$\mathbf{z} = \begin{bmatrix} 0 & 1 \\ -1 & 0 \end{bmatrix}$$

By hand, calculate the following:

- (a)  $\mathbf{f}_{a} = \mathbf{y}^{T} \mathbf{y}$ (b)  $\mathbf{f}_{b} = \mathbf{y} \mathbf{y}^{T}$ (c)  $\mathbf{f}_{c} = \mathbf{x} \mathbf{y}$ (d)  $\mathbf{f}_{d} = \mathbf{x}^{T} \mathbf{y}$ (e)  $\mathbf{f}_{e} = \mathbf{y}^{T} \mathbf{x}$ (f)  $\mathbf{f}_{f} = \mathbf{x} \mathbf{z}$ (g)  $\mathbf{f}_{g} = \mathbf{z} \mathbf{x} \mathbf{z}$ (h)  $\mathbf{f}_{h} = \mathbf{x}^{T} - \mathbf{z}$
- **B.7-1** Use MATLAB to produce the plots requested in Prob. B.3-4.
- **B.7-2** Use MATLAB to plot the function  $x(t) = t \sin(2\pi t)$  over  $0 \le t \le 10$  using 501 equally spaced points. What is the maximum value of x(t) over this range of t?
- **B.7-3** Use MATLAB to plot  $x(t) = \cos(t)\sin(20t)$  over a suitable range of t.
- **B.7-4** Use MATLAB to plot  $x(t) = \sum_{k=1}^{10} \cos(2\pi kt)$  over a suitable range of t. The MATLAB command sum may prove useful.
- **B.7-5** When a bell is struck with a mallet, it produces a ringing sound. Write an equation that approximates the sound produced by a small, light bell. Carefully identify your assumptions. How does your equation change if the bell is large and heavy? You can assess the quality of your models by using the MATLAB sound command to listen to your "bell."

- **B.7-6** You are working on a digital quadrature amplitude modulation (QAM) communication receiver. The QAM receiver requires a pair of quadrature signals:  $\cos \Omega n$  and  $\sin \Omega n$ . These can be simultaneously generated by following a simple procedure: (1) choose a point *w* on the unit circle, (2) multiply *w* by itself and store the result, (3) multiply *w* by the last result and store, and (4) repeat step 3.
  - (a) Show that this method can generate the desired pair of quadrature sinusoids.
  - (b) Determine a suitable value of w so that good-quality, periodic,  $2\pi \times 100,000$  rad/s signals can be generated. How much time is available for the processing unit to compute each sample?
  - (c) Simulate this procedure by using MATLAB and report your results.
  - (d) Identify as many assumptions and limitations to this technique as possible. For example, can your system operate correctly for an indefinite period of time?
- **B.7-7** Using MATLAB's residue command,
  - (a) Verify the results of Prob. B.5-2a.
  - (b) Verify the results of Prob. B.5-2b.
  - (c) Verify the results of Prob. B.5-2c.
  - (d) Verify the results of Prob. B.5-2d.
- B.7-8 Using MATLAB's residue command,
  - (a) Verify the results of Prob. B.5-3a.
  - (b) Verify the results of Prob. B.5-3b.
  - (c) Verify the results of Prob. B.5-3c.
  - (d) Verify the results of Prob. B.5-3d.
  - (e) Verify the results of Prob. B.5-3e.
  - (f) Verify the results of Prob. B.5-3f.
  - (g) Verify the results of Prob. B.5-3g.
  - (h) Verify the results of Prob. B.5-3h.
  - (i) Verify the results of Prob. B.5-3i.
  - (j) Verify the results of Prob. B.5-3j.
  - (k) Verify the results of Prob. B.5-3k.
- **B.7-9** Determine the original length-3 vectors a and b need to produce the MATLAB output:
  - >> [r,p,k] = residue(b,a)
    r = 0 + 2.0000i
    0 2.0000i

**B.7-10** Let  $N = [n_7, n_6, n_5, ..., n_2, n_1]$  represent the seven digits of your phone number. Construct a rational function according to

$$H_N(s) = \frac{n_7 s^2 + n_6 s + n_5 + n_4 s^{-1}}{n_3 s^2 + n_2 s + n_1}$$

Use MATLAB's residue command to compute the partial fraction expansion of  $H_N(s)$ .

- **B.7-11** When plotted in the complex plane for  $-\pi \le \omega \le \pi$ , the function  $f(\omega) = \cos(\omega) + j0.1\sin(2\omega)$  results in a so-called Lissajous figure that resembles a two-bladed propeller.
  - (a) In MATLAB, create two row vectors fr and fi corresponding to the real and imaginary portions of f(ω), respectively, over a suitable number N samples of ω. Plot the real portion against the imaginary portion and verify the figure resembles a propeller.
  - (b) Let complex constant w = x + jy be represented in vector form

$$\mathbf{w} = \left[ \begin{array}{c} x \\ y \end{array} \right]$$

Consider the  $2 \times 2$  rotational matrix **R**:

$$\mathbf{R} = \begin{bmatrix} \cos\theta & -\sin\theta \\ \sin\theta & \cos\theta \end{bmatrix}$$

Show that **Rw** rotates vector **w** by  $\theta$  radians.

- (c) Create a rotational matrix R corresponding to 10° and multiply it by the 2 × N matrix f = [fr;fi];. Plot the result to verify that the "propeller" has indeed rotated counter-clockwise.
- (d) Given the matrix R determined in part (c), what is the effect of performing RRf? How about RRRf? Generalize the result.
- (e) Investigate the behavior of multiplying  $f(\omega)$  by the function  $e^{j\theta}$ .



# SIGNALS AND SYSTEMS

In this chapter we shall discuss basic aspects of signals and systems. We shall also introduce fundamental concepts and qualitative explanations of the hows and whys of systems theory, thus building a solid foundation for understanding the quantitative analysis in the remainder of the book. For simplicity, the focus of this chapter is on continuous-time signals and systems. Chapter 3 presents the same ideas for discrete-time signals and systems.

#### SIGNALS

A *signal* is a set of data or information. Examples include a telephone or a television signal, monthly sales of a corporation, or daily closing prices of a stock market (e.g., the Dow Jones averages). In all these examples, the signals are functions of the independent variable *time*. This is not always the case, however. When an electrical charge is distributed over a body, for instance, the signal is the charge density, a function of *space* rather than time. In this book we deal almost exclusively with signals that are functions of time. The discussion, however, applies equally well to other independent variables.

#### Systems

Signals may be processed further by *systems*, which may modify them or extract additional information from them. For example, an anti-aircraft gun operator may want to know the future location of a hostile moving target that is being tracked by his radar. Knowing the radar signal, he knows the past location and velocity of the target. By properly processing the radar signal (the input), he can approximately estimate the future location of the target. Thus, a system is an entity that *processes* a set of signals (*inputs*) to yield another set of signals (*outputs*). A system may be made up of physical components, as in electrical, mechanical, or hydraulic systems (hardware realization), or it may be an algorithm that computes an output from an input signal (software realization).

#### **1.1 SIZE OF A SIGNAL**

The size of any entity is a number that indicates the largeness or strength of that entity. Generally speaking, the signal amplitude varies with time. How can a signal that exists over a certain time

interval with varying amplitude be measured by one number that will indicate the signal size or signal strength? Such a measure must consider not only the signal amplitude, but also its duration. For instance, if we are to devise a single number V as a measure of the size of a human being, we must consider not only his or her width (girth), but also the height. If we make a simplifying assumption that the shape of a person is a cylinder of variable radius r (which varies with the height h), then one possible measure of the size of a person of height H is the person's volume V, given by

$$V = \pi \int_0^H r^2(h) \, dh$$

#### 1.1-1 Signal Energy

Arguing in this manner, we may consider the area under a signal x(t) as a possible measure of its size, because it takes account not only of the amplitude but also of the duration. However, this will be a defective measure because even for a large signal x(t), its positive and negative areas could cancel each other, indicating a signal of small size. This difficulty can be corrected by defining the signal size as the area under  $|x(t)|^2$ , which is always positive. We call this measure the *signal energy*  $E_x$ , defined as

$$E_x = \int_{-\infty}^{\infty} |x(t)|^2 dt \tag{1.1}$$

This definition simplifies for a real-valued signal x(t) to  $E_x = \int_{-\infty}^{\infty} x^2(t) dt$ . There are also other possible measures of signal size, such as the area under |x(t)|. The energy measure, however, is not only more tractable mathematically but is also more meaningful (as shown later) in the sense that it is indicative of the energy that can be extracted from the signal.

#### 1.1-2 Signal Power

Signal energy must be finite for it to be a meaningful measure of signal size. A necessary condition for the energy to be finite is that the signal amplitude  $\rightarrow 0$  as  $|t| \rightarrow \infty$  (Fig. 1.1a). Otherwise the integral in Eq. (1.1) will not converge.

When the amplitude of x(t) does not  $\rightarrow 0$  as  $|t| \rightarrow \infty$  (Fig. 1.1b), the signal energy is infinite. A more meaningful measure of the signal size in such a case would be the time average of the energy, if it exists. This measure is called the *power* of the signal. For a signal x(t), we define its power  $P_x$  as

$$P_x = \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} |x(t)|^2 dt$$
(1.2)

This definition simplifies for a real-valued signal x(t) to  $P_x = \lim_{T\to\infty} \frac{1}{T} \int_{-T/2}^{T/2} x^2(t) dt$ . Observe that the signal power  $P_x$  is the time average (mean) of the signal magnitude squared, that is, the *mean-square* value of |x(t)|. Indeed, the square root of  $P_x$  is the familiar *rms* (root-mean-square) value of x(t).

Generally, the mean of an entity averaged over a large time interval approaching infinity exists if the entity either is periodic or has a statistical regularity. If such a condition is not satisfied, the average may not exist. For instance, a ramp signal x(t) = t increases indefinitely as  $|t| \rightarrow \infty$ , and neither the energy nor the power exists for this signal. However, the unit step function, which is not periodic nor has statistical regularity, does have a finite power.

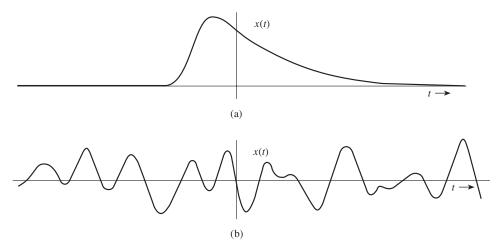


Figure 1.1 Examples of signals: (a) a signal with finite energy and (b) a signal with finite power.

When x(t) is periodic,  $|x(t)|^2$  is also periodic. Hence, the power of x(t) can be computed from Eq. (1.2) by averaging  $|x(t)|^2$  over one period.

**Comments.** The signal energy as defined in Eq. (1.1) does not indicate the actual energy (in the conventional sense) of the signal because the signal energy depends not only on the signal, but also on the load. It can, however, be interpreted as the energy dissipated in a normalized load of a 1 ohm resistor if a voltage x(t) were to be applied across the 1 ohm resistor [or if a current x(t) were to be passed through the 1 ohm resistor]. The measure of "energy" is therefore indicative of the energy capability of the signal, not the actual energy. For this reason the concepts of conservation of energy should not be applied to this "signal energy." Parallel observation applies to "signal power" defined in Eq. (1.2). These measures are but convenient indicators of the signal size, which prove useful in many applications. For instance, if we approximate a signal x(t) by another signal g(t), the error in the approximation is e(t) = x(t) - g(t). The energy (or power) of e(t) is a convenient indicator of the goodness of the approximation. It provides us with a quantitative measure of determining the closeness of the approximation. In communication systems, during transmission over a channel, message signals are corrupted by unwanted signals (noise). The quality of the received signal is judged by the relative sizes of the desired signal and the unwanted signal (noise). In this case the ratio of the message signal and noise signal powers (signal-to-noise power ratio) is a good indication of the received signal quality.

**Units of Energy and Power.** Equation (1.1) is not correct dimensionally. This is because here we are using the term *energy* not in its conventional sense, but to indicate the signal size. The same observation applies to Eq. (1.2) for power. The units of energy and power, as defined here, depend on the nature of the signal x(t). If x(t) is a voltage signal, its energy  $E_x$  has units of volts squared-seconds (V<sup>2</sup> s), and its power  $P_x$  has units of volts squared. If x(t) is a current signal, these units will be amperes squared-seconds (A<sup>2</sup> s) and amperes squared, respectively.

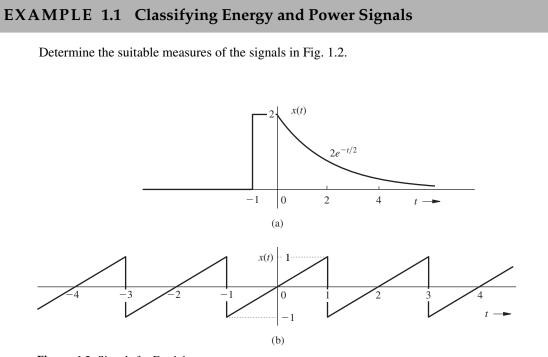


Figure 1.2 Signals for Ex. 1.1

In Fig. 1.2a, the signal amplitude  $\rightarrow 0$  as  $|t| \rightarrow \infty$ . Therefore the suitable measure for this signal is its energy  $E_x$  given by

$$E_x = \int_{-\infty}^{\infty} |x(t)|^2 dt = \int_{-1}^{0} (2)^2 dt + \int_{0}^{\infty} 4e^{-t} dt = 4 + 4 = 8$$

In Fig. 1.2b, the signal magnitude does not  $\rightarrow 0$  as  $|t| \rightarrow \infty$ . However, it is periodic, and therefore its power exists. We can use Eq. (1.2) to determine its power. We can simplify the procedure for periodic signals by observing that a periodic signal repeats regularly each period (2 seconds in this case). Therefore, averaging  $|x(t)|^2$  over an infinitely large interval is identical to averaging this quantity over one period (2 seconds in this case). Thus

$$P_x = \frac{1}{2} \int_{-1}^{1} |x(t)|^2 dt = \frac{1}{2} \int_{-1}^{1} t^2 dt = \frac{1}{3}$$

Recall that the signal power is the square of its rms value. Therefore, the rms value of this signal is  $1/\sqrt{3}$ .

#### **EXAMPLE 1.2 Determining Power and RMS Value**

Determine the power and the rms value of

- (a)  $x(t) = C \cos(\omega_0 t + \theta)$
- **(b)**  $x(t) = C_1 \cos(\omega_1 t + \theta_1) + C_2 \cos(\omega_2 t + \theta_2)$   $\omega_1 \neq \omega_2$
- (c)  $x(t) = De^{j\omega_0 t}$

(a) This is a periodic signal with period  $T_0 = 2\pi/\omega_0$ . The suitable measure of this signal is its power. Because it is a periodic signal, we may compute its power by averaging its energy over one period  $T_0 = 2\pi/\omega_0$ . However, for the sake of demonstration, we shall use Eq. (1.2) to solve this problem by averaging over an infinitely large time interval.

$$P_x = \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} C^2 \cos^2(\omega_0 t + \theta) dt = \lim_{T \to \infty} \frac{C^2}{2T} \int_{-T/2}^{T/2} [1 + \cos(2\omega_0 t + 2\theta)] dt$$
$$= \lim_{T \to \infty} \frac{C^2}{2T} \int_{-T/2}^{T/2} dt + \lim_{T \to \infty} \frac{C^2}{2T} \int_{-T/2}^{T/2} \cos(2\omega_0 t + 2\theta) dt$$

The first term on the right-hand side is equal to  $C^2/2$ . The second term, however, is zero because the integral appearing in this term represents the area under a sinusoid over a very large time interval T with  $T \to \infty$ . This area is at most equal to the area of half the cycle because of cancellations of the positive and negative areas of a sinusoid. The second term is this area multiplied by  $C^2/2T$  with  $T \to \infty$ . Clearly this term is zero, and

$$P_x = \frac{C^2}{2}$$

This shows that a sinusoid of amplitude C has a power  $C^2/2$  regardless of the value of its frequency  $\omega_0$  ( $\omega_0 \neq 0$ ) and phase  $\theta$ . The rms value is  $C/\sqrt{2}$ . If the signal frequency is zero (dc or a constant signal of amplitude C), the reader can show that the power is  $C^2$ .

(b) In Ch. 6, we shall show that a sum of two sinusoids may or may not be periodic, depending on whether the ratio  $\omega_1/\omega_2$  is a rational number. Therefore, the period of this signal is not known. Hence, its power will be determined by averaging its energy over *T* seconds with  $T \rightarrow \infty$ . Thus,

$$P_{x} = \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} [C_{1} \cos(\omega_{1}t + \theta_{1}) + C_{2} \cos(\omega_{2}t + \theta_{2})]^{2} dt$$
  
$$= \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} C_{1}^{2} \cos^{2}(\omega_{1}t + \theta_{1}) dt + \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} C_{2}^{2} \cos^{2}(\omega_{2}t + \theta_{2}) dt$$
  
$$+ \lim_{T \to \infty} \frac{2C_{1}C_{2}}{T} \int_{-T/2}^{T/2} \cos(\omega_{1}t + \theta_{1}) \cos(\omega_{2}t + \theta_{2}) dt$$

The first and second integrals on the right-hand side are the powers of the two sinusoids, which are  $C_1^2/2$  and  $C_2^2/2$ , as found in part (a). The third term, the product of two sinusoids, can be expressed as a sum of two sinusoids  $\cos[(\omega_1 + \omega_2)t + (\theta_1 + \theta_2)]$  and  $\cos[(\omega_1 - \omega_2)t + (\theta_1 - \theta_2)]$ , respectively. Now, arguing as in part (a), we see that the third term is zero. Hence, we have<sup>†</sup>

$$P_x = \frac{C_1^2}{2} + \frac{C_2^2}{2}$$

and the rms value is  $\sqrt{(C_1^2 + C_2^2)/2}$ .

We can readily extend this result to a sum of any number of sinusoids with distinct frequencies. Thus, if

$$x(t) = \sum_{n=1}^{\infty} C_n \cos(\omega_n t + \theta_n)$$

assuming that none of the two sinusoids have identical frequencies and  $\omega_n \neq 0$ , then

$$P_x = \frac{1}{2} \sum_{n=1}^{\infty} C_n^2$$

If x(t) also has a dc term, as

$$x(t) = C_0 + \sum_{n=1}^{\infty} C_n \cos(\omega_n t + \theta_n)$$

then

$$P_x = C_0^2 + \frac{1}{2} \sum_{n=1}^{\infty} C_n^2$$
(1.3)

(c) In this case the signal is complex, and we use Eq. (1.2) to compute the power.

$$P_x = \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} |De^{j\omega_0 t}|^2 dt$$

Recall that  $|e^{j\omega_0 t}| = 1$  so that  $|De^{j\omega_0 t}|^2 = |D|^2$ , and

$$P_x = |D|^2 \tag{1.4}$$

The rms value is |D|.


**Comment.** In part (b) of Ex. 1.2, we have shown that the power of the sum of two sinusoids is equal to the sum of the powers of the sinusoids. It may appear that the power of  $x_1(t) + x_2(t)$ 

<sup>&</sup>lt;sup>†</sup> This is true only if  $\omega_1 \neq \omega_2$ . If  $\omega_1 = \omega_2$ , the integrand of the third term contains a constant  $\cos(\theta_1 - \theta_2)$ , and the third term  $\rightarrow 2C_1C_2\cos(\theta_1 - \theta_2)$  as  $T \rightarrow \infty$ .

is  $P_{x_1} + P_{x_2}$ . Unfortunately, this conclusion is not true in general. It is true only under a certain condition (orthogonality), discussed later (Sec. 6.5-3).

#### DRILL 1.1 Computing Energy, Power, and RMS Value

Show that the energies of the signals in Figs. 1.3a, 1.3b, 1.3c, and 1.3d are 4, 1, 4/3, and 4/3, respectively. Observe that doubling a signal quadruples the energy, and time-shifting a signal has no effect on the energy. Show also that the power of the signal in Fig. 1.3e is 0.4323. What is the rms value of signal in Fig. 1.3e?

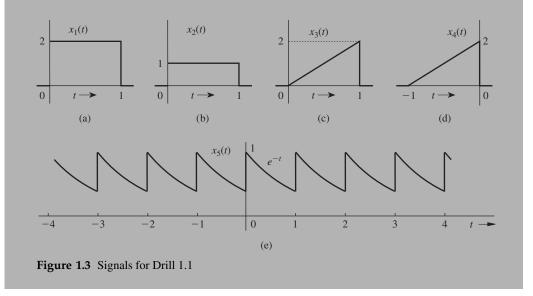

#### DRILL 1.2 Computing Power over a Period

Redo Ex. 1.1a to find the power of a sinusoid  $C \cos(\omega_0 t + \theta)$  by averaging the signal energy over one period  $T_0 = 2\pi/\omega_0$  (rather than averaging over the infinitely large interval). Show also that the power of a dc signal  $x(t) = C_0$  is  $C_0^2$ , and its rms value is  $C_0$ .

#### **DRILL 1.3** Power of a Sum of Two Equal-Frequency Sinusoids

Show that if  $\omega_1 = \omega_2$ , the power of  $x(t) = C_1 \cos(\omega_1 t + \theta_1) + C_2 \cos(\omega_2 t + \theta_2)$  is  $[C_1^2 + C_2^2 + 2C_1C_2 \cos(\theta_1 - \theta_2)]/2$ , which is not equal to the Ex. 1.2b result of  $(C_1^2 + C_2^2)/2$ .

# **1.2 SOME USEFUL SIGNAL OPERATIONS**

We discuss here three useful signal operations: shifting, scaling, and inversion. Since the independent variable in our signal description is time, these operations are discussed as *time shifting, time scaling,* and *time reversal* (inversion). However, this discussion is valid for functions having independent variables other than time (e.g., frequency or distance).

#### 1.2-1 Time Shifting

Consider a signal x(t) (Fig. 1.4a) and the same signal delayed by T seconds (Fig. 1.4b), which we shall denote by  $\phi(t)$ . Whatever happens in x(t) (Fig. 1.4a) at some instant t also happens in  $\phi(t)$  (Fig. 1.4b) T seconds later at the instant t + T. Therefore

$$\phi(t+T) = x(t)$$
 and  $\phi(t) = x(t-T)$ 

Therefore, to time-shift a signal by T, we replace t with t - T. Thus x(t - T) represents x(t) time-shifted by T seconds. If T is positive, the shift is to the right (delay), as in Fig. 1.4b. If T is negative, the shift is to the left (advance), as in Fig. 1.4c. Clearly, x(t - 2) is x(t) delayed (right-shifted) by 2 seconds, and x(t + 2) is x(t) advanced (left-shifted) by 2 seconds.

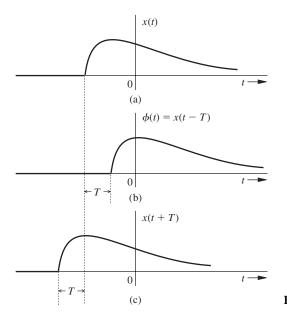


Figure 1.4 Time-shifting a signal.

# **EXAMPLE 1.3** Time Shifting

An exponential function  $x(t) = e^{-2t}$  shown in Fig. 1.5a is delayed by 1 second. Sketch and mathematically describe the delayed function. Repeat the problem with x(t) advanced by 1 second.

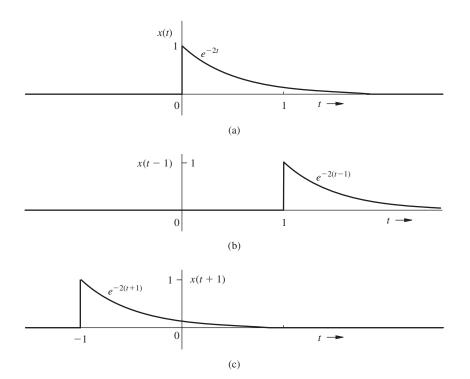


Figure 1.5 (a) Signal x(t). (b) Signal x(t) delayed by 1 second. (c) Signal x(t) advanced by 1 second.

The function x(t) can be described mathematically as

$$x(t) = \begin{cases} e^{-2t} & t \ge 0\\ 0 & t < 0 \end{cases}$$
(1.5)

Let  $x_d(t)$  represent the function x(t) delayed (right-shifted) by 1 second, as illustrated in Fig. 1.5b. This function is x(t-1); its mathematical description can be obtained from x(t)

by replacing t with t - 1 in Eq. (1.5). Thus,

$$x_d(t) = x(t-1) = \begin{cases} e^{-2(t-1)} & t-1 \ge 0 & \text{or} \quad t \ge 1\\ 0 & t-1 < 0 & \text{or} \quad t < 1 \end{cases}$$

Let  $x_a(t)$  represent the function x(t) advanced (left-shifted) by 1 second, as depicted in Fig. 1.5c. This function is x(t + 1); its mathematical description can be obtained from x(t) by replacing t with t + 1 in Eq. (1.5). Thus,

$$x_a(t) = x(t+1) = \begin{cases} e^{-2(t+1)} & t+1 \ge 0 & \text{or} \quad t \ge -1 \\ 0 & t+1 < 0 & \text{or} \quad t < -1 \end{cases}$$

#### DRILL 1.4 Working with Time Delay and Time Advance

Write a mathematical description of the signal  $x_3(t)$  in Fig. 1.3c. Next, delay this signal by 2 seconds. Sketch the delayed signal. Show that this delayed signal  $x_d(t)$  can be described mathematically as  $x_d(t) = 2(t-2)$  for  $2 \le t \le 3$ , and equal to 0 otherwise. Now repeat the procedure with the signal advanced (left-shifted) by 1 second. Show that this advanced signal  $x_a(t)$  can be described as  $x_a(t) = 2(t+1)$  for  $-1 \le t \le 0$ , and 0 otherwise.

#### 1.2-2 Time Scaling

The compression or expansion of a signal in time is known as *time scaling*. Consider the signal x(t) of Fig. 1.6a. The signal  $\phi(t)$  in Fig. 1.6b is x(t) compressed in time by a factor of 2. Therefore, whatever happens in x(t) at some instant t also happens to  $\phi(t)$  at the instant t/2 so that

$$\phi\left(\frac{t}{2}\right) = x(t)$$
 and  $\phi(t) = x(2t)$ 


Observe that because x(t) = 0 at  $t = T_1$  and  $T_2$ , we must have  $\phi(t) = 0$  at  $t = T_1/2$  and  $T_2/2$ , as shown in Fig. 1.6b. If x(t) were recorded on a tape and played back at twice the normal recording speed, we would obtain x(2t). In general, if x(t) is compressed in time by a factor a (a > 1), the resulting signal  $\phi(t)$  is given by

$$\phi(t) = x(at)$$

Using a similar argument, we can show that x(t) expanded (slowed down) in time by a factor a (a > 1) is given by

$$\phi(t) = x\left(\frac{t}{a}\right)$$

Figure 1.6c shows x(t/2), which is x(t) expanded in time by a factor of 2. Observe that in a time-scaling operation, the origin t = 0 is the anchor point, which remains unchanged under the scaling operation because at t = 0, x(t) = x(at) = x(0).

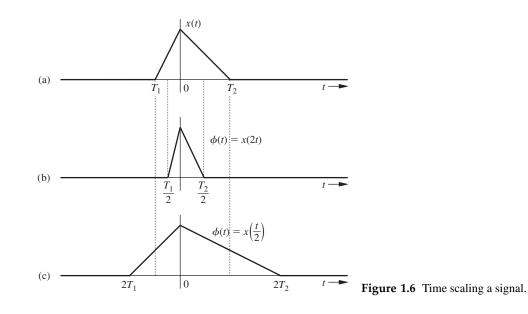

In summary, to time-scale a signal by a factor *a*, we replace *t* with *at*. If a > 1, the scaling results in compression, and if a < 1, the scaling results in expansion.

# **EXAMPLE 1.4 Continuous Time-Scaling Operation**


Figure 1.7a shows a signal x(t). Sketch and describe mathematically this signal time-compressed by factor 3. Repeat the problem for the same signal time-expanded by factor 2.

The signal x(t) can be described as

$$x(t) = \begin{cases} 2 & -1.5 \le t < 0\\ 2e^{-t/2} & 0 \le t < 3\\ 0 & \text{otherwise} \end{cases}$$
(1.6)

Figure 1.7b shows  $x_c(t)$ , which is x(t) time-compressed by factor 3; consequently, it can be described mathematically as x(3t), which is obtained by replacing t with 3t in the right-hand side of Eq. (1.6). Thus,

$$x_c(t) = x(3t) = \begin{cases} 2 & -1.5 \le 3t < 0 \text{ or } -0.5 \le t < 0\\ 2e^{-3t/2} & 0 \le 3t < 3 \text{ or } 0 \le t < 1\\ 0 & \text{otherwise} \end{cases}$$

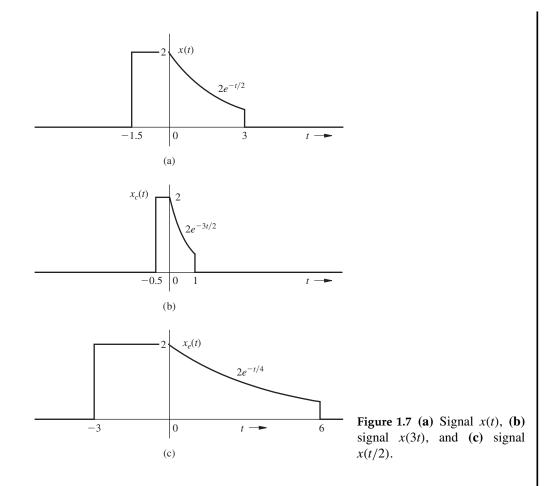

Observe that the instants t = -1.5 and 3 in x(t) correspond to the instants t = -0.5, and 1 in the compressed signal x(3t).

Figure 1.7c shows  $x_e(t)$ , which is x(t) time-expanded by factor 2; consequently, it can be described mathematically as x(t/2), which is obtained by replacing t with t/2 in x(t). Thus,

$$x_e(t) = x\left(\frac{t}{2}\right) = \begin{cases} 2 & -1.5 \le \frac{t}{2} < 0 \quad \text{or} \quad -3 \le t < 0\\ 2e^{-t/4} & 0 \le \frac{t}{2} < 3 \quad \text{or} \quad 0 \le t < 6\\ 0 & \text{otherwise} \end{cases}$$

Observe that the instants t = -1.5 and 3 in x(t) correspond to the instants t = -3 and 6 in the expanded signal x(t/2).

#### DRILL 1.5 Compression and Expansion of Sinusoids

Show that the time compression by an integer factor n (n > 1) of a sinusoid results in a sinusoid of the same amplitude and phase, but with the frequency increased n-fold. Similarly, the time expansion by an integer factor n (n > 1) of a sinusoid results in a sinusoid of the same amplitude and phase, but with the frequency reduced by a factor n. Verify your conclusion by sketching a sinusoid sin 2t and the same sinusoid compressed by a factor 3 and expanded by a factor 2.

#### 1.2-3 Time Reversal

Consider the signal x(t) in Fig. 1.8a. We can view x(t) as a rigid wire frame hinged at the vertical axis. To time-reverse x(t), we rotate this frame 180° about the vertical axis. This time reversal [the reflection of x(t) about the vertical axis] gives us the signal  $\phi(t)$  (Fig. 1.8b). Observe that whatever happens in Fig. 1.8a at some instant t also happens in Fig. 1.8b at the instant -t, and vice versa. Therefore,

 $\phi(t) = x(-t)$ 

Thus, to time-reverse a signal we replace t with -t, and the time reversal of signal x(t) results in a signal x(-t). We must remember that the reversal is performed about the vertical axis, which acts as an anchor or a hinge. Recall also that the reversal of x(t) about the horizontal axis results in -x(t).


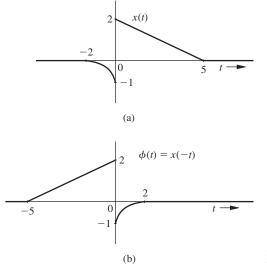


Figure 1.8 Time reversal of a signal.

# **EXAMPLE 1.5** Time Reversal of a Signal

For the signal x(t) illustrated in Fig. 1.9a, sketch x(-t), which is time-reversed x(t).



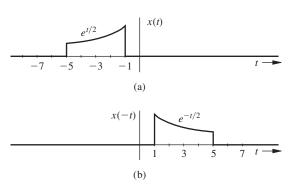

The instants -1 and -5 in x(t) are mapped into instants 1 and 5 in x(-t). Because  $x(t) = e^{t/2}$ , we have  $x(-t) = e^{-t/2}$ . The signal x(-t) is depicted in Fig. 1.9b. We can describe x(t) and x(-t) as

$$x(t) = \begin{cases} e^{t/2} & -1 \ge t > -5\\ 0 & \text{otherwise} \end{cases}$$

and its time-reversed version x(-t) is obtained by replacing t with -t in x(t) as

 $x(-t) = \begin{cases} e^{-t/2} & -1 \ge -t > -5 & \text{or} \quad 1 \le t < 5\\ 0 & \text{otherwise} \end{cases}$ 

#### 1.2-4 Combined Operations

Certain complex operations require simultaneous use of more than one of the operations just described. The most general operation involving all the three operations is x(at - b), which is realized in two possible sequences of operation:

- 1. Time-shift x(t) by b to obtain x(t-b). Now time-scale the shifted signal x(t-b) by a [i.e., replace t with at] to obtain x(at-b).
- 2. Time-scale x(t) by *a* to obtain x(at). Now time-shift x(at) by b/a [i.e., replace *t* with t (b/a)] to obtain x[a(t b/a)] = x(at b). In either case, if *a* is negative, time scaling involves time reversal.

For example, the signal x(2t-6) can be obtained in two ways. We can delay x(t) by 6 to obtain x(t-6), and then time-compress this signal by factor 2 (replace t with 2t) to obtain x(2t-6).

#### 78 CHAPTER 1 SIGNALS AND SYSTEMS

Alternately, we can first time-compress x(t) by factor 2 to obtain x(2t), then delay this signal by 3 (replace t with t - 3) to obtain x(2t - 6).

# **1.3 CLASSIFICATION OF SIGNALS**

Classification helps us better understand and utilize the items around us. Cars, for example, are classified as sports, offroad, family, and so forth. Knowing you have a sports car is useful in deciding whether to drive on a highway or on a dirt road. Knowing you want to drive up a mountain, you would probably choose an offroad vehicle over a family sedan. Similarly, there are several classes of signals. Some signal classes are more suitable for certain applications than others. Further, different signal classes of ten require different mathematical tools. Here we shall consider only the following classes of signals, which are suitable for the scope of this book:

- 1. Continuous-time and discrete-time signals
- 2. Analog and digital signals
- 3. Periodic and aperiodic signals
- 4. Energy and power signals
- 5. Deterministic and probabilistic signals

#### 1.3-1 Continuous-Time and Discrete-Time Signals

A signal that is specified for a continuum of values of time t (Fig. 1.10a) is a *continuous-time signal*, and a signal that is specified only at discrete values of t (Fig. 1.10b) is a *discrete-time signal*. Telephone and video camera outputs are continuous-time signals, whereas the quarterly gross national product (GNP), monthly sales of a corporation, and stock market daily averages are discrete-time signals.

#### 1.3-2 Analog and Digital Signals

The concept of continuous time is often confused with that of analog. The two are not the same. The same is true of the concepts of discrete time and digital. A signal whose amplitude can take on any value in a continuous range is an *analog signal*. This means that an analog signal amplitude can take on an infinite number of values. A *digital signal*, on the other hand, is one whose amplitude can take on only a finite number of values. Signals associated with a digital computer are digital because they take on only two values (binary signals). A digital signal whose amplitudes can take on *M* values is an *M*-ary signal of which binary (M = 2) is a special case. The terms *continuous time* and *discrete time* qualify the nature of a signal along the time (horizontal) axis. The terms *analog* and *digital*, on the other hand, qualify the nature of the signal amplitude (vertical axis). Figure 1.11 shows examples of signals of various types. It is clear that analog is not necessarily continuous-time and digital need not be discrete-time. Figure 1.11c shows an example of an analog discrete-time signal. An analog signal can be converted into a digital signal signal [analog-to-digital (A/D) conversion] through quantization (rounding off), as explained in Sec. 8.3.

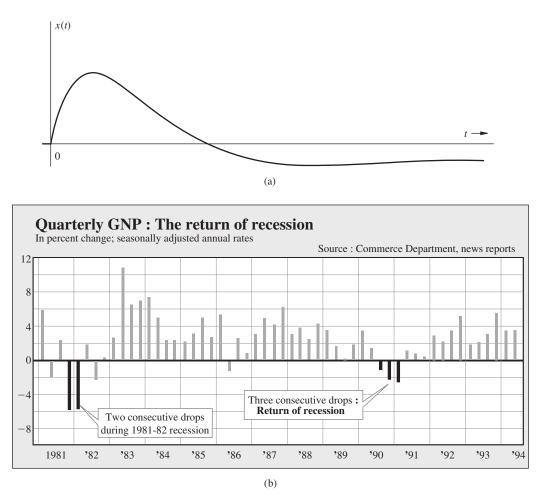


Figure 1.10 (a) Continuous-time and (b) discrete-time signals.

#### 1.3-3 Periodic and Aperiodic Signals

A signal x(t) is said to be *periodic* if for some positive constant  $T_0$ 

$$x(t) = x(t+T_0) \qquad \text{for all } t \tag{1.7}$$

The *smallest* value of  $T_0$  that satisfies the periodicity condition of Eq. (1.7) is the *fundamental period* of x(t). The signals in Figs. 1.2b and 1.3e are periodic signals with periods 2 and 1, respectively. A signal is *aperiodic* if it is not periodic. Signals in Figs. 1.2a, 1.3a, 1.3b, 1.3c, and 1.3d are all aperiodic.

By definition, a periodic signal x(t) remains unchanged when time-shifted by one period. For this reason, a periodic signal must start at  $t = -\infty$ : if it started at some finite instant, say, t = 0, the time-shifted signal  $x(t + T_0)$  would start at  $t = -T_0$  and  $x(t + T_0)$  would not be the same as 80 CHAPTER 1 SIGNALS AND SYSTEMS


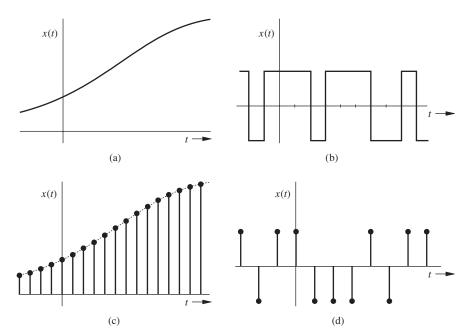


Figure 1.11 Examples of signals: (a) analog, continuous time; (b) digital, continuous time; (c) analog, discrete time; and (d) digital, discrete time.

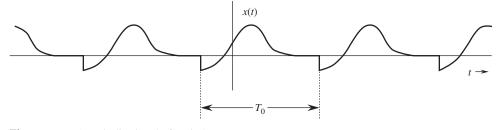

**Figure 1.12** A periodic signal of period  $T_0$ .

x(t). Therefore, a periodic signal, by definition, must start at  $t = -\infty$  and continue forever, as illustrated in Fig. 1.12.

Another important property of a periodic signal x(t) is that x(t) can be generated by *periodic* extension of any segment of x(t) of duration  $T_0$  (the period). As a result, we can generate x(t) from any segment of x(t) having a duration of one period by placing this segment and the reproduction thereof end to end ad infinitum on either side. Figure 1.13 shows a periodic signal x(t) of period  $T_0 = 6$ . The shaded portion of Fig. 1.13a shows a segment of x(t) starting at t = -1 and having a duration of one period (6 seconds). This segment, when repeated forever in either direction, results in the periodic signal x(t). Figure 1.13b shows another shaded segment of x(t) of duration  $T_0$  starting at t = 0. Again, we see that this segment, when repeated forever on either side, results in x(t). The reader can verify that this construction is possible with any segment of x(t) starting at any instant as long as the segment duration is one period.

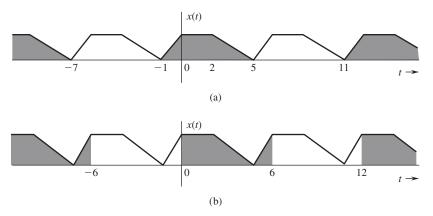


Figure 1.13 Generation of a periodic signal by periodic extension of its segment of one-period duration.

An additional useful property of a periodic signal x(t) of period  $T_0$  is that the area under x(t) over any interval of duration  $T_0$  is the same; that is, for any real numbers a and b,

$$\int_{a}^{a+T_{0}} x(t) \, dt = \int_{b}^{b+T_{0}} x(t) \, dt$$

This result follows from the fact that a periodic signal takes the same values at the intervals of  $T_0$ . Hence, the values over any segment of duration  $T_0$  are repeated in any other interval of the same duration. For convenience, the area under x(t) over any interval of duration  $T_0$  will be denoted by

$$\int_{T_0} x(t) \, dt$$

It is helpful to label signals that start at  $t = -\infty$  and continue forever as *everlasting* signals. Thus, an everlasting signal exists over the entire interval  $-\infty < t < \infty$ . The signals in Figs. 1.1b and 1.2b are examples of everlasting signals. Clearly, a periodic signal, by definition, is an everlasting signal.

A signal that does not start before t = 0 is a *causal* signal. In other words, x(t) is a causal signal if

$$x(t) = 0 \qquad t < 0$$

The signals in Figs. 1.3a–1.3c are causal signals. A signal that starts before t = 0 is a *noncausal* signal. All the signals in Figs. 1.1 and 1.2 are noncausal. Observe that an everlasting signal is always noncausal but a noncausal signal is not necessarily everlasting. The everlasting signal in Fig. 1.2b is noncausal; however, the noncausal signal in Fig. 1.2a is not everlasting. A signal that is zero for all  $t \ge 0$  is called an *anti-causal* signal.

**Comment.** A true everlasting signal cannot be generated in practice for obvious reasons. Why should we bother to postulate such a signal? In later chapters we shall see that certain signals

#### 82 CHAPTER 1 SIGNALS AND SYSTEMS

(e.g., an impulse and an everlasting sinusoid) that cannot be generated in practice *do* serve a very useful purpose in the study of signals and systems.

#### 1.3-4 Energy and Power Signals

A signal with finite energy is an *energy signal*, and a signal with finite and nonzero power is a *power signal*. The signals in Figs. 1.2a and 1.2b are examples of energy and power signals, respectively. Observe that power is the time average of energy. Since the averaging is over an infinitely large interval, a signal with finite energy has zero power, and a signal with finite power has infinite energy. Therefore, a signal cannot be both an energy signal and a power signal. If it is one, it cannot be the other. On the other hand, there are signals that are neither energy nor power signals. The ramp signal is one such case.

**Comments.** All practical signals have finite energies and are therefore energy signals. A power signal must necessarily have infinite duration; otherwise, its power, which is its energy averaged over an infinitely large interval, will not approach a (nonzero) limit. Clearly, it is impossible to generate a true power signal in practice because such a signal has infinite duration and infinite energy.

Also, because of periodic repetition, periodic signals for which the area under  $|x(t)|^2$  over one period is finite are power signals; however, not all power signals are periodic.

#### **DRILL 1.6** Neither Energy nor Power

Show that an everlasting exponential  $e^{-at}$  is neither an energy nor a power signal for any real value of *a*. However, if *a* is imaginary, it is a power signal with power  $P_x = 1$  regardless of the value of *a*.

#### **1.3-5** Deterministic and Random Signals

A signal whose physical description is known completely, in either a mathematical form or a graphical form, is a *deterministic signal*. A signal whose values cannot be predicted precisely but are known only in terms of probabilistic description, such as mean value or mean-squared value, is a *random signal*. In this book we shall exclusively deal with deterministic signals. Random signals are beyond the scope of this study.

# **1.4 SOME USEFUL SIGNAL MODELS**

In the area of signals and systems, the step, the impulse, and the exponential functions play very important roles. Not only do they serve as a basis for representing other signals, but their use can simplify many aspects of the signals and systems.

#### 1.4-1 The Unit Step Function *u*(*t*)

In much of our discussion, the signals begin at t = 0 (causal signals). Such signals can be conveniently described in terms of unit step function u(t) shown in Fig. 1.14a. This function is defined by


$$u(t) = \begin{cases} 1 & t \ge 0\\ 0 & t < 0 \end{cases}$$
(1.8)

If we want a signal to start at t = 0 (so that it has a value of zero for t < 0), we need only multiply the signal by u(t). For instance, the signal  $e^{-at}$  represents an everlasting exponential that starts at  $t = -\infty$ . The causal form of this exponential (Fig. 1.14b) can be described as  $e^{-at}u(t)$ .

The unit step function also proves very useful in specifying a function with different mathematical descriptions over different intervals. Examples of such functions appear in Fig. 1.7. These functions have different mathematical descriptions over different segments of time, as seen from Eqs. (1.5) and (1.6). Such a description often proves clumsy and inconvenient in mathematical treatment. We can use the unit step function to describe such functions by a single expression that is valid for all t.

Consider, for example, the rectangular pulse depicted in Fig. 1.15a. We can express such a pulse in terms of familiar step functions by observing that the pulse x(t) can be expressed as the sum of the two delayed unit step functions, as shown in Fig. 1.15b. The unit step function u(t) delayed by T seconds is u(t - T). From Fig. 1.15b, it is clear that

$$x(t) = u(t-2) - u(t-4)$$

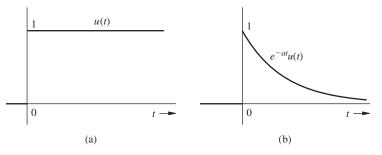

**Figure 1.14** (a) Unit step function u(t). (b) Exponential  $e^{-at}u(t)$ .

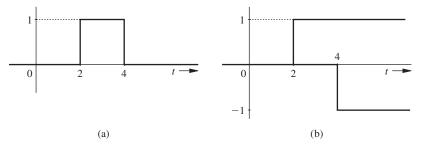


Figure 1.15 Representation of a rectangular pulse by step functions.

#### **EXAMPLE 1.6 Describing a Triangle Function with the Unit Step**

Use the unit step function to describe the signal in Fig. 1.16a.

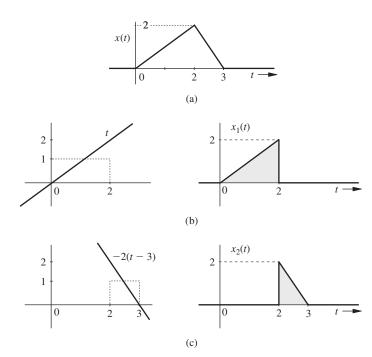


Figure 1.16 Representation of a signal defined interval by interval.

$$x_1(t) = t[u(t) - u(t-2)]$$

The signal  $x_2(t)$  can be obtained by multiplying another ramp by the gate pulse illustrated in Fig. 1.16c. This ramp has a slope -2; hence it can be described by -2t + c. Now, because the ramp has a zero value at t = 3, the constant c = 6, and the ramp can be described by -2(t-3). Also, the gate pulse in Fig. 1.16c is u(t-2) - u(t-3). Therefore,

$$x_2(t) = -2(t-3)[u(t-2) - u(t-3)]$$

The signal illustrated in Fig. 1.16a can be conveniently handled by breaking it up into the two components  $x_1(t)$  and  $x_2(t)$ , depicted in Figs. 1.16b and 1.16c, respectively. Here,  $x_1(t)$  can be obtained by multiplying the ramp *t* by the gate pulse u(t) - u(t - 2), as shown in Fig. 1.16b. Therefore,

and

$$\begin{aligned} x(t) &= x_1(t) + x_2(t) \\ &= t \left[ u(t) - u(t-2) \right] - 2(t-3) \left[ u(t-2) - u(t-3) \right] \\ &= t u(t) - 3(t-2)u(t-2) + 2(t-3)u(t-3) \end{aligned}$$

## EXAMPLE 1.7 Describing a Piecewise Function with the Unit Step

Describe the signal in Fig. 1.7a by a single expression valid for all t.


Over the interval from -1.5 to 0, the signal can be described by a constant 2, and over the interval from 0 to 3, it can be described by  $2e^{-t/2}$ . Therefore,

$$x(t) = \underbrace{2[u(t+1.5) - u(t)]}_{\text{constant part}} + \underbrace{2e^{-t/2}[u(t) - u(t-3)]}_{\text{exponential part}}$$
  
= 2u(t+1.5) - 2(1 - e^{-t/2})u(t) - 2e^{-t/2}u(t-3)

Compare this expression with the expression for the same function found in Eq. (1.6).

#### DRILL 1.7 Using Reflected Unit Step Functions


Show that the signals depicted in Figs. 1.17a and 1.17b can be described as u(-t) and  $e^{-at}u(-t)$ , respectively.

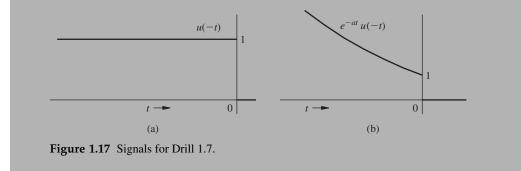

86

#### DRILL 1.8 Describing a Piecewise Function with the Unit Step

Show that the signal shown in Fig. 1.18 can be described as

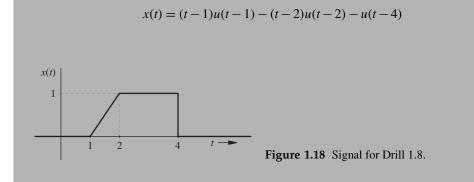


#### **1.4-2** The Unit Impulse Function $\delta(t)$

The unit impulse function  $\delta(t)$  is one of the most important functions in the study of signals and systems. This function was first defined in two parts by P. A. M. Dirac as

$$\delta(t) = 0 \quad t \neq 0 \quad \text{and} \quad \int_{-\infty}^{\infty} \delta(t) \, dt = 1$$
 (1.9)

We can visualize an impulse as a tall, narrow, rectangular pulse of unit area, as illustrated in Fig. 1.19b. The width of this rectangular pulse is a very small value  $\epsilon \rightarrow 0$ . Consequently, its height is a very large value  $1/\epsilon \rightarrow \infty$ . The unit impulse therefore can be regarded as a rectangular pulse with a width that has become infinitesimally small, a height that has become infinitely large, and an overall area that has been maintained at unity. Thus  $\delta(t) = 0$  everywhere except at t = 0, where it is undefined. For this reason, a unit impulse is represented by the spearlike symbol in Fig. 1.19a.

Other pulses, such as the exponential, triangular, or Gaussian types, may also be used in impulse approximation. The important feature of the unit impulse function is not its shape but the fact that its effective duration (pulse width) approaches zero while its area remains at unity. For example, the exponential pulse  $\alpha e^{-\alpha t}u(t)$  in Fig. 1.20a becomes taller and narrower as  $\alpha$  increases.

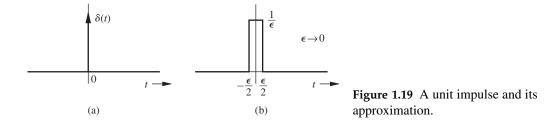

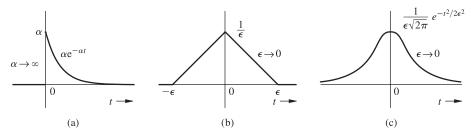


Figure 1.20 Other possible approximations to a unit impulse.

In the limit as  $\alpha \to \infty$ , the pulse height  $\to \infty$ , and its width or duration  $\to 0$ . Yet, the area under the pulse is unity regardless of the value of  $\alpha$  because

$$\int_0^\infty \alpha e^{-\alpha t} dt = 1$$

The pulses in Figs. 1.20b and 1.20c behave in a similar fashion. Clearly, the exact impulse function cannot be generated in practice; it can only be approached.

From Eq. (1.9), it follows that the function  $k\delta(t) = 0$  for all  $t \neq 0$ , and its area is k. Thus,  $k\delta(t)$  is an impulse function whose area is k (in contrast to the unit impulse function, whose area is 1).

#### MULTIPLICATION OF A FUNCTION BY AN IMPULSE

Let us now consider what happens when we multiply the unit impulse  $\delta(t)$  by a function  $\phi(t)$  that is known to be continuous at t = 0. Since the impulse has nonzero value only at t = 0, and the value of  $\phi(t)$  at t = 0 is  $\phi(0)$ , we obtain

$$\phi(t)\delta(t) = \phi(0)\delta(t)$$

Thus, multiplication of a continuous-time function  $\phi(t)$  with an unit impulse located at t = 0 results in an impulse, which is located at t = 0 and has strength  $\phi(0)$  [the value of  $\phi(t)$  at the location of the impulse]. Use of exactly the same argument leads to the generalization of this result, stating that provided  $\phi(t)$  is continuous at  $t = T, \phi(t)$  multiplied by an impulse  $\delta(t - T)$  (impulse located at t = T) results in an impulse located at t = T and having strength  $\phi(T)$  [the value of  $\phi(t)$  at the location of the impulse].

$$\phi(t)\delta(t-T) = \phi(T)\delta(t-T) \tag{1.10}$$

#### SAMPLING PROPERTY OF THE UNIT IMPULSE FUNCTION

From Eq. (1.10) it follows that

$$\int_{-\infty}^{\infty} \phi(t)\delta(t-T)\,dt = \phi(T)\int_{-\infty}^{\infty} \delta(t)\,dt = \phi(T) \tag{1.11}$$

provided  $\phi(t)$  is continuous at t = T. This result means that the area under the product of a function with an impulse  $\delta(t - T)$  is equal to the value of that function at the instant at which the unit impulse is located. This property is very important and useful and is known as the sampling or sifting property of the unit impulse.

#### UNIT IMPULSE AS A GENERALIZED FUNCTION

The definition of the unit impulse function given in Eq. (1.9) is not mathematically rigorous, which leads to serious difficulties. First, the impulse function does not define a unique function: for example, it can be shown that  $\delta(t) + \dot{\delta}(t)$  also satisfies Eq. (1.9) [1]. Moreover,  $\delta(t)$  is not even a true function in the ordinary sense. An ordinary function is specified by its values for all time *t*. The impulse function is zero everywhere except at t = 0, and at this, the only interesting part of its range, it is undefined. These difficulties are resolved by defining the impulse as a generalized function rather than an ordinary function. A *generalized function* is defined by its effect on other functions instead of by its value at every instant of time.

In this approach the impulse function is defined by the sampling property [Eq. (1.11)]. We say nothing about what the impulse function is or what it looks like. Instead, the impulse function is defined in terms of its effect on a test function  $\phi(t)$ . We define a unit impulse as a function for which the area under its product with a function  $\phi(t)$  is equal to the value of the function  $\phi(t)$  at the instant at which the impulse is located. It is assumed that  $\phi(t)$  is continuous at the location of the impulse. Recall that the sampling property [Eq. (1.11)] is the consequence of the classical (Dirac) definition of the unit impulse in Eq. (1.9). In contrast, the sampling property [Eq. (1.11)] defines the impulse function in the generalized function approach.

We now present an interesting application of the generalized function definition of an impulse. Because the unit step function u(t) is discontinuous at t = 0, its derivative du/dt does not exist at t = 0 in the ordinary sense. We now show that this derivative *does* exist in the generalized sense, and it is, in fact,  $\delta(t)$ . As a proof, let us evaluate the integral of  $(du/dt)\phi(t)$ , using integration by parts:

$$\int_{-\infty}^{\infty} \frac{du(t)}{dt} \phi(t) dt = u(t)\phi(t) \Big|_{-\infty}^{\infty} - \int_{-\infty}^{\infty} u(t)\dot{\phi}(t) dt$$
$$= \phi(\infty) - 0 - \int_{0}^{\infty} \dot{\phi}(t) dt$$
$$= \phi(\infty) - \phi(t) \Big|_{0}^{\infty} = \phi(0)$$

This result shows that du/dt satisfies the sampling property of  $\delta(t)$ . Therefore it is an impulse  $\delta(t)$  in the generalized sense—that is,

$$\frac{du(t)}{dt} = \delta(t) \tag{1.12}$$

Consequently,

$$\int_{-\infty}^t \delta(\tau) \, d\tau = u(t)$$

These results can also be obtained graphically from Fig. 1.19b. We observe that the area from  $-\infty$  to t under the limiting form of  $\delta(t)$  in Fig. 1.19b is zero if  $t < -\epsilon/2$  and unity if  $t \ge \epsilon/2$  with  $\epsilon \to 0$ . Consequently,

$$\int_{-\infty}^{t} \delta(\tau) d\tau = \begin{cases} 0 & t < 0\\ 1 & t \ge 0 \end{cases}$$
$$= u(t)$$

This result shows that the unit step function can be obtained by integrating the unit impulse function. Similarly the unit ramp function x(t) = tu(t) can be obtained by integrating the unit step function. We may continue with unit parabolic function  $t^2/2$  obtained by integrating the unit ramp, and so on. On the other side, we have derivatives of impulse function, which can be defined as generalized functions (see Prob. 1.4-12). All these functions, derived from the unit impulse function (successive derivatives and integrals), are called *singularity functions*.<sup>†</sup>

#### **DRILL 1.9 Simplifying Expressions Containing the Unit Impulse**

Show that

(a) 
$$(t^3 + 3)\delta(t) = 3\delta(t)$$
  
(b)  $\left[\sin\left(t^2 - \frac{\pi}{2}\right)\right]\delta(t) = -\delta(t)$ 

(c) 
$$e^{-s}\delta(t) = \delta(t)$$

(d) 
$$\frac{\omega^2 + 1}{\omega^2 + 9}\delta(\omega - 1) = \frac{1}{5}\delta(\omega - 1)$$

# DRILL 1.10 Simplifying Integrals Containing the Unit Impulse

-2)

Show that

(a) 
$$\int_{-\infty}^{\infty} \delta(t) e^{-j\omega t} dt = 1$$
  
(b) 
$$\int_{-\infty}^{\infty} \delta(t-2) \cos\left(\frac{\pi t}{4}\right) dt = 0$$
  
(c) 
$$\int_{-\infty}^{\infty} e^{-2(x-t)} \delta(2-t) dt = e^{-2(x-t)} \delta(2-t) dt = 0$$

#### 1.4-3 The Exponential Function *e*<sup>st</sup>

Another important function in the area of signals and systems is the exponential signal  $e^{st}$ , where *s* is complex in general, given by

$$s = \sigma + j\omega$$

<sup>&</sup>lt;sup>†</sup> Singularity functions were defined by late Prof. S. J. Mason as follows. A singularity is a point at which a function does not possess a derivative. Each of the singularity functions (or if not the function itself, then the function differentiated a finite number of times) has a singular point at the origin and is zero elsewhere [2].

Therefore,

$$e^{st} = e^{(\sigma + j\omega)t} = e^{\sigma t}e^{j\omega t} = e^{\sigma t}(\cos\omega t + j\sin\omega t)$$
(1.13)

Since  $s^* = \sigma - j\omega$  (the conjugate of *s*), then

$$e^{s^*t} = e^{(\sigma - j\omega)t} = e^{\sigma t}e^{-j\omega t} = e^{\sigma t}(\cos \omega t - j\sin \omega t)$$

and


$$e^{\sigma t} \cos \omega t = \frac{1}{2} (e^{st} + e^{s^* t}) \tag{1.14}$$

A comparison of Eq. (1.13) with Euler's formula shows that  $e^{st}$  is a generalization of the function  $e^{j\omega t}$ , where the frequency variable  $j\omega$  is generalized to a complex variable  $s = \sigma + j\omega$ . For this reason, we designate the variable s as the *complex frequency*. In fact, function  $e^{st}$  encompasses a large class of functions. The following functions are either special cases of or can be expressed in terms of  $e^{st}$ :

- 1. A constant  $k = ke^{0t}$  (s = 0)
- 2. A monotonic exponential  $e^{\sigma t}$  ( $\omega = 0, s = \sigma$ )
- 3. A sinusoid  $\cos \omega t$   $(\sigma = 0, s = \pm j\omega)$
- 4. An exponentially varying sinusoid  $e^{\sigma t} \cos \omega t$   $(s = \sigma \pm j\omega)$

These functions are illustrated in Fig. 1.21.

The complex frequency s can be conveniently represented on a *complex frequency plane* (s plane), as depicted in Fig. 1.22. The horizontal axis is the real axis ( $\sigma$  axis), and the vertical axis is the imaginary axis ( $\omega$  axis). The absolute value of the imaginary part of s is  $|\omega|$  (the

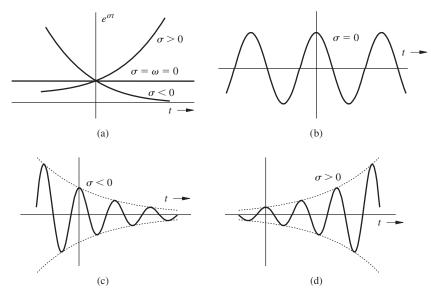

**Figure 1.21** Sinusoids of complex frequency  $\sigma + j\omega$ .

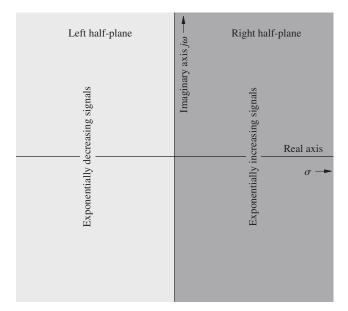


Figure 1.22 Complex frequency plane.

radian frequency), which indicates the frequency of oscillation of  $e^{st}$ ; the real part  $\sigma$  (the *neper* frequency) gives information about the rate of increase or decrease of the amplitude of  $e^{st}$ . For signals whose complex frequencies lie on the real axis ( $\sigma$  axis, where  $\omega = 0$ ), the frequency of oscillation is zero. Consequently these signals are monotonically increasing or decreasing exponentials (Fig. 1.21a). For signals whose frequencies lie on the imaginary axis ( $\omega$  axis, where  $\sigma = 0$ ),  $e^{\sigma t} = 1$ . Therefore, these signals are conventional sinusoids with constant amplitude (Fig. 1.21b). The case s = 0 ( $\sigma = \omega = 0$ ) corresponds to a constant (dc) signal because  $e^{0t} = 1$ . For the signals illustrated in Figs. 1.21c and 1.21d, both  $\sigma$  and  $\omega$  are nonzero; the frequency s is complex and does not lie on either axis. The signal in Fig. 1.21c decays exponentially. Therefore,  $\sigma$  is positive, and s lies to the left of the imaginary axis. In contrast, the signal in Fig. 1.21d grows exponentially. Therefore,  $\sigma$  is positive, and s lies to the right of the imaginary axis. Thus the s plane (Fig. 1.21) can be separated into two parts: the *left half-plane* (LHP) corresponding to exponentially decaying signals and the *right half-plane* (RHP) corresponding to exponentially growing signals. The imaginary axis separates the two regions and corresponds to signals of constant amplitude.

An exponentially growing sinusoid  $e^{2t} \cos 5t$ , for example, can be expressed as a linear combination of exponentials  $e^{(2+j5)t}$  and  $e^{(2-j5)t}$  with complex frequencies 2+j5 and 2-j5, respectively, which lie in the RHP. An exponentially decaying sinusoid  $e^{-2t} \cos 5t$  can be expressed as a linear combination of exponentials  $e^{(-2+j5)t}$  and  $e^{(-2-j5)t}$  with complex frequencies -2+j5 and -2-j5, respectively, which lie in the LHP. A constant-amplitude sinusoid  $\cos 5t$  can be expressed as a linear combination of exponentials  $e^{j5t}$  and  $e^{-j5t}$  with complex frequencies  $\pm j5$ , which lie on the imaginary axis. Observe that the monotonic exponentials  $e^{\pm 2t}$  are also generalized sinusoids with complex frequencies  $\pm 2$ .

# **1.5 EVEN AND ODD FUNCTIONS**

A function  $x_e(t)$  is said to be an *even function* of t if it is symmetrical about the vertical axis. A function  $x_o(t)$  is said to be an *odd function* of t if it is antisymmetrical about the vertical axis. Mathematically expressed, these symmetry conditions require

$$x_e(t) = x_e(-t)$$
 and  $x_o(t) = -x_o(-t)$  (1.15)

An even function has the same value at the instants t and -t for all values of t. On the other hand, the value of an odd function at the instant t is the negative of its value at the instant -t. An example even signal and an example odd signal are shown in Figs. 1.23a and 1.23b, respectively.

# 1.5-1 Some Properties of Even and Odd Functions

Even and odd functions have the following properties:

even function × odd function = odd function odd function × odd function = even function even function × even function = even function

The proofs are trivial and follow directly from the definition of odd and even functions [Eq. (1.15)].

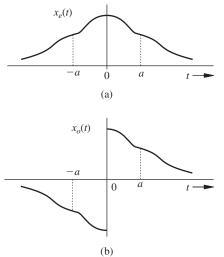


Figure 1.23 Functions of *t*: (a) even and (b) odd.

#### Area

Because of the symmetries of even and odd functions about the vertical axis, it follows from Eq. (1.15) [or Fig. 1.23] that

$$\int_{-a}^{a} x_e(t) dt = 2 \int_{0}^{a} x_e(t) dt \quad \text{and} \quad \int_{-a}^{a} x_o(t) dt = 0 \quad (1.16)$$

These results are valid under the assumption that there is no impulse (or its derivatives) at the origin. The proof of these statements is obvious from the plots of even and odd functions. Formal proofs, left as an exercise for the reader, can be accomplished by using the definitions in Eq. (1.15).

Because of their properties, study of odd and even functions proves useful in many applications, as will become evident in later chapters.

#### 1.5-2 Even and Odd Components of a Signal

Every signal x(t) can be expressed as a sum of even and odd components because

$$x(t) = \underbrace{\frac{1}{2}[x(t) + x(-t)]}_{\text{even}} + \underbrace{\frac{1}{2}[x(t) - x(-t)]}_{\text{odd}}$$
(1.17)

From the definitions in Eq. (1.15), we can clearly see that the first component on the right-hand side is an even function, while the second component is odd. This is apparent from the fact that replacing t by -t in the first component yields the same function. The same maneuver in the second component yields the negative of that component.

# **EXAMPLE 1.8** Finding the Even and Odd Components of a Signal

Find and sketch the even and odd components of  $x(t) = e^{-at}u(t)$ .


Based on Eq. (1.17), we can express x(t) as a sum of the even component  $x_e(t)$  and the odd component  $x_o(t)$  as

$$x(t) = x_e(t) + x_o(t)$$

where

$$x_e(t) = \frac{1}{2}[e^{-at}u(t) + e^{at}u(-t)]$$
 and  $x_o(t) = \frac{1}{2}[e^{-at}u(t) - e^{at}u(-t)]$ 

The function  $e^{-at}u(t)$  and its even and odd components are illustrated in Fig. 1.24.

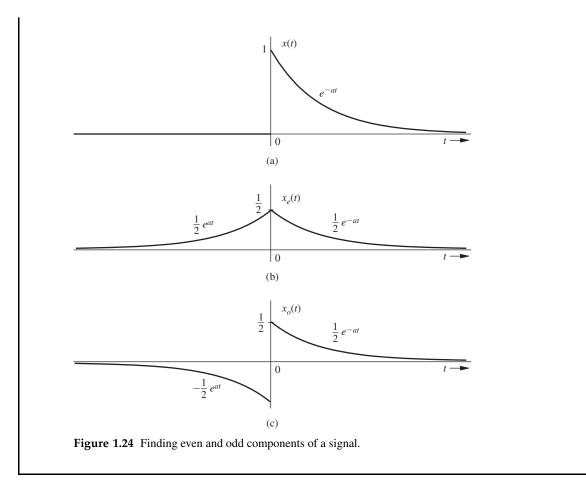

# **EXAMPLE 1.9** Finding the Even and Odd Components of a Complex Signal

Find the even and odd components of  $e^{jt}$ .

From Eq. (1.17),

$$e^{jt} = x_e(t) + x_o(t)$$

where

$$x_e(t) = \frac{1}{2}[e^{jt} + e^{-jt}] = \cos t$$
 and  $x_o(t) = \frac{1}{2}[e^{jt} - e^{-jt}] = j\sin t$ 

94

#### A MODIFICATION FOR COMPLEX SIGNALS

While a complex signal can be decomposed into even and odd components, it is more common to decompose complex signals using conjugate symmetries. A complex signal x(t) is said to be *conjugate-symmetric* if  $x(t) = x^*(-t)$ . A conjugate-symmetric signal is even in the real part and odd in the imaginary part. Thus, a real conjugate-symmetric signal is an even signal. A signal is *conjugate-antisymmetric* if  $x(t) = -x^*(-t)$ . A conjugate-antisymmetric signal is odd in the real part and even in the imaginary part. A real conjugate-antisymmetric signal is an odd signal. Any signal x(t) can be decomposed into a conjugate-symmetric portion  $x_{cs}(t)$  plus a conjugate-antisymmetric portion  $x_{ca}(t)$ . That is,

$$x(t) = x_{cs}(t) + x_{ca}(t)$$

where

$$x_{cs}(t) = \frac{x(t) + x^*(-t)}{2}$$
 and  $x_{ca}(t) = \frac{x(t) - x^*(-t)}{2}$ 

The proof is similar to the one for decomposing a signal into even and odd components. As we shall see in later chapters, conjugate symmetries commonly occur in real-world signals and their transforms.

#### **1.6 Systems**

As mentioned in Sec. 1.1, systems are used to process signals to allow modification or extraction of additional information from the signals. A system may consist of physical components (hardware realization) or of an algorithm that computes the output signal from the input signal (software realization).

Roughly speaking, a physical system consists of interconnected components, which are characterized by their terminal (input–output) relationships. In addition, a system is governed by laws of interconnection. For example, in electrical systems, the terminal relationships are the familiar voltage-current relationships for the resistors, capacitors, inductors, transformers, transistors, and so on, as well as the laws of interconnection (i.e., Kirchhoff's laws). We use these laws to derive mathematical equations relating the outputs to the inputs. These equations then represent a *mathematical model* of the system.

A system can be conveniently illustrated by a "black box" with one set of accessible terminals where the input variables  $x_1(t), x_2(t), \ldots, x_j(t)$  are applied and another set of accessible terminals where the output variables  $y_1(t), y_2(t), \ldots, y_k(t)$  are observed (Fig. 1.25).

The study of systems consists of three major areas: mathematical modeling, analysis, and design. Although we shall be dealing with mathematical modeling, our main concern is with

$x_1(t)$	-	$y_1(t)$
$x_2(t)$		$y_2(t)$
• •	•	•
• •	•	•
• •	•	•
$x_j(t)$	-	$y_k(t)$

Figure 1.25 Representation of a system.

analysis and design. The major portion of this book is devoted to the analysis problem—how to determine the system outputs for the given inputs and a given mathematical model of the system (or rules governing the system). To a lesser extent, we will also consider the problem of design or synthesis—how to construct a system that will produce a desired set of outputs for the given inputs.

#### DATA NEEDED TO COMPUTE SYSTEM RESPONSE

To understand what data we need to compute a system response, consider a simple *RC* circuit with a current source x(t) as its input (Fig. 1.26).

The output voltage y(t) is given by

$$y(t) = Rx(t) + \frac{1}{C} \int_{-\infty}^{t} x(\tau) d\tau$$
(1.18)

The limits of the integral on the right-hand side are from  $-\infty$  to *t* because this integral represents the capacitor charge due to the current x(t) flowing in the capacitor, and this charge is the result of the current flowing in the capacitor from  $-\infty$ . Now, Eq. (1.18) can be expressed as

$$y(t) = Rx(t) + \frac{1}{C} \int_{-\infty}^{0} x(\tau) \, d\tau + \frac{1}{C} \int_{0}^{t} x(\tau) \, d\tau$$

The middle term on the right-hand side is  $v_C(0)$ , the capacitor voltage at t = 0. Therefore,

$$y(t) = v_C(0) + Rx(t) + \frac{1}{C} \int_0^t x(\tau) d\tau \qquad t \ge 0$$

This equation can be readily generalized as

$$y(t) = v_C(t_0) + Rx(t) + \frac{1}{C} \int_{t_0}^t x(\tau) d\tau \qquad t \ge t_0$$
(1.19)

From Eq. (1.18), the output voltage y(t) at an instant t can be computed if we know the input current flowing in the capacitor throughout its entire past ( $-\infty$  to t). Alternatively, if we know the input current x(t) from some moment  $t_0$  onward, then, using Eq. (1.19), we can still calculate y(t) for  $t \ge t_0$  from a knowledge of the input current, provided we know  $v_C(t_0)$ , the initial capacitor voltage (voltage at  $t_0$ ). Thus  $v_C(t_0)$  contains all the relevant information about the circuit's entire

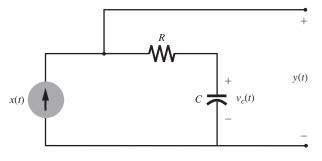


Figure 1.26 Example of a simple electrical system.

past  $(-\infty \text{ to } t_0)$  that we need to compute y(t) for  $t \ge t_0$ . Therefore, the response of a system at  $t \ge t_0$  can be determined from its input(s) during the interval  $t_0$  to t and from certain *initial conditions* at  $t = t_0$ .

In the preceding example, we needed only one initial condition. However, in more complex systems, several initial conditions may be necessary. We know, for example, that in passive *RLC* networks, the initial values of all inductor currents and all capacitor voltages<sup>†</sup> are needed to determine the outputs at any instant  $t \ge 0$  if the inputs are given over the interval [0, t].

### **1.7 CLASSIFICATION OF SYSTEMS**

Systems may be classified broadly in the following categories:

- 1. Linear and nonlinear systems
- 2. Constant-parameter and time-varying-parameter systems
- 3. Instantaneous (memoryless) and dynamic (with memory) systems
- 4. Causal and noncausal systems
- 5. Continuous-time and discrete-time systems
- 6. Analog and digital systems
- 7. Invertible and noninvertible systems
- 8. Stable and unstable systems

Other classifications, such as deterministic and probabilistic systems, are beyond the scope of this text and are not considered.

#### 1.7-1 Linear and Nonlinear Systems

#### THE CONCEPT OF LINEARITY

A system whose output is proportional to its input is an *example* of a linear system. But linearity implies more than this; it also implies the *additivity property:* that is, if several inputs are acting on a system, then the total effect on the system due to all these inputs can be determined by considering one input at a time while assuming all the other inputs to be zero. The total effect is then the sum of all the component effects. This property may be expressed as follows: for a linear system, if an input  $x_1$  acting alone has an effect  $y_1$ , and if another input  $x_2$ , also acting alone, has an effect  $y_2$ , then, with both inputs acting on the system, the total effect will be  $y_1 + y_2$ . Thus, if

$$x_1 \longrightarrow y_1$$
 and  $x_2 \longrightarrow y_2$ 

then for all  $x_1$  and  $x_2$ 

 $x_1 + x_2 \longrightarrow y_1 + y_2 \tag{1.20}$ 

In addition, a linear system must satisfy the *homogeneity* or scaling property, which states that for arbitrary real or imaginary number k, if an input is increased k-fold, the effect also increases k-fold. Thus, if

 $x \longrightarrow y$ 

<sup>&</sup>lt;sup>†</sup> Strictly speaking, this means independent inductor currents and capacitor voltages.

#### CHAPTER 1 SIGNALS AND SYSTEMS

then for all real or imaginary k

98

$$kx \longrightarrow ky$$
 (1.21)

Thus, linearity implies two properties: homogeneity (scaling) and additivity.<sup>†</sup> Both these properties can be combined into one property (*superposition*), which is expressed as follows: If

$$x_1 \longrightarrow y_1$$
 and  $x_2 \longrightarrow y_2$ 

then for all inputs  $x_1$  and  $x_2$  and all constants  $k_1$  and  $k_2$ ,

$$k_1 x_1 + k_2 x_2 \longrightarrow k_1 y_1 + k_2 y_2 \tag{1.22}$$

There is another useful way to view the linearity condition described in Eq. (1.22): the response of a linear system is unchanged whether the operations of summing and scaling precede the system (sum and scale act on inputs) or follow the system (sum and scale act on outputs). *Thus, linearity implies commutability between a system and the operations of summing and scaling.* It may appear that additivity implies homogeneity. Unfortunately, homogeneity does not always follow from additivity. Drill 1.11 demonstrates such a case.

#### DRILL 1.11 Additivity but Not Homogeneity

Show that a system with the input x(t) and the output y(t) related by  $y(t) = \text{Re}\{x(t)\}$  satisfies the additivity property but violates the homogeneity property. Hence, such a system is not linear. [*Hint:* Show that Eq. (1.21) is not satisfied when k is complex.]

#### **Response of a Linear System**

For the sake of simplicity, we discuss only *single-input*, *single-output* (SISO) systems. But the discussion can be readily extended to *multiple-input*, *multiple-output* (MIMO) systems.

A system's output for  $t \ge 0$  is the result of two independent causes: the initial conditions of the system (or the system state) at t = 0 and the input x(t) for  $t \ge 0$ . If a system is to be linear, the output must be the sum of the two components resulting from these two causes: first, the *zero-input response* (ZIR) that results only from the initial conditions at t = 0 with the input x(t) = 0 for  $t \ge 0$ , and then the *zero-state response* (ZSR) that results only from the input x(t) for  $t \ge 0$  when the initial conditions (at t = 0) are assumed to be zero. When all the appropriate initial conditions are zero, the system is said to be in *zero state*. The system output is zero when the input is zero only if the system is in zero state.

In summary, a linear system response can be expressed as the sum of the zero-input and zero-state responses:

total response = zero-input response + zero-state response

<sup>&</sup>lt;sup>†</sup>A linear system must also satisfy the additional condition of *smoothness*, where small changes in the system's inputs must result in small changes in its outputs [3].

This property of linear systems, which permits the separation of an output into components resulting from the initial conditions and from the input, is called the *decomposition property*. For the *RC* circuit of Fig. 1.26, the response y(t) was found to be [see Eq. (1.19) with  $t_0 = 0$ ]

$$y(t) = \underbrace{v_C(0)}_{\text{ZIR}} + \underbrace{Rx(t) + \frac{1}{C} \int_0^t x(\tau) \, d\tau}_{\text{ZSR}}$$
(1.23)

From Eq. (1.23), it is clear that if the input x(t) = 0 for  $t \ge 0$ , the output  $y(t) = v_C(0)$ . Hence  $v_C(0)$  is the zero-input response of the response y(t). Similarly, if the system state (the voltage  $v_C$  in this case) is zero at t = 0, the output is given by the second component on the right-hand side of Eq. (1.23). Clearly this is the zero-state response of the response y(t).

In addition to the decomposition property, linearity implies that both the zero-input and zero-state components must obey the principle of superposition with respect to each of their respective causes. For example, if we increase the initial condition *k*-fold, the zero-input response must also increase *k*-fold. Similarly, if we increase the input *k*-fold, the zero-state response must also increase *k*-fold. These facts can be readily verified from Eq. (1.23) for the *RC* circuit in Fig. 1.26. For instance, if we double the initial condition  $v_C(0)$ , the zero-input response doubles; if we double the input *x*(*t*), the zero-state response doubles.

# **EXAMPLE 1.10** Linearity of Constant-Coefficient Linear Differential Equations

Show that the system described by the equation

$$\frac{dy(t)}{dt} + 3y(t) = x(t)$$
 (1.24)

is linear.

Let the system response to the inputs  $x_1(t)$  and  $x_2(t)$  be  $y_1(t)$  and  $y_2(t)$ , respectively. Then

$$\frac{dy_1(t)}{dt} + 3y_1(t) = x_1(t)$$
 and  $\frac{dy_2(t)}{dt} + 3y_2(t) = x_2(t)$ 

Multiplying the first equation by  $k_1$ , the second by  $k_2$ , and adding them yield

$$\frac{d}{dt}[k_1y_1(t) + k_2y_2(t)] + 3[k_1y_1(t) + k_2y_2(t)] = k_1x_1(t) + k_2x_2(t)$$

But this equation is the system equation [Eq. (1.24)] with

 $x(t) = k_1 x_1(t) + k_2 x_2(t)$  and  $y(t) = k_1 y_1(t) + k_2 y_2(t)$ 

Therefore, when the input is  $k_1x_1(t) + k_2x_2(t)$ , the system response is  $k_1y_1(t) + k_2y_2(t)$ . Consequently, the system is linear. Using this argument, we can readily generalize the result to

#### 100 CHAPTER 1 SIGNALS AND SYSTEMS

show that a system described by a differential equation of the form

$$a_0 \frac{d^N y(t)}{dt^N} + a_1 \frac{d^{N-1} y(t)}{dt^{N-1}} + \dots + a_N y(t) = b_{N-M} \frac{d^M x(t)}{dt^M} + \dots + b_{N-1} \frac{dx(t)}{dt} + b_N x(t) \quad (1.25)$$

is a linear system. The coefficients  $a_i$  and  $b_i$  in this equation can be constants or functions of time. Although here we proved only zero-state linearity, it can be shown that such systems are also zero-input linear and have the decomposition property.

# **DRILL 1.12** Linearity of a Differential Equation with Time-Varying Parameters

Show that the system described by the following equation is linear:

$$\frac{dy(t)}{dt} + t^2 y(t) = (2t+3)x(t)$$

#### DRILL 1.13 A Nonlinear Differential Equation

Show that the system described by the following equation is nonlinear:

$$y(t)\frac{dy(t)}{dt} + 3y(t) = x(t)$$

### MORE COMMENTS ON LINEAR SYSTEMS

Almost all systems observed in practice become nonlinear when large enough signals are applied to them. However, it is possible to approximate most of the nonlinear systems by linear systems for small-signal analysis. The analysis of nonlinear systems is generally difficult. Nonlinearities can arise in so many ways that describing them with a common mathematical form is impossible. Not only is each system a category in itself, but even for a given system, changes in initial conditions or input amplitudes may change the nature of the problem. On the other hand, the superposition property of linear systems is a powerful unifying principle that allows for a general solution. The superposition property (linearity) greatly simplifies the analysis of linear systems. Because of the decomposition property, we can evaluate separately the two components of the output. The zero-input response can be computed by assuming the input to be zero, and the zero-state response can be computed by assuming zero initial conditions. Moreover, if we express an input x(t) as a sum of simpler functions,

$$x(t) = a_1 x_1(t) + a_2 x_2(t) + \dots + a_m x_m(t)$$

then, by virtue of linearity, the response y(t) is given by

$$y(t) = a_1y_1(t) + a_2y_2(t) + \dots + a_my_m(t)$$

where  $y_k(t)$  is the zero-state response to an input  $x_k(t)$ . This apparently trivial observation has profound implications. As we shall see repeatedly in later chapters, it proves extremely useful and opens new avenues for analyzing linear systems.

For example, consider an arbitrary input x(t) such as the one shown in Fig. 1.27a. We can approximate x(t) with a sum of rectangular pulses of width  $\Delta t$  and of varying heights. The approximation improves as  $\Delta t \rightarrow 0$ , when the rectangular pulses become impulses spaced  $\Delta t$ seconds apart (with  $\Delta t \rightarrow 0$ ).<sup>†</sup> Thus, an arbitrary input can be replaced by a weighted sum of impulses spaced  $\Delta t$  ( $\Delta t \rightarrow 0$ ) seconds apart. Therefore, if we know the system response to a unit impulse, we can immediately determine the system response to an arbitrary input x(t) by adding the system response to each impulse component of x(t). A similar situation is depicted in Fig. 1.27b, where x(t) is approximated by a sum of step functions of varying magnitude and spaced  $\Delta t$  seconds apart. The approximation improves as  $\Delta t$  becomes smaller. Therefore, if we know the system response to a unit step input, we can compute the system response to any arbitrary input x(t) with relative ease. Time-domain analysis of linear systems (discussed in Ch. 2) uses this approach.

Chapters 4, 5, 6, and 7 employ the same approach but instead use sinusoids or exponentials as the basic signal components. We show that any arbitrary input signal can be expressed as a weighted sum of sinusoids (or exponentials) having various frequencies. Thus a knowledge of the system response to a sinusoid enables us to determine the system response to an arbitrary input x(t).

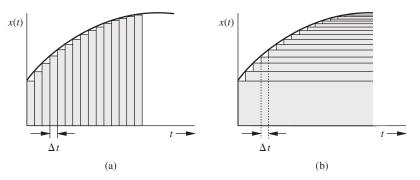


Figure 1.27 Signal representation in terms of impulse and step components.

<sup>&</sup>lt;sup>†</sup> Here, the discussion of a rectangular pulse approaching an impulse at  $\Delta t \rightarrow 0$  is somewhat imprecise. It is explained in Sec. 2.4 with more rigor.

# 1.7-2 Time-Invariant and Time-Varying Systems

Systems whose parameters do not change with time are *time-invariant* (also *constant-parameter*) systems. For such a system, if the input is delayed by *T* seconds, the output is the same as before but delayed by *T* (assuming initial conditions are also delayed by *T*). This property is expressed graphically in Fig. 1.28. We can also illustrate this property, as shown in Fig. 1.29. We can delay the output y(t) of a system *S* by applying the output y(t) to a *T* second delay (Fig. 1.29a). If the system is time invariant, then the delayed output y(t - T) can also be obtained by first delaying the input x(t) before applying it to the system, as shown in Fig. 1.29b. In other words, the system *S* and the time delay commute if the system *S* is time invariant. This would not be true for time-varying systems. Consider, for instance, a time-varying system specified by  $y(t) = e^{-t}x(t)$ . The output for such a system in Fig. 1.29a is  $e^{-(t-T)}x(t-T)$ . In contrast, the output for the system in Fig. 1.29b is  $e^{-t}x(t-T)$ .


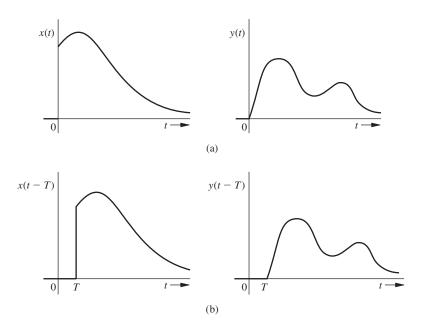


Figure 1.28 Time-invariance property.

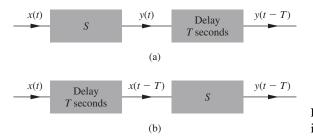

**Figure 1.29** Illustration of time-invariance property.

It is possible to verify that the system in Fig. 1.26 is a time-invariant system. Networks composed of *RLC* elements and other commonly used active elements such as transistors are time-invariant systems. A system with an input–output relationship described by a linear differential equation of the form given in Ex. 1.10 [Eq. (1.25)] is a linear time-invariant (LTI) system when the coefficients  $a_i$  and  $b_i$  of such equation are constants. If these coefficients are functions of time, then the system is a linear *time-varying* system.

The system described in Drill 1.12 is linear time varying. Another familiar example of a time-varying system is the carbon microphone, in which the resistance R is a function of the mechanical pressure generated by sound waves on the carbon granules of the microphone. The output current from the microphone is thus modulated by the sound waves, as desired.

#### **EXAMPLE 1.11** Assessing System Time Invariance

Determine the time invariance of the following systems: (a) y(t) = x(t)u(t) and (b)  $y(t) = \frac{d}{dt}x(t)$ .

(a) In this case, the output equals the input for  $t \ge 0$  and is otherwise zero. Clearly, the input is being modified by a time-dependent function, so the system is likely time variant. We can prove that the system is not time invariant through a counterexample. Letting  $x_1(t) = \delta(t+1)$ , we see that  $y_1(t) = 0$ . However,  $x_2(t) = x_1(t-2) = \delta(t-1)$  produces an output of  $y_2(t) = \delta(t-1)$ , which does equal  $y_1(t-2) = 0$  as time-invariance would require. Thus, y(t) = x(t)u(t) is a time variant system.

(b) Although it appears that x(t) is being modified by a time-dependent function, this is not the case. The output of this system is simply the slope of the input. If the input is delayed, so too is the output. Applying input x(t) to the system produces output  $y(t) = \frac{d}{dt}x(t)$ ; delaying this output by *T* produces  $y(t - T) = \frac{d}{d(t-T)}x(t - T) = \frac{d}{dt}x(t - T)$ . This is just the output of the system to a delayed input x(t - T). Since the *T*-delayed output of the system to input x(t) equals the output of the system to the *T*-delayed input x(t - T), the system is time invariant.

#### DRILL 1.14 A Time-Variant System

Show that a system described by the following equation is a time-varying-parameter system:

$$y(t) = (\sin t)x(t-2)$$

[*Hint:* Show that the system fails to satisfy the time-invariance property.]

#### 1.7-3 Instantaneous and Dynamic Systems

As observed earlier, a system's output at any instant t generally depends on the entire past input. However, in a special class of systems, the output at any instant t depends only on its input at that

#### 104 CHAPTER 1 SIGNALS AND SYSTEMS

instant. In resistive networks, for example, any output of the network at some instant t depends only on the input at the instant t. In these systems, past history is irrelevant in determining the response. Such systems are said to be *instantaneous* or *memoryless* systems. More precisely, a system is said to be instantaneous (or memoryless) if its output at any instant t depends, at most, on the strength of its input(s) at the same instant t, and not on any past or future values of the input(s). Otherwise, the system is said to be *dynamic* (or a system with memory). A system whose response at t is completely determined by the input signals over the past T seconds [interval from (t-T) to t] is a *finite-memory system* with a memory of T seconds. Networks containing inductive and capacitive elements generally have infinite memory because the response of such networks at any instant t is determined by their inputs over the entire past  $(-\infty, t)$ . This is true for the RC circuit of Fig. 1.26.

# **EXAMPLE 1.12** Assessing System Memory

Determine whether the following systems are memoryless: (a) y(t-1) = 2x(t-1), (b)  $y(t) = \frac{d}{dt}x(t)$ , and (c) y(t) = (t-1)x(t).

(a) In this case, the output at time t - 1 is just twice the input at the same time t - 1. Since the output at a particular time depends only on the strength of the input at the same time, the system is memoryless.

(b) Although it appears that the output y(t) at time *t* depends on the input x(t) at the same time *t*, we know that the slope (derivative) of x(t) cannot be determined solely from a single point. There must be some memory, even if infinitesimally small, involved. This is confirmed by using the fundamental theorem of calculus to express the system as

$$y(t) = \lim_{T \to 0} \frac{x(t) - x(t - T)}{T}$$

Since the output at a particular time depends on more than just the input at the same time, the system is not memoryless.

(c) The output y(t) at time t is just the input x(t) at the same time t multiplied by the (time-dependent) coefficient t - 1. Since the output at a particular time depends only on the strength of the input at the same time, the system is memoryless.

# 1.7-4 Causal and Noncausal Systems

A *causal* (also known as a *physical* or *nonanticipative*) system is one for which the output at any instant  $t_0$  depends only on the value of the input x(t) for  $t \le t_0$ . In other words, the value of the output at the present instant depends only on the past and present values of the input x(t), not on its future values. To put it simply, in a causal system the output cannot start before the input is applied. If the response starts before the input, it means that the system knows the input in the

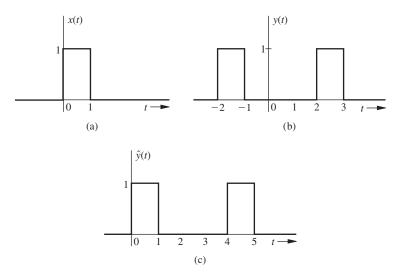


Figure 1.30 Input-output of a noncausal system and the causal output achieved by delay.

future and acts on this knowledge before the input is applied. A system that violates the condition of causality is called a *noncausal* (or *anticipative*) system.

Any practical system that operates in real time<sup>†</sup> must necessarily be causal. We do not yet know how to build a system that can respond to future inputs (inputs not yet applied). A noncausal system is a prophetic system that knows the future input and acts on it in the present. Thus, if we apply an input starting at t = 0 to a noncausal system, the output would begin even before t = 0. For example, consider the system specified by

$$y(t) = x(t-2) + x(t+2)$$
(1.26)

For the input x(t) illustrated in Fig. 1.30a, the output y(t), as computed from Eq. (1.26) (shown in Fig. 1.30b), starts even before the input is applied. Equation (1.26) shows that y(t), the output at t, is given by the sum of the input values 2 seconds before and 2 seconds after t (at t - 2 and t + 2, respectively). But if we are operating the system in real time at t, we do not know what the value of the input will be 2 seconds later. Thus it is impossible to implement this system in real time. For this reason, noncausal systems are unrealizable in *real time*.

### **EXAMPLE 1.13** Assessing System Causality

Determine whether the following systems are causal: (a) y(t) = x(-t), (b) y(t) = x(t+1), and (c) y(t+1) = x(t).

<sup>&</sup>lt;sup>†</sup> In real-time operations, the response to an input is essentially simultaneous (contemporaneous) with the input itself.

(a) Here, the output is a reflection of the input. We can easily use a counterexample to disprove the causality of this system. The input  $x(t) = \delta(t-1)$ , which is nonzero at t = 1, produces an output  $y(t) = \delta(t+1)$ , which is nonzero at t = -1, a time 2 seconds earlier than the input! Clearly the system is not causal.

(b) In this case, the output at time t depends on the input at future time of t + 1. Clearly the system is not causal.

(c) In this case, the output at time t + 1 depends on the input one second in the past, at time t. Since the output does not depend on future values of the input, the system is causal.

#### WHY STUDY NONCAUSAL SYSTEMS?

The foregoing discussion may suggest that noncausal systems have no practical purpose. This is not the case; they are valuable in the study of systems for several reasons. First, noncausal systems *are* realizable when the independent variable is other than "time" (e.g., *space*). Consider, for example, an electric charge of density q(x) placed along the x axis for  $x \ge 0$ . This charge density produces an electric field E(x) that is present at every point on the x axis from  $x = -\infty$  to  $\infty$ . In this case the input [i.e., the charge density q(x)] starts at x = 0, but its output [the electric field E(x)] begins before x = 0. Clearly, this space-charge system is noncausal. This discussion shows that only temporal systems (systems with time as independent variable) must be causal to be realizable. The terms "before" and "after" have a special connection to causality only when the independent variable is time. This connection is lost for variables other than time. Nontemporal systems, such as those occurring in optics, can be noncausal and still realizable.

Moreover, even for temporal systems, such as those used for signal processing, the study of noncausal systems is important. In such systems we may have all input data prerecorded. This often happens with speech, geophysical, and meteorological signals, and with space probes. In such cases, the input's future values are available to us. For example, suppose we had a set of input signal records available for the system described by Eq. (1.26). We can then compute y(t) since, for any t, we need only refer to the records to find the input's value 2 seconds before and 2 seconds after t. Thus, noncausal systems can be realized, although not in real time. We may therefore be able to realize a noncausal system, provided we are willing to accept a time delay in the output. Consider a system whose output  $\hat{y}(t)$  is the same as y(t) in Eq. (1.26) delayed by 2 seconds (Fig. 1.30c), so that

$$\hat{y}(t) = y(t-2) = x(t-4) + x(t)$$

Here the value of the output  $\hat{y}$  at any instant t is the sum of the values of the input x at t and at the instant 4 seconds earlier [at (t - 4)]. In this case, the output at any instant t does not depend on future values of the input, and the system is causal. The output of this system, which is  $\hat{y}(t)$ , is identical to that in Eq. (1.26) or Fig. 1.30b except for a delay of 2 seconds. Thus, a noncausal system may be realized or satisfactorily approximated in real time by using a causal system with a delay.

A third reason for studying noncausal systems is that they provide an upper bound on the performance of causal systems. For example, if we wish to design a filter for separating a signal from noise, then the optimum filter is invariably a noncausal system. Although unrealizable, this



Noncausal systems are realizable with time delay!

noncausal system's performance acts as the upper limit on what can be achieved and gives us a standard for evaluating the performance of causal filters.

At first glance, noncausal systems may seem to be inscrutable. Actually, there is nothing mysterious about these systems and their approximate realization through physical systems with delay. If we want to know what will happen one year from now, we have two choices: go to a prophet (an unrealizable person) who can give the answers instantly, or go to a wise man and allow him a delay of one year to give us the answer! If the wise man is truly wise, he may even be able, by studying trends, to shrewdly guess the future very closely with a delay of less than a year. Such is the case with noncausal systems—nothing more and nothing less.

#### DRILL 1.15 A Noncausal System

Show that a system described by the following equation is noncausal:

$$y(t) = \int_{t-5}^{t+5} x(\tau) d\tau$$

Show that this system can be realized physically if we accept a delay of 5 seconds in the output.

#### 1.7-5 Continuous-Time and Discrete-Time Systems

Signals defined or specified over a continuous range of time are *continuous-time signals*, denoted by symbols x(t), y(t), and so on. Systems whose inputs and outputs are continuous-time signals are *continuous-time systems*. On the other hand, signals defined only at discrete instants of time  $t_0, t_1, t_2, \ldots, t_n, \ldots$  are *discrete-time signals*, denoted by the symbols  $x(t_n)$ ,  $y(t_n)$ , and so on, where *n* is some integer. Systems whose inputs and outputs are discrete-time signals are *discrete-time systems*. A digital computer is a familiar example of this type of system. In practice, discrete-time signals can arise from sampling continuous-time signals. For example, when the sampling is

#### 108 CHAPTER 1 SIGNALS AND SYSTEMS

uniform, the discrete instants  $t_0, t_1, t_2, \ldots$  are uniformly spaced so that

$$t_{k+1} - t_k = T$$
 for all  $k$ 

In such case, the discrete-time signals represented by the samples of continuous-time signals x(t), y(t), and so on can be expressed as x(nT), y(nT), and so on; for convenience, we further simplify this notation to  $x[n], y[n], \ldots$ , where it is understood that x[n] = x(nT) and that *n* is some integer. A typical discrete-time signal is shown in Fig. 1.31. A discrete-time signal may also be viewed as a sequence of numbers  $\ldots, x[-1], x[0], x[1], x[2], \ldots$ . Thus, a discrete-time system may be seen as processing a sequence of numbers x[n] and yielding as an output another sequence of numbers y[n].

Discrete-time signals arise naturally in situations that are inherently discrete time, such as population studies, amortization problems, national income models, and radar tracking. They may also arise as a result of sampling continuous-time signals in sampled data systems, digital filtering, and the like. Digital filtering is a particularly interesting application in which continuous-time signals are processed by using discrete-time systems, as shown in Fig. 1.32. A continuous-time signal x(t) is first sampled to convert it into a discrete-time signal x[n], which then is processed by the discrete-time system to yield a discrete-time output y[n]. A continuous-time signal y(t) is finally constructed from y[n]. In this manner, we can process a continuous-time signal with an appropriate discrete-time system such as a digital computer. Because discrete-time systems have several significant advantages over continuous-time systems, there is an accelerating trend toward processing continuous-time signals with discrete-time systems.

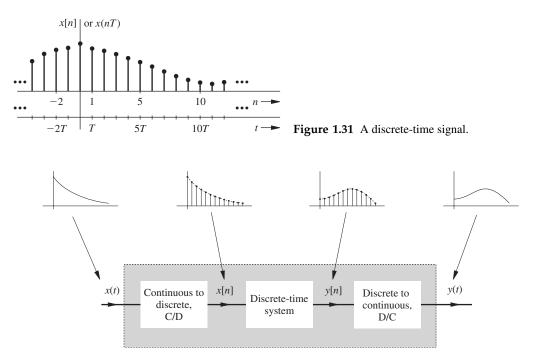


Figure 1.32 Processing continuous-time signals by discrete-time systems.

#### 1.7-6 Analog and Digital Systems


Analog and digital signals are discussed in Sec. 1.3-2. A system whose input and output signals are analog is an *analog system*; a system whose input and output signals are digital is a *digital system*. A digital computer is an example of a digital (binary) system. Observe that a digital computer is a digital as well as a discrete-time system.

#### 1.7-7 Invertible and Noninvertible Systems

A system S performs certain operation(s) on input signal(s). If we can obtain the input x(t) back from the corresponding output y(t) by some operation, the system S is said to be *invertible*. When several different inputs result in the same output (as in a rectifier), it is impossible to obtain the input from the output, and the system is *noninvertible*. Therefore, for an invertible system, it is essential that every input have a unique output so that there is a one-to-one mapping between an input and the corresponding output. The system that achieves the inverse operation [of obtaining x(t) from y(t)] is the *inverse system* for S. For instance, if S is an ideal integrator, then its inverse system is an ideal differentiator. Consider a system S connected in tandem with its inverse  $S_i$ , as shown in Fig. 1.33. The input x(t) to this tandem system results in signal y(t) at the output of S, and the signal y(t), which now acts as an input to  $S_i$ , yields back the signal x(t) at the output of  $S_i$ . Thus,  $S_i$  undoes the operation of S on x(t), yielding back x(t). A system whose output is equal to the input (for all possible inputs) is an *identity* system. Cascading a system with its inverse system, as shown in Fig. 1.33, results in an identity system.

In contrast, a rectifier, specified by an equation y(t) = |x(t)|, is noninvertible because the rectification operation cannot be undone.

Inverse systems are very important in signal processing. In many applications, the signals are distorted during the processing, and it is necessary to undo the distortion. For instance, in transmission of data over a communication channel, the signals are distorted owing to non-ideal frequency response and finite bandwidth of a channel. It is necessary to restore the signal as closely as possible to its original shape. Such equalization is also used in audio systems and photographic systems.

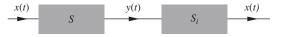

**Figure 1.33** A cascade of a system with its inverse results in an identity system.

#### **EXAMPLE 1.14** Assessing System Invertibility

Determine whether the following systems are invertible: (a) y(t) = x(-t), (b) y(t) = tx(t), and (c)  $y(t) = \frac{d}{dt}x(t)$ .

(a) Here, the output is a reflection of the input, which does not cause any loss to the input. The input can, in fact, be exactly recovered by simply reflecting the output [x(t) = y(-t)], which is to say that a reflecting system is its own inverse. Thus, y(t) = x(-t) is an invertible system.

#### 110 CHAPTER 1 SIGNALS AND SYSTEMS

(b) In this case, one might be tempted to recover the input from the output as  $x(t) = \frac{1}{t}y(t)$ . This approach works almost everywhere, except at t = 0 where the input value x(0) cannot be recovered. Due to this single lost point, the system y(t) = tx(t) is not invertible.

(c) Differentiation eliminates any dc component. For example, the inputs  $x_1(t) = 1$  and  $x_2(t) = 2$  both produce the same output y(t) = 0. Given only y(t) = 0, it is impossible to know if the original input was  $x_1(t) = 1$ ,  $x_2(t) = 2$ , or something else entirely. Since unique inputs do produce unique outputs, we know that  $y(t) = \frac{d}{dt}x(t)$  is not an invertible system.

#### 1.7-8 Stable and Unstable Systems

Systems can also be classified as *stable* or *unstable* systems. Stability can be *internal* or *external*. If every *bounded input* applied at the input terminal results in a *bounded output*, the system is said to be stable *externally*. External stability can be ascertained by measurements at the external terminals (input and output) of the system. This type of stability is also known as the stability in the BIBO (bounded-input/bounded-output) sense. The concept of internal stability is postponed to Ch. 2 because it requires some understanding of internal system behavior, introduced in that chapter.

#### EXAMPLE 1.15 Assessing System BIBO Stability

Determine whether the following systems are BIBO-stable: (a)  $y(t) = x^2(t)$ , (b) y(t) = tx(t), and (c)  $y(t) = \frac{d}{dt}x(t)$ .

(a) This system squares an input to produce the output. If the input is bounded, which is to say that  $|x(t)| \le M_x < \infty$  for all *t*, then we see that

$$|y(t)| = |x^{2}(t)| = |x(t)|^{2} \le M_{x}^{2} < \infty$$

Since the output amplitude is guaranteed to be bounded for any bounded-amplitude input, the system  $y(t) = x^2(t)$  is BIBO-stable.

(b) We can prove that y(t) = tx(t) is not BIBO-stable with a simple example. The bounded-amplitude input x(t) = u(t) produces the output y(t) = tu(t) whose amplitude grows to infinity as  $t \to \infty$ . Thus, y(t) = tx(t) is a BIBO-unstable system.

(c) We can prove that  $y(t) = \frac{d}{dt}x(t)$  is not BIBO-stable with an example. The bounded-amplitude input x(t) = u(t) produces the output  $y(t) = \delta(t)$  whose amplitude is infinite at t = 0. Thus,  $y(t) = \frac{d}{dt}x(t)$  is a BIBO-unstable system.

#### DRILL 1.16 A Noninvertible BIBO-Stable System


Show that a system described by the equation  $y(t) = x^2(t)$  is noninvertible but BIBO-stable.

# **1.8 System Model: Input-Output Description**

A system description in terms of the measurements at the input and output terminals is called the *input–output description*. As mentioned earlier, systems theory encompasses a variety of systems, such as electrical, mechanical, hydraulic, acoustic, electromechanical, and chemical, as well as social, political, economic, and biological. The first step in analyzing any system is the construction of a system model, which is a mathematical expression or a rule that satisfactorily approximates the dynamical behavior of the system. In this chapter we shall consider only continuous-time systems. Modeling of discrete-time systems is discussed in Ch. 3.

#### **1.8-1 Electrical Systems**

To construct a system model, we must study the relationships between different variables in the system. In electrical systems, for example, we must determine a satisfactory model for the voltage-current relationship of each element, such as Ohm's law for a resistor. In addition, we must determine the various constraints on voltages and currents when several electrical elements are interconnected. These are the laws of interconnection—the well-known Kirchhoff laws for voltage and current (KVL and KCL). From all these equations, we eliminate unwanted variables to obtain equation(s) relating the desired output variable(s) to the input(s). The following examples demonstrate the procedure of deriving input–output relationships for some LTI electrical systems.

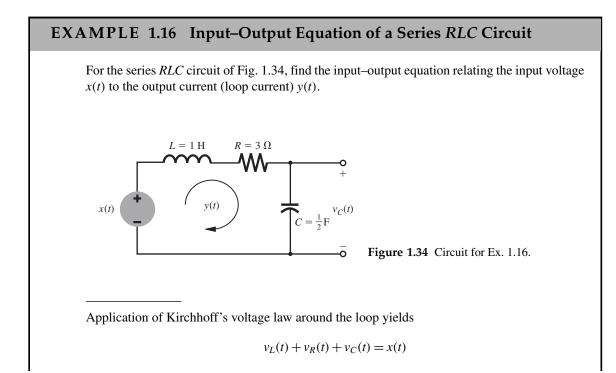

#### 112 CHAPTER 1 SIGNALS AND SYSTEMS

By using the voltage-current laws of each element (inductor, resistor, and capacitor), we can express this equation as

$$\frac{dy(t)}{dt} + 3y(t) + 2\int_{-\infty}^{t} y(\tau) d\tau = x(t)$$
(1.27)

Differentiating both sides of this equation, we obtain

$$\frac{d^2y(t)}{dt^2} + 3\frac{dy(t)}{dt} + 2y(t) = \frac{dx(t)}{dt}$$
(1.28)

This differential equation is the input–output relationship between the output y(t) and the input x(t).

It proves convenient to use a compact notation D for the differential operator d/dt. This notation can be repeatedly applied. Thus,

$$\frac{dy(t)}{dt} \equiv Dy(t), \qquad \frac{d^2y(t)}{dt^2} \equiv D^2y(t), \qquad \dots, \qquad \frac{d^Ny(t)}{dt^N} \equiv D^Ny(t)$$

With this notation, Eq. (1.28) can be expressed as

$$(D^{2} + 3D + 2)y(t) = Dx(t)$$
(1.29)

The differential operator is the inverse of the integral operator, so we can use the operator 1/D to represent integration.<sup>†</sup>

$$\int_{-\infty}^{t} y(\tau) \, d\tau \equiv \frac{1}{D} y(t)$$

$$\frac{d}{dt} \left[ \int_{-\infty}^{t} y(\tau) \, d\tau \right] = y(t)$$

<sup>&</sup>lt;sup>†</sup> Use of operator 1/D for integration generates some subtle mathematical difficulties because the operators D and 1/D do not commute. For instance, we know that D(1/D) = 1 because

However, (1/D)D is not necessarily unity. Use of Cramer's rule in solving simultaneous integro-differential equations will always result in cancellation of operators 1/D and D. This procedure may yield erroneous results when the factor D occurs in the numerator as well as in the denominator. This happens, for instance, in circuits with all-inductor loops or all-capacitor cut sets. To eliminate this problem, avoid the integral operation in system equations so that the resulting equations are differential rather than integro-differential. In electrical circuits, this can be done by using charge (instead of current) variables in loops containing capacitors and choosing current variables for loops without capacitors. In the literature this problem of commutativity of D and 1/D is largely ignored. As mentioned earlier, such a procedure gives erroneous results only in special systems, such as the circuits with all-inductor loops or all-capacitor cut sets. Fortunately such systems constitute a very small fraction of the systems we deal with. For further discussion of this topic and a correct method of handling problems involving integrals, see [4].

Consequently, Eq. (1.27) can be expressed as

$$\left(D+3+\frac{2}{D}\right)y(t) = x(t)$$

Multiplying both sides by D to differentiate the expression, we obtain

$$(D^2 + 3D + 2)y(t) = Dx(t)$$


which is identical to Eq. (1.29).


Recall that Eq. (1.29) is not an algebraic equation, and  $D^2 + 3D + 2$  is not an algebraic term that multiplies y(t); it is an operator that operates on y(t). It means that we must perform the following operations on y(t): take the second derivative of y(t) and add to it 3 times the first derivative of y(t) and 2 times y(t). Clearly, a polynomial in D multiplied by y(t) represents a certain differential operation on y(t).

### **EXAMPLE 1.17** Input–Output Equation of a Series RC Circuit

Using operator notation, find the equation relating input to output for the series *RC* circuit of Fig. 1.35 if the input is the voltage x(t) and output is

- (a) the loop current i(t)
- (b) the capacitor voltage y(t)

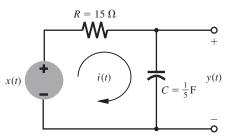

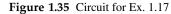

(a) The loop equation for the circuit is

$$Ri(t) + \frac{1}{C} \int_{-\infty}^{t} i(\tau) d\tau = x(t)$$

or

$$15i(t) + 5\int_{-\infty}^{t} i(\tau) d\tau = x(t)$$

With operator notation, this equation can be expressed as

$$15i(t) + \frac{5}{D}i(t) = x(t)$$
(1.30)

(b) Multiplying both sides of Eq. (1.30) by D (i.e., differentiating the equation), we obtain

$$(15D+5)i(t) = Dx(t)$$

Using the fact that  $i(t) = C \frac{dy(t)}{dt} = \frac{1}{5}Dy(t)$ , simple substitution yields

$$(3D+1)y(t) = x(t)$$
(1.31)

# DRILL 1.17 Input–Output Equation of a Series *RLC* Circuit with Inductor Voltage as Output

If the inductor voltage  $v_L(t)$  is taken as the output, show that the *RLC* circuit in Fig. 1.34 has an input–output equation of  $(D^2 + 3D + 2)v_L(t) = D^2x(t)$ .

# DRILL 1.18 Input–Output Equation of a Series *RC* Circuit with Capacitor Voltage as Output

If the capacitor voltage  $v_C(t)$  is taken as the output, show that the *RLC* circuit in Fig. 1.34 has an input–output equation of  $(D^2 + 3D + 2)v_C(t) = 2x(t)$ .

#### 1.8-2 Mechanical Systems

Planar motion can be resolved into translational (rectilinear) motion and rotational (torsional) motion. Translational motion will be considered first. We shall restrict ourselves to motions in one dimension.

#### TRANSLATIONAL SYSTEMS

The basic elements used in modeling translational systems are ideal masses, linear springs, and dashpots providing viscous damping. The laws of various mechanical elements are now discussed.

For a mass M (Fig. 1.36a), a force x(t) causes a motion y(t) and acceleration  $\ddot{y}(t)$ . From Newton's law of motion,

$$x(t) = M\ddot{y}(t) = M\frac{d^2y(t)}{dt^2} = MD^2y(t)$$

The force x(t) required to stretch (or compress) a *linear spring* (Fig. 1.36b) by an amount y(t) is given by

$$x(t) = Ky(t)$$

where *K* is the *stiffness* of the spring.

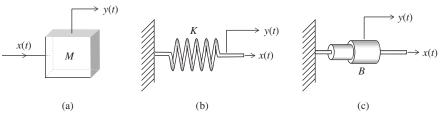


Figure 1.36 Some elements in translational mechanical systems.


For a linear dashpot (Fig. 1.36c), which operates by virtue of viscous friction, the force moving the dashpot is proportional to the relative velocity  $\dot{y}(t)$  of one surface with respect to the other. Thus


$$x(t) = B\dot{y}(t) = B\frac{dy(t)}{dt} = BDy(t)$$

where B is the *damping coefficient* of the dashpot or the viscous friction.

# **EXAMPLE 1.18** Input-Output Equation for a Translational Mechanical System

Find the input–output relationship for the translational mechanical system shown in Fig. 1.37a or its equivalent in Fig. 1.37b. The input is the force x(t), and the output is the mass position y(t).

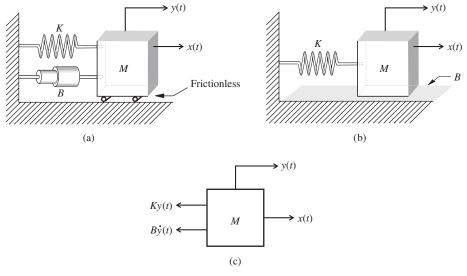

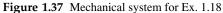

#### 116 CHAPTER 1 SIGNALS AND SYSTEMS

In mechanical systems it is helpful to draw a free-body diagram of each junction, which is a point at which two or more elements are connected. In Fig. 1.37, the point representing the mass is a junction. The displacement of the mass is denoted by y(t). The spring is also stretched by the amount y(t), and therefore it exerts a force -Ky(t) on the mass. The dashpot exerts a force  $-B\dot{y}(t)$  on the mass, as shown in the free-body diagram (Fig. 1.37c). By Newton's second law, the net force must be  $M\ddot{y}(t)$ . Therefore,

$$M\ddot{y}(t) = -B\dot{y}(t) - Ky(t) + x(t)$$

or

$$(MD^2 + BD + K)y(t) = x(t)$$

#### **ROTATIONAL SYSTEMS**

In rotational systems, the motion of a body may be defined as its motion about a certain axis. The variables used to describe rotational motion are torque (in place of force), angular position (in place of linear position), angular velocity (in place of linear velocity), and angular acceleration (in place of linear acceleration). The system elements are *rotational mass* or *moment of inertia* (in place of mass) and *torsional springs* and *torsional dashpots* (in place of linear springs and dashpots). The terminal equations for these elements are analogous to the corresponding equations for translational elements. If J is the moment of inertia (or rotational mass) of a rotating body about a certain axis, then the external torque required for this motion is equal to J (rotational mass) times the angular acceleration. If  $\theta(t)$  is the angular position of the body,  $\ddot{\theta}(t)$  is its angular acceleration, and

torque = 
$$J\ddot{\theta}(t) = J\frac{d^2\theta(t)}{dt^2} = JD^2\theta(t)$$

Similarly, if K is the stiffness of a torsional spring (per unit angular twist), and  $\theta$  is the angular displacement of one terminal of the spring with respect to the other, then

torque = 
$$K\theta(t)$$

Finally, the torque due to viscous damping of a torsional dashpot with damping coefficient B is

torque = 
$$B\dot{\theta}(t) = BD\theta(t)$$

# **EXAMPLE 1.19 Input-Output Equation for Aircraft Roll Angle**

The attitude of an aircraft can be controlled by three sets of surfaces (shown shaded in Fig. 1.38): elevators, rudder, and ailerons. By manipulating these surfaces, one can set the aircraft on a desired flight path. The roll angle  $\varphi(t)$  can be controlled by deflecting in the opposite direction the two aileron surfaces as shown in Fig. 1.38. Assuming only rolling motion, find the equation relating the roll angle  $\varphi(t)$  to the input (deflection)  $\theta(t)$ .

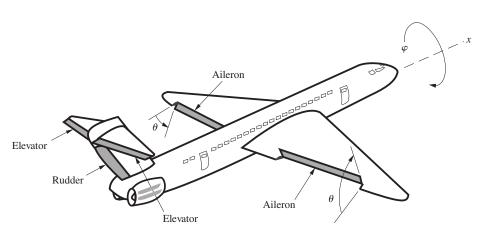


Figure 1.38 Attitude control of an airplane.

J

The aileron surfaces generate a torque about the roll axis proportional to the aileron deflection angle  $\theta(t)$ . Let this torque be  $c\theta(t)$ , where c is the constant of proportionality. Air friction dissipates the torque  $B\dot{\varphi}(t)$ . The torque available for rolling motion is then  $c\theta(t) - B\dot{\varphi}(t)$ . If J is the moment of inertia of the plane about the x axis (roll axis), then

net torque = 
$$J\ddot{\varphi}(t) = c\theta(t) - B\dot{\varphi}(t)$$

and

$$J\frac{d^{2}\varphi(t)}{dt^{2}} + B\frac{d\varphi(t)}{dt} = c\,\theta(t) \qquad \text{or} \qquad (JD^{2} + BD)\varphi(t) = c\theta(t)$$

This is the desired equation relating the output (roll angle  $\varphi(t)$ ) to the input (aileron angle  $\theta(t)$ ).


The roll velocity  $\omega(t)$  is  $\dot{\varphi}(t)$ . If the desired output is the roll velocity  $\omega(t)$  rather than the roll angle  $\varphi(t)$ , then the input–output equation would be

$$\frac{d\omega(t)}{dt} + B\omega(t) = c\theta(t) \quad \text{or} \quad (JD+B)\omega(t) = c\theta(t)$$

# DRILL 1.19 Input–Output Equation of a Rotational Mechanical System

Torque  $\mathcal{T}(t)$  is applied to the rotational mechanical system shown in Fig. 1.39a. The torsional spring stiffness is *K*; the rotational mass (the cylinder's moment of inertia about the shaft) is *J*; the viscous damping coefficient between the cylinder and the ground is *B*. Find the equation

relating the output angle  $\theta(t)$  to the input torque  $\mathcal{T}(t)$ . [*Hint:* A free-body diagram is shown in Fig. 1.39b.]

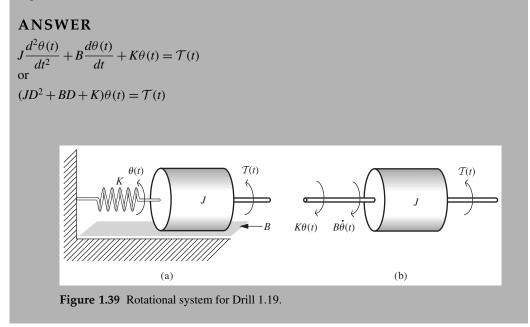

# 1.8-3 Electromechanical Systems

A wide variety of electromechanical systems is used to convert electrical signals into mechanical motion (mechanical energy) and vice versa. Here we consider a rather simple example of an armature-controlled dc motor driven by a current source x(t), as shown in Fig. 1.40a. The torque T(t) generated in the motor is proportional to the armature current x(t). Therefore,

$$\mathcal{T}(t) = K_T x(t)$$

where  $K_T$  is a constant of the motor. This torque drives a mechanical load whose free-body diagram is shown in Fig. 1.40b. The viscous damping (with coefficient *B*) dissipates a torque  $B\dot{\theta}(t)$ . If *J* is the moment of inertia of the load (including the rotor of the motor), then the net torque  $\mathcal{T}(t) - B\dot{\theta}(t)$ must be equal to  $J\ddot{\theta}(t)$ :

$$J\ddot{\theta}(t) = \mathcal{T}(t) - B\dot{\theta}(t)$$

Thus,

$$(JD^2 + BD)\theta(t) = \mathcal{T}(t) = K_T x(t)$$

which in conventional form can be expressed as

$$J\frac{d^2\theta(t)}{dt^2} + B\frac{d\theta(t)}{dt} = K_T x(t)$$
(1.32)

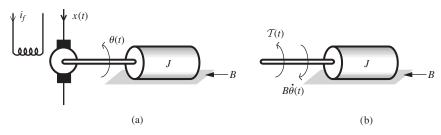


Figure 1.40 Armature-controlled dc motor.

# **1.9 INTERNAL AND EXTERNAL DESCRIPTIONS OF A SYSTEM**

The input-output relationship of a system is an external description of that system. We have found an external description (not the *internal description*) of systems in all the examples discussed so far. This may puzzle the reader because in each of these cases, we derived the input-output relationship by analyzing the internal structure of that system. Why is this not an internal description? What makes a description internal? Although it is true that we did find the input-output description by internal analysis of the system, we did so strictly for convenience. We could have obtained the input-output description by making observations at the external (input and output) terminals, for example, by measuring the output for certain inputs, such as an impulse or a sinusoid. A description that can be obtained from measurements at the external terminals (even when the rest of the system is sealed inside an inaccessible black box) is an external description. Clearly, the input-output description is an external description. What, then, is an internal description? An internal description is capable of providing complete information about all possible signals in the system. An external description may not give such complete information. An external description can always be found from an internal description, but the converse is not necessarily true. We shall now give an example to clarify the distinction between an external and an internal description.

Let the circuit in Fig. 1.41a with the input x(t) and the output y(t) be enclosed inside a "black box" with only the input and the output terminals accessible. To determine its external description, let us apply a known voltage x(t) at the input terminals and measure the resulting output voltage y(t).

Let us also assume that there is some initial charge  $Q_0$  present on the capacitor. The output voltage will generally depend on both, the input x(t) and the initial charge  $Q_0$ . To compute the output resulting because of the charge  $Q_0$ , assume the input x(t) = 0 (short across the input). In this case, the currents in the two 2  $\Omega$  resistors in the upper and the lower branches at the output terminals are equal and opposite because of the balanced nature of the circuit. Clearly, the capacitor charge results in zero voltage at the output.<sup>†</sup>

<sup>&</sup>lt;sup>†</sup> The output voltage y(t) resulting because of the capacitor charge [assuming x(t) = 0] is the zero-input response, which, as argued above, is zero. The output component due to the input x(t) (assuming zero initial capacitor charge) is the zero-state response. Complete analysis of this problem is given later in Ex. 1.21.

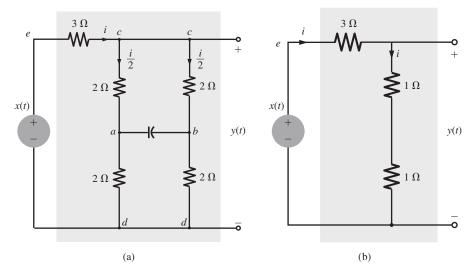


Figure 1.41 A system that cannot be described by external measurements.

Now, to compute the output y(t) resulting from the input voltage x(t), we assume zero initial capacitor charge (short across the capacitor terminals). The current i(t) (Fig. 1.41a), in this case, divides equally between the two parallel branches because the circuit is balanced. Thus, the voltage across the capacitor continues to remain zero. Therefore, for the purpose of computing the current i(t), the capacitor may be removed or replaced by a short. The resulting circuit is equivalent to that shown in Fig. 1.41b, which shows that the input x(t) sees a load of 5  $\Omega$ , and

$$i(t) = \frac{1}{5}x(t)$$

Also, because y(t) = 2i(t),

$$y(t) = \frac{2}{5}x(t)$$

This is the total response. Clearly, for the external description, the capacitor does not exist. No external measurement or external observation can detect the presence of the capacitor. Furthermore, if the circuit is enclosed inside a "black box" so that only the external terminals are accessible, it is impossible to determine the currents (or voltages) inside the circuit from external measurements or observations. An internal description, however, can provide every possible signal inside the system. In Ex. 1.21, we shall find the internal description of this system and show that it is capable of determining every possible signal in the system.

For most systems, the external and internal descriptions are equivalent, but there are a few exceptions, as in the present case, where the external description gives an inadequate picture of the system. This happens when the system is *uncontrollable* and/or *unobservable*.

Figure 1.42 shows structural representations of simple uncontrollable and unobservable systems. In Fig. 1.42a, we note that part of the system (subsystem  $S_2$ ) inside the box cannot be controlled by the input x(t). In Fig. 1.42b, some of the system outputs (those in subsystem  $S_2$ ) cannot be observed from the output terminals. If we try to describe either of these systems by applying an external input x(t) and then measuring the output y(t), the measurement will not characterize the complete system but only the part of the system (here  $S_1$ ) that is both controllable

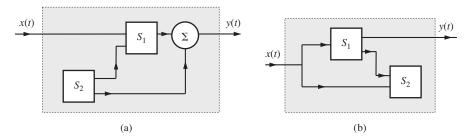


Figure 1.42 Structures of uncontrollable and unobservable systems.

and observable (linked to both the input and output). Such systems are undesirable in practice and should be avoided in any system design. The system in Fig. 1.41a can be shown to be neither controllable nor observable. It can be represented structurally as a combination of the systems in Figs. 1.42a and 1.42b.

# **1.10 INTERNAL DESCRIPTION: THE STATE-SPACE DESCRIPTION**

We shall now introduce the *state-space* description of a linear system, which is an internal description of a system. In this approach, we identify certain key variables, called the *state variables*, of the system. These variables have the property that every possible signal in the system can be expressed as a linear combination of these state variables. For example, we can show that every possible signal in a passive *RLC* circuit can be expressed as a linear combination of independent capacitor voltages and inductor currents, which, therefore, are state variables for the circuit.

To illustrate this point, consider the network in Fig. 1.43. We identify two state variables: the capacitor voltage  $q_1$  and the inductor current  $q_2$ . If the values of  $q_1$ ,  $q_2$ , and the input x(t) are known at some instant t, we can demonstrate that every possible signal (current or voltage) in the circuit can be determined at t. For example, if  $q_1 = 10$ ,  $q_2 = 1$ , and the input x = 20 at some instant, the remaining voltages and currents at that instant will be

$$i_{1} = (x - q_{1})/1 = 20 - 10 = 10 A$$

$$v_{1} = x - q_{1} = 20 - 10 = 10 V$$

$$v_{2} = q_{1} = 10 V$$

$$i_{2} = q_{1}/2 = 5 A$$

$$i_{C} = i_{1} - i_{2} - q_{2} = 10 - 5 - 1 = 4 A$$

$$i_{3} = q_{2} = 1 A$$

$$v_{3} = 5q_{2} = 5 V$$

$$v_{L} = q_{1} - v_{3} = 10 - 5 = 5 V$$
(1.33)

Thus all signals in this circuit are determined. Clearly, state variables consist of the *key variables* in a system; a knowledge of the state variables allows one to determine every possible output of the system. Note that the *state-variable description is an internal description* of a system because it is capable of describing all possible signals in the system.

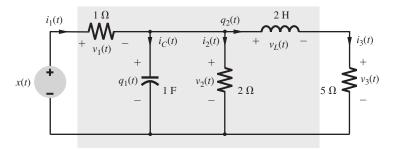


Figure 1.43 Choosing suitable initial conditions in a network.

# **EXAMPLE 1.20** State-Space Description of a System

This example illustrates how state equations may be natural and easier to determine than other descriptions, such as loop or node equations. Consider again the network in Fig. 1.43 with  $q_1$  and  $q_2$  as the state variables and write the state equations.

This can be done by simple inspection of Fig. 1.43. Since  $\dot{q}_1$  is the current through the capacitor,

$$\dot{q}_1 = i_C = i_1 - i_2 - q_2$$
  
=  $(x - q_1) - 0.5 q_1 - q_2$   
=  $-1.5 q_1 - q_2 + x$ 

Also  $2\dot{q_2}$ , the voltage across the inductor, is given by

$$2\dot{q}_2 = q_1 - v_3$$
  
=  $q_1 - 5q_2$ 

or

$$\dot{q}_2 = 0.5 q_1 - 2.5 q_2$$

Thus, the state equations are

$$\dot{q}_1 = -1.5 q_1 - q_2 + x$$
  
$$\dot{q}_2 = 0.5 q_1 - 2.5 q_2 \tag{1.34}$$

This is a set of two simultaneous first-order differential equations. This set of equations comprises the *state equations*. Once these equations have been solved for  $q_1$  and  $q_2$ , everything else in the circuit can be determined by using Eq. (1.33), which are known as the *output equations*. Thus, in this approach, we have two sets of equations, the state equations and the output equations. Once we have solved the state equations, all possible outputs can be obtained

from the output equations. In the input–output description, an *N*th-order system is described by an *N*th-order equation. In the state-variable approach, the same system is described by N simultaneous first-order state equations.<sup>†</sup>

#### **EXAMPLE 1.21** Controllability and Observability

Investigate the nature of state equations and the issue of controllability and observability for the circuit in Fig. 1.41a.

This circuit has only one capacitor and no inductors. Hence, there is only one state variable, the capacitor voltage q(t). Since C = 1 F, the capacitor current is  $\dot{q}$ . There are two sources in this circuit: the input x(t) and the capacitor voltage q(t). The response due to x(t), assuming q(t) = 0, is the zero-state response, which can be found from Fig. 1.44a, where we have shorted the capacitor [q(t) = 0]. The response due to q(t) assuming x(t) = 0, is the zero-input response, which can be found from Fig. 1.44b, where we have shorted x(t) to ensure x(t) = 0. It is now trivial to find both the components.

Figure 1.44a shows zero-state currents in every branch. It is clear that the input x(t) sees an effective resistance of 5  $\Omega$ , and, hence, the current through x(t) is x/5 A, which divides in the two parallel branches, resulting in the current x/10 through each branch.

Examining the circuit in Fig. 1.44b for the zero-input response, we note that the capacitor voltage is q and the current is  $\dot{q}$ . We also observe that the capacitor sees two loops in parallel, each with resistance 4  $\Omega$  and current  $\dot{q}/2$ . Interestingly, the 3  $\Omega$  branch is effectively shorted because the circuit is balanced, and thus the voltage across the terminals *cd* is zero. The total current in any branch is the sum of the currents in that branch in Figs. 1.44a and 1.44b (principle of superposition).

Branch Current Voltage  

$$ca \qquad \frac{x}{10} + \frac{\dot{q}}{2} \qquad 2\left(\frac{x}{10} + \frac{\dot{q}}{2}\right)$$

$$cb \qquad \frac{x}{10} - \frac{\dot{q}}{2} \qquad 2\left(\frac{x}{10} - \frac{\dot{q}}{2}\right)$$

$$ad \qquad \frac{x}{10} - \frac{\dot{q}}{2} \qquad 2\left(\frac{x}{10} - \frac{\dot{q}}{2}\right)$$

$$bd \qquad \frac{x}{10} + \frac{\dot{q}}{2} \qquad 2\left(\frac{x}{10} + \frac{\dot{q}}{2}\right)$$

$$ec \qquad \frac{x}{5} \qquad 3\left(\frac{x}{5}\right)$$

$$ed \qquad \frac{x}{5} \qquad x$$

$$(1.35)$$

<sup>&</sup>lt;sup>†</sup> This assumes the system to be controllable and observable. If it is not, the input–output description equation will be of an order lower than the corresponding number of state equations.

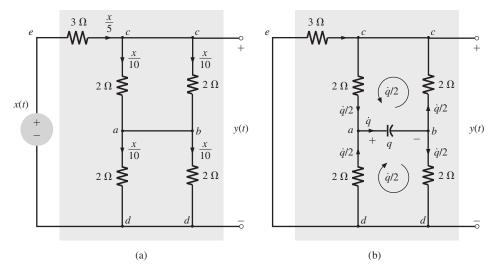


Figure 1.44 Analysis of a system that is neither controllable nor observable.

To find the state equation, we note that the current in branch *ca* is  $(x/10) + \dot{q}/2$  and the current in branch *cb* is  $(x/10) - \dot{q}/2$ . Hence, the equation around the loop *acba* is

$$q = 2\left[-\frac{x}{10} - \frac{\dot{q}}{2}\right] + 2\left[\frac{x}{10} - \frac{\dot{q}}{2}\right] = -2\dot{q}$$
$$\dot{q} = -0.5q \tag{1.36}$$

or

This is the desired state equation.

Substitution of  $\dot{q} = -0.5q$  in Eq. (1.35) shows that every possible current and voltage in the circuit can be expressed in terms of the state variable q and the input x, as desired. Hence, the set of Eq. (1.35) is the output equation for this circuit. Once we have solved the state equation [Eq. (1.36)] for q, we can determine every possible output in the circuit.

The output y(t) is given by

$$y(t) = 2\left[\frac{x}{10} - \frac{\dot{q}}{2}\right] + 2\left[\frac{x}{10} + \frac{\dot{q}}{2}\right] = \frac{2}{5}x(t)$$
(1.37)

A little examination of the state and the output equations indicates the nature of this system. Equation (1.36) shows that the state q(t) is independent of the input x(t); hence the system state q cannot be controlled by the input. Moreover, Eq. (1.37) shows that the output y(t) does not depend on the state q(t). Thus, the system state cannot be observed from the output terminals. Hence, the system is neither controllable nor observable. Such is not the case of other systems examined earlier. Consider, for example, the circuit in Fig. 1.43. The state equations [Eq. (1.34)] show that the states are influenced by the input directly or indirectly. Hence, the system is controllable. Moreover, as Eq. (1.33) shows, every possible output is expressed in terms of the state variables and the input. Hence, the states are also observable.

State-space techniques are useful not just because of their ability to provide internal system description, but for several other reasons, including the following.

- State equations of a system provide a mathematical model of great generality that can describe not just linear systems, but also nonlinear systems; not just time-invariant systems, but also time-varying parameter systems; not just SISO (single-input/single-output) systems, but also multiple-input/multiple-output (MIMO) systems. Indeed, state equations are ideally suited for the analysis, synthesis, and optimization of MIMO systems.
- 2. Compact matrix notation and the powerful techniques of linear algebra greatly facilitate complex manipulations. Without such features, many important results of the modern system theory would have been difficult to obtain. State equations can yield a great deal of information about a system even when they are not solved explicitly.
- 3. State equations lend themselves readily to digital computer simulation of complex systems of high order, with or without nonlinearities, and with multiple inputs and outputs.
- 4. For second-order systems (N = 2), a graphical method called *phase-plane analysis* can be used on state equations, whether they are linear or nonlinear.


The real benefits of the state-space approach, however, are realized for highly complex systems of large order. Much of the book is devoted to introduction of the basic concepts of linear systems analysis, which must necessarily begin with simpler systems without using the state-space approach. Chapter 10 deals with the state-space analysis of linear, time-invariant, continuous-time, and discrete-time systems.


### DRILL 1.20 State Equations for a Series RLC Circuit

Write the state equations for the series *RLC* circuit shown in Fig. 1.45, using the inductor current  $q_1(t)$  and the capacitor voltage  $q_2(t)$  as state variables. Express every voltage and current in this circuit as a linear combination of  $q_1$ ,  $q_2$ , and x.

#### ANSWERS

 $q_1 = -3q_1 - q_2 + x$  and  $q_2 = 2q_1$ .

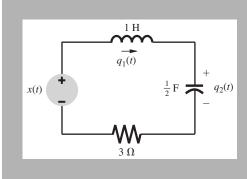

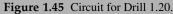

# **1.11 MATLAB: WORKING WITH FUNCTIONS**

Working with functions is fundamental to signals and systems applications. MATLAB provides several methods of defining and evaluating functions. An understanding and proficient use of these methods are therefore necessary and beneficial.

#### **1.11-1** Anonymous Functions

Many simple functions are most conveniently represented by using MATLAB anonymous functions. An anonymous function provides a symbolic representation of a function defined in terms of MATLAB operators, functions, or other anonymous functions. For example, consider defining the exponentially damped sinusoid  $f(t) = e^{-t} \cos(2\pi t)$ .

```
>> f = @(t) exp(-t).*cos(2*pi*t);
```

In this context, the @ symbol identifies the expression as an anonymous function, which is assigned a name of f. Parentheses following the @ symbol are used to identify the function's independent variables (input arguments), which in this case is the single time variable t. Input arguments, such as t, are local to the anonymous function and are not related to any workspace variables with the same names.

Once defined, f(t) can be evaluated simply by passing the input values of interest. For example,

>> t = 0; f(t) ans = 1

evaluates f(t) at t = 0, confirming the expected result of unity. The same result is obtained by passing t = 0 directly.

>> f(0) ans = 1

Vector inputs allow the evaluation of multiple values simultaneously. Consider the task of plotting f(t) over the interval  $(-2 \le t \le 2)$ . Gross function behavior is clear: f(t) should oscillate four times with a decaying envelope. Since accurate hand sketches are cumbersome, MATLAB-generated plots are an attractive alternative. As the following example illustrates, care must be taken to ensure reliable results.

Suppose vector t is chosen to include only the integers contained in  $(-2 \le t \le 2)$ , namely, [-2, -1, 0, 1, 2].

>> t = (-2:2);

This vector input is evaluated to form a vector output.

>> f(t) ans = 7.3891 2.7183 1.0000 0.3679 0.1353 The plot command graphs the result, which is shown in Fig. 1.46.


>> plot(t,f(t));
>> xlabel('t'); ylabel('f(t)'); grid;

Grid lines, added by using the grid command, aid feature identification. Unfortunately, the plot does not illustrate the expected oscillatory behavior. More points are required to adequately represent f(t).

The question, then, is how many points is enough?<sup>†</sup> If too few points are chosen, information is lost. If too many points are chosen, memory and time are wasted. A balance is needed. For oscillatory functions, plotting 20 to 200 points per oscillation is normally adequate. For the present case, t is chosen to give 100 points per oscillation.

>> t = (-2:0.01:2);

Again, the function is evaluated and plotted.

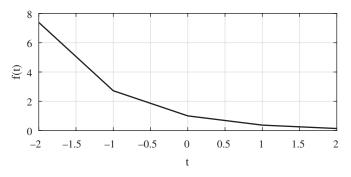

**Figure 1.46**  $f(t) = e^{-t} \cos(2\pi t)$  for t = (-2:2).

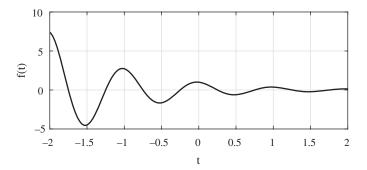


Figure 1.47  $f(t) = e^{-t} \cos(2\pi t)$  for t = (-2:0.01:2).

<sup>&</sup>lt;sup>†</sup> Sampling theory, presented later, formally addresses important aspects of this question.

>> plot(t,f(t));
>> xlabel('t'); ylabel('f(t)'); grid;

The result, shown in Fig. 1.47, is an accurate depiction of f(t).

#### 1.11-2 Relational Operators and the Unit Step Function

The unit step function u(t) arises naturally in many practical situations. For example, a unit step can model the act of turning on a system. With the help of relational operators, anonymous functions can represent the unit step function.

In MATLAB, a relational operator compares two items. If the comparison is true, a logical true (1) is returned. If the comparison is false, a logical false (0) is returned. Sometimes called indicator functions, relational operators indicates whether a condition is true. Six relational operators are available: <, >, <=, >=, ==, and  $\sim=$ .

The unit step function is readily defined using the >= relational operator.

>> u = @(t) 1.0.\*(t>=0);

Any function with a jump discontinuity, such as the unit step, is difficult to plot. Consider plotting u(t) by using t = (-2:2).

>> t = (-2:2); plot(t,u(t));
>> xlabel('t'); ylabel('u(t)');

Two significant problems are apparent in the resulting plot, shown in Fig. 1.48. First, MATLAB automatically scales plot axes to tightly bound the data. In this case, this normally desirable feature obscures most of the plot. Second, MATLAB connects plot data with lines, making a true jump discontinuity difficult to achieve. The coarse resolution of vector t emphasizes the effect by showing an erroneous sloping line between t = -1 and t = 0.

The first problem is corrected by vertically enlarging the bounding box with the axis command. The second problem is reduced, but not eliminated, by adding points to vector t.

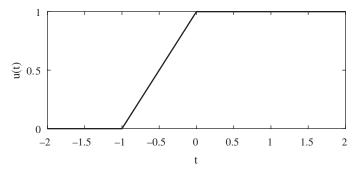


Figure 1.48 u(t) for t = (-2:2).

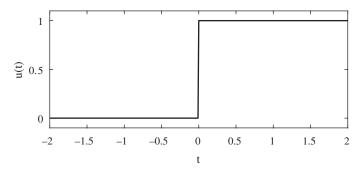


Figure 1.49 u(t) for t = (-2:0.01:2) with axis modification.


>> t = (-2:0.01:2); plot(t,u(t));
>> xlabel('t'); ylabel('u(t)');
>> axis([-2 2 -0.1 1.1]);

The four-element vector argument of axis specifies x axis minimum, x axis maximum, y axis minimum, and y axis maximum, respectively. The improved results are shown in Fig. 1.49.

Relational operators can be combined using logical AND, logical OR, and logical negation: &, |, and ~, respectively. For example, (t>0) & (t<1) and ~ ((t<=0) | (t>=1)) both test if 0 < t < 1. To demonstrate, consider defining and plotting the unit pulse p(t) = u(t) - u(t-1), as shown in Fig. 1.50:

>> p = @(t) 1.0.\*((t>=0)&(t<1)); >> t = (-1:0.01:2); plot(t,p(t)); >> xlabel('t'); ylabel('p(t) = u(t)-u(t-1)'); >> axis([-1 2 -.1 1.1]);

Since anonymous functions can be constructed using other anonymous functions, we could have used our previously defined unit step anonymous function to define p(t) as p = O(t) u(t)-u(t-1);

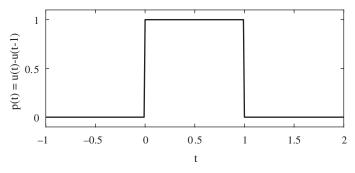

**Figure 1.50** p(t) = u(t) - u(t-1) over  $(-1 \le t \le 2)$ .

#### 130 CHAPTER 1 SIGNALS AND SYSTEMS

For scalar operands, MATLAB also supports two short-circuit logical constructs. A short-circuit logical AND is performed by using &&, and a short-circuit logical OR is performed by using ||. Short-circuit logical operators are often more efficient than traditional logical operators because they test the second portion of the expression only when necessary. That is, when scalar expression A is found false in (A&&B), scalar expression B is not evaluated, since a false result is already guaranteed. Similarly, scalar expression B is not evaluated when scalar expression A is found true in (A||B), since a true result is already guaranteed.

# 1.11-3 Visualizing Operations on the Independent Variable

Two operations on a function's independent variable are commonly encountered: shifting and scaling. Anonymous functions are well suited to investigate both operations.


Consider  $g(t) = f(t)u(t) = e^{-t}\cos(2\pi t)u(t)$ , a causal version of f(t). MATLAB easily multiplies anonymous functions. Thus, we create g(t) by multiplying our anonymous functions for f(t) and u(t).<sup>†</sup>

>> g = @(t) f(t).\*u(t);

A combined shifting and scaling operation is represented by g(at + b), where *a* and *b* are arbitrary real constants. As an example, consider plotting g(2t + 1) over  $(-2 \le t \le 2)$ . With a = 2, the function is compressed by a factor of 2, resulting in twice the oscillations per unit *t*. Adding the condition b > 0 shifts the waveform to the left. Given anonymous function g, an accurate plot is nearly trivial to obtain.


```
>> t = (-2:0.01:2);
>> plot(t,g(2*t+1)); xlabel('t'); ylabel('g(2t+1)'); grid;
```

Figure 1.51 confirms the expected waveform compression and left shift. As a final check, realize that function  $g(\cdot)$  turns on when the input argument is zero. Therefore, g(2t + 1) should turn on when 2t + 1 = 0 or at t = -0.5, a fact again confirmed by Fig. 1.51.

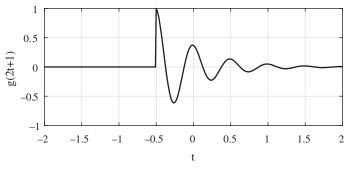


**Figure 1.51** g(2t+1) over  $(-2 \le t \le 2)$ .

<sup>&</sup>lt;sup>†</sup> Although we define g in terms of f and u, the function g will not change if we later change either f or u unless we subsequently redefine g as well.

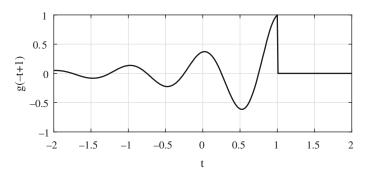

**Figure 1.52** g(-t+1) over  $(-2 \le t \le 2)$ .

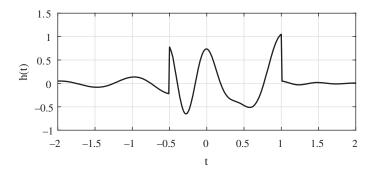

**Figure 1.53** h(t) = g(2t+1) + g(-t+1) over  $(-2 \le t \le 2)$ .

Next, consider plotting g(-t+1) over  $(-2 \le t \le 2)$ . Since a < 0, the waveform will be reflected. Adding the condition b > 0 shifts the final waveform to the right.

>> plot(t,g(-t+1)); xlabel('t'); ylabel('g(-t+1)'); grid;

Figure 1.52 confirms both the reflection and the right shift.

Up to this point, Figs. 1.51 and 1.52 could be reasonably sketched by hand. Consider plotting the more complicated function h(t) = g(2t + 1) + g(-t + 1) over  $(-2 \le t \le 2)$  (Fig. 1.53); an accurate hand sketch would be quite difficult. With MATLAB, the work is much less burdensome.

>> plot(t,g(2\*t+1)+g(-t+1)); xlabel('t'); ylabel('h(t)'); grid;

# 1.11-4 Numerical Integration and Estimating Signal Energy

Interesting signals often have nontrivial mathematical representations. Computing signal energy, which involves integrating the square of these expressions, can be a daunting task. Fortunately, many difficult integrals can be accurately estimated by means of numerical integration techniques.

#### 132 CHAPTER 1 SIGNALS AND SYSTEMS

Even if the integration appears simple, numerical integration provides a good way to verify analytical results.

To start, consider the simple signal  $x(t) = e^{-t}(u(t) - u(t-1))$ . The energy of x(t) is expressed as  $E_x = \int_{-\infty}^{\infty} |x(t)|^2 dt = \int_0^1 e^{-2t} dt$ . Integrating yields  $E_x = 0.5(1 - e^{-2}) \approx 0.4323$ . The energy integral can also be evaluated numerically. Figure 1.27 helps illustrate the simple method of rectangular approximation: evaluate the integrand at points uniformly separated by  $\Delta t$ , multiply each by  $\Delta t$  to compute rectangle areas, and then sum over all rectangles. First, we create function x(t).

>> x = @(t) exp(-t).\*((t>=0)&(t<1));

With  $\Delta t = 0.01$ , a suitable time vector is created.

>> t = (0:0.01:1);

The final result is computed by using the sum command.

>> E\_x = sum(x(t).\*x(t)\*0.01) E\_x = 0.4367

The result is not perfect, but at 1% relative error it is close. By reducing  $\Delta t$ , the approximation is improved. For example,  $\Delta t = 0.001$  yields E\_x = 0.4328, or 0.1% relative error.

Although simple to visualize, rectangular approximation is not the best numerical integration technique. The MATLAB function quad implements a better numerical integration technique called recursive adaptive Simpson quadrature.<sup>†</sup> To operate, quad requires a function describing the integrand, the lower limit of integration, and the upper limit of integration. Notice that no  $\Delta t$  needs to be specified.

To use quad to estimate  $E_x$ , the integrand must first be described.

>>  $x_squared = O(t) x(t).*x(t);$ 

Estimating  $E_x$  immediately follows.

>> E\_x = quad(x\_squared,0,1)
E\_x = 0.4323

In this case, the relative error is -0.0026%.

The same techniques can be used to estimate the energy of more complex signals. Consider g(t), defined previously. Energy is expressed as  $E_g = \int_0^\infty e^{-2t} \cos^2(2\pi t) dt$ . A closed-form solution exists, but it takes some effort. MATLAB provides an answer more quickly.

>> g\_squared = @(t) g(t).\*g(t);

<sup>&</sup>lt;sup>†</sup> A comprehensive treatment of numerical integration is outside the scope of this text. Details of this particular method are not important for the current discussion; it is sufficient to say that it is better than the rectangular approximation.

Although the upper limit of integration is infinity, the exponentially decaying envelope ensures g(t) is effectively zero well before t = 100. Thus, an upper limit of t = 100 is used along with  $\Delta t = 0.001$ .

>> t = (0:0.001:100); >> E\_g = sum(g\_squared(t)\*0.001) E\_g = 0.2567

A slightly better approximation is obtained with the quad function.

>> E\_g = quad(g\_squared,0,100)
E\_g = 0.2562

#### DRILL 1.21 Computing Signal Energy with MATLAB

Use MATLAB to confirm that the energy of signal h(t), defined previously as h(t) = g(2t + 1) + g(-t+1), is  $E_h = 0.3768$ .

# 1.12 SUMMARY

A *signal* is a set of data or information. A *system* processes input signals to modify them or extract additional information from them to produce output signals (response). A system may be made up of physical components (hardware realization), or it may be an algorithm that computes an output signal from an input signal (software realization).

A convenient measure of the size of a signal is its energy, if it is finite. If the signal energy is infinite, the appropriate measure is its power, if it exists. The signal power is the time average of its energy (averaged over the entire time interval from  $-\infty$  to  $\infty$ ). For periodic signals, the time averaging need be performed over only one period in view of the periodic repetition of the signal. Signal power is also equal to the mean squared value of the signal (averaged over the entire time interval from  $t = -\infty$  to  $\infty$ ).

Signals can be classified in several ways.

- 1. A *continuous-time signal* is specified for a continuum of values of the independent variable (such as time *t*). A *discrete-time signal* is specified only at a finite or a countable set of time instants.
- 2. An *analog signal* is a signal whose amplitude can take on any value over a continuum. On the other hand, a signal whose amplitudes can take on only a finite number of values is a *digital signal*. The terms *discrete-time* and *continuous-time* qualify the nature of a signal along the time axis (horizontal axis). The terms *analog* and *digital*, on the other hand, qualify the nature of the signal amplitude (vertical axis).
- 3. A *periodic signal* x(t) is defined by the fact that  $x(t) = x(t + T_0)$  for some  $T_0$ . The smallest positive value of  $T_0$  for which this relationship is satisfied is called the *fundamental period*. A periodic signal remains unchanged when shifted by an integer multiple of its period. A periodic signal x(t) can be generated by a periodic extension of any contiguous segment of x(t) of duration  $T_0$ . Finally, a periodic signal, by definition, must exist over the entire time interval  $-\infty < t < \infty$ . A signal is *aperiodic* if it is not periodic.

- 4. An *everlasting signal* starts at  $t = -\infty$  and continues forever to  $t = \infty$ . Hence, periodic signals are everlasting signals. A *causal signal* is a signal that is zero for t < 0.
- 5. A signal with finite energy is an *energy signal*. Similarly a signal with a finite and nonzero power (mean-square value) is a *power signal*. A signal can be either an energy signal or a power signal, but not both. However, there are signals that are neither energy nor power signals.
- 6. A signal whose physical description is known completely in a mathematical or graphical form is a *deterministic signal*. A *random signal* is known only in terms of its probabilistic description such as mean value or mean-square value, rather than by its mathematical or graphical form.

A signal x(t) delayed by T seconds (right-shifted) can be expressed as x(t - T); on the other hand, x(t) advanced by T (left-shifted) is x(t + T). A signal x(t) time-compressed by a factor a(a > 1) is expressed as x(at); on the other hand, the same signal time-expanded by factor a(a > 1) is x(t/a). The signal x(t) when time-reversed can be expressed as x(-t).

The unit step function u(t) is very useful in representing causal signals and signals with different mathematical descriptions over different intervals.

In the classical (Dirac) definition, the unit impulse function  $\delta(t)$  is characterized by unit area and is concentrated at a single instant t = 0. The impulse function has a sampling (or sifting) property, which states that the area under the product of a function with a unit impulse is equal to the value of that function at the instant at which the impulse is located (assuming the function to be continuous at the impulse location). In the modern approach, the impulse function is viewed as a generalized function and is defined by the sampling property.

The exponential function  $e^{st}$ , where s is complex, encompasses a large class of signals that includes a constant, a monotonic exponential, a sinusoid, and an exponentially varying sinusoid.

A real signal that is symmetrical about the vertical axis (t = 0) is an *even* function of time, and a real signal that is antisymmetrical about the vertical axis is an *odd* function of time. The product of an even function and an odd function is an odd function. However, the product of an even function and an even function or an odd function and an odd function is an even function. The area under an odd function from t = -a to a is always zero regardless of the value of a. On the other hand, the area under an even function from t = -a to 0). Every signal can be expressed as a sum of odd and even functions of time.

A system processes input signals to produce output signals (response). The input is the cause, and the output is its effect. In general, the output is affected by two causes: the internal conditions of the system (such as the initial conditions) and the external input.

Systems can be classified in several ways.

- 1. Linear systems are characterized by the linearity property, which implies superposition; if several causes (such as various inputs and initial conditions) are acting on a linear system, the total output (response) is the sum of the responses from each cause, assuming that all the remaining causes are absent. A system is nonlinear if superposition does not hold.
- 2. In time-invariant systems, system parameters do not change with time. The parameters of time-varying-parameter systems change with time.
- 3. For memoryless (or instantaneous) systems, the system response at any instant t depends only on the value of the input at t. For systems with memory (also known as dynamic

systems), the system response at any instant t depends not only on the present value of the input, but also on the past values of the input (values before t).

- 4. In contrast, if a system response at *t* also depends on the future values of the input (values of input beyond *t*), the system is noncausal. In causal systems, the response does not depend on the future values of the input. Because of the dependence of the response on the future values of input, the effect (response) of noncausal systems occurs before the cause. When the independent variable is time (temporal systems), the noncausal systems are prophetic systems, and therefore, unrealizable, although close approximation is possible with some time delay in the response. Noncausal systems with independent variables other than time (e.g., space) are realizable.
- 5. Systems whose inputs and outputs are continuous-time signals are continuous-time systems; systems whose inputs and outputs are discrete-time signals are discrete-time systems. If a continuous-time signal is sampled, the resulting signal is a discrete-time signal. We can process a continuous-time signal by processing the samples of the signal with a discrete-time system.
- 6. Systems whose inputs and outputs are analog signals are analog systems; those whose inputs and outputs are digital signals are digital systems.
- 7. If we can obtain the input x(t) back from the output y(t) of a system S by some operation, the system S is said to be invertible. Otherwise the system is noninvertible.
- 8. A system is stable if bounded input produces bounded output. This defines external stability because it can be ascertained from measurements at the external terminals of the system. External stability is also known as the stability in the BIBO (bounded-input/bounded-output) sense. Internal stability, discussed later in Ch. 2, is measured in terms of the internal behavior of the system.

The system model derived from a knowledge of the internal structure of the system is its internal description. In contrast, an external description is a representation of a system as seen from its input and output terminals; it can be obtained by applying a known input and measuring the resulting output. In the majority of practical systems, an external description of a system so obtained is equivalent to its internal description. At times, however, the external description fails to describe the system adequately. Such is the case with the so-called uncontrollable or unobservable systems.

A system may also be described in terms of certain set of key variables called state variables. In this description, an Nth-order system can be characterized by a set of N simultaneous first-order differential equations in N state variables. State equations of a system represent an internal description of that system.


#### REFERENCES

- 1. Papoulis, A., The Fourier Integral and Its Applications. McGraw-Hill, New York, 1962.
- 2. Mason, S. J., Electronic Circuits, Signals, and Systems. Wiley, New York, 1960.
- 3. Kailath, T., *Linear Systems*. Prentice-Hall, Englewood Cliffs, NJ, 1980.
- 4. Lathi, B. P., Signals and Systems. Berkeley-Cambridge Press, Carmichael, CA, 1987.

# PROBLEMS

- **1.1-1** Find the energies of the signals illustrated in Fig. P1.1-1. Comment on the effect on energy of sign change, time shifting, or doubling of the signal. What is the effect on the energy if the signal is multiplied by *k*?
- **1.1-2** Repeat Prob. 1.1-1 for the signals in Fig. P1.1-2.
- **1.1-3** (a) Find the energies of the pair of signals x(t) and y(t) depicted in Figs. P1.1-3a and P1.1-3b. Sketch and find the energies of signals x(t) + y(t) and x(t) y(t). Can you make any observation from these results?
  - (b) Repeat part (a) for the signal pair illustrated in Fig. P1.1-3c. Is your observation in part (a) still valid?

- **1.1-4** Find the power of the periodic signal *x*(*t*) shown in Fig. P1.1-4. Find also the powers and the rms values of:
  - (a) -x(t)
  - (b) 2x(t)
  - (c) cx(t)
  - Comment.
- **1.1-5** By original design, a system outputs a 10-volt pulse that is 3 seconds in duration. It is desired to upgrade the square-pulse output with a "soft-start" pulse that steps up to 10 volts in 1-volt increments spaced every 20 milliseconds. Determine the signal duration T so that the "soft-start" pulse has the same signal energy as the original square pulse.

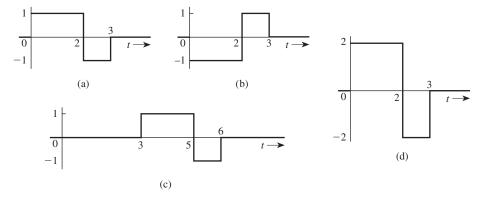




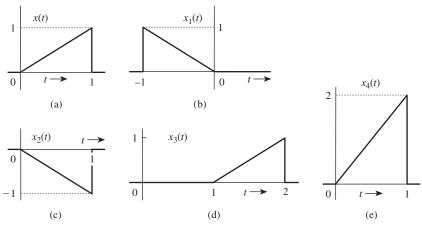


Figure P1.1-2



8

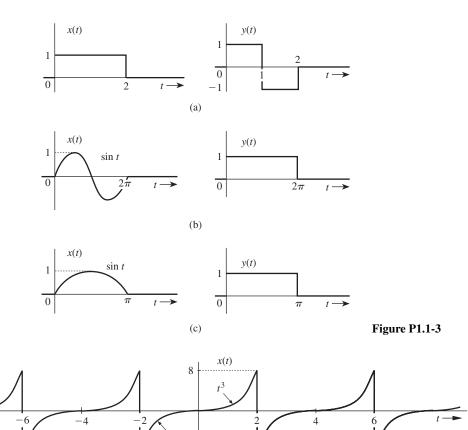

- **1.1-6** Determine the power and the rms value for each of the following signals:
  - (a)  $5 + 10\cos(100t + \pi/3)$
  - (b)  $10\cos(100t + \pi/3) + 16\sin(150t + \pi/5)$
  - (c)  $(10+2\sin 3t)\cos 10t$
  - (d)  $10\cos 5t\cos 10t$
  - (e)  $10\sin 5t\cos 10t$
  - (f)  $e^{j\alpha t} \cos \omega_0 t$
- **1.1-7** Figure P1.1-7 shows a periodic 50% duty cycle dc-offset sawtooth wave x(t) with peak amplitude *A*. Determine the energy and power of x(t).
- **1.1-8** Two periodic signals that differ only by a 90-degree phase shift are considered to be quadrature signals. For example,  $\cos(2\pi t)$  and  $\sin(2\pi t)$  are quadrature signals. Another pair of quadrature signals is  $x(t) = \text{sgn}[\cos(2\pi t)]$  and

 $y(t) = \text{sgn}[\sin(2\pi t)]$ , where sgn is the sign (or signum) function.

- (a) Plot x(t) and determine its power  $P_x$  and energy  $E_x$ .
- (b) Plot y(t) and determine its power  $P_y$  and energy  $E_y$ .
- (c) Consider the complex function f(t) = x(t) + jy(t). Determine the power and energy of f(t).
- (d) When real functions x(t) and y(t) are combined as f(t) = x(t) + jy(t), is it generally true that  $E_f = E_x + E_y$  and  $P_f = P_x + P_y$ ? Prove your answer.
- **1.1-9** There are many useful properties related to signal energy. Prove each of the following statements. In each case, let energy signal  $x_1(t)$  have energy  $E[x_1(t)]$ , let energy signal  $x_2(t)$  have

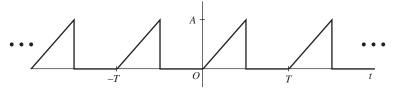


Figure P1.1-7

energy  $E[x_2(t)]$ , and let T be a nonzero, finite, real-valued constant.

- (a) Prove  $E[Tx_1(t)] = T^2 E[x_1(t)]$ . That is, amplitude scaling a signal by constant T scales the signal energy by  $T^2$ .
- (b) Prove  $E[x_1(t)] = E[x_1(t T)]$ . That is, shifting a signal does not affect its energy.
- (c) If  $(x_1(t) \neq 0) \Rightarrow (x_2(t) = 0)$  and  $(x_2(t) \neq 0) \Rightarrow (x_1(t) = 0)$ , then prove  $E[x_1(t) + x_2(t)] = E[x_1(t)] + E[x_2(t)]$ . That is, the energy of the sum of two nonoverlapping signals is the sum of the two individual energies.
- (d) Prove  $E[x_1(Tt)] = (1/|T|)E[x_1(t)]$ . That is, time-scaling a signal by *T* reciprocally scales the signal energy by 1/|T|.
- **1.1-10** Consider the signal x(t) shown in Fig. P1.1-10. Outside the interval shown, x(t) is zero. Determine the signal energy E[x(t)]. [*Hint:* Use the results of Prob. 1.1-9.]

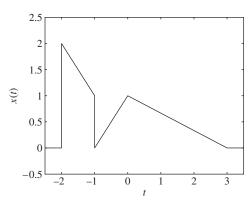


Figure P1.1-10

**1.1-11** (a) Show that the power of a signal

$$x(t) = \sum_{k=m}^{n} D_k e^{j\omega_k t}$$


$$P_x = \sum_{k=m}^n |D_k|^2$$

assuming all frequencies to be distinct, that is,  $\omega_i \neq \omega_k$  for all  $i \neq k$ .

- (b) Use the result in part (a) to determine the power of each of the signals in Prob. 1.1-6.
- **1.1-12** A binary signal x(t) = 0 for t < 0. For positive time, x(t) toggles between one and zero as follows: one for 1 second, zero for 1 second, one for 1 second, zero for 2 seconds, one for 1 second, zero for 3 seconds, and so forth. That is, the "on" time is always 1 second, but the "off" time successively increases by 1 second between each toggle. A portion of x(t) is shown in Fig. P1.1-12. Determine the energy and power of x(t).
- **1.2-1** For the signal x(t) depicted in Fig. P1.2-1, sketch the signals
  - (a) x(-t)

is

- (b) x(t+6)
- (c) x(3t)
- (d) x(t/2)
- **1.2-2** For the signal x(t) illustrated in Fig. P1.2-2, sketch
  - (a) x(t-4)
  - (b) x(t/1.5)
  - (c) x(-t)
  - (d) x(2t-4)
  - (e) x(2-t)
- **1.2-3** In Fig. P1.2-3, express signals  $x_1(t)$ ,  $x_2(t)$ ,  $x_3(t)$ ,  $x_4(t)$ , and  $x_5(t)$  in terms of signal x(t) and its time-shifted, time-scaled, or time-reversed versions.
- **1.2-4** For an energy signal x(t) with energy  $E_x$ , show that the energy of any one of the signals -x(t), x(-t), and x(t T) is  $E_x$ . Show also that the energy of x(at) as well as x(at b) is  $E_x/a$ , but the energy of ax(t) is  $a^2E_x$ . This shows that time

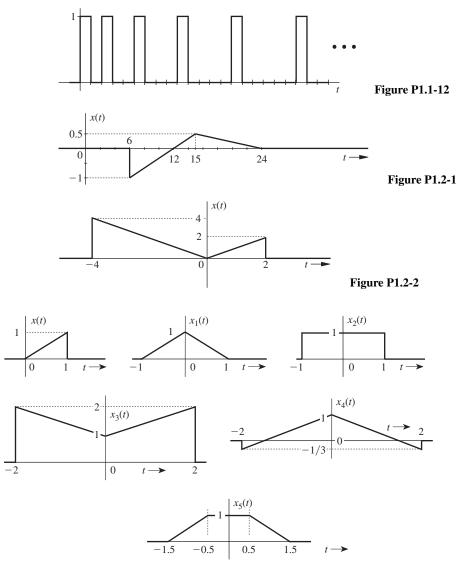

#### Figure P1.2-3

inversion and time shifting do not affect signal energy. On the other hand, time compression of a signal (a > 1) reduces the energy, and time expansion of a signal (a < 1) increases the energy. What is the effect on signal energy if the signal is multiplied by a constant *a*?

**1.2-5** Define 2x(-3t+1) = t[u(-t-1) - u(-t+1)], where u(t) is the unit step function. (a) Plot 2x(-3t+1) over a suitable range of *t*.

- (b) Plot x(t) over a suitable range of t.
- **1.2-6** Consider the signal  $x(t) = 2^{-tu(t)}$ , where u(t) is the unit step function.
  - (a) Accurately sketch x(t) over  $(-1 \le t \le 1)$ .
  - (b) Accurately sketch y(t) = 0.5x(1-2t) over  $(-1 \le t \le 1)$ .
- **1.2-7** Define signals y(t) and z(t) as in Fig. P1.2-7.
  - (a) Determine constants *a*, *b*, and *c* to produce z(t) = ax(bt + c) in Fig. P1.2-7.

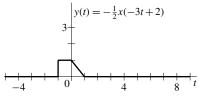


Figure P1.2-7


- (b) Determine and sketch a signal v(t) such that  $z(t) = \int_{-\infty}^{t} v(\tau) d\tau.$
- 1.3-1 Think of a real-world signal that is a personally relevant and interesting. Describe the signal and then classify it according to the six following characteristics:
  - (a) continuous-time or discrete-time
  - (b) analog or digital
  - (c) periodic or aperiodic
  - (d) energy or power
  - (e) causal or noncausal
  - (f) deterministic or random

If possible, think of a second real-world signal that has the opposite six characteristics of your first signal. If such a second signal is not possible, carefully explain why that is the case.

Define signal  $y(t) = \sum_{k=-\infty}^{\infty} x(0.5t - 10k),$ 1.3-2 where

$$x(t) = \begin{cases} e^{-2t} & t \ge 1\\ 0 & t < 1 \end{cases}$$

- (a) Determine the constant a such that the signal x(-2t+a) is borderline anticausal.
- (b) Is the signal y(t) periodic? If so, determine the period  $T_{y}$ . If not, explain why y(t) is not periodic.
- **1.3-3** Determine whether each of the following statements is true or false. If the statement is false, demonstrate this by proof or example.
  - (a) Every continuous-time signal is an analog signal.
  - (b) Every discrete-time signal is a digital signal.
  - (c) If a signal is not an energy signal, then it must be a power signal and vice versa.
  - (d) An energy signal must be of finite duration.
  - (e) A power signal cannot be causal.
  - (f) A periodic signal cannot be anticausal.
- 1.3-4 Determine whether each of the following statements is true or false. If the statement is

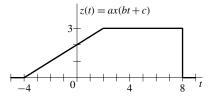

false, demonstrate by proof or example why the statement is false.

- (a) Every bounded periodic signal is a power signal.
- (b) Every bounded power signal is a periodic signal.
- (c) If an energy signal x(t) has energy E, then the energy of x(at) is E/a. Assume a is real and positive.
- (d) If a power signal x(t) has power P, then the power of x(at) is P/a. Assume a is real and positive.
- 1.3-5 Given  $x_1(t) = \cos(t)$ ,  $x_2(t) = \sin(\pi t)$ , and  $x_3(t) = x_1(t) + x_2(t)$ .
  - (a) Determine the fundamental periods  $T_1$  and  $T_2$  of signals  $x_1(t)$  and  $x_2(t)$ .
  - (b) Show that  $x_3(t)$  is not periodic, which requires  $T_3 = k_1 T_1 = k_2 T_2$  for some integers  $k_1$  and  $k_2$ .
  - (c) Determine the powers  $P_{x_1}$ ,  $P_{x_2}$ , and  $P_{x_3}$  of signals  $x_1(t)$ ,  $x_2(t)$ , and  $x_3(t)$ .
- **1.3-6** For any constant  $\omega$ , is the function  $f(t) = \sin(\omega t)$ a periodic function of the independent variable *t*? Justify your answer.
- **1.3-7** The signal shown in Fig. P1.3-7 is defined as

$$x(t) = \begin{cases} t & 0 \le t < 1\\ 0.5 + 0.5 \cos(2\pi t) & 1 \le t < 2\\ 3 - t & 2 \le t < 3\\ 0 & \text{otherwise} \end{cases}$$

The energy of x(t) is  $E \approx 1.0417$ .

- (a) What is the energy of  $y_1(t) = (1/3)x(2t)$ ?
- (b) A periodic signal  $y_2(t)$  is defined as

$$y_2(t) = \begin{cases} x(t) & 0 \le t < 4\\ y_2(t+4) & \forall t \end{cases}$$

What is the power of  $y_2(t)$ ?

(c) What is the power of  $y_3(t) = (1/3)y_2(2t)$ ?


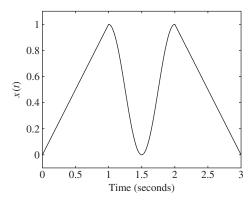


Figure P1.3-7

- **1.3-8** Let  $y_1(t) = y_2(t) = t^2$  over  $0 \le t \le 1$ . Notice, this statement does not require  $y_1(t) = y_2(t)$  for all *t*.
  - (a) Define  $y_1(t)$  as an even, periodic signal with period  $T_1 = 2$ . Sketch  $y_1(t)$  and determine its power.
  - (b) Design an odd, periodic signal  $y_2(t)$  with period  $T_2 = 3$  and power equal to unity. Fully describe  $y_2(t)$  and sketch the signal over at least one full period. [*Hint:* There are an infinite number of possible solutions to this problem—you need to find only one of them!]
  - (c) We can create a complex-valued function  $y_3(t) = y_1(t) + jy_2(t)$ . Determine whether this signal is periodic. If yes, determine the period  $T_3$ . If no, justify why the signal is not periodic.
  - (d) Determine the power of y<sub>3</sub>(t) defined in part (c). The power of a complex-valued function z(t) is

$$P = \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} z(\tau) z^*(\tau) \, d\tau$$

- **1.4-1** Sketch the following signals:
  - (a) u(t-5) u(t-7)
  - (b) u(t-5) + u(t-7)
  - (c)  $t^2[u(t-1) u(t-2)]$
  - (d) (t-4)[u(t-2) u(t-4)]
- **1.4-2** Express each of the signals in Fig. P1.4-2 by a single expression valid for all *t*.

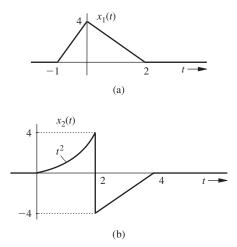



**1.4-3** Letting w(t) = t[u(t) - u(t-1)], define the periodic signal x(t) as

$$x(t) = \sum_{k=-\infty}^{\infty} w(2t+2k) - 0.5w(2t+2k-1)$$

- (a) Sketch w(t) and x(t). What is the fundamental period T<sub>0</sub> of signal x(t)?
- (b) Sketch  $y(t) = \frac{d}{dt}x(1 0.5t)$ .
- (c) Determine the energy  $E_z$  and power  $P_z$  of the signal z(t) = x(0.5 1.5t) [u(t) u(t-1)]. Sketching z(t) should help.

**1.4-4** Define signal 
$$x(t) = u(t-1) - u(t-2.5) - 2\delta(t-4) + \delta(t-6)$$
.

- (a) Sketch  $y(t) = \int_{-\infty}^{t} x(\tau) d\tau$ .
- (b) Describe a simple change that can be made to the right-most delta function in x(t) so that  $y(t) = \int_{-\infty}^{t} x(\tau) d\tau$  has finite energy.
- (c) Sketch  $z(t) = \int_{t}^{\infty} x(\tau) d\tau$ .
- (d) Determine real constants A and B so that  $w(t) = x(\frac{t-A}{B})$  has a region of support [-2,2].
- **1.4-5** Simplify the following expressions:

(a) 
$$\left(\frac{\sin t}{t^2 + 2}\right)\delta(t)$$
  
(b)  $\left(\frac{j\omega + 2}{\omega^2 + 9}\right)\delta(\omega)$ 

(c)  $[e^{-t}\cos(3t-60^\circ)]\delta(t)$ 

(d) 
$$\left(\frac{\sin\left[\frac{\pi}{2}(t-2)\right]}{t^2+4}\right)\delta(1-t)$$
  
(e)  $\left(\frac{1}{j\omega+2}\right)\delta(\omega+3)$   
(f)  $\left(\frac{\sin k\omega}{\omega}\right)\delta(\omega)$ 

[*Hint:* Use Eq. (1.10). For part (f) use L'Hôpital's rule.]

**1.4-6** Evaluate the following integrals:

(a) 
$$\int_{-\infty}^{\infty} \delta(\tau)x(t-\tau) d\tau$$
  
(b) 
$$\int_{-\infty}^{\infty} x(\tau)\delta(t-\tau) d\tau$$
  
(c) 
$$\int_{-\infty}^{\infty} \delta(t)e^{-j\omega t} dt$$
  
(d) 
$$\int_{-\infty}^{\infty} \delta(2t-3)\sin \pi t dt$$
  
(e) 
$$\int_{-\infty}^{\infty} \delta(t+3)e^{-t} dt$$
  
(f) 
$$\int_{-\infty}^{\infty} (t^{3}+4)\delta(1-t) dt$$
  
(g) 
$$\int_{-\infty}^{\infty} x(2-t)\delta(3-t) dt$$
  
(h) 
$$\int_{-\infty}^{\infty} e^{(x-1)} \cos\left[\frac{\pi}{2}(x-5)\right]\delta(x-3) dx$$

**1.4-7** For real and positive constant *a*, evaluate the following integral:

$$\int_{-\infty}^{\infty} \delta(at) \, dt$$

- **1.4-8** (a) Find and sketch dx/dt for the signal x(t) shown in Fig. P1.2-2.
  - (b) Find and sketch d<sup>2</sup>x/dt<sup>2</sup> for the signal x<sub>1</sub>(t) depicted in Fig. P1.4-2a.
- **1.4-9** Find and sketch  $\int_{-\infty}^{t} x(t) dt$  for the signals x(t) illustrated in Fig. P1.4-9.
- **1.4-10** Using the generalized function definition of impulse [Eq. (1.11) with T = 0], show that  $\delta(t)$  is an even function of *t*.
- **1.4-11** Using the generalized function definition of impulse [Eq. (1.11) with T = 0], show that

$$\delta(at) = \frac{1}{|a|}\delta(t)$$

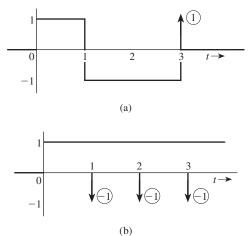




Figure P1.4-9

1.4-12 Show that

$$\int_{-\infty}^{\infty} \dot{\delta}(t)\phi(t)\,dt = -\dot{\phi}(0)$$

where  $\phi(t)$  and  $\dot{\phi}(t)$  are continuous at t = 0, and  $\phi(t) \to 0$  as  $t \to \pm \infty$ . This integral defines  $\dot{\delta}(t)$  as a generalized function. [*Hint:* Use integration by parts.]

- **1.4-13** A sinusoid  $e^{\sigma t} \cos \omega t$  can be expressed as a sum of exponentials  $e^{st}$  and  $e^{-st}$  [Eq. (1.14)] with complex frequencies  $s = \sigma + j\omega$  and  $s = \sigma j\omega$ . Locate in the complex plane the frequencies of the following sinusoids:
  - (a)  $\cos 3t$
  - (b)  $e^{-3t}\cos 3t$
  - (c)  $e^{2t}\cos 3t$
  - (d)  $e^{-2t}$
  - (e)  $e^{2t}$
  - (f) 5
- **1.5-1** Find and sketch the odd and the even components of the following:
  - (a) u(t)
  - (b) tu(t)
  - (c)  $\sin \omega_0 t$
  - (d)  $\cos \omega_0 t$
  - (e)  $\cos(\omega_0 t + \theta)$
  - (f)  $\sin \omega_0 t u(t)$
  - (g)  $\cos \omega_0 t u(t)$
- **1.5-2** Define x(t) = 2u(t+1) u(t-2) u(t-3).
  - (a) Letting  $x_o(t)$  designate the odd portion of x(t), accurately sketch  $x_o(1-2t)$ .


- (b) Letting  $x_e(t)$  designate the even portion of x(t), accurately sketch  $x_e(2+t/3)$ .
- **1.5-3** (a) Determine even and odd components of the signal  $x(t) = e^{-2t}u(t)$ .
  - (b) Show that the energy of x(t) is the sum of energies of its odd and even components found in part (a).
  - (c) Generalize the result in part (b) for any finite energy signal.
- **1.5-4** (a) If  $x_e(t)$  and  $x_o(t)$  are even and the odd components of a real signal x(t), then show that

$$\int_{-\infty}^{\infty} x_e(t) x_o(t) \, dt = 0$$

(b) Show that

$$\int_{-\infty}^{\infty} x(t) \, dt = \int_{-\infty}^{\infty} x_e(t) \, dt$$

- **1.5-5** An aperiodic signal is defined as  $x(t) = \sin(\pi t)u(t)$ , where u(t) is the continuous-time step function. Is the odd portion of this signal,  $x_o(t)$ , periodic? Justify your answer.
- **1.5-6** An aperiodic signal is defined as  $x(t) = \cos(\pi t)u(t)$ , where u(t) is the continuous-time step function. Is the even portion of this signal,  $x_e(t)$ , periodic? Justify your answer.
- **1.5-7** Consider the signal x(t) shown in Fig. P1.5-7.

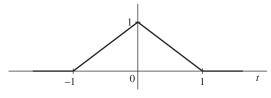



- (a) Determine and carefully sketch v(t) = 3x(-(1/2)(t+1)).
- (b) Determine the energy and power of v(t).
- (c) Determine and carefully sketch the even portion of v(t), v<sub>e</sub>(t).
- (d) Let a = 2 and b = 3; sketch v(at + b), v(at) + b, av(t+b), and av(t) + b.
- (e) Let a = -3 and b = -2; sketch v(at + b), v(at) + b, av(t + b), and av(t) + b.
- **1.5-8** Consider the signal y(t) = (1/5)x(-2t 3) shown in Fig. P1.5-8.


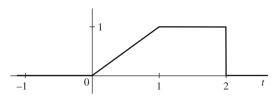


Figure P1.5-8

- (a) Does y(t) have an odd portion, y<sub>o</sub>(t)? If so, determine and carefully sketch y<sub>o</sub>(t). Otherwise, explain why no odd portion exists.
- (b) Determine and carefully sketch the original signal x(t).
- **1.5-9** Consider the signal -(1/2)x(-3t+2) shown in Fig. P1.5-9.

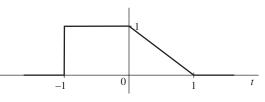

#### Figure P1.5-9

- (a) Determine and carefully sketch the original signal *x*(*t*).
- (b) Determine and carefully sketch the even portion of the original signal *x*(*t*).
- (c) Determine and carefully sketch the odd portion of the original signal x(t).
- **1.5-10** The conjugate symmetric (or Hermitian) portion of a signal is defined as  $w_{cs}(t) = (w(t) + w^*(-t))/2$ . Show that the real portion of  $w_{cs}(t)$  is even and that the imaginary portion of  $w_{cs}(t)$  is odd.
- **1.5-11** The conjugate antisymmetric (or skew-Hermitian) portion of a signal is defined as  $w_{ca}(t) = (w(t) w^*(-t))/2$ . Show that the real portion of  $w_{ca}(t)$  is odd and that the imaginary portion of  $w_{ca}(t)$  is even.
- **1.5-12** Define  $w(t) = e^{j(t+\pi/4)}$ .
  - (a) Referring to the definition in Prob. 1.5-10, determine  $w_{cs}(t)$ . Express your simplified answer in standard rectangular form.
  - (b) Referring to the definition in Prob. 1.5-11, determine  $w_{ca}(t)$ . Express your simplified answer in standard polar form.

#### 144 CHAPTER 1 SIGNALS AND SYSTEMS

**1.5-13** Figure P1.5-13 plots a complex signal w(t) in the complex plane over the time range  $(0 \le t \le 1)$ . The time t = 0 corresponds with the origin, while the time t = 1 corresponds with the point (2, 1).


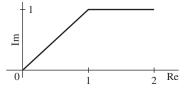


Figure P1.5-13

- (a) In the complex plane, plot w(t) over  $(-1 \le t \le 1)$  if w(t) is an even signal.
- (b) In the complex plane, plot w(t) over (-1 ≤ t ≤ 1) if w(t) is an odd signal.
- (c) In the complex plane, plot w(t) over (-1 ≤ t ≤ 1) if w(t) is a conjugate symmetric signal. [*Hint*: See Prob. 1.5-10.]
- (d) In the complex plane, plot w(t) over (-1 ≤ t ≤ 1) if w(t) is a conjugate antisymmetric signal. [*Hint:* See Prob. 1.5-11.]
- (e) In the complex plane, plot as much of w(3t) as possible.
- **1.5-14** Define complex signal  $x(t) = t^2(1 + j)$  over interval  $(1 \le t \le 2)$ . The remaining portion is defined such that x(t) is a minimum-energy, skew-Hermitian signal.
  - (a) Fully describe x(t) for all t.
  - (b) Sketch y(t) = Re{x(t)} versus the independent variable t.
  - (c) Sketch  $z(t) = \text{Re}\{jx(-2t+1)\}\$  versus the independent variable *t*.
  - (d) Determine the energy and power of x(t).

[*Hint:* See Prob. 1.5-11 for a definition of skew-Hermitian signals.]

- **1.6-1** Write the input–output relationship for an ideal integrator. Determine the zero-input and zero-state components of the response.
- **1.6-2** A force x(t) acts on a ball of mass M (Fig. P1.6-2). Show that the velocity v(t) of the ball at any instant t > 0 can be determined if we know the force x(t) over the interval from 0 to t and the ball's initial velocity v(0).

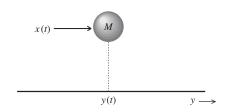

#### Figure P1.6-2

- **1.6-3** From your personal experience, provide an example of:
  - (a) a single-input, single-output (SISO) system
  - (b) a multiple-input, single-output (MISO) system
  - (c) a single-input, multiple-output (SIMO) system
  - (d) a multiple-input, multiple-output (MIMO) system
- **1.7-1** For the systems described by the following equations, with the input x(t) and output y(t), determine which of the systems are linear and which are nonlinear.

(a) 
$$\frac{dy(t)}{dt} + 2y(t) = x^{2}(t)$$
  
(b)  $\frac{dy(t)}{dt} + 3ty(t) = t^{2}x(t)$   
(c)  $3y(t) + 2 = x(t)$   
(d)  $\frac{dy(t)}{dt} + y^{2}(t) = x(t)$   
 $(dy(t))^{2}$ 

(e) 
$$\left(\frac{dy(t)}{dt}\right)^2 + 2y(t) = x(t)$$
  
(b)  $\frac{dy(t)}{dt} + (x + y)(t) = \frac{dx(t)}{dt} + \frac{dx(t)}{dt}$ 

(f) 
$$\frac{dy(t)}{dt} + (\sin t)y(t) = \frac{dx(t)}{dt} + 2x(t)$$
  
(g) 
$$\frac{dy(t)}{dt} + 2y(t) = x(t)\frac{dx(t)}{dt}$$

(h) 
$$y(t) = \int_{-\infty}^{t} x(\tau) d\tau$$

**1.7-2** For the systems described by the following equations, with the input x(t) and output y(t), explain with reasons which of the systems are time-invariant parameter systems and which are time-varying-parameter systems.

(a) 
$$y(t) = x(t-2)$$
  
(b)  $y(t) = x(-t)$   
(c)  $y(t) = x(at)$   
(d)  $y(t) = tx(t-2)$   
(e)  $y(t) = \int_{-5}^{5} x(\tau) d\tau$   
(f)  $y(t) = \left(\frac{dx(t)}{dt}\right)^{2}$ 

- **1.7-3** Two inputs, temperature T(t) and wind speed V(t), produce an output, wind chill W(t), according to  $W(t) = 35.74 + 0.6215T(t) 35.75 {V(t)}^{0.16} + 0.4275T(t) {V(t)}^{0.16}$ . The independent variable here is time, *t*. Answer the following questions yes or no, and provide mathematical justification for each answer.
  - (a) Is this system BIBO-stable?
  - (b) Is the system memoryless?
  - (c) Is the system causal?
  - (d) For simplicity, let the wind speed be constant,  $V(t) = k_V$ . Thus,  $W(t) = k_1 + k_2 T(t)$  for some constants  $k_1$  and  $k_2$ . Is this simplified system linear?
  - (e) For simplicity, let the temperature be constant, T(t) = k<sub>T</sub>. Thus, W(t) = k<sub>3</sub> + k<sub>4</sub> {V(t)}<sup>0.16</sup> for some constants k<sub>3</sub> and k<sub>4</sub>. Is this simplified system linear?
- **1.7-4** Input voltage x(t) applied to an inverting op-amp follower circuit produces output y(t) according to

$$y(t+t_{\rm p}) = \begin{cases} -V_{\rm ref} & x(t) > V_{\rm ref} \\ V_{\rm ref} & x(t) < -V_{\rm ref} \\ -x(t) & \text{otherwise} \end{cases}$$

where op-amp reference voltage  $V_{ref}$  and propagation delay  $t_p$  are both positive constants. Answer the following questions yes or no, and provide mathematical justification for each answer.

- (a) Is this system BIBO-stable?
- (b) Is the system causal?
- (c) Is the system invertible?
- (d) Is the system linear?
- (e) Is the system memoryless?
- (f) Is the system time invariant?
- **1.7-5** Repeat Prob. 1.7-4 for a system with input x(t) that produces output y(t) according to

$$y(t+1) = \begin{cases} -2x(t) & \text{when } x(t) \ge 0\\ 0 & \text{otherwise} \end{cases}$$

**1.7-6** Repeat Prob. 1.7-4 for a system with input x(t) that produces output y(t) according to

$$y(t-1) = \begin{cases} x(t-1) & \text{when } \frac{d}{dt}x(t) \ge 0\\ x(t-2) & \text{otherwise} \end{cases}$$

- **1.7-7** Repeat Prob. 1.7-4 for a system that multiplies a given input by a ramp function, r(t) = tu(t). That is, y(t) = x(t)r(t).
- **1.7-8** Repeat Prob. 1.7-4 for a system with input x(t) that produces output y(t) according to

$$y(t) = \frac{d}{dt}x(t-1)$$

**1.7-9** Repeat Prob. 1.7-4 for a system with input x(t) that produces output y(t) according to

$$y(t) = \begin{cases} x(t) & \text{if } x(t) > 0\\ 0 & \text{if } x(t) \le 0 \end{cases}$$

**1.7-10** A continuous-time system is given by

$$y(t) = 0.5 \int_{-\infty}^{\infty} x(\tau) [\delta(t-\tau) - \delta(t+\tau)] d\tau$$

Recall that  $\delta(t)$  designates the Dirac delta function.

- (a) Explain what this system does.
- (b) Is the system BIBO-stable? Justify your answer.
- (c) Is the system linear? Justify your answer.
- (d) Is the system memoryless? Justify your answer.
- (e) Is the system causal? Justify your answer.
- (f) Is the system time invariant? Justify your answer.
- **1.7-11** For a certain LTI system with the input x(t), the output y(t) and the two initial conditions  $q_1(0)$  and  $q_2(0)$ , the following observations were made:

Determine y(t) when both the initial conditions are zero and the input x(t) is as shown in Fig. P1.7-11. [*Hint:* There are three causes: the input and each of the two initial conditions. Because of the linearity property, if a cause is increased by a factor k, the response to that cause also increases by the same factor k. Moreover, if causes are added, the corresponding responses add.]

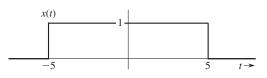


Figure P1.7-11

**1.7-12** A system is specified by its input–output relationship as

$$y(t) = \frac{x^2(t)}{dx(t)/dt}$$

Show that the system satisfies the homogeneity property but not the additivity property.

**1.7-13** Show that the circuit in Fig. P1.7-13 is zero-state linear but not zero-input linear. Assume all diodes to have identical (matched) characteristics. The output is the current y(t).

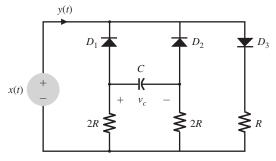


Figure P1.7-13

**1.7-14** The inductor L and the capacitor C in Fig. P1.7-14 are nonlinear, which makes the circuit nonlinear. The remaining three elements are linear. Show that the output y(t) of this nonlinear circuit satisfies the linearity conditions with respect to the input x(t) and the initial

conditions (all the initial inductor currents and capacitor voltages).

**1.7-15** For the systems described by the following equations, with the input x(t) and output y(t), determine which are causal and which are noncausal.

(a) 
$$y(t) = x(t-2)$$
  
(b)  $y(t) = x(-t)$ 

(c) 
$$y(t) = x(at)$$
  $a > 1$ 

(d) y(t) = x(at) a < 1

**1.7-16** For the systems described by the following equations, with the input x(t) and output y(t), determine which are invertible and which are noninvertible. For the invertible systems, find the input–output relationship of the inverse system.

(a) 
$$y(t) = \int_{-\infty} x(\tau) d\tau$$
  
(b)  $y(t) = x^n(t), x(t)$  real, *n* integer  
(c)  $y(t) = \frac{dx(t)}{t}$ 


(c) 
$$y(t) = \frac{dt}{dt}$$


(d) 
$$y(t) = x(3t-6)$$

(e) 
$$y(t) = \cos[x(t)]$$

(f) 
$$y(t) = e^{x(t)}$$
,  $x(t)$  real

- **1.7-17** Figure P1.7-17 displays an input  $x_1(t)$  to a linear time-invariant (LTI) system *H*, the corresponding output  $y_1(t)$ , and a second input  $x_2(t)$ .
  - (a) Bill suggests that  $x_2(t) = 2x_1(3t) x_1(t-1)$ . Is Bill correct? If yes, prove it. If not, correct his error.
  - (b) Bill wants to know the output y<sub>2</sub>(t) in response to the input x<sub>2</sub>(t). Provide him with an expression for y<sub>2</sub>(t) in terms of y<sub>1</sub>(t). Use MATLAB to plot y<sub>2</sub>(t).

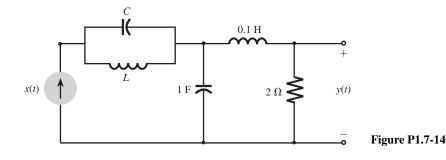

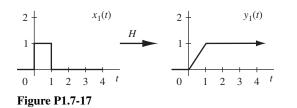


- **1.7-18** A linear time-invariant system H acts on input x(t) = u(t 0.5) u(t 1.5) to produce output  $y(t) = H\{x(t)\} = 0.5u(t) + 0.5u(t 1) u(t 2).$ 
  - (a) Is it possible that the system is causal? Explain your answer. If not causal, determine the shift necessary to make the system causal.
  - (b) Is it possible that the system is memoryless? Explain your answer.
  - (c) Suppose the output *y*(*t*) is applied to an identical system *H* to produce output

$$z(t) = H\{y(t)\} = H\{H\{x(t)\}\}$$

If possible, determine and sketch z(t). If not possible, explain why z(t) cannot be determined using the information given.

**1.8-1** For the circuit depicted in Fig. P1.8-1, find the differential equations relating outputs  $y_1(t)$  and  $y_2(t)$  to the input x(t).

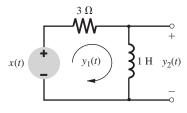



**1.8-2** For the circuit depicted in Fig. P1.8-2, find the differential equations relating outputs  $y_1(t)$  and  $y_2(t)$  to the input x(t).



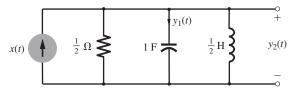



Figure P1.8-2



- **1.8-3** A simplified (one-dimensional) model of an automobile suspension system is shown in Fig. P1.8-3. In this case, the input is not a force but a displacement x(t) (the road contour). Find the differential equation relating the output y(t) (auto body displacement) to the input x(t) (the road contour).
- **1.8-4** A field-controlled dc motor is shown in Fig. P1.8-4. Its armature current  $i_a$  is maintained constant. The torque generated by this motor is proportional to the field current  $i_f$  (torque= $K_f i_f$ ). Find the differential equation relating the output position  $\theta$  to the input voltage x(t). The motor and load together have a moment of inertia J.
- **1.8-5** Water flows into a tank at a rate of  $q_i$  units/s and flows out through the outflow valve at a rate of  $q_0$  units/s (Fig. P1.8-5). Determine the equation relating the outflow  $q_0$  to the input  $q_i$ . The outflow rate is proportional to the head *h*. Thus  $q_0 = Rh$ , where *R* is the valve resistance. Determine also the differential equation relating the head *h* to the input  $q_i$ . [Hint: The net inflow of water in time  $\Delta t$  is  $(q_i q_0)\Delta t$ . This inflow is also  $A\Delta h$ , where *A* is the cross section of the tank.]
- **1.8-6** Consider the circuit shown in Fig. P1.8-6, with input voltage x(t) and output currents  $y_1(t)$ ,  $y_2(t)$ , and  $y_3(t)$ .
  - (a) What is the order of this system? Explain your answer.
  - (b) Determine the matrix representation for this system.
  - (c) Use Cramer's rule to determine the output current  $y_3(t)$  for the input voltage  $x(t) = [2 - |\cos(t)|]u(t - 1)$ .
- **1.10-1** Write state equations for the parallel *RLC* circuit in Fig. P1.8-2. Use the capacitor voltage  $q_1$  and the inductor current  $q_2$  as your state variables.

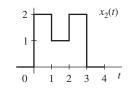

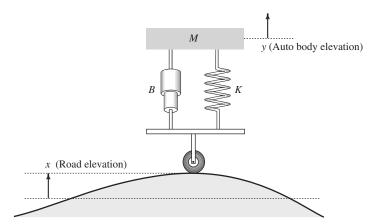


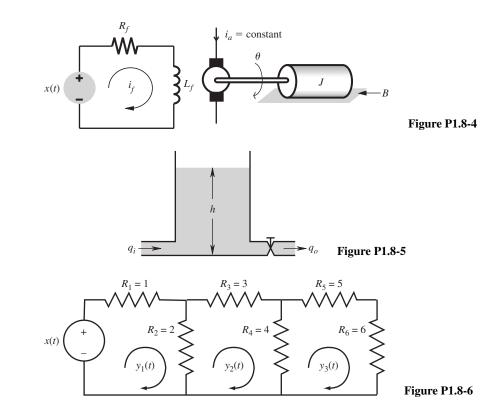

Show that every possible current or voltage in the circuit can be expressed in terms of  $q_1, q_2$  and the input x(t).

**1.10-2** Write state equations for the third-order circuit shown in Fig. P1.10-2, using the inductor

currents  $q_1$ ,  $q_2$  and the capacitor voltage  $q_3$  as state variables. Show that every possible voltage or current in this circuit can be expressed as a linear combination of  $q_1$ ,  $q_2$ ,  $q_3$ , and the input x(t). Also, at some instant t, it was found that

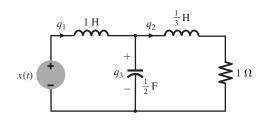

 $q_1 = 5$ ,  $q_2 = 1$ ,  $q_3 = 2$ , and x = 10. Determine the voltage across and the current through every element in this circuit.

- **1.11-1** Provide MATLAB code and output that plots the odd portion  $x_o(t)$  of the function  $x(t) = 2^{-t} \cos(2\pi t)u(t-\pi)$  over a suitable-length interval using a suitable number of points.
- **1.11-2** Provide MATLAB code and output that plots the even portion  $x_e(t)$  of the function  $x(t) = 2^{-t/2} \cos(4\pi t)u(t 0.5)$  over a suitable t using  $\Delta t = 0.002$  second between points.
- **1.11-3** Define  $x(t) = e^{t(1+j2\pi)}u(-t)$  and  $y(t) = \operatorname{Re}\left\{2x\left(\frac{-5-t}{2}\right)\right\}$ .
  - (a) Use MATLAB to plot  $\operatorname{Re}\{x(t)\}$  versus  $\operatorname{Im}\{x(at)\}$  for  $a = 0.5, 1, \text{ and } 2 \text{ and } -10 \le$

#### Figure P1.10-2

 $t \le 10$ . How important is the scale factor *a* on the shape of the resulting figure?

- (b) Use MATLAB to plot y(t) over  $-10 \le t \le 10$ . Analytically determine the time  $t_0$  where y(t) has a jump discontinuity. Verify your calculation of  $t_0$  using the plot of y(t).
- (c) Use MATLAB and numerical integration to compute the energy  $E_x$  of signal x(t).
- (d) Use MATLAB and numerical integration to compute the energy  $E_y$  of signal y(t).
- **1.11-4** Consider the signal  $x(t) = u(\frac{t}{2} + 1) u(t 1) \delta(\frac{t}{2})$ . Define  $y(t) = \int_{-\infty}^{t-3} x(\tau) d\tau$  and  $z(t) = \int_{t}^{\infty} x(\tau) d\tau$ .
  - (a) Using MATLAB, accurately plot y(t).
  - (b) Using MATLAB, accurately plot z(t).
  - (c) Using MATLAB, accurately plot  $w(t) = \frac{d}{dt} [y(t) + z(t)].$

chapter 2

# TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

In this book we consider two methods of analysis of linear time-invariant (LTI) systems: the time-domain method and the frequency-domain method. In this chapter we discuss the *time-domain analysis* of linear, time-invariant, continuous-time (LTIC) systems.

# **2.1 INTRODUCTION**

For the purpose of analysis, we shall consider *linear differential systems*. This is the class of LTIC systems introduced in Ch. 1, for which the input x(t) and the output y(t) are related by linear differential equations of the form

$$\frac{d^{N}y(t)}{dt^{N}} + a_{1}\frac{d^{N-1}y(t)}{dt^{N-1}} + \dots + a_{N-1}\frac{dy(t)}{dt} + a_{N}y(t)$$
$$= b_{N-M}\frac{d^{M}x(t)}{dt^{M}} + b_{N-M+1}\frac{d^{M-1}x(t)}{dt^{M-1}} + \dots + b_{N-1}\frac{dx(t)}{dt} + b_{N}x(t)$$
(2.1)

where all the coefficients  $a_i$  and  $b_i$  are constants. Using operator notation D to represent d/dt, we can express this equation as

$$(D^{N} + a_{1}D^{N-1} + \dots + a_{N-1}D + a_{N})y(t)$$
  
=  $(b_{N-M}D^{M} + b_{N-M+1}D^{M-1} + \dots + b_{N-1}D + b_{N})x(t)$ 

or

$$Q(D)y(t) = P(D)x(t)$$
(2.2)

where the polynomials Q(D) and P(D) are

$$Q(D) = D^{N} + a_{1}D^{N-1} + \dots + a_{N-1}D + a_{N}$$
$$P(D) = b_{N-M}D^{M} + b_{N-M+1}D^{M-1} + \dots + b_{N-1}D + b_{N}$$

Theoretically the powers M and N in the foregoing equations can take on any value. However, practical considerations make M > N undesirable for two reasons. In Sec. 4.3-3, we shall show that

an LTIC system specified by Eq. (2.1) acts as an (M - N)th-order differentiator. A differentiator represents an unstable system because a bounded input like the step input results in an unbounded output,  $\delta(t)$ . Second, noise is enhanced by a differentiator. Noise is a wideband signal containing components of all frequencies from 0 to a very high frequency approaching  $\infty$ .<sup>†</sup> Hence, noise contains a significant amount of rapidly varying components. We know that the derivative of any rapidly varying signal is high. Therefore, any system specified by Eq. (2.1) in which M > N will magnify the high-frequency components of noise through differentiation. It is entirely possible for noise to be magnified so much that it swamps the desired system output even if the noise signal at the system's input is tolerably small. Hence, practical systems generally use  $M \leq N$ . For the rest of this text we assume implicitly that  $M \leq N$ . For the sake of generality, we shall assume M = N in Eq. (2.1).

In Ch. 1, we demonstrated that a system described by Eq. (2.2) is linear. Therefore, its response can be expressed as the sum of two components: the zero-input response and the zero-state response (decomposition property).<sup>‡</sup> Therefore,

total response = zero-input response + zero-state response

The zero-input response is the system output when the input x(t) = 0, and thus it is the result of internal system conditions (such as energy storages, initial conditions) alone. It is independent of the external input x(t). In contrast, the zero-state response is the system output to the external input x(t) when the system is in zero state, meaning the absence of all internal energy storages: that is, all initial conditions are zero.

# **2.2 System Response to Internal Conditions:** The Zero-Input Response

The zero-input response  $y_0(t)$  is the solution of Eq. (2.2) when the input x(t) = 0 so that

$$Q(D)y_0(t) = 0$$

$$Q(D)y_0(t) = 0$$

If y(t) is the zero-state response, then y(t) is the solution of

$$Q(D)y(t) = P(D)x(t)$$

subject to zero initial conditions (zero-state). Adding these two equations, we have

$$Q(D)[y_0(t) + y(t)] = P(D)x(t)$$

Clearly,  $y_0(t) + y(t)$  is the general solution of Eq. (2.2).

<sup>&</sup>lt;sup>†</sup> Noise is any undesirable signal, natural or manufactured, that interferes with the desired signals in the system. Some of the sources of noise are the electromagnetic radiation from stars, the random motion of electrons in system components, interference from nearby radio and television stations, transients produced by automobile ignition systems, and fluorescent lighting.

<sup>&</sup>lt;sup>‡</sup> We can verify readily that the system described by Eq. (2.2) has the decomposition property. If  $y_0(t)$  is the zero-input response, then, by definition,

or

$$(D^{N} + a_{1}D^{N-1} + \dots + a_{N-1}D + a_{N})y_{0}(t) = 0$$
(2.3)

A solution to this equation can be obtained systematically [1]. However, we will take a shortcut by using heuristic reasoning. Equation (2.3) shows that a linear combination of  $y_0(t)$  and its Nsuccessive derivatives is zero, not at *some* values of t, but for all t. Such a result is possible *if and only if*  $y_0(t)$  and all its N successive derivatives are of the same form. Otherwise their sum can never add to zero for all values of t. We know that only an exponential function  $e^{\lambda t}$  has this property. So let us assume that

$$y_0(t) = ce^{\lambda t}$$

is a solution to Eq. (2.3). Then

$$Dy_0(t) = \frac{dy_0(t)}{dt} = c\lambda e^{\lambda t}$$
$$D^2 y_0(t) = \frac{d^2 y_0(t)}{dt^2} = c\lambda^2 e^{\lambda t}$$
$$\vdots$$
$$D^N y_0(t) = \frac{d^N y_0(t)}{dt^N} = c\lambda^N e^{\lambda t}$$

Substituting these results in Eq. (2.3), we obtain

$$c(\lambda^N + a_1\lambda^{N-1} + \dots + a_{N-1}\lambda + a_N)e^{\lambda t} = 0$$

For a nontrivial solution of this equation,

$$\lambda^{N} + a_{1}\lambda^{N-1} + \dots + a_{N-1}\lambda + a_{N} = 0$$
(2.4)

This result means that  $ce^{\lambda t}$  is indeed a solution of Eq. (2.3), provided  $\lambda$  satisfies Eq. (2.4). Note that the polynomial in Eq. (2.4) is identical to the polynomial Q(D) in Eq. (2.3), with  $\lambda$  replacing D. Therefore, Eq. (2.4) can be expressed as

$$Q(\lambda) = 0$$

Expressing  $Q(\lambda)$  in factorized form, we obtain

$$Q(\lambda) = (\lambda - \lambda_1)(\lambda - \lambda_2) \cdots (\lambda - \lambda_N) = 0$$
(2.5)

Clearly,  $\lambda$  has *N* solutions:  $\lambda_1, \lambda_2, \ldots, \lambda_N$ , assuming that all  $\lambda_i$  are distinct. Consequently, Eq. (2.3) has *N* possible solutions:  $c_1 e^{\lambda_1 t}, c_2 e^{\lambda_2 t}, \ldots, c_N e^{\lambda_N t}$ , with  $c_1, c_2, \ldots, c_N$  as arbitrary constants. We

152

can readily show that a general solution is given by the sum of these N solutions<sup> $\dagger$ </sup> so that

$$y_0(t) = c_1 e^{\lambda_1 t} + c_2 e^{\lambda_2 t} + \dots + c_N e^{\lambda_N t}$$
(2.6)

where  $c_1, c_2, \ldots, c_N$  are arbitrary constants determined by N constraints (the auxiliary conditions) on the solution.

Observe that the polynomial  $Q(\lambda)$ , which is characteristic of the system, has nothing to do with the input. For this reason the polynomial  $Q(\lambda)$  is called the *characteristic polynomial* of the system. The equation

$$Q(\lambda) = 0$$

is called the *characteristic equation* of the system. Equation (2.5) clearly indicates that  $\lambda_1$ ,  $\lambda_2$ , ...,  $\lambda_N$  are the roots of the characteristic equation; consequently, they are called the *characteristic roots* of the system. The terms *characteristic values, eigenvalues,* and *natural frequencies* are also used for characteristic roots.<sup>‡</sup> The exponentials  $e^{\lambda_i t}$  (i = 1, 2, ..., n) in the zero-input response are the *characteristic modes* (also known as *natural modes* or simply as *modes*) of the system. There is a characteristic mode for each characteristic root of the system, and the *zero-input response is a linear combination of the characteristic modes of the system*.

An LTIC system's characteristic modes comprise its single most important attribute. Characteristic modes not only determine the zero-input response but also play an important role in determining the zero-state response. In other words, the entire behavior of a system is dictated primarily by its characteristic modes. In the rest of this chapter we shall see the pervasive presence of characteristic modes in every aspect of system behavior.

#### **REPEATED ROOTS**

The solution of Eq. (2.3) as given in Eq. (2.6) assumes that the *N* characteristic roots  $\lambda_1, \lambda_2, \ldots, \lambda_N$  are distinct. If there are repeated roots (same root occurring more than once), the form of the solution is modified slightly. By direct substitution we can show that the solution of the equation

$$(D-\lambda)^2 y_0(t) = 0$$

is given by

$$y_0(t) = (c_1 + c_2 t)e^{\lambda t}$$

<sup>†</sup> To prove this assertion, assume that  $y_1(t), y_2(t), \ldots, y_N(t)$  are all solutions of Eq. (2.3). Then

$$Q(D)y_1(t) = 0$$
$$Q(D)y_2(t) = 0$$
$$\vdots$$
$$Q(D)y_N(t) = 0$$

Multiplying these equations by  $c_1, c_2, \ldots, c_N$ , respectively, and adding them together yield

$$Q(D)[c_1y_1(t) + c_2y_2(t) + \dots + c_Ny_n(t)] = 0$$

This result shows that  $c_1y_1(t) + c_2y_2(t) + \cdots + c_Ny_n(t)$  is also a solution of the homogeneous equation [Eq. (2.3)].

<sup>‡</sup> Eigenvalue is German for "characteristic value."

In this case the root  $\lambda$  repeats twice. Observe that the characteristic modes in this case are  $e^{\lambda t}$  and  $te^{\lambda t}$ . Continuing this pattern, we can show that for the differential equation

$$(D-\lambda)^r y_0(t) = 0$$

the characteristic modes are  $e^{\lambda t}$ ,  $te^{\lambda t}$ ,  $t^2e^{\lambda t}$ , ...,  $t^{r-1}e^{\lambda t}$ , and that the solution is

$$y_0(t) = (c_1 + c_2 t + \dots + c_r t^{r-1})e^{\lambda t}$$

Consequently, for a system with the characteristic polynomial

$$Q(\lambda) = (\lambda - \lambda_1)^r (\lambda - \lambda_{r+1}) \cdots (\lambda - \lambda_N)$$

the characteristic modes are  $e^{\lambda_1 t}$ ,  $te^{\lambda_1 t}$ , ...,  $t^{r-1}e^{\lambda_1 t}$ ,  $e^{\lambda_{r+1} t}$ , ...,  $e^{\lambda_N t}$  and the solution is

$$y_0(t) = (c_1 + c_2t + \dots + c_rt^{r-1})e^{\lambda_1 t} + c_{r+1}e^{\lambda_{r+1} t} + \dots + c_N e^{\lambda_N t}$$

### COMPLEX ROOTS

The procedure for handling complex roots is the same as that for real roots. For complex roots, the usual procedure leads to complex characteristic modes and the complex form of solution. However, it is possible to avoid the complex form altogether by selecting a real-form of solution, as described next.

For a real system, complex roots must occur in pairs of conjugates if the coefficients of the characteristic polynomial  $Q(\lambda)$  are to be real. Therefore, if  $\alpha + j\beta$  is a characteristic root,  $\alpha - j\beta$  must also be a characteristic root. The zero-input response corresponding to this pair of complex conjugate roots is

$$y_0(t) = c_1 e^{(\alpha + j\beta)t} + c_2 e^{(\alpha - j\beta)t}$$
(2.7)

For a real system, the response  $y_0(t)$  must also be real. This is possible only if  $c_1$  and  $c_2$  are conjugates. Let

$$c_1 = \frac{c}{2}e^{j\theta}$$
 and  $c_2 = \frac{c}{2}e^{-j\theta}$ 

This yields

$$y_{0}(t) = \frac{c}{2} e^{j\theta} e^{(\alpha+j\beta)t} + \frac{c}{2} e^{-j\theta} e^{(\alpha-j\beta)t}$$
$$= \frac{c}{2} e^{\alpha t} \left[ e^{j(\beta t+\theta)} + e^{-j(\beta t+\theta)} \right]$$
$$= c e^{\alpha t} \cos\left(\beta t + \theta\right)$$
(2.8)

Therefore, the zero-input response corresponding to complex conjugate roots  $\alpha \pm j\beta$  can be expressed in a complex form [Eq. (2.7)] or a real form [Eq. (2.8)].

### **EXAMPLE 2.1** Finding the Zero-Input Response

Find  $y_0(t)$ , the zero-input response of the response for an LTIC system described by

- (a) the simple-root system  $(D^2 + 3D + 2)y(t) = Dx(t)$  with initial conditions  $y_0(0) = 0$ and  $\dot{y}_0(0) = -5$ .
- (b) the repeated-root system  $(D^2 + 6D + 9)y(t) = (3D + 5)x(t)$  with initial conditions  $y_0(0) = 3$  and  $\dot{y}_0(0) = -7$ .
- (c) the complex-root system  $(D^2 + 4D + 40)y(t) = (D + 2)x(t)$  with initial conditions  $y_0(0) = 2$  and  $\dot{y}_0(0) = 16.78$ .

(a) Note that  $y_0(t)$ , being the zero-input response (x(t) = 0), is the solution of  $(D^2 + 3D + 2)y_0(t) = 0$ . The characteristic polynomial of the system is  $\lambda^2 + 3\lambda + 2$ . The characteristic equation of the system is therefore  $\lambda^2 + 3\lambda + 2 = (\lambda + 1)(\lambda + 2) = 0$ . The characteristic roots of the system are  $\lambda_1 = -1$  and  $\lambda_2 = -2$ , and the characteristic modes of the system are  $e^{-t}$  and  $e^{-2t}$ . Consequently, the zero-input response is

$$y_0(t) = c_1 e^{-t} + c_2 e^{-2t}$$

Differentiating this expression, we obtain

$$\dot{y}_0(t) = -c_1 e^{-t} - 2c_2 e^{-2t}$$

To determine the constants  $c_1$  and  $c_2$ , we set t = 0 in the equations for  $y_0(t)$  and  $\dot{y}_0(t)$  and substitute the initial conditions  $y_0(0) = 0$  and  $\dot{y}_0(0) = -5$ , yielding

$$0 = c_1 + c_2 -5 = -c_1 - 2c_2$$

Solving these two simultaneous equations in two unknowns for  $c_1$  and  $c_2$  yields

$$c_1 = -5$$
 and  $c_2 = 5$ 

Therefore,

$$y_0(t) = -5e^{-t} + 5e^{-2t} \tag{2.9}$$

This is the zero-input response of y(t). Because  $y_0(t)$  is present at  $t = 0^-$ , we are justified in assuming that it exists for  $t \ge 0$ .<sup>†</sup>

(b) The characteristic polynomial is  $\lambda^2 + 6\lambda + 9 = (\lambda + 3)^2$ , and its characteristic roots are  $\lambda_1 = -3$ ,  $\lambda_2 = -3$  (repeated roots). Consequently, the characteristic modes of the system are  $e^{-3t}$  and  $te^{-3t}$ . The zero-input response, being a linear combination of the characteristic modes, is given by

$$y_0(t) = (c_1 + c_2 t)e^{-3t}$$

<sup>&</sup>lt;sup>†</sup>  $y_0(t)$  may be present even before  $t = 0^-$ . However, we can be sure of its presence only from  $t = 0^-$  onward.

We can find the arbitrary constants  $c_1$  and  $c_2$  from the initial conditions  $y_0(0) = 3$  and  $\dot{y}_0(0) = -7$  following the procedure in part (a). The reader can show that  $c_1 = 3$  and  $c_2 = 2$ . Hence,

$$y_0(t) = (3+2t)e^{-3t}$$
  $t \ge 0$ 

(c) The characteristic polynomial is  $\lambda^2 + 4\lambda + 40 = (\lambda + 2 - j6)(\lambda + 2 + j6)$ . The characteristic roots are  $-2 \pm j6^{\dagger}$ . The solution can be written either in the complex form [Eq. (2.7)] or in the real form [Eq. (2.8)]. The complex form is  $y_0(t) = c_1 e^{\lambda_1 t} + c_2 e^{\lambda_2 t}$ , where  $\lambda_1 = -2 + j6$  and  $\lambda_2 = -2 - j6$ . Since  $\alpha = -2$  and  $\beta = 6$ , the real-form solution is [see Eq. (2.8)]

$$y_0(t) = ce^{-2t}\cos\left(6t + \theta\right)$$

Differentiating this expression, we obtain

$$\dot{y}_0(t) = -2ce^{-2t}\cos(6t+\theta) - 6ce^{-2t}\sin(6t+\theta)$$

To determine the constants *c* and  $\theta$ , we set t = 0 in the equations for  $y_0(t)$  and  $\dot{y}_0(t)$  and substitute the initial conditions  $y_0(0) = 2$  and  $\dot{y}_0(0) = 16.78$ , yielding

$$2 = c\cos\theta$$
$$16.78 = -2c\cos\theta - 6c\sin\theta$$

Solution of these two simultaneous equations in two unknowns  $c\cos\theta$  and  $c\sin\theta$  yields

 $c\cos\theta = 2$  and  $c\sin\theta = -3.463$ 

Squaring and then adding these two equations yield

$$c^{2} = (2)^{2} + (-3.464)^{2} = 16 \Longrightarrow c = 4$$

Next, dividing  $c\sin\theta = -3.463$  by  $c\cos\theta = 2$  yields

$$\tan\theta = \frac{-3.463}{2}$$

and

$$\theta = \tan^{-1}\left(\frac{-3.463}{2}\right) = -\frac{\pi}{3}$$

Therefore,

$$y_0(t) = 4e^{-2t}\cos\left(6t - \frac{\pi}{3}\right)$$

For the plot of  $y_0(t)$ , refer again to Fig. B.11c.

$$\lambda^{2} + 4\lambda + 40 = (\lambda^{2} + 4\lambda + 4) + 36 = (\lambda + 2)^{2} + (6)^{2} = (\lambda + 2 - j6)(\lambda + 2 + j6)(\lambda + j6)(\lambda$$

<sup>&</sup>lt;sup>†</sup> The complex conjugate roots of a second-order polynomial can be determined by using the formula in Sec. B.8-10 or by expressing the polynomial as a sum of two squares. The latter can be accomplished by completing the square with the first two terms, as follows:

# **EXAMPLE 2.2 Using MATLAB to Find Polynomial Roots**

Find the roots  $\lambda_1$  and  $\lambda_2$  of the polynomial  $\lambda^2 + 4\lambda + k$  for three values of k: (a) k = 3, (b) k = 4, and (c) k = 40.

(a) >>  $r = roots([1 \ 4 \ 3])$ .'  $r = -3 \ -1$ For k = 3, the polynomial roots are therefore  $\lambda_1 = -3$  and  $\lambda_2 = -1$ . (b) >>  $r = roots([1 \ 4 \ 4])$ .'  $r = -2 \ -2$ For k = 4, the polynomial roots are therefore  $\lambda_1 = \lambda_2 = -2$ . (c) >>  $r = roots([1 \ 4 \ 40])$ .'  $r = -2.00+6.00i \ -2.00-6.00i$ For k = 40, the polynomial roots are therefore  $\lambda_1 = -2 + j6$  and  $\lambda_2 = -2 - j6$ .

# EXAMPLE 2.3 Using MATLAB to Find the Zero-Input Response

Consider an LTIC system specified by the differential equation

$$(D^{2}+4D+k)y(t) = (3D+5)x(t)$$

Using initial conditions  $y_0(0) = 3$  and  $\dot{y}_0(0) = -7$ , apply MATLAB's dsolve command to determine the zero-input response when: (a) k = 3, (b) k = 4, and (c) k = 40.

**(a)** 

>> y\_0 = dsolve('D2y+4\*Dy+3\*y=0','y(0)=3','Dy(0)=-7','t')
y\_0 = 1/exp(t) + 2/exp(3\*t)

For k = 3, the zero-input response is therefore  $y_0(t) = e^{-t} + 2e^{-3t}$ . (b)

For k = 4, the zero-input response is therefore  $y_0(t) = 3e^{-2t} - te^{-2t}$ . (c)

For k = 40, the zero-input response is therefore  $y_0(t) = 3e^{-2t}\cos(6t) - \frac{1}{6}e^{-2t}\sin(6t)$ .

# DRILL 2.1 Finding the Zero-Input Response of a First-Order System

Find the zero-input response of an LTIC system described by (D + 5)y(t) = x(t) if the initial condition is y(0) = 5.

#### ANSWER

 $y_0(t) = 5e^{-5t} \qquad t \ge 0$ 

# **DRILL 2.2** Finding the Zero-Input Response of a Second-Order System

Letting  $y_0(0) = 1$  and  $\dot{y}_0(0) = 4$ , solve

 $(D^2 + 2D)y_0(t) = 0$ 

ANSWER

 $y_0(t) = 3 - 2e^{-2t}$   $t \ge 0$ 

#### PRACTICAL INITIAL CONDITIONS AND THE MEANING OF $0^-$ and $0^+$

In Ex. 2.1 the initial conditions  $y_0(0)$  and  $\dot{y}_0(0)$  were supplied. In practical problems, we must derive such conditions from the physical situation. For instance, in an *RLC* circuit, we may be given the conditions (initial capacitor voltages, initial inductor currents, etc.).

From this information, we need to derive  $y_0(0)$ ,  $\dot{y}_0(0)$ , ... for the desired variable as demonstrated in the next example.

In much of our discussion, the input is assumed to start at t = 0, unless otherwise mentioned. Hence, t = 0 is the reference point. The conditions immediately before t = 0 (just before the input is applied) are the conditions at  $t = 0^-$ , and those immediately after t = 0 (just after the input is applied) are the conditions at  $t = 0^+$  (compare this with the historical time frames BCE and CE). In practice, we are likely to know the initial conditions at  $t = 0^-$  rather than at  $t = 0^+$ . The two sets of conditions are generally different, although in some cases they may be identical.

The total response y(t) consists of two components: the zero-input response  $y_0(t)$  [response due to the initial conditions alone with x(t) = 0] and the zero-state response resulting from the input alone with all initial conditions zero. At  $t = 0^-$ , the total response y(t) consists solely of the zero-input response  $y_0(t)$  because the input has not started yet. Hence the initial conditions on y(t) are identical to those of  $y_0(t)$ . Thus,  $y(0^-) = y_0(0^-)$ ,  $\dot{y}(0^-) = \dot{y}_0(0^-)$ , and so on. Moreover,  $y_0(t)$  is the response due to initial conditions alone and does not depend on the input x(t). Hence, application of the input at t = 0 does not affect  $y_0(t)$ . This means the initial conditions on  $y_0(t)$ at  $t = 0^-$  and  $0^+$  are identical; that is,  $y_0(0^-)$ ,  $\dot{y}_0(0^-)$ , . . . are identical to  $y_0(0^+)$ ,  $\dot{y}_0(0^+)$ , . . . , respectively. It is clear that for  $y_0(t)$ , there is no distinction between the initial conditions at  $t = 0^-$ , 0, and  $0^+$ . They are all the same. But this is not the case with the total response y(t), which consists of both the zero-input and zero-state responses. Thus, in general,  $y(0^-) \neq y(0^+)$ ,  $\dot{y}(0^-) \neq \dot{y}(0^+)$ , and so on.

#### **EXAMPLE 2.4** Consideration of Initial Conditions

A voltage  $x(t) = 10e^{-3t}u(t)$  is applied at the input of the *RLC* circuit illustrated in Fig. 2.2a. Find the loop current y(t) for  $t \ge 0$  if the initial inductor current is zero  $[y(0^-) = 0]$  and the initial capacitor voltage is 5 volts  $[v_C(0^-) = 5]$ .

The differential (loop) equation relating y(t) to x(t) was derived in Eq. (1.29) as

$$(D^2 + 3D + 2)y(t) = Dx(t)$$

The zero-state component of y(t) resulting from the input x(t), assuming that all initial conditions are zero, that is,  $y(0^-) = v_C(0^-) = 0$ , will be obtained later in Ex. 2.9. In this example we shall find the zero-input reponse  $y_0(t)$ . For this purpose, we need two initial conditions,  $y_0(0)$  and  $\dot{y}_0(0)$ . These conditions can be derived from the given initial conditions,  $y(0^-) = 0$  and  $v_C(0^-) = 5$ , as follows. Recall that  $y_0(t)$  is the loop current when the input terminals are shorted so that the input x(t) = 0 (zero-input), as depicted in Fig. 2.2b. We now compute  $y_0(0)$  and  $\dot{y}_0(0)$ , the values of the loop current and its derivative at t = 0, from the initial values of the inductor current and the capacitor voltage. Remember that the inductor current cannot change instantaneously in the absence of an impulsive voltage. Similarly, the capacitor voltage cannot change instantaneously in the absence of an impulsive current. Therefore, when the input terminals are shorted at t = 0, the inductor current is still zero and the capacitor voltage is still 5 volts. Thus,

 $y_0(0) = 0$ 

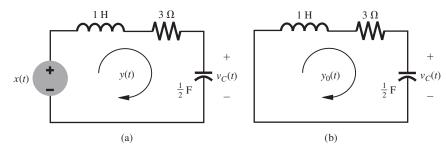


Figure 2.1 Circuits for Ex. 2.4.

To determine  $\dot{y}_0(0)$ , we use the loop equation for the circuit in Fig. 2.2b. Because the voltage across the inductor is  $L(dy_0/dt)$  or  $\dot{y}_0(t)$ , this equation can be written as follows:

$$\dot{y}_0(t) + 3y_0(t) + v_C(t) = 0$$

Setting t = 0, we obtain

$$\dot{y}_0(0) + 3y_0(0) + v_C(0) = 0$$

But  $y_0(0) = 0$  and  $v_c(0) = 5$ . Consequently,

 $\dot{y}_0(0) = -5$ 

Therefore, the desired initial conditions are

$$y_0(0) = 0$$
 and  $\dot{y}_0(0) = -5$ 

Thus, the problem reduces to finding  $y_0(t)$ , the zero-input component of y(t) of the system specified by the equation  $(D^2 + 3D + 2)y(t) = Dx(t)$ , when the initial conditions are  $y_0(0) = 0$  and  $\dot{y}_0(0) = -5$ . We have already solved this problem in Ex. 2.1a, where we found

$$y_0(t) = -5e^{-t} + 5e^{-2t} \qquad t \ge 0$$

This is the zero-input component of the loop current y(t).

It is interesting to find the initial conditions at  $t = 0^-$  and  $0^+$  for the total response y(t). Let us compare  $y(0^-)$  and  $\dot{y}(0^-)$  with  $y(0^+)$  and  $\dot{y}(0^+)$ . The two pairs can be compared by writing the loop equation for the circuit in Fig. 2.2a at  $t = 0^-$  and  $t = 0^+$ . The only difference between the two situations is that at  $t = 0^-$ , the input x(t) = 0, whereas at  $t = 0^+$ , the input x(t) = 10[because  $x(t) = 10e^{-3t}$ ]. Hence, the two loop equations are

$$\dot{y}(0^-) + 3y(0^-) + v_C(0^-) = 0$$
  
 $\dot{y}(0^+) + 3y(0^+) + v_C(0^+) = 10$ 

The loop current  $y(0^+) = y(0^-) = 0$  because it cannot change instantaneously in the absence of impulsive voltage. The same is true of the capacitor voltage. Hence,  $v_C(0^+) = v_C(0^-) = 5$ . Substituting these values in the foregoing equations, we obtain  $\dot{y}(0^-) = -5$  and  $\dot{y}(0^+) = 5$ . Thus,

 $y(0^{-}) = 0, \dot{y}(0^{-}) = -5$  and  $y(0^{+}) = 0, \dot{y}(0^{+}) = 5$  (2.10)

#### DRILL 2.3 Zero-Input Response of an RC Circuit

In the circuit in Fig. 2.2a, the inductance L = 0 and the initial capacitor voltage  $v_C(0) = 30$  volts. Show that the zero-input component of the loop current is given by  $y_0(t) = -10e^{-2t/3}$  for  $t \ge 0$ .

#### INDEPENDENCE OF THE ZERO-INPUT AND ZERO-STATE RESPONSES

In Ex. 2.4 we computed the zero-input component without using the input x(t). The zero-state response can be computed from the knowledge of the input x(t) alone; the initial conditions are assumed to be zero (system in zero state). The two components of the system response (the zero-input and zero-state responses) are independent of each other. The two worlds of zero-input response and zero-state response coexist side by side, neither one knowing or caring what the other is doing. For each component, the other is totally irrelevant.

# ROLE OF AUXILIARY CONDITIONS IN SOLUTION OF DIFFERENTIAL EQUATIONS

The solution of a differential equation requires additional pieces of information (the *auxiliary conditions*). Why? We now show heuristically why a differential equation does not, in general, have a unique solution unless some additional constraints (or conditions) on the solution are known.

Differentiation operation is not invertible unless one piece of information about y(t) is given. To get back y(t) from dy/dt, we must know one piece of information, such as y(0). Thus, differentiation is an irreversible (noninvertible) operation during which certain information is lost. To invert this operation, one piece of information about y(t) must be provided to restore the original y(t). Using a similar argument, we can show that, given  $d^2y/dt^2$ , we can determine y(t) uniquely only if two additional pieces of information (constraints) about y(t) are given. In general, to determine y(t) uniquely from its Nth derivative, we need N additional pieces of information (constraints) about y(t). These constraints are also called *auxiliary conditions*. When these conditions are given at t = 0, they are called *initial conditions*.

#### 2.2-1 Some Insights into the Zero-Input Behavior of a System

By definition, the zero-input response is the system response to its internal conditions, assuming that its input is zero. Understanding this phenomenon provides interesting insight into system behavior. If a system is disturbed momentarily from its rest position and if the disturbance is then

#### 162 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

removed, the system will not come back to rest instantaneously. In general, it will come back to rest over a period of time and only through a special type of motion that is characteristic of the system.<sup>†</sup> For example, if we press on an automobile fender momentarily and then release it at t = 0, there is no external force on the automobile for t > 0.<sup>‡</sup> The auto body will eventually come back to its rest (equilibrium) position, but not through any arbitrary motion. It must do so by using only a form of response that is sustainable by the system on its own without any external source, since the input is zero. Only characteristic modes satisfy this condition. *The system uses a proper combination of characteristic modes to come back to the rest position while satisfying appropriate boundary (or initial) conditions.* 

If the shock absorbers of the automobile are in good condition (high damping coefficient), the characteristic modes will be monotonically decaying exponentials, and the auto body will come to rest rapidly without oscillation. In contrast, for poor shock absorbers (low damping coefficients), the characteristic modes will be exponentially decaying sinusoids, and the body will come to rest through oscillatory motion. When a series RC circuit with an initial charge on the capacitor is shorted, the capacitor will start to discharge exponentially through the resistor. This response of the RC circuit is caused entirely by its internal conditions and is sustained by this system without the aid of any external input. The exponential current waveform is therefore the characteristic mode of the RC circuit.

Mathematically we know that any combination of characteristic modes can be sustained by the system alone without requiring an external input. This fact can be readily verified for the series *RL* circuit shown in Fig. 2.2. The loop equation for this system is

$$(D+2)y(t) = x(t)$$

It has a single characteristic root  $\lambda = -2$ , and the characteristic mode is  $e^{-2t}$ . We now verify that a loop current  $y(t) = ce^{-2t}$  can be sustained through this circuit without any input voltage. The input voltage x(t) required to drive a loop current  $y(t) = ce^{-2t}$  is given by

$$\begin{aligned} x(t) &= L \frac{dy(t)}{dt} + Ry(t) \\ &= \frac{d}{dt} (ce^{-2t}) + 2ce^{-2t} \\ &= -2ce^{-2t} + 2ce^{-2t} = 0 \end{aligned}$$

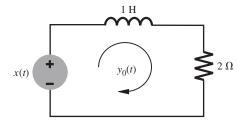


Figure 2.2 Modes always get a free ride.

<sup> $\ddagger$ </sup> We ignore the force of gravity, which merely causes a constant displacement of the auto body without affecting the other motion.

<sup>&</sup>lt;sup>†</sup> This assumes that the system will eventually come back to its original rest (or equilibrium) position.

Clearly, the loop current  $y(t) = ce^{-2t}$  is sustained by the *RL* circuit on its own, without the necessity of an external input.

#### THE RESONANCE PHENOMENON

We have seen that any signal consisting of a system's characteristic mode is sustained by the system on its own; the system offers no obstacle to such signals. Imagine what would happen if we were to drive the system with an external input that is one of its characteristic modes. This would be like pouring gasoline on a fire in a dry forest or hiring a child to eat ice cream. A child would gladly do the job without pay. Think what would happen if he were paid by the amount of ice cream he ate! He would work overtime. He would work day and night, until he became sick. The same thing happens with a system driven by an input of the form of characteristic mode. The system response grows without limit, until it burns out.<sup>†</sup> We call this behavior the *resonance phenomenon*. An intelligent discussion of this important phenomenon requires an understanding of the zero-state response; for this reason we postpone this topic until Sec. 2.6-7.

# **2.3** THE UNIT IMPULSE RESPONSE h(t)

In Ch. 1 we explained how a system response to an input x(t) may be found by breaking this input into narrow rectangular pulses, as illustrated earlier in Fig. 1.27a, and then summing the system response to all the components. The rectangular pulses become impulses in the limit as their widths approach zero. Therefore, the system response is the sum of its responses to various impulse components. This discussion shows that if we know the system response to an impulse input, we can determine the system response to an arbitrary input x(t). We now discuss a method of determining h(t), the unit impulse response of an LTIC system described by the *N*th-order differential equation [Eq. (2.1)]

$$\frac{d^{N}y(t)}{dt^{N}} + a_{1}\frac{d^{N-1}y(t)}{dt^{N-1}} + \dots + a_{N-1}\frac{dy(t)}{dt} + a_{N}y(t)$$
$$= b_{N-M}\frac{d^{M}x(t)}{dt^{M}} + b_{N-M+1}\frac{d^{M-1}x(t)}{dt^{M-1}} + \dots + b_{N-1}\frac{dx(t)}{dt} + b_{N}x(t)$$

Recall that noise considerations restrict practical systems to  $M \le N$ . Under this constraint, the most general case is M = N. Therefore, Eq. (2.1) can be expressed as

$$(D^{N} + a_{1}D^{N-1} + \dots + a_{N-1}D + a_{N})y(t) = (b_{0}D^{N} + b_{1}D^{N-1} + \dots + b_{N-1}D + b_{N})x(t)$$
(2.11)

Before deriving the general expression for the unit impulse response h(t), it is illuminating to understand qualitatively the nature of h(t). The impulse response h(t) is the system response to an impulse input  $\delta(t)$  applied at t = 0 with all the initial conditions zero at  $t = 0^-$ . An impulse input  $\delta(t)$  is like lightning, which strikes instantaneously and then vanishes. But in its wake, in that single moment, objects that have been struck are rearranged. Similarly, an impulse input  $\delta(t)$  appears momentarily at t = 0, and then it is gone forever. But in that moment it generates energy storages; that is, it creates nonzero initial conditions instantaneously within the system at

<sup>&</sup>lt;sup>†</sup> In practice, the system in resonance is more likely to go in saturation because of high amplitude levels.

 $t = 0^+$ . Although the impulse input  $\delta(t)$  vanishes for t > 0 so that the system has no input after the impulse has been applied, the system will still have a response generated by these newly created initial conditions. The impulse response h(t), therefore, must consist of the system's characteristic modes for  $t \ge 0^+$ . As a result,

h(t) = characteristic mode terms  $t \ge 0^+$ 

This response is valid for t > 0. But what happens at t = 0? At a single moment t = 0, there can at most be an impulse,<sup>†</sup> so the form of the complete response h(t) is

$$h(t) = A_0 \delta(t) + \text{characteristic mode terms} \quad t \ge 0$$
 (2.12)

because h(t) is the unit impulse response. Setting  $x(t) = \delta(t)$  and y(t) = h(t) in Eq. (2.11) yields

$$(D^{N} + a_{1}D^{N-1} + \dots + a_{N-1}D + a_{N})h(t) = (b_{0}D^{N} + b_{1}D^{N-1} + \dots + b_{N-1}D + b_{N})\delta(t)$$

In this equation we substitute h(t) from Eq. (2.12) and compare the coefficients of similar impulsive terms on both sides. The highest order of the derivative of impulse on both sides is N, with its coefficient value as  $A_0$  on the left-hand side and  $b_0$  on the right-hand side. The two values must be matched. Therefore,  $A_0 = b_0$  and

$$h(t) = b_0 \delta(t) + \text{characteristic modes}$$
(2.13)

In Eq. (2.11), if M < N,  $b_0 = 0$ . Hence, the impulse term  $b_0\delta(t)$  exists only if M = N. The unknown coefficients of the N characteristic modes in h(t) in Eq. (2.13) can be determined by using the technique of impulse matching, as explained in the following example.

#### **EXAMPLE 2.5** Impulse Response via Impulse Matching

Find the impulse response h(t) for a system specified by

$$(D2 + 5D + 6)y(t) = (D+1)x(t)$$
(2.14)

In this case,  $b_0 = 0$ . Hence, h(t) consists of only the characteristic modes. The characteristic polynomial is  $\lambda^2 + 5\lambda + 6 = (\lambda + 2)(\lambda + 3)$ . The roots are -2 and -3. Hence, the impulse

<sup>&</sup>lt;sup>†</sup> It might be possible for the derivatives of  $\delta(t)$  to appear at the origin. However, if  $M \le N$ , it is impossible for h(t) to have any derivatives of  $\delta(t)$ . This conclusion follows from Eq. (2.11) with  $x(t) = \delta(t)$  and y(t) = h(t). The coefficients of the impulse and all its derivatives must be matched on both sides of this equation. If h(t) contains  $\delta^{(1)}(t)$ , the first derivative of  $\delta(t)$ , the left-hand side of Eq. (2.11) will contain a term  $\delta^{(N+1)}(t)$ . But the highest-order derivative term on the right-hand side is  $\delta^{(N)}(t)$ . Therefore, the two sides cannot match. Similar arguments can be made against the presence of the impulse's higher-order derivatives in h(t).

response h(t) is

$$h(t) = (c_1 e^{-2t} + c_2 e^{-3t}) u(t)$$
(2.15)

Letting  $x(t) = \delta(t)$  and y(t) = h(t) in Eq. (2.14), we obtain

$$\ddot{h}(t) + 5\dot{h}(t) + 6h(t) = \dot{\delta}(t) + \delta(t)$$
(2.16)

Recall that initial conditions  $h(0^-)$  and  $\dot{h}(0^-)$  are both zero. But the application of an impulse at t = 0 creates new initial conditions at  $t = 0^+$ . Let  $h(0^+) = K_1$  and  $\dot{h}(0^+) = K_2$ . These jump discontinuities in h(t) and  $\dot{h}(t)$  at t = 0 result in impulse terms  $\dot{h}(0) = K_1\delta(t)$  and  $\ddot{h}(0) = K_1\dot{\delta}(t) + K_2\delta(t)$  on the left-hand side. Matching the coefficients of impulse terms on both sides of Eq. (2.16) yields

$$5K_1 + K_2 = 1$$
,  $K_1 = 1$   $\implies$   $K_1 = 1, K_2 = -4$ 

We now use these values  $h(0^+) = K_1 = 1$  and  $\dot{h}(0^+) = K_2 = -4$  in Eq. (2.15) to find  $c_1$  and  $c_2$ . Setting  $t = 0^+$  in Eq. (2.15), we obtain  $c_1 + c_2 = 1$ . Also setting  $t = 0^+$  in  $\dot{h}(t)$ , we obtain  $-2c_1 - 3c_1 = -4$ . These two simultaneous equations yield  $c_1 = -1$  and  $c_2 = 2$ . Therefore,

$$h(t) = (-e^{-2t} + 2e^{-3t})u(t)$$

Although the method used in this example is relatively simple, we can simplify it still further by using a modified version of impulse matching.

#### SIMPLIFIED IMPULSE MATCHING METHOD

The alternate technique we present now allows us to reduce the procedure to a simple routine to determine h(t). To avoid the needless distraction, the proof for this procedure is placed in Sec. 2.8. There, we show that for an LTIC system specified by Eq. (2.11), the unit impulse response h(t) is given by

$$h(t) = b_0 \delta(t) + [P(D)y_n(t)]u(t)$$
(2.17)

where  $y_n(t)$  is a linear combination of the characteristic modes of the system subject to the following initial conditions:

$$y_n(0) = \dot{y}_n(0) = \ddot{y}_n(0) = \dots = y_n^{(N-2)}(0) = 0$$
 and  $y_n^{(N-1)}(0) = 1$  (2.18)

where  $y_n^{(k)}(0)$  is the value of the *k*th derivative of  $y_n(t)$  at t = 0. We can express this set of conditions for various values of *N* (the system order) as follows:

$$N = 1 : y_n(0) = 1$$
  

$$N = 2 : y_n(0) = 0, \dot{y}_n(0) = 1$$
  

$$N = 3 : y_n(0) = \dot{y}_n(0) = 0, \ddot{y}_n(0) = 1$$

and so on.

As stated earlier, if the order of P(D) is less than the order of Q(D), that is, if M < N, then  $b_0 = 0$ , and the impulse term  $b_0\delta(t)$  in h(t) is zero.

# **EXAMPLE 2.6 Impulse Response via Simplified Impulse Matching**

Determine the unit impulse response h(t) for a system specified by the equation

$$(D^{2}+3D+2)y(t) = Dx(t)$$
(2.19)

This is a second-order system (N = 2) having the characteristic polynomial

$$(\lambda^2 + 3\lambda + 2) = (\lambda + 1)(\lambda + 2)$$

The characteristic roots of this system are  $\lambda = -1$  and  $\lambda = -2$ . Therefore,

$$y_n(t) = c_1 e^{-t} + c_2 e^{-2t} (2.20)$$

Differentiation of this equation yields

$$\dot{y}_n(t) = -c_1 e^{-t} - 2c_2 e^{-2t} \tag{2.21}$$

The initial conditions are [see Eq. (2.18)]

$$\dot{y}_n(0) = 1$$
 and  $y_n(0) = 0$ 

Setting t = 0 in Eqs. (2.20) and (2.21), and substituting the initial conditions just given, we obtain

$$0 = c_1 + c_2$$
$$1 = -c_1 - 2c_2$$

Solution of these two simultaneous equations yields

$$c_1 = 1$$
 and  $c_2 = -1$ 

Therefore,

$$y_n(t) = e^{-t} - e^{-2t}$$

Moreover, according to Eq. (2.19), P(D) = D so that

$$P(D)y_n(t) = Dy_n(t) = \dot{y}_n(t) = -e^{-t} + 2e^{-2t}$$

Also in this case,  $b_0 = 0$  [the second-order term is absent in P(D)]. Therefore,

$$h(t) = [P(D)y_n(t)]u(t) = (-e^{-t} + 2e^{-2t})u(t)$$

**Comment.** In the above discussion, we have assumed  $M \le N$ , as specified by Eq. (2.11). Section 2.8 shows that the expression for h(t) applicable to all possible values of M and N is given by

$$h(t) = P(D)[y_n(t)u(t)]$$

where  $y_n(t)$  is a linear combination of the characteristic modes of the system subject to initial conditions [Eq. (2.18)]. This expression reduces to Eq. (2.17) when  $M \le N$ .

Determination of the impulse response h(t) using the procedures in this section is relatively simple. However, in Ch. 4 we shall discuss another, even simpler method using the Laplace transform. As the next example demonstrates, it is also possible to find h(t) using functions from MATLAB's symbolic math toolbox.

#### **EXAMPLE 2.7** Using MATLAB to Find the Impulse Response

Determine the impulse response h(t) for an LTIC system specified by the differential equation

 $(D^2 + 3D + 2)y(t) = Dx(t)$ 

This is a second-order system with  $b_0 = 0$ . First we find the zero-input component for initial conditions  $y(0^-) = 0$ , and  $\dot{y}(0^-) = 1$ . Since P(D) = D, the zero-input response is differentiated and the impulse response immediately follows as  $h(t) = 0\delta(t) + [Dy_n(t)]u(t)$ .

>> y\_n = dsolve('D2y+3\*Dy+2\*y=0','y(0)=0','Dy(0)=1','t'); h = diff(y\_n) h = 2/exp(2\*t) - 1/exp(t)

Therefore,  $h(t) = (2e^{-2t} - e^{-t})u(t)$ .

#### **DRILL 2.4** Finding the Impulse Response

Determine the unit impulse response of LTIC systems described by the following equations:

- (a) (D+2)y(t) = (3D+5)x(t)
- **(b)** D(D+2)y(t) = (D+4)x(t)
- (c)  $(D^2 + 2D + 1)y(t) = Dx(t)$

#### ANSWERS

- (a)  $3\delta(t) e^{-2t}u(t)$
- **(b)**  $(2 e^{-2t})u(t)$
- (c)  $(1-t)e^{-t}u(t)$

#### SYSTEM RESPONSE TO DELAYED IMPULSE

If h(t) is the response of an LTIC system to the input  $\delta(t)$ , then h(t-T) is the response of this same system to the input  $\delta(t-T)$ . This conclusion follows from the time-invariance property of LTIC systems. Thus, by knowing the unit impulse response h(t), we can determine the system response to a delayed impulse  $\delta(t-T)$ . Next, we put this result to good use in finding an LTIC system's zero-state response.

# **2.4 System Response to External Input:** The Zero-State Response

This section is devoted to the determination of the zero-state response of an LTIC system. This is the system response y(t) to an input x(t) when the system is in the zero state, that is, when all initial conditions are zero. We shall assume that the systems discussed in this section are in the zero state unless mentioned otherwise. Under these conditions, the zero-state response will be the total response of the system.

We shall use the superposition property for finding the system response to an arbitrary input x(t). Let us define a basic pulse p(t) of unit height and width  $\Delta \tau$ , starting at t = 0 as illustrated in Fig. 2.3a. Figure 2.3b shows an input x(t) as a sum of narrow rectangular pulses. The pulse starting at  $t = n\Delta \tau$  in Fig. 2.3b has a height  $x(n\Delta \tau)$  and can be expressed as  $x(n\Delta \tau)p(t-n\Delta \tau)$ . Now, x(t) is the sum of all such pulses. Hence,


$$x(t) = \lim_{\Delta \tau \to 0} \sum_{\tau} x(n\Delta\tau) p(t - n\Delta\tau) = \lim_{\Delta \tau \to 0} \sum_{\tau} \left[ \frac{x(n\Delta\tau)}{\Delta\tau} \right] p(t - n\Delta\tau) \Delta\tau$$

The term  $[x(n\Delta\tau)/\Delta\tau]p(t-n\Delta\tau)$  represents a pulse  $p(t-n\Delta\tau)$  with height  $[x(n\Delta\tau)/\Delta\tau]$ . As  $\Delta\tau \to 0$ , the height of this strip  $\to \infty$ , but its area remains  $x(n\Delta\tau)$ . Hence, this strip approaches an impulse  $x(n\Delta\tau)\delta(t-n\Delta\tau)$  as  $\Delta\tau \to 0$  (Fig. 2.3e). Therefore,

$$x(t) = \lim_{\Delta \tau \to 0} \sum_{\tau} x(n\Delta\tau) \delta(t - n\Delta\tau) \,\Delta\tau$$
(2.22)

To find the response for this input x(t), we consider the input and the corresponding output pairs, as shown in Figs. 2.3c–2.3f and also shown by directed arrow notation as follows:

$$\begin{split} & \text{input} \Longrightarrow \text{output} \\ & \delta(t) \Longrightarrow h(t) \\ & \delta(t - n\Delta\tau) \Longrightarrow h(t - n\Delta\tau) \\ & [x(n\Delta\tau)\Delta\tau]\delta(t - n\Delta\tau) \Longrightarrow [x(n\Delta\tau)\Delta\tau]h(t - n\Delta\tau) \\ & \underbrace{\lim_{\Delta\tau\to 0} \sum_{\tau} x(n\Delta\tau)\delta(t - n\Delta\tau)\Delta\tau}_{x(t) \text{ [see Eq. (2.22)]}} \xrightarrow{\sum_{\tau} x(n\Delta\tau)h(t - n\Delta\tau)\Delta\tau}_{y(t)} \end{split}$$

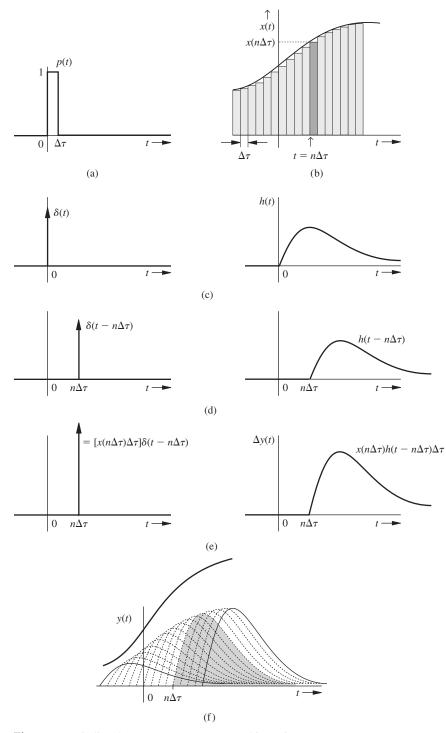

**Figure 2.3** Finding the system response to an arbitrary input x(t).

Therefore,<sup>†</sup>

$$y(t) = \lim_{\Delta \tau \to 0} \sum_{\tau} x(n\Delta\tau) h(t - n\Delta\tau) \Delta\tau$$
$$= \int_{-\infty}^{\infty} x(\tau) h(t - \tau) d\tau$$
(2.23)

This is the result we seek. We have obtained the system response y(t) to an arbitrary input x(t) in terms of the unit impulse response h(t). Knowing h(t), we can determine the response y(t) to any input. Observe once again the all-pervasive nature of the system's characteristic modes. The system response to any input is determined by the impulse response, which, in turn, is made up of characteristic modes of the system.

It is important to keep in mind the assumptions used in deriving Eq. (2.23). We assumed a linear time-invariant (LTI) system. Linearity allowed us to use the principle of superposition, and time invariance made it possible to express the system's response to  $\delta(t - n\Delta\tau)$  as  $h(t - n\Delta\tau)$ .

#### 2.4-1 The Convolution Integral

The zero-state response y(t) obtained in Eq. (2.23) is given by an integral that occurs frequently in the physical sciences, engineering, and mathematics. For this reason this integral is given a special name: the *convolution integral*. The convolution integral of two functions  $x_1(t)$  and  $x_2(t)$  is denoted symbolically by  $x_1(t) * x_2(t)$  and is defined as

$$x_1(t) * x_2(t) \equiv \int_{-\infty}^{\infty} x_1(\tau) x_2(t-\tau) d\tau$$
(2.24)

Some important properties of the convolution integral follow.

#### THE COMMUTATIVE PROPERTY

Convolution operation is commutative; that is,  $x_1(t) * x_2(t) = x_2(t) * x_1(t)$ . This property can be proved by a change of variable. In Eq. (2.24), if we let  $z = t - \tau$  so that  $\tau = t - z$  and  $d\tau = -dz$ , we obtain

$$x_{1}(t) * x_{2}(t) = -\int_{\infty}^{-\infty} x_{2}(z)x_{1}(t-z) dz$$
  
=  $\int_{-\infty}^{\infty} x_{2}(z)x_{1}(t-z) dz$   
=  $x_{2}(t) * x_{1}(t)$  (2.25)

$$y(t) = \int_{-\infty}^{\infty} x(\tau) h(t,\tau) \, d\tau$$

where  $h(t, \tau)$  is the system response at instant t to a unit impulse input located at  $\tau$ .

<sup>&</sup>lt;sup>†</sup> In deriving this result we have assumed a time-invariant system. If the system is time-varying, then the system response to the input  $\delta(t - n\Delta\tau)$  cannot be expressed as  $h(t - n\Delta\tau)$  but instead has the form  $h(t, n\Delta\tau)$ . Use of this form modifies Eq. (2.23) to

### THE DISTRIBUTIVE PROPERTY

According to the distributive property,

$$x_1(t) * [x_2(t) + x_3(t)] = x_1(t) * x_2(t) + x_1(t) * x_3(t)$$
(2.26)

#### THE ASSOCIATIVE PROPERTY

According to the associative property,

$$x_1(t) * [x_2(t) * x_3(t)] = [x_1(t) * x_2(t)] * x_3(t)$$
(2.27)

The proofs of Eqs. (2.26) and (2.27) follow directly from the definition of the convolution integral. They are left as an exercise for the reader.

THE SHIFT PROPERTY If

$$x_1(t) * x_2(t) = c(t)$$

then

$$x_1(t) * x_2(t-T) = x_1(t-T) * x_2(t) = c(t-T)$$

More generally, we see that

$$x_1(t-T_1) * x_2(t-T_2) = c(t-T_1-T_2)$$
(2.28)

**Proof.** We are given

$$x_1(t) * x_2(t) = \int_{-\infty}^{\infty} x_1(\tau) x_2(t-\tau) d\tau = c(t)$$

Therefore,

$$x_{1}(t) * x_{2}(t - T) = \int_{-\infty}^{\infty} x_{1}(\tau) x_{2}(t - T - \tau) d\tau$$
$$= c(t - T)$$

The equally simple proof of Eq. (2.28) follows a similar approach.

#### CONVOLUTION WITH AN IMPULSE

Convolution of a function x(t) with a unit impulse results in the function x(t) itself. By definition of convolution,

$$x(t) * \delta(t) = \int_{-\infty}^{\infty} x(\tau) \delta(t-\tau) d\tau$$

Because  $\delta(t - \tau)$  is an impulse located at  $\tau = t$ , according to the sampling property of the impulse [Eq. (1.11)], the integral here is just the value of  $x(\tau)$  at  $\tau = t$ , that is, x(t). Therefore,

$$x(t) * \delta(t) = x(t)$$

Actually this result was derived earlier [Eq. (2.22)].

#### 172 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

# THE WIDTH PROPERTY

If the durations (widths) of  $x_1(t)$  and  $x_2(t)$  are finite, given by  $T_1$  and  $T_2$ , respectively, then the duration (width) of  $x_1(t) * x_2(t)$  is  $T_1 + T_2$  (Fig. 2.4). The proof of this property follows readily from the graphical considerations discussed later in Sec. 2.4-2.

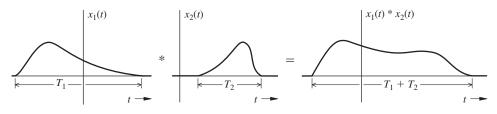


Figure 2.4 Width property of convolution.

# ZERO-STATE RESPONSE AND CAUSALITY

The (zero-state) response y(t) of an LTIC system is

$$y(t) = x(t) * h(t) = \int_{-\infty}^{\infty} x(\tau)h(t-\tau) d\tau$$
 (2.29)


In deriving Eq. (2.29), we assumed the system to be linear and time-invariant. There were no other restrictions either on the system or on the input signal x(t). Since, in practice, most systems are causal, their response cannot begin before the input. Furthermore, most inputs are also causal, which means they start at t = 0.

Causality restriction on both signals and systems further simplifies the limits of integration in Eq. (2.29). By definition, the response of a causal system cannot begin before its input begins. Consequently, the causal system's response to a unit impulse  $\delta(t)$  (which is located at t = 0) cannot begin before t = 0. Therefore, a *causal system's unit impulse response* h(t) is a *causal signal*.

It is important to remember that the integration in Eq. (2.29) is performed with respect to  $\tau$  (not *t*). If the input x(t) is causal,  $x(\tau) = 0$  for  $\tau < 0$ . Therefore,  $x(\tau) = 0$  for  $\tau < 0$ , as illustrated in Fig. 2.5a. Similarly, if h(t) is causal,  $h(t - \tau) = 0$  for  $t - \tau < 0$ ; that is, for  $\tau > t$ , as depicted in Fig. 2.5a. Therefore, the product  $x(\tau)h(t - \tau) = 0$  everywhere except over the nonshaded interval  $0 \le \tau \le t$  shown in Fig. 2.5a (assuming  $t \ge 0$ ). Observe that if *t* is negative,  $x(\tau)h(t - \tau) = 0$  for all  $\tau$ , as shown in Fig. 2.5b. Therefore, Eq. (2.29) reduces to

$$y(t) = x(t) * h(t) = \begin{cases} \int_{0^{-}}^{t} x(\tau)h(t-\tau) d\tau & t \ge 0\\ 0 & t < 0 \end{cases}$$
(2.30)

The lower limit of integration in Eq. (2.30) is taken as  $0^-$  to avoid the difficulty in integration that can arise if x(t) contains an impulse at the origin. This result shows that if x(t) and h(t) are both causal, the response y(t) is also causal.

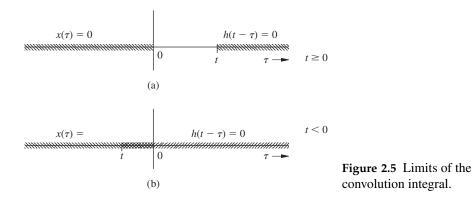

Because of the convolution's commutative property [Eq. (2.25)], we can also express Eq. (2.30) as [assuming causal x(t) and h(t)]

$$y(t) = \begin{cases} \int_{0^{-}}^{t} h(\tau) x(t-\tau) \, d\tau & t \ge 0\\ 0 & t < 0 \end{cases}$$

Hereafter, the lower limit of  $0^-$  will be implied even when we write it as 0. As in Eq. (2.30), this result assumes that both the input and the system are causal.

### **EXAMPLE 2.8** Computing the Zero-State Response

For an LTIC system with the unit impulse response  $h(t) = e^{-2t}u(t)$ , determine the response y(t) for the input

$$x(t) = e^{-t}u(t)$$

Here both x(t) and h(t) are causal (Fig. 2.6). Hence, from Eq. (2.30), we obtain


$$y(t) = \int_0^t x(\tau)h(t-\tau)\,d\tau \qquad t \ge 0$$

Because  $x(t) = e^{-t}u(t)$  and  $h(t) = e^{-2t}u(t)$ ,

$$x(\tau) = e^{-\tau} u(\tau)$$
 and  $h(t - \tau) = e^{-2(t - \tau)} u(t - \tau)$ 

Remember that the integration is performed with respect to  $\tau$  (not *t*), and the region of integration is  $0 \le \tau \le t$ . Hence,  $\tau \ge 0$  and  $t - \tau \ge 0$ . Therefore,  $u(\tau) = 1$  and  $u(t - \tau) = 1$ ; consequently,

$$y(t) = \int_0^t e^{-\tau} e^{-2(t-\tau)} d\tau \qquad t \ge 0$$

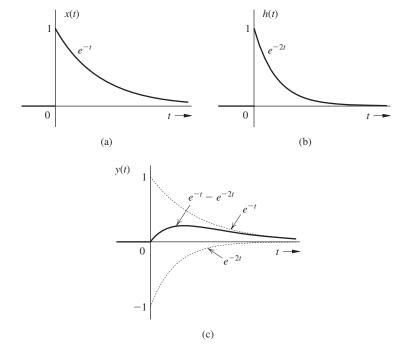



Because this integration is with respect to  $\tau$ , we can pull  $e^{-2t}$  outside the integral, giving us

$$y(t) = e^{-2t} \int_0^t e^{\tau} d\tau = e^{-2t} (e^t - 1) = e^{-t} - e^{-2t} \qquad t \ge 0$$

Moreover, y(t) = 0 when t < 0 [see Eq. (2.30)]. Therefore,

$$y(t) = (e^{-t} - e^{-2t})u(t)$$

The response is depicted in Fig. 2.6c.

# DRILL 2.5 Computing the Zero-State Response

For an LTIC system with the impulse response  $h(t) = 6e^{-t}u(t)$ , determine the system response to the input: (a) 2u(t) and (b)  $3e^{-3t}u(t)$ .

#### ANSWERS

- (a)  $12(1-e^{-t})u(t)$
- **(b)**  $9(e^{-t} e^{-3t})u(t)$

# DRILL 2.6 Zero-State Response with Resonance

Repeat Drill 2.5 for the input  $x(t) = e^{-t}u(t)$ .

#### ANSWER

 $6te^{-t}u(t)$ 

#### THE CONVOLUTION TABLE

The task of convolution is considerably simplified by a ready-made convolution table (Table 2.1). This table, which lists several pairs of signals and their convolution, can conveniently determine y(t), a system response to an input x(t), without performing the tedious job of integration. For instance, we could have readily found the convolution in Ex. 2.8 by using pair 4 (with  $\lambda_1 = -1$  and  $\lambda_2 = -2$ ) to be  $(e^{-t} - e^{-2t})u(t)$ . The following example demonstrates the utility of this table.

#### **EXAMPLE 2.9** Convolution by Tables

Use Table 2.1 to compute the loop current y(t) of the *RLC* circuit in Ex. 2.4 for the input  $x(t) = 10e^{-3t}u(t)$  when all the initial conditions are zero.

The loop equation for this circuit [see Ex. 1.16 or Eq. (1.29)] is

$$(D^2 + 3D + 2)y(t) = Dx(t)$$

The impulse response h(t) for this system, as obtained in Ex. 2.6, is

$$h(t) = (2e^{-2t} - e^{-t})u(t)$$

The input is  $x(t) = 10e^{-3t}u(t)$ , and the response y(t) is

$$y(t) = x(t) * h(t) = 10e^{-3t}u(t) * [2e^{-2t} - e^{-t}]u(t)$$

Using the distributive property of the convolution [Eq. (2.26)], we obtain

$$y(t) = 10e^{-3t}u(t) * 2e^{-2t}u(t) - 10e^{-3t}u(t) * e^{-t}u(t)$$
  
= 20[e^{-3t}u(t) \* e^{-2t}u(t)] - 10[e^{-3t}u(t) \* e^{-t}u(t)]

Now the use of pair 4 in Table 2.1 yields

$$y(t) = \frac{20}{-3 - (-2)} [e^{-3t} - e^{-2t}]u(t) - \frac{10}{-3 - (-1)} [e^{-3t} - e^{-t}]u(t)$$
$$= -20(e^{-3t} - e^{-2t})u(t) + 5(e^{-3t} - e^{-t})u(t)$$
$$= (-5e^{-t} + 20e^{-2t} - 15e^{-3t})u(t)$$

No.	$x_1(t)$	$x_2(t)$	$x_1(t) * x_2(t) = x_2(t) * x_1(t)$
1	x(t)	$\delta(t-T)$	x(t-T)
2	$e^{\lambda t}u(t)$	u(t)	$\frac{1-e^{\lambda t}}{-\lambda}u(t)$
3	u(t)	u(t)	tu(t)
4	$e^{\lambda_1 t}u(t)$	$e^{\lambda_2 t}u(t)$	$\frac{e^{\lambda_1 t} - e^{\lambda_2 t}}{\lambda_1 - \lambda_2} u(t) \qquad \lambda_1 \neq \lambda_2$
5	$e^{\lambda t}u(t)$	$e^{\lambda t}u(t)$	$te^{\lambda t}u(t)$
6	$te^{\lambda t}u(t)$	$e^{\lambda t}u(t)$	$\frac{1}{2}t^2e^{\lambda t}u(t)$
7	$t^N u(t)$	$e^{\lambda t}u(t)$	$\frac{N! e^{\lambda t}}{\lambda^{N+1}} u(t) - \sum_{k=0}^{N} \frac{N! t^{N-k}}{\lambda^{k+1} (N-k)!} u(t)$
8	$t^M u(t)$	$t^N u(t)$	$\frac{M!N!}{(M+N+1)!}t^{M+N+1}u(t)$
9	$te^{\lambda_1 t}u(t)$	$e^{\lambda_2 t}u(t)$	$\frac{e^{\lambda_2 t} - e^{\lambda_1 t} + (\lambda_1 - \lambda_2) t e^{\lambda_1 t}}{(\lambda_1 - \lambda_2)^2} u(t)$
10	$t^M e^{\lambda t} u(t)$	$t^N e^{\lambda t} u(t)$	$\frac{M!N!}{(N+M+1)!}t^{M+N+1}e^{\lambda t}u(t)$
11	$t^M e^{\lambda_1 t} u(t)$	$t^N e^{\lambda_2 t} u(t)$	$\sum_{k=0}^{M} \frac{(-1)^k M! (N+k)! t^{M-k} e^{\lambda_1 t}}{k! (M-k)! (\lambda_1 - \lambda_2)^{N+k+1}} u(t)$
	$\lambda_1  eq \lambda_2$		$+\sum_{k=0}^{N}\frac{(-1)^{k}N!(M+k)!t^{N-k}e^{\lambda_{2}t}}{k!(N-k)!(\lambda_{2}-\lambda_{1})^{M+k+1}}u(t)$
12	$e^{-\alpha t}\cos{(\beta t+\theta)}u(t)$	$e^{\lambda t}u(t)$	$\frac{\cos\left(\theta-\phi\right)e^{\lambda t}-e^{-\alpha t}\cos\left(\beta t+\theta-\phi\right)}{\sqrt{(\alpha+\lambda)^2+\beta^2}}u(t)$
			$\phi = \tan^{-1}[-\beta/(\alpha+\lambda)]$
13	$e^{\lambda_1 t}u(t)$	$e^{\lambda_2 t}u(-t)$	$\frac{e^{\lambda_1 t} u(t) + e^{\lambda_2 t} u(-t)}{\lambda_2 - \lambda_1}  \operatorname{Re} \lambda_2 > \operatorname{Re} \lambda_1$
14	$e^{\lambda_1 t}u(-t)$	$e^{\lambda_2 t}u(-t)$	$\frac{e^{\lambda_1 t} - e^{\lambda_2 t}}{\lambda_2 - \lambda_1} u(-t)$

**TABLE 2.1** Select Convolution Integrals

#### **DRILL 2.7** Convolution by Tables

Use Table 2.1 to show  $e^{-2t}u(t) * (1 - e^{-t})u(t) = \left(\frac{1}{2} - e^{-t} + \frac{1}{2}e^{-2t}\right)u(t)$ .

#### DRILL 2.8 Zero-State Response by Convolution Table

Rework Drills 2.5 and 2.6 using Table 2.1.

#### DRILL 2.9 Another Zero-State Response by Convolution Table

For an LTIC system with the unit impulse response  $h(t) = e^{-2t}u(t)$ , determine the zero-state response y(t) if the input  $x(t) = \sin 3t u(t)$ . [*Hint:* Use pair 12 from Table 2.1.]

ANSWER

 $\frac{1}{13}[3e^{-2t} + \sqrt{13}\cos(3t - 146.32^{\circ})]u(t) \text{ or } \frac{1}{13}[3e^{-2t} - \sqrt{13}\cos(3t + 33.68^{\circ})]u(t)$ 

#### **RESPONSE TO COMPLEX INPUTS**

The LTIC system response discussed so far applies to general input signals, real or complex. However, if the system is real, that is, if h(t) is real, then we shall show that the real part of the input generates the real part of the output, and a similar conclusion applies to the imaginary part.

If the input is  $x(t) = x_r(t) + jx_i(t)$ , where  $x_r(t)$  and  $x_i(t)$  are the real and imaginary parts of x(t), then for real h(t)

$$y(t) = h(t) * [x_r(t) + jx_i(t)] = h(t) * x_r(t) + jh(t) * x_i(t) = y_r(t) + jy_i(t)$$

where  $y_r(t)$  and  $y_i(t)$  are the real and the imaginary parts of y(t). Using the right-directed-arrow notation to indicate a pair of the input and the corresponding output, the foregoing result can be expressed as follows. If

$$x(t) = x_r(t) + jx_i(t) \implies y(t) = y_r(t) + jy_i(t)$$

then

$$x_r(t) \implies y_r(t) \quad \text{and} \quad x_i(t) \implies y_i(t) \quad (2.31)$$

# MULTIPLE INPUTS

Multiple inputs to LTI systems can be treated by applying the superposition principle. Each input is considered separately, with all other inputs assumed to be zero. The sum of all these individual system responses constitutes the total system output when all the inputs are applied simultaneously.

# 2.4-2 Graphical Understanding of Convolution Operation

The convolution operation can be grasped readily through a graphical interpretation of the convolution integral. Such an understanding is helpful in evaluating the convolution integral of more complex signals. In addition, graphical convolution allows us to grasp visually or mentally the convolution integral's result, which can be of great help in sampling, filtering, and many other problems. Finally, many signals have no exact mathematical description, so they can be described only graphically. If two such signals are to be convolved, we have no choice but to perform their convolution graphically.

We shall now explain the convolution operation by convolving the signals x(t) and g(t), illustrated in Figs. 2.7a and 2.7b, respectively. If c(t) is the convolution of x(t) with g(t), then

$$c(t) = \int_{-\infty}^{\infty} x(\tau)g(t-\tau)\,d\tau$$

One of the crucial points to remember here is that this integration is performed with respect to  $\tau$  so that *t* is just a parameter (like a constant). This consideration is especially important when we sketch the graphical representations of the functions  $x(\tau)$  and  $g(t - \tau)$ . Both these functions should be sketched as functions of  $\tau$ , not of *t*.

The function  $x(\tau)$  is identical to x(t), with  $\tau$  replacing t (Fig. 2.7c). Therefore, x(t) and  $x(\tau)$  will have the same graphical representations. Similar remarks apply to g(t) and  $g(\tau)$  (Fig. 2.7d).

To appreciate what  $g(t - \tau)$  looks like, let us start with the function  $g(\tau)$  (Fig. 2.7d). Time reversal of this function (reflection about the vertical axis  $\tau = 0$ ) yields  $g(-\tau)$  (Fig. 2.7e). Let us denote this function by  $\phi(\tau)$ :

$$\phi(\tau) = g(-\tau)$$

Now  $\phi(\tau)$  shifted by *t* seconds is  $\phi(\tau - t)$ , given by

$$\phi(\tau - t) = g[-(\tau - t)] = g(t - \tau)$$

Therefore, we first time-reverse  $g(\tau)$  to obtain  $g(-\tau)$  and then time-shift  $g(-\tau)$  by t to obtain  $g(t-\tau)$ . For positive t, the shift is to the right (Fig. 2.7f); for negative t, the shift is to the left (Figs. 2.7g, 2.7h).

The preceding discussion gives us a graphical interpretation of the functions  $x(\tau)$  and  $g(t-\tau)$ . The convolution c(t) is the area under the product of these two functions. Thus, to compute c(t) at some positive instant  $t = t_1$ , we first obtain  $g(-\tau)$  by inverting  $g(\tau)$  about the vertical axis. Next, we right-shift or delay  $g(-\tau)$  by  $t_1$  to obtain  $g(t_1 - \tau)$  (Fig. 2.7f), and then we multiply this function by  $x(\tau)$ , giving us the product  $x(\tau)g(t_1 - \tau)$  (shaded portion in Fig. 2.7f). The area  $A_1$  under this product is  $c(t_1)$ , the value of c(t) at  $t = t_1$ . We can therefore plot  $c(t_1) = A_1$  on a curve describing c(t), as shown in Fig. 2.7i. The area under the product  $x(\tau)g(-\tau)$  in Fig. 2.7e is c(0), the value of the convolution for t = 0 (at the origin).

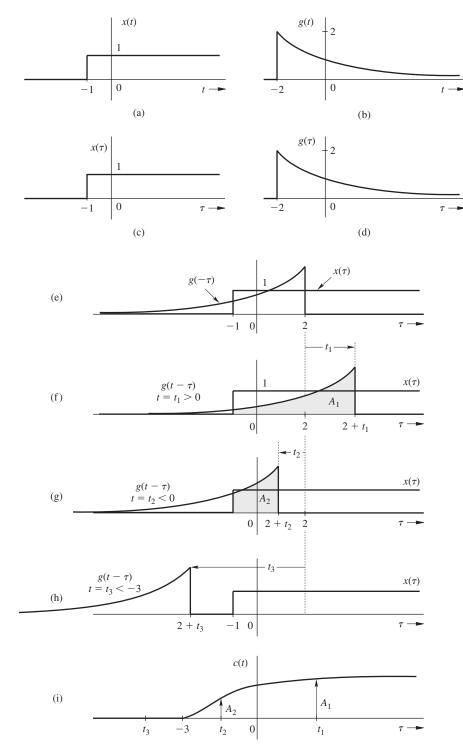


Figure 2.7 Graphical explanation of the convolution operation.

#### 180 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS


A similar procedure is followed in computing the value of c(t) at  $t = t_2$ , where  $t_2$  is negative (Fig. 2.7g). In this case, the function  $g(-\tau)$  is shifted by a negative amount (that is, left-shifted) to obtain  $g(t_2 - \tau)$ . Multiplication of this function with  $x(\tau)$  yields the product  $x(\tau)g(t_2 - \tau)$ . The area under this product is  $c(t_2) = A_2$ , giving us another point on the curve c(t) at  $t = t_2$  (Fig. 2.7i). This procedure can be repeated for all values of t, from  $-\infty$  to  $\infty$ . The result will be a curve describing c(t) for all time t. Note that when  $t \le -3, x(\tau)$  and  $g(t - \tau)$  do not overlap (see Fig. 2.7h); therefore, c(t) = 0 for  $t \le -3$ .

### SUMMARY OF THE GRAPHICAL PROCEDURE

The procedure for graphical convolution can be summarized as follows:

- 1. Keep the function  $x(\tau)$  fixed.
- 2. Visualize the function  $g(\tau)$  as a rigid wire frame, and rotate (or invert) this frame about the vertical axis ( $\tau = 0$ ) to obtain  $g(-\tau)$ .
- 3. Shift the inverted frame along the  $\tau$  axis by  $t_0$  seconds. The shifted frame now represents  $g(t_0 \tau)$ .
- 4. The area under the product of  $x(\tau)$  and  $g(t_0 \tau)$  (the shifted frame) is  $c(t_0)$ , the value of the convolution at  $t = t_0$ .
- 5. Repeat this procedure, shifting the frame by different values (positive and negative) to obtain c(t) for all values of t.

The graphical procedure discussed here appears very complicated and discouraging at first reading. Indeed, some people claim that convolution has driven many electrical engineering undergraduates to contemplate theology either for salvation or as an alternative career (*IEEE Spectrum*, March 1991, p. 60). Actually, the bark of convolution is worse than its bite. In graphical convolution, we need to determine the area under the product  $x(\tau)g(t - \tau)$  for all values of t from  $-\infty$  to  $\infty$ . However, a mathematical description of  $x(\tau)g(t - \tau)$  is generally valid over a range

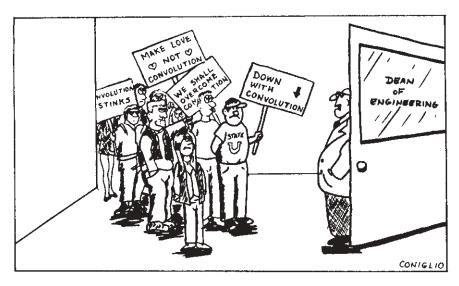

Convolution: Its bark is worse than its bite!

of *t*. Therefore, repeating the procedure for every value of *t* amounts to repeating it only a few times for different ranges of *t*.

We can also use the commutative property of convolution to our advantage by computing x(t) \* g(t) or g(t) \* x(t), whichever is simpler. As a rule of thumb, *convolution computations are simplified if we choose to invert (time-reverse) the simpler of the two functions*. For example, if the mathematical description of g(t) is simpler than that of x(t), then x(t) \* g(t) will be easier to compute than g(t) \* x(t). In contrast, if the mathematical description of x(t) is simpler, the reverse will be true.

We shall demonstrate graphical convolution with the following examples. Let us start by using this graphical method to rework Ex. 2.8.

#### **EXAMPLE 2.10** Graphical Convolution of Two Causal Functions

Determine graphically y(t) = x(t) \* h(t) for  $x(t) = e^{-t}u(t)$  and  $h(t) = e^{-2t}u(t)$ .

In Figs. 2.8a and 2.8b we have x(t) and h(t), respectively; and Fig. 2.8c shows  $x(\tau)$  and  $h(-\tau)$  as functions of  $\tau$ . The function  $h(t-\tau)$  is now obtained by shifting  $h(-\tau)$  by t. If t is positive, the shift is to the right (delay); if t is negative, the shift is to the left (advance). Figure 2.8d shows that for negative t,  $h(t-\tau)$  [obtained by left-shifting  $h(-\tau)$ ] does not overlap  $x(\tau)$ , and the product  $x(\tau)h(t-\tau) = 0$ , so that

$$y(t) = 0 \qquad t < 0$$

Figure 2.8e shows the situation for  $t \ge 0$ . Here  $x(\tau)$  and  $h(t - \tau)$  do overlap, but the product is nonzero only over the interval  $0 \le \tau \le t$  (shaded interval). Therefore,

$$y(t) = \int_0^t x(\tau)h(t-\tau)\,d\tau \qquad t \ge 0$$

All we need to do now is substitute correct expressions for  $x(\tau)$  and  $h(t - \tau)$  in this integral. From Figs. 2.8a and 2.8b, it is clear that the segments of x(t) and g(t) to be used in this convolution (Fig. 2.8e) are described by

$$x(t) = e^{-t}$$
 and  $h(t) = e^{-2t}$ 

Therefore,


$$x(\tau) = e^{-\tau}$$
 and  $h(t - \tau) = e^{-2(t - \tau)}$ 

Consequently,

$$y(t) = \int_0^t e^{-\tau} e^{-2(t-\tau)} d\tau = e^{-2t} \int_0^t e^{\tau} d\tau = e^{-t} - e^{-2t} \qquad t \ge 0$$

Moreover, y(t) = 0 for t < 0 so that

$$y(t) = (e^{-t} - e^{-2t})u(t)$$

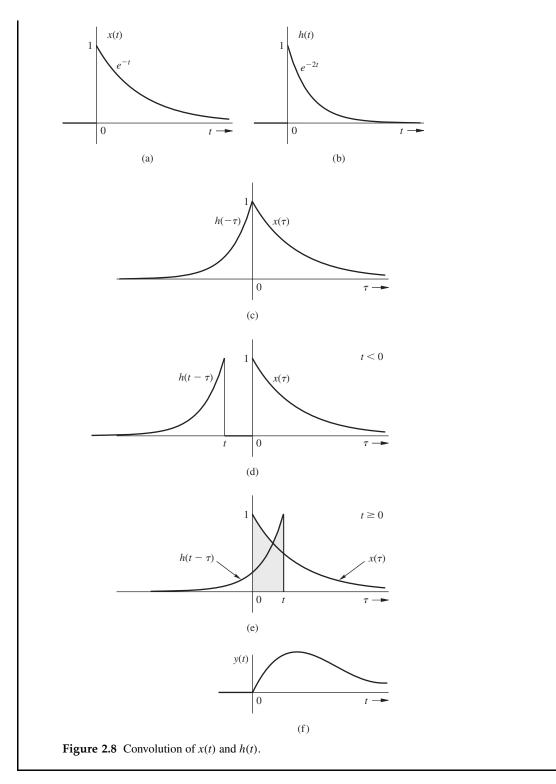

# **EXAMPLE 2.11** Graphical Convolution: Causal Function and Two-Sided Function

Find c(t) = x(t) \* g(t) for the signals depicted in Figs. 2.9a and 2.9b.

Since x(t) is simpler than g(t), it is easier to evaluate g(t) \* x(t) than x(t) \* g(t). However, we shall intentionally take the more difficult route and evaluate x(t) \* g(t).

From x(t) and g(t) (Figs. 2.9a and 2.9b, respectively), observe that g(t) is composed of two segments. As a result, it can be described as

$$g(t) = \begin{cases} 2e^{-t} & \text{segment A} \\ -2e^{2t} & \text{segment B} \end{cases}$$

Therefore,

$$g(t-\tau) = \begin{cases} 2e^{-(t-\tau)} & \text{segment A} \\ -2e^{2(t-\tau)} & \text{segment B} \end{cases}$$

The segment of x(t) that is used in convolution is x(t) = 1 so that  $x(\tau) = 1$ . Figure 2.9c shows  $x(\tau)$  and  $g(-\tau)$ .

To compute c(t) for  $t \ge 0$ , we right-shift  $g(-\tau)$  to obtain  $g(t-\tau)$ , as illustrated in Fig. 2.9d. Clearly,  $g(t-\tau)$  overlaps with  $x(\tau)$  over the shaded interval, that is, over the range  $\tau \ge 0$ ; segment A overlaps with  $x(\tau)$  over the interval (0, t), while segment B overlaps with  $x(\tau)$  over  $(t, \infty)$ . Remembering that  $x(\tau) = 1$ , we have

$$c(t) = \int_0^\infty x(\tau)g(t-\tau) d\tau$$
  
=  $\int_0^t 2e^{-(t-\tau)} d\tau + \int_t^\infty -2e^{2(t-\tau)} d\tau$   
=  $2(1-e^{-t}) - 1 = 1 - 2e^{-t}$   $t \ge 0$ 


Figure 2.9e shows the situation for t < 0. Here the overlap is over the shaded interval, that is, over the range  $\tau \ge 0$ , where only the segment B of g(t) is involved. Therefore,

$$c(t) = \int_0^\infty x(\tau)g(t-\tau)\,d\tau = \int_0^\infty -2e^{2(t-\tau)}\,d\tau = -e^{2t} \qquad t \le 0$$

Therefore,

$$c(t) = \begin{cases} 1 - 2e^{-t} & t \ge 0 \\ -e^{2t} & t \le 0 \end{cases}$$

Figure 2.9f shows a plot of c(t).

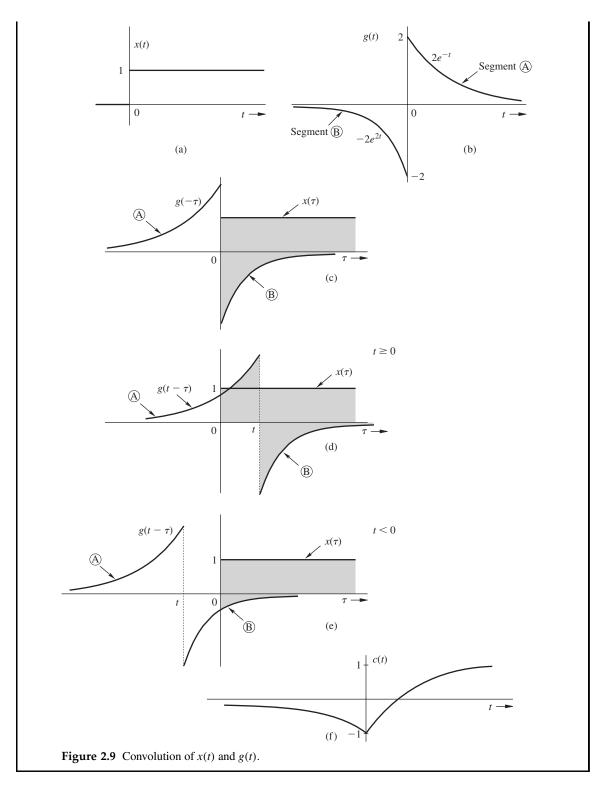

# **EXAMPLE 2.12** Graphical Convolution of Two Finite-Duration Functions

Find x(t) \* g(t) for the functions x(t) and g(t) shown in Figs. 2.10a and 2.10b.

Here, x(t) has a simpler mathematical description than that of g(t), so it is preferable to time-reverse x(t). Hence, we shall determine g(t) \* x(t) rather than x(t) \* g(t). Thus,

$$c(t) = g(t) * x(t) = \int_{-\infty}^{\infty} g(\tau) x(t-\tau) d\tau$$

First, we determine the expressions for the segments of x(t) and g(t) used in finding c(t). According to Figs. 2.10a and 2.10b, these segments can be expressed as

$$x(t) = 1$$
 and  $g(t) = \frac{1}{3}t$ 

so that

$$x(t - \tau) = 1$$
 and  $g(\tau) = \frac{1}{3}\tau$ 

Figure 2.10c shows  $g(\tau)$  and  $x(-\tau)$ , whereas Fig. 2.10d shows  $g(\tau)$  and  $x(t - \tau)$ , which is  $x(-\tau)$  shifted by *t*. Because the edges of  $x(-\tau)$  are at  $\tau = -1$  and 1, the edges of  $x(t - \tau)$  are at -1 + t and 1 + t. The two functions overlap over the interval (0, 1 + t) (shaded interval) so that

$$c(t) = \int_0^{1+t} g(\tau) x(t-\tau) \, d\tau = \int_0^{1+t} \frac{1}{3} \tau \, d\tau = \frac{1}{6} (t+1)^2 \qquad -1 \le t \le 1 \qquad (2.32)$$

This situation, depicted in Fig. 2.10d, is valid only for  $-1 \le t \le 1$ . For  $t \ge 1$  but  $\le 2$ , the situation is as illustrated in Fig. 2.10e. The two functions overlap only over the range -1 + t to 1 + t (shaded interval). Note that the expressions for  $g(\tau)$  and  $x(t - \tau)$  do not change; only the range of integration changes. Therefore,


$$c(t) = \int_{-1+t}^{1+t} \frac{1}{3}\tau \, d\tau = \frac{2}{3}t \qquad 1 \le t \le 2$$
(2.33)

Also note that the expressions in Eqs. (2.32) and (2.33) both apply at t = 1, the transition point between their respective ranges. We can readily verify that both expressions yield a value of 2/3 at t = 1 so that c(1) = 2/3. The continuity of c(t) at transition points indicates a high probability of a correct answer. Continuity of c(t) at transition points is assured as long as x(t) and g(t) contain no impulse functions.

For  $t \ge 2$  but  $\le 4$ , the situation is as shown in Fig. 2.10f. The functions  $g(\tau)$  and  $x(t - \tau)$  overlap over the interval from -1 + t to 3 (shaded interval) so that

$$c(t) = \int_{-1+t}^{3} \frac{1}{3}\tau \, d\tau = -\frac{1}{6}(t^2 - 2t - 8) \qquad 2 \le t \le 4 \qquad (2.34)$$

186

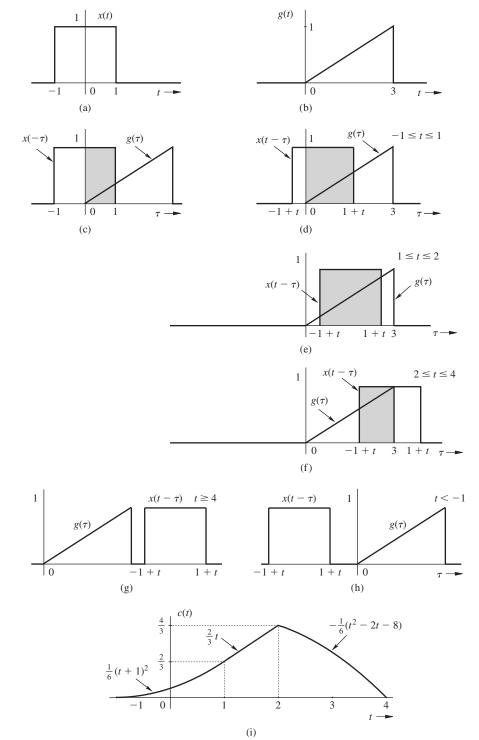

**Figure 2.10** Convolution of x(t) and g(t).

Both Eqs. (2.33) and (2.34) apply at the transition point t = 2. We can readily verify that c(2) = 4/3 when either of these expressions is used.

For  $t \ge 4$ ,  $x(t - \tau)$  has been shifted so far to the right that it no longer overlaps with  $g(\tau)$  as depicted in Fig. 2.10g. Consequently,

$$c(t) = 0 \qquad t \ge 4$$

We now turn our attention to negative values of t. We have already determined c(t) up to t = -1. For t < -1, there is no overlap between the two functions, as illustrated in Fig. 2.10h, so that

$$t(t) = 0 \qquad t \le -1$$

C

Combining our results, we see that

$$c(t) = \begin{cases} \frac{1}{6}(t+1)^2 & -1 \le t < 1\\ \frac{2}{3}t & 1 \le t < 2\\ -\frac{1}{6}(t^2 - 2t - 8) & 2 \le t < 4\\ 0 & \text{otherwise} \end{cases}$$

Figure 2.10i plots c(t) according to this expression.

#### THE WIDTH OF CONVOLVED FUNCTIONS

The widths (durations) of x(t), g(t), and c(t) in Ex. 2.12 (Fig. 2.10) are 2, 3, and 5, respectively. Note that the width of c(t) in this case is the sum of the widths of x(t) and g(t). This observation is not a coincidence. Using the concept of graphical convolution, we can readily see that if x(t)and g(t) have the finite widths of  $T_1$  and  $T_2$  respectively, then the width of c(t) is equal to  $T_1 + T_2$ . The reason is that the time it takes for a signal of width (duration)  $T_1$  to completely pass another signal of width (duration)  $T_2$  so that they become non-overlapping is  $T_1 + T_2$ . When the two signals become non-overlapping, the convolution goes to zero.


### DRILL 2.10 Interchanging Convolution Order

Rework Ex. 2.11 by evaluating g(t) \* x(t).


#### DRILL 2.11 Showing Commutability Using Two Causal Signals


Use graphical convolution to show that x(t) \* g(t) = g(t) \* x(t) = c(t) in Fig. 2.11.

187

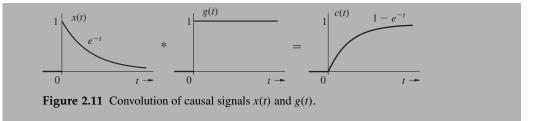

# DRILL 2.12 Showing Commutability Using a Causal Signal and an Anticausal Signal

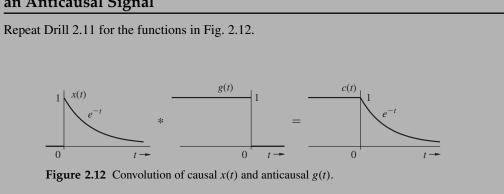

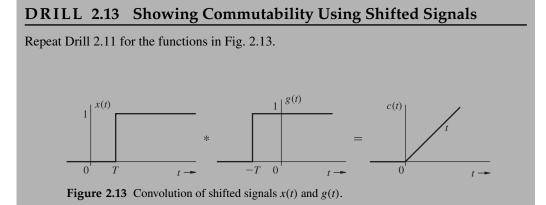

188

#### THE PHANTOM OF THE SIGNALS AND SYSTEMS OPERA

In the study of signals and systems we often come across some signals such as an impulse, which cannot be generated in practice and have never been sighted by anyone.<sup>†</sup> One wonders why we even consider such idealized signals. The answer should be clear from our discussion so far in this chapter. Even if the impulse function has no physical existence, we can compute the system response h(t) to this phantom input according to the procedure in Sec. 2.3, and knowing h(t), we can compute the system response to any arbitrary input. The concept of impulse response, therefore, provides an effective intermediary for computing system response to an arbitrary input. In addition, the impulse response h(t) itself provides a great deal of information and insight about the system behavior. In Sec. 2.6 we show that the knowledge of impulse response provides much valuable information, such as the response time, pulse dispersion, and filtering properties of the system. Many other useful insights about the system behavior can be obtained by inspection of h(t).

Similarly, in frequency-domain analysis (discussed in later chapters), we use an *everlasting exponential* (or *sinusoid*) to determine system response. An everlasting exponential (or sinusoid), too, is a phantom, which nobody has ever seen and which has no physical existence. But it provides another effective intermediary for computing the system response to an arbitrary input. Moreover, the system response to everlasting exponential (or sinusoid) provides valuable information and insight regarding the system's behavior. Clearly, idealized impulses and everlasting sinusoids are friendly and helpful spirits.

Interestingly, the unit impulse and the everlasting exponential (or sinusoid) are the dual of each other in the time-frequency duality, to be studied in Ch. 7. Actually, the time-domain and the frequency-domain methods of analysis are the dual of each other.

# WHY CONVOLUTION? AN INTUITIVE EXPLANATION OF SYSTEM RESPONSE

On the surface, it appears rather strange that the response of linear systems (those gentlest of the gentle systems) should be given by such a tortuous operation of convolution, where one signal is fixed and the other is inverted and shifted. To understand this odd behavior, consider a hypothetical impulse response h(t) that decays linearly with time (Fig. 2.14a). This response is strongest at t = 0, the moment the impulse is applied, and it decays linearly at future instants so that one second later (at t = 1 and beyond), it ceases to exist. This means that the closer the impulse input is to an instant t, the stronger is its response at t.

Now consider the input x(t) shown in Fig. 2.14b. To compute the system response, we break the input into rectangular pulses and approximate these pulses with impulses. Generally, the response of a causal system at some instant t will be determined by all the impulse components of the input before t. Each of these impulse components will have different weight in determining the response at the instant t, depending on its proximity to t. As seen earlier, the closer the impulse is to t, the stronger is its influence at t. The impulse at t has the greatest weight (unity) in determining

<sup>&</sup>lt;sup>†</sup> The late Prof. S. J. Mason, the inventor of signal flow graph techniques, used to tell a story of a student frustrated with the impulse function. The student said, "The unit impulse is a thing that is so small you can't see it, except at one place (the origin), where it is so big you can't see it. In other words, you can't see it at all; at least I can't!" [2].

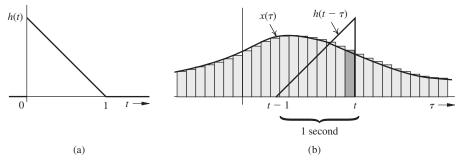


Figure 2.14 Intuitive explanation of convolution.

the response at t. The weight decreases linearly for all impulses before t until the instant t - 1. The input before t - 1 has no influence (zero weight). Thus, to determine the system response at t, we must assign a linearly decreasing weight to impulses occurring before t, as shown in Fig. 2.14b. This weighting function is precisely the function  $h(t - \tau)$ . The system response at t is then determined not by the input  $x(\tau)$  but by the weighted input  $x(\tau)h(t - \tau)$ , and the summation of all these weighted inputs is the convolution integral.

#### 2.4-3 Interconnected Systems

A larger, more complex system can often be viewed as the interconnection of several smaller subsystems, each of which is easier to characterize. Knowing the characterizations of these subsystems, it becomes simpler to analyze such large systems. We shall consider here two basic interconnections, cascade and parallel. Figure 2.15a shows  $S_1$  and  $S_2$ , two LTIC subsystems connected in parallel, and Fig. 2.15b shows the same two systems connected in cascade.


In Fig. 2.15a, the device depicted by the symbol  $\Sigma$  inside a circle represents an adder, which adds signals at its inputs. Also the junction from which two (or more) branches radiate out is called the *pickoff node*. Every branch that radiates out from the pickoff node carries the same signal (the signal at the junction). In Fig. 2.15a, for instance, the junction at which the input is applied is a pickoff node from which two branches radiate out, each of which carries the input signal at the node.

Let the impulse response of  $S_1$  and  $S_2$  be  $h_1(t)$  and  $h_2(t)$ , respectively. Further assume that interconnecting these systems, as shown in Fig. 2.15, does not load them. This means that the impulse response of either of these systems remains unchanged whether observed when these systems are unconnected or when they are interconnected.

To find  $h_p(t)$ , the impulse response of the parallel system  $S_p$  in Fig. 2.15a, we apply an impulse at the input of  $S_p$ . This results in the signal  $\delta(t)$  at the inputs of  $S_1$  and  $S_2$ , leading to their outputs  $h_1(t)$  and  $h_2(t)$ , respectively. These signals are added by the adder to yield  $h_1(t) + h_2(t)$  as the output of  $S_p$ :

$$h_p(t) = h_1(t) + h_2(t)$$

To find  $h_c(t)$ , the impulse response of the cascade system  $S_c$  in Fig. 2.15b, we apply the input  $\delta(t)$  at the input of  $S_c$ , which is also the input to  $S_1$ . Hence, the output of  $S_1$  is  $h_1(t)$ , which now acts

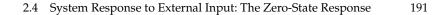

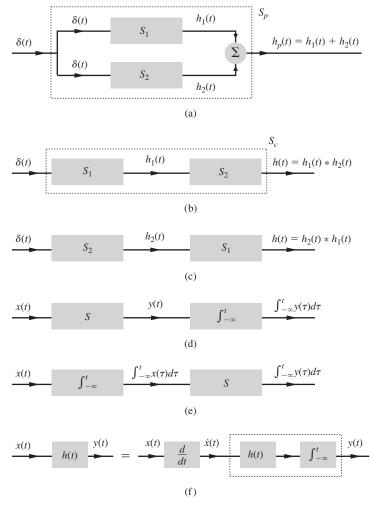


Figure 2.15 Interconnected systems.

as the input to  $S_2$ . The response of  $S_2$  to input  $h_1(t)$  is  $h_1(t) * h_2(t)$ . Therefore,

$$h_c(t) = h_1(t) * h_2(t)$$

Because of the commutative property of convolution, it follows that interchanging the systems  $S_1$  and  $S_2$ , as shown in Fig. 2.15c, results in the same impulse response  $h_1(t) * h_2(t)$ . This means that when several LTIC systems are cascaded, the order of systems does not affect the impulse response of the composite system. In other words, linear operations, performed in cascade, commute. The order in which they are performed is not important, at least theoretically.<sup>†</sup>

<sup>&</sup>lt;sup>†</sup>Change of order, however, could affect performance because of physical limitations and sensitivities to changes in the subsystems involved.

#### 192 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

We shall give here another interesting application of the commutative property of LTIC systems. Figure 2.15d shows a cascade of two LTIC systems: a system S with impulse response h(t), followed by an ideal integrator. Figure 2.15e shows a cascade of the same two systems in reverse order; an ideal integrator followed by S. In Fig. 2.15d, if the input x(t) to S yields the output y(t), then the output of the system of Fig. 2.15d is the integral of y(t). In Fig. 2.15e, the output of the integrator is the integral of x(t). The output in Fig. 2.15e is identical to the output in Fig. 2.15d. Hence, it follows that if an LTIC system response to input x(t) is y(t), then the response of the same system to the integral of x(t) is the integral of y(t). In other words,

if 
$$x(t) \Longrightarrow y(t)$$
 then  $\int_{-\infty}^{t} x(\tau) d\tau \Longrightarrow \int_{-\infty}^{t} y(\tau) d\tau$ 

Replacing the ideal integrator with an ideal differentiator in Figs. 2.15d and 2.15e, and following a similar argument, we conclude that

if 
$$x(t) \Longrightarrow y(t)$$
 then  $\frac{dx(t)}{dt} \Longrightarrow \frac{dy(t)}{dt}$ 

If we let  $x(t) = \delta(t)$  and y(t) = h(t) in Fig. 2.15e, we find that g(t), the unit step response of an LTIC system with impulse h(t), is given by

$$g(t) = \int_{-\infty}^{t} h(\tau) d\tau$$
 (2.35)

We can also show that the system response to  $\delta(t)$  is dh(t)/dt. These results can be extended to other singularity functions. For example, the unit ramp response of an LTIC system is the integral of its unit step response, and so on.

#### **INVERSE SYSTEMS**

In Fig. 2.15b, if  $S_1$  and  $S_2$  are inverse systems with impulse response h(t) and  $h_i(t)$ , respectively, then the impulse response of the cascade of these systems is  $h(t) * h_i(t)$ . But, the cascade of a system with its inverse is an identity system, whose output is the same as the input. In other words, the unit impulse response of the cascade of inverse systems is also an unit impulse  $\delta(t)$ . Hence,

$$h(t) * h_i(t) = \delta(t) \tag{2.36}$$

We shall give an interesting application of the commutative property. As seen from Eq. (2.36), a cascade of inverse systems is an identity system. Moreover, in a cascade of several LTIC subsystems, changing the order of the subsystems in any manner does not affect the impulse response of the cascade system. Using these facts, we observe that the two systems, shown in Fig. 2.15f, are equivalent. We can compute the response of the cascade system on the right-hand side, by computing the response of the system inside the dotted box to the input  $\dot{x}(t)$ . The impulse response of the dotted box is g(t), the integral of h(t), as given in Eq. (2.35). Hence, it follows that

$$y(t) = x(t) * h(t) = \dot{x}(t) * g(t)$$
(2.37)

Recall that g(t) is the unit step response of the system. Hence, an LTIC response can also be obtained as a convolution of  $\dot{x}(t)$  (the derivative of the input) with the unit step response of the

system. This result can be readily extended to higher derivatives of the input. An LTIC system response is the convolution of the *n*th derivative of the input with the *n*th integral of the impulse response.

# **2.4-4** A Very Special Function for LTIC Systems: The Everlasting Exponential *e*<sup>st</sup>

There is a very special connection of LTIC systems with the everlasting exponential function  $e^{st}$ , where s is a complex variable, in general. We now show that the LTIC system's (zero-state) response to everlasting exponential input  $e^{st}$  is also the same everlasting exponential (within a multiplicative constant). Moreover, no other function can make the same claim. Such an input for which the system response is also of the same form is called the *characteristic function* (also *eigenfunction*) of the system. Because a sinusoid is a form of exponential ( $s = \pm j\omega$ ), everlasting sinusoid is also a characteristic function of an LTIC system. Note that we are talking here of an everlasting exponential (or sinusoid), which starts at  $t = -\infty$ .

If h(t) is the system's unit impulse response, then system response y(t) to an everlasting exponential  $e^{st}$  is given by

$$y(t) = h(t) * e^{st} = \int_{-\infty}^{\infty} h(\tau) e^{s(t-\tau)} d\tau = e^{st} \int_{-\infty}^{\infty} h(\tau) e^{-s\tau} d\tau$$

The integral on the right-most side is a function of a complex variable s and a constant with respect to t. Let us denote this term by H(s), which is also complex, in general. Thus,

$$y(t) = H(s)e^{st} \tag{2.38}$$

where

$$H(s) = \int_{-\infty}^{\infty} h(\tau) e^{-s\tau} d\tau$$
(2.39)

Equation (2.38) is valid only for the values of *s* for which H(s) exists, that is, if  $\int_{-\infty}^{\infty} h(\tau)e^{-s\tau} d\tau$  exists (or converges). The region in the *s* plane for which this integral converges is called the *region* of convergence for H(s). Further elaboration of the region of convergence is presented in Ch. 4.

For a given s, note that H(s) is a constant. Thus, the input and the output are the same (within a multiplicative constant) for the everlasting exponential signal.

H(s), which is called the *transfer function* of the system, is a function of complex variable s. An alternate definition of the transfer function H(s) of an LTIC system, as seen from Eq. (2.38), is

$$H(s) = \frac{\text{output signal}}{\text{input signal}}\Big|_{\text{input=everlasting exponential } e^{st}}$$
(2.40)

The transfer function is defined for, and is meaningful to, LTIC systems only. It does not exist for nonlinear or time-varying systems, in general.

We repeat again that this discussion is about the everlasting exponential, which starts at  $t = -\infty$ , not the causal exponential  $e^{st}u(t)$ , which starts at t = 0.

#### 194 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

For a system specified by Eq. (2.2), the transfer function is given by

$$H(s) = \frac{P(s)}{Q(s)} \tag{2.41}$$

This follows readily by considering an everlasting input  $x(t) = e^{st}$ . According to Eq. (2.38), the output is  $y(t) = H(s)e^{st}$ . Substitution of this x(t) and y(t) in Eq. (2.2) yields

$$H(s)[Q(D)e^{st}] = P(D)e^{st}$$

Moreover,

$$D^r e^{st} = \frac{d^r e^{st}}{dt^r} = s^r e^{st}$$

Hence,

$$P(D)e^{st} = P(s)e^{st}$$
 and  $Q(D)e^{st} = Q(s)e^{st}$ 

Consequently,

$$H(s) = \frac{P(s)}{Q(s)}$$

# **DRILL 2.14** Ideal Integrator and Differentiator Transfer Functions

Show that the transfer function of an ideal integrator is H(s) = 1/s and that of an ideal differentiator is H(s) = s. Find the answer in two ways: using Eq. (2.39) and using Eq. (2.41). [*Hint:* Find h(t) for the ideal integrator and differentiator. You also may need to use the result in Prob. 1.4-12.]

#### A FUNDAMENTAL PROPERTY OF LTI SYSTEMS

We can show that Eq. (2.38) is a fundamental property of LTI systems and it follows directly as a consequence of linearity and time invariance. To show this let us assume that the response of an LTI system to an everlasting exponential  $e^{st}$  is y(s,t). If we define

$$H(s,t) = \frac{y(s,t)}{e^{st}}$$

then

$$y(s,t) = H(s,t) e^{st}$$

Because of the time-invariance property, the system response to input  $e^{s(t-T)}$  is  $H(s, t-T) e^{s(t-T)}$ , that is,

$$y(s, t - T) = H(s, t - T) e^{s(t - T)}$$
(2.42)

The delayed input  $e^{s(t-T)}$  represents the input  $e^{st}$  multiplied by a constant  $e^{-sT}$ . Hence, according to the linearity property, the system response to  $e^{s(t-T)}$  must be  $y(s,t)e^{-sT}$ . Hence,

$$y(s, t - T) = y(s, t) e^{-sT} = H(s, t) e^{s(t-T)}$$

Comparison of this result with Eq. (2.42) shows that

$$H(s,t) = H(s,t-T)$$
 for all T

This means H(s,t) is independent of t, and we can express H(s,t) = H(s). Hence,

$$y(s,t) = H(s) e^{st}$$

# 2.4-5 Total Response

Assuming distinct roots, the total response of a linear system can be expressed as the sum of its zero-input response (ZIR) and its zero-state response (ZSR):

total response = 
$$\sum_{\substack{k=1\\ZIR}}^{N} c_k e^{\lambda_k t} + \underbrace{x(t) * h(t)}_{ZSR}$$

For repeated roots, the zero-input component should be appropriately modified.

For the series *RLC* circuit in Ex. 2.4 with the input  $x(t) = 10e^{-3t}u(t)$  and the initial conditions  $y(0^-) = 0, v_C(0^-) = 5$ , we determined the zero-input response in Ex. 2.1a [Eq. (2.9)]. We found the zero-state response in Ex. 2.9. From the results in Exs. 2.1a and 2.9, we obtain

total current = 
$$\underbrace{(-5e^{-t} + 5e^{-2t})}_{\text{zero-input current}} + \underbrace{(-5e^{-t} + 20e^{-2t} - 15e^{-3t})}_{\text{zero-state current}}$$
  $t \ge 0$  (2.43)

Figure 2.16a shows the zero-input, zero-state, and total responses.

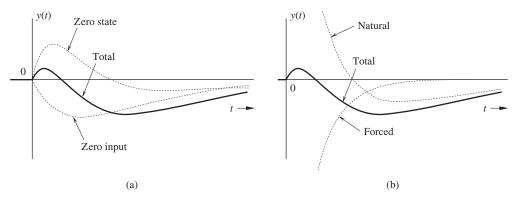


Figure 2.16 Total response and its components.

# NATURAL AND FORCED RESPONSE

For the *RLC* circuit in Ex. 2.4, the characteristic modes were found to be  $e^{-t}$  and  $e^{-2t}$ . As we expected, the zero-input response is composed exclusively of characteristic modes. Note, however, that even the zero-state response [Eq. (2.43)] contains characteristic mode terms. This observation is generally true of LTIC systems. We can now lump together all the characteristic mode terms in the total response, giving us a component known as the *natural response*  $y_n(t)$ . The remainder, consisting entirely of noncharacteristic mode terms, is known as the *forced response*  $y_{\phi}(t)$ . The total response of the *RLC* circuit in Ex. 2.4 can be expressed in terms of natural and forced components by regrouping the terms in Eq. (2.43) as

total current = 
$$\underbrace{(-10e^{-t} + 25e^{-2t})}_{\text{natural response } y_n(t)} + \underbrace{(-15e^{-3t})}_{\text{forced response } y_{\phi}(t)} t \ge 0$$
 (2.44)

Figure 2.16b shows the natural, forced, and total responses.

The classical solution to a differential equation includes the natural (also called the *homogeneous* or *complementary*) solution and the forced (also known as the *particular*) solution; traditional courses on differential equations provide simplified procedures to determine these components. Unfortunately, the classical solution lacks the engineering intuition and utility afforded by the zero-input and zero-state responses. The classical approach cannot separate the responses arising from internal conditions and external input. While the natural and forced solutions can be obtained from the zero-input and zero-state response to an input x(t) as an explicit function of x(t). In fact, the classical method is restricted to a certain class of inputs and cannot handle arbitrary inputs, as can the method to determine the zero-state response. For these (and other) reasons, we do not further detail the classical solution of differential equations.

# 2.5 System Stability

Stability is an important system property. Two types of system stability are generally considered: external (BIBO) stability and internal (asymptotic) stability. Let us consider both stability types in turn.

#### 2.5-1 External (BIBO) Stability

To understand the intuitive basis for the BIBO (bounded-input/bounded-output) stability of a system introduced in Sec. 1.7, let us examine the stability concept as applied to a right circular cone. Such a cone can be made to stand forever on its circular base, on its apex, or on its side. For this reason, these three states of the cone are said to be *equilibrium states*. Qualitatively, however, the three states show very different behavior. If the cone, standing on its circular base, were to be disturbed slightly and then left to itself, it would eventually return to its original equilibrium position. In such a case, the cone is said to be in *stable equilibrium*. In contrast, if the cone stands on its apex, then the slightest disturbance will cause the cone to move farther and farther away from its equilibrium state. The cone in this case is said to be in an *unstable equilibrium*. The cone lying on its side, if disturbed, will neither go back to the original state nor continue to move farther

away from the original state. Thus it is said to be in a *neutral equilibrium*. Clearly, when a system is in stable equilibrium, application of a small disturbance (input) produces a small response. In contrast, when the system is in unstable equilibrium, even a minuscule disturbance (input) produces an unbounded response. The BIBO-stability definition can be understood in the light of this concept. If every bounded input produces bounded output, the system is (BIBO) stable.<sup>†</sup> In contrast, if even one bounded input results in unbounded response, the system is (BIBO) unstable.

For an LTIC system,

$$y(t) = h(t) * x(t) = \int_{-\infty}^{\infty} h(\tau) x(t-\tau) d\tau$$

Therefore,

$$|y(t)| \le \int_{-\infty}^{\infty} |h(\tau)| |x(t-\tau)| \, d\tau$$

Moreover, if x(t) is bounded, then  $|x(t-\tau)| < K_1 < \infty$ , and

$$|y(t)| \le K_1 \int_{-\infty}^{\infty} |h(\tau)| \, d\tau$$

Hence for BIBO stability,

$$\int_{-\infty}^{\infty} |h(\tau)| \, d\tau < \infty \tag{2.45}$$

This is a sufficient condition for BIBO stability. We can show that this is also a necessary condition (see Prob. 2.5-7). Therefore, for an LTIC system, if its impulse response h(t) is absolutely integrable, the system is (BIBO) stable. Otherwise it is (BIBO) unstable. In addition, we shall show in Ch. 4 that a necessary (but not sufficient) condition for an LTIC system described by Eq. (2.1) to be BIBO-stable is  $M \le N$ . If M > N, the system is unstable. This is one of the reasons to avoid systems with M > N.

Because the BIBO stability of a system can be ascertained by measurements at the external terminals (input and output), this is an external stability criterion. It is no coincidence that the BIBO criterion in Eq. (2.45) is in terms of the impulse response, which is an external description of the system.

As observed in Sec. 1.9, the internal behavior of a system is not always ascertainable from the external terminals. Therefore, external (BIBO) stability may not be a correct indication of internal stability. Indeed, some systems that appear stable by the BIBO criterion may be internally unstable. This is like a room on fire inside a house: no trace of fire is visible from outside, but the entire house will be burned to ashes.

The BIBO stability is meaningful only for systems in which the internal and the external description are equivalent (controllable and observable systems). Fortunately, most practical systems fall into this category, and whenever we apply this criterion, we implicitly assume that the system, in fact, belongs to this category. Internal stability is all-inclusive, and external stability can always be determined from internal stability. For this reason, we now investigate the internal stability criterion.

<sup>&</sup>lt;sup>†</sup> The system is assumed to be in zero state.

### 2.5-2 Internal (Asymptotic) Stability

Because of the great variety of possible system behaviors, there are several definitions of internal stability in the literature. Here we shall consider a definition that is suitable for causal, linear, time-invariant (LTI) systems.

If, in the absence of an external input, a system remains in a particular state (or condition) indefinitely, then that state is said to be an *equilibrium state* of the system. For an LTI system, zero state, in which all initial conditions are zero, is an equilibrium state. Now suppose an LTI system is in zero state and we change this state by creating small nonzero initial conditions (small disturbance). These initial conditions will generate signals consisting of characteristic modes in the system. By analogy with the cone, if the system is stable, it should eventually return to zero state. In other words, when left to itself, every mode in a stable system arising as a result of nonzero initial conditions should approach 0 as  $t \to \infty$ . However, if even one of the modes grows with time, the system will never return to zero state, and the system would be identified as unstable. In the borderline case, some modes neither decay to zero nor grow indefinitely, while all the remaining modes decay to zero. This case is like the neutral equilibrium in the cone. Such a system is said to be *marginally* stable. Internal stability is also called *asymptotic* stability or stability in the sense of *Lyapunov*.

For a system characterized by Eq. (2.1), we can restate the internal stability criterion in terms of the location of the *N* characteristic roots  $\lambda_1, \lambda_2, \ldots, \lambda_N$  of the system in a complex plane. The characteristic modes are of the form  $e^{\lambda_k t}$  or  $t^r e^{\lambda_k t}$ . The locations of various roots in the complex plane and the corresponding modes are shown in Fig. 2.17. These modes  $\rightarrow 0$  as  $t \rightarrow \infty$  if Re  $\lambda_k < 0$ . In contrast, the modes  $\rightarrow \infty$  as  $t \rightarrow \infty$  if Re  $\lambda_k > 0$ .<sup>†</sup>

From Fig. 2.17, we see that a system is (asymptotically) stable if all its characteristic roots lie in the LHP, that is, if  $\operatorname{Re} \lambda_k < 0$  for all k. If even a single characteristic root lies in the RHP, the system is (asymptotically) unstable. Modes due to roots on the imaginary axis ( $\lambda = \pm j\omega_0$ ) are of the form  $e^{\pm j\omega_0 t}$ . Hence, if some roots are on the imaginary axis, and all the remaining roots are in the LHP, the system is marginally stable (assuming that the roots on the imaginary axis are not repeated). If the imaginary axis roots are repeated, the characteristic modes are of the form  $t^r e^{\pm j\omega_k t}$ , which do grow with time indefinitely. Hence, the system is unstable. Figure 2.18 shows stability regions in the complex plane.

To summarize:

- 1. An LTIC system is asymptotically stable if, and only if, all the characteristic roots are in the LHP. The roots may be simple (unrepeated) or repeated.
- 2. An LTIC system is unstable if, and only if, one or both of the following conditions exist: (i) at least one root is in the RHP; (ii) there are repeated roots on the imaginary axis.
- 3. An LTIC system is marginally stable if, and only if, there are no roots in the RHP, and there are some unrepeated roots on the imaginary axis.

$$\lim_{t \to \infty} e^{\lambda t} = \lim_{t \to \infty} e^{(\alpha + j\beta)t} = \lim_{t \to \infty} e^{\alpha t} e^{j\beta t} = \begin{cases} 0 & \alpha < 0 \\ \infty & \alpha > 0 \end{cases}$$

This conclusion is also valid for the terms of the form  $t^r e^{\lambda t}$ .

<sup>&</sup>lt;sup>†</sup> This may be seen from the fact that if  $\alpha$  and  $\beta$  are the real and the imaginary parts of a root  $\lambda$ , then


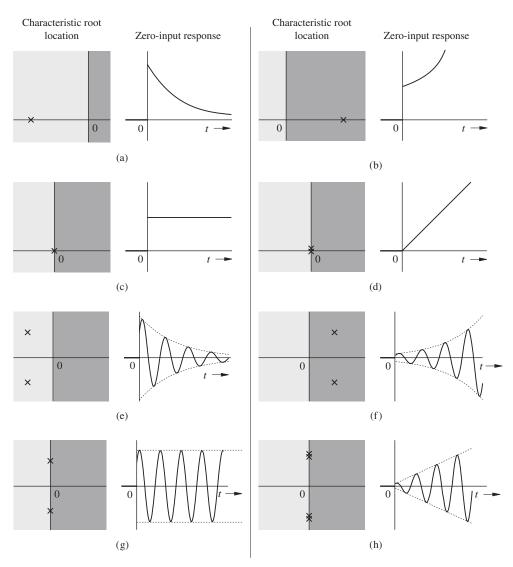


Figure 2.17 Location of characteristic roots and the corresponding characteristic modes.

# 2.5-3 Relationship Between BIBO and Asymptotic Stability

External stability is determined by applying an external input with zero initial conditions, while internal stability is determined by applying the nonzero initial conditions and no external input. This is why these stabilities are also called the *zero-state stability* and the *zero-input stability*, respectively.

Recall that h(t), the impulse response of an LTIC system, is a linear combination of the system characteristic modes. For an LTIC system, specified by Eq. (2.1), we can readily show that when a characteristic root  $\lambda_k$  is in the LHP, the corresponding mode  $e^{\lambda_k t}$  is absolutely integrable. In

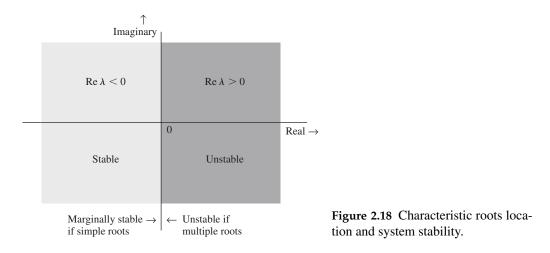

contrast, if  $\lambda_k$  is in the RHP or on the imaginary axis,  $e^{\lambda_k t}$  is not absolutely integrable.<sup>†</sup> This means that an asymptotically stable system is BIBO-stable. Moreover, a marginally stable or asymptotically unstable system is BIBO-unstable. The converse is not necessarily true; that is, BIBO stability does not necessarily inform us about the internal stability of the system. For instance, if a system is uncontrollable and/or unobservable, some modes of the system are invisible and/or uncontrollable from the external terminals [3]. Hence, the stability picture portrayed by the external description is of questionable value. BIBO (external) stability cannot assure internal (asymptotic) stability, as the following example shows.

# EXAMPLE 2.13 A BIBO-Stable but Asymptotically Unstable System

An LTID system consists of two subsystems  $S_1$  and  $S_2$  in cascade (Fig. 2.19). The impulse response of these systems are  $h_1(t)$  and  $h_2(t)$ , respectively, given by

$$h_1(t) = \delta(t) - 2e^{-t}u(t)$$
 and  $h_2(t) = e^t u(t)$ 

Comment on the BIBO and asymptotic stability of the composite system.

$$\int_{-\infty}^{\infty} |e^{\lambda \tau} u(\tau)| \, d\tau = \int_{0}^{\infty} e^{\alpha \tau} \, d\tau = \begin{cases} -1/\alpha & \alpha < 0\\ \infty & \alpha \ge 0 \end{cases}$$

This conclusion is also valid when the integrand is of the form  $|t^k e^{\lambda t} u(t)|$ .

<sup>&</sup>lt;sup>†</sup> Consider a mode of the form  $e^{\lambda t}$ , where  $\lambda = \alpha + j\beta$ . Hence,  $e^{\lambda t} = e^{\alpha t}e^{j\beta t}$  and  $|e^{\lambda t}| = e^{\alpha t}$ . Therefore,



The composite system impulse response h(t) is given by

$$h(t) = h_1(t) * h_2(t) = h_2(t) * h_1(t) = e^t u(t) * [\delta(t) - 2e^{-t}u(t)]$$
$$= e^t u(t) - 2\left[\frac{e^t - e^{-t}}{2}\right]u(t)$$
$$= e^{-t}u(t)$$

If the composite cascade system were to be enclosed in a black box with only the input and the output terminals accessible, any measurement from these external terminals would show that the impulse response of the system is  $e^{-t}u(t)$ , without any hint of the dangerously unstable system the system is harboring within.

The composite system is BIBO-stable because its impulse response,  $e^{-t}u(t)$ , is absolutely integrable. Observe, however, the subsystem  $S_2$  has a characteristic root 1, which lies in the RHP. Hence,  $S_2$  is asymptotically unstable. Eventually,  $S_2$  will burn out (or saturate) because of the unbounded characteristic response generated by intended or unintended initial conditions, no matter how small. We shall show in Ex. 10.12 that this composite system is observable, but not controllable. If the positions of  $S_1$  and  $S_2$  were interchanged ( $S_2$  followed by  $S_1$ ), the system is still BIBO-stable, but asymptotically unstable. In this case, the analysis in Ex. 10.12 shows that the composite system is controllable, but not observable.

This example shows that BIBO stability does not always imply asymptotic stability. However, asymptotic stability always implies BIBO stability.

Fortunately, uncontrollable and/or unobservable systems are not commonly observed in practice. Henceforth, in determining system stability, we shall assume that unless otherwise mentioned, the internal and the external descriptions of a system are equivalent, implying that the system is controllable and observable.

### **EXAMPLE 2.14** Investigating Asymptotic and BIBO Stability

Investigate the asymptotic and the BIBO stability of LTIC system described by the following equations, assuming that the equations are internal system descriptions:

- (a)  $(D+1)(D^2+4D+8)y(t) = (D-3)x(t)$
- **(b)**  $(D-1)(D^2+4D+8)y(t) = (D+2)x(t)$
- (c)  $(D+2)(D^2+4)y(t) = (D^2+D+1)x(t)$
- (d)  $(D+1)(D^2+4)^2y(t) = (D^2+2D+8)x(t)$


The characteristic polynomials of these systems are

- (a)  $(\lambda + 1)(\lambda^2 + 4\lambda + 8) = (\lambda + 1)(\lambda + 2 j2)(\lambda + 2 + j2)$
- **(b)**  $(\lambda 1)(\lambda^2 + 4\lambda + 8) = (\lambda 1)(\lambda + 2 j2)(\lambda + 2 + j2)$
- (c)  $(\lambda + 2)(\lambda^2 + 4) = (\lambda + 2)(\lambda j2)(\lambda + j2)$
- (d)  $(\lambda + 1)(\lambda^2 + 4)^2 = (\lambda + 2)(\lambda j2)^2(\lambda + j2)^2$

Consequently, the characteristic roots of the systems are (see Fig. 2.20):

- (a)  $-1, -2 \pm j2$
- **(b)** 1,  $-2 \pm j2$
- (c)  $-2, \pm j2$
- (**d**)  $-1, \pm j2, \pm j2$

System (a) is asymptotically stable (all roots in LHP), system (b) is unstable (one root in RHP), system (c) is marginally stable (unrepeated roots on imaginary axis) and no roots in RHP, and system (d) is unstable (repeated roots on the imaginary axis). BIBO stability is readily determined from the asymptotic stability. System (a) is BIBO-stable, system (b) is BIBO-unstable, system (c) is BIBO-unstable, and system (d) is BIBO-unstable. We have assumed that these systems are controllable and observable.

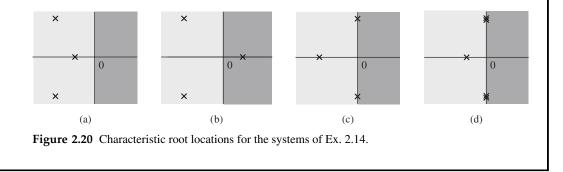

### DRILL 2.15 Assessing Stability by Characteristic Roots

For each case, plot the characteristic roots and determine asymptotic and BIBO stabilities. Assume the equations reflect internal descriptions.

(a) D(D+2)y(t) = 3x(t)

**(b)** 
$$D^2(D+3)y(t) = (D+5)x(t)$$

- (c) (D+1)(D+2)y(t) = (2D+3)x(t)
- (d)  $(D^2+1)(D^2+9)y(t) = (D^2+2D+4)x(t)$
- (e)  $(D+1)(D^2-4D+9)y(t) = (D+7)x(t)$

### ANSWERS

- (a) Marginally stable, but BIBO-unstable
- (b) Unstable in both senses
- (c) Stable in both senses
- (d) Marginally stable, but BIBO-unstable
- (e) Unstable in both senses.

### IMPLICATIONS OF STABILITY

All practical signal-processing systems must be asymptotically stable. Unstable systems are useless from the viewpoint of signal processing because any set of intended or unintended initial conditions leads to an unbounded response that either destroys the system or (more likely) leads it to some saturation conditions that change the nature of the system. Even if the discernible initial conditions are zero, stray voltages or thermal noise signals generated within the system will act as initial conditions. Because of exponential growth of a mode or modes in unstable systems, a stray signal, no matter how small, will eventually cause an unbounded output.

Marginally stable systems, though BIBO unstable, do have one important application in the oscillator, which is a system that generates a signal on its own without the application of an external input. Consequently, the oscillator output is a zero-input response. If such a response is to be a sinusoid of frequency  $\omega_0$ , the system should be marginally stable with characteristic roots at  $\pm j\omega_0$ . Thus, to design an oscillator of frequency  $\omega_0$ , we should pick a system with the characteristic polynomial  $(\lambda - j\omega_0)(\lambda + j\omega_0) = \lambda^2 + \omega_0^2$ . A system described by the differential equation

$$\left(D^2 + \omega_0^2\right) y(t) = x(t)$$

will do the job. However, practical oscillators are invariably realized using nonlinear systems.

### **2.6 INTUITIVE INSIGHTS INTO SYSTEM BEHAVIOR**

This section attempts to provide an understanding of what determines system behavior. Because of its intuitive nature, the discussion is more or less qualitative. We shall now show that the most important attributes of a system are its characteristic roots or characteristic modes because they determine not only the zero-input response but also the entire behavior of the system.


### 2.6-1 Dependence of System Behavior on Characteristic Modes

Recall that the zero-input response of a system consists of the system's characteristic modes. For a stable system, these characteristic modes decay exponentially and eventually vanish. This behavior may give the impression that these modes do not substantially affect system behavior in general and system response in particular. This impression is totally wrong! We shall now see that the system's characteristic modes leave their imprint on every aspect of the system behavior. *We may compare the system's characteristic modes (or roots) to a seed that eventually dissolves in the* 

#### 204 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

# ground; however, the plant that springs from it is totally determined by the seed. The imprint of the seed exists on every cell of the plant.

To understand this interesting phenomenon, recall that the characteristic modes of a system are very special to that system because it can sustain these signals without the application of an external input. In other words, the system offers a free ride and ready access to these signals. Now imagine what would happen if we actually drove the system with an input having the form of a characteristic mode! We would expect the system to respond strongly (this is, in fact, the resonance phenomenon discussed later in this section). If the input is not exactly a characteristic mode but is close to such a mode, we would still expect the system response to be strong. However, if the input is very different from any of the characteristic modes, we would expect the system to respond poorly. We shall now show that these intuitive deductions are indeed true.

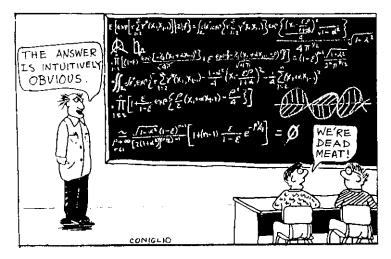

Intuition can cut the math jungle instantly!

We have devised a measure of similarity of signals later (see in Ch. 6). Here we shall take a simpler approach. Let us restrict the system's inputs to exponentials of the form  $e^{\zeta t}$ , where  $\zeta$ is generally a complex number. The similarity of two exponential signals  $e^{\zeta t}$  and  $e^{\lambda t}$  will then be measured by the closeness of  $\zeta$  and  $\lambda$ . If the difference  $\zeta - \lambda$  is small, the signals are similar; if  $\zeta - \lambda$  is large, the signals are dissimilar.

Now consider a first-order system with a single characteristic mode  $e^{\lambda t}$  and the input  $e^{\zeta t}$ . The impulse response of this system is then given by  $Ae^{\lambda t}$ , where the exact value of A is not important for this qualitative discussion. The system response y(t) is given by

$$y(t) = h(t) * x(t) = Ae^{\lambda t}u(t) * e^{\zeta t}u(t)$$

From the convolution table (Table 2.1), we obtain

$$y(t) = \frac{A}{\zeta - \lambda} [e^{\zeta t} - e^{\lambda t}] u(t)$$
(2.46)

Clearly, if the input  $e^{\zeta t}$  is similar to  $e^{\lambda t}$ ,  $\zeta - \lambda$  is small and the system response is large. *The closer the input* x(t) *to the characteristic mode, the stronger the system response.* In contrast, if the input is very different from the natural mode,  $\zeta - \lambda$  is large and the system responds poorly. This is precisely what we set out to prove.

We have proved the foregoing assertion for a single-mode (first-order) system. It can be generalized to an Nth-order system, which has N characteristic modes. The impulse response h(t) of such a system is a linear combination of its N modes. Therefore, if x(t) is similar to any one of the modes, the corresponding response will be high; if it is similar to none of the modes, the response will be small. Clearly, the characteristic modes are very influential in determining system response to a given input.

It would be tempting to conclude on the basis of Eq. (2.46) that if the input is identical to the characteristic mode, so that  $\zeta = \lambda$ , then the response goes to infinity. Remember, however, that if  $\zeta = \lambda$ , the numerator on the right-hand side of Eq. (2.46) also goes to zero. We shall study this interesting behavior (resonance phenomenon) later in this section.

We now show that mere inspection of the impulse response h(t) (which is composed of characteristic modes) reveals a great deal about the system behavior.

### 2.6-2 Response Time of a System: The System Time Constant

Like human beings, systems have a certain response time. In other words, when an input (stimulus) is applied to a system, a certain amount of time elapses before the system fully responds to that input. This time lag or response time is called the system *time constant*. As we shall see, a system's time constant is equal to the width of its impulse response h(t).

An input  $\delta(t)$  to a system is instantaneous (zero duration), but its response h(t) has a duration  $T_h$ . Therefore, the system requires a time  $T_h$  to respond fully to this input, and we are justified in viewing  $T_h$  as the system's response time or time constant. We arrive at the same conclusion via another argument. The output is a convolution of the input with h(t). If an input is a pulse of width  $T_x$ , then the output pulse width is  $T_x + T_h$  according to the width property of convolution. This conclusion shows that the system requires  $T_h$  seconds to respond fully to any input. The system time constant indicates how fast the system is. A system with a smaller time constant is a faster system that responds quickly to an input. A system with a relatively large time constant is a sluggish system that cannot respond well to rapidly varying signals.

Strictly speaking, the duration of the impulse response h(t) is  $\infty$  because the characteristic modes approach zero asymptotically as  $t \to \infty$ . However, beyond some value of t, h(t) becomes negligible. It is therefore necessary to use some suitable measure of the impulse response's effective width.

There is no single satisfactory definition of effective signal duration (or width) applicable to every situation. For the situation depicted in Fig. 2.21, a reasonable definition of the duration h(t) would be  $T_h$ , the width of the rectangular pulse  $\hat{h}(t)$ . This rectangular pulse  $\hat{h}(t)$  has an area identical to that of h(t) and a height identical to that of h(t) at some suitable instant  $t = t_0$ . In Fig. 2.21,  $t_0$  is chosen as the instant at which h(t) is maximum. According to this definition,<sup>†</sup>

$$T_h h(t_0) = \int_{-\infty}^{\infty} h(t) \, dt$$

<sup>&</sup>lt;sup>†</sup> This definition is satisfactory when h(t) is a single, mostly positive (or mostly negative) pulse. Such systems are lowpass systems. This definition should not be applied indiscriminately to all systems.

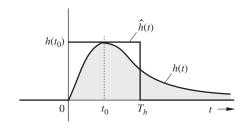


Figure 2.21 Effective duration of an impulse response.

or

$$T_h = \frac{\int_{-\infty}^{\infty} h(t) dt}{h(t_0)} \tag{2.47}$$

Now if a system has a single mode

 $h(t) = A e^{\lambda t} u(t)$ 

with  $\lambda$  negative and real, then h(t) is maximum at t = 0 with value h(0) = A. Therefore, according to Eq. (2.47),

$$T_h = \frac{1}{A} \int_0^\infty A e^{\lambda t} dt = -\frac{1}{\lambda}$$

Thus, the time constant in this case is simply the (negative of the) reciprocal of the system's characteristic root. For the multimode case, h(t) is a weighted sum of the system's characteristic modes, and  $T_h$  is a weighted average of the time constants associated with the N modes of the system.

### 2.6-3 Time Constant and Rise Time of a System

Rise time of a system, defined as the time required for the unit step response to rise from 10% to 90% of its steady-state value, is an indication of the speed of response.<sup>†</sup> The system time constant may also be viewed from a perspective of rise time. The unit step response y(t) of a system is the convolution of u(t) with h(t). Let the impulse response h(t) be a rectangular pulse of width  $T_h$ , as shown in Fig. 2.22. This assumption simplifies the discussion, yet gives satisfactory results for qualitative discussion. The result of this convolution is illustrated in Fig. 2.22. Note that the output does not rise from zero to a final value instantaneously as the input rises; instead, the output takes  $T_h$  seconds to accomplish this. Hence, the rise time  $T_r$  of the system is equal to the system time constant

$$T_r = T_h$$

This result and Fig. 2.22 show clearly that a system generally does not respond to an input instantaneously. Instead, it takes time  $T_h$  for the system to respond fully.

<sup>&</sup>lt;sup>†</sup>Because of varying definitions of rise time, the reader may find different results in the literature. The qualitative and intuitive nature of this discussion should always be kept in mind.

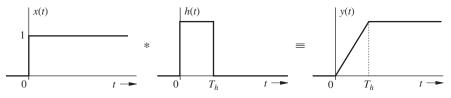


Figure 2.22 Rise time of a system.

# 2.6-4 Time Constant and Filtering

A larger time constant implies a sluggish system because the system takes longer to respond fully to an input. Such a system cannot respond effectively to rapid variations in the input. In contrast, a smaller time constant indicates that a system is capable of responding to rapid variations in the input. Thus, there is a direct connection between a system's time constant and its filtering properties.

A high-frequency sinusoid varies rapidly with time. A system with a large time constant will not be able to respond well to this input. Therefore, such a system will suppress rapidly varying (high-frequency) sinusoids and other high-frequency signals, thereby acting as a lowpass filter (a filter allowing the transmission of low-frequency signals only). We shall now show that a system

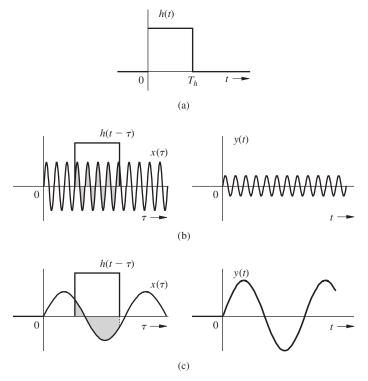


Figure 2.23 Time constant and filtering.

with a time constant  $T_h$  acts as a lowpass filter having a cutoff frequency of  $f_c = 1/T_h$  hertz, so that sinusoids with frequencies below  $f_c$  Hz are transmitted reasonably well, while those with frequencies above  $f_c$  Hz are suppressed.

To demonstrate this fact, let us determine the system response to a sinusoidal input x(t) by convolving this input with the effective impulse response h(t) in Fig. 2.23a. From Figs. 2.23b and 2.23c we see the process of convolution of h(t) with the sinusoidal inputs of two different frequencies. The sinusoid in Fig. 2.23b has a relatively high frequency, while the frequency of the sinusoid in Fig. 2.23c is low. Recall that the convolution of x(t) and h(t) is equal to the area under the product  $x(\tau)h(t - \tau)$ . This area is shown shaded in Figs. 2.23b and 2.23c for the two cases. For the high-frequency sinusoid, it is clear from Fig. 2.23b that the area under  $x(\tau)h(t - \tau)$ is very small because its positive and negative areas nearly cancel each other out. In this case the output y(t) remains periodic but has a rather small amplitude. This happens when the period of the sinusoid is much smaller than the system time constant  $T_h$ . In contrast, for the low-frequency sinusoid, the period of the sinusoid is larger than  $T_h$ , rendering the partial cancellation of area under  $x(\tau)h(t - \tau)$  less effective. Consequently, the output y(t) is much larger, as depicted in Fig. 2.23c.

Between these two possible extremes in system behavior, a transition point occurs when the period of the sinusoid is equal to the system time constant  $T_h$ . The frequency at which this transition occurs is known as the *cutoff frequency*  $f_c$  of the system. Because  $T_h$  is the period of cutoff frequency  $f_c$ ,

$$f_c = \frac{1}{T_h}$$

The frequency  $f_c$  is also known as the bandwidth of the system because the system transmits or passes sinusoidal components with frequencies below  $f_c$  while attenuating components with frequencies above  $f_c$ . Of course, the transition in system behavior is gradual. There is no dramatic change in system behavior at  $f_c = 1/T_h$ . Moreover, these results are based on an idealized (rectangular pulse) impulse response; in practice these results will vary somewhat, depending on the exact shape of h(t). Remember that the "feel" of general system behavior is more important than exact system response for this qualitative discussion.

Since the system time constant is equal to its rise time, we have

$$T_r = \frac{1}{f_c} \qquad \text{or} \qquad f_c = \frac{1}{T_r} \tag{2.48}$$

Thus, a system's bandwidth is inversely proportional to its rise time. Although Eq. (2.48) was derived for an idealized (rectangular) impulse response, its implications are valid for lowpass LTIC systems, in general. For a general case, we can show that [1]

$$f_c = \frac{k}{T_r}$$

where the exact value of k depends on the nature of h(t). An experienced engineer often can estimate quickly the bandwidth of an unknown system by simply observing the system response to a step input on an oscilloscope.

### 2.6-5 Time Constant and Pulse Dispersion (Spreading)

In general, the transmission of a pulse through a system causes pulse dispersion (or spreading). Therefore, the output pulse is generally wider than the input pulse. This system behavior can have serious consequences in communication systems in which information is transmitted by pulse amplitudes. Dispersion (or spreading) causes interference or overlap with neighboring pulses, thereby distorting pulse amplitudes and introducing errors in the received information.

Earlier we saw that if an input x(t) is a pulse of width  $T_x$ , then  $T_y$ , the width of the output y(t), is

$$T_y = T_x + T_h$$

This result shows that an input pulse spreads out (disperses) as it passes through a system. Since  $T_h$  is also the system's time constant or rise time, the amount of spread in the pulse is equal to the time constant (or rise time) of the system.

### 2.6-6 Time Constant and Rate of Information Transmission

In pulse communications systems, which convey information through pulse amplitudes, the rate of information transmission is proportional to the rate of pulse transmission. We shall demonstrate that to avoid the destruction of information caused by dispersion of pulses during their transmission through the channel (transmission medium), the rate of information transmission should not exceed the bandwidth of the communications channel.

Since an input pulse spreads out by  $T_h$  seconds, the consecutive pulses should be spaced  $T_h$  seconds apart to avoid interference between pulses. Thus, the rate of pulse transmission should not exceed  $1/T_h$  pulses/second. But  $1/T_h = f_c$ , the channel's bandwidth, so that we can transmit pulses through a communications channel at a rate of  $f_c$  pulses per second and still avoid significant interference between the pulses. The rate of information transmission is therefore proportional to the channel's bandwidth (or to the reciprocal of its time constant).<sup>†</sup>

The discussion of Secs. 2.6-2, 2.6-3, 2.6-4, 2.6-5, and 2.6-6) shows that the system time constant determines much of a system's behavior—its filtering characteristics, rise time, pulse dispersion, and so on. In turn, the time constant is determined by the system's characteristic roots. Clearly the characteristic roots and their relative amounts in the impulse response h(t) determine the behavior of a system.

### EXAMPLE 2.15 Intuitive Insights into Lowpass System Behavior

Find the time constant  $T_h$ , rise time  $T_r$ , and cutoff frequency  $f_c$  for a lowpass system that has impulse response  $h(t) = te^{-t}u(t)$ . Determine the maximum rate that pulses of 1 second

<sup>&</sup>lt;sup>†</sup> Theoretically, a channel of bandwidth  $f_c$  can transmit correctly up to  $2f_c$  pulse amplitudes per second [4]. Our derivation here, being very simple and qualitative, yields only half the theoretical limit. In practice it is not easy to attain the upper theoretical limit.

### 210 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

duration can be transmitted through the system so that interference is essentially avoided between adjacent pulses at the system output.

The system impulse response  $h(t) = te^{-t}u(t)$ , which looks similar to the impulse response of Fig. 2.21, has a peak value of  $e^{-1} = 0.3679$  at a time  $t_0 = 1$ . According to Eq. (2.47) and using integration by parts, the system time constant is therefore

$$T_h = \frac{\int_0^\infty te^{-t} dt}{e^{-1}} = e^1 \left( -te^{-t} \Big|_0^\infty + \int_0^\infty e^{-t} dt \right) = e^1 \left( 0 - e^{-t} \Big|_0^\infty \right) = e^1(1) = 2.7183$$

Thus,

$$T_h = 2.7183$$
 s,  $T_r = T_h = 2.7183$  s, and  $f_c = \frac{1}{T_h} = 0.3679$  Hz

Due to its lowpass nature, this system will spread an input pulse of 1 second to an output with width

 $T_v = T_x + T_h = 1 + 2.7183 = 3.7183$  s

To avoid interference between pulses at the output, the pulse transmission rate should be no more than the reciprocal of the output pulse width. That is,

maximum pulse transmission rate  $=\frac{1}{3.7183} = 0.2689$  pulse/s

By narrowing the input pulses, the pulse transmission rate could increase up to  $f_c = 0.3679$  pulse/s.

### 2.6-7 The Resonance Phenomenon

Finally, we come to the fascinating phenomenon of resonance. As we have already mentioned several times, this phenomenon is observed when the input signal is identical or is very close to a characteristic mode of the system. For the sake of simplicity and clarity, we consider a first-order system having only a single mode,  $e^{\lambda t}$ . Let the impulse response of this system be<sup>†</sup>

$$h(t) = Ae^{\lambda t}$$

and let the input be

$$x(t) = e^{(\lambda - \epsilon)t}$$

The system response y(t) is then given by

$$y(t) = Ae^{\lambda t} * e^{(\lambda - \epsilon)t}$$

<sup>&</sup>lt;sup>†</sup> For convenience, we omit multiplying x(t) and h(t) by u(t). Throughout this discussion, we assume that they are causal.

#### 2.6 Intuitive Insights into System Behavior 211

From the convolution table we obtain

$$y(t) = \frac{A}{\epsilon} \left[ e^{\lambda t} - e^{(\lambda - \epsilon)t} \right] = A e^{\lambda t} \left( \frac{1 - e^{-\epsilon t}}{\epsilon} \right)$$
(2.49)

Now, as  $\epsilon \to 0$ , both the numerator and the denominator of the term in the parentheses approach zero. Applying L'Hôpital's rule to this term yields

$$\lim_{\epsilon \to 0} y(t) = Ate^{\lambda t}$$

Clearly, the response does not go to infinity as  $\epsilon \to 0$ , but it acquires a factor *t*, which approaches  $\infty$  as  $t \to \infty$ . If  $\lambda$  has a negative real part (so that it lies in the LHP),  $e^{\lambda t}$  decays faster than *t* and  $y(t) \to 0$  as  $t \to \infty$ . The resonance phenomenon in this case is present, but its manifestation is aborted by the signal's own exponential decay.

This discussion shows that *resonance is a cumulative phenomenon*, not instantaneous. It builds up linearly with t.<sup>†</sup> When the mode decays exponentially, the signal decays too fast for resonance to counteract the decay; as a result, the signal vanishes before resonance has a chance to build it up. However, if the mode were to decay at a rate less than 1/t, we should see the resonance phenomenon clearly. This specific condition would be possible if Re  $\lambda \ge 0$ . For instance, when Re  $\lambda = 0$  so that  $\lambda$  lies on the imaginary axis of the complex plane ( $\lambda = j\omega$ ), the output becomes

$$y(t) = Ate^{j\omega t}$$

Here, the response does go to infinity linearly with t.

For a real system, if  $\lambda = j\omega$  is a root,  $\lambda^* = -j\omega$  must also be a root; the impulse response is of the form  $Ae^{j\omega t} + Ae^{-j\omega t} = 2A\cos\omega t$ . The response of this system to input  $A\cos\omega t$  is  $2A\cos\omega t * \cos\omega t$ . The reader can show that this convolution contains a term of the form  $At\cos\omega t$ . The resonance phenomenon is clearly visible. The system response to its characteristic mode increases linearly with time, eventually reaching  $\infty$ , as indicated in Fig. 2.24.

Recall that when  $\lambda = j\omega$ , the system is marginally stable. As we have indicated, the full effect of resonance cannot be seen for an asymptotically stable system; only in a marginally stable system does the resonance phenomenon boost the system's response to infinity when the system's input

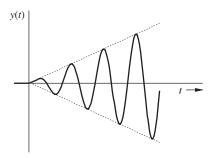


Figure 2.24 Buildup of system response in resonance.

<sup>&</sup>lt;sup>†</sup> If the characteristic root in question repeats *r* times, resonance effect increases as  $t^{r-1}$ . However,  $t^{r-1}e^{\lambda t} \to 0$  as  $t \to \infty$  for any value of *r*, provided Re  $\lambda < 0$  ( $\lambda$  in the LHP).

### 212 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

is a characteristic mode. But even in an asymptotically stable system, we see a manifestation of resonance if its characteristic roots are close to the imaginary axis so that Re  $\lambda$  is a small, negative value. We can show that when the characteristic roots of a system are  $\sigma \pm j\omega_0$ , then the system response to the input  $e^{i\omega_0 t}$  or the sinusoid  $\cos \omega_0 t$  is very large for small  $\sigma$ .<sup>†</sup> The system response drops off rapidly as the input signal frequency moves away from  $\omega_0$ . This frequency-selective behavior can be studied more profitably after an understanding of frequency-domain analysis has been acquired. For this reason we postpone full discussion of this subject until Ch. 4.

### IMPORTANCE OF THE RESONANCE PHENOMENON

The resonance phenomenon is very important because it allows us to design frequency-selective systems by choosing their characteristic roots properly. Lowpass, bandpass, highpass, and bandstop filters are all examples of frequency-selective networks. In mechanical systems, the inadvertent presence of resonance can cause signals of such tremendous magnitude that the system may fall apart. A musical note (periodic vibrations) of proper frequency can shatter glass if the frequency is matched to the characteristic root of the glass, which acts as a mechanical system. Similarly, a company of soldiers marching in step across a bridge amounts to applying a periodic force to the bridge. If the frequency of this input force happens to be nearer to a characteristic root of the bridge, the bridge may respond (vibrate) violently and collapse, even though it would have been strong enough to carry many soldiers marching out of step. A case in point is the Tacoma Narrows Bridge failure of 1940. This bridge was opened to traffic in July 1940. Within four months of opening (on November 7, 1940), it collapsed in a mild gale, not because of the wind's brute force but because the frequencies of wind-generated vortices, which matched the natural frequencies (characteristic roots) of the bridge, caused resonance.

Because of the great damage that may occur, mechanical resonance is generally to be avoided, especially in structures or vibrating mechanisms. If an engine with periodic force (such as piston motion) is mounted on a platform, the platform with its mass and springs should be designed so that their characteristic roots are not close to the engine's frequency of vibration. Proper design of this platform can not only avoid resonance, but also attenuate vibrations if the system roots are placed far away from the frequency of vibration.

## 2.7 MATLAB: M-FILES

M-files are stored sequences of MATLAB commands and help simplify complicated tasks. There are two types of M-file: script and function. Both types are simple text files and require a .m filename extension.

Although M-files can be created by using any text editor, MATLAB's built-in editor is the preferable choice because of its special features. As with any program, comments improve the readability of an M-file. Comments begin with the % character and continue through the end of the line.

An M-file is executed by simply typing the filename (without the .m extension). To execute, M-files need to be located in the current directory or any other directory in the MATLAB path. New directories are easily added to the MATLAB path by using the addpath command.

<sup>&</sup>lt;sup>†</sup> This follows directly from Eq. (2.49) with  $\lambda = \sigma + j\omega_0$  and  $\epsilon = \sigma$ .

### 2.7-1 Script M-Files

Script files, the simplest type of M-file, consist of a series of MATLAB commands. Script files record and automate a series of steps, and they are easy to modify. To demonstrate the utility of a script file, consider the operational amplifier circuit shown in Fig. 2.25.

The system's characteristic modes define the circuit's behavior and provide insight regarding system behavior. Using ideal, infinite gain difference amplifier characteristics, we first derive the differential equation that relates output y(t) to input x(t). Kirchhoff's current law (KCL) at the node shared by  $R_1$  and  $R_3$  provides

$$\frac{x(t) - v(t)}{R_3} + \frac{y(t) - v(t)}{R_2} + \frac{0 - v(t)}{R_1} - C_2 \dot{v}(t) = 0$$

KCL at the inverting input of the op amp gives

$$\frac{v(t)}{R_1} + C_1 \dot{y}(t) = 0$$

Combining and simplifying the KCL equations yield

$$\ddot{y}(t) + \frac{1}{C_2} \left\{ \frac{1}{R_1} + \frac{1}{R_2} + \frac{1}{R_3} \right\} \dot{y}(t) + \frac{1}{R_1 R_2 C_1 C_2} y(t) = -\frac{1}{R_1 R_3 C_1 C_2} x(t)$$

which is the desired constant coefficient differential equation. Thus, the characteristic equation is given by

$$\lambda^{2} + \frac{1}{C_{2}} \left\{ \frac{1}{R_{1}} + \frac{1}{R_{2}} + \frac{1}{R_{3}} \right\} \lambda + \frac{1}{R_{1}R_{2}C_{1}C_{2}} = (a_{0}\lambda^{2} + a_{1}\lambda + a_{2}) = 0$$
(2.50)

The roots  $\lambda_1$  and  $\lambda_2$  of Eq. (2.50) establish the nature of the characteristic modes  $e^{\lambda_1 t}$  and  $e^{\lambda_2 t}$ .

As a first case, assign nominal component values of  $R_1 = R_2 = R_3 = 10 \text{ k}\Omega$  and  $C_1 = C_2 = 1 \mu\text{F}$ . A series of MATLAB commands allows convenient computation of the roots  $\lambda = [\lambda_1; \lambda_2]$ . Although  $\lambda$  can be determined using the quadratic equation, MATLAB's roots command is more convenient. The roots command requires an input vector that contains the polynomial coefficients in descending order. Even if a coefficient is zero, it must still be included in the vector.

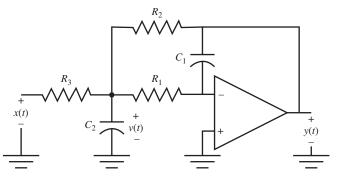


Figure 2.25 Operation-amplifier circuit.

```
% CH2MP1.m : Chapter 2, MATLAB Program 1
% Script M-file determines characteristic roots of op-amp circuit.
% Set component values:
R = [1e4, 1e4, 1e4]; C = [1e-6, 1e-6];
% Determine coefficients for characteristic equation:
A = [1, (1/R(1)+1/R(2)+1/R(3))/C(2), 1/(R(1)*R(2)*C(1)*C(2))];
% Determine characteristic roots:
lambda = roots(A);
```

A script file is created by placing these commands in a text file, which in this case is named CH2MP1.m. While comment lines improve program clarity, their removal does not affect program functionality. The program is executed by typing

```
>> CH2MP1
```

After execution, all the resulting variables are available in the workspace. For example, to view the characteristic roots, type

>> lambda lambda = -261.8034 -38.1966

Thus, the characteristic modes are simple decaying exponentials:  $e^{-261.8034t}$  and  $e^{-38.1966t}$ .

Script files permit simple or incremental changes, thereby saving significant effort. Consider what happens when capacitor  $C_1$  is changed from 1.0  $\mu$ F to 1.0 nF. Changing CH2MP1.m so that C = [1e-9, 1e-6] allows computation of the new characteristic roots:

Perhaps surprisingly, the characteristic modes are now complex exponentials capable of supporting oscillations. The imaginary portion of  $\lambda$  dictates an oscillation rate of 3158.7 rad/s or about 503 Hz. The real portion dictates the rate of decay. The time expected to reduce the amplitude to 25% is approximately  $t = \ln 0.25/\text{Re}(\lambda) \approx 0.01$  second.

### 2.7-2 Function M-Files

It is inconvenient to modify and save a script file each time a change of parameters is desired. Function M-files provide a sensible alternative. Unlike script M-files, function M-files can accept input arguments as well as return outputs. Functions truly extend the MATLAB language in ways that script files cannot.

Syntactically, a function M-file is identical to a script M-file except for the first line. The general form of the first line is

function [output1, ..., outputN] = filename(input1, ..., inputN)

For example, consider modification of CH2MP1.m to make function CH2MP2.m. Component values are passed to the function as two separate inputs: a length-3 vector of resistor values and a length-2 vector of capacitor values. The characteristic roots are returned as a  $2 \times 1$  complex vector.

```
function [lambda] = CH2MP2(R,C)
% CH2MP2.m : Chapter 2, MATLAB Program 2
% Function M-file finds characteristic roots of op-amp circuit.
% INPUTS: R = length-3 vector of resistances
% C = length-2 vector of capacitances
% OUTPUTS: lambda = characteristic roots
% Determine coefficients for characteristic equation:
A = [1, (1/R(1)+1/R(2)+1/R(3))/C(2), 1/(R(1)*R(2)*C(1)*C(2))];
% Determine characteristic roots:
lambda = roots(A):
```

As with script M-files, function M-files execute by typing the name at the command prompt. However, inputs must also be included. For example, CH2MP2 easily confirms the oscillatory modes of the preceding example.

Although scripts and functions have similarities, they also have distinct differences that are worth pointing out. Scripts operate on workspace data; either functions must be supplied data through inputs or they must create their own data. Unless passed as an output, variables and data created by functions remain local to the function; variables or data generated by scripts are global and are added to the workspace. To emphasize this point, consider polynomial coefficient vector A, which is created and used in both CH2MP1.m and CH2MP2.m. Following execution of function CH2MP2, the variable A is not added to the workspace. Following execution of script CH2MP1, however, A is available in the workspace. Recall, the workspace is easily viewed by typing either who or whos.

### 2.7-3 For-Loops

Real resistors and capacitors never exactly equal their nominal values. Suppose that the circuit components are measured as  $R_1 = 10.322 \text{ k}\Omega$ ,  $R_2 = 9.952 \text{ k}\Omega$ ,  $R_3 = 10.115 \text{ k}\Omega$ ,  $C_1 = 1.120 \text{ nF}$ , and  $C_2 = 1.320 \text{ }\mu\text{F}$ . These values are consistent with the 10 and 25% tolerance resistor and capacitor values commonly and readily available. CH2MP2.m uses these component values to calculate the new values of  $\lambda$ .

#### 216 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

Now the natural modes oscillate at 2611.3 rad/s or about 416 Hz. Decay to 25% amplitude is expected in  $t = \frac{\ln 0.25}{(-113.6)} \approx 0.012$  second. These values, which differ significantly from the nominal values of 503 Hz and  $t \approx 0.01$  second, warrant a more formal investigation of the effect of component variations on the locations of the characteristic roots.

It is sensible to look at three values for each component: the nominal value, a low value, and a high value. Low and high values are based on component tolerances. For example, a 10% 1 k $\Omega$  resistor could have an expected low value of  $1000(1-0.1) = 900 \Omega$  and an expected high value of  $1000(1+0.1) = 1100 \Omega$ . For the five passive components in the design,  $3^5 = 243$  permutations are possible.

Using either CH2MP1.m or CH2MP2.m to solve each of the 243 cases would be very tedious and boring. For-loops help automate repetitive tasks such as this. In MATLAB, the general structure of a for statement is

```
for variable = expression, statement, ..., statement, end
```

Five nested for-loops, one for each passive component, are required for the present example.

```
% CH2MP3.m : Chapter 2, MATLAB Program 3
% Script M-file determines characteristic roots over a range of component
  values.
% Pre-allocate memory for all computed roots:
lambda = zeros(2,243);
% Initialize index to identify each permutation:
p=0;
for R1 = 1e4 * [0.9, 1.0, 1.1],
    for R2 = 1e4 * [0.9, 1.0, 1.1],
        for R3 = 1e4 * [0.9, 1.0, 1.1],
            for C1 = 1e-9*[0.75, 1.0, 1.25],
                for C2 = 1e-6*[0.75, 1.0, 1.25],
                     p = p+1;
                     lambda(:,p) = CH2MP2([R1 R2 R3],[C1 C2]);
                 end
            end
        end
    end
end
plot(real(lambda(:)),imag(lambda(:)),'kx',...
    real(lambda(:,1)),imag(lambda(:,1)),'kv',...
    real(lambda(:,end)),imag(lambda(:,end)),'k^')
xlabel('Real'),ylabel('Imaginary')
legend('Char. Roots','Min. Val. Roots','Max. Val. Roots','Location','West');
```

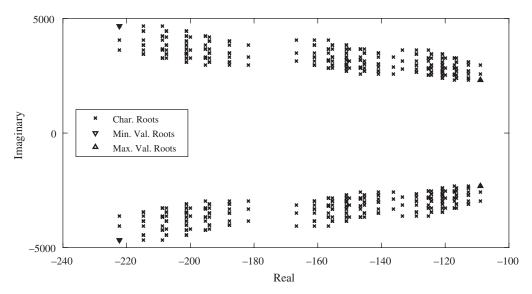


Figure 2.26 Effect of component values on characteristic root locations.

The command lambda = zeros(2,243) preallocates a  $2 \times 243$  array to store the computed roots. When necessary, MATLAB performs dynamic memory allocation, so this command is not strictly necessary. However, preallocation significantly improves script execution speed. Notice also that it would be nearly useless to call script CH2MP1 from within the nested loop; script file parameters cannot be changed during execution.

The plot instruction is quite long. Long commands can be broken across several lines by terminating intermediate lines with three dots (...). The three dots tell MATLAB to continue the present command to the next line. Black x's locate roots of each permutation. The command lambda(:) vectorizes the 2 × 243 matrix lambda into a 486 × 1 vector. This is necessary in this case to ensure that a proper legend is generated. Because of loop order, permutation p = 1 corresponds to the case of all components at the smallest values and permutation is used to separately highlight the minimum and maximum cases using down-triangles ( $\bigtriangledown$ ) and up-triangles ( $\triangle$ ), respectively. In addition to terminating each for loop, end is used to indicate the final index along a particular dimension, which eliminates the need to remember the particular size of a variable. An overloaded function, such as end, serves multiple uses and is typically interpreted based on context.

The graphical results provided by CH2MP3 are shown in Fig. 2.26. Between extremes, root oscillations vary from 365 to 745 Hz and decay times to 25% amplitude vary from 6.2 to 12.7 ms. Clearly, this circuit's behavior is quite sensitive to ordinary component variations.

### 2.7-4 Graphical Understanding of Convolution


MATLAB graphics effectively illustrate the convolution process. Consider the case of y(t) = x(t) \* h(t), where  $x(t) = 1.5 \sin(\pi t)(u(t) - u(t-1))$  and h(t) = 1.5(u(t) - u(t-1.5)) - u(t-2) + u(t-2.5). Program CH2MP4 steps through the convolution over the time interval  $(-0.25 \le t \le 3.75)$ .

```
% CH2MP4.m : Chapter 2, MATLAB Program 4
% Script M-file graphically demonstrates the convolution process.
figure(1) % Create figure window and make visible on screen
u = Q(t) 1.0*(t \ge 0);
x = @(t) 1.5*sin(pi*t).*(u(t)-u(t-1));
h = Q(t) 1.5*(u(t)-u(t-1.5))-u(t-2)+u(t-2.5);
dtau = 0.005; tau = -1:dtau:4;
ti = 0; tvec = -.25:.1:3.75;
y = NaN*zeros(1,length(tvec)); % Pre-allocate memory
for t = tvec,
    ti = ti+1; % Time index
    xh = x(t-tau).*h(tau); lxh = length(xh);
    y(ti) = sum(xh.*dtau); % Trapezoidal approximation of convolution integral
    subplot(2,1,1),plot(tau,h(tau),'k-',tau,x(t-tau),'k--',t,0,'ok');
    axis([tau(1) tau(end) -2.0 2.5]);
    patch([tau(1:end-1);tau(1:end-1);tau(2:end);tau(2:end)],...
        [zeros(1,lxh-1);xh(1:end-1);xh(2:end);zeros(1,lxh-1)],...
        [.8 .8 .8],'edgecolor','none');
    xlabel('\tau'); title('h(\tau) [solid], x(t-\tau) [dashed], h(\tau)x(t-\tau) [gray]');
    c = get(gca,'children'); set(gca,'children',[c(2);c(3);c(4);c(1)]);
    subplot(2,1,2),plot(tvec,y,'k',tvec(ti),y(ti),'ok');
    xlabel('t'); ylabel('y(t) = \int h(\tau)x(t-\tau) d\tau');
    axis([tau(1) tau(end) -1.0 2.0]); grid;
    drawnow:
end
```


At each step, the program plots  $h(\tau)$ ,  $x(t - \tau)$ , and shades the area  $h(\tau)x(t - \tau)$  gray. This gray area, which reflects the integral of  $h(\tau)x(t - \tau)$ , is also the desired result, y(t). Figures 2.27, 2.28, and 2.29 display the convolution process at times t of 0.75, 2.25, and 2.85 seconds, respectively. These figures help illustrate how the regions of integration change with time. Figure 2.27 has limits of integration from 0 to (t = 0.75). Figure 2.28 has two regions of integration, with limits (t - 1 = 1.25) to 1.5 and 2.0 to (t = 2.25). The last plot, Fig. 2.29, has limits from 2.0 to 2.5.

Several comments regarding CH2MP4 are in order. The command figure(1) opens the first figure window and, more important, makes sure it is visible. Anonymous functions are used to represent the functions u(t), x(t), and h(t). NaN, standing for not-a-number, usually results from operations such as 0/0 or  $\infty - \infty$ . MATLAB refuses to plot NaN values, so preallocating y(t) with NaNs ensures that MATLAB displays only values of y(t) that have been computed. As its name suggests, length returns the length of the input vector. The subplot(a,b,c) command partitions the current figure window into an a-by-b matrix of axes and selects axes c for use. Subplots facilitate graphical comparison by allowing multiple axes in a single figure window. The patch command is used to create the gray-shaded area for  $h(\tau)x(t - \tau)$ . In CH2MP4, the get and set commands are used to reorder plot objects so that the gray area does not obscure other lines. Details of the patch, get, and set commands, as used in CH2MP4, are somewhat advanced and are not pursued here.<sup>†</sup> MATLAB also prints most Greek letters if the Greek name is preceded by a backslash (\) character. For example, \tau in the xlabel command produces the symbol  $\tau$  in the plot's axis label. Similarly, an integral sign is produced by \int. Finally, the drawnow

<sup>&</sup>lt;sup>†</sup> Interested students should consult the MATLAB help facilities for further information. Actually, the get and set commands are extremely powerful and can help modify plots in almost any conceivable way.

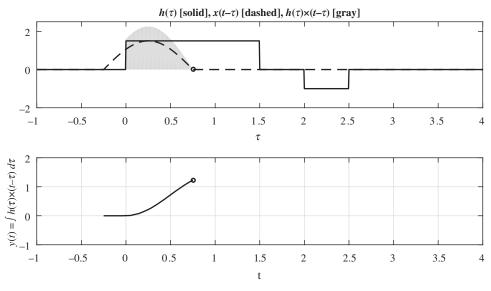

**Figure 2.27** Graphical convolution at step t = 0.75 second.

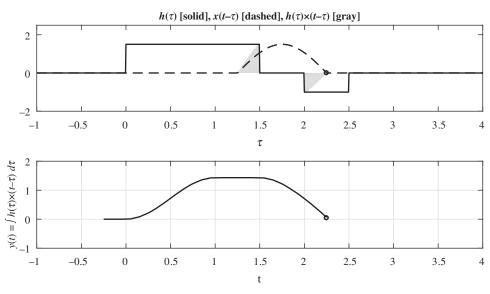

**Figure 2.28** Graphical convolution at step t = 2.25 seconds.

command forces MATLAB to update the graphics window for each loop iteration. Although slow, this creates an animation-like effect. Replacing drawnow with the pause command allows users to manually step through the convolution process. The pause command still forces the graphics window to update, but the program will not continue until a key is pressed.

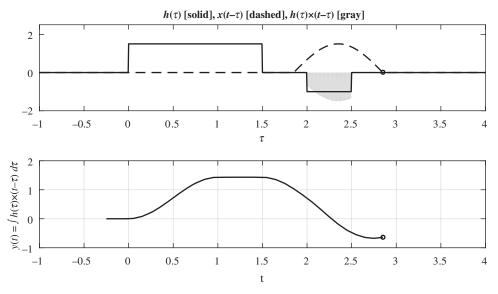


Figure 2.29 Graphical convolution at step t = 2.85 seconds.

# **2.8 APPENDIX: DETERMINING THE IMPULSE RESPONSE**

In Eq. (2.13), we showed that for an LTIC system S specified by Eq. (2.11), the unit impulse response h(t) can be expressed as

$$h(t) = b_0 \delta(t) + \text{characteristic modes}$$
(2.51)

To determine the characteristic mode terms in Eq. (2.51), let us consider a system  $S_0$  whose input x(t) and the corresponding output w(t) are related by

$$Q(D)w(t) = x(t) \tag{2.52}$$

Observe that both the systems *S* and *S*<sub>0</sub> have the same characteristic polynomial; namely,  $Q(\lambda)$ , and, consequently, the same characteristic modes. Moreover, *S*<sub>0</sub> is the same as *S* with P(D) = 1, that is,  $b_0 = 0$ . Therefore, according to Eq. (2.51), the impulse response of *S*<sub>0</sub> consists of characteristic mode terms only without an impulse at t = 0. Let us denote this impulse response of *S*<sub>0</sub> by  $y_n(t)$ . Observe that  $y_n(t)$  consists of characteristic modes of *S* and therefore may be viewed as a zero-input response of *S*. Now  $y_n(t)$  is the response of *S*<sub>0</sub> to input  $\delta(t)$ . Therefore, according to Eq. (2.52),

$$Q(D)y_n(t) = \delta(t)$$

or

$$(D^{N} + a_{1}D^{N-1} + \dots + a_{N1}D + a_{N})y_{n}(t) = \delta(t)$$

or

$$y_n^{(N)}(t) + a_1 y_n^{(N-1)}(t) + \dots + a_{N-1} y_n^{(1)}(t) + a_N y_n(t) = \delta(t)$$

where  $y_n^{(k)}(t)$  represents the *k*th derivative of  $y_n(t)$ . The right-hand side contains a single impulse term,  $\delta(t)$ . This is possible only if  $y_n^{(N-1)}(t)$  has a unit jump discontinuity at t = 0, so that  $y_n^{(N)}(t) = \delta(t)$ . Moreover, the lower-order terms cannot have any jump discontinuity because this would mean the presence of the derivatives of  $\delta(t)$ . Therefore  $y_n(0) = y_n^{(1)}(0) = \cdots = y_n^{(N-2)}(0) = 0$ (no discontinuity at t = 0), and the *N* initial conditions on  $y_n(t)$  are

$$y_n(0) = y_n^{(1)}(0) = \dots = y_n^{(N-2)}(0) = 0$$
 and  $y_n^{(N-1)}(0) = 1$  (2.53)

This discussion means that  $y_n(t)$  is the zero-input response of the system S subject to initial conditions [Eq. (2.53)].

We now show that for the same input x(t) to both systems, S and S<sub>0</sub>, their respective outputs y(t) and w(t) are related by

$$y(t) = P(D)w(t) \tag{2.54}$$

To prove this result, we operate on both sides of Eq. (2.52) by P(D) to obtain

$$Q(D)P(D)w(t) = P(D)x(t)$$

Comparison of this equation with Eq. (2.2) leads immediately to Eq. (2.54).

Now if the input  $x(t) = \delta(t)$ , the output of  $S_0$  is  $y_n(t)$ , and the output of S, according to Eq. (2.54), is  $P(D)y_n(t)$ . This output is h(t), the unit impulse response of S. Note, however, that because it is an impulse response of a causal system  $S_0$ , the function  $y_n(t)$  is causal. To incorporate this fact we must represent this function as  $y_n(t)u(t)$ . Now it follows that h(t), the unit impulse response of the system S, is given by

$$h(t) = P(D)[y_n(t)u(t)]$$
(2.55)

where  $y_n(t)$  is a linear combination of the characteristic modes of the system subject to initial conditions (2.53).

The right-hand side of Eq. (2.55) is a linear combination of the derivatives of  $y_n(t)u(t)$ . Evaluating these derivatives is clumsy and inconvenient because of the presence of u(t). The derivatives will generate an impulse and its derivatives at the origin. Fortunately when  $M \le N$  [Eq. (2.11)], we can avoid this difficulty by using the observation in Eq. (2.51), which asserts that at t = 0 (the origin),  $h(t) = b_0 \delta(t)$ . Therefore, we need not bother to find h(t) at the origin. This simplification means that instead of deriving  $P(D)[y_n(t)u(t)]$ , we can derive  $P(D)y_n(t)$  and add to it the term  $b_0 \delta(t)$  so that

$$h(t) = b_0 \delta(t) + P(D)y_n(t) \qquad t \ge 0$$
$$= b_0 \delta(t) + [P(D)y_n(t)]u(t)$$

This expression is valid when  $M \le N$  [the form given in Eq. (2.11)]. When M > N, Eq. (2.55) should be used.

### 2.9 SUMMARY

This chapter discusses time-domain analysis of LTIC systems. The total response of a linear system is a sum of the zero-input response and zero-state response. The zero-input response is the system

### 222 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

response generated only by the internal conditions (initial conditions) of the system, assuming that the external input is zero; hence the adjective "zero-input." The zero-state response is the system response generated by the external input, assuming that all initial conditions are zero, that is, when the system is in zero state.

Every system can sustain certain forms of response on its own with no external input (zero input). These forms are intrinsic characteristics of the system; that is, they do not depend on any external input. For this reason they are called characteristic modes of the system. Needless to say, the zero-input response is made up of characteristic modes chosen in a combination required to satisfy the initial conditions of the system. For an *N*th-order system, there are *N* distinct modes.

The unit impulse function is an idealized mathematical model of a signal that cannot be generated in practice.<sup>†</sup> Nevertheless, introduction of such a signal as an intermediary is very helpful in analysis of signals and systems. The unit impulse response of a system is a combination of the characteristic modes of the system<sup>‡</sup> because the impulse  $\delta(t) = 0$  for t > 0. Therefore, the system response for t > 0 must necessarily be a zero-input response, which, as seen earlier, is a combination of characteristic modes.

The zero-state response (response due to external input) of a linear system can be obtained by breaking the input into simpler components and then adding the responses to all the components. In this chapter we represent an arbitrary input x(t) as a sum of narrow rectangular pulses [staircase approximation of x(t)]. In the limit as the pulse width  $\rightarrow 0$ , the rectangular pulse components approach impulses. Knowing the impulse response of the system, we can find the system response to all the impulse components and add them to yield the system response to the input x(t). The sum of the responses to the impulse components is in the form of an integral, known as the convolution integral. The system response is obtained as the convolution of the input x(t) with the system's impulse response h(t). Therefore, the knowledge of the system's impulse response allows us to determine the system response to any arbitrary input.

LTIC systems have a very special relationship to the everlasting exponential signal  $e^{st}$  because the response of an LTIC system to such an input signal is the same signal within a multiplicative constant. The response of an LTIC system to the everlasting exponential input  $e^{st}$  is  $H(s)e^{st}$ , where H(s) is the transfer function of the system.

If every bounded input results in a bounded output, the system is stable in the bounded-input/bounded-output (BIBO) sense. An LTIC system is BIBO-stable if and only if its impulse response is absolutely integrable. Otherwise, it is BIBO-unstable. BIBO stability is a stability seen from external terminals of the system. Hence, it is also called external stability or zero-state stability.

In contrast, internal stability (or the zero-input stability) examines the system stability from inside. When some initial conditions are applied to a system in zero state, then, if the system eventually returns to zero state, the system is said to be stable in the asymptotic or Lyapunov sense. If the system's response increases without bound, it is unstable. If the system does not go to zero state and the response does not increase indefinitely, the system is marginally stable. The internal stability criterion, in terms of the location of a system's characteristic roots, can be summarized as follows:

<sup>&</sup>lt;sup>†</sup> However, it can be closely approximated by a narrow pulse of unit area and having a width that is much smaller than the time constant of an LTIC system in which it is used.

<sup>&</sup>lt;sup>‡</sup> There is the possibility of an impulse in addition to the characteristic modes.

- 1. An LTIC system is asymptotically stable if, and only if, all the characteristic roots are in the LHP. The roots may be repeated or unrepeated.
- 2. An LTIC system is unstable if, and only if, either one or both of the following conditions exist: (i) at least one root is in the RHP; (ii) there are repeated roots on the imaginary axis.
- 3. An LTIC system is marginally stable if, and only if, there are no roots in the RHP, and there are some unrepeated roots on the imaginary axis.

It is possible for a system to be externally (BIBO) stable but internally unstable. When a system is controllable and observable, its external and internal descriptions are equivalent. Hence, external (BIBO) and internal (asymptotic) stabilities are equivalent and provide the same information. Such a BIBO-stable system is also asymptotically stable, and vice versa. Similarly, a BIBO-unstable system is either marginally stable or asymptotically unstable system.

The characteristic behavior of a system is extremely important because it determines not only the system response to internal conditions (zero-input behavior), but also the system response to external inputs (zero-state behavior) and the system stability. The system response to external inputs is determined by the impulse response, which itself is made up of characteristic modes. The width of the impulse response is called the time constant of the system, which indicates how fast the system can respond to an input. The time constant plays an important role in determining such diverse system behaviors as the response time and filtering properties of the system, dispersion of pulses, and the rate of pulse transmission through the system.

### REFERENCES

- 1. Lathi, B. P., Signals and Systems. Berkeley-Cambridge Press, Carmichael, CA, 1987.
- 2. Mason, S. J., *Electronic Circuits, Signals, and Systems*. Wiley, New York, 1960.
- 3. Kailath, T., Linear System. Prentice-Hall, Englewood Cliffs, NJ, 1980.
- 4. Lathi, B. P., *Modern Digital and Analog Communication Systems*, 3rd ed. Oxford University Press, New York, 1998.

# PROBLEMS

- **2.2-1** Determine the constants  $c_1$ ,  $c_2$ ,  $\lambda_1$ , and  $\lambda_2$  for each of the following second-order systems, which have zero-input responses of the form  $y_{zir}(t) = c_1 e^{\lambda_1 t} + c_2 e^{\lambda_2 t}$ .
  - (a)  $\ddot{y}(t) + 2\dot{y}(t) + 5y(t) = \ddot{x}(t) 5x(t)$  with  $y_{zir}(0) = 2$  and  $\dot{y}_{zir}(0) = 0$ .
  - (b)  $\ddot{y}(t) + 2\dot{y}(t) + 5y(t) = \ddot{x}(t) 5x(t)$  with  $y_{\text{zir}}(0) = 4$  and  $\dot{y}_{\text{zir}}(0) = -1$ .
  - (c)  $\frac{d^2}{dt^2}y(t) + 2\frac{d}{dt}y(t) = x(t)$  with  $y_{zir}(0) = 1$  and  $y_{zir}(0) = 2$ .
  - (d)  $(D^2 + 2D + 10) \{y(t)\} = (D^5 D) \{x(t)\}$  with  $y_{zir}(0) = \dot{y}_{zir}(0) = 1.$
  - (e)  $(D^2 + \frac{7}{2}D + \frac{3}{2})\{y(t)\} = (D+2)\{x(t)\}$  with  $y_{zir}(0) = 3$  and  $\ddot{y}_{zir}(0) = -8$ . [*Caution:* The

second IC is given in terms of the second derivative, not the first derivative].

- (f)  $13y(t) + 4\frac{d}{dt}y(t) + \frac{d^2}{dt^2}y(t) = 2x(t) 4\frac{d}{dt}x(t)$ with  $y_{zir}(0) = 3$  and  $\ddot{y}_{zir}(0) = -15$ . [*Caution:* The second IC is given in terms of the second derivative, not the first derivative].
- **2.2-2** Consider a linear time-invariant system with input x(t) and output y(t) that is described by the differential equation

$$(D+1)(D^2-1)\{y(t)\} = (D^5-1)\{x(t)\}$$

Furthermore, assume  $y(0) = \dot{y}(0) = \ddot{y}(0)$ = 1.

### 224 CHAPTER 2 TIME-DOMAIN ANALYSIS OF CONTINUOUS-TIME SYSTEMS

- (a) What is the order of this system?
- (b) What are the characteristic roots of this system?
- (c) Determine the zero-input response y<sub>zir</sub>(t).Simplify your answer.
- **2.2-3** A real LTIC system with input x(t) and output y(t) is described by the following constant-coefficient linear differential equation:

$$(D^{3} + 9D) \{y(t)\} = (2D^{3} + 1) \{x(t)\}.$$

- (a) What is the characteristic equation of this system?
- (b) What are the characteristic modes of this system?
- (c) Assuming  $y_{zir}(0) = 4$ ,  $\dot{y}_{zir}(0) = -18$ , and  $\ddot{y}_{zir}(0) = 0$ , determine this system's zero-input response  $y_{zir}(t)$ . Simplify  $y_{zir}(t)$  to include only real terms (i.e., no *j*'s should appear in your answer).
- 2.2-4 An LTIC system is specified by the equation

$$(D^2 + 5D + 6)y(t) = (D+1)x(t)$$

- (a) Find the characteristic polynomial, characteristic equation, characteristic roots, and characteristic modes of this system.
- (b) Find y<sub>0</sub>(t), the zero-input component of the response y(t) for t ≥ 0, if the initial conditions are y<sub>0</sub>(0<sup>-</sup>) = 2 and y<sub>0</sub>(0<sup>-</sup>) = −1.
- **2.2-5** Repeat Prob. 2.2-4 for

$$(D^2 + 4D + 4)y(t) = Dx(t)$$

and  $y_0(0^-) = 3$ ,  $\dot{y}_0(0^-) = -4$ .

2.2-6 Repeat Prob. 2.2-4 for

$$D(D+1)y(t) = (D+2)x(t)$$

and  $y_0(0^-) = \dot{y}_0(0^-) = 1$ .

**2.2-7** Repeat Prob. 2.2-4 for

$$(D^2 + 9)y(t) = (3D + 2)x(t)$$

and  $y_0(0^-) = 0$ ,  $\dot{y}_0(0^-) = 6$ .

2.2-8 Repeat Prob. 2.2-4 for

$$(D2 + 4D + 13)y(t) = 4(D+2)x(t)$$

with 
$$y_0(0^-) = 5$$
,  $\dot{y}_0(0^-) = 15.98$ .

2.2-9 Repeat Prob. 2.2-4 for

$$D^{2}(D+1)y(t) = (D^{2}+2)x(t)$$


with  $y_0(0^-) = 4$ ,  $\dot{y}_0(0^-) = 3$ , and  $\ddot{y}_0(0^-) = -1$ .

2.2-10 Repeat Prob. 2.2-4 for

$$(D+1)(D^2+5D+6)y(t) = Dx(t)$$

with  $y_0(0^-) = 2$ ,  $\dot{y}_0(0^-) = -1$ , and  $\ddot{y}_0(0^-) = 5$ .

- **2.2-11** A system is described by a constant-coefficient linear differential equation and has zero-input response given by  $y_0(t) = 2e^{-t} + 3$ .
  - (a) Is it possible for the system's characteristic equation to be  $\lambda + 1 = 0$ ? Justify your answer.
  - (b) Is it possible for the system's characteristic equation to be  $\sqrt{3}(\lambda^2 + \lambda) = 0$ ? Justify your answer.
  - (c) Is it possible for the system's characteristic equation to be  $\lambda(\lambda + 1)^2 = 0$ ? Justify your answer.
- **2.2-12** Consider the circuit of Fig. P2.2-12. Using operator notation, this system can be described as  $(D + a_1)\{y(t)\} = (b_0D + b_1)\{x(t)\}$ .
  - (a) Determine the constants  $a_1$ ,  $b_0$ , and  $b_1$  in terms of the system components R,  $R_f$ , and C.
  - (b) Assume that  $R = 300 \text{ k}\Omega$ ,  $R_f = 1.2 \text{ M}\Omega$ , and  $C = 5 \text{ }\mu\text{F}$ . What is the zero-input response  $y_0(t)$  of this system, assuming  $v_C(0) = 1 \text{ V}$ ?

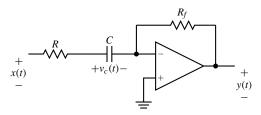



**2.3-1** Determine the characteristic equation, characteristic modes, and impulse response h(t) for each of the following real LTIC systems. Since the systems are real, express each h(t) using only real terms (i.e., no *j*'s should appear in your answers).

Problems 225

(a)  $(D^2 + 1) \{y(t)\} = 2D \{x(t)\}$ 

(b) 
$$(D^3 + D) \{y(t)\} = (2D^3 + 1) \{x(t)\}$$

(c) 
$$\frac{d^2}{dt^2}y(t) + 2\frac{d}{dt}y(t) + 5y(t) = 8x(t)$$

**2.3-2** Find the unit impulse response of a system specified by the equation

$$(D^2 + 4D + 3)y(t) = (D + 5)x(t)$$

2.3-3 Repeat Prob. 2.3-2 for

$$(D^{2} + 5D + 6)y(t) = (D^{2} + 7D + 11)x(t)$$

**2.3-4** Repeat Prob. 2.3-2 for the first-order allpass filter specified by the equation

$$(D+1)y(t) = -(D-1)x(t)$$

**2.3-5** Find the unit impulse response of an LTIC system specified by the equation

 $(D^2 + 6D + 9)y(t) = (2D + 9)x(t)$ 

- **2.3-6** Determine and plot the unit impulse response h(t) of the op-amp circuit of Fig. P2.2-12, assuming that  $R = 300 \text{ k}\Omega$ ,  $R_f = 1.2 \text{ M}\Omega$ , and  $C = 5 \mu\text{F}$ .
- **2.3-7** A causal LTIC system with input x(t) and output y(t) is described by the constant coefficient integral equation

$$y(t) + \int 3y(t) dt + \iint 2y(t) dt =$$
$$\iint x(t) dt - \iiint x(t) dt.$$

- (a) Express this system as a constant coefficient linear differential equation in standard operator form.
- (b) Determine the characteristic modes of this system.

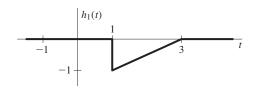
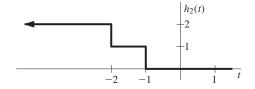


Figure P2.4-1

- (c) Determine the impulse response *h*(*t*) of this system.
- **2.4-1** Let  $f(t) = h_1(t) * h_2(t)$ , where  $h_1(t)$  and  $h_2(t)$  are shown in Fig. P2.4-1. In the following, use the graphical convolution procedure where you flip and shift  $h_2(t)$ .
  - (a) Plot h<sub>1</sub>(τ) and h<sub>2</sub>(t τ) as functions of τ. Clearly label the plots, including necessary function parameterizations.
  - (b) Determine the (piecewise) regions of f(t) and set up the corresponding integrals that describe f(t) in those regions. Do not evaluate the integrals, only set them up!
  - (c) Determine f(1), which is f(t) evaluated at t = 1. Provide a number, not a formula.
- 2.4-2 Consider signals h(t) = u(t + 3) 2u(t + 1) + u(t 1) and  $x(t) = \cos(t) [u(t \pi/2) u(t 3\pi/2)]$ . Let y(t) = x(t) \* h(t).
  - (a) Determine the last time  $t_{\text{last}}$  that y(t) is nonzero. That is, find the smallest value  $t_{\text{last}}$  such that y(t) = 0 for all  $t > t_{\text{last}}$ .
  - (b) Determine the approximate time  $t_{max}$  where y(t) is a maximum.
- **2.4-3** Consider signals  $h(t) = -u(t + 2) + 3u(t 1) 2u(t \frac{5}{2})$  and  $x(t) = \sin(t) [u(t+2\pi) u(t+\pi)]$ . Determine the approximate time  $t_{\min}$  where y(t) = x(t) \* h(t) is a minimum. Note, the minimum value of  $y(t) \neq 0$ !
- **2.4-4** An LTIC system has impulse response h(t) = 3u(t-2). For input x(t) shown in Fig. P2.4-4, use the graphical convolution procedure to determine  $y_{zsr}(t) = h(t) * x(t)$ . Accurately sketch  $y_{zsr}(t)$ . When solving for  $y_{zsr}(t)$ , flip and shift x(t) and explicitly show all integration steps—even if apparently trivial!



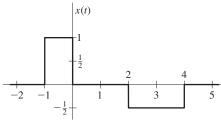


Figure P2.4-4

**2.4-5** Suppose an LTIC system has impulse response h(t) and input x(t) = u(t). Figure P2.4-5 shows x(t) and h(t + 1), respectively. Be careful! Figure P2.4-5 shows h(t+1), not h(t).


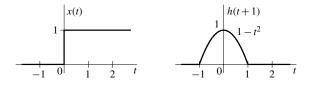


Figure P2.4-5

- (a) Is system h(t) causal? Mathematically justify your answer.
- (b) Use the graphical convolution procedure to determine  $y_{zsr}(t) = x(t) * h(t)$ . Accurately sketch  $y_{zsr}(t)$ . When solving for  $y_{zsr}(t)$ , flip and shift x(t) and explicitly show all integration steps.

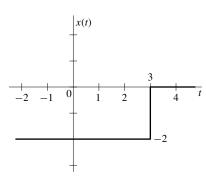

**2.4-6** Repeat Prob. 2.4-5 using the signals of Fig. P2.4-6, rather than those of Fig. P2.4-5. Be careful! Figure P2.4-6 shows h(t-1), not h(t).

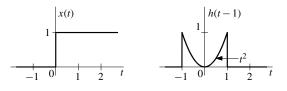


Figure P2.4-6

- **2.4-7** Suppose an LTIC system has impulse response h(t) and input x(t), both shown in Fig. P2.4-7. Use the graphical convolution procedure to determine  $y_{zsr}(t) = x(t) * h(t)$ . Accurately sketch  $y_{zsr}(t)$ . When solving for  $y_{zsr}(t)$ , flip and shift x(t) and explicitly show all integration steps.
- **2.4-8** An LTIC system has impulse response h(t), as shown in Fig. P2.4-8. Let *t* have units of seconds. Let the input be x(t) = u(-t-2) and designate the output as  $y_{zsr}(t) = x(t) * h(t)$ .
  - (a) Use the graphical convolution procedure where h(t) is flipped and shifted to determine y<sub>zsr</sub>(t). Accurately plot your result.
  - (b) Use the graphical convolution procedure where x(t) is flipped and shifted to determine y<sub>zsr</sub>(t). Accurately plot your result.
- **2.4-9** If c(t) = x(t) \* g(t), then show that  $A_c = A_x A_g$ , where  $A_x, A_g$ , and  $A_c$  are the areas under x(t), g(t), and c(t), respectively. Verify this *area property* of convolution in Exs. 2.10 and 2.12.

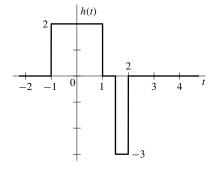


Figure P2.4-7

**2.4-10** If x(t) \* g(t) = c(t), then show that x(at) \* g(at) = |1/a|c(at). This *time-scaling property* of convolution states that if both x(t) and g(t) are time-scaled by *a*, their convolution is also time-scaled by *a* (and multiplied by |1/a|).

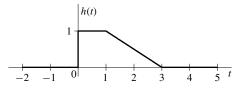


Figure P2.4-8

- **2.4-11** Show that the convolution of an odd and an even function is an odd function and the convolution of two odd or two even functions is an even function. [*Hint:* Use the time-scaling property of convolution in Prob. 2.4-10.]
- **2.4-12** Suppose an LTIC system has impulse response h(t) = (1 t)[u(t) u(t 1)] and input x(t) = u(-t-1) + u(t-1). Use the graphical convolution procedure to determine  $y_{zsr}(t) = x(t) * h(t)$ . Accurately sketch  $y_{zsr}(t)$ . When solving for  $y_{zsr}(t)$ , flip and shift h(t), explicitly show all integration steps, and simplify your answer.
- **2.4-13** Using direct integration, find  $e^{-at}u(t) * e^{-bt}u(t)$ .
- **2.4-14** Using direct integration, find u(t) \* u(t),  $e^{-at}u(t) * e^{-at}u(t)$ , and tu(t) \* u(t).
- **2.4-15** Using direct integration, find  $\sin t u(t) * u(t)$  and  $\cos t u(t) * u(t)$ .
- 2.4-16 The unit impulse response of an LTIC system is

$$h(t) = e^{-t}u(t)$$

Find this system's (zero-state) response y(t) if the input x(t) is: (a) u(t)(b)  $e^{-t}u(t)$ 

(c) 
$$e^{-2t}u(t)$$

(d)  $\sin 3t u(t)$ 

Use the convolution table (Table 2.1) to find your answers.

2.4-17 Repeat Prob. 2.4-16 for

$$h(t) = [2e^{-3t} - e^{-2t}]u(t)$$

and if the input 
$$x(t)$$
 is:  
(a)  $u(t)$   
(b)  $e^{-t}u(t)$   
(c)  $e^{-2t}u(t)$ 

2.4-18 Repeat Prob. 2.4-16 for

$$h(t) = (1 - 2t)e^{-2t}u(t)$$

and input x(t) = u(t).

2.4-19 Repeat Prob. 2.4-16 for

$$h(t) = 4e^{-2t}\cos 3t u(t)$$

and each of the following inputs x(t):

- (a) u(t)
- (b)  $e^{-t}u(t)$
- 2.4-20 Repeat Prob. 2.4-16 for

$$h(t) = e^{-t}u(t)$$

and each of the following inputs x(t):

- (a)  $e^{-2t}u(t)$
- (b)  $e^{-2(t-3)}u(t)$
- (c)  $e^{-2t}u(t-3)$
- (d) The gate pulse depicted in Fig. P2.4-20—and provide a sketch of y(t).


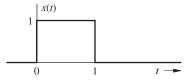


Figure P2.4-20

**2.4-21** A first-order allpass filter impulse response is given by

$$h(t) = -\delta(t) + 2e^{-t}u(t)$$

- (a) Find the zero-state response of this filter for the input  $e^t u(-t)$ .
- (b) Sketch the input and the corresponding zero-state response.
- **2.4-22** Figure P2.4-22 shows the input x(t) and the impulse response h(t) for an LTIC system. Let the output be y(t).
  - (a) By inspection of x(t) and h(t), find y(-1), y(0), y(1), y(2), y(3), y(4), y(5), and

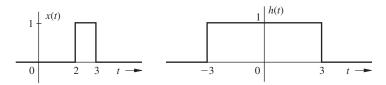


#### Figure P2.4-22

y(6). Thus, by merely examining x(t) and h(t), you are required to see what the result of convolution yields at t = -1, 0, 1, 2, 3, 4, 5, and 6.

- (b) Find the system response to the input x(t).
- **2.4-23** The zero-state response of an LTIC system to an input  $x(t) = 2e^{-2t}u(t)$  is  $y(t) = [4e^{-2t} + 6e^{-3t}]u(t)$ . Find the impulse response of the system. [*Hint:* We have not yet developed a method of finding h(t) from the knowledge of the input and the corresponding output. Knowing the form of x(t) and y(t), you will have to make the best guess of the general form of h(t).]
- **2.4-24** Sketch the functions  $x(t) = 1/(t^2 + 1)$  and u(t). Now find x(t) \* u(t) and sketch the result.
- **2.4-25** Figure P2.4-25 shows x(t) and g(t). Find and sketch c(t) = x(t) \* g(t).
- **2.4-26** Find and sketch c(t) = x(t) \* g(t) for the functions depicted in Fig. P2.4-26.
- **2.4-27** Find and sketch  $c(t) = x_1(t) * x_2(t)$  for the pairs of functions illustrated in Fig. P2.4-27.
- **2.4-28** Use Eq. (2.37) to find the convolution of x(t) and w(t), shown in Fig. P2.4-28.

- **2.4-29** Determine H(s), the transfer function of an ideal time delay of T seconds. Find your answer by two methods: using Eq. (2.39) and using Eq. (2.40).
- **2.4-30** Determine y(t) = x(t) \* h(t) for the signals depicted in Fig. P2.4-30.
- **2.4-31** Two linear time-invariant systems, each with impulse response h(t), are connected in cascade. Refer to Fig. P2.4-31. Given input x(t) = u(t), determine y(1). That is, determine the step response at time t = 1 for the cascaded system shown.
- **2.4-32** Consider the electric circuit shown in Fig. P2.4-32.
  - (a) Determine the differential equation that relates the input x(t) to output y(t). Recall that  $i_C(t) = C \frac{dv_C(t)}{dt}$  and  $v_L(t) = L \frac{di_L(t)}{dt}$ .
  - (b) Find the characteristic equation for this circuit, and express the root(s) of the characteristic equation in terms of *L* and *C*.
  - (c) Determine the zero-input response given an initial capacitor voltage of one volt and an initial inductor current of zero amps. That is, find  $y_0(t)$  given  $v_C(0) = 1$  V and

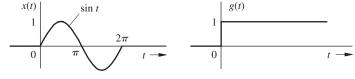



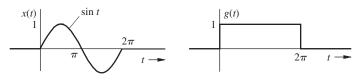


Figure P2.4-26

Problems 229


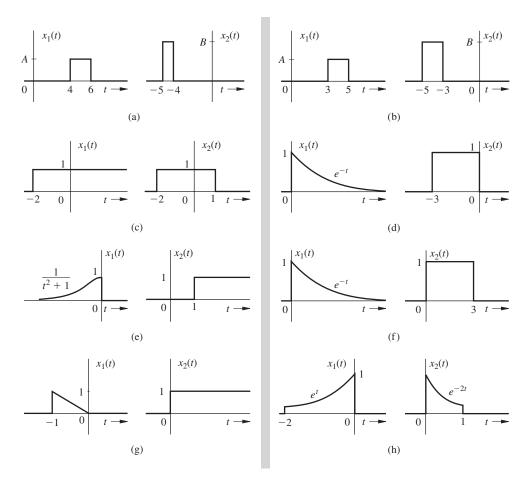



Figure P2.4-27



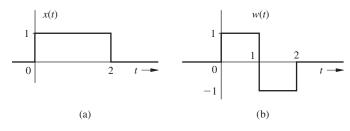


 $i_L(0) = 0$  A. [*Hint:* The coefficient(s) in  $y_0(t)$  are independent of L and C.]

- (d) Plot  $y_0(t)$  for  $t \ge 0$ . Does the zero-input response, which is caused solely by initial conditions, ever "die out"?
- (e) Determine the total response y(t) to the input  $x(t) = e^{-t}u(t)$ . Assume an initial inductor current of  $i_L(0^-) = 0$  A, an initial capacitor voltage of  $v_C(0^-) = 1$  V, L = 1 H, and C = 1 F.

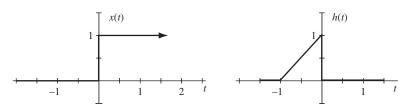



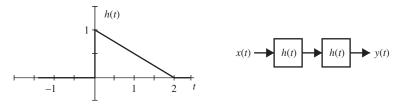



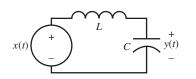
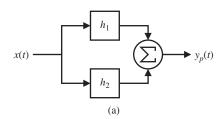


Figure P2.4-32



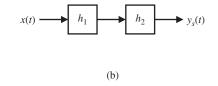


Figure P2.4-33

- **2.4-33** Two LTIC systems have impulse response functions given by  $h_1(t) = (1-t)[u(t)-u(t-1)]$  and  $h_2(t) = t[u(t+2)-u(t-2)]$ .
  - (a) Carefully sketch the functions  $h_1(t)$  and  $h_2(t)$ .
  - (b) Assume that the two systems are connected in parallel, as shown in Fig. P2.4-33a. Carefully plot the equivalent impulse response function,  $h_p(t)$ .
  - (c) Assume that the two systems are connected in cascade, as shown in Fig. P2.4-33b. Carefully plot the equivalent impulse response function,  $h_s(t)$ .

- 2.4-34 Consider the circuit shown in Fig. P2.4-34.
  - (a) Find the output y(t) given an initial capacitor voltage of y(0) = 2 volts and an input x(t) = u(t).
  - (b) Given an input x(t) = u(t 1), determine the initial capacitor voltage y(0) so that the output y(t) is 0.5 volt at t = 2 seconds.

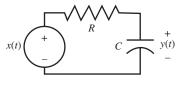


Figure P2.4-34

**2.4-35** An analog signal is given by x(t) = t[u(t) - u(t-1)], as shown in Fig. P2.4-35. Determine and plot y(t) = x(t) \* x(2t).

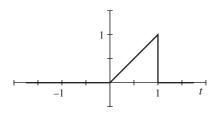


Figure P2.4-35

- **2.4-36** Consider the electric circuit shown in Fig. P2.4-36.
  - (a) Determine the differential equation that relates the input current x(t) to output current y(t). Recall that

$$v_L(t) = L \frac{di_L(t)}{dt}$$

- (b) Find the characteristic equation for this circuit, and express the root(s) of the characteristic equation in terms of L<sub>1</sub>, L<sub>2</sub>, and R.
- (c) Determine the zero-input response given initial inductor currents of one ampere each. That is, find  $y_0(t)$  given  $i_{L_1}(0) = i_{L_2}(0) = 1$  A.

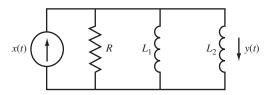


Figure P2.4-36

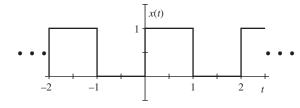


Figure P2.4-38

- **2.4-37** An LTI system has step response given by  $g(t) = e^{-t}u(t) e^{-2t}u(t)$ . Determine the output of this system y(t) given an input  $x(t) = \delta(t-\pi) \cos(\sqrt{3})u(t)$ .
- **2.4-38** The periodic signal x(t) shown in Fig. P2.4-38 is input to a system with impulse response function h(t) = t[u(t) u(t 1.5)], also shown in Fig. P2.4-38. Use convolution to determine the output y(t) of this system. Plot y(t) over  $(-3 \le t \le 3)$ .
- **2.4-39** Consider the electric circuit shown in Fig. P2.4-39.
  - (a) Determine the differential equation relating input *x*(*t*) to output *y*(*t*).
  - (b) Determine the output y(t) in response to the input  $x(t) = 4te^{-3t/2}u(t)$ . Assume component values of  $R = 1 \Omega$ ,  $C_1 = 1$  F, and  $C_2 = 2$  F, and initial capacitor voltages of  $V_{C_1} = 2$  V and  $V_{C_2} = 1$  V.



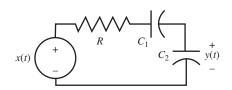


Figure P2.4-39

- **2.4-40** An LTIC system has impulse response  $h(t) = 3e^{-|t|}$ .
  - (a) Is the system causal? Mathematically justify your answer.
  - (b) Determine the zero-state response of this system if the input is x(t) = u(2 t).
- 2.4-41 A cardiovascular researcher is attempting to model the human heart. He has recorded ventricular pressure, which he believes corresponds to the heart's impulse response

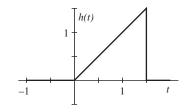

function h(t), as shown in Fig. P2.4-41. Comment on the function h(t) shown in Fig. P2.4-41. Can you establish any system properties, such as causality or stability? Do the data suggest any reason to suspect that the measurement is not a true impulse response?

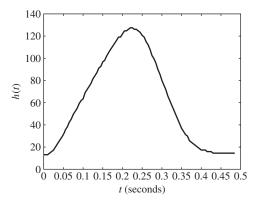



- 2.4-42 Consider an integrator system, y(t) = $\int_{-\infty}^{t} x(\tau) d\tau.$ 
  - (a) What is the unit impulse response  $h_i(t)$  of this system?
  - (b) If two such integrators are put in parallel, what is the resulting impulse response  $h_{\rm p}(t)$ ?
  - (c) If two such integrators are put in series, what is the resulting impulse response  $h_s(t)$ ?
- 2.4-43 The autocorrelation of a function x(t) is given by  $r_{xx}(t) = \int_{-\infty}^{\infty} x(\tau) x(\tau - t) d\tau$ . This equation is computed in a manner nearly identical to convolution.
  - (a) Show  $r_{xx}(t) = x(t) * x(-t)$ .
  - (b) Determine and plot  $r_{xx}(t)$  for the signal x(t)depicted in Fig. P2.4-43. [Hint:  $r_{xx}(t) =$  $r_{xx}(-t)$ .]


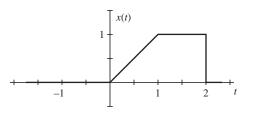



Figure P2.4-43

2.4-44 Consider the circuit shown in Fig. P2.4-44. This circuit functions as an integrator. Assume ideal op-amp behavior and recall that



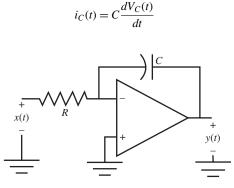

- (a) Determine the differential equation that relates the input x(t) to the output y(t).
- (b) This circuit does not behave well at dc. Demonstrate this by computing the zero-state response y(t) for a unit step input x(t) = u(t).
- 2.4-45 Derive the result in Eq. (2.37) in another way. As mentioned in Ch. 1 (Fig. 1.27b), it is possible to express an input in terms of its step components, as shown in Fig. P2.4-45. Find the system response as a sum of the responses to the step components of the input.

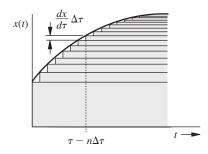



2.4-46Show that an LTIC system response to an everlasting sinusoid  $\cos \omega_0 t$  is given by

$$y(t) = |H(j\omega_0)| \cos[\omega_0 t + \Delta H(j\omega_0)]$$

where

$$H(j\omega) = \int_{-\infty}^{\infty} h(t)e^{-j\omega t} dt$$

assuming the integral on the right-hand side exists.

**2.4-47** A line charge is located along the *x* axis with a charge density Q(x) coulombs per meter. Show that the electric field E(x) produced by this line charge at a point *x* is given by

$$E(x) = Q(x) * h(x)$$

where  $h(x) = 1/4\pi\epsilon x^2$ . [*Hint:* The charge over an interval  $\Delta \tau$  located at  $\tau = n\Delta \tau$  is  $Q(n\Delta \tau)\Delta \tau$ . Also by Coulomb's law, the electric field E(r) at a distance r from a charge q coulombs is given by  $E(r) = q/4\pi\epsilon r^2$ .]

- **2.4-48** A system is called complex if a real-valued input can produce a complex-valued output. Suppose a linear time-invariant complex system has impulse response h(t) = j[u(-t + 2) u(-t)].
  - (a) Is this system causal? Explain.
  - (b) Use convolution to determine the zero-state response  $y_1(t)$  of this system in response to the unit-duration pulse  $x_1(t) = u(t) u(t 1)$ .
  - (c) Using the result from part (a), determine the zero-state response  $y_2(t)$  in response to  $x_2(t) = 2u(t-1) - u(t-2) - u(t-3)$ .
- **2.5-1** Explain, with reasons, whether the LTIC systems described by the following equations are (i) stable or unstable in the BIBO sense; (ii) asymptotically stable, unstable, or marginally stable. Assume that the systems are controllable and observable.
  - (a)  $(D^2 + 8D + 12)y(t) = (D 1)x(t)$
  - (b)  $D(D^2 + 3D + 2)y(t) = (D + 5)x(t)$
  - (c)  $D^2(D^2+2)y(t) = x(t)$

(d)  $(D+1)(D^2-6D+5)y(t) = (3D+1)x(t)$ 

- **2.5-2** Repeat Prob. 2.5-1 for the following: (a)  $(D+1)(D^2+2D+5)^2v(t) = x(t)$ 
  - (b)  $(D+1)(D^2+9)y(t) = (2D+9)x(t)$
  - (c)  $(D+1)(D^2+9)^2y(t) = (2D+9)x(t)$ (c)  $(D+1)(D^2+9)^2y(t) = (2D+9)x(t)$
  - (d)  $(D^2 + 1)(D^2 + 3)(t) = (2D^2 + 3)x(t)$ (d)  $(D^2 + 1)(D^2 + 4)(D^2 + 9)y(t) = 3Dx(t)$
- **2.5-3** Consider an LTIC system with unit impulse response  $h(t) = e^t \left[\frac{2}{3}\cos(\frac{3}{2}t) + \frac{1}{3}\sin(\pi t)\right] u(123 t)$ . Is this system BIBO-stable? Mathematically justify your answer.

- **2.5-4** Consider an LTIC system with unit impulse response  $h(t) = \frac{1}{t}u(t-T)$ .
  - (a) Determine, if possible, the value(s) of *T* for which this system is causal.
  - (b) Determine, if possible, the value(s) of *T* for which this system is BIBO-stable.Justify all answers mathematically.
- **2.5-5** You are given the choice of a system that is guaranteed internally stable or a system that is guaranteed externally stable. Which do you choose? Why?
- **2.5-6** For a certain LTIC system, the impulse response h(t) = u(t).
  - (a) Determine the characteristic root(s) of this system.
  - (b) Is this system asymptotically or marginally stable, or is it unstable?
  - (c) Is this system BIBO-stable?
  - (d) What can this system be used for?
- **2.5-7** In Sec. 2.5 we demonstrated that for an LTIC system, the condition of Eq. (2.45) is sufficient for BIBO stability. Show that this is also a necessary condition for BIBO stability in such systems. In other words, show that if Eq. (2.45) is not satisfied, then there exists a bounded input that produces an unbounded output. [Hint: Assume that a system exists for which h(t) violates Eq. (2.45) and yet produces an output that is bounded for every bounded input. Establish the contradiction in this statement by considering an input x(t) defined by  $x(t_1 \tau) = 1$  when  $h(\tau) \ge 0$  and  $x(t_1 \tau) = -1$  when  $h(\tau) < 0$ , where  $t_1$  is some fixed instant.]
- **2.5-8** An analog LTIC system with impulse response function h(t) = u(t+2) u(t-2) is presented with an input x(t) = t(u(t) u(t-2)).
  - (a) Determine and plot the system output y(t) = x(t) \* h(t).
  - (b) Is this system stable? Is this system causal? Justify your answers.
- **2.5-9** A system has an impulse response function shaped like a rectangular pulse, h(t) = u(t) u(t-1). Is the system stable? Is the system causal?
- **2.5-10** A continuous-time LTI system has impulse response function  $h(t) = \sum_{i=0}^{\infty} (0.5)^i \delta(t-i)$ .
  - (a) Is the system causal? Prove your answer.
  - (b) Is the system stable? Prove your answer.

- **2.6-1** Data at a rate of 1 million pulses per second are to be transmitted over a certain communications channel. The unit step response g(t) for this channel is shown in Fig. P2.6-1.
  - (a) Can this channel transmit data at the required rate? Explain your answer.
  - (b) Can an audio signal consisting of components with frequencies up to 15 kHz be transmitted over this channel with reasonable fidelity?

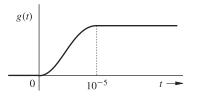


Figure P2.6-1

- **2.6-2** Determine a frequency  $\omega$  that will cause the input  $x(t) = \cos(\omega t)$  to produce a strong response when applied to the system described by  $(D^2 + 2D + 13/4)\{y(t)\} = x(t)$ . Carefully explain your choice.
- **2.6-3** Figure P2.6-3 shows the impulse response h(t) of a lowpass LTIC system. Determine the peak amplitude A and time constant  $T_h$  so that rectangular impulse response  $\hat{h}(t)$  is an appropriate approximation of h(t). The two graphs of Fig. P2.6-3 are not necessarily drawn to the same scale.


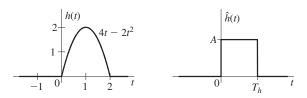


Figure P2.6-3

- **2.6-4** A certain communication channel has a bandwidth of 10 kHz. A pulse of 0.5 ms duration is transmitted over this channel.
  - (a) Determine the width (duration) of the received pulse.
  - (b) Find the maximum rate at which these pulses can be transmitted over this channel without interference between the successive pulses.

- **2.6-5** A first-order LTIC system has a characteristic root  $\lambda = -10^4$ .
  - (a) Determine  $T_r$ , the rise time of its unit step input response.
  - (b) Determine the bandwidth of this system.
  - (c) Determine the rate at which the information pulses can be transmitted through this system.
- **2.6-6** A lowpass system with a 6 MHz cutoff frequency needs to transmit data pulse that are  $\frac{500}{6}$  ns wide. Determine a suitable transmission rate  $F_{\text{rate}}$  (pulses/s) for this system.
- **2.6-7** Sketch an impulse response h(t) of a non-causal LP system that has an approximate cutoff frequency of 5 kHz. Since many solutions are possible, be sure to properly justify your answer.
- **2.6-8** Two LTIC transmission channels are available: the first has impulse response  $h_1(t) = u(t) - u(t-1)$  and the second has impulse response  $h_2(t) = \delta(t) + 0.5\delta(t-1) + 0.25\delta(t-2)$ . Explain which channel is better suited for the transmission of high-speed digital data (pulses).
- **2.6-9** Consider a linear time-invariant system with impulse response h(t) shown in Fig. P2.6-9. Outside the interval shown, h(t) = 0.

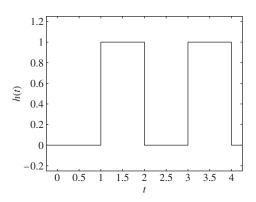

#### Figure P2.6-9

- (a) What is the rise time  $T_r$  of this system? Remember, rise time is the time between the application of a unit step and the moment at which the system has "fully" responded.
- (b) Suppose h(t) represents the response of a communication channel. What conditions might cause the channel to have such an impulse response? What is the maximum

average number of pulses per unit time that can be transmitted without causing interference? Justify your answer.

- (c) Determine the system output y(t) = x(t) \* h(t) for x(t) = [u(t-2) u(t)]. Accurately sketch y(t) over  $(0 \le t \le 10)$ .
- **2.6-10** A lowpass LTIC system has impulse response  $h(t) = -te^{-t}u(t)$ .
  - (a) Accurately sketch h(t).
  - (b) Describe a rectangular impulse response *ĥ*(*t*) as an appropriate approximation of *h*(*t*).
     What is the approximate cutoff frequency of this system?
- **2.6-11** A lowpass LTIC system has impulse response h(t), as shown in Fig. P2.4-8.
  - (a) As discussed in Sec. 2.6-2, determine a rectangular approximation  $\hat{h}(t)$  to h(t).
  - (b) Using  $\hat{h}(t)$ , what is the time constant  $T_h$  of this lowpass system?
  - (c) Using  $\hat{h}(t)$ , what is the approximate radian cutoff frequency  $\omega_c$  of this lowpass system?
  - (d) Assuming a frequency  $\omega_0 \ll \omega_c$ , what is the system response y(t) to the input  $x(t) = \sin(\omega_0 t + \pi/3)$ ?
- **2.6-12** A first CT lowpass system with time constant  $T_1 = 4 \ \mu s$  is put in series with a second CT lowpass system with time constant  $T_2 = 2 \ \mu s$ . Make an educated sketch of the overall impulse response function  $h_{\text{series}}(t)$ . What is the time constant  $T_{\text{series}}$  of the overall series-connected system?
- **2.7-1** An LTIC system with input x(t) and output y(t) is described by the following constant coefficient linear differential equation:

$$(D^4 - 16) \{y(t)\} = (D - 2) \{x(t)\}.$$

- (a) What are the 4 characteristic roots of this system (λ<sub>1</sub>, λ<sub>2</sub>, λ<sub>3</sub>, and λ<sub>4</sub>)? Determine the roots by hand and then verify your answers using MATLAB's roots command.
- (b) From Eq. (2.17), computing h(t) requires a signal  $\tilde{y}_n(t) = \sum_{k=1}^{4} c_k e^{\lambda_k t}$ . First, determine a matrix representation of the system of equations needed to solve for the four coefficients  $c_k$ . Second, write MATLAB code that computes the length-4 column vector of coefficients  $c_k$ .

**2.7-2** Define  $x(t) = 2u(t + \frac{2}{3}) - 2u(t)$ . Further, define the periodic signal  $h_1(t)$  as

$$h_1(t) = \begin{cases} t & 0 \le t < 1 \\ h_1(t+1) & \forall t \end{cases}$$


Lastly, define the aperiodic signal  $h_2(t)$  in terms of  $h_1(t)$  as

$$h_2(t) = h_1(t)[u(t-1) - u(t-2)]$$

- (a) Use MATLAB to plot x(t),  $h_1(t)$ , and  $h_2(t)$  over the interval  $-2.5 \le t \le 3.5$ .
- (b) Using the graphical convolution procedure, compute  $y_2(t) = x(t) * h_2(t)$ .
- (c) Compute by hand and then MATLAB plot  $y_1(t) = x(t) * h_1(t)$ . Modify program CH2MP4.m in Sec. 2.7-4 to validate your analytical result.
- **2.7-3** Consider the circuit shown in Fig. P2.7-3. Assume ideal op-amp behavior and recall that


$$i_C(t) = C \frac{dV_C(t)}{dt}$$

Without a feedback resistor  $R_f$ , the circuit functions as an integrator and is unstable, particularly at dc. A feedback resistor  $R_f$ corrects this problem and results in a stable circuit that functions as a "lossy" integrator.

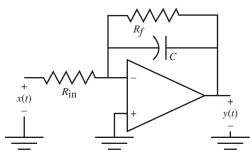



- (a) Determine the differential equation that relates the input *x*(*t*) to the output *y*(*t*). What is the corresponding characteristic equation?
- (b) To demonstrate that this "lossy" integrator is well behaved at dc, determine the zero-state

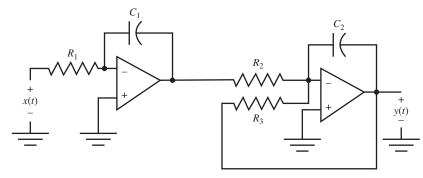



response y(t) given a unit step input x(t) = u(t).

- (c) Investigate the effect of 10% resistor and 25% capacitor tolerances on the system's characteristic root(s).
- 2.7-4 Consider the electric circuit shown in Fig. P2.7-4. Let  $C_1 = C_2 = 10 \ \mu\text{F}$ ,  $R_1 = R_2 = 100 \ \text{k}\Omega$ , and  $R_3 = 50 \ \text{k}\Omega$ .
  - (a) Determine the corresponding differential equation describing this circuit. Is the circuit BIBO-stable?
  - (b) Determine the zero-input response  $y_0(t)$  if the output of each op amp initially reads one volt.

- (c) Determine the zero-state response y(t) to a step input x(t) = u(t).
- (d) Investigate the effect of 10% resistor and 25% capacitor tolerances on the system's characteristic roots.
- **2.7-5** Input x(t) = 3[u(t) u(t-1)] + 2[u(t-2) u(t-3)] is applied to a lowpass LTIC system with impulse response h(t) = (4 t)[u(t) u(t-2)] to produce output y(t) = x(t) \* h(t). Modify program CH2MP4.m in Sec. 2.7-4 to perform the graphical convolution procedure to produce a plot of y(t).



# TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

In this chapter we introduce the basic concepts of discrete-time signals and systems. Furthermore, we explore the time-domain analysis of linear, time-invariant, discrete-time (LTID) systems. We show how to compute the zero-input response, determine the unit impulse response, and use convolution to evaluate the zero-state response.

# **3.1 INTRODUCTION**

A *discrete-time signal* is basically a sequence of numbers. Such signals arise naturally in inherently discrete-time situations such as population studies, amortization problems, national income models, and radar tracking. They may also arise as a result of sampling continuous-time signals in sampled data systems and digital filtering. Such signals can be denoted by x[n], y[n], and so on, where the variable *n* takes integer values, and x[n] denotes the *n*th number in the sequence labeled *x*. In this notation, the discrete-time variable *n* is enclosed in square brackets instead of parentheses, which we have reserved for enclosing continuous-time variables, such as *t*.

Systems whose inputs and outputs are discrete-time signals are called *discrete-time systems*. A digital computer is a familiar example of this type of system. A discrete-time signal is a sequence of numbers, and a discrete-time system processes a sequence of numbers x[n] to yield another sequence y[n] as the output.<sup>†</sup>

A discrete-time signal, when obtained by uniform sampling of a continuous-time signal x(t), can also be expressed as x(nT), where *T* is the sampling interval and *n*, the discrete variable taking on integer values. Thus, x(nT) denotes the value of the signal x(t) at t = nT. The signal x(nT) is a sequence of numbers (sample values), and hence, by definition, is a discrete-time signal. Such a signal can also be denoted by the customary discrete-time notation x[n], where x[n] = x(nT). A typical discrete-time signal is depicted in Fig. 3.1, which shows both forms of notation. By way of an example, a continuous-time exponential  $x(t) = e^{-t}$ , when sampled every T = 0.1 seconds, results in a discrete-time signal x(nT) given by

$$x(nT) = e^{-nT} = e^{-0.1n}$$

<sup>&</sup>lt;sup>†</sup> There may be more than one input and more than one output.

238

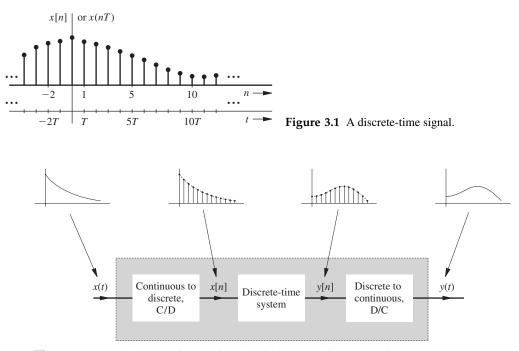


Figure 3.2 Processing a continuous-time signal by means of a discrete-time system.

Clearly, this signal is a function of n and may be expressed as x[n]. Such representation is more convenient and will be followed throughout this book, even for signals resulting from sampling continuous-time signals.

Digital filters can process continuous-time signals by discrete-time systems, using appropriate interfaces at the input and the output, as illustrated in Fig. 3.2. A continuous-time signal x(t) is first sampled to convert it into a discrete-time signal x[n], which is then processed by a discrete-time system to yield the output y[n]. A continuous-time signal y(t) is finally constructed from y[n]. We shall use the notations C/D and D/C for conversion from continuous to discrete time and from discrete to continuous time. By using the interfaces in this manner, we can use an appropriate discrete-time system to process a continuous-time signal. As we shall see later in our discussion, discrete-time systems have several advantages over continuous-time systems. For this reason, there is an accelerating trend toward processing continuous-time signals with discrete-time systems.

## 3.1-1 Size of a Discrete-Time Signal

Arguing along the lines similar to those used for continuous-time signals, the size of a discrete-time signal x[n] will be measured by its energy  $E_x$ , defined by

$$E_x = \sum_{n=-\infty}^{\infty} |x[n]|^2 \tag{3.1}$$

This definition is valid for real or complex x[n]. For this measure to be meaningful, the energy of a signal must be finite. A necessary condition for the energy to be finite is that the signal amplitude must  $\rightarrow 0$  as  $|n| \rightarrow \infty$ . Otherwise the sum in Eq. (3.1) will not converge. If  $E_x$  is finite, the signal is called an *energy signal*.

In some cases, for instance, when the amplitude of x[n] does not  $\rightarrow 0$  as  $|n| \rightarrow \infty$ , then the signal energy is infinite, and a more meaningful measure of the signal in such a case would be the time average of the energy (if it exists), which is the signal power  $P_x$ , defined by

$$P_x = \lim_{N \to \infty} \frac{1}{2N+1} \sum_{-N}^{N} |x[n]|^2$$

In this equation, the sum is divided by 2N + 1 because there are 2N + 1 samples in the interval from -N to N. For periodic signals, the time averaging need be performed over only one period in view of the periodic repetition of the signal. If  $P_x$  is finite and nonzero, the signal is called a *power signal*. As in the continuous-time case, a discrete-time signal can either be an energy signal or a power signal, but cannot be both at the same time. Some signals are neither energy nor power signals.

# **EXAMPLE 3.1** Computing DT Energy and Power

Find the energy of the signal x[n] = n(u[n] - u[n - 6]), shown in Fig. 3.3a and the power for the periodic signal y[n] in Fig. 3.3b.

By definition,


$$E_x = \sum_{n=0}^{5} n^2 = 55$$

A periodic signal x[n] with period  $N_0$  is characterized by the fact that

$$x[n] = x[n+N_0]$$

The smallest value of  $N_0$  for which the preceding equation holds is the *fundamental period*. Such a signal is called  $N_0$  *periodic*. Figure 3.3b shows an example of a periodic signal y[n] of period  $N_0 = 6$  because each period contains 6 samples. Note that if the first sample is taken at n = 0, the last sample is at  $n = N_0 - 1 = 5$ , not at  $n = N_0 = 6$ . Because the signal y[n] is periodic, its power  $P_y$  can be found by averaging its energy over one period. Averaging the energy over one period, we obtain

$$P_y = \frac{1}{6} \sum_{n=0}^{5} n^2 = \frac{55}{6}$$

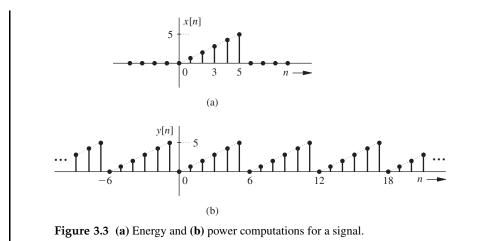

#### DRILL 3.1 DT Signal Classification: Energy, Power, and Neither

Show that the signal  $x[n] = a^n u[n]$  is an energy signal of energy  $E_x = 1/(1 - |a|^2)$  if |a| < 1, that it is a power signal of power  $P_x = 0.5$  if |a| = 1, and that it is neither an energy signal nor a power signal if |a| > 1.

# **3.2 USEFUL SIGNAL OPERATIONS**

Signal operations for *shifting*, and *scaling*, as discussed for continuous-time signals also apply, with some modifications, to discrete-time signals.

### SHIFTING

Consider a signal x[n] (Fig. 3.4a) and the same signal delayed (right-shifted) by 5 units (Fig. 3.4b), which we shall denote by  $x_s[n]$ .<sup>†</sup> Using the argument employed for a similar operation in continuous-time signals (Sec. 1.2), we obtain

$$x_s[n] = x[n-5]$$

Therefore, to shift a sequence by M units (M integer), we replace n with n - M. Thus x[n - M] represents x[n] shifted by M units. If M is positive, the shift is to the right (delay). If M is negative, the shift is to the left (advance). Accordingly, x[n - 5] is x[n] delayed (right-shifted) by 5 units, and x[n + 5] is x[n] advanced (left-shifted) by 5 units.

<sup>&</sup>lt;sup>†</sup> The terms "delay" and "advance" are meaningful only when the independent variable is time. For other independent variables, such as frequency or distance, it is more appropriate to refer to the "right shift" and "left shift" of a sequence.

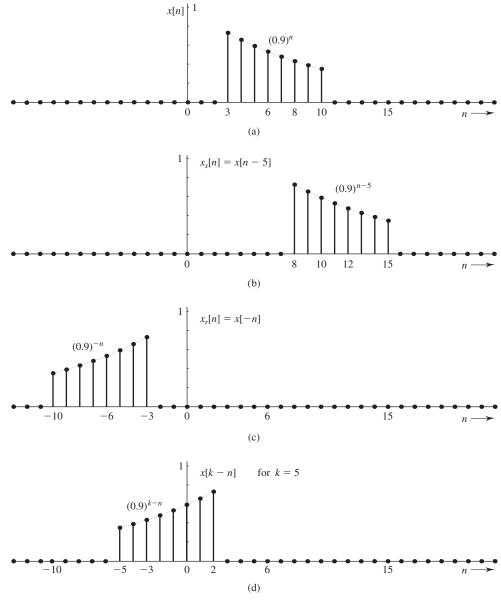


Figure 3.4 Shifting and time reversal of a signal.

# DRILL 3.2 Left-Shift Operation

Show that x[n] in Fig. 3.4a left-shifted by 3 units can be expressed as  $0.729(0.9)^n$  for  $0 \le n \le 7$ , and zero otherwise. Sketch the shifted signal.

## **DRILL 3.3 Right-Shift Operation**

Show that x[-k - n] can be obtained from x[n] by first right-shifting x[n] by k units and then time-reversing this shifted signal.

## TIME REVERSAL

To time-reverse x[n] in Fig. 3.4a, we rotate x[n] about the vertical axis to obtain the time-reversed signal  $x_r[n]$  shown in Fig. 3.4c. Using the argument employed for a similar operation in continuous-time signals (Sec. 1.2), we obtain

$$x_r[n] = x[-n]$$

Therefore, to time-reverse a signal, we replace n with -n so that x[-n] is the time-reversed x[n]. For example, if  $x[n] = (0.9)^n$  for  $3 \le n \le 10$ , then  $x_r[n] = (0.9)^{-n}$  for  $3 \le -n \le 10$ ; that is,  $-3 \ge n \ge -10$ , as shown in Fig. 3.4c.

The origin n = 0 is the anchor point, which remains unchanged under time-reversal operation because at n = 0, x[n] = x[-n] = x[0]. Note that while the reversal of x[n] about the vertical axis is x[-n], the reversal of x[n] about the horizontal axis is -x[n].

## **EXAMPLE 3.2** Time Reversal and Shifting

In the convolution operation, discussed later, we need to find the function x[k-n] from x[n].

This can be done in two steps: (i) time-reverse the signal x[n] to obtain x[-n]; (ii) now, right-shift x[-n] by k. Recall that right-shifting is accomplished by replacing n with n - k. Hence, right-shifting x[-n] by k units is x[-(n-k)] = x[k-n]. Figure 3.4d shows x[5-n], obtained this way. We first time-reverse x[n] to obtain x[-n] in Fig. 3.4c. Next, we shift x[-n] by k = 5 to obtain x[k-n] = x[5-n], as shown in Fig. 3.4d.

In this particular example, the order of the two operations employed is interchangeable. We can first left-shift x[k] to obtain x[n + 5]. Next, we time-reverse x[n + 5] to obtain x[-n+5] = x[5-n]. The reader is encouraged to verify that this procedure yields the same result, as in Fig. 3.4d.

## **DRILL 3.4** Time Reversal

Sketch the signal  $x[n] = e^{-0.5n}$  for  $-3 \le n \le 2$ , and zero otherwise. Sketch the corresponding time-reversed signal and show that it can be expressed as  $x_r[n] = e^{0.5n}$  for  $-2 \le n \le 3$ .

# SAMPLING RATE ALTERATION: DOWNSAMPLING, UPSAMPLING, AND INTERPOLATION

Alteration of the sampling rate is somewhat similar to time-scaling in continuous-time signals. Consider a signal x[n] compressed by factor M. Compressing a signal x[n] by factor M yields  $x_d[n]$  given by

$$x_d[n] = x[Mn]$$

Because of the restriction that discrete-time signals are defined only for integer values of the argument, we must restrict M to integer values. The values of x[Mn] at n = 0, 1, 2, 3, ... are x[0], x[M], x[2M], x[3M], .... This means x[Mn] selects every Mth sample of x[n] and deletes all the samples in between. It reduces the number of samples by factor M. If x[n] is obtained by sampling a continuous-time signal, this operation implies reducing the sampling rate by factor M. For this reason, this operation is commonly called *downsampling*. Figure 3.5a shows a signal x[n] and Fig. 3.5b shows the signal x[2n], which is obtained by deleting odd-numbered samples of x[n].<sup>†</sup>

In the continuous-time case, time compression merely speeds up the signal without loss of any data. In contrast, downsampling x[n] generally causes loss of data. Under certain conditions—for example, if x[n] is the result of oversampling some continuous-time signal—then  $x_d[n]$  may still retain the complete information about x[n].

An *interpolated* signal is generated in two steps; first, we expand x[n] by an integer factor L to obtain the expanded signal  $x_e[n]$ , as

$$x_e[n] = \begin{cases} x[n/L] & n = 0, \pm L \pm 2L, \dots, \\ 0 & \text{otherwise} \end{cases}$$
(3.2)

To understand this expression, consider a simple case of expanding x[n] by a factor 2 (L = 2). When *n* is odd, n/2 is noninteger, and  $x_e[n] = 0$ . That is,  $x_e[1] = x_e[3] = x_e[5], \ldots$  are all zero, as depicted in Fig. 3.5c. Moreover, n/2 is integer for even *n*, and the values of  $x_e[n] = x[n/2]$  for  $n = 0, 2, 4, 6, \ldots$ , are  $x[0], x[1], x[2], x[3], \ldots$ , as shown in Fig. 3.5c. In general, for  $n = 0, 1, 2, \ldots$ ,  $x_e[n]$  is given by the sequence

$$x[0], \underbrace{0, 0, \dots, 0, 0}_{L-1 \text{ zeros}}, x[1], \underbrace{0, 0, \dots, 0, 0}_{L-1 \text{ zeros}}, x[2], \underbrace{0, 0, \dots, 0, 0}_{L-1 \text{ zeros}}, \dots$$

Thus, the sampling rate of  $x_e[n]$  is *L* times that of x[n]. Hence, this operation is commonly called *upsampling*. The upsampled signal  $x_e[n]$  contains all the data of x[n], although in an expanded form.

In the expanded signal in Fig. 3.5c, the missing (zero-valued) odd-numbered samples can be reconstructed from the non-zero-valued samples by using some suitable interpolation formula. Figure 3.5d shows such an interpolated signal  $x_i[n]$ , where the missing samples are constructed by using an interpolating filter. The optimum interpolating filter is usually an ideal lowpass

<sup>&</sup>lt;sup>†</sup>Odd-numbered samples of x[n] can be retained (and even-numbered samples deleted) by using the transformation  $x_d[n] = x[2n+1]$ .

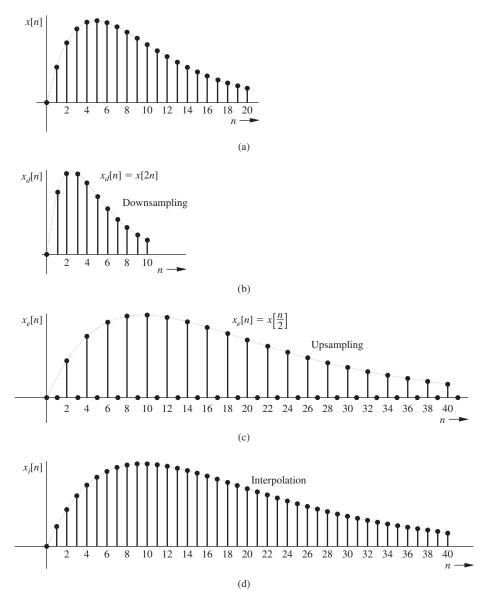


Figure 3.5 Compression (downsampling) and expansion (upsampling, interpolation) of a signal.

filter, which is realizable only approximately. In practice, we may use an interpolation that is nonoptimum but realizable. The process of filtering to interpolate the zero-valued samples is called *interpolation*. Since the interpolated data are computed from the existing data, interpolation does not result in gain of information. While further discussion of interpolation is beyond our scope, Drill 3.5 and Prob. 3.11-10 introduce the idea of linear interpolation.

# **DRILL 3.5** Expansion and Interpolation

A signal x[n] is expanded by factor 2 to obtain signal x[n/2]. The odd-numbered samples (*n* odd) in this signal have zero value. Show that the linearly interpolated odd-numbered samples are given by  $x_i[n] = (1/2)\{x[n-1] + x[n+1]\}$ .

# **3.3 SOME USEFUL DISCRETE-TIME SIGNAL MODELS**

We now discuss some important discrete-time signal models that are encountered frequently in the study of discrete-time signals and systems.

# 3.3-1 Discrete-Time Impulse Function $\delta[n]$

The discrete-time counterpart of the continuous-time impulse function  $\delta(t)$  is  $\delta[n]$ , a Kronecker delta function, defined by

$$\delta[n] = \begin{cases} 1 & n = 0\\ 0 & n \neq 0 \end{cases}$$

This function, also called the unit impulse sequence, is shown in Fig. 3.6a. The shifted impulse sequence  $\delta[n-m]$  is depicted in Fig. 3.6b. Unlike its continuous-time counterpart  $\delta(t)$  (the Dirac delta), the Kronecker delta is a very simple function, requiring no special esoteric knowledge of distribution theory.

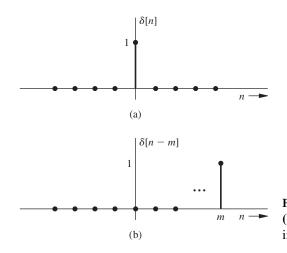


Figure 3.6 Discrete-time impulse function: (a) unit impulse sequence and (b) shifted impulse sequence.

# 3.3-2 Discrete-Time Unit Step Function *u*[*n*]

The discrete-time counterpart of the unit step function u(t) is u[n] (Fig. 3.7a), defined by

$$u[n] = \begin{cases} 1 & \text{for } n \ge 0\\ 0 & \text{for } n < 0 \end{cases}$$

If we want a signal to start at n = 0 (so that it has a zero value for all n < 0), we need only multiply the signal by u[n].

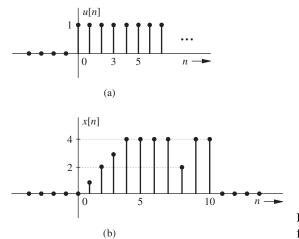


Figure 3.7 (a) A discrete-time unit step function u[n] and (b) its application.

# **EXAMPLE 3.3 Describing Signals with Unit Step and Unit Impulse Functions**

Describe the signal x[n] shown in Fig. 3.7b by a single expression valid for all n.

There are many different ways of viewing x[n]. Although each way of viewing yields a different expression, they are all equivalent. We shall consider here just one possible expression.

The signal x[n] can be broken into three components: (1) a ramp component  $x_1[n]$  from n = 0 to 4, (2) a scaled step component  $x_2[n]$  from n = 5 to 10, and (3) an impulse component  $x_3[n]$  represented by the negative spike at n = 8. Let us consider each one separately.

We express  $x_1[n] = n(u[n] - u[n-5])$  to account for the signal from n = 0 to 4. Assuming that the spike at n = 8 does not exist, we can express  $x_2[n] = 4(u[n-5] - u[n-11])$  to account for the signal from n = 5 to 10. Once these two components have been added, the only part that is unaccounted for is a spike of amplitude -2 at n = 8, which can be represented by

 $x_3[n] = -2\delta[n-8]$ . Hence,

$$x[n] = x_1[n] + x_2[n] + x_3[n]$$
  
=  $n(u[n] - u[n-5]) + 4(u[n-5] - u[n-11]) - 2\delta[n-8]$  for all  $n$ 

We stress again that the expression is valid for all values of n. The reader can find several other equivalent expressions for x[n]. For example, one may consider a scaled step function from n = 0 to 10, subtract a ramp over the range n = 0 to 3, and subtract the spike. You can also play with breaking n into different ranges for your expression.

## 3.3-3 Discrete-Time Exponential $\gamma^n$

A continuous-time exponential  $e^{\lambda t}$  can be expressed in an alternate form as

$$e^{\lambda t} = \gamma^t$$
  $(\gamma = e^{\lambda} \text{ or } \lambda = \ln \gamma)$ 

For example,  $e^{-0.3t} = (0.7408)^t$  because  $e^{-0.3} = 0.7408$ . Conversely,  $4^t = e^{1.386t}$  because  $e^{1.386} = 4$ , that is,  $\ln 4 = 1.386$ . In the study of continuous-time signals and systems, we prefer the form  $e^{\lambda t}$  rather than  $\gamma^t$ . In contrast, the exponential form  $\gamma^n$  is preferable in the study of discrete-time signals and systems, as will become apparent later. The discrete-time exponential  $\gamma^n$  can also be expressed by using a natural base, as


$$e^{\lambda n} = \gamma^n$$
  $(\gamma = e^{\lambda} \text{ or } \lambda = \ln \gamma)$ 

Because of unfamiliarity with exponentials with bases other than *e*, exponentials of the form  $\gamma^n$  may seem inconvenient and confusing at first. The reader is urged to plot some exponentials to acquire a sense of these functions. Also observe that  $\gamma^{-n} = \left(\frac{1}{\gamma}\right)^n$ .

## **DRILL 3.6 Equivalent Forms of DT Exponentials**

(a) Show that (i)  $(0.25)^{-n} = 4^n$ , (ii)  $4^{-n} = (0.25)^n$ , (iii)  $e^{2t} = (7.389)^t$ , (iv)  $e^{-2t} = (0.1353)^t = (7.389)^{-t}$ , (v)  $e^{3n} = (20.086)^n$ , and (vi)  $e^{-1.5n} = (0.2231)^n = (4.4817)^{-n}$ . (b) Show that (i)  $2^n = e^{0.693n}$ , (ii)  $(0.5)^n = e^{-0.693n}$ , and (iii)  $(0.8)^{-n} = e^{0.2231n}$ .

**Nature of**  $\gamma^n$ . The signal  $e^{\lambda n}$  grows exponentially with *n* if  $\operatorname{Re} \lambda > 0$  ( $\lambda$  in the RHP), and decays exponentially if  $\operatorname{Re} \lambda < 0$  ( $\lambda$  in the LHP). It is constant or oscillates with constant amplitude if  $\operatorname{Re} \lambda = 0$  ( $\lambda$  on the imaginary axis). Clearly, the location of  $\lambda$  in the complex plane indicates whether the signal  $e^{\lambda n}$  will grow exponentially, decay exponentially, or oscillate with constant

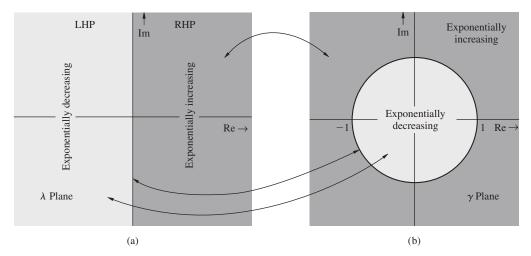

**Figure 3.8** The  $\lambda$  plane, the  $\gamma$  plane, and their mapping.

amplitude (Fig. 3.8a). A constant signal ( $\lambda = 0$ ) is also an oscillation with zero frequency. We now find a similar criterion for determining the nature of  $\gamma^n$  from the location of  $\gamma$  in the complex plane.

Figure 3.8a shows a complex plane ( $\lambda$  plane). Consider a signal  $e^{j\Omega n}$ . In this case,  $\lambda = j\Omega$  lies on the imaginary axis (Fig. 3.8a), and therefore is a constant-amplitude oscillating signal. This signal  $e^{j\Omega n}$  can be expressed as  $\gamma^n$ , where  $\gamma = e^{j\Omega}$ . Because the magnitude of  $e^{j\Omega}$  is unity,  $|\gamma| = 1$ . Hence, when  $\lambda$  lies on the imaginary axis, the corresponding  $\gamma$  lies on a circle of unit radius, centered at the origin (the *unit circle* illustrated in Fig. 3.8b). Therefore, a signal  $\gamma^n$  oscillates with constant amplitude if  $\gamma$  lies on the unit circle. Thus, the imaginary axis in the  $\lambda$  plane maps into the unit circle in the  $\gamma$  plane.

Next consider the signal  $e^{\lambda n}$ , where  $\lambda$  lies in the left half-plane in Fig. 3.8a. This means  $\lambda = a + jb$ , where *a* is negative (*a* < 0). In this case, the signal decays exponentially. This signal can be expressed as  $\gamma^n$ , where


$$\gamma = e^{\lambda} = e^{a+jb} = e^a e^{jb}$$

and

$$|\gamma| = |e^a| |e^{jb}| = e^a$$
 because  $|e^{jb}| = 1$ 

Also, *a* is negative (a < 0). Hence,  $|\gamma| = e^a < 1$ . This result means that the corresponding  $\gamma$  lies inside the unit circle. Therefore, a signal  $\gamma^n$  decays exponentially if  $\gamma$  lies within the unit circle (Fig. 3.8b). If, in the preceding case we select *a* to be positive ( $\lambda$  in the right half-plane), then  $|\gamma| > 1$ , and  $\gamma$  lies outside the unit circle. Therefore, a signal  $\gamma^n$  grows exponentially if  $\gamma$  lies outside the unit circle.

To summarize, the imaginary axis in the  $\lambda$  plane maps into the unit circle in the  $\gamma$  plane. The left half-plane in the  $\lambda$  plane maps into the inside of the unit circle and the right half of the  $\lambda$  plane maps into the outside of the unit circle in the  $\gamma$  plane, as depicted in Fig. 3.8.

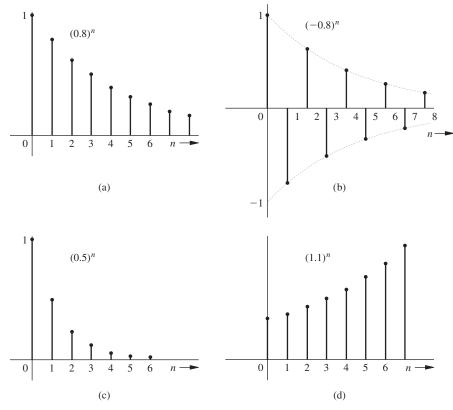

**Figure 3.9** Discrete-time exponentials  $\gamma^n$ .

Plots of  $(0.8)^n$  and  $(-0.8)^n$  appear in Figs. 3.9a and 3.9b, respectively. Plots of  $(0.5)^n$  and  $(1.1)^n$  appear in Figs. 3.9c and 3.9d, respectively. These plots verify our earlier conclusions about the location of  $\gamma$  and the nature of signal growth. Observe that a signal  $(-|\gamma|)^n$  alternates sign successively (is positive for even values of *n* and negative for odd values of *n*, as depicted in Fig. 3.9b). Also, the exponential  $(0.5)^n$  decays faster than  $(0.8)^n$  because 0.5 is closer to the origin than 0.8. The exponential  $(0.5)^n$  can also be expressed as  $2^{-n}$  because  $(0.5)^{-1} = 2$ .

# **DRILL 3.7 Sketching DT Exponentials**

Sketch the following signals: (a)  $(1)^n$ , (b)  $(-1)^n$ , (c)  $(0.5)^n$ , (d)  $(-0.5)^n$ , (e)  $(0.5)^{-n}$ , (f)  $2^{-n}$ , and (g)  $(-2)^n$ . Express these exponentials as  $\gamma^n$ , and plot  $\gamma$  in the complex plane for each case. Verify that  $\gamma^n$  decays exponentially with *n* if  $\gamma$  lies inside the unit circle and that  $\gamma^n$  grows with *n* if  $\gamma$  is outside the unit circle. If  $\gamma$  is on the unit circle,  $\gamma^n$  is constant or oscillates with a constant amplitude.


Accurately hand-sketching DT signals can be tedious and difficult. As the next example shows, MATLAB is particularly well suited to plot DT signals, including exponentials.

# **EXAMPLE 3.4** Plotting DT Exponentials with MATLAB

Use MATLAB to plot the following discrete-time signals over  $(0 \le n \le 8)$ : (a)  $x_a[n] = (0.8)^n$ , (b)  $x_b[n] = (-0.8)^n$ , (c)  $x_c[n] = (0.5)^n$ , and (d)  $x_d[n] = (1.1)^n$ .

To begin, we use anonymous functions to represent each of the four signals. Next, we plot these functions over the desired range of n. The results, shown in Fig. 3.10, match the earlier Fig. 3.9 plots of the same signals.

```
>> n = (0:8); x_a = @(n) (0.8).^n; x_b = @(n) (-0.8).^(n);
>> x_c = @(n) (0.5).^n; x_d = @(n) (1.1).^n;
>> subplot(2,2,1); stem(n,x_a(n),'k'); ylabel('x_a[n]'); xlabel('n');
>> subplot(2,2,2); stem(n,x_b(n),'k'); ylabel('x_b[n]'); xlabel('n');
>> subplot(2,2,3); stem(n,x_c(n),'k'); ylabel('x_c[n]'); xlabel('n');
>> subplot(2,2,4); stem(n,x_d(n),'k'); ylabel('x_d[n]'); xlabel('n');
```

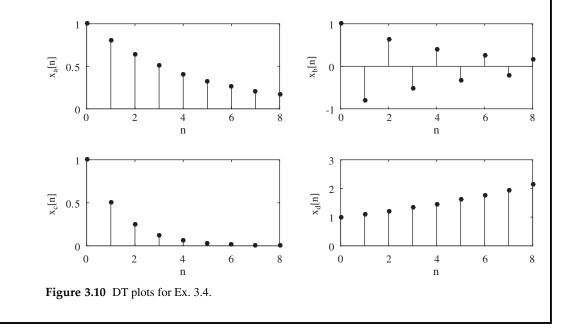

### 3.3-4 Discrete-Time Sinusoid $\cos(\Omega n + \theta)$

A general discrete-time sinusoid can be expressed as  $C \cos(\Omega n + \theta)$ , where C is the *amplitude*, and  $\theta$  is the *phase* in radians. Also,  $\Omega n$  is an angle in radians. Hence, the dimensions of the frequency  $\Omega$  are *radians per sample*. This sinusoid may also be expressed as

$$C\cos\left(\Omega n + \theta\right) = C\cos\left(2\pi \mathcal{F}n + \theta\right)$$


where  $\mathcal{F} = \Omega/2\pi$ . Therefore, the dimensions of the discrete-time frequency  $\mathcal{F}$  are (radians/ $2\pi$ ) per sample, which is equal to *cycles per sample*. This means if  $N_0$  is the period (samples/cycle) of the sinusoid, then the frequency of the sinusoid  $\mathcal{F} = 1/N_0$  (samples/cycle).

Figure 3.11 shows a discrete-time sinusoid  $\cos(\frac{\pi}{12}n + \frac{\pi}{4})$ . For this case, the frequency is  $\Omega = \pi/12$  radians/sample. Alternately, the frequency is  $\mathcal{F} = 1/24$  cycles/sample. In other words, there are 24 samples in one cycle of the sinusoid.

Because  $\cos(-x) = \cos(x)$ ,

$$\cos\left(-\Omega n + \theta\right) = \cos\left(\Omega n - \theta\right)$$

This shows that both  $\cos(\Omega n + \theta)$  and  $\cos(-\Omega n + \theta)$  have the same frequency ( $\Omega$ ). Therefore, *the frequency of*  $\cos(\Omega n + \theta)$  *is*  $|\Omega|$ .

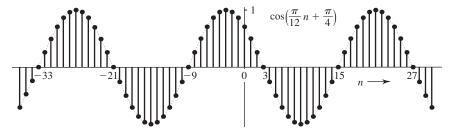

**Figure 3.11** A discrete-time sinusoid  $\cos(\frac{\pi}{12}n + \frac{\pi}{4})$ .

# SAMPLED CONTINUOUS-TIME SINUSOID YIELDS A DISCRETE-TIME SINUSOID

A continuous-time sinusoid  $\cos \omega t$  sampled every *T* seconds yields a discrete-time sequence whose *n*th element (at t = nT) is  $\cos \omega nT$ . Thus, the sampled signal x[n] is given by

$$x[n] = \cos \omega nT = \cos \Omega n$$
 where  $\Omega = \omega T$ 

#### 252 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

Thus, a continuous-time sinusoid  $\cos \omega t$  sampled every *T* seconds yields a discrete-time sinusoid  $\cos \Omega n$ , where  $\Omega = \omega T$ .<sup>†</sup>

# 3.3-5 Discrete-Time Complex Exponential $e^{j\Omega n}$

Using Euler's formula, we can express an exponential  $e^{j\Omega n}$  in terms of sinusoids as

 $e^{j\Omega n} = (\cos \Omega n + j \sin \Omega n)$  and  $e^{-j\Omega n} = (\cos \Omega n - j \sin \Omega n)$ 

These equations show that *the frequency of both*  $e^{j\Omega n}$  and  $e^{-j\Omega n}$  is  $\Omega$  (radians/sample). Therefore, the frequency of  $e^{j\Omega n}$  is  $|\Omega|$ .

Observe that for r = 1 and  $\theta = n\Omega$ ,

$$e^{j\Omega n} = re^{j\theta}$$

This equation shows that the magnitude and angle of  $e^{j\Omega n}$  are 1 and  $n\Omega$ , respectively. In the complex plane,  $e^{j\Omega n}$  is a point on a unit circle at an angle  $n\Omega$ .


# EXAMPLE 3.5 Plotting a DT Sinusoid with MATLAB

Using MATLAB, plot the discrete-time sinusoid  $x[n] = \cos\left(\frac{\pi}{12}n + \frac{\pi}{4}\right)$ .

We represent the desired sinusoid using an anonymous function. Next, we plot this function over the desired range of n. The result, shown in Fig. 3.12, matches the plot of the same signal shown in Fig. 3.11.

>> n = (-30:30); x = @(n) cos(n\*pi/12+pi/4);
>> clf; stem(n,x(n),'k'); ylabel('x[n]'); xlabel('n');

<sup>&</sup>lt;sup>†</sup> Superficially, it may appear that a discrete-time sinusoid is a continuous-time sinusoid's cousin in a striped suit. However, some of the properties of discrete-time sinusoids are very different from those of continuous-time sinusoids. For instance, not every discrete-time sinusoid is periodic. A sinusoid  $\cos \Omega n$  is periodic only if  $\Omega$  is a rational multiple of  $2\pi$ . Also, discrete-time sinusoids are bandlimited to  $\Omega = \pi$ . Any sinusoid with  $\Omega \ge \pi$  can always be expressed as a sinusoid of some frequency  $\Omega \le \pi$ . These peculiar properties are the direct consequence of the fact that the period of a discrete-time sinusoid must be an integer. These topics are discussed in Chs. 5 and 9.

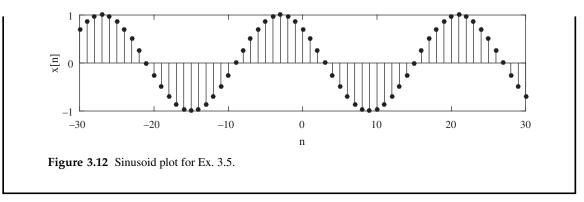

# **3.4 EXAMPLES OF DISCRETE-TIME SYSTEMS**

We shall give here four examples of discrete-time systems. In the first two examples, the signals are inherently of the discrete-time variety. In the third and fourth examples, a continuous-time signal is processed by a discrete-time system, as illustrated in Fig. 3.2, by discretizing the signal through sampling.

# **EXAMPLE 3.6 Savings Account**

A person makes a deposit (the input) in a bank regularly at an interval of T (say, 1 month). The bank pays a certain interest on the account balance during the period T and mails out a periodic statement of the account balance (the output) to the depositor. Find the equation relating the output y[n] (the balance) to the input x[n] (the deposit).

In this case, the signals are inherently discrete time. Let

x[n] = deposit made at the *n*th discrete instant

y[n] = account balance at the *n*th instant computed

immediately after receipt of the *n*th deposit *x*[*n*]

r = interest per dollar per period T

The balance y[n] is the sum of (i) the previous balance y[n-1], (ii) the interest on y[n-1] during the period *T*, and (iii) the deposit x[n]

$$y[n] = y[n-1] + ry[n-1] + x[n]$$
  
= (1+r)y[n-1] + x[n]

or

$$y[n] - ay[n-1] = x[n] \qquad a = 1 + r \tag{3.3}$$

In this example the deposit x[n] is the input (cause) and the balance y[n] is the output (effect).

#### 254 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

A withdrawal from the account is a negative deposit. Therefore, this formulation can handle deposits as well as withdrawals. It also applies to a loan payment problem with the initial value y[0] = -M, where *M* is the amount of the loan. A loan is an initial deposit with a negative value. Alternately, we may treat a loan of *M* dollars taken at n = 0 as an input of -M at n = 0 (see Prob. 3.8-23).

We can express Eq. (3.3) in an alternate form. The choice of index n in Eq. (3.3) is completely arbitrary, so we can substitute n + 1 for n to obtain

$$y[n+1] - ay[n] = x[n+1]$$
(3.4)

We also could have obtained Eq. (3.4) directly by realizing that y[n+1], the balance at instant (n+1), is the sum of y[n] plus ry[n] (the interest on y[n]) plus the deposit (input) x[n+1] at instant (n+1).

The difference equation in Eq. (3.3) uses delays, whereas the form in Eq. (3.4) uses advances. Thus, Eq. (3.3) is said to be in *delay form* and Eq. (3.4) is said to be in *advance form*. The delay form is more natural because operation of delay is causal, hence realizable. In contrast, advance operation, being noncausal, is unrealizable. We use the advance form primarily for its mathematical convenience over the delay form.<sup>†</sup>

We shall now represent this system in a block diagram form, which is basically a road map to a hardware (or software) realization of the system. For this purpose, the causal (realizable) delay form in Eq. (3.3) will be used. There are three basic operations in this equation: *addition, scalar multiplication,* and *delay.* Figure 3.13 shows their schematic representation. In addition, we also have a *pickoff* node (Fig. 3.13d), which is used to provide multiple copies of a signal at its input.

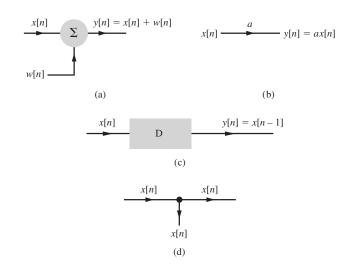


Figure 3.13 Schematic representations of basic operations on sequences.

<sup>&</sup>lt;sup>†</sup> Use of the advance form results in discrete-time system equations that are identical in form to those for continuous-time systems. This will become apparent later. In transform analysis, advance form leads to the more convenient variable z instead of the clumsy  $z^{-1}$  that arises from delay form.

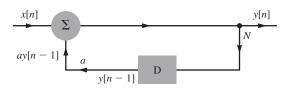


Figure 3.14 Realization of the savings account system.

Figure 3.14 shows in block diagram form a system represented by Eq. (3.3). To understand this realization, it is helpful to rewrite Eq. (3.3) as y[n] = ay[n-1] + x[n] (a = 1 + r). Now, assume that the output y[n] is available at the pickoff node N. Unit delay of y[n] results in y[n-1], which is multiplied by a scalar of value a to yield ay[n-1]. Next, we generate y[n] by adding the input x[n] and ay[n-1].<sup>†</sup> Observe that node N is a pickoff node, from which two copies of the output signal flow out: one as the feedback signal and the other as the output signal.

## **EXAMPLE 3.7** Sales Estimate

During semester n, x[n] students enroll in a course requiring a certain textbook while the publisher sells y[n] new copies of the same book. On the average, one-quarter of students with books in salable condition resell the texts at the end of the semester, and the book life is three semesters. Write the equation relating y[n], the new books sold by the publisher, to x[n], the number of students enrolled in the *n*th semester, assuming that every student buys a book.

In the *n*th semester, the total books x[n] sold to students must be equal to y[n] (new books from the publisher) plus the used books from students enrolled in the preceding two semesters (because the book life is only three semesters). There are y[n-1] new books sold in semester (n-1), and one-quarter of these books, that is, (1/4)y[n-1], will be resold in the *n*th semester. Also, y[n-2] new books are sold in semester n-2, and one-quarter of these, that is, (1/4)y[n-2], will be resold in the *n*th semester. Therefore, x[n] must be equal to the sum of y[n], (1/4)y[n-1], and (1/16)y[n-2].

$$y[n] + \frac{1}{4}y[n-1] + \frac{1}{16}y[n-2] = x[n]$$
(3.5)

Equation (3.5) can also be expressed in an alternative form by realizing that this equation is valid for any value of *n*. Therefore, replacing *n* by n + 2, we obtain

$$y[n+2] + \frac{1}{4}y[n+1] + \frac{1}{16}y[n] = x[n+2]$$
(3.6)

This is the alternative form of Eq. (3.5).

<sup>&</sup>lt;sup>†</sup> A unit delay represents 1 unit of time delay. In this example, 1 unit of delay in the output corresponds to period T for the actual output.

#### 256 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

To facilitate a realization of a system with this input-output equation, we rewrite the delay-form Eq. (3.5) as  $y[n] = -\frac{1}{4}y[n-1] - \frac{1}{16}y[n-2] + x[n]$ . Figure 3.15 shows a corresponding hardware realization using two unit delays in cascade.<sup>†</sup>

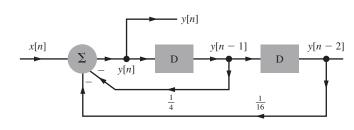


Figure 3.15 Realization of the system representing sales estimate in Ex. 3.7.

# **EXAMPLE 3.8 Digital Differentiator**

Design a discrete-time system, like the one in Fig. 3.2, to differentiate continuous-time signals. This differentiator is used in an audio system having an input signal bandwidth below 20 kHz.

In this case, the output y(t) is required to be the derivative of the input x(t). The discrete-time processor (system) *G* processes the samples of x(t) to produce the discrete-time output y[n]. Let x[n] and y[n] represent the samples *T* seconds apart of the signals x(t) and y(t), respectively, that is,

$$x[n] = x(nT) \qquad \text{and} \qquad y[n] = y(nT) \tag{3.7}$$

The signals x[n] and y[n] are the input and the output for the discrete-time system G. Now, we require that

$$y(t) = \frac{dx(t)}{dt}$$

Therefore, at t = nT (see Fig. 3.16a),

$$y(nT) = \frac{dx(t)}{dt} \bigg|_{t=nT} = \lim_{T \to 0} \frac{1}{T} [x(nT) - x[(n-1)T]]$$

<sup>&</sup>lt;sup>†</sup> The comments in the preceding footnote apply here also. Although 1 unit of delay in this example is one semester, we need not use this value in the hardware realization. Any value other than one semester results in a time-scaled output.

257

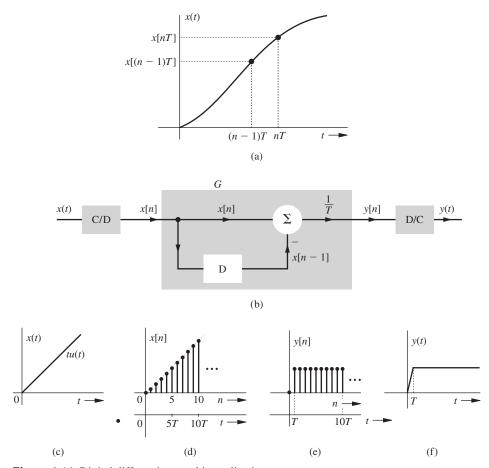


Figure 3.16 Digital differentiator and its realization.

By using the notation in Eq. (3.7), the foregoing equation can be expressed as

$$y[n] = \lim_{T \to 0} \frac{1}{T} \{x[n] - x[n-1]\}$$

This is the input–output relationship for G required to achieve our objective. In practice, the sampling interval T cannot be zero. Assuming T to be sufficiently small, the equation just given can be expressed as

$$y[n] = \frac{1}{T} \{x[n] - x[n-1]\}$$
(3.8)

The approximation improves as T approaches 0. A discrete-time processor G to realize Eq. (3.8) is shown inside the shaded box in Fig. 3.16b. The system in Fig. 3.16b acts as a differentiator. This example shows how a continuous-time signal can be processed by a

#### CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

discrete-time system. The considerations for determining the sampling interval T are discussed in Chs. 5 and 8, where it is shown that to process frequencies below 20 kHz, the proper choice is

$$T \le \frac{1}{2 \times \text{highest frequency}} = \frac{1}{40,000} = 25 \,\mu\text{s}$$

To see how well this method works, let us consider the differentiator in Fig. 3.16b with a ramp input x(t) = t, depicted in Fig. 3.16c. If the system were to act as a differentiator, then the output y(t) of the system should be the unit step function u(t). Let us investigate how the system performs this particular operation and how well the system achieves the objective.

The samples of the input x(t) = t at the interval of *T* seconds act as the input to the discrete-time system *G*. These samples, denoted by a compact notation x[n], are, therefore,

$$x[n] = x(t)|_{t=nT} = t|_{t=nT} \qquad t \ge 0$$
$$= nT \qquad n > 0$$

Figure 3.16d shows the sampled signal x[n]. This signal acts as an input to the discrete-time system *G*. Figure 3.16b shows that the operation of *G* consists of subtracting a sample from the preceding (delayed) sample and then multiplying the difference with 1/T. From Fig. 3.16d, it is clear that the difference between the successive samples is a constant nT - (n-1)T = T for all samples, except for the sample at n = 0 (because there is no preceding sample at n = 0). The output of *G* is 1/T times the difference *T*, which is unity for all values of *n*, except n = 0, where it is zero. Therefore, the output y[n] of *G* consists of samples of unit values for  $n \ge 1$ , as illustrated in Fig. 3.16e. The D/C (discrete-time to continuous-time) converter converts these samples into a continuous-time signal y(t), as shown in Fig. 3.16f. Ideally, the output should have been y(t) = u(t). This deviation from the ideal is due to our use of a nonzero sampling interval *T*. As *T* approaches zero, the output y(t) approaches the desired output u(t).

The digital differentiator in Eq. (3.8) is an example of what is known as the *backward difference* system. The reason for calling it so is obvious from Fig. 3.16a. To compute the derivative of y(t), we are using the difference between the present sample value and the preceding (backward) sample value. If we use the difference between the next (forward) sample at t = (n + 1)T and the present sample at t = nT, we obtain a forward difference form of differentiator as

$$y[n] = \frac{1}{T} \{x[n+1] - x[n]\}$$
(3.9)

# **EXAMPLE 3.9 Digital Integrator**

Design a digital integrator along the same lines as the digital differentiator in Ex. 3.8.

For an integrator, the input x(t) and the output y(t) are related by

$$y(t) = \int_{-\infty}^{t} x(\tau) \, d\tau$$

#### 3.4 Examples of Discrete-Time Systems

Therefore, at t = nT (see Fig. 3.16a),

$$y(nT) = \lim_{T \to 0} \sum_{k=-\infty}^{n} x(kT)T$$

Using the usual notation x(kT) = x[k], y(nT) = y[n], and so on, this equation can be expressed as

$$y[n] = \lim_{T \to 0} T \sum_{k=-\infty}^{n} x[k]$$

Assuming that T is small enough to justify the assumption  $T \rightarrow 0$ , we have

$$y[n] = T \sum_{k=-\infty}^{n} x[k]$$
 (3.10)

This equation represents an example of *accumulator* system. This digital integrator equation can be expressed in an alternate form. From Eq. (3.10), it follows that

$$y[n] - y[n-1] = Tx[n]$$
(3.11)

This is an alternate description for the digital integrator. Equations (3.10) and (3.11) are equivalent; the one can be derived from the other. Observe that the form of Eq. (3.11) is similar to that of Eq. (3.3). Hence, the block diagram representation of a digital integrator in the form of Eq. (3.11) is identical to that in Fig. 3.14 with a = 1 and the input multiplied by T.

# **RECURSIVE AND NONRECURSIVE FORMS OF DIFFERENCE EOUATION**

If Eq. (3.11) expresses Eq. (3.10) in another form, what is the difference between these two forms? Which form is preferable? To answer these questions, let us examine how the output is computed by each of these forms. In Eq. (3.10), the output y[n] at any instant n is computed by adding all the past input values till n. This can mean a large number of additions. In contrast, Eq. (3.11) can be expressed as y[n] = y[n-1] + Tx[n]. Hence, computation of y[n] involves addition of only two values: the preceding output value y[n-1] and the present input value x[n]. The computations are done recursively by using the preceding output values. For example, if the input starts at n = 0, we first compute y[0]. Then we use the computed value y[0] to compute y[1]. Knowing y[1], we compute y[2], and so on. The computations are recursive. This is why the form of Eq. (3.11) is called *recursive* form and the form of Eq. (3.10) is called *nonrecursive* form. Clearly, "recursive" and "nonrecursive" describe two different ways of presenting the same information. Equations (3.3), (3.5), and (3.11) are examples of recursive form, and Eqs. (3.8) and (3.10) are examples of nonrecursive form.

# KINSHIP OF DIFFERENCE EQUATIONS TO DIFFERENTIAL EQUATIONS

We now show that a digitized version of a differential equation results in a difference equation. Let us consider a simple first-order differential equation

$$\frac{dy(t)}{dt} + cy(t) = x(t) \tag{3.12}$$

Consider uniform samples of x(t) at intervals of T seconds. As usual, we use the notation x[n] to denote x(nT), the *n*th sample of x(t). Similarly, y[n] denotes y[nT], the *n*th sample of y(t). From the basic definition of a derivative, we can express Eq. (3.12) at t = nT as

$$\lim_{T \to 0} \frac{y[n] - y[n-1]}{T} + cy[n] = x[n]$$

Clearing the fractions and rearranging the terms yield (assuming nonzero, but very small T)

$$y[n] + \alpha y[n-1] = \beta x[n] \tag{3.13}$$

where

$$\alpha = \frac{-1}{1+cT}$$
 and  $\beta = \frac{T}{1+cT}$ 

We can also express Eq. (3.13) in advance form as

$$y[n+1] + \alpha y[n] = \beta x[n+1]$$

It is clear that a differential equation can be approximated by a difference equation of the same order. In this way, we can approximate an *n*th-order differential equation by a difference equation of *n*th order. Indeed, a digital computer solves differential equations by using an equivalent difference equation, which can be solved by means of simple operations of addition, multiplication, and shifting. Recall that a computer can perform only these simple operations. It must necessarily approximate complex operation like differentiation and integration in terms of such simple operations. The approximation can be made as close to the exact answer as possible by choosing sufficiently small value for T.

At this stage, we have not developed tools required to choose a suitable value of the sampling interval T. This subject is discussed in Ch. 5 and also in Ch. 8. In Sec. 5.7, we shall discuss a systematic procedure (impulse invariance method) for finding a discrete-time system with which to realize an *N*th-order LTIC system.

# ORDER OF A DIFFERENCE EQUATION

Equations (3.3), (3.5), (3.9), (3.11), and (3.13) are examples of difference equations. The highest-order difference of the output signal or the input signal, whichever is higher, represents the *order* of the difference equation. Hence, Eqs. (3.3), (3.9), (3.11), and (3.13) are first-order difference equations, whereas Eq. (3.5) is of the second order.

# DRILL 3.8 Digital Integrator Design

Design a digital integrator in Ex. 3.9 using the fact that for an integrator, the output y(t) and the input x(t) are related by dy(t)/dt = x(t). Approximation (similar to that in Ex. 3.8) of this equation at t = nT yields the recursive form in Eq. (3.11).

# ANALOG, DIGITAL, CONTINUOUS-TIME, AND DISCRETE-TIME SYSTEMS

The basic difference between continuous-time systems and analog systems, as also between discrete-time and digital systems, is fully explained in Secs. 1.7-5 and 1.7-6.<sup>†</sup> Historically, discrete-time systems have been realized with digital computers, where continuous-time signals are processed through digitized samples rather than unquantized samples. Therefore, the terms *digital filters* and *discrete-time systems* are used synonymously in the literature. This distinction is irrelevant in the analysis of discrete-time systems. For this reason, we follow this loose convention in this book, where the term *digital filter* implies a *discrete-time system*, and *analog filter* means *continuous-time system*. Moreover, the terms C/D (continuous-to-discrete-time ) and D/C will occasionally be used interchangeably with terms A/D (analog-to-digital) and D/A, respectively.

# Advantages of Digital Signal Processing

- Digital systems operation can tolerate considerable variation in signal values, and hence are less sensitive to changes in the component parameter values due to temperature variation, aging, and other factors. This results in greater degree of precision and stability. Since digital systems are binary circuits, their accuracy can be increased by using more complex circuitry to increase word length, subject to cost limitations.
- 2. Digital systems do not require any factory adjustment and can be easily duplicated in volume without having to worry about precise component values. They can be fully integrated, and even highly complex systems can be placed on a single chip by using *VLSI* (very-large-scale integrated) circuits.
- 3. Digital filters are more flexible. Their characteristics can be easily altered simply by changing the program. Digital hardware implementation permits the use of microprocessors, miniprocessors, digital switching, and large-scale integrated circuits.
- 4. A greater variety of filters can be realized by digital systems.
- 5. Digital signals can be stored easily and inexpensively on various media (e.g., magnetic, optical, and solid state) without deterioration of signal quality. It is also possible (and increasingly popular) to search and select information from distant electronic storehouses, such as the cloud.
- Digital signals can be coded to yield extremely low error rates and high fidelity, as well as privacy. Also, more sophisticated signal-processing algorithms can be used to process digital signals.

<sup>&</sup>lt;sup>†</sup> The terms *discrete-time* and *continuous-time* qualify the nature of a signal along the time axis (horizontal axis). The terms *analog* and *digital*, in contrast, qualify the nature of the signal amplitude (vertical axis).

#### 262 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

- 7. Digital filters can be easily time-shared and therefore can serve a number of inputs simultaneously. Moreover, it is easier and more efficient to multiplex several digital signals on the same channel.
- 8. Reproduction with digital messages is extremely reliable without deterioration. Analog messages such as photocopies and films, for example, lose quality at each successive stage of reproduction and have to be transported physically from one distant place to another, often at relatively high cost.

One must weigh these advantages against such disadvantages as increased system complexity due to use of A/D and D/A interfaces, limited range of frequencies available in practice (affordable rates are gigahertz or less), and use of more power than is needed for the passive analog circuits. Digital systems use power-consuming active devices.

# 3.4-1 Classification of Discrete-Time Systems

Before examining the nature of discrete-time system equations, let us consider the concepts of linearity, time invariance (or shift invariance), and causality, which apply to discrete-time systems also.

## LINEARITY AND TIME INVARIANCE

For discrete-time systems, the definition of *linearity* is identical to that for continuous-time systems, as given in Eq. (1.22). We can show that the systems in Exs. 3.6, 3.7, 3.8, and 3.9 are all linear.

Time invariance (or *shift invariance*) for discrete-time systems is also defined in a way similar to that for continuous-time systems. Systems whose parameters do not change with time (with n) are *time-invariant* or shift-invariant (also *constant-parameter*) systems. For such a system, if the input is delayed by k units or samples, the output is the same as before but delayed by k samples (assuming the initial conditions also are delayed by k). The systems in Exs. 3.6, 3.7, 3.8, and 3.9 are time-invariant because the coefficients in the system equations are constants (independent of n). If these coefficients were functions of n (time), then the systems would be linear *time-varying* systems. Consider, for example, a system described by

$$y[n] = e^{-n}x[n]$$

For this system, let a signal  $x_1[n]$  yield the output  $y_1[n]$ , and another input  $x_2[n]$  yield the output  $y_2[n]$ . Then

$$y_1[n] = e^{-n}x_1[n]$$
 and  $y_2[n] = e^{-n}x_2[n]$ 

If we let  $x_2[n] = x_1[n - N_0]$ , then

$$y_2[n] = e^{-n}x_2[n] = e^{-n}x_1[n-N_0] \neq y_1[n-N_0]$$

Clearly, this is a time-varying parameter system.

# CAUSAL AND NONCAUSAL SYSTEMS

A *causal* (also known as a *physical* or *nonanticipative*) system is one for which the output at any instant n = k depends only on the value of the input x[n] for  $n \le k$ . In other words, the value of the output at the present instant depends only on the past and present values of the input x[n], not on its future values. As we shall see, the systems in Exs. 3.6, 3.7, 3.8, and 3.9 are all causal.

### INVERTIBLE AND NONINVERTIBLE SYSTEMS

A discrete-time system S is invertible if an inverse system  $S_i$  exists such that the cascade of S and  $S_i$  results in an *identity* system. An identity system is defined as one whose output is identical to the input. In other words, for an invertible system, the input can be uniquely determined from the corresponding output. For every input there is a unique output. When a signal is processed through such a system, its input can be reconstructed from the corresponding output. There is no loss of information when a signal is processed through an invertible system.

A cascade of a unit delay with a unit advance results in an identity system because the output of such a cascaded system is identical to the input. Clearly, the inverse of an ideal unit delay is ideal unit advance, which is a noncausal (and unrealizable) system. In contrast, a compressor y[n] = x[Mn] is not invertible because this operation loses all but every *M*th sample of the input, and, generally, the input cannot be reconstructed. Similarly, operations, such as  $y[n] = \cos x[n]$  or y[n] = |x[n]|, are not invertible.

## **DRILL 3.9** Invertibility

Show that a system specified by equation y[n] = ax[n] + b is invertible but that the system  $y[n] = |x[n]|^2$  is noninvertible.

# STABLE AND UNSTABLE SYSTEMS

The concept of stability is similar to that in continuous-time systems. Stability can be *internal* or *external*. If every *bounded input* applied at the input terminal results in a *bounded output*, the system is said to be stable *externally*. External stability can be ascertained by measurements at the external terminals of the system. This type of stability is also known as the stability in the BIBO (bounded-input/bounded-output) sense. Both internal and external stability are discussed in greater detail in Sec. 3.9.

## MEMORYLESS SYSTEMS AND SYSTEMS WITH MEMORY

The concepts of memoryless (or instantaneous) systems and those with memory (or dynamic) are identical to the corresponding concepts of the continuous-time case. A system is memoryless if its response at any instant *n* depends at most on the input at the same instant *n*. The output at any instant of a system with memory generally depends on the past, present, and future values of the input. For example,  $y[n] = \sin x[n]$  is an example of instantaneous system, and y[n] - y[n-1] = x[n] is an example of a dynamic system or a system with memory.

# **EXAMPLE 3.10** Investigating DT System Properties

Consider a DT system described as y[n+1] = x[n+1]x[n]. Determine whether the system is (a) linear, (b) time-invariant, (c) causal, (d) invertible, (e) BIBO-stable, and (f) memoryless.

Let us delay the input-output equation by one to obtain the equivalent but more convenient representation of y[n] = x[n]x[n-1].

(a) Linearity requires both homogeneity and additivity. Let us first investigate homogeneity. Assuming  $x[n] \Longrightarrow y[n]$ , we see that

$$ax[n] \Longrightarrow (ax[n])(ax[n-1]) = a^2y[n] \neq ay[n]$$

Thus, the system does not satisfy the homogeneity property.

The system also does not satisfy the additivity property. Assuming  $x_1[n] \Longrightarrow y_1[n]$  and  $x_2[n] \Longrightarrow y_2[n]$ , we see that input  $x[n] = x_1[n] + x_2[n]$  produces output y[n] as

$$y[n] = (x_1[n] + x_2[n])(x_1[n-1] + x_2[n-1])$$
  
=  $x_1[n]x_1[n-1] + x_2[n]x_2[n-1] + x_1[n]x_2[n-1] + x_2[n]x_1[n-1]$   
=  $y_1[n] + y_2[n] + x_1[n]x_2[n-1] + x_2[n]x_1[n-1]$   
 $\neq y_1[n] + y_2[n]$ 

Clearly, additivity is not satisfied.

Since the system does not satisfy both the homogeneity and additivity properties, we conclude that the system is not linear.

(b) To be time-invariant, a shift in any input should cause a corresponding shift in respective output. Assume that  $x[n] \Longrightarrow y[n]$ . Applying a delay version of this input to the system yields

$$x[n-N] \Longrightarrow x[n-N]x[n-1-N] = x[(n-N)]x[(n-N)-1] = y[n-N]$$

Since shifting an input causes a corresponding shift in the output, we conclude that the system is time-invariant.

(c) To be causal, an output value cannot depend on any future input values. The output y at time n depends on the input x at present and past times n and n - 1. Since the current output does not depend on future input values, the system is causal.

(d) For a system to be invertible, every input must generate a unique output, which allows exact recovery of the input from the output. Consider two inputs to this system:  $x_1[n] = 1$  and  $x_2[n] = -1$ . Both inputs generate the same output:  $y_1[n] = y_2[n] = 1$ . Since unique inputs do not always generate unique outputs, we conclude that the system is not invertible.

(e) To be BIBO-stable, any bounded input must generate a bounded output. A bounded input satisfies  $|x[n]| \le M_x < \infty$  for all *n*. Given this condition, the system output magnitude behaves as

 $|y[n]| = |x[n]x[n-1]| = |x[n]| |x[n-1]| \le M_x^2 < \infty$ 

Since any bounded input is guaranteed to produce a bounded output, it follows that the system is BIBO-stable.

(f) To be memoryless, a system's output can only depend on the strength of the current input. Since the output y at time n depends on the input x not only at present time n but also on past time n - 1, we see that the system is not memoryless.

# **3.5 DISCRETE-TIME SYSTEM EQUATIONS**

In this section we discuss time-domain analysis of LTID (linear, time-invariant, discrete-time systems). With minor differences, the procedure is parallel to that for continuous-time systems.

## DIFFERENCE EQUATIONS

Equations (3.3), (3.5), (3.8), and (3.13) are examples of difference equations. Equations (3.3), (3.8), and (3.13) are first-order difference equations, and Eq. (3.5) is a second-order difference equation. All these equations are linear, with constant (not time-varying) coefficients.<sup>†</sup> Before giving a general form of an *N*th-order linear difference equation, we recall that a difference equation can be written in two forms: the first form uses delay terms such as y[n - 1], y[n - 2], x[n - 1], x[n - 2], and so on; and the alternate form uses advance terms such as y[n + 1], y[n + 2], and so on. Although the delay form is more natural, we shall often prefer the advance form, not just for the general notational convenience, but also for resulting notational uniformity with the operator form for differential equations. This facilitates the commonality of the solutions and concepts for continuous-time and discrete-time systems.

We start here with a general difference equation, written in advance form as

$$y[n+N] + a_1y[n+N-1] + \dots + a_{N-1}y[n+1] + a_Ny[n] = b_{N-M}x[n+M] + b_{N-M+1}x[n+M-1] + \dots + b_{N-1}x[n+1] + b_Nx[n]$$
(3.14)

This is a linear difference equation whose order is max(N,M). We have assumed the coefficient of y[n+N] to be unity  $(a_0 = 1)$  without loss of generality. If  $a_0 \neq 1$ , we can divide the equation throughout by  $a_0$  to normalize the equation to have  $a_0 = 1$ .

## CAUSALITY CONDITION

For a causal system, the output cannot depend on future input values. This means that when the system equation is in the advance form of Eq. (3.14), causality requires  $M \le N$ . If M were to be greater than N, then y[n+N], the output at n+N would depend on x[n+M], which is the input at the later instant n+M. For a general causal case, M = N, and Eq. (3.14) can be expressed as

$$y[n+N] + a_1y[n+N-1] + \dots + a_{N-1}y[n+1] + a_Ny[n] = b_0x[n+N] + b_1x[n+N-1] + \dots + b_{N-1}x[n+1] + b_Nx[n]$$
(3.15)

<sup>&</sup>lt;sup>†</sup> Equations such as (3.3), (3.5), (3.8), and (3.13) are considered to be linear according to the classical definition of linearity. Some authors label such equations as *incrementally linear*. We prefer the classical definition. It is just a matter of individual choice and makes no difference in the final results.

where some of the coefficients on either side can be zero. In this Nth-order equation,  $a_0$ , the coefficient of y[n+N], is normalized to unity. Equation (3.15) is valid for all values of n. Therefore, it is still valid if we replace n by n - N throughout the equation [see Eqs. (3.3) and (3.4)]. Such replacement yields a delay-form alternative:

$$y[n] + a_1y[n-1] + \dots + a_{N-1}y[n-N+1] + a_Ny[n-N] = b_0x[n] + b_1x[n-1] + \dots + b_{N-1}x[n-N+1] + b_Nx[n-N]$$
(3.16)

# 3.5-1 Recursive (Iterative) Solution of Difference Equation

Equation (3.16) can be expressed as

$$y[n] = -a_1 y[n-1] - a_2 y[n-2] - \dots - a_N y[n-N] + b_0 x[n] + b_1 x[n-1] + \dots + b_N x[n-N]$$
(3.17)

In Eq. (3.17), y[n] is computed from 2N + 1 pieces of information; the preceding N values of the output: y[n-1], y[n-2], ..., y[n-N], and the preceding N values of the input: x[n-1],  $x[n-2], \ldots, x[n-N]$ , and the present value of the input x[n]. Initially, to compute y[0], the N initial conditions  $y[-1], y[-2], \ldots, y[-N]$  serve as the preceding N output values. Hence, knowing the N initial conditions and the input, we can determine recursively the entire output  $y[0], y[1], y[2], y[3], \ldots$ , one value at a time. For instance, to find y[0] we set n = 0 in Eq. (3.17). The left-hand side is y[0], and the right-hand side is expressed in terms of N initial conditions  $y[-1], y[-2], \ldots, y[-N]$  and the input x[0] if x[n] is causal (because of causality, other input terms x[-n] = 0. Similarly, knowing y[0] and the input, we can compute y[1] by setting n = 1in Eq. (3.17). Knowing y[0] and y[1], we find y[2], and so on. Thus, we can use this recursive procedure to find the complete response  $y[0], y[1], y[2], \ldots$  For this reason, this equation is classed as a recursive form. This method basically reflects the manner in which a computer would solve a recursive difference equation, given the input and initial conditions. Equation (3.17) [or Eq. (3.16)] is nonrecursive if all the N-1 coefficients  $a_i = 0$  ( $i = 1, 2, \dots, N-1$ ). In this case, it can be seen that y[n] is computed only from the input values and without using any previous outputs. Generally speaking, the recursive procedure applies only to equations in the recursive form. The recursive (iterative) procedure is demonstrated by the following examples.

## **EXAMPLE 3.11** Iterative Solution to a First-Order Difference Equation

Solve iteratively

$$y[n] - 0.5y[n-1] = x[n]$$

with initial condition y[-1] = 16 and causal input  $x[n] = n^2 u[n]$ . This equation can be expressed as

y[n] = 0.5y[n-1] + x[n](3.18)

If we set n = 0 in Eq. (3.18), we obtain

$$y[0] = 0.5y[-1] + x[0]$$
  
= 0.5(16) + 0 = 8

Now, setting n = 1 in Eq. (3.18) and using the value y[0] = 8 (computed in the first step) and  $x[1] = (1)^2 = 1$ , we obtain

$$y[1] = 0.5(8) + (1)^2 = 5$$


Next, setting n = 2 in Eq. (3.18) and using the value y[1] = 5 (computed in the previous step) and  $x[2] = (2)^2$ , we obtain

$$y[2] = 0.5(5) + (2)^2 = 6.5$$

Continuing in this way iteratively, we obtain

$$y[3] = 0.5(6.5) + (3)^2 = 12.25$$
$$y[4] = 0.5(12.25) + (4)^2 = 22.125$$
$$\vdots$$

The output y[n] is depicted in Fig. 3.17.

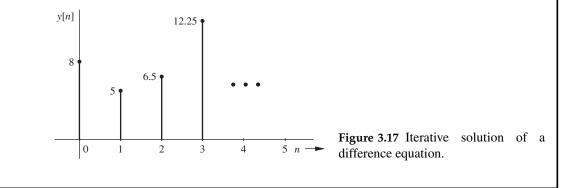

We now present one more example of iterative solution—this time for a second-order equation. The iterative method can be applied to a difference equation in delay form or advance form. In Ex. 3.11 we considered the former. Let us now apply the iterative method to the advance form.

# **EXAMPLE 3.12** Iterative Solution to a Second-Order Difference Equation

Solve iteratively

$$y[n+2] - y[n+1] + 0.24y[n] = x[n+2] - 2x[n+1]$$

#### 268 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

with initial conditions y[-1] = 2, y[-2] = 1 and a causal input x[n] = nu[n]. The system equation can be expressed as

$$y[n+2] = y[n+1] - 0.24y[n] + x[n+2] - 2x[n+1]$$
(3.19)

Setting n = -2 in Eq. (3.19) and then substituting y[-1] = 2, y[-2] = 1, x[0] = x[-1] = 0, we obtain

$$v[0] = 2 - 0.24(1) + 0 - 0 = 1.76$$

Setting n = -1 in Eq. (3.19) and then substituting y[0] = 1.76, y[-1] = 2, x[1] = 1, x[0] = 0, we obtain

$$y[1] = 1.76 - 0.24(2) + 1 - 0 = 2.28$$

Setting n = 0 in Eq. (3.19) and then substituting y[0] = 1.76, y[1] = 2.28, x[2] = 2, and x[1] = 1 yield

$$y[2] = 2.28 - 0.24(1.76) + 2 - 2(1) = 1.8576$$

and so on.

With MATLAB, we can readily verify and extend these recursive calculations.

```
>> n = -2:5; y = [1,2,zeros(1,length(n)-2)]; x = [0,0,n(3:end)];
>> for k = 1:length(n)-2,
>>
        y(k+2) = y(k+1)-0.24*y(k)+x(k+2)-2*x(k+1);
>> end
>> n,y
    n = -2
                  -1
                             0
                                        1
                                                  2
                                                             3
                                                                       4
                                                                                 5
                   2.0000
                             1.7600
                                        2.2800
                                                  1.8576
                                                                                -5.2099
        1.0000
                                                             0.3104
                                                                      -2.1354
    v =
```

Note carefully the recursive nature of the computations. From the N initial conditions (and the input), we obtained y[0] first. Then, using this value of y[0] and the preceding N - 1 initial conditions (along with the input), we find y[1]. Next, using y[0], y[1] along with the past N - 2 initial conditions and input, we obtained y[2], and so on. This method is general and can be applied to a recursive difference equation of any order. It is interesting that the hardware realization of Eq. (3.18) depicted in Fig. 3.14 (with a = 0.5) generates the solution precisely in this (iterative) fashion.

# **DRILL 3.10** Iterative Solution to a Difference Equation

Using the iterative method, find the first three terms of y[n] for

y[n+1] - 2y[n] = x[n]

The initial condition is y[-1] = 10 and the input x[n] = 2 starting at n = 0.

**ANSWER** y[0] = 20, y[1] = 42, and y[2] = 86 We shall see in the future that the solution of a difference equation obtained in this direct (iterative) way is useful in many situations. Despite the many uses of this method, a closed-form solution of a difference equation is far more useful in the study of system behavior and its dependence on the input and various system parameters. For this reason we shall develop a systematic procedure to analyze discrete-time systems along lines similar to those used for continuous-time systems.

#### **OPERATOR NOTATION**

In difference equations, it is convenient to use operator notation similar to that used in differential equations for the sake of compactness. In continuous-time systems, we used the operator D to denote the operation of differentiation. For discrete-time systems, we shall use the operator E to denote the operation for advancing a sequence by one time unit. Thus,

$$Ex[n] \equiv x[n+1]$$
$$E^{2}x[n] \equiv x[n+2]$$
$$\vdots$$
$$E^{N}x[n] \equiv x[n+N]$$

Let us use this advance operator notation to represent several systems investigated earlier. The first-order difference equation of a savings account is [see Eq. (3.4)]

$$y[n+1] - ay[n] = x[n+1]$$

Using the operator notation, we can express this equation as

$$Ey[n] - ay[n] = Ex[n]$$
 or  $(E-a)y[n] = Ex[n]$ 

Similarly, the second-order book sales estimate described by Eq. (3.6) as

$$y[n+2] + \frac{1}{4}y[n+1] + \frac{1}{16}y[n] = x[n+2]$$

can be expressed in operator notation as

$$\left(E^{2} + \frac{1}{4}E + \frac{1}{16}\right)y[n] = E^{2}x[n]$$

The general Nth-order advance-form difference equation of Eq. (3.15) can be expressed as

$$(E^{N} + a_{1}E^{N-1} + \dots + a_{N-1}E + a_{N})y[n] = (b_{0}E^{N} + b_{1}E^{N-1} + \dots + b_{N-1}E + b_{N})x[n]$$

or

$$Q[E]y[n] = P[E]x[n]$$
(3.20)

where Q[E] and P[E] are Nth-order polynomial operators

$$Q[E] = E^{N} + a_{1}E^{N-1} + \dots + a_{N-1}E + a_{N}$$
$$P[E] = b_{0}E^{N} + b_{1}E^{N-1} + \dots + b_{N-1}E + b_{N}$$

# **RESPONSE OF LINEAR DISCRETE-TIME SYSTEMS**

Following the procedure used for continuous-time systems, we can show that Eq. (3.20) is a linear equation (with constant coefficients). A system described by such an equation is a linear, time-invariant, discrete-time (LTID) system. We can verify, as in the case of LTIC systems (see the footnote on page 151), that the general solution of Eq. (3.20) consists of zero-input and zero-state components.

# **3.6 System Response to Internal Conditions: The Zero-Input Response**

The zero-input response  $y_0[n]$  is the solution of Eq. (3.20) with x[n] = 0; that is,

$$Q[E]y_0[n] = 0$$

or

$$(E^{N} + a_{1}E^{N-1} + \dots + a_{N-1}E + a_{N})y_{0}[n] = 0$$
(3.21)

Although we can solve this equation systematically, even a cursory examination points to the solution. This equation states that a linear combination of  $y_0[n]$  and advanced  $y_0[n]$  is zero, not for some values of n, but for all n. Such a situation is possible if and only if  $y_0[n]$  and advanced  $y_0[n]$  have the same form. Only an exponential function  $\gamma^n$  has this property, as the following equation indicates:

$$E^k\{\gamma^n\} = \gamma^{n+k} = \gamma^k \gamma^n$$

This expression shows that  $\gamma^n$  advanced by k units is a constant  $(\gamma^k)$  times  $\gamma^n$ . Therefore, the solution of Eq. (3.21) must be of the form<sup>†</sup>

$$y_0[n] = c\gamma^n \tag{3.22}$$

To determine *c* and  $\gamma$ , we substitute this solution in Eq. (3.21). Since  $E^k y_0[n] = y_0[n+k] = c\gamma^{n+k}$ , this produces

$$c(\gamma^N + a_1\gamma^{N-1} + \dots + a_{N-1}\gamma + a_N)\gamma^n = 0$$

For a nontrivial solution of this equation,

$$\gamma^{N} + a_{1}\gamma^{n-1} + \dots + a_{N-1}\gamma + a_{N} = 0$$
(3.23)

or

 $Q[\gamma] = 0$ 

Our solution  $c\gamma^n$  [Eq. (3.22)] is correct, provided  $\gamma$  satisfies Eq. (3.23). Now,  $Q[\gamma]$  is an *N*th-order polynomial and can be expressed in the factored form (assuming all distinct roots):

$$(\gamma - \gamma_1)(\gamma - \gamma_2) \cdots (\gamma - \gamma_N) = 0$$

Clearly,  $\gamma$  has N solutions  $\gamma_1, \gamma_2, \ldots, \gamma_N$  and, therefore, Eq. (3.21) also has N solutions  $c_1\gamma_1^n$ ,  $c_2\gamma_2^n, \ldots, c_n\gamma_N^n$ . In such a case, we have shown that the general solution is a linear combination

<sup>&</sup>lt;sup>†</sup> A signal of the form  $n^m \gamma^n$  also satisfies this requirement under certain conditions (repeated roots), discussed later.

#### 3.6 System Response to Internal Conditions: The Zero-Input Response 271

of the N solutions (see the footnote on page 153). Thus,

$$y_0[n] = c_1 \gamma_1^n + c_2 \gamma_2^n + \dots + c_n \gamma_N^n$$

where  $\gamma_1, \gamma_2, \ldots, \gamma_n$  are the roots of Eq. (3.23) and  $c_1, c_2, \ldots, c_n$  are arbitrary constants determined from N auxiliary conditions, generally given in the form of initial conditions. The polynomial  $Q[\gamma]$  is called the *characteristic polynomial* of the system, and  $Q[\gamma] = 0$  [Eq. (3.23)] is the *characteristic equation* of the system. Moreover,  $\gamma_1, \gamma_2, \ldots, \gamma_N$ , the roots of the characteristic equation, are called *characteristic roots* or *characteristic values* (also *eigenvalues*) of the system. The exponentials  $\gamma_i^n$  ( $i = 1, 2, \ldots, N$ ) are the *characteristic modes* or *natural modes* of the system. A characteristic mode corresponds to each characteristic root of the system, and the *zero-input response is a linear combination of the characteristic modes of the system*.

# EXAMPLE 3.13 Zero-Input Response of a Second-Order System with Real Roots

The LTID system described by the difference equation

$$y[n+2] - 0.6y[n+1] - 0.16y[n] = 5x[n+2]$$

has input  $x[n] = 4^{-n}u[n]$  and initial conditions y[-1] = 0 and y[-2] = 25/4. Determine the zero-input response  $y_0[n]$ . The zero-state response of this system is considered later, in Ex. 3.21.

The system equation in operator notation is

$$(E^2 - 0.6E - 0.16)y[n] = 5E^2x[n]$$

The characteristic polynomial is

$$\gamma^2 - 0.6\gamma - 0.16 = (\gamma + 0.2)(\gamma - 0.8)$$

The characteristic equation is

$$(\gamma + 0.2)(\gamma - 0.8) = 0$$

The characteristic roots are  $\gamma_1 = -0.2$  and  $\gamma_2 = 0.8$ . The zero-input response is

$$y_0[n] = c_1(-0.2)^n + c_2(0.8)^n$$
(3.24)

To determine arbitrary constants  $c_1$  and  $c_2$ , we set n = -1 and -2 in Eq. (3.24), then substitute  $y_0[-1] = 0$  and  $y_0[-2] = 25/4$  to obtain<sup>†</sup>

$$\begin{array}{ccc} 0 = -5c_1 + \frac{5}{4}c_2 \\ \frac{25}{4} = 25c_1 + \frac{25}{16}c_2 \end{array} \end{array} \implies \begin{array}{ccc} c_1 = \frac{1}{5} \\ c_2 = \frac{4}{5} \end{array}$$

<sup>&</sup>lt;sup>†</sup> The initial conditions y[-1] and y[-2] are the conditions given on the total response. But because the input does not start until n = 0, the zero-state response is zero for n < 0. Hence, at n = -1 and -2 the total response consists of the zero-input component only so that  $y[-1] = y_0[-1]$  and  $y[-2] = y_0[-2]$ .

#### 272 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

Therefore,

$$y_0[n] = \frac{1}{5}(-0.2)^n + \frac{4}{5}(0.8)^n \qquad n \ge 0$$

The reader can verify this solution by computing the first few terms using the iterative method (see Exs. 3.11 and 3.12).

# DRILL 3.11 Zero-Input Response of First-Order Systems

Find and sketch the zero-input response for the systems described by the following equations:

- (a) y[n+1] 0.8y[n] = 3x[n+1]
- **(b)** y[n+1] + 0.8y[n] = 3x[n+1]

In each case the initial condition is y[-1] = 10. Verify the solutions by computing the first three terms using the iterative method.

#### **ANSWERS**

- (a)  $8(0.8)^n$
- **(b)**  $-8(-0.8)^n$

# DRILL 3.12 Zero-Input Response of a Second-Order System with Real Roots

Find the zero-input response of a system described by the equation

$$y[n] + 0.3y[n-1] - 0.1y[n-2] = x[n] + 2x[n-1]$$

The initial conditions are  $y_0[-1] = 1$  and  $y_0[-2] = 33$ . Verify the solution by computing the first three terms iteratively.


### ANSWER

 $y_0[n] = (0.2)^n + 2(-0.5)^n$ 

Section 3.5-1 introduced the method of recursion to solve difference equations. As the next example illustrates, the zero-input response can likewise be found through recursion. Since it does

273

not provide a closed-form solution, recursion is generally not the preferred method of solving difference equations.

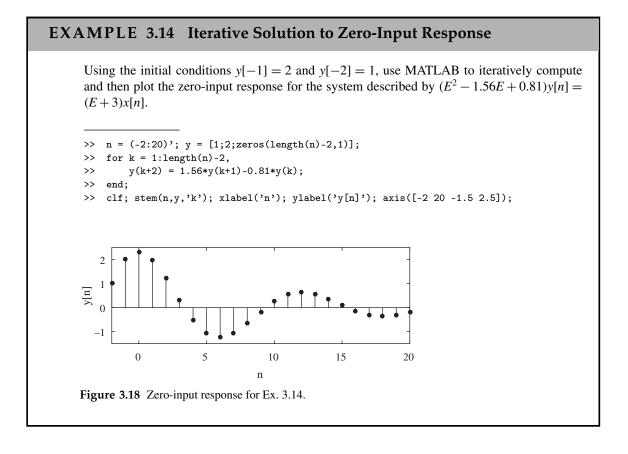

### **REPEATED ROOTS**

So far we have assumed the system to have N distinct characteristic roots  $\gamma_1, \gamma_2, \ldots, \gamma_N$  with corresponding characteristic modes  $\gamma_1^n, \gamma_2^n, \ldots, \gamma_N^n$ . If two or more roots coincide (repeated roots), the form of characteristic modes is modified. Direct substitution shows that if a root  $\gamma$  repeats r times (root of multiplicity r), the corresponding characteristic modes for this root are  $\gamma^n, n\gamma^n$ ,  $n^2\gamma^n, \ldots, n^{r-1}\gamma^n$ . Thus, if the characteristic equation of a system is

$$Q[\gamma] = (\gamma - \gamma_1)^r (\gamma - \gamma_{r+1}) (\gamma - \gamma_{r+2}) \cdots (\gamma - \gamma_N)$$

then the zero-input response of the system is

$$y_0[n] = (c_1 + c_2n + c_3n^2 + \dots + c_rn^{r-1})\gamma_1^n + c_{r+1}\gamma_{r+1}^n + c_{r+2}\gamma_{r+2}^n + \dots + c_n\gamma_N^n$$

# **EXAMPLE 3.15** Zero-Input Response of a Second-Order System with Repeated Roots

Consider a second-order difference equation with repeated roots:

$$(E^{2} + 6E + 9)y[n] = (2E^{2} + 6E)x[n]$$

Determine the zero-input response  $y_0[n]$  if the initial conditions are  $y_0[-1] = -1/3$  and  $y_0[-2] = -2/9$ .

The characteristic polynomial is  $\gamma^2 + 6\gamma + 9 = (\gamma + 3)^2$ , and we have a repeated characteristic root at  $\gamma = -3$ . The characteristic modes are  $(-3)^n$  and  $n(-3)^n$ . Hence, the zero-input response is

 $y_0[n] = (c_1 + c_2 n)(-3)^n$ 

Although we can determine the constants  $c_1$  and  $c_2$  from the initial conditions following a procedure similar to Ex. 3.13, we instead use MATLAB to perform the needed calculations.

Thus, the zero-input response is

$$y_0[n] = (4+3n)(-3)^n \qquad n \ge 0$$

# COMPLEX ROOTS

As in the case of continuous-time systems, the complex roots of a discrete-time system will occur in pairs of conjugates if the system equation coefficients are real. Complex roots can be treated exactly as we would treat real roots. However, just as in the case of continuous-time systems, we can also use the real form of solution as an alternative.

First we express the complex conjugate roots  $\gamma$  and  $\gamma^*$  in polar form. If  $|\gamma|$  is the magnitude and  $\beta$  is the angle of  $\gamma$ , then

$$\gamma = |\gamma| e^{j\beta}$$
 and  $\gamma^* = |\gamma| e^{-j\beta}$ 

The zero-input response is given by

$$y_0[n] = c_1 \gamma^n + c_2 (\gamma^*)^n = c_1 |\gamma|^n e^{j\beta n} + c_2 |\gamma|^n e^{-j\beta n}$$

For a real system,  $c_1$  and  $c_2$  must be conjugates so that  $y_0[n]$  is a real function of n. Let

$$c_1 = \frac{c}{2}e^{j\theta}$$
 and  $c_2 = \frac{c}{2}e^{-j\theta}$ 

Then

$$y_0[n] = \frac{c}{2} |\gamma|^n \left[ e^{j(\beta n+\theta)} + e^{-j(\beta n+\theta)} \right] = c |\gamma|^n \cos\left(\beta n+\theta\right)$$
(3.25)

where c and  $\theta$  are arbitrary constants determined from the auxiliary conditions. This is the solution in real form, which avoids dealing with complex numbers.

# **EXAMPLE 3.16** Zero-Input Response of a Second-Order System with Complex Roots

Consider a second-order difference equation with complex-conjugate roots:

$$(E^2 - 1.56E + 0.81)y[n] = (E+3)x[n]$$

Determine the zero-input response  $y_0[n]$  if the initial conditions are  $y_0[-1] = 2$  and  $y_0[-2] = 1$ .

The characteristic polynomial is  $(\gamma^2 - 1.56\gamma + 0.81) = (\gamma - 0.78 - j0.45)(\gamma - 0.78 + j0.45)$ . The characteristic roots are  $0.78 \pm j0.45$ ; that is,  $0.9e^{\pm j(\pi/6)}$ . We could immediately write the solution as

$$y_0[n] = c(0.9)^n e^{j\pi n/6} + c^*(0.9)^n e^{-j\pi n/6}$$

Setting n = -1 and -2 and using the initial conditions  $y_0[-1] = 2$  and  $y_0[-2] = 1$ , we find  $c = 1.1550 - j0.2025 = 1.1726 e^{-j0.1735}$  and  $c^* = 1.1550 + j0.2025 = 1.1726 e^{j0.1735}$ .

Alternately, we could also find the unknown coefficient by using the real form of the solution, as given in Eq. (3.25). In the present case, the roots are  $0.9e^{\pm j(\pi/6)}$ . Hence,  $|\gamma| = 0.9$  and  $\beta = \pi/6$ , and the zero-input response, according to Eq. (3.25), is given by

$$y_0[n] = c(0.9)^n \cos\left(\frac{\pi}{6}n + \theta\right)$$

To determine the constants *c* and  $\theta$ , we set n = -1 and -2 in this equation and substitute the initial conditions  $y_0[-1] = 2$  and  $y_0[-2] = 1$  to obtain

$$2 = \frac{c}{0.9}\cos\left(-\frac{\pi}{6} + \theta\right) = \frac{c}{0.9}\left[\frac{\sqrt{3}}{2}\cos\theta + \frac{1}{2}\sin\theta\right]$$
$$1 = \frac{c}{(0.9)^2}\cos\left(-\frac{\pi}{3} + \theta\right) = \frac{c}{0.81}\left[\frac{1}{2}\cos\theta + \frac{\sqrt{3}}{2}\sin\theta\right]$$

or

$$\frac{\sqrt{3}}{1.8}c\cos\theta + \frac{1}{1.8}c\sin\theta = 2$$
$$\frac{1}{1.62}c\cos\theta + \frac{\sqrt{3}}{1.62}c\sin\theta = 1$$

These are two simultaneous equations in two unknowns  $c\cos\theta$  and  $c\sin\theta$ . Solution of these equations yields

$$c\cos\theta = 2.308$$
$$c\sin\theta = -0.397$$

Dividing  $c \sin \theta$  by  $c \cos \theta$  yields

$$\tan \theta = \frac{-0.397}{2.308} = \frac{-0.172}{1}$$
$$\theta = \tan^{-1}(-0.172) = -0.17 \text{ rad}$$

Substituting  $\theta = -0.17$  radian in  $c \cos \theta = 2.308$  yields c = 2.34 and

$$y_0[n] = 2.34(0.9)^n \cos\left(\frac{\pi}{6}n - 0.17\right) \quad n \ge 0$$

Observe that here we have used radian units for both  $\beta$  and  $\theta$ . We also could have used the degree unit, although this practice is not recommended. The important consideration is to be consistent and to use the same units for both  $\beta$  and  $\theta$ .

# DRILL 3.13 Zero-Input Response of a Second-Order System with Complex Roots

Find the zero-input response of a system described by the equation

$$y[n] + 4y[n-2] = 2x[n]$$

The initial conditions are  $y_0[-1] = -1/(2\sqrt{2})$  and  $y_0[-2] = 1/(4\sqrt{2})$ . Verify the solution by computing the first three terms iteratively.

ANSWER

 $y_0[n] = (2)^n \cos\left(\frac{\pi}{2}n - \frac{3\pi}{4}\right)$ 

276

# 3.7 THE UNIT IMPULSE RESPONSE *h*[*n*]

Consider an *n*th-order system specified by the equation

$$(E^{N} + a_{1}E^{N-1} + \dots + a_{N-1}E + a_{N})y[n] = (b_{0}E^{N} + b_{1}E^{N-1} + \dots + b_{N-1}E + b_{N})x[n]$$

or

$$Q[E]y[n] = P[E]x[n]$$

The unit impulse response h[n] is the solution of this equation for the input  $\delta[n]$  with all the initial conditions zero; that is,

$$Q[E]h[n] = P[E]\delta[n] \tag{3.26}$$

subject to initial conditions

$$h[-1] = h[-2] = \cdots = h[-N] = 0$$

Equation (3.26) can be solved to determine h[n] iteratively or in a closed form. The following example demonstrates the iterative solution.

# **EXAMPLE 3.17** Iterative Determination of the Impulse Response

Iteratively compute the first two values of the impulse response h[n] of a system described by the equation

y[n] - 0.6y[n-1] - 0.16y[n-2] = 5x[n]

To determine the unit impulse response, we let the input  $x[n] = \delta[n]$  and the output y[n] = h[n] in the system's difference equation to obtain

$$h[n] - 0.6h[n-1] - 0.16h[n-2] = 5\delta[n]$$

subject to zero initial state; that is, h[-1] = h[-2] = 0. Setting n = 0 in this equation yields

 $h[0] - 0.6(0) - 0.16(0) = 5(1) \implies h[0] = 5$ 

Setting n = 1 in the same equation and using h[0] = 5, we obtain

 $h[1] - 0.6(5) - 0.16(0) = 5(0) \implies h[1] = 3$ 

Continuing this way, we can determine any number of terms of h[n]. Unfortunately, such a solution does not yield a closed-form expression for h[n]. Nevertheless, determining a few values of h[n] can be useful in determining the closed-form solution, as the following development shows.

# 3.7-1 The Closed-Form Solution of *h*[*n*]

Recall that h[n] is the system response to input  $\delta[n]$ , which is zero for n > 0. We know that when the input is zero, only the characteristic modes can be sustained by the system. Therefore, h[n]must be made up of characteristic modes for n > 0. At n = 0, it may have some nonzero value  $A_0$ so that a general form of h[n] can be expressed as<sup>†</sup>

$$h[n] = A_0 \delta[n] + y_c[n] u[n]$$
(3.27)

where  $y_c[n]$  is a linear combination of the characteristic modes. We now substitute Eq. (3.27) in Eq. (3.26) to obtain  $Q[E](A_0\delta[n] + y_c[n]u[n]) = P[E]\delta[n]$ . Because  $y_c[n]$  is made up of characteristic modes,  $Q[E]y_c[n]u[n] = 0$ , and we obtain  $A_0Q[E]\delta[n] = P[E]\delta[n]$ , that is,

$$A_0\left(\delta[n+N] + a_1\delta[n+N-1] + \dots + a_N\delta[n]\right) = b_0\delta[n+N] + \dots + b_N\delta[n]$$

Setting n = 0 in this equation and using the fact that  $\delta[m] = 0$  for all  $m \neq 0$ , and  $\delta[0] = 1$ , we obtain

$$A_0 a_N = b_N \implies A_0 = \frac{b_N}{a_N} \tag{3.28}$$

Hence,<sup>‡</sup>

$$h[n] = \frac{b_N}{a_N} \delta[n] + y_c[n]u[n]$$
(3.29)

The *N* unknown coefficients in  $y_c[n]$  (on the right-hand side) can be determined from a knowledge of *N* values of h[n]. Fortunately, it is a straightforward task to determine values of h[n] iteratively, as demonstrated in Ex. 3.17. We compute *N* values  $h[0], h[1], h[2], \ldots, h[N-1]$  iteratively. Now, setting  $n = 0, 1, 2, \ldots, N-1$  in Eq. (3.29), we can determine the *N* unknowns in  $y_c[n]$ . This point will become clear in the following example.

### **EXAMPLE 3.18** Closed-Form Determination of the Impulse Response

Determine the unit impulse response h[n] for a system in Ex. 3.17 specified by the equation

$$y[n] - 0.6y[n-1] - 0.16y[n-2] = 5x[n]$$

<sup>&</sup>lt;sup>†</sup> We assume that the term  $y_c[n]$  consists of characteristic modes for n > 0 only. To reflect this behavior, the characteristic terms should be expressed in the form  $\gamma_j^n u[n-1]$ . But because  $u[n-1] = u[n] - \delta[n]$ ,  $c_j \gamma_j^n u[n-1] = c_j \gamma_j^n u[n] - c_j \delta[n]$ , and  $y_c[n]$  can be expressed in terms of exponentials  $\gamma_j^n u[n]$  (which start at n = 0), plus an impulse at n = 0.

<sup>&</sup>lt;sup>‡</sup> If  $a_N = 0$ , then  $A_0$  cannot be determined by Eq. (3.28). In such a case, we show in Sec. 3.12 that h[n] is of the form  $A_0\delta[n] + A_1\delta[n-1] + y_c[n]u[n]$ . We have here N + 2 unknowns, which can be determined from N + 2 values  $h[0], h[1], \ldots, h[N+1]$  found iteratively.

This equation can be expressed in the advance form as

$$y[n+2] - 0.6y[n+1] - 0.16y[n] = 5x[n+2]$$

or in advance operator form as

$$(E^2 - 0.6E - 0.16)y[n] = 5E^2x[n]$$

The characteristic polynomial is

$$\gamma^2 - 0.6\gamma - 0.16 = (\gamma + 0.2)(\gamma - 0.8)$$

The characteristic modes are  $(-0.2)^n$  and  $(0.8)^n$ . Therefore,

$$y_c[n] = c_1(-0.2)^n + c_2(0.8)^n$$

Inspecting the system difference equation, we see that  $a_N = -0.16$  and  $b_N = 0$ . Therefore, according to Eq. (3.29),

$$h[n] = [c_1(-0.2)^n + c_2(0.8)^n]u[n]$$

To determine  $c_1$  and  $c_2$ , we need to find two values of h[n] iteratively. From Ex. 3.17, we know that h[0] = 5 and h[1] = 3. Setting n = 0 and 1 in our expression for h[n] and using the fact that h[0] = 5 and h[1] = 3, we obtain

$$\begin{cases} 5 = c_1 + c_2 \\ 3 = -0.2c_1 + 0.8c_2 \end{cases} \implies \begin{array}{c} c_1 = 1 \\ c_2 = 4 \end{array}$$

Therefore,

$$h[n] = [(-0.2)^n + 4(0.8)^n]u[n]$$

# DRILL 3.14 Closed-Form Determination of the Impulse Response

Find h[n], the unit impulse response of the LTID systems specified by the following equations:

- (a) y[n+1] y[n] = x[n]
- **(b)** y[n] 5y[n-1] + 6y[n-2] = 8x[n-1] 19x[n-2]
- (c) y[n+2] 4y[n+1] + 4y[n] = 2x[n+2] 2x[n+1]
- (d) y[n] = 2x[n] 2x[n-1]


#### ANSWERS

- (a) h[n] = u[n-1]
- **(b)**  $h[n] = -\frac{19}{6}\delta[n] + \left[\frac{3}{2}(2)^n + \frac{5}{3}(3)^n\right]u[n]$
- (c)  $h[n] = (2+n)2^n u[n]$
- (d)  $h[n] = 2\delta[n] 2\delta[n-1]$

### **EXAMPLE 3.19** Filtering Perspective of the Unit Impulse Response

Use the MATLAB filter command to solve Ex. 3.18.

There are several ways to find the impulse response using MATLAB. In this method, we first specify the unit impulse function, which will serve as our input. Vectors a and b are created to specify the system. The filter command is then used to determine the impulse response. In fact, this method can be used to determine the zero-state response for any input.

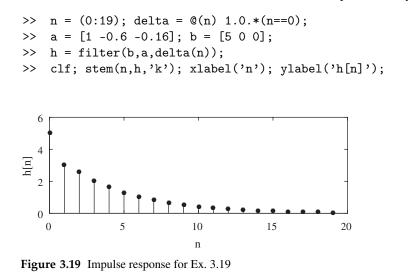

**Comment.** Although it is relatively simple to determine the impulse response h[n] by using the procedure in this section, in Ch. 5 we shall discuss the much simpler method of the *z*-transform.

# **3.8 System Response to External Input: The Zero-State Response**

The zero-state response y[n] is the system response to an input x[n] when the system is in the zero state. In this section we shall assume that systems are in the zero state unless mentioned otherwise, so that the zero-state response will be the total response of the system. Here we follow the procedure parallel to that used in the continuous-time case by expressing an arbitrary input x[n] as a sum of impulse components. A signal x[n] in Fig. 3.20a can be expressed as a sum of impulse components, such as those depicted in Figs. 3.20b–3.20f. The component of x[n] at n = m is  $x[m]\delta[n - m]$ , and x[n] is the sum of all these components summed from  $m = -\infty$  to  $\infty$ .

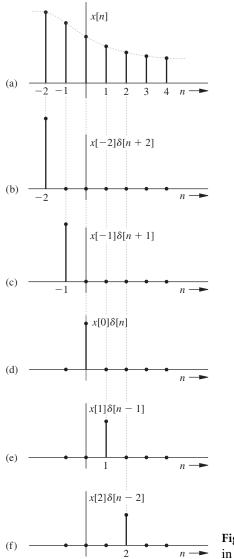


Figure 3.20 Representation of an arbitrary signal x[n] in terms of impulse components.

Therefore,

$$x[n] = x[0]\delta[n] + x[1]\delta[n-1] + x[2]\delta[n-2] + \cdots + x[-1]\delta[n+1] + x[-2]\delta[n+2] + \cdots = \sum_{m=-\infty}^{\infty} x[m]\delta[n-m]$$
(3.30)

#### 282 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

For a linear system, if we know the system response to impulse  $\delta[n]$ , we can obtain the system response to any arbitrary input by summing the system response to various impulse components. Let h[n] be the system response to impulse input  $\delta[n]$ . We shall use the notation

$$x[n] \Longrightarrow y[n]$$

to indicate the input and the corresponding response of the system. Thus, if

$$\delta[n] \Longrightarrow h[n]$$

then because of time invariance

$$\delta[n-m] \Longrightarrow h[n-m]$$

and because of linearity

$$x[m]\delta[n-m] \Longrightarrow x[m]h[n-m]$$

and again because of linearity

$$\underbrace{\sum_{m=-\infty}^{\infty} x[m]\delta[n-m]}_{x[n]} \implies \underbrace{\sum_{m=-\infty}^{\infty} x[m]h[n-m]}_{y[n]}$$

The left-hand side is x[n] [see Eq. (3.30)], and the right-hand side is the system response y[n] to input x[n]. Therefore,<sup>†</sup>

$$y[n] = \sum_{m=-\infty}^{\infty} x[m]h[n-m]$$
(3.31)

The summation on the right-hand side is known as the *convolution sum* of x[n] and h[n], and is represented symbolically by x[n] \* h[n]

$$x[n] * h[n] = \sum_{m=-\infty}^{\infty} x[m]h[n-m]$$

#### **PROPERTIES OF THE CONVOLUTION SUM**

The structure of the convolution sum is similar to that of the convolution integral. Moreover, the properties of the convolution sum are similar to those of the convolution integral. We shall enumerate these properties here without proof. The proofs are similar to those for the convolution integral and may be derived by the reader.

$$y[n] = \sum_{m=-\infty}^{\infty} x[m]h[n,m]$$

<sup>&</sup>lt;sup>†</sup> In deriving this result, we have assumed a time-invariant system. The system response to input  $\delta[n-m]$  for a time-varying system cannot be expressed as h[n-m]; instead, it has the form h[n, m]. Using this form, Eq. (3.31) is modified as follows:

The Commutative Property.

$$x_1[n] * x_2[n] = x_2[n] * x_1[n]$$

The Distributive Property.

$$x_1[n] * (x_2[n] + x_3[n]) = x_1[n] * x_2[n] + x_1[n] * x_3[n]$$

The Associative Property.

$$x_1[n] * (x_2[n] * x_3[n]) = (x_1[n] * x_2[n]) * x_3[n]$$

The Shifting Property. If

$$x_1[n] * x_2[n] = c[n]$$

then

$$x_1[n-m] * x_2[n-p] = c[n-m-p]$$
(3.32)

The Convolution with an Impulse.

$$x[n] * \delta[n] = x[n]$$

**The Width Property.** If  $x_1[n]$  and  $x_2[n]$  have finite widths of  $W_1$  and  $W_2$ , respectively, then the width of  $x_1[n] * x_2[n]$  is  $W_1 + W_2$ . The width of a signal is 1 less than the number of its elements (length). Thus the signal in Fig. 3.22h has six elements (length of 6) but a width of only 5. Alternately, the property may be stated in terms of lengths as follows: if  $x_1[n]$  and  $x_2[n]$  have finite lengths of  $L_1$  and  $L_2$  elements, respectively, then the length of  $x_1[n] * x_2[n]$  is  $L_1 + L_2 - 1$ elements.

# CAUSALITY AND ZERO-STATE RESPONSE

In deriving Eq. (3.31), we assumed the system to be linear and time-invariant. There were no other restrictions on either the input signal or the system. In our applications, almost all the input signals are causal, and a majority of the systems are also causal. These restrictions further simplify the limits of the sum in Eq. (3.31). If the input x[n] is causal, x[m] = 0 for m < 0. Similarly, if the system is causal (i.e., if h[n] is causal), then h[x] = 0 for negative x so that h[n - m] = 0 when m > n. Therefore, if x[n] and h[n] are both causal, the product x[m]h[n-m] = 0 for m < 0 and for m > n, and it is nonzero only for the range  $0 \le m \le n$ . Therefore, Eq. (3.31) in this case reduces to

$$y[n] = \sum_{m=0}^{n} x[m]h[n-m]$$
(3.33)

We shall evaluate the convolution sum first by an analytical method and later with graphical aid.

283

# **EXAMPLE 3.20** Convolution of Causal Signals

Determine c[n] = x[n] \* g[n] for

$$x[n] = (0.8)^n u[n]$$
 and  $g[n] = (0.3)^n u[n]$ 

We have

$$c[n] = \sum_{m=-\infty}^{\infty} x[m]g[n-m]$$

Note that

$$x[m] = (0.8)^m u[m]$$
 and  $g[n-m] = (0.3)^{n-m} u[n-m]$ 

Both x[n] and g[n] are causal. Therefore [see Eq. (3.33)],

$$c[n] = \sum_{m=0}^{n} x[m]g[n-m] = \sum_{m=0}^{n} (0.8)^{m} u[m] (0.3)^{n-m} u[n-m]$$

In this summation, *m* lies between 0 and *n* ( $0 \le m \le n$ ). Therefore, if  $n \ge 0$ , then both *m* and  $n - m \ge 0$  so that u[m] = u[n - m] = 1. If n < 0, *m* is negative because *m* lies between 0 and *n*, and u[m] = 0. Therefore,

$$c[n] = \begin{cases} \sum_{m=0}^{n} (0.8)^m (0.3)^{n-m} & n \ge 0\\ 0 & n < 0 \end{cases}$$

or

$$c[n] = (0.3)^n \sum_{m=0}^n \left(\frac{0.8}{0.3}\right)^m u[n]$$

This is a geometric progression with common ratio (0.8/0.3). From Sec. B.8-3 we have

$$c[n] = (0.3)^n \frac{(0.8)^{n+1} - (0.3)^{n+1}}{(0.3)^n (0.8 - 0.3)} u[n]$$
  
= 2[(0.8)<sup>n+1</sup> - (0.3)<sup>n+1</sup>]u[n]

# DRILL 3.15 Convolution of Causal Signals

Show that  $(0.8)^n u[n] * u[n] = 5[1 - (0.8)^{n+1}]u[n].$ 

# CONVOLUTION SUM FROM A TABLE

Just as in the continuous-time case, we have prepared a table (Table 3.1) from which convolution sums may be determined directly for a variety of signal pairs. For example, the convolution in Ex. 3.20 can be read directly from this table (pair 4) as

$$(0.8)^{n}u[n] * (0.3)^{n}u[n] = \frac{(0.8)^{n+1} - (0.3)^{n+1}}{0.8 - 0.3}u[n] = 2[(0.8)^{n+1} - (0.3)^{n+1}]u[n]$$

We shall demonstrate the use of the convolution table in the following example.

No.	$x_1[n]$	$x_2[n]$	$x_1[n] * x_2[n] = x_2[n] * x_1[n]$
1	$\delta[n-k]$	<i>x</i> [ <i>n</i> ]	x[n-k]
2	$\gamma^n u[n]$	<i>u</i> [ <i>n</i> ]	$\left[\frac{1-\gamma^{n+1}}{1-\gamma}\right]u[n]$
3	<i>u</i> [ <i>n</i> ]	<i>u</i> [ <i>n</i> ]	(n+1)u[n]
4	$\gamma_1^n u[n]$	$\gamma_2^n u[n]$	$\left[\frac{\gamma_1^{n+1} - \gamma_2^{n+1}}{\gamma_1 - \gamma_2}\right] u[n] \qquad \gamma_1 \neq \gamma_2$
5	<i>u</i> [ <i>n</i> ]	nu[n]	$\frac{n(n+1)}{2}u[n]$
6	$\gamma^n u[n]$	nu[n]	$\left[\frac{\gamma(\gamma^n-1)+n(1-\gamma)}{(1-\gamma)^2}\right]u[n]$
7	nu[n]	nu[n]	$\frac{1}{6}n(n-1)(n+1)u[n]$
8	$\gamma^n u[n]$	$\gamma^n u[n]$	$(n+1)\gamma^n u[n]$
9	$n\gamma_1^n u[n]$	$\gamma_2^n u[n]$	$\frac{\gamma_1\gamma_2}{(\gamma_1-\gamma_2)^2}\left[\gamma_2^n-\gamma_1^n+\frac{\gamma_1-\gamma_2}{\gamma_2}n\gamma_1^n\right]u[n]\qquad \gamma_1\neq\gamma_2$
10	$ \gamma_1 ^n \cos{(\beta n + \theta)u[n]}$	$ \gamma_2 ^n u[n]$	$\frac{1}{R} [ \gamma_1 ^{n+1} \cos[\beta(n+1) + \theta - \phi] -  \gamma_2 ^{n+1} \cos(\theta - \phi)] u[n]$
			$R = \left[  \gamma_1 ^2 +  \gamma_2 ^2 - 2 \gamma_1  \gamma_2 \cos\beta \right]^{1/2}$
			$\phi = \tan^{-1} \left[ \frac{( \gamma_1  \sin \beta)}{( \gamma_1  \cos \beta -  \gamma_2 )} \right]$
11	$\gamma_1^n u[-(n+1)]$	$\gamma_2^n u[n]$	$\frac{\gamma_2}{\gamma_1 - \gamma_2} \gamma_2^n u[n] + \frac{\gamma_1}{\gamma_1 - \gamma_2} \gamma_1^n u[-(n+1)] \qquad  \gamma_1  >  \gamma_2 $

TABLE 3.1 Select Convolution Sums

# **EXAMPLE 3.21** Convolution by Tables

Using Table 3.1, find the (zero-state) response y[n] of an LTID system described by the equation

$$y[n+2] - 0.6y[n+1] - 0.16y[n] = 5x[n+2]$$

if the input  $x[n] = 4^{-n}u[n]$ .

The input can be expressed as  $x[n] = 4^{-n}u[n] = (1/4)^n u[n] = (0.25)^n u[n]$ . The unit impulse response of this system, obtained in Ex. 3.18, is

$$h[n] = [(-0.2)^n + 4(0.8)^n]u[n]$$

Therefore,

$$y[n] = x[n] * h[n]$$
  
= (0.25)<sup>n</sup>u[n] \* [(-0.2)<sup>n</sup>u[n] + 4(0.8)<sup>n</sup>u[n]]  
= (0.25)<sup>n</sup>u[n] \* (-0.2)<sup>n</sup>u[n] + (0.25)<sup>n</sup>u[n] \* 4(0.8)<sup>n</sup>u[n]

We use pair 4 (Table 3.1) to find the foregoing convolution sums.

$$y[n] = \left[\frac{(0.25)^{n+1} - (-0.2)^{n+1}}{0.25 - (-0.2)} + 4\frac{(0.25)^{n+1} - (0.8)^{n+1}}{0.25 - 0.8}\right]u[n]$$
  
= (2.22[(0.25)^{n+1} - (-0.2)^{n+1}] - 7.27[(0.25)^{n+1} - (0.8)^{n+1}])u[n]  
= [-5.05(0.25)^{n+1} - 2.22(-0.2)^{n+1} + 7.27(0.8)^{n+1}]u[n]

Recognizing that

$$\gamma^{n+1} = \gamma(\gamma)^n$$

we can express y[n] as

$$y[n] = [-1.26(0.25)^{n} + 0.444(-0.2)^{n} + 5.81(0.8)^{n}]u[n]$$
  
= [-1.26(4)<sup>-n</sup> + 0.444(-0.2)^{n} + 5.81(0.8)^{n}]u[n]

# **DRILL 3.16** Convolution by Tables

Use Table 3.1 to show that

(a) 
$$(0.8)^{n+1}u[n] * u[n] = 4[1 - 0.8(0.8)^n]u[n]$$

**(b)**  $n3^{-n}u[n] * (0.2)^n u[n] = \frac{15}{4} \left[ (0.2)^n - \left(1 - \frac{2}{3}n\right)3^{-n} \right] u[n]$ 


(c) 
$$e^{-n}u[n] * 2^{-n}u[n] = \frac{2}{2-e} \left[ e^{-n} - \frac{e}{2}2^{-n} \right] u[n]$$

# **EXAMPLE 3.22** Filtering Perspective of the Zero-State Response

Use the MATLAB filter command to compute and sketch the zero-state response for the system described by  $(E^2 + 0.5E - 1)y[n] = (2E^2 + 6E)x[n]$  and the input  $x[n] = 4^{-n}u[n]$ .

We solve this problem using the same approach as Ex. 3.19. Although the input is bounded and quickly decays to zero, the system itself is unstable and an unbounded output results.

>> n = (0:11); x = @(n) 4.^(-n).\*(n>=0); >> a = [1 0.5 -1]; b = [2 6 0]; y = filter(b,a,x(n)); >> clf; stem(n,y,'k'); xlabel('n'); ylabel('y[n]'); axis([-0.5 11.5 -20 25]);

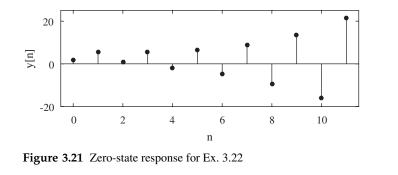

### **RESPONSE TO COMPLEX INPUTS**

As in the case of real continuous-time systems, we can show that for an LTID system with real h[n], if the input and the output are expressed in terms of their real and imaginary parts, then the real part of the input generates the real part of the response and the imaginary part of the input generates the imaginary part. Thus, if

 $x[n] = x_r[n] + jx_i[n]$  and  $y[n] = y_r[n] + jy_i[n]$ 

using the right-directed arrow to indicate the input-output pair, we can show that

$$x_r[n] \Longrightarrow y_r[n]$$
 and  $x_i[n] \Longrightarrow y_i[n]$  (3.34)

The proof is similar to that used to derive Eq. (2.31) for LTIC systems.

# MULTIPLE INPUTS

Multiple inputs to LTI systems can be treated by applying the superposition principle. Each input is considered separately, with all other inputs assumed to be zero. The sum of all these individual system responses constitutes the total system output when all the inputs are applied simultaneously.

# **DRILL 3.17** Response to Multiple Inputs

Show that the system described by y[n] - 0.6y[n-1] - 0.16y[n-2] = 5x[n] responds to input  $x[n] = \delta[n] + 4^{-n}u[n]$  with output  $y[n] = [-1.26(4)^{-n} + 1.444(-0.2)^{n} + 9.81(0.8)^{n}]u[n]$ . [Hint: Use the results of Exs. 3.18 and 3.21.]

# 3.8-1 Graphical Procedure for the Convolution Sum

The steps in evaluating the convolution sum are parallel to those followed in evaluating the convolution integral. The convolution sum of causal signals x[n] and g[n] is given by

$$c[n] = \sum_{m=0}^{n} x[m]g[n-m]$$

We first plot x[m] and g[n-m] as functions of m (not n), because the summation is over m. Functions x[m] and g[m] are the same as x[n] and g[n], plotted, respectively, as functions of m (see Fig. 3.22). The convolution operation can be performed as follows:

- 1. Invert g[m] about the vertical axis (m = 0) to obtain g[-m] (Fig. 3.22d). Figure 3.22e shows both x[m] and g[-m].
- 2. Shift g[-m] by n units to obtain g[n-m]. For n > 0, the shift is to the right (delay); for n < 0, the shift is to the left (advance). Figure 3.22f shows g[n-m] for n > 0; for n < 0, see Fig. 3.22g.
- 3. Next we multiply x[m] and g[n-m] and add all the products to obtain c[n]. The procedure is repeated for each value of *n* over the range  $-\infty$  to  $\infty$ .

We shall demonstrate by an example the graphical procedure for finding the convolution sum. Although both the functions in this example are causal, this procedure is applicable to the general case.

# **EXAMPLE 3.23** Graphical Procedure for the Convolution Sum


Find c[n] = x[n] \* g[n], where x[n] and g[n] are depicted in Figs. 3.22a and 3.22b, respectively.

We are given

and  $g[n] = (0.3)^n$  $x[n] = (0.8)^n$ 

Therefore,

and  $g[n-m] = (0.3)^{n-m}$  $x[m] = (0.8)^m$ 

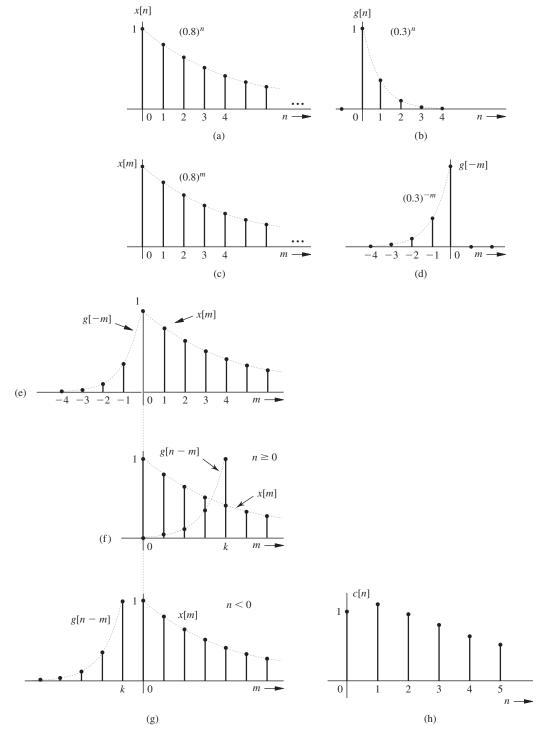

**Figure 3.22** Graphical procedure to convolve x[n] and g[n].

289

#### 290 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

Figure 3.22f shows the general situation for  $n \ge 0$ . The two functions x[m] and g[n-m] overlap over the interval  $0 \le m \le n$ . Therefore,

$$c[n] = \sum_{m=0}^{n} x[m]g[n-m]$$
  
=  $\sum_{m=0}^{n} (0.8)^{m} (0.3)^{n-m}$   
=  $(0.3)^{n} \sum_{m=0}^{n} \left(\frac{0.8}{0.3}\right)^{m}$   
=  $2[(0.8)^{n+1} - (0.3)^{n+1}]$   $n \ge 0$  (see Sec. B.8-3)

For n < 0, there is no overlap between x[m] and g[n-m], as shown in Fig. 3.22g, so that

$$c[n] = 0 \qquad n < 0$$

Combining pieces, we see that

$$c[n] = 2[(0.8)^{n+1} - (0.3)^{n+1}]u[n]$$

which agrees with the result found earlier in Ex. 3.20.

# DRILL 3.18 Graphical Procedure for the Convolution Sum

Find  $(0.8)^n u[n] * u[n]$  graphically and sketch the result.

### ANSWER

 $5(1-(0.8)^{n+1})u[n]$ 

# AN ALTERNATIVE FORM OF GRAPHICAL PROCEDURE: THE SLIDING-TAPE METHOD

This algorithm is convenient when the sequences x[n] and g[n] are short or when they are available only in graphical form. The algorithm is basically the same as the graphical procedure in Fig. 3.22. The only difference is that instead of presenting the data as graphical plots, we display it as a sequence of numbers on tapes. Otherwise the procedure is the same, as will become clear in the following example.

# EXAMPLE 3.24 Sliding-Tape Method for the Convolution Sum

Use the sliding-tape method to convolve the two sequences x[n] and g[n] depicted in Figs. 3.23a and 3.23b, respectively.

In this procedure we write the sequences x[n] and g[n] in the slots of two tapes: x tape and g tape (Fig. 3.23c). Now leave the x tape stationary (to correspond to x[m]). The g[-m] tape is obtained by inverting the g[m] tape about the origin (m = 0) so that the slots corresponding to x[0] and g[0] remain aligned (Fig. 3.23d). We now shift the inverted tape by n slots, multiply values on two tapes in adjacent slots, and add all the products to find c[n]. Figures 3.23d–3.23i show the cases for n = 0-5. Figures 3.23j, 3.23k, and 3.23l show the cases for n = -1, -2, and -3, respectively.

For the case of n = 0, for example (Fig. 3.23d),

$$c[0] = (-2 \times 1) + (-1 \times 1) + (0 \times 1) = -3$$

For n = 1 (Fig. 3.23e),

$$c[1] = (-2 \times 1) + (-1 \times 1) + (0 \times 1) + (1 \times 1) = -2$$

Similarly,

$$c[2] = (-2 \times 1) + (-1 \times 1) + (0 \times 1) + (1 \times 1) + (2 \times 1) = 0$$
  

$$c[3] = (-2 \times 1) + (-1 \times 1) + (0 \times 1) + (1 \times 1) + (2 \times 1) + (3 \times 1) = 3$$
  

$$c[4] = (-2 \times 1) + (-1 \times 1) + (0 \times 1) + (1 \times 1) + (2 \times 1) + (3 \times 1) + (4 \times 1) = 7$$
  

$$c[5] = (-2 \times 1) + (-1 \times 1) + (0 \times 1) + (1 \times 1) + (2 \times 1) + (3 \times 1) + (4 \times 1) = 7$$

Figure 3.23i shows that c[n] = 7 for  $n \ge 4$ .

Similarly, we compute c[n] for negative *n* by sliding the tape backward, one slot at a time, as shown in the plots corresponding to n = -1, -2, and -3, respectively (Figs. 3.23j, 3.23k, and 3.23l).


$$c[-1] = (-2 \times 1) + (-1 \times 1) = -3$$
  


$$c[-2] = (-2 \times 1) = -2$$
  


$$c[-3] = 0$$

Figure 3.231 shows that c[n] = 0 for  $n \le 3$ . Figure 3.23m shows the plot of c[n].

292

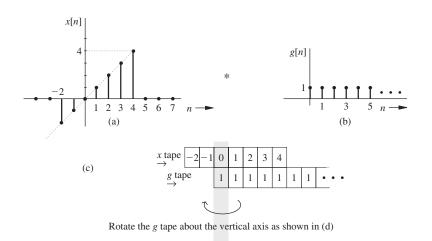


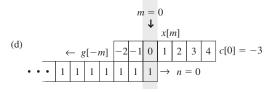

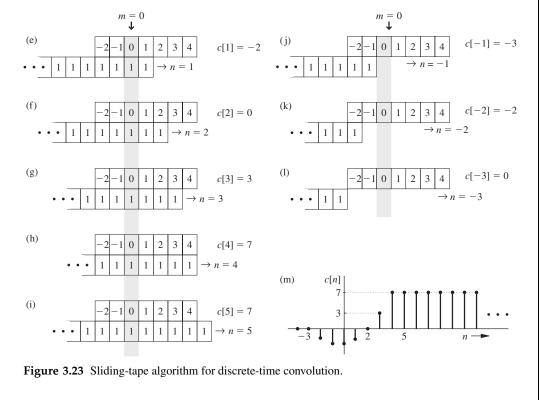


# DRILL 3.19 Sliding-Tape Method for the Convolution Sum


Use the graphical procedure of Ex. 3.24 (sliding-tape technique) to show that x[n] \* g[n] = c[n] in Fig. 3.24. Verify the width property of convolution.

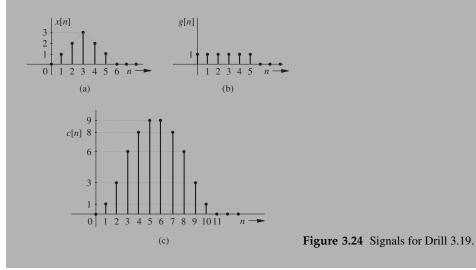

# **EXAMPLE 3.25** Convolution of Two Finite-Duration Signals Using MATLAB

For the signals x[n] and g[n] depicted in Fig. 3.24, use MATLAB to compute and plot c[n] = x[n] \* g[n].

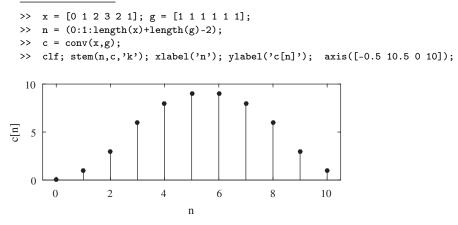

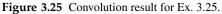

### 3.8-2 Interconnected Systems

As with continuous-time case, we can determine the impulse response of systems connected in parallel (Fig. 3.26a) and cascade (Figs. 3.26b, 3.26c). We can use arguments identical to those used for the continuous-time systems in Sec. 2.4-3 to show that if two LTID systems  $S_1$  and  $S_2$  with impulse responses  $h_1[n]$  and  $h_2[n]$ , respectively, are connected in parallel, the composite parallel system impulse response is  $h_1[n] + h_2[n]$ . Similarly, if these systems are connected in cascade, the impulse response of the composite system is  $h_1[n] * h_2[n]$ . Moreover, because  $h_1[n] * h_2[n] = h_2[n] * h_1[n]$ , linear systems commute. Their orders can be interchanged without affecting the composite system behavior.

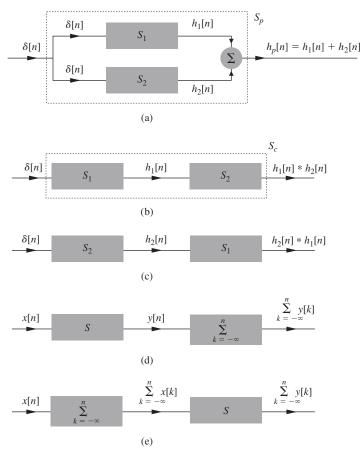


Figure 3.26 Interconnected systems.

# **INVERSE SYSTEMS**

If the two systems in cascade are the inverse of each other, with impulse responses h[n] and  $h_i[n]$ , respectively, then the impulse response of the cascade of these systems is  $h[n] * h_i[n]$ . But, the cascade of a system with its inverse is an identity system, whose output is the same as the input.

Hence, the unit impulse response of an identity system is  $\delta[n]$ . Consequently,

$$h[n] * h_i[n] = \delta[n]$$

As an example, we show that an accumulator system and a backward difference system are the inverse of each other. An accumulator system is specified  $by^{\dagger}$ 

$$y[n] = \sum_{k=-\infty}^{n} x[k]$$
(3.35)

The backward difference system is specified by

$$y[n] = x[n] - x[n-1]$$
(3.36)

From Eq. (3.35), we find  $h_{acc}[n]$ , the impulse response of the accumulator, as

$$h_{\rm acc}[n] = \sum_{k=-\infty}^{n} \delta[k] = u[n]$$

Similarly, from Eq. (3.36),  $h_{\text{bdf}}[n]$ , the impulse response of the backward difference system is given by

$$h_{\rm bdf}[n] = \delta[n] - \delta[n-1]$$

We can verify that

$$h_{\rm acc} * h_{\rm bdf} = u[n] * \{\delta[n] - \delta[n-1]\} = u[n] - u[n-1] = \delta[n]$$

Roughly speaking, a discrete-time accumulator is analogous to a continuous-time integrator, and a backward difference system is analogous to a differentiator. We have already encountered examples of these systems in Exs. 3.8 and 3.9 (digital differentiator and integrator).

# System Response to $\sum_{k=-\infty}^{n} x[k]$

Figure 3.26d shows a cascade of two LTID systems: a system S with impulse response h[n], followed by an accumulator. Figure 3.26e shows a cascade of the same two systems in reverse order: an accumulator followed by S. In Fig. 3.26d, if the input x[n] to S results in the output y[n], then the output of the system in Fig. 3.26d is the  $\sum y[k]$ . In Fig. 3.26e, the output of the accumulator is the sum  $\sum x[k]$ . Because the output of the system in Fig. 3.26e is identical to that of system Fig. 3.26d, it follows that

if 
$$x[n] \Longrightarrow y[n]$$
, then  $\sum_{k=-\infty}^{n} x[k] \Longrightarrow \sum_{k=-\infty}^{n} y[k]$ 

<sup>&</sup>lt;sup>†</sup> Equations (3.35) and (3.36) are identical to Eqs. (3.10) and (3.8), respectively, with T = 1.

#### 296 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

If we let  $x[n] = \delta[n]$  and y[n] = h[n], we find that g[n], the unit step response of an LTID system with impulse response h[n], is given by

$$g[n] = \sum_{k=-\infty}^{n} h[k]$$
(3.37)

The reader can readily prove the inverse relationship

$$h[n] = g[n] - g[n-1]$$

# A VERY SPECIAL FUNCTION FOR LTID SYSTEMS: THE EVERLASTING EXPONENTIAL $z^n$

In Sec. 2.4-4, we showed that there exists one signal for which the response of an LTIC system is the same as the input within a multiplicative constant. The response of an LTIC system to an everlasting exponential input  $e^{st}$  is  $H(s)e^{st}$ , where H(s) is the system transfer function. We now show that for an LTID system, the same role is played by an everlasting exponential  $z^n$ . The system response y[n] in this case is given by

$$y[n] = h[n] * z^{n}$$
$$= \sum_{m=-\infty}^{\infty} h[m] z^{n-m}$$
$$= z^{n} \sum_{m=-\infty}^{\infty} h[m] z^{-m}$$

For causal h[n], the limits on the sum on the right-hand side would range from 0 to  $\infty$ . In any case, this sum is a function of z. Assuming that this sum converges, let us denote it by H[z]. Thus,

$$y[n] = H[z]z^n \tag{3.38}$$

where

$$H[z] = \sum_{m=-\infty}^{\infty} h[m] z^{-m}$$
(3.39)

Equation (3.38) is valid only for values of z for which the sum on the right-hand side of Eq. (3.39) exists (converges). Note that H[z] is a constant for a given z. Thus, the input and the output are the same (within a multiplicative constant) for the everlasting exponential input  $z^n$ .

H[z], which is called the *transfer function* of the system, is a function of the complex variable z. An alternate definition of the transfer function H[z] of an LTID system from Eq. (3.38) is

$$H[z] = \frac{\text{output signal}}{\text{input signal}}\Big|_{\text{input=everlasting exponential }z^n}$$
(3.40)

The transfer function is defined for, and is meaningful to, LTID systems only. It does not exist for nonlinear or time-varying systems in general.

We repeat again that in this discussion we are talking of the everlasting exponential, which starts at  $n = -\infty$ , not the causal exponential  $z^n u[n]$ , which starts at n = 0.

For a system specified by Eq. (3.20), the transfer function is given by

$$H[z] = \frac{P[z]}{Q[z]} \tag{3.41}$$

This follows readily by considering an everlasting input  $x[n] = z^n$ . According to Eq. (3.40), the output is  $y[n] = H[z]z^n$ . Substitution of this x[n] and y[n] in Eq. (3.20) yields

$$H[z] \{Q[E]z^n\} = P[E]z^n$$

Moreover,

$$E^k z^n = z^{n+k} = z^k z^n$$

Hence,

$$P[E]z^n = P[z]z^n$$
 and  $Q[E]z^n = Q[z]z^n$ 

Consequently,

$$H[z] = \frac{P[z]}{Q[z]}$$

### DRILL 3.20 DT System Transfer Function

Show that the transfer function of the digital differentiator in Ex. 3.8 (big shaded block in Fig. 3.16b) is given by H[z] = (z - 1)/Tz, and the transfer function of an unit delay, specified by y[n] = x[n-1], is given by 1/z.

#### 3.8-3 Total Response

The total response of an LTID system can be expressed as a sum of the zero-input and zero-state responses:

total response = 
$$\sum_{j=1}^{N} c_j \gamma_j^n + \underbrace{x[n] * h[n]}_{ZSR}$$

In this expression, the zero-input response should be appropriately modified for the case of repeated roots. We have developed procedures to determine these two components. From the system equation, we find the characteristic roots and characteristic modes. The zero-input response is a linear combination of the characteristic modes. From the system equation, we also determine h[n], the impulse response, as discussed in Sec. 3.7. Knowing h[n] and the input x[n], we find the zero-state response as the convolution of x[n] and h[n]. The arbitrary constants  $c_1, c_2, \ldots, c_n$  in the zero-input response are determined from the n initial conditions. For the system described by the equation

$$y[n+2] - 0.6y[n+1] - 0.16y[n] = 5x[n+2]$$

#### 298 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

with initial conditions y[-1] = 0, y[-2] = 25/4 and input  $x[n] = (4)^{-n}u[n]$ , we have determined the two components of the response in Exs. 3.13 and 3.21, respectively. From the results in these examples, the total response for  $n \ge 0$  is

total response = 
$$\underbrace{0.2(-0.2)^n + 0.8(0.8)^n}_{\text{ZIR}} + \underbrace{0.444(-0.2)^n + 5.81(0.8)^n - 1.26(4)^{-n}}_{\text{ZSR}}$$
 (3.42)

### NATURAL AND FORCED RESPONSE

The characteristic modes of this system are  $(-0.2)^n$  and  $(0.8)^n$ . The zero-input response is made up of characteristic modes exclusively, as expected, but the characteristic modes also appear in the zero-state response. When all the characteristic mode terms in the total response are lumped together, the resulting component is the *natural response*. The remaining part of the total response that is made up of noncharacteristic modes is the *forced response*. For the present case, Eq. (3.42) yields

total response = 
$$\underbrace{0.644(-0.2)^n + 6.61(0.8)^n}_{\text{natural response}} + \underbrace{-1.26(4)^{-n}}_{\text{forced response}}$$
  $n \ge 0$ 

Just like differential equations, the classical solution to difference equations includes the natural and forced responses, a decomposition that lacks the engineering intuition and utility afforded by the zero-input and zero-state responses. The classical approach cannot separate the responses arising from internal conditions and external input. While the natural and forced solutions can be obtained from the zero-input and zero-state responses, the converse is not true. Further, the classical method is unable to express the system response to an input x[n] as an explicit function of x[n]. In fact, the classical method is restricted to a certain class of inputs and cannot handle arbitrary inputs as can the method to determine the zero-state response. For these (and other) reasons, we do not further detail the classical approach and its direct calculation of the forced and natural responses.

# **3.9 System Stability**

The concepts and criteria for the BIBO (external) stability and internal (asymptotic) stability for discrete-time systems are identical to those corresponding to continuous-time systems. The comments in Sec. 2.5 for LTIC systems concerning the distinction between external and internal stability are also valid for LTID systems. Let us begin with external (BIBO) stability.

# 3.9-1 External (BIBO) Stability

Recall that

$$y[n] = h[n] * x[n] = \sum_{m=-\infty}^{\infty} h[m]x[n-m]$$

and

$$|y[n]| = \left|\sum_{m=-\infty}^{\infty} h[m]x[n-m]\right| \le \sum_{m=-\infty}^{\infty} |h[m]| \left|x[n-m]\right|$$

If x[n] is bounded, then  $|x[n-m]| < K_1 < \infty$ , and

$$|y[n]| \le K_1 \sum_{m=-\infty}^{\infty} |h[m]|$$

Clearly the output is bounded if the summation on the right-hand side is bounded; that is, if

$$\sum_{n=-\infty}^{\infty} |h[n]| < K_2 < \infty \tag{3.43}$$

This is a sufficient condition for BIBO stability. We can show that this is also a necessary condition (see Prob. 3.9-1). Therefore, if the impulse response h[n] of an LTID system is absolutely summable, the system is (BIBO) stable. Otherwise it is unstable.

All the comments about the nature of external and internal stability in Ch. 2 apply to discrete-time case. We shall not elaborate them further.

### 3.9-2 Internal (Asymptotic) Stability

For LTID systems, as in the case of LTIC systems, internal stability, called asymptotical stability or stability in the sense of Lyapunov (also the zero-input stability), is defined in terms of the zero-input response of a system.

For an LTID system specified by a difference equation in the form of Eq. (3.15) [or Eq. (3.20)], the zero-input response consists of the characteristic modes of the system. The mode corresponding to a characteristic root  $\gamma$  is  $\gamma^n$ . To be more general, let  $\gamma$  be complex so that


$$\gamma = |\gamma| e^{j\beta}$$
 and  $\gamma^n = |\gamma|^n e^{j\beta n}$ 


Since the magnitude of  $e^{j\beta n}$  is always unity regardless of the value of *n*, the magnitude of  $\gamma^n$  is  $|\gamma|^n$ . Therefore,


if 
$$|\gamma| < 1$$
,then  $\gamma^n \to 0$  as  $n \to \infty$ if  $|\gamma| > 1$ ,then  $\gamma^n \to \infty$  as  $n \to \infty$ and if  $|\gamma| = 1$ ,then  $|\gamma|^n = 1$  for all  $n$ 


The characteristic modes corresponding to characteristic roots at various locations in the complex plane appear in Fig. 3.27.


These results can be grasped more effectively in terms of the location of characteristic roots in the complex plane. Figure 3.28 shows a circle of unit radius, centered at the origin in a complex plane. Our discussion shows that if all characteristic roots of the system lie inside the *unit circle*,  $|\gamma_i| < 1$  for all *i* and the system is asymptotically stable. On the other hand, even if one characteristic root lies outside the unit circle, the system is unstable. If none of the characteristic

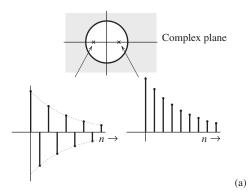


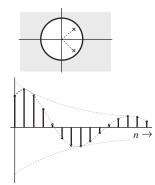


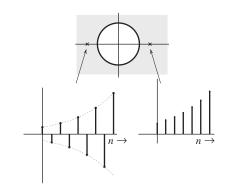

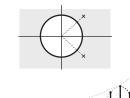


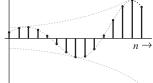


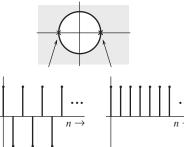

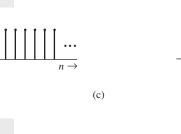

(b)

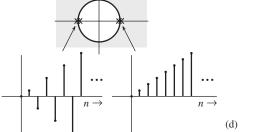

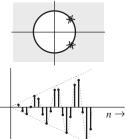

 $n \rightarrow$ 

Figure 3.27 Characteristic roots locations and the corresponding characteristic modes.

roots lie outside the unit circle, but some simple (unrepeated) roots lie on the circle itself, the system is marginally stable. If two or more characteristic roots coincide on the unit circle (repeated roots), the system is unstable. The reason is that for repeated roots, the zero-input response is of the form  $n^{r-1}\gamma^n$ , and if  $|\gamma| = 1$ , then  $|n^{r-1}\gamma^n| = n^{r-1} \to \infty$  as  $n \to \infty$ .<sup>†</sup> Note, however, that repeated roots inside the unit circle do not cause instability.

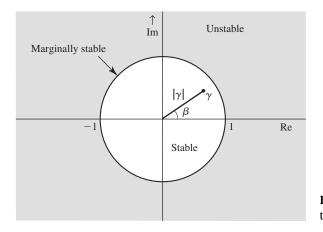


Figure 3.28 Characteristic root locations and system stability.

To summarize:

- 1. An LTID system is asymptotically stable if, and only if, all the characteristic roots are inside the unit circle. The roots may be simple or repeated.
- 2. An LTID system is unstable if, and only if, either one or both of the following conditions exist: (i) at least one root is outside the unit circle; (ii) there are repeated roots on the unit circle.
- An LTID system is marginally stable if and only if there are no roots outside the unit circle and there are some unrepeated roots on the unit circle.

# 3.9-3 Relationship Between BIBO and Asymptotic Stability

For LTID systems, the relation between the two types of stability is similar to those in LTIC systems. For a system specified by Eq. (3.15), we can readily show that if a characteristic root  $\gamma_k$ 

<sup>&</sup>lt;sup>†</sup> If the development of discrete-time systems is parallel to that of continuous-time systems, we wonder why the parallel breaks down here. Why, for instance, are LHP and RHP not the regions demarcating stability and instability? The reason lies in the form of the characteristic modes. In continuous-time systems, we chose the form of characteristic mode as  $e^{\lambda_i t}$ . In discrete-time systems, for computational convenience, we choose the form to be  $\gamma_i^n$ . Had we chosen this form to be  $e^{\lambda_i n}$  where  $\gamma_i = e^{\lambda_i}$ , then the LHP and RHP (for the location of  $\lambda_i$ ) again would demarcate stability and instability. The reason is that if  $\gamma = e^{\lambda}$ ,  $|\gamma| = 1$  implies  $|e^{\lambda}| = 1$ , and therefore  $\lambda = j\omega$ . This shows that the unit circle in  $\gamma$  plane maps into the imaginary axis in the  $\lambda$  plane.

#### 302 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

is inside the unit circle, the corresponding mode  $\gamma_k^n$  is absolutely summable. In contrast, if  $\gamma_k$  lies outside the unit circle, or on the unit circle,  $\gamma_k^n$  is not absolutely summable.<sup>†</sup>

This means that an asymptotically stable system is BIBO-stable. Moreover, a marginally stable or asymptotically unstable system is BIBO-unstable. The converse is not necessarily true. The stability picture portrayed by the external description is of questionable value. BIBO (external) stability cannot ensure internal (asymptotic) stability, as the following example shows.

# EXAMPLE 3.26 A BIBO-Stable but Asymptotically Unstable System

An LTID systems consists of two subsystems  $S_1$  and  $S_2$  in cascade (Fig. 3.29). The impulse response of these systems are  $h_1[n]$  and  $h_2[n]$ , respectively, given by

 $h_1[n] = 4\delta[n] - 3(0.5)^n u[n]$  and  $h_2[n] = 2^n u[n]$ 

Investigate the BIBO and asymptotic stability of the composite system.



The composite system impulse response h[n] is given by

$$h[n] = h_1[n] * h_2[n] = h_2[n] * h_1[n] = 2^n u[n] * (4\delta[n] - 3(0.5)^n u[n])$$
  
= 4(2)<sup>n</sup>u[n] - 3  $\left[\frac{2^{n+1} - (0.5)^{n+1}}{2 - 0.5}\right] u[n]$   
= (0.5)<sup>n</sup>u[n]

If the composite cascade system were to be enclosed in a black box with only the input and the output terminals accessible, any measurement from these external terminals would show that the impulse response of the system is  $(0.5)^n u[n]$ , without any hint of the unstable system sheltered inside the composite system.

<sup>†</sup> This conclusion follows from the fact that (see Sec. B.8-3)

$$\sum_{n=-\infty}^{\infty} |\gamma_k^n| u[n] = \sum_{n=0}^{\infty} |\gamma_k|^n = \frac{1}{1 - |\gamma_k|} \qquad |\gamma_k| < 1$$

Moreover, if  $|\gamma| \ge 1$ , the sum diverges and goes to  $\infty$ . These conclusions are valid also for the modes of the form  $n^r \gamma_k^n$ .

The composite system is BIBO-stable because its impulse response  $(0.5)^n u[n]$  is absolutely summable. However, the system  $S_2$  is asymptotically unstable because its characteristic root, 2, lies outside the unit circle. This system will eventually burn out (or saturate) because of the unbounded characteristic response generated by intended or unintended initial conditions, no matter how small.

The system is asymptotically unstable, though BIBO-stable. This example shows that BIBO stability does not necessarily ensure asymptotic stability when a system is uncontrollable, unobservable, or both. The internal and the external descriptions of a system are equivalent only when the system is controllable and observable. In such a case, BIBO stability means the system is asymptotically stable, and vice versa.

Fortunately, uncontrollable or unobservable systems are not common in practice. Henceforth, in determining system stability, we shall assume that unless otherwise mentioned, the internal and the external descriptions of the system are equivalent, implying that the system is controllable and observable.

# EXAMPLE 3.27 Investigating Asymptotic and BIBO Stability

Determine the internal and external stability of systems specified by the following equations. In each case plot the characteristic roots in the complex plane.

- (a) y[n+2] + 2.5y[n+1] + y[n] = x[n+1] 2x[n]
- **(b)** y[n] y[n-1] + 0.21y[n-2] = 2x[n-1] + 3x[n-2]
- (c)  $y[n+3] + 2y[n+2] + \frac{3}{2}y[n+1] + \frac{1}{2}y[n] = x[n+1]$
- (d)  $(E^2 E + 1)^2 y[n] = (3E + 1)x[n]$

(a) The characteristic polynomial is

$$\gamma^{2} + 2.5\gamma + 1 = (\gamma + 0.5)(\gamma + 2)$$

The characteristic roots are -0.5 and -2. Because |-2| > 1 (-2 lies outside the unit circle), the system is BIBO-unstable and also asymptotically unstable (Fig. 3.30a).

(b) The characteristic polynomial is

$$\gamma^2 - \gamma + 0.21 = (\gamma - 0.3)(\gamma - 0.7)$$

The characteristic roots are 0.3 and 0.7, both of which lie inside the unit circle. The system is BIBO-stable and asymptotically stable (Fig. 3.30b).

(c) The characteristic polynomial is

$$\gamma^{3} + 2\gamma^{2} + \frac{3}{2}\gamma + \frac{1}{2} = (\gamma + 1)(\gamma^{2} + \gamma + \frac{1}{2}) = (\gamma + 1)(\gamma + 0.5 - j0.5)(\gamma + 0.5 + j0.5)$$


### 304 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

The characteristic roots are  $-1, -0.5 \pm j0.5$  (Fig. 3.30c). One of the characteristic roots is on the unit circle and the remaining two roots are inside the unit circle. The system is BIBO-unstable but marginally stable.

(d) The characteristic polynomial is

$$(\gamma^2 - \gamma + 1)^2 = \left(\gamma - \frac{1}{2} - j\frac{\sqrt{3}}{2}\right)^2 \left(\gamma - \frac{1}{2} + j\frac{\sqrt{3}}{2}\right)^2$$

The characteristic roots are  $(1/2) \pm j(\sqrt{3}/2) = 1e^{\pm j(\pi/3)}$  repeated twice, and they lie on the unit circle (Fig. 3.30d). The system is BIBO-unstable and asymptotically unstable.

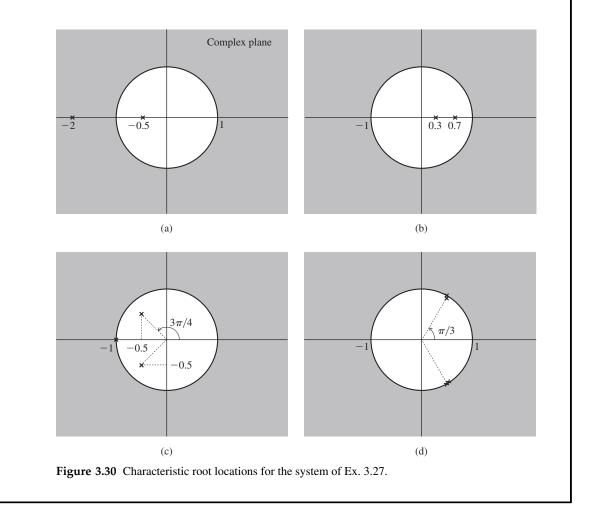

## DRILL 3.21 Assessing Stability by Characteristic Roots

Using the complex plane, locate the characteristic roots of the following systems, and use the characteristic root locations to determine external and internal stability of each system.

(a)  $(E+1)(E^2+6E+25)y[n] = 3Ex[n]$ 

**(b)**  $(E-1)^2(E+0.5)y[n] = (E^2+2E+3)x[n]$ 

### ANSWERS

Both systems are BIBO-and asymptotically unstable.

# **3.10** Intuitive Insights into System Behavior

The intuitive insights into the behavior of continuous-time systems and their qualitative proofs, discussed in Sec. 2.6, also apply to discrete-time systems. For this reason, we shall merely mention here without discussion some of the insights presented in Sec. 2.6.

The system's entire (zero-input and zero-state) behavior is strongly influenced by the characteristic roots (or modes) of the system. The system responds strongly to input signals similar to its characteristic modes and poorly to inputs very different from its characteristic modes. In fact, when the input is a characteristic mode of the system, the response goes to infinity, provided the mode is a nondecaying signal. This is the resonance phenomenon. The width of an impulse response h[n] indicates the response time (time required to respond fully to an input) of the system. It is the time constant of the system. The amount of dispersion (or spreading out) is equal to the system time constant (or width of h[n]). The system time constant also determines the rate at which the system can transmit information. A smaller time constant corresponds to a higher rate of information transmission, and vice versa. We keep in mind that concepts such as time constant and pulse dispersion only coarsely illustrate system behavior. Let us illustrate these ideas with an example.

## **EXAMPLE 3.28** Intuitive Insights into Lowpass DT System Behavior

Determine the time constant, rise time, pulse dispersion, and filter characteristics of a lowpass DT system with impulse response  $h[n] = 2(0.6)^n u[n]$ .

<sup>&</sup>lt;sup>†</sup> This part of the discussion applies to systems with impulse response h[n] that is a mostly positive (or mostly negative) pulse.

#### 306 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

Since h[n] resembles a single, mostly positive pulse, we know that the DT system is lowpass. Similar to the CT case shown in Sec. 2.6, we can determine the time constant  $T_h$  as the width of a rectangle that approximates h[n]. This rectangle possesses the same peak height and total sum (area), as does h[n]. The peak of h[n] is 2, and the total sum (area) is

$$\sum_{n=0}^{\infty} 2(0.6)^n = 2\frac{1-0}{1-0.6} = 5$$

Since the width of a DT signal is 1 less than its length, we see that the time constant  $T_h$  (rectangle width) is

$$T_h = \text{rectangle width} = \frac{\text{area}}{\text{height}} - 1 = \frac{5}{2} - 1 = 1.5 \text{ samples}$$

Since time constant, rise time, pulse dispersion are all given by the same value, we see that

time constant = rise time = pulse dispersion =  $T_h = 1.5$  samples

The approximate cutoff frequency of our DT system can be determined as the frequency of a DT sinusoid whose period equals the length of the rectangle approximation to h[n]. That is,

cutoff frequency = 
$$\frac{1}{T_h + 1} = \frac{2}{5}$$
 cycles/sample

Equivalently, we can express the cutoff frequency as  $4\pi/5$  radians/sample.

Notice that  $T_h$  is not an integer and thus lacks a clear physical meaning for our DT system. How, for example, can it take 1.5 samples for our DT system to fully respond to an input? We can put our minds at ease by remembering the approximate nature of  $T_h$ , which is meant to provide only a rough understanding of system behavior.

# **3.11 MATLAB: DISCRETE-TIME SIGNALS AND SYSTEMS**

MATLAB is naturally and ideally suited to discrete-time signals and systems. Many special functions are available for discrete-time data operations, including the stem, filter, and conv commands. In this section, we investigate and apply these and other commands.

# 3.11-1 Discrete-Time Functions and Stem Plots

Consider the discrete-time function  $f[n] = e^{-n/5} \cos(\pi n/5)u[n]$ . In MATLAB, there are many ways to represent f[n] including M-files or, for particular *n*, explicit command line evaluation. In this example, however, we use an anonymous function.

>> f = @(n) exp(-n/5).\*cos(pi\*n/5).\*(n>=0);

A true discrete-time function is undefined (or zero) for noninteger n. Although anonymous function f is intended as a discrete-time function, its present construction does not restrict n to be integer, and it can therefore be misused. For example, MATLAB dutifully returns 0.8606 to f(0.5) when a NaN (not-a-number) or zero is more appropriate. The user is responsible for appropriate function use.

Next, consider plotting the discrete-time function f[n] over  $(-10 \le n \le 10)$ . The stem command simplifies this task.

```
>> n = (-10:10)';
>> stem(n,f(n),'k');
>> xlabel('n'); ylabel('f[n]');
```


Here, stem operates much like the plot command: dependent variable f(n) is plotted against independent variable n with black lines. The stem command emphasizes the discrete-time nature of the data, as Fig. 3.31 illustrates.

For discrete-time functions, the operations of shifting, inversion, and scaling can have surprising results. Compare f[-2n] with f[-2n+1]. Contrary to the continuous case, the second is not a shifted version of the first. We can use separate subplots, each over  $(-10 \le n \le 10)$ , to help illustrate this fact. Notice that unlike the plot command, the stem command cannot simultaneously plot multiple functions on a single axis; overlapping stem lines would make such plots difficult to read anyway.

```
>> subplot(2,1,1); stem(n,f(-2*n),'k'); ylabel('f[-2n]');
>> subplot(2,1,2); stem(n,f(-2*n+1),'k'); ylabel('f[-2n+1]'); xlabel('n');
```


The results are shown in Fig. 3.32. Interestingly, the original function f[n] can be recovered by interleaving samples of f[-2n] and f[-2n+1] and then time-reflecting the result.

Care must always be taken to ensure that MATLAB performs the desired computations. Our anonymous function f is a case in point: although it correctly downsamples, it does not properly upsample (see Prob. 3.11-2). MATLAB does what it is told, but it is not always told how to do everything correctly!

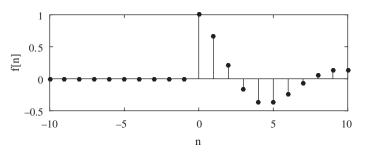

**Figure 3.31** f[n] over  $(-10 \le n \le 10)$ .

308

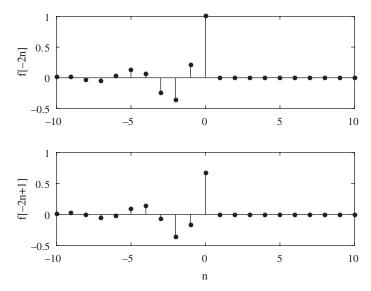

**Figure 3.32** f[-2n] and f[-2n+1] over  $(-10 \le n \le 10)$ .

# 3.11-2 System Responses Through Filtering

MATLAB's filter command provides an efficient way to evaluate the system response of a constant coefficient linear difference equation represented in delay form as


$$\sum_{k=0}^{N} a_k y[n-k] = \sum_{k=0}^{N} b_k x[n-k]$$
(3.44)

In the simplest form, filter requires three input arguments: a length-(N + 1) vector of feedforward coefficients  $[b_0, b_1, \ldots, b_N]$ , a length-(N + 1) vector of feedback coefficients  $[a_0, a_1, \ldots, a_N]$ , and an input vector.<sup>†</sup> Since no initial conditions are specified, the output corresponds to the system's zero-state response.


To serve as an example, consider a system described by y[n] - y[n-1] + y[n-2] = x[n]. When  $x[n] = \delta[n]$ , the zero-state response is equal to the impulse response h[n], which we compute over  $(0 \le n \le 30)$ .

>> b = [1 0 0]; a = [1 -1 1]; >> n = (0:30)'; delta = @(n) 1.0.\*(n==0); >> h = filter(b,a,delta(n)); >> clf; stem(n,h,'k'); axis([-.5 30.5 -1.1 1.1]); >> xlabel('n'); ylabel('h[n]');

<sup>&</sup>lt;sup>†</sup> It is important to pay close attention to the inevitable notational differences found throughout engineering documents. In MATLAB help documents, coefficient subscripts begin at 1 rather than 0 to better conform with MATLAB indexing conventions. That is, MATLAB labels  $a_0$  as a(1),  $b_0$  as b(1), and so forth.

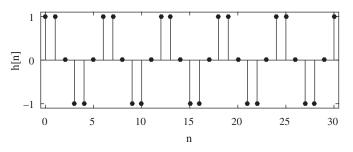

**Figure 3.33** h[n] for y[n] - y[n-1] + y[n-2] = x[n].

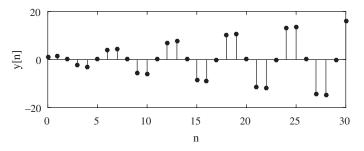

**Figure 3.34** Resonant zero-state response y[n] for  $x[n] = \cos(2\pi n/6)u[n]$ .

As shown in Fig. 3.33, h[n] appears to be  $(N_0 = 6)$ -periodic for  $n \ge 0$ . Since periodic signals are not absolutely summable,  $\sum_{n=-\infty}^{\infty} |h[n]|$  is not finite and the system is not BIBO-stable. Furthermore, the sinusoidal input  $x[n] = \cos(2\pi n/6)u[n]$ , which is  $(N_0 = 6)$ -periodic for  $n \ge 0$ , should generate a resonant zero-state response.


```
>> x = @(n) cos(2*pi*n/6).*(n>=0);
>> y = filter(b,a,x(n));
>> stem(n,y,'k'); xlabel('n'); ylabel('y[n]');
```

The response's linear envelope, shown in Fig. 3.34, confirms a resonant response. The characteristic equation of the system is  $\gamma^2 - \gamma + 1$ , which has roots  $\gamma = e^{\pm j\pi/3}$ . Since the input  $x[n] = \cos(2\pi n/6)u[n] = (1/2)(e^{j\pi n/3} + e^{-j\pi n/3})u[n]$  coincides with the characteristic roots, a resonant response is guaranteed.

By adding initial conditions, the filter command can also compute a system's zero-input response and total response. Continuing the preceding example, consider finding the zero-input response for y[-1] = 1 and y[-2] = 2 over  $(0 \le n \le 30)$ .

```
>> z_i = filtic(b,a,[1 2]);
```

- >> y\_0 = filter(b,a,zeros(size(n)),z\_i);
- >> stem(n,y\_0,'k'); xlabel('n'); ylabel('y\_{0} [n]');
- >> axis([-0.5 30.5 -2.1 2.1]);

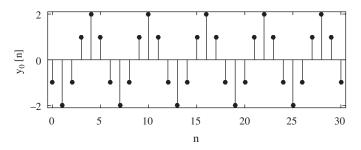

**Figure 3.35** Zero-input response  $y_0[n]$  for y[-1] = 1 and y[-2] = 2.

There are many physical ways to implement a particular equation. MATLAB implements Eq. (3.44) by using the popular direct form II transposed structure.<sup>†</sup> Consequently, initial conditions must be compatible with this implementation structure. The signal-processing toolbox function filtic converts the traditional y[-1], y[-2], ..., y[-N] initial conditions for use with the filter command. An input of zero is created with the zeros command. The dimensions of this zero input are made to match the vector n by using the size command. Finally, \_{ } forces subscript text in the graphics window, and ~{ } forces superscript text. The results are shown in Fig. 3.35.

Given y[-1] = 1 and y[-2] = 2 and an input  $x[n] = \cos(2\pi n/6)u[n]$ , the total response is easy to obtain with the filter command.

Summing the zero-state and zero-input response gives the same result. Computing the total absolute error provides a check.

```
>> sum(abs(y_total-(y + y_0)))
ans = 1.8430e-014
```

Within computer round-off, both methods return the same sequence.

# 3.11-3 A Custom Filter Function

The filtic command is available only if the signal-processing toolbox is installed. To accommodate installations without the signal-processing toolbox and to help develop your MATLAB skills, consider writing a function similar in syntax to filter that directly uses the ICs y[-1], y[-2], ..., y[-N]. Normalizing  $a_0 = 1$  and solving Eq. (3.44) for y[n] yield

$$y[n] = \sum_{k=0}^{N} b_k x[n-k] - \sum_{k=1}^{N} a_k y[n-k]$$

This recursive form provides a good basis for our custom filter function.

<sup>&</sup>lt;sup>†</sup> Implementation structures, such as direct form II transposed, are discussed in Ch. 4.

```
function [y] = CH3MP1(b,a,x,yi);
% CH3MP1.m : Chapter 3, MATLAB Program 1
% Function M-file filters data x to create y
            b = vector of feedforward coefficients
% INPUTS:
%
            a = vector of feedback coefficients
%
            x = input data vector
%
            yi = vector of initial conditions [y[-1], y[-2], ...]
% OUTPUTS:
           y = vector of filtered output data
yi = flipud(yi(:)); % Properly format IC's.
y = [yi;zeros(length(x),1)]; % Preinitialize y, beginning with IC's.
x = [zeros(length(yi),1);x(:)]; % Append x with zeros to match size of y.
b = b/a(1); a = a/a(1); % Normalize coefficients.
for n = length(yi)+1:length(y),
    for nb = 0:length(b)-1,
        y(n) = y(n) + b(nb+1)*x(n-nb); % Feedforward terms.
    end
    for na = 1:length(a)-1,
        y(n) = y(n) - a(na+1)*y(n-na); % Feedback terms.
    end
end
y = y(length(yi)+1:end); % Strip off IC's for final output.
```

Most instructions in CH3MP1 have been discussed; now we turn to the flipud instruction. The flip up-down command flipud reverses the order of elements in a column vector. Although not used here, the flip left-right command fliplr reverses the order of elements in a row vector. Note that typing help *filename* displays the first contiguous set of comment lines in an M-file. Thus, it is good programming practice to document M-files, as in CH3MP1, with an initial block of clear comment lines.

As an exercise, the reader should verify that CH3MP1 correctly computes the impulse response h[n], the zero-state response y[n], the zero-input response  $y_0[n]$ , and the total response  $y[n] + y_0[n]$ .

# 3.11-4 Discrete-Time Convolution

Convolution of two finite-duration discrete-time signals is accomplished by using the conv command. For example, the discrete-time convolution of two length-4 rectangular pulses, g[n] = (u[n] - u[n-4]) \* (u[n] - u[n-4]), is a length-(4+4-1=7) triangle. Representing u[n] - u[n-4] by the vector [1, 1, 1, 1], the convolution is computed by

>> conv([1 1 1 1],[1 1 1 1]) ans = 1 2 3 4 3 2 1

Notice that (u[n+4] - u[n]) \* (u[n] - u[n-4]) is also computed by conv([1 1 1 1], [1 1 1]) and obviously yields the same result. The difference between these two cases is the regions of support:  $(0 \le n \le 6)$  for the first and  $(-4 \le n \le 2)$  for the second. Although the conv command

does not compute the region of support, it is relatively easy to obtain. If vector w begins at  $n = n_w$ and vector v begins at  $n = n_v$ , then conv(w,v) begins at  $n = n_w + n_v$ .

In general, the conv command cannot properly convolve infinite-duration signals. This is not too surprising, since computers themselves cannot store an infinite-duration signal. For special cases, however, conv can correctly compute a portion of such convolution problems. Consider the common case of convolving two causal signals. By passing the first N samples of each, conv returns a length-(2N - 1) sequence. The first N samples of this sequence are valid; the remaining N - 1 samples are not.

To illustrate this point, reconsider the zero-state response y[n] over  $(0 \le n \le 30)$  for system y[n] - y[n-1] + y[n-2] = x[n] given input  $x[n] = \cos(2\pi n/6)u[n]$ . The results obtained by using a filtering approach are shown in Fig. 3.34.

The response can also be computed using convolution according to y[n] = h[n] \* x[n]. The impulse response of this system is<sup>†</sup>

$$h[n] = \left\{ \cos(\pi n/3) + \frac{1}{\sqrt{3}}\sin(\pi n/3) \right\} u[n]$$


Both h[n] and x[n] are causal and have infinite duration, so conv can be used to obtain a portion of the convolution.

```
>> u = @(n) 1.0.*(n>=0); h = @(n) (cos(pi*n/3)+sin(pi*n/3)/sqrt(3)).*u(n);
>> y = conv(h(n),x(n));
>> stem([0:60],y,'k'); xlabel('n'); ylabel('y[n]');
```

The conv output is fully displayed in Fig. 3.36. As expected, the results are correct over  $(0 \le n \le 30)$ . The remaining values are clearly incorrect; the output envelope should continue to grow, not decay. Normally, these incorrect values are not displayed.

>> stem(n,y(1:31),'k'); xlabel('n'); ylabel('y[n]');

The resulting plot is identical to Fig. 3.34.

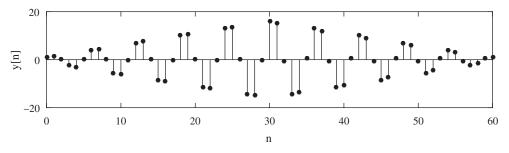

**Figure 3.36** y[n] for  $x[n] = \cos(2\pi n/6)u[n]$  computed with conv.

<sup>&</sup>lt;sup>†</sup> Techniques to analytically determine h[n] are presented in Ch. 5.

# **3.12 APPENDIX: IMPULSE RESPONSE** FOR A SPECIAL CASE

When  $a_N = 0$ ,  $A_0 = b_N/a_N$  becomes indeterminate, and the procedure needs to be modified slightly. When  $a_N = 0$ , Q[E] can be expressed as  $E\hat{Q}[E]$ , and Eq. (3.26) can be expressed as

$$E\hat{Q}[E]h[n] = P[E]\delta[n] = P[E]\{E\delta[n-1]\} = EP[E]\delta[n-1]$$

Hence,

$$\hat{Q}[E]h[n] = P[E]\delta[n-1]$$

In this case the input vanishes not for  $n \ge 1$ , but for  $n \ge 2$ . Therefore, the response consists not only of the zero-input term and an impulse  $A_0\delta[n]$  (at n = 0), but also of an impulse  $A_1\delta[n-1]$  (at n = 1). Therefore,

$$h[n] = A_0\delta[n] + A_1\delta[n-1] + y_c[n]u[n]$$

We can determine the unknowns  $A_0, A_1$ , and the N - 1 coefficients in  $y_c[n]$  from the N + 1 number of initial values  $h[0], h[1], \ldots, h[N]$ , determined as usual from the iterative solution of the equation  $Q[E]h[n] = P[E]\delta[n]$ .<sup>†</sup> Similarly, if  $a_N = a_{N-1} = 0$ , we need to use the form  $h[n] = A_0\delta[n] + A_1\delta[n-1] + A_2\delta[n-2] + y_c[n]u[n]$ . The N + 1 unknown constants are determined from the N + 1 values  $h[0], h[1], \ldots, h[N]$ , determined iteratively, and so on.

# 3.13 SUMMARY

This chapter discusses time-domain analysis of LTID (linear, time-invariant, discrete-time) systems. The analysis is parallel to that of LTIC systems, with some minor differences. Discrete-time systems are described by difference equations. For an *N*th-order system, *N* auxiliary conditions must be specified for a unique solution. Characteristic modes are discrete-time exponentials of the form  $\gamma^n$  corresponding to an unrepeated root  $\gamma$ , and the modes are of the form  $n^i \gamma^n$  corresponding to a repeated root  $\gamma$ .

The unit impulse function  $\delta[n]$  is a sequence of a single number of unit value at n = 0. The unit impulse response h[n] of a discrete-time system is a linear combination of its characteristic modes.<sup>‡</sup>

The zero-state response (response due to external input) of a linear system is obtained by breaking the input into impulse components and then adding the system responses to all the impulse components. The sum of the system responses to the impulse components is in the form of a sum, known as the convolution sum, whose structure and properties are similar to the convolution integral. The system response is obtained as the convolution sum of the input x[n] with the system's impulse response h[n]. Therefore, the knowledge of the system's impulse response allows us to determine the system response to any arbitrary input.

LTID systems have a very special relationship to the everlasting exponential signal  $z^n$  because the response of an LTID system to such an input signal is the same signal within a multiplicative

<sup>&</sup>lt;sup>†</sup> $\hat{Q}[\gamma]$  is now an (N-1)-order polynomial. Hence there are only N-1 unknowns in  $y_c[n]$ .

<sup>&</sup>lt;sup>‡</sup> There is a possibility of an impulse  $\delta[n]$  in addition to characteristic modes.

#### 314 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

constant. The response of an LTID system to the everlasting exponential input  $z^n$  is  $H[z]z^n$ , where H[z] is the transfer function of the system.

The external stability criterion, the bounded-input/bounded-output (BIBO) stability criterion, states that a system is stable if and only if every bounded input produces a bounded output. Otherwise the system is unstable.

The internal stability criterion can be stated in terms of the location of characteristic roots of the system as follows:

- An LTID system is asymptotically stable if and only if all the characteristic roots are inside the unit circle. The roots may be repeated or unrepeated.
- 2. An LTID system is unstable if and only if either one or both of the following conditions exist: (i) at least one root is outside the unit circle; (ii) there are repeated roots on the unit circle.
- 3. An LTID system is marginally stable if and only if there are no roots outside the unit circle and some unrepeated roots on the unit circle.

An asymptotically stable system is always BIBO-stable. The converse is not necessarily true.

# PROBLEMS

- **3.1-1** Find the energy of the signals depicted in Fig. P3.1-1.
- **3.1-2** Find the power of the signals illustrated in Fig. P3.1-2.
- **3.1-3** Show that the power of a signal  $\mathcal{D}e^{j(2\pi/N_0)n}$  is  $|\mathcal{D}|^2$ . Hence, show that the power of a signal  $x[n] = \sum_{r=0}^{N_0-1} \mathcal{D}_r e^{jr(2\pi/N_0)n}$  is  $P_x = \sum_{r=0}^{N_0-1} |\mathcal{D}_r|^2$ . Use the fact that

$$\sum_{k=0}^{N_0-1} e^{j(r-m)2\pi k/N_0} = \begin{cases} N_0 & r=m\\ 0 & \text{otherwise} \end{cases}$$

- **3.1-4** (a) Determine even and odd components of the signal  $x[n] = (0.8)^n u[n]$ .
  - (b) Show that the energy of x[n] is the sum of energies of its odd and even components found in part (a).
  - (c) Generalize the result in part (b) for any finite energy signal.
- 3.1-5 (a) If  $x_e[n]$  and  $x_o[n]$  are the even and the odd components of causal energy signal x[n], then determine  $E_{x_e}$  and  $E_{x_0}$ , and show that  $E_{x_e} + E_{x_0} = E_x$ .
  - (b) Show that the cross-energy of  $x_e$  and  $x_o$  is zero, that is,

$$\sum_{n=-\infty}^{\infty} x_e[n] x_o[n] = 0$$

3.1-6 Define

$$x[n] = \begin{cases} \left(\frac{1}{3}\right)^n & n \ge 0\\ A^n & n < 0 \end{cases}$$

- (a) Determine the energy  $E_x$  and power  $P_x$  of x[n] if  $A = \frac{1}{2}$ .
- (b) Determine the energy E<sub>x</sub> and power P<sub>x</sub> of x[n] if A = 1.
- (c) Determine the energy  $E_x$  and power  $P_x$  of x[n] if A = 2.
- **3.1-7** Determine the energy  $E_x$  and power  $P_x$  of the complex DT signal  $x[n] = \text{Re} \left\{ 3(e^{j\pi/4})^n \right\}$
- **3.2-1** If the energy of a signal x[n] is  $E_x$ , then find the energy of the following:
  - (a) x[-n]
  - (b) x[n-m]
  - (c) x[m-n]
  - (d) Kx[n] (*m* integer and *K* constant)
- **3.2-2** If the power of a periodic signal x[n] is  $P_x$ , find and comment on the powers and the rms values of the following:
  - (a) -x[n]
  - (b) *x*[−*n*]
  - (c) x[n-m] (*m* integer)
  - (d) *cx*[*n*]
  - (e) x[m-n] (*m* integer)

Problems 315

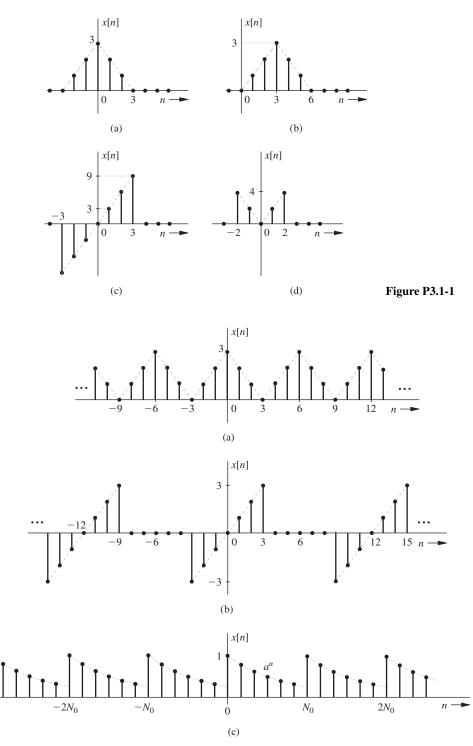


Figure P3.1-2

- Letting  $\downarrow$  identify n = 0, define the nonzero 3.2-3 2, -1].
  - (a) Using vector form, represent signal y[n] =x[-3n+2]. Be sure to identify the n=0element.
  - (b) Using vector form, represent signal z[n] =x[n/2 - 3]. Be sure to identify the n = 0element.
- **3.2-4** Letting  $\downarrow$  identify n = 0, define the nonzero values of signal x[n] as [-1,2], -3, 4, -5, 4, -3, 2, -1].
  - (a) Determine the energy  $E_x$  and power  $P_x$  of the signal x[n].
  - (b) Using vector form, represent signal y[n] =x[2(n+2)]. Be sure to identify the n=0element.
  - (c) Using vector form, represent signal z[n] = $x\left[-\frac{n-6}{3}\right]$ . Be sure to identify the n = 0element.
- **3.2-5** Letting  $\downarrow$  identify the n = 0 value, describe a 4-periodic signal w[n] using vector notation as
  - $[\cdots, 1, 2, 3, 4, 1, 2, 3, 4, 1, 2, 3, 4, \cdots].$
  - (a) Determine the energy  $E_x$  and power  $P_x$  of signal x[n] = w[2n].
  - (b) Determine the energy  $E_v$  and power  $P_v$  of signal  $y[n] = w[2 - \frac{n}{3}]$ .
- 3.2-6 Let DT signal x[n] have values [1, 2, 3, 4, 5, 6]for  $0 \le n \le 5$  and let DT signal y[n] have values [5, 0, 0, 3, 0, 0, 1] for  $0 \le n \le 6$ . Both signals are zero outside the ranges given. Further, define a 6-periodic replication of y[n] as  $\tilde{y}[n] = \sum_{k=-\infty}^{\infty} y[n-6k]$ .
  - (a) Determine the energy  $E_x$  and power  $P_x$  of signal x[n].
  - (b) Determine the smallest-magnitude integers  $N_1, N_2$ , and  $N_3$  such that  $y[n] = x[\frac{N_1n}{N_2} + N_3]$ . (c) Determine the energy  $E_{\tilde{y}}$  and power  $P_{\tilde{y}}$  of
  - $\tilde{y}[n]$ .
- 3.2-7 For the signal shown in Fig. P3.1-1b, sketch the following signals:
  - (a) x[-n]
  - (b) x[n+6]
  - (c) x[n-6]
  - (d) *x*[3*n*]
  - (e)  $x\left[\frac{n}{3}\right]$
  - (f) x[3-n]

- 3.2-8 Repeat Prob. 3.2-7 for the signal depicted in Fig. P3.1-1c.
- Letting  $\downarrow$  identify n = 0, consider a DT 3.2-9 signal x[n] whose nonzero values are given as x[n] = [1, -3, 2, 2, 3, -2, -1, 1, 2, -3,3, 3, -2, 1, -3, 2, 3, -1]. Accurately sketch y[n] = x[-1-2n] and z[n] = x[-2+n/3] over -5 < n < 4.
- 3.2-10 Define

$$x[n] = \begin{cases} \left(\frac{1}{2}\right)^n & n \ge 0\\ 0 & n < 0 \end{cases}$$

Determine and locate the two largest non-zero values of:

- (a)  $y_a[n] = x[2n]$
- (b)  $y_b[n] = x[n/3]$
- (c)  $y_c[n] = x[3n+1]$
- (d)  $y_d[n] = x[-2n+5]$
- (e)  $y_e[n] = x[-(n+8)/2]$
- 3.3-1 Sketch, and find the power of, the following signals:
  - (a)  $(1)^n$
  - (b)  $(-1)^n$
  - (c) u[n]
  - (d)  $(-1)^n u[n]$
  - (e)  $\cos\left[\frac{\pi}{3}n + \frac{\pi}{6}\right]$
- 3.3-2 Show that
  - (a)  $\delta[n] + \delta[n-1] = u[n] u[n-2]$
  - (b)  $2^{n-1}\sin\left(\frac{\pi n}{3}\right)u[n] = \frac{1}{2}2^n\sin\left(\frac{\pi n}{3}\right)u[n-1]$

  - (c)  $n(n-1)\gamma^{n}u[n] = n(n-1)\gamma^{n}u[n-2]$ (d)  $(u[n] + (-1)^{n}u[n])\sin\left(\frac{\pi n}{2}\right) = 0$  for all n

(e) 
$$(u[n] + (-1)^{n+1}u[n]) \cos\left(\frac{\pi n}{2}\right) = 0$$
 for all  $n$ 

- Sketch the following signals: 3.3-3
  - (a) u[n-2] u[n-6]
    - (b)  $n\{u[n] u[n-7]\}$
    - (c)  $(n-2)\{u[n-2] u[n-6]\}$
    - (d)  $(-n+8)\{u[n-6]-u[n-9]\}$
    - (e)  $(n-2)\{u[n-2]-u[n-6]\}+(-n+8)\{u[$ 6] - u[n - 9]
- Describe each of the signals in Fig. P3.1-1 by a 3.3-4 single expression valid for all *n*.
- 3.3-5 Why are DT signals of the form  $z^n$  so important to the study of LTID systems?
- 3.3-6 Explain the similarities and differences between the Kronecker delta function  $\delta[n]$  and the Dirac delta function  $\delta(t)$ .

- 3.3-7 The following signals are in the form  $e^{\lambda n}$ . Express them in the form  $\gamma^n$ :
  - (a)  $e^{-0.5n}$
  - (b)  $e^{0.5n}$
  - (c)  $e^{-j\pi n}$
  - (d)  $e^{j\pi n}$

In each case show the locations of  $\lambda$  and  $\gamma$  in the complex plane. Verify that an exponential is growing if  $\gamma$  lies outside the unit circle (or if  $\lambda$ lies in the RHP), is decaying if  $\gamma$  lies within the unit circle (or if  $\lambda$  lies in the LHP), and has a constant amplitude if  $\gamma$  lies on the unit circle (or if  $\lambda$  lies on the imaginary axis).

- 3.3-8 Express the following signals, which are in the form  $e^{\lambda n}$ , in the form  $\gamma^n$ :
  - (a)  $e^{-(1+j\pi)n}$
  - (b)  $e^{-(1-j\pi)n}$
  - (c)  $e^{(1+j\pi)n}$
  - (d)  $e^{(1-j\pi)n}$
  - (e)  $e^{-[1+j(\pi/3)]n}$
  - (f)  $e^{[1-j(\pi/3)]n}$
- 3.3-9 The concepts of even and odd functions for discrete-time signals are identical to those of the continuous-time signals discussed in Sec. 1.5. Using these concepts, find and sketch the odd and the even components of the following:
  - (a) u[n]
  - (b) *nu*[*n*]

  - (c)  $\sin\left(\frac{\pi n}{4}\right)$ (d)  $\cos\left(\frac{\pi n}{4}\right)$
- **3.4-1** A cash register output y[n] represents the total cost of *n* items rung up by a cashier. The input x[n] is the cost of the *n*th item.
  - (a) Write the difference equation relating y[n]to x[n].
  - (b) Realize this system using a time-delay element.
- **3.4-2** Let p[n] be the population of a certain country at the beginning of the *n*th year. The birth and death rates of the population during any year are 3.3 and 1.3%, respectively. If i[n] is the total number of immigrants entering the country during the *n*th year, write the difference equation relating p[n + 1], p[n], and i[n]. Assume that the immigrants enter the country throughout the year at a uniform rate.

- A moving average is used to detect a trend of 3.4-3 a rapidly fluctuating variable, such as the stock market average. A variable may fluctuate (up and down) daily, masking its long-term (secular) trend. We can discern the long-term trend by smoothing or averaging the past N values of the variable. For the stock market average, we may consider a 5-day moving average y[n] to be the mean of the past 5 days' market closing values  $x[n], x[n-1], \ldots, x[n-4].$ 
  - (a) Write the difference equation relating y[n]to the input x[n].
  - (b) Use time-delay elements to realize the 5-day moving-average filter.
- 3.4-4 The digital integrator in Ex. 3.9 is specified by

$$y[n] - y[n-1] = Tx[n]$$

If an input u[n] is applied to such an integrator, show that the output is (n + 1)Tu[n], which approaches the desired ramp nTu[n] as  $T \rightarrow 0$ .

3.4-5 Approximate the following second-order differential equation with a difference equation.

$$\frac{d^2 y(t)}{dt^2} + a_1 \frac{dy(t)}{dt} + a_0 y(t) = x(t)$$

- Letting  $\downarrow$  identify n = 0, define the nonzero 3.4-6 values of signal g[n] in vector form as [1, 2, 3, 4, 5, 4, 3, 2, 1]. The impulse response of an LTID system is defined in terms of g[n] as h[n] = g[-2n-1].
  - (a) Express the nonzero values of h[n] in vector form, taking care to identify the n = 0 point.
  - (b) Write a constant-coefficient linear difference equation (input x[n] and output y[n]) that has impulse response h[n].
  - (c) Show that the system is both linear and time-invariant.
  - (d) Determine, if possible, whether the system is BIBO-stable.
  - (e) Determine, if possible, whether the system is memoryless.
  - (f) Determine, if possible, whether the system is causal.
- 3.4-7 An LTID system has an impulse response function h[n] = u[-(5-n)/3].
  - (a) Using an accurate sketch or vector representation, graphically depict h[n].

- (b) Determine, if possible, whether the system is BIBO-stable.
- (c) Determine, if possible, whether the system is memoryless.
- (d) Determine, if possible, whether the system is causal.
- **3.4-8** The voltage at the *n*th node of a resistive ladder in Fig. P3.4-8 is v[n], (n = 0, 1, 2, ..., N). Show that v[n] satisfies the second-order difference equation

$$v[n+2] - Av[n+1] + v[n] = 0$$
  $A = 2 + \frac{1}{a}$ 

[*Hint*: Consider the node equation at the *n*th node with voltage v[n].]

- **3.4-9** Determine whether each of the following statements is true or false. If the statement is false, demonstrate by proof or example why the statement is false. If the statement is true, explain why.
  - (a) A discrete-time signal with finite power cannot be an energy signal.

- (b) A discrete-time signal with infinite energy must be a power signal.
- (c) The system described by y[n] = (n+1)x[n] is causal.
- (d) The system described by y[n-1] = x[n] is causal.
- (e) If an energy signal *x*[*n*] has energy *E*, then the energy of *x*[*an*] is *E*/|*a*|.
- **3.4-10** A linear time-invariant system produces output  $y_1[n]$  in response to input  $x_1[n]$ , as shown in Fig. P3.4-10. Determine and sketch the output  $y_2[n]$  that results when input  $x_2[n]$  is applied to the same system.
- **3.4-11** A system is described by

$$y[n] = \frac{1}{2} \sum_{k=-\infty}^{\infty} x[k] (\delta[n-k] + \delta[n+k])$$

- (a) Explain what this system does.
- (b) Is the system BIBO-stable? Justify your answer.
- (c) Is the system linear? Justify your answer.

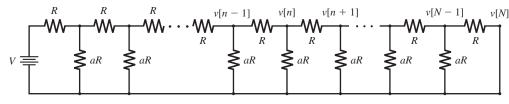


Figure P3.4-8

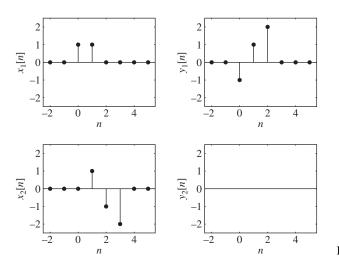


Figure P3.4-10

- (d) Is the system memoryless? Justify your answer.
- (e) Is the system causal? Justify your answer.
- (f) Is the system time-invariant? Justify your answer.
- **3.4-12** A discrete-time system is given by

$$y[n+1] = \frac{x[n]}{x[n+1]}$$

- (a) Is the system BIBO-stable? Justify your answer.
- (b) Is the system memoryless? Justify your answer.
- (c) Is the system causal? Justify your answer.
- **3.4-13** Explain why the continuous-time system y(t) = x(2t) is always invertible and yet the corresponding discrete-time system y[n] = x[2n] is not invertible.
- **3.4-14** Consider the input–output relationships of two similar discrete-time systems:

$$y_1[n] = \sin\left(\frac{\pi}{2}n + 1\right)x[n]$$

and

$$y_2[n] = \sin\left(\frac{\pi}{2}(n+1)\right)x[n]$$

Explain why x[n] can be recovered from  $y_1[n]$  yet x[n] cannot be recovered from  $y_2[n]$ .

- **3.4-15** Consider a system that multiplies a given input by a ramp function, r[n]. That is, y[n] = x[n]r[n].
  - (a) Is the system BIBO-stable? Justify your answer.
  - (b) Is the system linear? Justify your answer.
  - (c) Is the system memoryless? Justify your answer.
  - (d) Is the system causal? Justify your answer.
  - (e) Is the system time-invariant? Justify your answer.
- **3.4-16** A jet-powered car is filmed using a camera operating at 60 frames per second. Let variable *n* designate the film frame, where n = 0 corresponds to engine ignition (film before ignition is discarded). By analyzing each frame of the film, it is possible to determine the car position x[n], measured in meters, from the original starting position x[0] = 0.

From physics, we know that velocity is the time derivative of position:

$$v(t) = \frac{d}{dt}x(t)$$

Furthermore, we know that acceleration is the time derivative of velocity:

$$a(t) = \frac{d}{dt}v(t)$$

We can estimate the car velocity from the film data by using a simple difference equation v[n] = k(x[n] - x[n-1]).

- (a) Determine the appropriate constant k to ensure v[n] has units of meters per second.
- (b) Determine a standard-form constant coefficient difference equation that outputs an estimate of acceleration, *a*[*n*], using an input of position, *x*[*n*]. Identify the advantages and shortcomings of estimating acceleration *a*(*t*) with *a*[*n*]. What is the impulse response *h*[*n*] for this system?
- **3.5-1** An LTID system is described by a constant coefficient linear difference equation 2y[n] + 2y[n-1] = x[n-1].
  - (a) Express this system in standard advance operator form.
  - (b) Using recursion, determine the first 5 values of the system impulse response *h*[*n*].
  - (c) Using recursion, determine the first 5 values of the system zero-state response to input x[n] = 2u[n].
  - (d) Using recursion, determine for  $(0 \le n \le 4)$ the system zero-input response if y[-1] = 1.
- **3.5-2** Solve recursively (first three terms only):
  - (a) y[n+1] 0.5y[n] = 0, with y[-1] = 10
  - (b) y[n+1] + 2y[n] = x[n+1], with  $x[n] = e^{-n}u[n]$  and y[-1] = 0
- **3.5-3** Solve the following equation recursively (first three terms only):

$$y[n] - 0.6y[n-1] - 0.16y[n-2] = 0$$

with

$$y[-1] = -25, y[-2] = 0.$$

**3.5-4** Solve recursively the second-order difference Eq. (3.6) for sales estimate (first three terms only), assuming y[-1] = y[-2] = 0 and x[n] = 100u[n].

**3.5-5** Solve the following equation recursively (first three terms only):

$$y[n+2] + 3y[n+1] + 2y[n] =$$
$$x[n+2] + 3x[n+1] + 3x[n]$$

with  $x[n] = (3)^n u[n]$ , y[-1] = 3, and y[-2] = 2

**3.5-6** Repeat Prob. 3.5-5 for

$$y[n] + 2y[n-1] + y[n-2] = 2x[n] - x[n-1]$$

with  $x[n] = (3)^{-n}u[n], y[-1] = 2$ , and y[-2] = 3.

- **3.6-1** Given  $y_0[-1] = 3$  and  $y_0[-2] = -1$ , determine the closed-form expression of the zero-input response  $y_0[n]$  of an LTID system described by the equation  $y[n] + \frac{1}{6}y[n-1] - \frac{1}{6}y[n-2] = \frac{1}{3}x[n]$  $+ \frac{2}{3}x[n-2].$
- 3.6-2 Solve

$$y[n+2] + 3y[n+1] + 2y[n] = 0$$

if 
$$y[-1] = 0$$
 and  $y[-2] = 1$ .

3.6-3 Solve

$$y[n+2] + 2y[n+1] + y[n] = 0$$

if 
$$y[-1] = 1$$
 and  $y[-2] = 1$ .

3.6-4 Solve

$$y[n+2] - 2y[n+1] + 2y[n] = 0$$

if y[-1] = 1 and y[-2] = 0.

**3.6-5** For the general *N*th-order difference Eq. (3.16), letting

$$a_1 = a_2 = \cdots = a_{N-1} = 0$$

results in a general causal Nth-order LTI nonrecursive difference equation

$$y[n] = b_0 x[n] + b_1 x[n-1] + \dots + b_N x[n-N]$$

Show that the characteristic roots for this system are zero—hence, that the zero-input response is zero. Consequently, the total response consists of the zero-state component only. **3.6-6** Leonardo Pisano Fibonacci, a famous thirteenthcentury mathematician, generated the sequence of integers

$$\{0, 1, 1, 2, 3, 5, 8, 13, 21, 34, \ldots\}$$

while addressing, oddly enough, a problem involving rabbit reproduction. An element of the Fibonacci sequence is the sum of the previous two.

- (a) Find the constant-coefficient difference equation whose zero-input response f[n] with auxiliary conditions f[1] = 0 and f[2] = 1 is a Fibonacci sequence. Given f[n] is the system output, what is the system input?
- (b) What are the characteristic roots of this system? Is the system stable?
- (c) Designating 0 and 1 as the first and second Fibonacci numbers, determine the fiftieth Fibonacci number. Determine the one thousandth Fibonacci number.
- 3.6-7 Find v[n], the voltage at the *n*th node of the resistive ladder depicted in Fig. P3.4-8, if V = 100 volts and a = 2. [*Hint* 1: Consider the node equation at the *n*th node with voltage v[n]. *Hint* 2: See Prob. 3.4-8 for the equation for v[n]. The auxiliary conditions are v[0] = 100 and v[N] = 0.]
- **3.6-8** Consider the discrete-time system  $y[n] + y[n 1] + 0.25y[n 2] = \sqrt{3}x[n 8]$ . Find the zero input response,  $y_0[n]$ , if  $y_0[-1] = 1$  and  $y_0[1] = 1$ .
- **3.6-9** Provide a standard-form polynomial Q(X) such that  $Q(E) \{y[n]\} = x[n]$  corresponds to a marginally stable third-order LTID system and  $Q(D) \{y(t)\} = x(t)$  corresponds to a stable third-order LTIC system.
- 3.7-1 Find the unit impulse response h[n] of systems specified by the following equations: (a) y[n+1]+2y[n] = x[n](b) y[n]+2y[n-1] = x[n]
- **3.7-2** Determine the unit impulse response h[n] of the following systems. In each case, use recursion to verify the n = 3 value of the closed-form expression of h[n].
  - (a)  $(E^2 + 1)\{y[n]\} = (E + 0.5)\{x[n]\}$
  - (b) y[n] y[n-1] + 0.25y[n-2] = x[n]
  - (c)  $y[n] \frac{1}{6}y[n-1] \frac{1}{6}y[n-2] = \frac{1}{3}x[n-2]$

- (d)  $y[n] + \frac{1}{6}y[n-1] \frac{1}{6}y[n-2] = \frac{1}{3}x[n]$
- (e)  $y[n] + \frac{1}{4}y[n-2] = x[n]$
- (f)  $(E^2 \frac{4}{9})\{y[n]\} = (E^2 + 1)\{x[n]\}$
- (g)  $(E^2 \frac{1}{4})(E + \frac{1}{2})\{y[n]\} = E^3\{x[n]\}$
- (h)  $(E \frac{1}{2})^2 \{y[n]\} = x[n]$
- **3.7-3** Consider a DT system with input x[n] and output y[n] described by the difference equation

$$4y[n+1] + y[n-1] = 8x[n+1] + 8x[n]$$

- (a) What is the order of this system?
- (b) Determine the characteristic mode(s) of the system.
- (c) Determine a closed-form expression for the system's impulse response h[n].
- **3.7-4** Repeat Prob. 3.7-3 for a system described by the difference equation

$$y[n+3] - \frac{3}{10}y[n+2] - \frac{1}{10}y[n+1] = 2x[n+1]$$

**3.7-5** Repeat Prob. 3.7-1 for

$$(E^2 - 6E + 9)y[n] = Ex[n]$$

**3.7-6** Repeat Prob. 3.7-1 for

$$y[n] - 6y[n-1] + 25y[n-2] = 2x[n] - 4x[n-1]$$

**3.7-7** (a) For the general *N*th-order difference Eq. (3.16), letting

$$a_0 = a_1 = a_2 = \cdots = a_{N-1} = 0$$

results in a general causal Nth-order LTI nonrecursive difference equation

$$y[n] = \sum_{i=0}^{N} b_i x[n-i]$$

Find the impulse response h[n] for this system. [*Hint:* The characteristic equation for this case is  $\gamma^n = 0$ . Hence, all the characteristic roots are zero. In this case,  $y_c[n] = 0$ , and the approach in Sec. 3.7 does not work. Use a direct method to find h[n] by realizing that h[n] is the response to unit impulse input.]

(b) Find the impulse response of a nonrecursive LTID system described by the equation

$$y[n] = 3x[n] - 5x[n-1] - 2x[n-3]$$

Observe that the impulse response has only a finite (N) number of nonzero elements. For this reason, such systems are called *finite-impulse response* (FIR) systems. For a general recursive case [Eq. (3.20)], the impulse response has an infinite number of nonzero elements, and such systems are called *infinite-impulse response* (IIR) systems.

**3.8-1** The convolution  $y[n] = \left(\frac{5}{2^n}u[n+5]\right) * (3^nu[-n-2])$  can be represented as

$$y[n] = \begin{cases} C_1(\gamma_1)^n & n < N \\ C_2(\gamma_2)^n & n \ge N \end{cases}$$

Using the graphical convolution procedure, determine constants  $C_1$ ,  $C_2$ ,  $\gamma_1$ ,  $\gamma_2$ , and N.

- **3.8-2** Use the graphical convolution procedure to determine the following:
  - (a)  $y_a[n] = u[n] * (u[n-5] u[n-9] + (0.5)^{(n-8)}u[n-9])$
  - (b)  $y_b[n] = (\frac{1}{2})^{|n|} * u[-n+5]$
- **3.8-3** Let  $x[n] = (0.5)^n (u[n+4] u[n-4])$  be input into an LTID system with an impulse response given by

$$h[n] = \begin{cases} 2 \quad [(n \mod 6) < 4] \text{ and } [n \ge 0] \\ 0 \qquad \text{otherwise} \end{cases}$$

Recall,  $(n \mod p)$  is the remainder of the division n/p. The system is described according to the difference equation y[n] - y[n-6] = 2x[n] + 2x[n-1] + 2x[n-2] + 2x[n-3].

- (a) Determine the six characteristic roots ( $\gamma_1$  through  $\gamma_6$ ) of the system.
- (b) Determine the value of y[10], the zero-state output of system h[n] in response to x[n] at time n = 10. Express your result in decimal form to at least three decimal places (e.g., y[10] = 3.142).
- **3.8-4** An LTID system has impulse response  $h[n] = (0.5)^{(n+3)} (u[n] u[n+6])$ . A 6-periodic DT

input signal x[n] is given by

$$x[n] = \begin{cases} 1 & n = 0, \pm 3, \pm 6, \pm 9, \pm 12, \dots \\ 2 & n = 1, 1 \pm 6, 1 \pm 12, \dots \\ 3 & n = 2, 2 \pm 6, 2 \pm 12, \dots \\ 0 & \text{otherwise} \end{cases}$$

- (a) Is system h[n] causal? Mathematically justify your answer.
- (b) Determine the value of y[12], the zero-state output of system h[n] in response to x[n] at time n = 12. Express your result in decimal form to at least three decimal places (e.g., y[12] = 1.234).
- **3.8-5** Find the (zero-state) response y[n] of an LTID system whose unit impulse response is

$$h[n] = (-2)^n u[n-1]$$

and the input is  $x[n] = e^{-n}u[n + 1]$ . Find your answer by computing the convolution sum and also by using Table 3.1.

**3.8-6** Find the (zero-state) response y[n] of an LTID system if the input is  $x[n] = 3^{n-1}u[n+2]$ , and

$$h[n] = \frac{1}{2} [\delta[n-2] - (-2)^{n+1}] u[n-3]$$

**3.8-7** Find the (zero-state) response y[n] of an LTID system if the input  $x[n] = (3)^{n+2}u[n+1]$ , and

$$h[n] = [(2)^{n-2} + 3(-5)^{n+2}]u[n-1]$$

**3.8-8** Find the (zero-state) response y[n] of an LTID system if the input  $x[n] = (3)^{-n+2}u[n+3]$ , and

$$h[n] = 3(n-2)(2)^{n-3}u[n-4]$$

**3.8-9** Find the (zero-state) response y[n] of an LTID system if its input  $x[n] = (2)^n u[n-1]$ , and

$$h[n] = (3)^n \cos\left(\frac{\pi}{3}n - 0.5\right) u[n]$$

Find your answer using only Table 3.1.

- **3.8-10** Consider an LTID system ("system 1") described by  $(E \frac{1}{2}) \{y[n]\} = x[n]$ .
  - (a) Determine the impulse response h<sub>1</sub>[n] for system 1. Simplify your answer.
  - (b) Determine the step response s[n] for system1 (the step response is the output in response to a unit step input). Simplify your answer.

- (c) Determine the impulse response  $h_{\text{cascade}}[n]$  of system 1 cascaded with an LTID system with impulse response  $h_2[n] = -3u[n-13]$ . Simplify your answer.
- **3.8-11** Derive the results in entries 1, 2, and 3 in Table 3.1. [*Hint:* You may need to use the information in Sec. B.8-3.]
- **3.8-12** Derive the results in entries 4, 5, and 6 in Table 3.1.
- **3.8-13** Derive the results in entries 7 and 8 in Table 3.1. [*Hint:* You may need to use the information in Sec. B.8-3.]
- **3.8-14** Derive the results in entries 9 and 11 in Table 3.1. [*Hint:* You may need to use the information in Sec. B.8-3.]
- **3.8-15** Find the total response of a system specified by the equation

$$y[n+1] + 2y[n] = x[n+1]$$

if y[-1] = 10, and the input  $x[n] = e^{-n}u[n]$ .

3.8-16 Find an LTID system (zero-state) response if its impulse response h[n] = (0.5)<sup>n</sup>u[n], and the input x[n] is
(a) 2<sup>n</sup>u[n]
(b) 2<sup>n-3</sup>u[n]
(c) 2<sup>n</sup>u[n-2]

[*Hint:* You may need to use the convolution shift property of Eq. (3.32).]

**3.8-17** For a system specified by equation

$$y[n] = x[n] - 2x[n-1]$$

Find the system response to input x[n] = u[n]. What is the order of the system? What type of system (recursive or nonrecursive) is this? Is the knowledge of initial condition(s) necessary to find the system response? Explain.

- 3.8-18 (a) A discrete-time LTI system is shown in Fig. P3.8-18. Express the overall impulse response of the system, *h*[*n*], in terms of *h*<sub>1</sub>[*n*], *h*<sub>2</sub>[*n*], *h*<sub>3</sub>[*n*], *h*<sub>4</sub>[*n*], and *h*<sub>5</sub>[*n*].
  - (b) Two LTID systems in cascade have impulse response  $h_1[n]$  and  $h_2[n]$ , respectively. Show that if  $h_1[n] =$  $(0.9)^n u[n] - 0.5(0.9)^{n-1}u[n - 1]$  and  $h_2[n] = (0.5)^n u[n] - 0.9(0.5)^{n-1}u[n - 1]$ , the cascade system is an identity system.

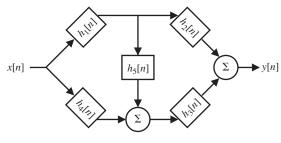


Figure P3.8-18

3.8-19 (a) Show that for a causal system, Eq. (3.37)can also be expressed as

$$g[n] = \sum_{k=0}^{n} h[n-k]$$

- (b) How would the expressions in part (a) change if the system is not causal?
- An LTID system with input *x*[*n*] and output *y*[*n*] 3.8-20 has impulse response h[n] = 2(u[n+2] - u[n - 1])3]).
  - (a) Write a constant-coefficient linear difference equation that has the given impulse response. [*Hint:* First express h[n] in terms of delta functions  $\delta[n]$ .]
  - (b) Using graphical convolution, determine the zero-state output of this system in response to the anticausal input  $x[n] = 2^n u[-n]$ . A simplified closed-form solution is required.
- Consider three LTID systems: system 1 has im-3.8-21 pulse response  $h_1[n] = [2, -3, 4]$ , system 2 has impulse response  $h_2[n] = \begin{bmatrix} 0 \\ 0 \end{bmatrix}, 0, -6$ , -9,3], and system 3 is an identity system (output equals input).
  - (a) Determine the overall impulse response h[n]if system 1 is connected in cascade with a parallel connection of systems 2 and 3.
  - (b) For input x[n] = u[-n], determine the zero-state response  $y_{zsr}[n]$  of system 2.
- 3.8-22 In the savings account problem described in Ex. 3.6, a person deposits \$500 at the beginning of every month, starting at n = 0 with the exception at n = 4, when instead of depositing \$500, she withdraws \$1000. Find y[n] if the interest rate is 1% per month (r = 0.01).

To pay off a loan of M dollars in N number 3.8-23 of payments using a fixed monthly payment of P dollars, show that

$$P = \frac{rM}{1 - (1+r)^{-N}}$$

where *r* is the interest rate per dollar per month. [*Hint*: This problem can be modeled by Eq. (3.3) with the payments of *P* dollars starting at n = 1. The problem can be approached in two ways. First, consider the loan as the initial condition  $y_0[0] = -M$ , and the input x[n] = Pu[n-1]. The loan balance is the sum of the zero-input component (due to the initial condition) and the zero-state component h[n] \* x[n]. Second, consider the loan as an input -M at n = 0 along with the input due to payments. The loan balance is now exclusively a zero-state component h[n] \*x[n]. Because the loan is paid off in N payments, set y[N] = 0.]

- 3.8-24 A person receives an automobile loan of \$10,000 from a bank at the interest rate of 1.5% per month. His monthly payment is \$500, with the first payment due one month after he receives the loan. Compute the number of payments required to pay off the loan. Note that the last payment may not be exactly \$500. [Hint: Follow the procedure in Prob. 3.8-23 to determine the balance y[n]. To determine N, the number of payments, set y[N] = 0. In general, N will not be an integer. The number of payments K is the largest integer  $\leq N$ . The residual payment is |v[K]|.]
- 3.8-25 Letting  $\downarrow$  identify the n = 0 values, use the sliding-tape method to determine the following:
  - (a)  $y_a = [2, 3, -2, -3] * [-10, 0, -5]$ (b)  $y_b = [2, -1, 3, -2] * [-1, -4, 1, -2]$ (c)  $y_c = [0, 0, 3, 2, 1, 2, 3] * [2, 3, -2, 1]$ (d)  $y_d = [5, 0, 0, -2, 8] * [-1, 1, 3, 3, -2, 3]$

  - (e)  $y_e = ([1, -1] * [1, -1]) * ([1, -1] * [1, -1])$ (f)  $y_f = ([2, -1] * [1, -2]) * ([1, -2] * [2, -1])$
  - Outside the values shown, assume all signals are zero.

#### 324 CHAPTER 3 TIME-DOMAIN ANALYSIS OF DISCRETE-TIME SYSTEMS

- **3.8-26** Let  $\downarrow$  identify the n = 0 and consider DT signals x[n] and h[n] whose nonzero values are given as x[n] = [1, 2, 3, 4, 5] and h[n] = [-2, -1, 1, 2]. Use DT convolution (any method) to determine  $y[n] = (2x[n 30]) * (-\frac{3}{2}h[n 10])$ . Express your result in vector notation, making sure to indicate the time index of the leftmost (nonzero) element.
- 3.8-27 Using the sliding-tape algorithm, show that
  (a) u[n] \* u[n] = (n + 1)u[n]
  (b) (u[n] u[n m]) \* u[n] = (n + 1)u[n] (n m)

(m+1)u[n-m]

**3.8-28** Using the sliding-tape algorithm, find x[n]\*g[n] for the signals shown in Fig. P3.8-28.

- **3.8-29** Repeat Prob. 3.8-28 for the signals shown in Fig. P3.8-29.
- **3.8-30** Repeat Prob. 3.8-28 for the signals shown in Fig. P3.8-30.
- **3.8-31** Letting  $\downarrow$  identify n = 0, define the nonzero values of signal x[n] as [1,2,2]. Similarly, define the nonzero values of signal y[n] as [3,4,6,6,11,2,-2]. Using the sliding-tape algorithm as the basis for your work, determine the signal h[n] so that y[n] = x[n] \* h[n].
- **3.8-32** The convolution sum in Eq. (3.33) can be expressed in a matrix form as y = Hx, where y is a column vector containing  $y[0], y[1], \dots, y[n]; x$  is a column vector containing  $x[0], x[1], \dots, x[n];$

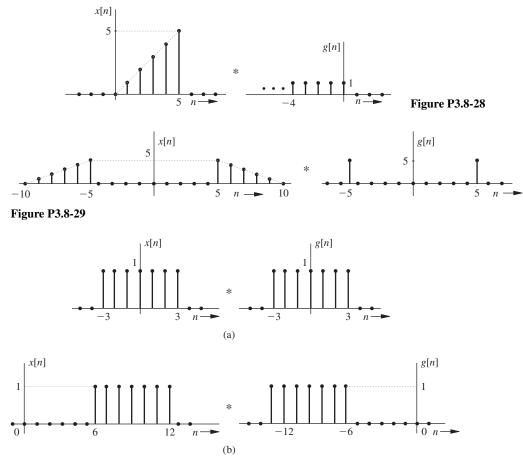


Figure P3.8-30

and *H* is a lower triangular matrix defined as


$$\boldsymbol{H} = \begin{bmatrix} h[0] & 0 & 0 & \dots & 0\\ h[1] & h[0] & 0 & \dots & 0\\ \vdots & \vdots & \vdots & \ddots & \vdots\\ h[n] & h[n-1] & \dots & \dots & h[0] \end{bmatrix}$$

Knowing h[n] and the output y[n], we can determine the input x[n] according to  $\mathbf{x} = \mathbf{H}^{-1}\mathbf{y}$ . This operation is the reverse of convolution and is known as *deconvolution*. Moreover, knowing x[n] and y[n], we can determine h[n]. This can be done by expressing the foregoing matrix equation as n + 1 simultaneous equations in terms of n + 1 unknowns h[0], h[1], ..., h[n]. These equations can readily be solved iteratively. Thus, we can synthesize a system that yields a certain output y[n] for a given input x[n].

- (a) Design a system (i.e., determine h[n]) that will yield the output sequence (8, 12, 14, 15, 15.5, 15.75, . . .) for the input sequence (1, 1, 1, 1, 1, 1, . . .).
- (b) For a system with the impulse response sequence (1, 2, 4, . . .), the output sequence was (1, 7/3, 43/9, . . .). Determine the input sequence.
- **3.8-33** A second-order LTID system has zero-input response


$$y_0[n] = \left[3, 2\frac{1}{3}, 2\frac{1}{9}, 2\frac{1}{27}, \dots\right]$$
$$= \sum_{k=0}^{\infty} \left\{2 + \left(\frac{1}{3}\right)^k\right\} \delta[n-k]$$

- (a) Determine the characteristic equation of this system,  $a_0\gamma^2 + a_1\gamma + a_2 = 0$ .
- (b) Find a bounded, causal input with infinite duration that would cause a strong response from this system. Justify your choice.

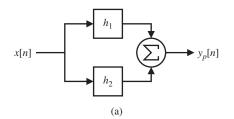

**Figure P3.8-34** 

- (c) Find a bounded, causal input with infinite duration that would cause a weak response from this system. Justify your choice.
- **3.8-34** An LTID filter has an impulse response function given by  $h_1[n] = \delta[n+2] \delta[n-2]$ . A second LTID system has an impulse response function given by  $h_2[n] = n(u[n+4] u[n-4])$ .
  - (a) Carefully sketch the functions  $h_1[n]$  and  $h_2[n]$  over  $(-10 \le n \le 10)$ .
  - (b) Assume that the two systems are connected in parallel, as shown in Fig. P3.8-34a. Determine the impulse response  $h_p[n]$  for the parallel system in terms of  $h_1[n]$  and  $h_2[n]$ . Sketch  $h_p[n]$  over  $(-10 \le n \le 10)$ .
  - (c) Assume that the two systems are connected in cascade, as shown in Fig. P3.8-34b. Determine the impulse response  $h_s[n]$  for the cascade system in terms of  $h_1[n]$  and  $h_2[n]$ . Sketch  $h_s[n]$  over  $(-10 \le n \le 10)$ .
- **3.8-35** This problem investigates an interesting application of discrete-time convolution: the expansion of certain polynomial expressions.
  - (a) By hand, expand  $(z^3+z^2+z+1)^2$ . Compare the coefficients to [1, 1, 1, 1] \* [1, 1, 1, 1].
  - (b) Formulate a relationship between discretetime convolution and the expansion of constant-coefficient polynomial expressions.
  - (c) Use convolution to expand  $(z^{-4} 2z^{-3} + 3z^{-2})^4$ .
  - (d) Use convolution to expand  $(z^5 + 2z^4 + 3z^2 + 5)^2(z^{-4} 5z^{-2} + 13)$ .
- **3.8-36** Joe likes coffee, and he drinks his coffee according to a very particular routine. He begins by adding two teaspoons of sugar to his mug, which he then fills to the brim with hot coffee. He drinks 2/3 of the mug's contents, adds another two teaspoons of sugar, and tops the mug off with steaming hot coffee. This refill procedure

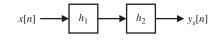

continues, sometimes for many, many cups of coffee. Joe has noted that his coffee tends to taste sweeter with the number of refills.

Let independent variable *n* designate the coffee refill number. In this way, n = 0 indicates the first cup of coffee, n = 1 is the first refill, and so forth. Let x[n] represent the sugar (measured in teaspoons) added into the system (a coffee mug) on refill *n*. Let y[n] designate the amount of sugar (again, teaspoons) contained in the mug on refill *n*.

- (a) The sugar (teaspoons) in Joe's coffee can be represented using a standard second-order constant coefficient difference equation y[n] + a₁y[n 1] + a₂y[n 2] = b₀x[n] + b₁x[n 1] + b₂x[n 2]. Determine the constants a₁, a₂, b₀, b₁, and b₂.
- (b) Determine x[n], the driving function to this system.
- (c) Solve the difference equation for y[n]. This requires finding the total solution. Joe always starts with a clean mug from the dishwasher, so y[-1] (the sugar content before the first cup) is zero.
- (d) Determine the steady-state value of *y*[*n*]. That is, what is *y*[*n*] as *n* → ∞? If possible, suggest a way of modifying *x*[*n*] so that the sugar content of Joe's coffee remains a constant for all nonnegative *n*.
- **3.8-37** A system is called complex if a real-valued input can produce a complex-valued output. Consider a causal complex system described by a first-order constant coefficient linear difference equation:

(jE + 0.5)y[n] = (-5E)x[n]

- (a) Determine the impulse response function h[n] for this system.
- (b) Given input x[n] = u[n − 5] and initial condition y<sub>0</sub>[−1] = j, determine the system's total output y[n] for n ≥ 0.
- **3.8-38** A discrete-time LTI system has impulse response function h[n] = n(u[n 2] u[n+2]).
  - (a) Carefully sketch the function h[n] over  $(-5 \le n \le 5)$ .
  - (b) Determine the difference equation representation of this system, using y[n] to designate the output and x[n] to designate the input.

- 3.8-39 Consider three discrete-time signals: x[n], y[n], and z[n]. Denoting convolution as \*, identify the expression(s) that is(are) equivalent to x[n](y[n] \* z[n]):
  (a) (x[n] \* y[n])z[n]
  - (b) (x[n]y[n]) \* (x[n]z[n])
  - (c) (x[n]y[n]) \* z[n]
  - (d) none of the above
  - Justify your answer!
- **3.8-40** A causal system with input x[n] and output y[n] is described by

$$y[n] - ny[n-1] = x[n]$$

- (a) By recursion, determine the first six nonzero values of *h*[*n*], the response to *x*[*n*] = δ[*n*]. Do you think this system is BIBO-stable? Why?
- (b) Compute y<sub>R</sub>[4] recursively from y<sub>R</sub>[n] ny<sub>R</sub>[n-1] = x[n], assuming all initial conditions are zero and x[n] = u[n]. The subscript R is only used to emphasize a recursive solution.
- (c) Define  $y_C[n] = x[n] * h[n]$ . Using x[n] = u[n]and h[n] from part (a), compute  $y_C[4]$ . The subscript C is only used to emphasize a convolution solution.
- (d) In this chapter, both recursion and convolution are presented as potential methods to compute the zero-state response (ZSR) of a discrete-time system. Comparing parts
  (b) and (c), we see that y<sub>R</sub>[4] ≠ y<sub>C</sub>[4]. Why are the two results not the same? Which method, if any, yields the correct ZSR value?
- **3.9-1** In Sec. 3.9-1 we showed that for BIBO stability in an LTID system, it is sufficient for its impulse response h[n] to satisfy Eq. (3.43). Show that this is also a necessary condition for the system to be BIBO-stable. In other words, show that if Eq. (3.43) is not satisfied, there exists a bounded input that produces unbounded output. [*Hint:* Assume that a system exists for which h[n]violates Eq. (3.43), yet its output is bounded for every bounded input. Establish the contradiction in this statement by considering an input x[n]defined by  $x[n_1 - m] = 1$  when h[m] > 0 and  $x[n_1 - m] = -1$  when h[m] < 0, where  $n_1$  is some fixed integer.]

- **3.9-2** Each of the following equations specifies an LTID system. Determine whether each of these systems is BIBO-stable or -unstable. Determine also whether each is asymptotically stable, unstable, or marginally stable.
  - (a) y[n+2] + 0.6y[n+1] 0.16y[n] = x[n+1] -1] - 2x[n]
  - (b) y[n] + 3y[n-1] + 2y[n-2] = x[n-1] +2x[n-2]
  - (c)  $(E-1)^2 (E+\frac{1}{2}) y[n] = x[n]$
  - (d) y[n] + 2y[n-1] + 0.96y[n-2] = x[n]
  - (e) y[n] + y[n-1] 2y[n-2] = x[n] + 2x[n-1](f)  $(E^2 - 1)(E^2 + 1)y[n] = x[n]$
- 3.9-3 Consider two LTIC systems in cascade, as illustrated in Fig. 3.29. The impulse response of the system  $S_1$  is  $h_1[n] = 2^n u[n]$  and the impulse response of the system  $S_2$  is  $h_2[n] = \delta[n] - \delta[n]$  $2\delta[n-1]$ . Is the cascaded system asymptotically stable or unstable? Determine the BIBO stability of the composite system.
- 3.9-4 Figure P3.9-4 locates the characteristic roots of ten causal, LTID systems, labeled A through J. Each system has only two roots and is described using operator notation as Q(E)y[n] = P(E)x[n]. All plots are drawn to scale, with the unit circle shown for reference. For each of the following parts, identify all the answers that are correct.
  - (a) Identify all systems that are unstable.
  - (b) Assuming all systems have  $P(E) = E^2$ , identify all systems that are real. Recall that a real system always generates a real-valued response to a real-valued input.
  - (c) Identify all systems that support oscillatory natural modes.

- (d) Identify all systems that have at least one mode whose envelop decays at a rate of  $2^{-n}$ .
- (e) Identify all systems that have only one mode.
- 3.9-5 A discrete-time LTI system has impulse response given by

$$h[n] = \delta[n] + \left(\frac{1}{3}\right)^n u[n-1]$$

- (a) Is the system stable? Is the system causal? Justify your answers.
- (b) Plot the signal x[n] = u[n-3] u[n+3].
- (c) Determine the system's zero-state response y[n] to the input x[n] = u[n-3] - u[n+3]. Plot y[n] over  $(-10 \le n \le 10)$ .
- 3.9-6 An LTID system has an impulse response given by

$$h[n] = \left(\frac{1}{2}\right)^{|n|}$$

- (a) Is the system causal? Justify your answer. (b) Compute  $\sum_{n=-\infty}^{\infty} |h[n]|$ . Is this system BIBO-stable?
- (c) Compute the energy and power of input signal x[n] = 3u[n-5].
- (d) Using input x[n] = 3u[n-5], determine the zero-state response of this system at time n = 10. That is, determine  $v_{zsr}[10]$ .
- 3.10-1 Determine a constant coefficient linear difference equation that describes a system for which the input  $x[n] = 2(\frac{1}{3})^n u[-n-4]$  causes resonance.
- 3.10-2 If one exists, determine a real input x[n] that will cause resonance in the causal LTID system described by  $(E^2 + 1)\{y[n]\} = (E + 0.5)\{x[n]\}$ . If no such input exists, explain why not.

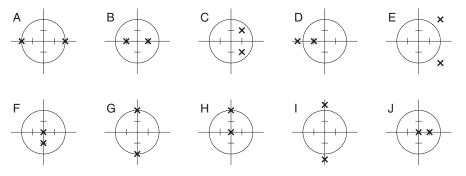


Figure P3.9-4

- **3.10-3** Consider two lowpass LTID systems, one with infinite-duration impulse response  $h_1[n] = -(0.5)^n u[n]$  and the other with finite-duration impulse response  $h_2[n] = 2(u[n] u[n 4])$ . Which system (1, 2, both, or neither) would more efficiently transmit a binary communication signal? Carefully justify your result.
- **3.11-1** Write a MATLAB program that recursively computes and then plots the solution to  $y[n] \frac{1}{3}y[n-1] + \frac{1}{2}y[n-2] = x[n]$  for  $(0 \le n \le 100)$  given  $x[n] = \delta[n] + u[n-50]$  and y[-2] = y[-1] = 2.
- **3.11-2** Consider the discrete-time function  $f[n] = e^{-n/5} \cos(\pi n/5)u[n]$ . Section 3.11 uses anonymous functions in describing DT signals.
  - f = @(n) exp(-n/5).\*cos(pi\*n/5).\*(n>=0);

While this anonymous function operates correctly for a downsampling operation such as f[2n], it does not operate correctly for an upsampling operation, such as f[n/2]. Modify the anonymous function f so that it also correctly accommodates upsampling operations. Test your code by computing and plotting f(n/2) over  $(-10 \le n \le 10)$ .

- **3.11-3** Write MATLAB code to compute and plot the DT convolutions of Prob. 3.8-25.
- **3.11-4** An indecisive student contemplates whether he should stay home or take his final exam, which is being held 2 miles away. Starting at home, the student travels half the distance to the exam location before changing his mind. The student turns around and travels half the distance between his current location and his home before changing his mind again. This process of changing direction and traveling half the remaining distance continues until the student either reaches a destination or dies from exhaustion.
  - (a) Determine a suitable difference equation description of this system.
  - (b) Use MATLAB to simulate the difference equation in part (a). Where does the student end up as n → ∞? How does your answer change if the student goes two-thirds the way each time, rather than halfway?
  - (c) Determine a closed-form solution to the equation in part (a). Use this solution to verify the results in part (b).

**3.11-5** The cross-correlation function between x[n] and y[n] is given as

$$r_{xy}[k] = \sum_{n=-\infty}^{\infty} x[n]y[n-k]$$

Notice that  $r_{xy}[k]$  is quite similar to the convolution sum. The independent variable k corresponds to the relative *shift* between the two inputs.

- (a) Express  $r_{xy}[k]$  in terms of convolution. Is  $r_{xy}[k] = r_{yx}[k]$ ?
- (b) Cross-correlation is said to indicate similarity between two signals. Do you agree? Why or why not?
- (c) If x[n] and y[n] are both finite duration, MATLAB's conv command is well suited to compute r<sub>xy</sub>[k]. Write a MATLAB function that computes the cross-correlation function using the conv command. Four vectors are passed to the function (x, y, nx, and ny) corresponding to the inputs x[n], y[n], and their respective time vectors. Notice that x and y are not necessarily the same length. Two outputs should be created (rxy and k) corresponding to r<sub>xy</sub>[k] and its shift vector.
- (d) Test your code from part (c) using x[n] = u[n-5] u[n-10] over  $(0 \le n = n_x \le 20)$ and  $y[n] = u[-n-15] - u[-n-10] + \delta[n-2]$  over  $(-20 \le n = n_y \le 10)$ . Plot the result rxy as a function of the shift vector k. What shift k gives the largest magnitude of  $r_{xy}[k]$ ? Does this make sense?
- **3.11-6** Suppose a vector x exists in the MATLAB workspace, corresponding to a finite-duration DT signal *x*[*n*]
  - (a) Write a MATLAB function that, when passed vector x, computes and returns Ex, the energy of *x*[*n*].
  - (b) Write a MATLAB function that, when passed vector x, computes and returns Px, the power of x[n]. Assume that x[n] is periodic and that vector x contains data for an integer number of periods of x[n].
- **3.11-7** A causal *N*-point max filter assigns y[n] to the maximum of  $\{x[n], \ldots, x[n (N-1)]\}$ .
  - (a) Write a MATLAB function that performs N-point max filtering on a length-M input vector x. The two function inputs are vector x and scalar N. To create the length-M output

vector y, initially pad the input vector with N-1 zeros. The MATLAB command max may be helpful.

- (b) Test your filter and MATLAB code by filtering a length-45 input defined as  $x[n] = \cos(\pi n/5) + \delta[n 30] \delta[n 35]$ . Separately plot the results for N = 4, N = 8, and N = 12. Comment on the filter behavior.
- **3.11-8** A causal *N*-point min filter assigns y[n] to the minimum of  $\{x[n], \ldots, x[n (N 1)]\}$ .
  - (a) Write a MATLAB function that performs N-point min filtering on a length-M input vector  $\mathbf{x}$ . The two function inputs are vector  $\mathbf{x}$  and scalar N. To create the length-M output vector  $\mathbf{y}$ , initially pad the input vector with N-1 zeros. The MATLAB command min may be helpful.
  - (b) Test your filter and MATLAB code by filtering a length-45 input defined as  $x[n] = \cos(\pi n/5) + \delta[n 30] \delta[n 35]$ . Separately plot the results for N = 4, N = 8, and N = 12. Comment on the filter behavior.
- **3.11-9** A causal *N*-point median filter assigns y[n] to the median of  $\{x[n], \ldots, x[n (N-1)]\}$ . The median is found by sorting sequence  $\{x[n], \ldots, x[n (N-1)]\}$  and choosing the middle value (odd *N*) or the average of the two middle values (even *N*).
  - (a) Write a MATLAB function that performs N-point median filtering on a length-M input vector x. The two function inputs are vector x and scalar N. To create the length-M output vector y, initially pad the input vector with N 1 zeros. The MATLAB command sort or median may be helpful.
  - (b) Test your filter and MATLAB code by filtering a length-45 input defined as  $x[n] = \cos(\pi n/5) + \delta[n 30] \delta[n 35]$ . Separately plot the results for N = 4, N = 8, and N = 12. Comment on the filter behavior.
- **3.11-10** Recall that y[n] = x[n/N] represents an upsample by *N* operation. An interpolation filter replaces the inserted zeros with more realistic values. A linear interpolation filter has impulse response

$$h[n] = \sum_{k=-(N-1)}^{N-1} \left(1 - \left|\frac{k}{N}\right|\right) \delta(n-k)$$

- (a) Determine a constant coefficient difference equation that has impulse response *h*[*n*].
- (b) The impulse response h[n] is noncausal. What is the smallest time shift necessary to make the filter causal? What is the effect of this shift on the behavior of the filter?
- (c) Write a MATLAB function that will compute the parameters necessary to implement an interpolation filter using MATLAB's filter command. That is, your function should output filter vectors b and a given an input scalar N.
- (d) Test your filter and MATLAB code. To do this, create  $x[n] = \cos(n)$  for  $(0 \le n \le 9)$ . Upsample x[n] by N = 10 to create a new signal  $x_{up}[n]$ . Design the corresponding N =10 linear interpolation filter, filter  $x_{up}[n]$  to produce y[n], and plot the results.
- **3.11-11** A causal *N*-point moving-average filter has impulse response h[n] = (u[n] u[n N])/N.
  - (a) Determine a constant-coefficient difference equation that has impulse response *h*[*n*].
  - (b) Write a MATLAB function that will compute the parameters necessary to implement an N-point moving-average filter using MATLAB's filter command. That is, your function should output filter vectors b and a given a scalar input N.
  - (c) Test your filter and MATLAB code by filtering a length-45 input defined as  $x[n] = \cos(\pi n/5) + \delta[n 30] \delta[n 35]$ . Separately plot the results for N = 4, N = 8, and N = 12. Comment on the filter behavior.
  - (d) Problem 3.11-10 introduces linear interpolation filters, for use following an upsample by *N* operation. Within a scale factor, show that a cascade of two *N*-point moving-average filters is equivalent to the linear interpolation filter. What is the scale factor difference? Test this idea with MAT-LAB. Create *x*[*n*] = cos(*n*) for (0 ≤ *n* ≤ 9). Upsample *x*[*n*] by *N* = 10 to create a new signal *x*<sub>up</sub>[*n*]. Design an *N* = 10 moving-average filter. Filter *x*<sub>up</sub>[*n*] twice and scale to produce *y*[*n*]. Plot the results. Does the output from the cascaded pair of moving-average filters linearly interpolate the upsampled data?

# CONTINUOUS-TIME SYSTEM ANALYSIS USING THE LAPLACE TRANSFORM

Because of the linearity (superposition) property of linear time-invariant systems, we can find the response of these systems by breaking the input x(t) into several components and then summing the system response to all the components of x(t). We have already used this procedure in time-domain analysis, in which the input x(t) is broken into impulsive components. In the *frequency-domain analysis* developed in this chapter, we break up the input x(t) into exponentials of the form  $e^{st}$ , where the parameter s is the complex frequency of the signal  $e^{st}$ , as explained in Sec. 1.4-3. This method offers an insight into the system behavior complementary to that seen in the time-domain analysis. In fact, the time-domain and the frequency-domain methods are duals of each other.

The tool that makes it possible to represent arbitrary input x(t) in terms of exponential components is the *Laplace transform*, which is discussed in the following section.

# **4.1 THE LAPLACE TRANSFORM**

For a signal x(t), its Laplace transform X(s) is defined by

$$X(s) = \int_{-\infty}^{\infty} x(t)e^{-st} dt$$
(4.1)

The signal x(t) is said to be the *inverse Laplace transform* of X(s). It can be shown that

$$x(t) = \frac{1}{2\pi j} \int_{c-j\infty}^{c+j\infty} X(s) e^{st} ds$$
(4.2)

where c is a constant chosen to ensure the convergence of the integral in Eq. (4.1), as explained later. See also [1].

This pair of equations is known as the *bilateral Laplace transform pair*, where X(s) is the direct Laplace transform of x(t) and x(t) is the inverse Laplace transform of X(s). Symbolically,

 $X(s) = \mathcal{L}[x(t)]$  and  $x(t) = \mathcal{L}^{-1}[X(s)]$ 

Note that

CHAPTER

$$\mathcal{L}^{-1}\{\mathcal{L}[x(t)]\} = x(t) \quad \text{and} \quad \mathcal{L}\{\mathcal{L}^{-1}[X(s)]\} = X(s)$$

It is also common practice to use a bidirectional arrow to indicate a Laplace transform pair, as follows:

$$x(t) \iff X(s)$$

The Laplace transform, defined in this way, can handle signals existing over the entire time interval from  $-\infty$  to  $\infty$  (causal and noncausal signals). For this reason it is called the *bilateral* (or *two-sided*) Laplace transform. Later we shall consider a special case—the *unilateral* or *one-sided* Laplace transform—which can handle only causal signals.

#### LINEARITY OF THE LAPLACE TRANSFORM

We now prove that the Laplace transform is a linear operator by showing that the principle of superposition holds, implying that if

$$x_1(t) \iff X_1(s)$$
 and  $x_2(t) \iff X_2(s)$ 

then

$$a_1x_1(t) + a_2x_2(t) \iff a_1X_1(s) + a_2X_2(s)$$

The proof is simple. By definition,

$$\mathcal{L}[a_1x_1(t) + a_2x_2(t)] = \int_{-\infty}^{\infty} [a_1x_1(t) + a_2x_2(t)]e^{-st} dt$$
  
=  $a_1 \int_{-\infty}^{\infty} x_1(t)e^{-st} dt + a_2 \int_{-\infty}^{\infty} x_2(t)e^{-st} dt$   
=  $a_1X_1(s) + a_2X_2(s)$  (4.3)

This result can be extended to any finite sum.

### THE REGION OF CONVERGENCE (ROC)

The *region of convergence* (ROC), also called the region of existence, for the Laplace transform, X(s), is the set of values of *s* (the region in the complex plane) for which the integral in Eq. (4.1) converges. This concept will become clear in the following example.

# **EXAMPLE 4.1** Laplace Transform and ROC of a Causal Exponential

For a signal  $x(t) = e^{-at}u(t)$ , find the Laplace transform X(s) and its ROC.

By definition,

$$X(s) = \int_{-\infty}^{\infty} e^{-at} u(t) e^{-st} dt$$

Because u(t) = 0 for t < 0 and u(t) = 1 for  $t \ge 0$ ,

$$X(s) = \int_0^\infty e^{-at} e^{-st} dt = \int_0^\infty e^{-(s+a)t} dt = -\frac{1}{s+a} e^{-(s+a)t} \Big|_0^\infty$$
(4.4)

## 332 CHAPTER 4 CONTINUOUS-TIME SYSTEM ANALYSIS

Note that *s* is complex and as  $t \to \infty$ , the term  $e^{-(s+a)t}$  does not necessarily vanish. Here we recall that for a complex number  $z = \alpha + j\beta$ ,

$$e^{-zt} = e^{-(\alpha+j\beta)t} = e^{-\alpha t}e^{-j\beta t}$$

Now  $|e^{-j\beta t}| = 1$  regardless of the value of  $\beta t$ . Therefore, as  $t \to \infty$ ,  $e^{-zt} \to 0$  only if  $\alpha > 0$ , and  $e^{-zt} \to \infty$  if  $\alpha < 0$ . Thus,

$$\lim_{t \to \infty} e^{-zt} = \begin{cases} 0 & \text{Re } z > 0\\ \infty & \text{Re } z < 0 \end{cases}$$
(4.5)

Clearly,

$$\lim_{t \to \infty} e^{-(s+a)t} = \begin{cases} 0 & \operatorname{Re}(s+a) > 0\\ \infty & \operatorname{Re}(s+a) < 0 \end{cases}$$

Use of this result in Eq. (4.4) yields

$$X(s) = \frac{1}{s+a} \qquad \operatorname{Re}(s+a) > 0$$
$$e^{-at}u(t) \Longleftrightarrow \frac{1}{s+a} \qquad \operatorname{Re} s > -a \qquad (4.6)$$

or

The ROC of 
$$X(s)$$
 is Re  $s > -a$ , as shown in the shaded area in Fig. 4.1a. This fact means that the integral defining  $X(s)$  in Eq. (4.4) exists only for the values of  $s$  in the shaded region in Fig. 4.1a. For other values of  $s$ , the integral in Eq. (4.4) does not converge. For this reason, the shaded region is called the *ROC* (or the *region of existence*) for  $X(s)$ .

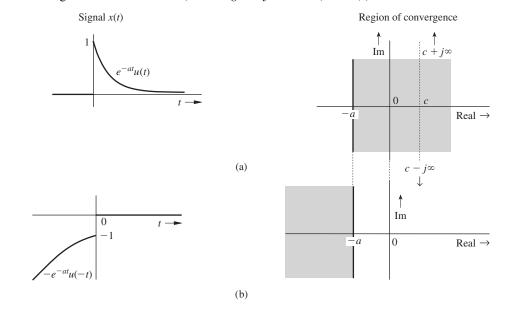


Figure 4.1 Signals (a)  $e^{-at}u(t)$  and (b)  $-e^{-at}u(-t)$  have the same Laplace transform but different regions of convergence.

# **REGION OF CONVERGENCE FOR FINITE-DURATION SIGNALS**

A finite-duration signal  $x_f(t)$  is a signal that is nonzero only for  $t_1 \le t \le t_2$ , where both  $t_1$  and  $t_2$  are finite numbers and  $t_2 > t_1$ . For a finite-duration, absolutely integrable signal, the ROC is the entire *s* plane. This is clear from the fact that if  $x_f(t)$  is absolutely integrable and a finite-duration signal, then  $x(t)e^{-\sigma t}$  is also absolutely integrable for any value of  $\sigma$  because the integration is over the finite range of *t* only. Hence, the Laplace transform of such a signal converges for every value of *s*. This means that the ROC of a general signal x(t) remains unaffected by the addition of any absolutely integrable, finite-duration signal  $x_f(t)$  to x(t). In other words, if  $\mathcal{R}$  represents the ROC of a signal  $x(t) + x_f(t)$  is also  $\mathcal{R}$ .

#### ROLE OF THE REGION OF CONVERGENCE

The ROC is required for evaluating the inverse Laplace transform x(t) from X(s), as defined by Eq. (4.2). The operation of finding the inverse transform requires an integration in the complex plane, which needs some explanation. The path of integration is along  $c + j\omega$ , with  $\omega$  varying from  $-\infty$  to  $\infty$ .<sup>†</sup> Moreover, the path of integration must lie in the ROC (or existence) for X(s). For the signal  $e^{-at}u(t)$ , this is possible if c > -a. One possible path of integration is shown (dotted) in Fig. 4.1a. Thus, to obtain x(t) from X(s), the integration in Eq. (4.2) is performed along this path. When we integrate  $[1/(s + a)]e^{st}$  along this path, the result is  $e^{-at}u(t)$ . Such integration in the complex plane requires a background in the theory of functions of complex variables. We can avoid this integration by compiling a table of Laplace transforms (Table 4.1), where the Laplace transform pairs are tabulated for a variety of signals. To find the inverse Laplace transform of, say, 1/(s + a), instead of using the complex integral of Eq. (4.2), we look up the table and find the inverse Laplace transform to be  $e^{-at}u(t)$  (assuming that the ROC is Re s > -a). Although the table given here is rather short, it comprises the functions of most practical interest. A more comprehensive table appears in Doetsch [2].

# THE UNILATERAL LAPLACE TRANSFORM

To understand the need for defining unilateral transform, let us find the Laplace transform of signal x(t) illustrated in Fig. 4.1b:

$$x(t) = -e^{-at}u(-t)$$

The Laplace transform of this signal is

$$X(s) = \int_{-\infty}^{\infty} -e^{-at}u(-t)e^{-st}dt$$

Because u(-t) = 1 for t < 0 and u(-t) = 0 for t > 0,

$$X(s) = \int_{-\infty}^{0} -e^{-at}e^{-st} dt = -\int_{-\infty}^{0} e^{-(s+a)t} dt = \frac{1}{s+a}e^{-(s+a)t}\Big|_{-\infty}^{0}$$

<sup>&</sup>lt;sup>†</sup> The discussion about the path of convergence is rather complicated, requiring the concepts of contour integration and understanding of the theory of complex variables. For this reason, the discussion here is somewhat simplified.

No.	x(t)	X(s)
1	$\delta(t)$	1
2	u(t)	$\frac{1}{s}$
3	tu(t)	$\frac{1}{s^2}$
4	$t^n u(t)$	$\frac{n!}{s^{n+1}}$
5	$e^{\lambda t}u(t)$	$\frac{1}{s-\lambda}$
6	$te^{\lambda t}u(t)$	$\frac{1}{(s-\lambda)^2}$
7	$t^n e^{\lambda t} u(t)$	$\frac{n!}{(s-\lambda)^{n+1}}$
8a	$\cos bt u(t)$	$\frac{s}{s^2+b^2}$
8b	$\sin bt u(t)$	$\frac{b}{s^2 + b^2}$
9a	$e^{-at}\cos btu(t)$	$\frac{s+a}{(s+a)^2+b^2}$
9b	$e^{-at}\sin bt u(t)$	$\frac{b}{(s+a)^2+b^2}$
10a	$re^{-at}\cos(bt+\theta)u(t)$	$\frac{(r\cos\theta)s + (ar\cos\theta - br\sin\theta)}{s^2 + 2as + (a^2 + b^2)}$
10b	$re^{-at}\cos(bt+\theta)u(t)$	$\frac{0.5re^{j\theta}}{s+a-jb} + \frac{0.5re^{-j\theta}}{s+a+jb}$
10c	$re^{-at}\cos(bt+\theta)u(t)$	$\frac{As+B}{s^2+2as+c}$
	$r = \sqrt{\frac{A^2c + B^2 - 2ABa}{c - a^2}}$	
	$\theta = \tan^{-1} \left( \frac{Aa - B}{A\sqrt{c - a^2}} \right)$	
	$b = \sqrt{c - a^2}$	
10d	$e^{-at}\left[A\cos bt + \frac{B-Aa}{b}\sin bt\right]u(t)$	$\frac{As+B}{s^2+2as+c}$
	$b = \sqrt{c - a^2}$	

 TABLE 4.1
 Select (Unilateral) Laplace Transform Pairs

Equation (4.5) shows that

 $\lim_{t \to -\infty} e^{-(s+a)t} = 0 \qquad \operatorname{Re}\left(s+a\right) < 0$ 

Hence,

$$X(s) = \frac{1}{s+a} \qquad \text{Re } s < -a$$

The signal  $-e^{-at}u(-t)$  and its ROC (Re s < -a) are depicted in Fig. 4.1b. Note that the Laplace transforms for the signals  $e^{-at}u(t)$  and  $-e^{-at}u(-t)$  are identical except for their regions of convergence. Therefore, for a given X(s), there may be more than one inverse transform, depending on the ROC. In other words, unless the ROC is specified, there is no one-to-one correspondence between X(s) and x(t). This fact increases the complexity in using the Laplace transform. The complexity is the result of trying to handle causal as well as noncausal signals. If we restrict all our signals to the causal type, such an ambiguity does not arise. There is only one inverse transform of X(s) = 1/(s+a), namely,  $e^{-at}u(t)$ . To find x(t) from X(s), we need not even specify the ROC. In summary, if all signals are restricted to the causal type, then, for a given X(s), there is only one inverse transform x(t).

The unilateral Laplace transform is a special case of the bilateral Laplace transform in which all signals are restricted to being causal; consequently, the limits of integration for the integral in Eq. (4.1) can be taken from 0 to  $\infty$ . Therefore, the unilateral Laplace transform X(s) of a signal x(t) is defined as

$$X(s) = \int_{0^{-}}^{\infty} x(t)e^{-st} dt$$
 (4.7)

We choose  $0^-$  (rather than  $0^+$  used in some texts) as the lower limit of integration. This convention not only ensures inclusion of an impulse function at t = 0, but also allows us to use initial conditions at  $0^-$  (rather than at  $0^+$ ) in the solution of differential equations via the Laplace transform. In practice, we are likely to know the initial conditions before the input is applied (at  $0^-$ ), not after the input is applied (at  $0^+$ ). Indeed, the very meaning of the term "initial conditions" implies conditions at  $t = 0^-$  (conditions before the input is applied). Detailed analysis of desirability of using  $t = 0^-$  appears in Sec. 4.3.

The unilateral Laplace transform simplifies the system analysis problem considerably because of its *uniqueness property*, which says that for a given X(s), there is a unique inverse transform. But there is a price for this simplification: we cannot analyze noncausal systems or use noncausal inputs. However, in most practical problems, this restriction is of little consequence. For this reason, we shall first consider the unilateral Laplace transform and its application to system analysis. (The bilateral Laplace transform is discussed later, in Sec. 4.11.)

Basically there is no difference between the unilateral and the bilateral Laplace transform. The unilateral transform is the bilateral transform that deals with a subclass of signals starting at t = 0 (causal signals). Therefore, the expression [Eq. (4.2)] for the inverse Laplace transform remains unchanged. In practice, the term *Laplace transform* means *the unilateral Laplace transform*.

<sup>&</sup>lt;sup>†</sup> Actually, X(s) specifies x(t) within a null function n(t), which has the property that the area under  $|n(t)|^2$  is zero over any finite interval 0 to t (t > 0) (Lerch's theorem). For example, if two functions are identical everywhere except at finite number of points, they differ by a null function.

# EXISTENCE OF THE LAPLACE TRANSFORM

The variable *s* in the Laplace transform is complex in general, and it can be expressed as  $s = \sigma + j\omega$ . By definition,

$$X(s) = \int_{0^{-}}^{\infty} x(t)e^{-st} dt = \int_{0^{-}}^{\infty} [x(t)e^{-\sigma t}]e^{-j\omega t} dt$$

Because  $|e^{j\omega t}| = 1$ , the integral on the right-hand side of this equation converges if

$$\int_{0^{-}}^{\infty} \left| x(t)e^{-\sigma t} \right| dt < \infty \tag{4.8}$$

Hence the existence of the Laplace transform is guaranteed if the integral in Eq. (4.8) is finite for some value of  $\sigma$ . Any signal that grows no faster than an exponential signal  $Me^{\sigma_0 t}$  for some M and  $\sigma_0$  satisfies the condition of Eq. (4.8). Thus, if for some M and  $\sigma_0$ ,

$$|x(t)| \le M e^{\sigma_0 t} \tag{4.9}$$

we can choose  $\sigma > \sigma_0$  to satisfy Eq. (4.8).<sup>†</sup> The signal  $e^{t^2}$ , in contrast, grows at a rate faster than  $e^{\sigma_0 t}$ , and consequently is not Laplace–transformable.<sup>‡</sup> Fortunately such signals (which are not Laplace–transformable) are of little consequence from either a practical or a theoretical viewpoint. If  $\sigma_0$  is the smallest value of  $\sigma$  for which the integral in Eq. (4.8) is finite,  $\sigma_0$  is called the *abscissa of convergence* and the ROC of X(s) is Re  $s > \sigma_0$ . The abscissa of convergence for  $e^{-at}u(t)$  is -a (the ROC is Re s > -a).

# **EXAMPLE 4.2** Bilateral Laplace Transform of Common Causal Signals

Determine the Laplace transform of the following: (a)  $\delta(t)$ , (b) u(t), and (c)  $\cos \omega_0 t u(t)$ .

(a)

$$\mathcal{L}[\delta(t)] = \int_{0^{-}}^{\infty} \delta(t) e^{-st} dt$$

Using the sampling property [Eq. (1.11) with T = 0], we obtain

$$\mathcal{L}[\delta(t)] = 1$$
 for all s

that is,

$$\delta(t) \iff 1$$
 for all s

<sup>&</sup>lt;sup>†</sup> The condition of Eq. (4.9) is sufficient but not necessary for the existence of the Laplace transform. For example,  $x(t) = 1/\sqrt{t}$  is infinite at t = 0, and Eq. (4.9) cannot be satisfied; but the transform of  $1/\sqrt{t}$  exists and is given by  $\sqrt{\pi/s}$ .

<sup>&</sup>lt;sup>‡</sup> However, if we consider a truncated (finite-duration) signal  $e^{t^2}$ , the Laplace transform exists.

(b) To find the Laplace transform of u(t), recall that u(t) = 1 for  $t \ge 0$ . Therefore,

$$\mathcal{L}[u(t)] = \int_{0^{-}}^{\infty} u(t)e^{-st} dt = \int_{0^{-}}^{\infty} e^{-st} dt = -\frac{1}{s}e^{-st} \Big|_{0^{-}}^{\infty}$$
$$= \frac{1}{s} \qquad \text{Re } s > 0$$

We also could have obtained this result from Eq. (4.6) by letting a = 0. (c) Because  $\cos \omega_0 t u(t) = \frac{1}{2} [e^{j\omega_0 t} + e^{-j\omega_0 t}] u(t)$ , we know that

$$\mathcal{L}[\cos \omega_0 t u(t)] = \frac{1}{2} \mathcal{L}[e^{j\omega_0 t} u(t) + e^{-j\omega_0 t} u(t)]$$


From Eq. (4.6), it follows that

$$\mathcal{L}[\cos \omega_0 t u(t)] = \frac{1}{2} \left[ \frac{1}{s - j\omega_0} + \frac{1}{s + j\omega_0} \right] \qquad \operatorname{Re}(s \pm j\omega) = \operatorname{Re}s > 0$$
$$= \frac{s}{s^2 + \omega_0^2} \qquad \operatorname{Re}s > 0 \qquad (4.10)$$

For the unilateral Laplace transform, there is a unique inverse transform of X(s); consequently, there is no need to specify the ROC explicitly. For this reason, we shall generally ignore any mention of the ROC for unilateral transforms. Recall, also, that in the unilateral Laplace transform it is understood that every signal x(t) is zero for t < 0, and it is appropriate to indicate this fact by multiplying the signal by u(t).

# **DRILL 4.1 Bilateral Laplace Transform of Gate Functions**

By direct integration, find the Laplace transform X(s) and the region of convergence of X(s) for the gate functions shown in Fig. 4.2.

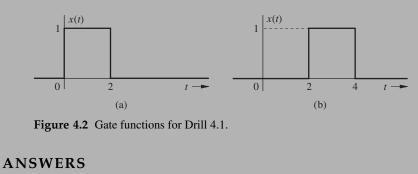

(a)  $\frac{1}{s}(1-e^{-2s})$  for all s (b)  $\frac{1}{s}(1-e^{-2s})e^{-2s}$  for all s

# 4.1-1 Finding the Inverse Transform

Finding the inverse Laplace transform by using Eq. (4.2) requires integration in the complex plane, a subject beyond the scope of this book (but see, e.g., [3]). For our purpose, we can find the inverse transforms from Table 4.1. All we need is to express X(s) as a sum of simpler functions of the forms listed in the table. Most of the transforms X(s) of practical interest are *rational functions*, that is, ratios of polynomials in *s*. Such functions can be expressed as a sum of simpler functions by using partial fraction expansion (see Sec. B.5).

Values of *s* for which X(s) = 0 are called the *zeros* of X(s); the values of *s* for which  $X(s) \to \infty$  are called the *poles* of X(s). If X(s) is a rational function of the form P(s)/Q(s), the roots of P(s) are the zeros and the roots of Q(s) are the poles of X(s).

# **EXAMPLE 4.3** Inverse Unilateral Laplace Transform

Find the inverse unilateral Laplace transforms of

(a) 
$$\frac{7s-6}{s^2-s-6}$$
  
(b)  $\frac{2s^2+5}{s^2+3s+2}$   
(c)  $\frac{6(s+34)}{s(s^2+10s+34)}$   
(d)  $\frac{8s+10}{(s+1)(s+2)^3}$ 

In no case is the inverse transform of these functions directly available in Table 4.1. Rather, we need to expand these functions into partial fractions, as discussed in Sec. B.5-1. Today, it is very easy to find partial fractions via software such as MATLAB. However, just as the availability of a calculator does not obviate the need for learning the mechanics of arithmetical operations (addition, multiplication, etc.), the widespread availability of computers does not eliminate the need to learn the mechanics of partial fraction expansion.

$$X(s) = \frac{7s - 6}{(s+2)(s-3)} = \frac{k_1}{s+2} + \frac{k_2}{s-3}$$

To determine  $k_1$ , corresponding to the term (s + 2), we cover up (conceal) the term (s + 2) in X(s) and substitute s = -2 (the value of s that makes s + 2 = 0) in the remaining expression (see Sec. B.5-2):

$$k_1 = \frac{7s-6}{(s+2)(s-3)}\Big|_{s=-2} = \frac{-14-6}{-2-3} = 4$$

Similarly, to determine  $k_2$  corresponding to the term (s - 3), we cover up the term (s - 3) in X(s) and substitute s = 3 in the remaining expression

$$k_2 = \frac{7s-6}{(s+2)(s-3)}\Big|_{s=3} = \frac{21-6}{3+2} = 3$$

Therefore,

$$X(s) = \frac{7s - 6}{(s+2)(s-3)} = \frac{4}{s+2} + \frac{3}{s-3}$$
(4.11)

#### CHECKING THE ANSWER

It is easy to make a mistake in partial fraction computations. Fortunately it is simple to check the answer by recognizing that X(s) and its partial fractions must be equal for every value of *s* if the partial fractions are correct. Let us verify this assertion in Eq. (4.11) for some convenient value, say, s = 0. Substitution of s = 0 in Eq. (4.11) yields<sup>†</sup>

$$1 = 2 - 1 = 1$$

We can now be sure of our answer with a high margin of confidence. Using pair 5 of Table 4.1 in Eq. (4.11), we obtain

$$x(t) = \mathcal{L}^{-1}\left(\frac{4}{s+2} + \frac{3}{s-3}\right) = (4e^{-2t} + 3e^{3t})u(t)$$

**(b)** 

$$X(s) = \frac{2s^2 + 5}{s^2 + 3s + 2} = \frac{2s^2 + 5}{(s+1)(s+2)}$$

Observe that X(s) is an improper function with M = N. In such a case, we can express X(s) as a sum of the coefficient of the highest power in the numerator plus partial fractions corresponding to the poles of X(s) (see Sec. B.5-5). In the present case, the coefficient of the highest power in the numerator is 2. Therefore,

$$X(s) = 2 + \frac{k_1}{s+1} + \frac{k_2}{s+2}$$

where

$$k_1 = \frac{2s^2 + 5}{(s+1)(s+2)} \bigg|_{s=-1} = \frac{2+5}{-1+2} = 7$$

and

$$k_2 = \frac{2s^2 + 5}{(s+1)(s+2)} \bigg|_{s=-2} = \frac{8+5}{-2+1} = -13$$

Therefore,

$$X(s) = 2 + \frac{7}{s+1} - \frac{13}{s+2}$$

From Table 4.1, pairs 1 and 5, we obtain

$$x(t) = 2\delta(t) + (7e^{-t} - 13e^{-2t})u(t)$$

<sup>&</sup>lt;sup>†</sup> Because  $X(s) = \infty$  at its poles, we should avoid the pole values (-2 and 3 in the present case) for checking. The answers may check even if partial fractions are wrong. This situation can occur when two or more errors cancel their effects. But the chances of this problem arising for randomly selected values of *s* are extremely small.

(c)

$$X(s) = \frac{6(s+34)}{s(s^2+10s+34)} = \frac{6(s+34)}{s(s+5-j3)(s+5+j3)}$$
$$= \frac{k_1}{s} + \frac{k_2}{s+5-j3} + \frac{k_2^*}{s+5+j3}$$

Note that the coefficients ( $k_2$  and  $k_2^*$ ) of the conjugate terms must also be conjugate (see Sec. B.5). Now

$$k_{1} = \frac{6(s+34)}{s(s^{2}+10s+34)} \bigg|_{s=0} = \frac{6 \times 34}{34} = 6$$
  
$$k_{2} = \frac{6(s+34)}{s(s+5-j3)(s+5+j3)} \bigg|_{s=-5+j3} = \frac{29+j3}{-3-j5} = -3+j4$$


Therefore,

$$k_2^* = -3 - j4$$

To use pair 10b of Table 4.1, we need to express  $k_2$  and  $k_2^*$  in polar form.

$$-3+j4 = \left(\sqrt{3^2+4^2}\right)e^{j\tan^{-1}(4/-3)} = 5e^{j\tan^{-1}(4/-3)}$$

Observe that  $\tan^{-1}(4/-3) \neq \tan^{-1}(-4/3)$ . This fact is evident in Fig. 4.3. For further discussion of this topic, see Ex. B.1.

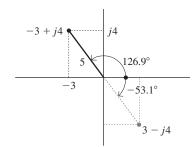

**Figure 4.3** Visualizing  $\tan^{-1}(-4/3) \neq \tan^{-1}(4/-3)$ .

From Fig. 4.3, we observe that

$$k_2 = -3 + i4 = 5e^{i126.9^\circ}$$

so

$$k_2^* = 5e^{-j126.9^\circ}$$

340

Therefore,

$$X(s) = \frac{6}{s} + \frac{5e^{j126.9^{\circ}}}{s+5-j3} + \frac{5e^{-j126.9^{\circ}}}{s+5+j3}$$

From Table 4.1 (pairs 2 and 10b), we obtain

$$x(t) = [6 + 10e^{-5t}\cos(3t + 126.9^{\circ})]u(t)$$

### ALTERNATIVE METHOD USING QUADRATIC FACTORS

The foregoing procedure involves considerable manipulation of complex numbers. Pair 10c (Table 4.1) indicates that the inverse transform of quadratic terms (with complex conjugate poles) can be found directly without having to find first-order partial fractions. We discussed such a procedure in Sec. B.5-2. For this purpose, we shall express X(s) as

$$X(s) = \frac{6(s+34)}{s(s^2+10s+34)} = \frac{k_1}{s} + \frac{As+B}{s^2+10s+34}$$

We have already determined that  $k_1 = 6$  by the (Heaviside) "cover-up" method. Therefore,

$$\frac{6(s+34)}{s(s^2+10s+34)} = \frac{6}{s} + \frac{As+B}{s^2+10s+34}$$

Clearing the fractions by multiplying both sides by  $s(s^2 + 10s + 34)$  yields

$$6(s+34) = (6+A)s^2 + (60+B)s + 204$$

Now, equating the coefficients of  $s^2$  and s on both sides yields

$$A = -6$$
 and  $B = -54$ 

and

$$X(s) = \frac{6}{s} + \frac{-6s - 54}{s^2 + 10s + 34}$$

We now use pairs 2 and 10c to find the inverse Laplace transform. The parameters for pair 10c are A = -6, B = -54, a = 5, c = 34,  $b = \sqrt{c - a^2} = 3$ , and

$$r = \sqrt{\frac{A^2c + B^2 - 2ABa}{c - a^2}} = 10 \qquad \theta = \tan^{-1}\frac{Aa - B}{A\sqrt{c - a^2}} = 126.9^{\circ}$$

Therefore,

$$x(t) = [6 + 10e^{-5t}\cos(3t + 126.9^\circ)]u(t)$$

which agrees with the earlier result.

## **SHORTCUTS**

The partial fractions with quadratic terms also can be obtained by using shortcuts. We have

$$X(s) = \frac{6(s+34)}{s(s^2+10s+34)} = \frac{6}{s} + \frac{As+B}{s^2+10s+34}$$

We can determine *A* by eliminating *B* on the right-hand side. This step can be accomplished by multiplying both sides of the equation for X(s) by *s* and then letting  $s \to \infty$ . This procedure yields

$$0 = 6 + A \implies A = -6$$

Therefore,

$$\frac{6(s+34)}{s(s^2+10s+34)} = \frac{6}{s} + \frac{-6s+B}{s^2+10s+34}$$

To find *B*, we let *s* take on any convenient value, say, s = 1, in this equation to obtain

$$\frac{210}{45} = 6 + \frac{B-6}{45} \implies B = -54$$

a result that agrees with the answer found earlier.

(**d**)

$$X(s) = \frac{8s+10}{(s+1)(s+2)^3} = \frac{k_1}{s+1} + \frac{a_0}{(s+2)^3} + \frac{a_1}{(s+2)^2} + \frac{a_2}{s+2}$$

where

$$k_{1} = \frac{8s+10}{(s+1)(s+2)^{3}} \bigg|_{s=-1} = 2$$

$$a_{0} = \frac{8s+10}{(s+1)(s+2)^{3}} \bigg|_{s=-2} = 6$$

$$a_{1} = \left\{ \frac{d}{ds} \left[ \frac{8s+10}{(s+1)(s+2)^{3}} \right] \right\}_{s=-2} = -2$$

$$a_{2} = \frac{1}{2} \left\{ \frac{d^{2}}{ds^{2}} \left[ \frac{8s+10}{(s+1)(s+2)^{3}} \right] \right\}_{s=-2} = -2$$

Therefore,

$$X(s) = \frac{2}{s+1} + \frac{6}{(s+2)^3} - \frac{2}{(s+2)^2} - \frac{2}{s+2}$$

and

$$x(t) = [2e^{-t} + (3t^2 - 2t - 2)e^{-2t}]u(t)$$

# Alternative Method: A Hybrid of Heaviside and Clearing Fractions

In this method, the simpler coefficients  $k_1$  and  $a_0$  are determined by the Heaviside "cover-up" procedure, as discussed earlier. To determine the remaining coefficients, we use the clearing-fraction method. Using the values  $k_1 = 2$  and  $a_0 = 6$  obtained earlier by the Heaviside "cover-up" method, we have

$$\frac{8s+10}{(s+1)(s+2)^3} = \frac{2}{s+1} + \frac{6}{(s+2)^3} + \frac{a_1}{(s+2)^2} + \frac{a_2}{s+2}$$

We now clear fractions by multiplying both sides of the equation by  $(s + 1)(s + 2)^3$ . This procedure yields<sup>†</sup>

$$8s + 10 = 2(s+2)^3 + 6(s+1) + a_1(s+1)(s+2) + a_2(s+1)(s+2)^2$$
  
= (2+a\_2)s<sup>3</sup> + (12+a\_1+5a\_2)s<sup>2</sup> + (30+3a\_1+8a\_2)s + (22+2a\_1+4a\_2)

Equating coefficients of  $s^3$  and  $s^2$  on both sides, we obtain

$$0 = (2 + a_2) \implies a_2 = -2$$
  
$$0 = 12 + a_1 + 5a_2 = 2 + a_1 \implies a_1 = -2$$

We can stop here if we wish, since the two desired coefficients  $a_1$  and  $a_2$  have already been found. However, equating the coefficients of  $s^1$  and  $s^0$  serves as a check on our answers. This step yields

$$8 = 30 + 3a_1 + 8a_2$$
$$10 = 22 + 2a_1 + 4a_2$$

Substitution of  $a_1 = a_2 = -2$ , obtained earlier, satisfies these equations. This step confirms the correctness of our answers.

# ANOTHER ALTERNATIVE: A HYBRID OF HEAVISIDE AND SHORTCUTS

In this method, the simpler coefficients  $k_1$  and  $a_0$  are determined by the Heaviside "cover-up" procedure, as discussed earlier. The usual shortcuts are then used to determine the remaining coefficients. Using the values  $k_1 = 2$  and  $a_0 = 6$ , determined earlier by the Heaviside method, we have

$$\frac{8s+10}{(s+1)(s+2)^3} = \frac{2}{s+1} + \frac{6}{(s+2)^3} + \frac{a_1}{(s+2)^2} + \frac{a_2}{s+2}$$

There are two unknowns,  $a_1$  and  $a_2$ . If we multiply both sides by s and then let  $s \to \infty$ , we eliminate  $a_1$ . This procedure yields

 $0 = 2 + a_2 \implies a_2 = -2$ 

Therefore,

$$\frac{8s+10}{(s+1)(s+2)^3} = \frac{2}{s+1} + \frac{6}{(s+2)^3} + \frac{a_1}{(s+2)^2} - \frac{2}{s+2}$$

There is now only one unknown,  $a_1$ . This value can be determined readily by setting *s* equal to any convenient value, say, s = 0. This step yields

$$\frac{10}{8} = 2 + \frac{3}{4} + \frac{a_1}{4} - 1 \implies a_1 = -2$$

<sup>&</sup>lt;sup>†</sup> We could have cleared fractions without finding  $k_1$  and  $a_0$ . This alternative, however, proves more laborious because it increases the number of unknowns to 4. By predetermining  $k_1$  and  $a_0$ , we reduce the unknowns to 2. Moreover, this method provides a convenient check on the solution. This hybrid procedure achieves the best of both methods.

## **EXAMPLE 4.4** Inverse Laplace Transform with MATLAB

Using the MATLAB residue command, determine the inverse Laplace transform of each of the following functions:

(a) 
$$X_a(s) = \frac{2s^2 + 5}{s^2 + 3s + 2}$$
  
(b)  $X_b(s) = \frac{2s^2 + 7s + 4}{(s+1)(s+2)^2}$   
(c)  $X_c(s) = \frac{8s^2 + 21s + 19}{(s+2)(s^2 + s + 7)}$ 

In each case, we use the MATLAB residue command to perform the necessary partial fraction expansions. The inverse Laplace transform follows using Table 4.1.

```
>> num = [2 0 5]; den = [1 3 2];
>> [r, p, k] = residue(num,den)
r = -13
7
p = -2
```

Therefore,  $X_a(s) = -13/(s+2) + 7/(s+1) + 2$  and  $x_a(t) = (-13e^{-2t} + 7e^{-t})u(t) + 2\delta(t)$ .

```
(b)
```

k =

-1

2

(a)

Therefore,  $X_b(s) = 3/(s+2) + 2/(s+2)^2 - 1/(s+1)$  and  $x_b(t) = (3e^{-2t} + 2te^{-2t} - e^{-t})u(t)$ .

(c) In this case, a few calculations are needed beyond the results of the residue command so that pair 10b of Table 4.1 can be utilized.

>> num = [8 21 19]; den = [conv([1 2],[1 1 7])];
>> [r, p, k] = residue(num,den)

```
r = 3.5000-0.48113i
        3.5000+0.48113i
        1.0000
p = -0.5000+2.5981i
        -0.5000-2.5981i
        -2.0000
k = []
>> ang = angle(r), mag = abs(r)
        ang = -0.13661
            0.13661
            0.13661
            0
mag = 3.5329
            3.5329
            1.0000
```

Thus,

$$X_c(s) = \frac{1}{s+2} + \frac{3.5329e^{-j0.13661}}{s+0.5-j2.5981} + \frac{3.5329e^{j0.13661}}{s+0.5+j2.5981}$$

and

$$x_c(t) = [e^{-2t} + 1.7665e^{-0.5t}\cos(2.5981t - 0.1366)]u(t).$$

# **EXAMPLE 4.5** Symbolic Laplace and Inverse Laplace Transforms with MATLAB

Using MATLAB's symbolic math toolbox, determine the following:

(a) the direct unilateral Laplace transform of  $x_a(t) = \sin(at) + \cos(bt)$ 

(**b**) the inverse unilateral Laplace transform of  $X_b(s) = as^2/(s^2 + b^2)$ 

(a) Here, we use the sym command to symbolically define our variables and expression for  $x_a(t)$ , and then we use the laplace command to compute the (unilateral) Laplace transform.

>> syms a b t; x\_a = sin(a\*t)+cos(b\*t);
>> X\_a = laplace(x\_a);
X\_a = a/(a^2 + s^2) + s/(b^2 + s^2)

Therefore,  $X_a(s) = \frac{a}{s^2 + a^2} + \frac{s}{s^2 + b^2}$ . It is also easy to use MATLAB to determine  $X_a(s)$  in standard rational form.

>>  $X_a = collect(X_a)$  $X_a = (a^2*s + a*b^2 + a*s^2 + s^3)/(s^4 + (a^2 + b^2)*s^2 + a^2*b^2)$ 

Thus, we also see that  $X_a(s) = \frac{s^3 + as^2 + a^2s + ab^2}{s^4 + (a^2 + b^2)s^2 + a^2b^2}$ 

(b) A similar approach is taken for the inverse Laplace transform, except that the ilaplace command is used rather than the laplace command.

```
>> syms a b s; X_b = (a*s^2)/(s^2+b^2);
>> x_b = ilaplace(X_b)
x_b = a*dirac(t) - a*b*sin(b*t)
```

Therefore,  $x_b(t) = a\delta(t) - ab\sin(bt)u(t)$ .

# **DRILL 4.2 Laplace Transform**

Show that the Laplace transform of  $10e^{-3t}\cos(4t+53.13^\circ)$  is  $(6s-14)/(s^2+6s+25)$ . Use Table 4.1.

## **DRILL 4.3 Inverse Laplace Transform**

Find the inverse Laplace transform of the following:

(a) 
$$\frac{s+17}{s^2+4s-5}$$
  
(b)  $\frac{3s-5}{(s+1)(s^2+2s+5)}$   
(c)  $\frac{16s+43}{(s-2)(s+3)^2}$ 

### ANSWERS


(a) 
$$(3e^t - 2e^{-5t})u(t)$$

- **(b)**  $\left[-2e^{-t} + \frac{5}{2}e^{-t}\cos(2t 36.87^{\circ})\right]u(t)$
- (c)  $[3e^{2t} + (t-3)e^{-3t}]u(t)$

# A HISTORICAL NOTE: MARQUIS PIERRE-SIMON DE LAPLACE (1749–1827)

The Laplace transform is named after the great French mathematician and astronomer Laplace, who first presented the transform and its applications to differential equations in a paper published in 1779.

Laplace developed the foundations of potential theory and made important contributions to special functions, probability theory, astronomy, and celestial mechanics. In his *Exposition du système du monde* (1796), Laplace formulated a nebular hypothesis of cosmic origin and tried to explain the universe as a pure mechanism. In his *Traité de mécanique céleste* (*celestial mechanics*), which completed the work of Newton, Laplace used mathematics and physics to subject the solar system and all heavenly bodies to the laws of motion and the principle of gravitation. Newton had

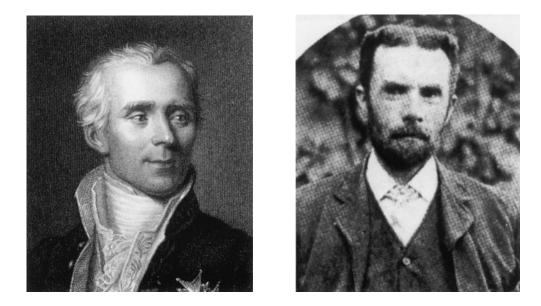

Pierre-Simon de Laplace and Oliver Heaviside

been unable to explain the irregularities of some heavenly bodies; in desperation, he concluded that God himself must intervene now and then to prevent such catastrophes as Jupiter eventually falling into the sun (and the moon into the earth), as predicted by Newton's calculations. Laplace proposed to show that these irregularities would correct themselves periodically and that a little patience—in Jupiter's case, 929 years—would see everything returning automatically to order; thus there was no reason why the solar and the stellar systems could not continue to operate by the laws of Newton and Laplace to the end of time [4].

Laplace presented a copy of *Mécanique céleste* to Napoleon, who, after reading the book, took Laplace to task for not including God in his scheme: "You have written this huge book on the system of the world without once mentioning the author of the universe." "Sire," Laplace retorted, "I had no need of that hypothesis." Napoleon was not amused, and when he reported this reply to another great mathematician-astronomer, Louis de Lagrange, the latter remarked, "Ah, but that is a fine hypothesis. It explains so many things" [5].

Napoleon, following his policy of honoring and promoting scientists, made Laplace the minister of the interior. To Napoleon's dismay, however, the new appointee attempted to bring "the spirit of infinitesimals" into administration, and so Laplace was transferred hastily to the Senate.

### OLIVER HEAVISIDE (1850–1925)

Although Laplace published his transform method to solve differential equations in 1779, the method did not catch on until a century later. It was rediscovered independently in a rather awkward form by an eccentric British engineer, Oliver Heaviside (1850–1925), one of the tragic figures in the history of science and engineering. Despite his prolific contributions to electrical engineering, he was severely criticized during his lifetime and was neglected later to the point that

hardly a textbook today mentions his name or credits him with contributions. Nevertheless, his studies had a major impact on many aspects of modern electrical engineering. It was Heaviside who made transatlantic communication possible by inventing cable loading, but few mention him as a pioneer or an innovator in telephony. It was Heaviside who suggested the use of inductive cable loading, but the credit is given to M. Pupin, who was not even responsible for building the first loading coil.<sup>†</sup> In addition, Heaviside was [6]:

- The first to find a solution to the distortionless transmission line.
- The innovator of lowpass filters.
- The first to write Maxwell's equations in modern form.
- The codiscoverer of rate energy transfer by an electromagnetic field.
- An early champion of the now-common phasor analysis.
- An important contributor to the development of vector analysis. In fact, he essentially created the subject independently of Gibbs [7].
- An originator of the use of operational mathematics used to solve linear integro-differential equations, which eventually led to rediscovery of the ignored Laplace transform.
- The first to theorize (along with Kennelly of Harvard) that a conducting layer (the Kennelly–Heaviside layer) of atmosphere exists, which allows radio waves to follow earth's curvature instead of traveling off into space in a straight line.
- The first to posit that an electrical charge would increase in mass as its velocity increases, an anticipation of an aspect of Einstein's special theory of relativity [8]. He also forecast the possibility of superconductivity.

Heaviside was a self-made, self-educated man. Although his formal education ended with elementary school, he eventually became a pragmatically successful mathematical physicist. He began his career as a telegrapher, but increasing deafness forced him to retire at the age of 24. He then devoted himself to the study of electricity. His creative work was disdained by many professional mathematicians because of his lack of formal education and his unorthodox methods.

Heaviside had the misfortune to be criticized both by mathematicians, who faulted him for lack of rigor, and by men of practice, who faulted him for using too much mathematics and thereby confusing students. Many mathematicians, trying to find solutions to the distortionless transmission line, failed because no rigorous tools were available at the time. Heaviside succeeded because he used mathematics not with rigor, but with insight and intuition. Using his much maligned operational method, Heaviside successfully attacked problems that the rigid mathematicians could not solve, problems such as the flow-of-heat in a body of spatially varying conductivity. Heaviside brilliantly used this method in 1895 to demonstrate a fatal flaw in Lord Kelvin's determination of the geological age of the earth by secular cooling; he used the same flow-of-heat theory as for his cable analysis. Yet the mathematicians of the Royal Society remained unmoved and were not the least impressed by the fact that Heaviside had found the answer to problems no one else could solve. Many mathematicians who examined his work dismissed it

<sup>&</sup>lt;sup>†</sup> Heaviside developed the theory for cable loading, George Campbell built the first loading coil, and the telephone circuits using Campbell's coils were in operation before Pupin published his paper. In the legal fight over the patent, however, Pupin won the battle: he was a shrewd self-promoter, and Campbell had poor legal support.

with contempt, asserting that his methods were either complete nonsense or a rehash of known ideas [6].

Sir William Preece, the chief engineer of the British Post Office, a savage critic of Heaviside, ridiculed Heaviside's work as too theoretical and, therefore, leading to faulty conclusions. Heaviside's work on transmission lines and loading was dismissed by the British Post Office and might have remained hidden, had not Lord Kelvin himself publicly expressed admiration for it [6].

Heaviside's operational calculus may be formally inaccurate, but in fact it anticipated the operational methods developed in more recent years [9]. Although his method was not fully understood, it provided correct results. When Heaviside was attacked for the vague meaning of his operational calculus, his pragmatic reply was, "Shall I refuse my dinner because I do not fully understand the process of digestion?"

Heaviside lived as a bachelor hermit, often in near-squalid conditions, and died largely unnoticed, in poverty. His life demonstrates the persistent arrogance and snobbishness of the intellectual establishment, which does not respect creativity unless it is presented in the strict language of the establishment.

## **4.2 Some Properties of the Laplace Transform**

Properties of the Laplace transform are useful not only in the derivation of the Laplace transform of functions but also in the solutions of linear integro-differential equations. A glance at Eqs. (4.2) and (4.1) shows that there is a certain measure of symmetry in going from x(t) to X(s), and vice versa. This symmetry or duality is also carried over to the properties of the Laplace transform. This fact will be evident in the following development.

We are already familiar with two properties: linearity [Eq. (4.3)] and the uniqueness property of the Laplace transform discussed earlier.

### 4.2-1 Time Shifting

The time-shifting property states that if

 $x(t) \iff X(s)$ 

then for  $t_0 \ge 0$ 

$$x(t-t_0) \Longleftrightarrow X(s)e^{-st_0} \tag{4.12}$$

Observe that x(t) starts at t = 0, and, therefore,  $x(t - t_0)$  starts at  $t = t_0$ . This fact is implicit, but is not explicitly indicated in Eq. (4.12). This often leads to inadvertent errors. To avoid such a pitfall, we should restate the property as follows. If

$$x(t)u(t) \iff X(s)$$

then

$$x(t-t_0)u(t-t_0) \Longleftrightarrow X(s)e^{-st_0} \qquad t_0 \ge 0$$

Proof.

$$\mathcal{L}[x(t-t_0)u(t-t_0)] = \int_0^\infty x(t-t_0)u(t-t_0)e^{-st} dt$$

Setting  $t - t_0 = \tau$ , we obtain

$$\mathcal{L}[x(t-t_0)u(t-t_0)] = \int_{-t_0}^{\infty} x(\tau)u(\tau)e^{-s(\tau+t_0)} d\tau$$

Because  $u(\tau) = 0$  for  $\tau < 0$  and  $u(\tau) = 1$  for  $\tau \ge 0$ , the limits of integration can be taken from 0 to  $\infty$ . Thus,

$$\mathcal{L}[x(t-t_0)u(t-t_0)] = \int_0^\infty x(\tau)e^{-s(\tau+t_0)} d\tau$$
$$= e^{-st_0} \int_0^\infty x(\tau)e^{-s\tau} d\tau$$
$$= X(s)e^{-st_0}$$

Note that  $x(t - t_0)u(t - t_0)$  is the signal x(t)u(t) delayed by  $t_0$  seconds. The time-shifting property states that *delaying a signal by*  $t_0$  *seconds amounts to multiplying its transform*  $e^{-st_0}$ .

This property of the unilateral Laplace transform holds only for positive  $t_0$  because if  $t_0$  were negative, the signal  $x(t - t_0)u(t - t_0)$  may not be causal.

We can readily verify this property in Drill 4.1. If the signal in Fig. 4.2a is x(t)u(t), then the signal in Fig. 4.2b is x(t-2)u(t-2). The Laplace transform for the pulse in Fig. 4.2a is  $(1/s)(1-e^{-2s})$ . Therefore, the Laplace transform for the pulse in Fig. 4.2b is  $(1/s)(1-e^{-2s})e^{-2s}$ .


The time-shifting property proves very convenient in finding the Laplace transform of functions with different descriptions over different intervals, as the following example demonstrates.

## **EXAMPLE 4.6** Laplace Transform and the Time-Shifting Property

Find the Laplace transform of x(t) depicted in Fig. 4.4a.

Describing mathematically a function such as the one in Fig. 4.4a is discussed in Sec. 1.4. The function x(t) in Fig. 4.4a can be described as a sum of two components shown in Fig. 4.4b. The equation for the first component is t - 1 over  $1 \le t \le 2$  so that this component can be described by (t-1)[u(t-1) - u(t-2)]. The second component can be described by u(t-2) - u(t-4). Therefore,

$$x(t) = (t-1)[u(t-1) - u(t-2)] + [u(t-2) - u(t-4)]$$
  
=  $(t-1)u(t-1) - (t-1)u(t-2) + u(t-2) - u(t-4)$  (4.13)

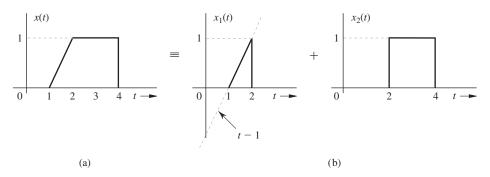

**Figure 4.4** Finding a piecewise representation of a signal x(t).

The first term on the right-hand side is the signal tu(t) delayed by 1 second. Also, the third and fourth terms are the signal u(t) delayed by 2 and 4 seconds, respectively. The second term, however, cannot be interpreted as a delayed version of any entry in Table 4.1. For this reason, we rearrange it as

$$(t-1)u(t-2) = (t-2+1)u(t-2) = (t-2)u(t-2) + u(t-2)$$

We have now expressed the second term in the desired form as tu(t) delayed by 2 seconds plus u(t) delayed by 2 seconds. With this result, Eq. (4.13) can be expressed as

$$x(t) = (t-1)u(t-1) - (t-2)u(t-2) - u(t-4)$$

Application of the time-shifting property to  $tu(t) \iff 1/s^2$  yields

$$(t-1)u(t-1) \iff \frac{1}{s^2}e^{-s}$$
 and  $(t-2)u(t-2) \iff \frac{1}{s^2}e^{-2s}$ 

Also

$$u(t) \Longleftrightarrow \frac{1}{s}$$
 and  $u(t-4) \Longleftrightarrow \frac{1}{s}e^{-4s}$ 

Therefore,

$$X(s) = \frac{1}{s^2}e^{-s} - \frac{1}{s^2}e^{-2s} - \frac{1}{s}e^{-4s}$$

# **EXAMPLE 4.7** Inverse Laplace Transform and the Time-Shifting Property

Find the inverse Laplace transform of

$$X(s) = \frac{s+3+5e^{-2s}}{(s+1)(s+2)}$$

Observe the exponential term  $e^{-2s}$  in the numerator of X(s), indicating time delay. In such a case, we should separate X(s) into terms with and without a delay factor, as

$$X(s) = \underbrace{\frac{s+3}{(s+1)(s+2)}}_{X_1(s)} + \underbrace{\frac{5e^{-2s}}{(s+1)(s+2)}}_{X_2(s)e^{-2s}}$$

where

$$X_1(s) = \frac{s+3}{(s+1)(s+2)} = \frac{2}{s+1} - \frac{1}{s+2}$$
$$X_2(s) = \frac{5}{(s+1)(s+2)} = \frac{5}{s+1} - \frac{5}{s+2}$$

Therefore,

$$x_1(t) = (2e^{-t} - e^{-2t})u(t)$$
  
$$x_2(t) = 5(e^{-t} - e^{-2t})u(t)$$

Also, because


$$X(s) = X_1(s) + X_2(s)e^{-2s}$$

we can write

$$x(t) = x_1(t) + x_2(t-2)$$
  
=  $(2e^{-t} - e^{-2t})u(t) + 5[e^{-(t-2)} - e^{-2(t-2)}]u(t-2)$ 

# DRILL 4.4 Laplace Transform and the Time-Shifting Property

Find the Laplace transform of the signal illustrated in Fig. 4.5.

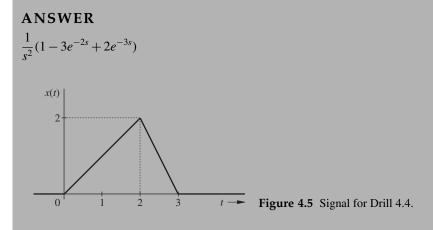

# **DRILL 4.5** Inverse Laplace Transform and the Time-Shifting Property

Find the inverse Laplace transform of  $X(s) = \frac{3e^{-2s}}{(s-1)(s+2)}$ .

**ANSWER**  $[e^{t-2} - e^{-2(t-2)}]u(t-2)$ 

## 4.2-2 Frequency Shifting

The frequency-shifting property states that if

$$x(t) \iff X(s)$$

then

$$x(t)e^{s_0t} \Longleftrightarrow X(s-s_0) \tag{4.14}$$

Observe the symmetry (or duality) between this property and the time-shifting property of Eq. (4.12).

Proof.

$$\mathcal{L}[x(t)e^{s_0t}] = \int_{0^-}^{\infty} x(t)e^{s_0t}e^{-st} dt = \int_{0^-}^{\infty} x(t)e^{-(s-s_0)t} dt = X(s-s_0)$$

# **EXAMPLE 4.8 Frequency-Shifting Property**

Derive pair 9a in Table 4.1 from pair 8a and the frequency-shifting property.

Pair 8a is

$$\cos bt u(t) \Longleftrightarrow \frac{s}{s^2 + b^2}$$

From the frequency-shifting property [Eq. (4.14)] with  $s_0 = -a$ , we obtain

$$e^{-at}\cos bt u(t) \iff \frac{s+a}{(s+a)^2+b^2}$$

## **DRILL 4.6 Frequency-Shifting Property**

Derive pair 6 in Table 4.1 from pair 3 and the frequency-shifting property.

We are now ready to consider the two most important properties of the Laplace transform: time differentiation and time integration.

# 4.2-3 The Time-Differentiation Property

The time-differentiation property states that  $if^{\dagger}$ 

$$x(t) \iff X(s)$$

then

$$\frac{dx(t)}{dt} \Longleftrightarrow sX(s) - x(0^{-})$$

Repeating this property a second time (differentiating twice) yields

$$\frac{d^2 x(t)}{dt^2} \Longleftrightarrow s^2 X(s) - sx(0^-) - \dot{x}(0^-)$$

Repeated differentiation yields

$$\frac{d^{n}x(t)}{dt^{n}} \iff s^{n}X(s) - s^{n-1}x(0^{-}) - s^{n-2}\dot{x}(0^{-}) - \dots - x^{(n-1)}(0^{-})$$
$$= s^{n}X(s) - \sum_{k=1}^{n} s^{n-k}x^{(k-1)}(0^{-})$$
(4.15)

where  $x^{(r)}(0^{-})$  is  $d^{r}x/dt^{r}$  at  $t = 0^{-}$ .

Proof.

$$\mathcal{L}\left[\frac{dx(t)}{dt}\right] = \int_{0^{-}}^{\infty} \frac{dx(t)}{dt} e^{-st} dt$$

Integrating by parts, we obtain

$$\mathcal{L}\left[\frac{dx(t)}{dt}\right] = x(t)e^{-st}\Big|_{0^{-}}^{\infty} + s\int_{0^{-}}^{\infty} x(t)e^{-st}\,dt$$


For the Laplace integral to converge [i.e., for X(s) to exist], it is necessary that  $x(t)e^{-st} \to 0$  as  $t \to \infty$  for the values of *s* in the ROC for X(s). Thus,

$$\mathcal{L}\left[\frac{dx(t)}{dt}\right] = -x(0^{-}) + sX(s)$$

Repeated application of this procedure yields Eq. (4.15).

$$tx(t) \iff -\frac{d}{ds}X(s)$$

<sup>&</sup>lt;sup>†</sup> The dual of the time-differentiation property is the frequency-differentiation property, which states that

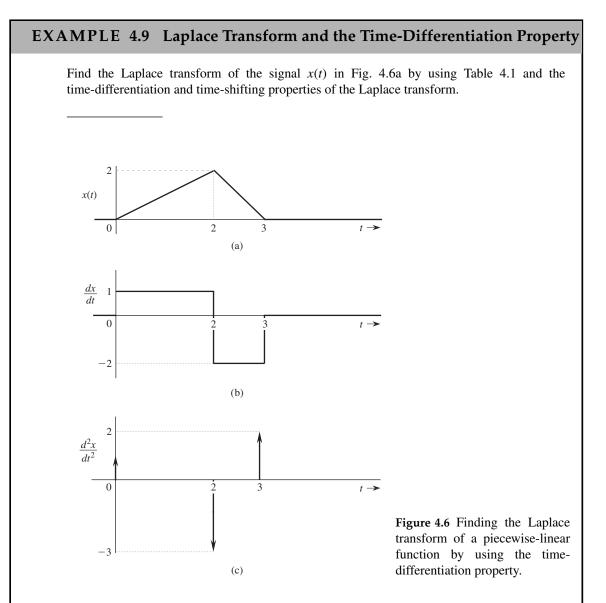

Figures 4.6b and 4.6c show the first two derivatives of x(t). Recall that the derivative at a point of jump discontinuity is an impulse of strength equal to the amount of jump [see Eq. (1.12)]. Therefore,

$$\frac{d^2x(t)}{dt^2} = \delta(t) - 3\delta(t-2) + 2\delta(t-3)$$

The Laplace transform of this equation yields

$$\mathcal{L}\left(\frac{d^2x(t)}{dt^2}\right) = \mathcal{L}\left[\delta(t) - 3\delta(t-2) + 2\delta(t-3)\right]$$

Using the time-differentiation property of Eq. (4.15), the time-shifting property of Eq. (4.12), and the facts that  $x(0^-) = \dot{x}(0^-) = 0$ , and  $\delta(t) \iff 1$ , we obtain

$$s^{2}X(s) - 0 - 0 = 1 - 3e^{-2s} + 2e^{-3s}$$

Therefore,

$$X(s) = \frac{1}{s^2} (1 - 3e^{-2s} + 2e^{-3s})$$

which confirms the earlier result in Drill 4.4.

# 4.2-4 The Time-Integration Property

The time-integration property states that  $if^{\dagger}$ 

$$x(t) \iff X(s)$$

then

$$\int_{0^{-}}^{t} x(\tau) d\tau \iff \frac{X(s)}{s} \quad \text{and} \quad \int_{-\infty}^{t} x(\tau) d\tau \iff \frac{X(s)}{s} + \frac{\int_{-\infty}^{0^{-}} x(\tau) d\tau}{s} \quad (4.16)$$

**Proof.** To prove the first part of Eq. (4.16), we define

$$g(t) = \int_{0^-}^t x(\tau) \, d\tau$$

so that

$$\frac{d}{dt}g(t) = x(t) \qquad \text{and} \qquad g(0^-) = 0$$

Now, if

$$g(t) \iff G(s)$$

then

$$X(s) = \mathcal{L}\left[\frac{d}{dt}g(t)\right] = sG(s) - g(0^{-}) = sG(s)$$

$$\frac{x(t)}{t} \Longleftrightarrow \int_{s}^{\infty} X(z) \, dz$$

<sup>&</sup>lt;sup>†</sup> The dual of the time-integration property is the frequency-integration property, which states that

#### 4.2 Some Properties of the Laplace Transform 357

Therefore,

$$G(s) = \frac{X(s)}{s}$$

or

$$\int_{0^{-}}^{t} x(\tau) \, d\tau \Longleftrightarrow \frac{X(s)}{s}$$

To prove the second part of Eq. (4.16), observe that

$$\int_{-\infty}^{t} x(\tau) d\tau = \int_{-\infty}^{0^{-}} x(\tau) d\tau + \int_{0^{-}}^{t} x(\tau) d\tau$$

Note that the first term on the right-hand side is a constant for  $t \ge 0$ . Taking the Laplace transform of the foregoing equation and using the first part of Eq. (4.16), we obtain

$$\int_{-\infty}^{t} x(\tau) d\tau \longleftrightarrow \frac{\int_{-\infty}^{0^{-}} x(\tau) d\tau}{s} + \frac{X(s)}{s}$$

## 4.2-5 The Scaling Property

The scaling property states that if

$$x(t) \iff X(s)$$

then for a > 0

$$x(at) \iff \frac{1}{a} X\left(\frac{s}{a}\right)$$

The proof is given in Ch. 7. Note that *a* is restricted to positive values because if x(t) is causal, then x(at) is anticausal (is zero for  $t \ge 0$ ) for negative *a*, and anticausal signals are not permitted in the (unilateral) Laplace transform.

Recall that x(at) is the signal x(t) time-compressed by the factor a, and  $X(\frac{s}{a})$  is X(s) expanded along the s scale by the same factor a (see Sec. 1.2-2). The scaling property states that *time compression of a signal by a factor a causes expansion of its Laplace transform in the s scale by the same factor. Similarly, time expansion* x(t) *causes compression of* X(s) *in the s scale by the same factor.* 

## 4.2-6 Time Convolution and Frequency Convolution

Another pair of properties states that if

$$x_1(t) \iff X_1(s)$$
 and  $x_2(t) \iff X_2(s)$ 

then (*time-convolution property*)

$$x_1(t) * x_2(t) \Longleftrightarrow X_1(s) X_2(s) \tag{4.17}$$

and (*frequency-convolution property*)

$$x_1(t)x_2(t) \Longleftrightarrow \frac{1}{2\pi j} [X_1(s) * X_2(s)]$$

Observe the symmetry (or duality) between the two properties. Proofs of these properties are postponed to Ch. 7.

Equation (2.39) indicates that H(s), the transfer function of an LTIC system, is the Laplace transform of the system's impulse response h(t); that is,

$$h(t) \Longleftrightarrow H(s)$$

If the system is causal, h(t) is causal, and, according to Eq. (2.39), H(s) is the unilateral Laplace transform of h(t). Similarly, if the system is noncausal, h(t) is noncausal, and H(s) is the bilateral transform of h(t).

We can apply the time-convolution property to the LTIC input–output relationship y(t) = x(t) \* h(t) to obtain

$$Y(s) = X(s)H(s) \tag{4.18}$$

The response y(t) is the zero-state response of the LTIC system to the input x(t). From Eq. (4.18), it follows that

$$H(s) = \frac{Y(s)}{X(s)} = \frac{\mathcal{L}[\text{zero-state response}]}{\mathcal{L}[\text{input}]}$$
(4.19)

This may be considered an alternate definition of the LTIC system transfer function H(s). It is the *ratio of the transform of zero-state response to the transform of the input*.

## **EXAMPLE 4.10** Time-Convolution Property

Use the time-convolution property of the Laplace transform to determine  $c(t) = e^{at}u(t) * e^{bt}u(t)$ .

From Eq. (4.17), it follows that

$$C(s) = \frac{1}{(s-a)(s-b)} = \frac{1}{a-b} \left[ \frac{1}{s-a} - \frac{1}{s-b} \right]$$

The inverse transform of this equation yields

$$c(t) = \frac{1}{a-b}(e^{at} - e^{bt})u(t)$$

#### INITIAL AND FINAL VALUES

In certain applications, it is desirable to know the values of x(t) as  $t \to 0$  and  $t \to \infty$  [initial and final values of x(t)] from the knowledge of its Laplace transform X(s). Initial and final value theorems provide such information.

The initial value theorem states that if x(t) and its derivative dx/dt are both Laplace transformable, then

$$x(0^+) = \lim_{s \to \infty} sX(s) \tag{4.20}$$

provided the limit on the right-hand side of Eq. (4.20) exists.

*The final value theorem* states that if both x(t) and dx/dt are Laplace transformable, then

$$\lim_{t \to \infty} x(t) = \lim_{s \to 0} sX(s) \tag{4.21}$$

provided sX(s) has no poles in the RHP or on the imaginary axis. To prove these theorems, we begin by setting n = 1 in Eq. (4.15). Using the definition of the Laplace transform, we see that

$$sX(s) - x(0^{-}) = \int_{0^{-}}^{\infty} \frac{dx(t)}{dt} e^{-st} dt$$
  
=  $\int_{0^{-}}^{0^{+}} \frac{dx(t)}{dt} e^{-st} dt + \int_{0^{+}}^{\infty} \frac{dx(t)}{dt} e^{-st} dt$   
=  $x(t) \Big|_{0^{-}}^{0^{+}} + \int_{0^{+}}^{\infty} \frac{dx(t)}{dt} e^{-st} dt$   
=  $x(0^{+}) - x(0^{-}) + \int_{0^{+}}^{\infty} \frac{dx(t)}{dt} e^{-st} dt$ 

Therefore,

$$sX(s) = x(0^+) + \int_{0^+}^{\infty} \frac{dx(t)}{dt} e^{-st} dt$$

and

$$\lim_{s \to \infty} sX(s) = x(0^+) + \lim_{s \to \infty} \int_{0^+}^{\infty} \frac{dx(t)}{dt} e^{-st} dt$$
$$= x(0^+) + \int_{0^+}^{\infty} \frac{dx(t)}{dt} \left(\lim_{s \to \infty} e^{-st}\right) dt$$
$$= x(0^+)$$

**Comment.** The initial value theorem applies only if X(s) is strictly proper (M < N), because for  $M \ge N$ ,  $\lim_{s\to\infty} sX(s)$  does not exist, and the theorem does not apply. In such a case, we can still find the answer by using long division to express X(s) as a polynomial in *s* plus a strictly proper fraction, where M < N. For example, by using long division, we can express

$$\frac{s^3 + 3s^2 + s + 1}{s^2 + 2s + 1} = (s+1) - \frac{2s}{s^2 + 2s + 1}$$

The inverse transform of the polynomial in *s* is in terms of  $\delta(t)$ , and its derivatives, which are zero at  $t = 0^+$ . In the foregoing case, the inverse transform of s + 1 is  $\dot{\delta}(t) + \delta(t)$ . Hence, the desired

 $x(0^+)$  is the value of the remainder (strictly proper) fraction, for which the initial value theorem applies. In the present case,

$$x(0^+) = \lim_{s \to \infty} \frac{-2s^2}{s^2 + 2s + 1} = -2$$

To prove the final value theorem, we let n = 1 and  $s \rightarrow 0$  in Eq. (4.15) to obtain

$$\lim_{s \to 0} [sX(s) - x(0^{-})] = \lim_{s \to 0} \int_{0^{-}}^{\infty} \frac{dx(t)}{dt} e^{-st} dt = \int_{0^{-}}^{\infty} \frac{dx(t)}{dt} dt$$
$$= x(t) \Big|_{0^{-}}^{\infty} = \lim_{t \to \infty} x(t) - x(0^{-})$$

a deduction that leads to the desired result, Eq. (4.21).

**Comment.** The final value theorem applies only if the poles of X(s) are in the LHP (including s = 0). If X(s) has a pole in the RHP, x(t) contains an exponentially growing term and  $x(\infty)$  does not exist. If there is a pole on the imaginary axis, then x(t) contains an oscillating term and  $x(\infty)$  does not exist. However, if there is a pole at the origin, then x(t) contains a constant term, and hence,  $x(\infty)$  exists and is a constant.

## **EXAMPLE 4.11** Initial and Final Values

Determine the initial and final values of y(t) if its Laplace transform Y(s) is given by

$$Y(s) = \frac{10(2s+3)}{s(s^2+2s+5)}$$

Equations (4.20) and (4.21) yield

$$y(0^{+}) = \lim_{s \to \infty} sY(s) = \lim_{s \to \infty} \frac{10(2s+3)}{(s^{2}+2s+5)} = 0$$
$$y(\infty) = \lim_{s \to 0} sY(s) = \lim_{s \to 0} \frac{10(2s+3)}{(s^{2}+2s+5)} = 6$$

Table 4.2 summarizes the most important unilateral Laplace transform properties.

# 4.3 SOLUTION OF DIFFERENTIAL AND INTEGRO-DIFFERENTIAL EQUATIONS

The time-differentiation property of the Laplace transform has set the stage for solving linear differential (or integro-differential) equations with constant coefficients. Because  $d^k y/dt^k \iff s^k Y(s)$ , the Laplace transform of a differential equation is an algebraic equation that can be readily

Operation	x(t)	X(s)
Addition	$x_1(t) + x_2(t)$	$X_1(s) + X_2(s)$
Scalar multiplication	kx(t)	kX(s)
Time differentiation	$\frac{dx(t)}{dt}$	$sX(s) - x(0^-)$
	$\frac{d^2x(t)}{dt^2}$	$s^2 X(s) - s x(0^-) - \dot{x}(0^-)$
	$\frac{d^3x(t)}{dt^3}$	$s^{3}X(s) - s^{2}x(0^{-}) - s\dot{x}(0^{-}) - \ddot{x}(0^{-})$
	$\frac{d^n x(t)}{dt^n}$	$s^{n}X(s) - \sum_{k=1}^{n} s^{n-k}x^{(k-1)}(0^{-})$
Time integration	$\int_{0^{-}}^{t} x(\tau)  d\tau$	$\frac{1}{s}X(s)$
	$\int_{-\infty}^t x(\tau) d\tau$	$\frac{1}{s}X(s) + \frac{1}{s}\int_{-\infty}^{0^{-}} x(t) dt X(s)e^{-st_0}   t_0 \ge 0$
Time shifting	$x(t-t_0)u(t-t_0)$	$X(s)e^{-st_0} \qquad t_0 \ge 0$
Frequency shifting	$x(t)e^{s_0t}$	$X(s-s_0)$
Frequency	-tx(t)	$\frac{dX(s)}{ds}$
differentiation		
Frequency integration	$\frac{x(t)}{t}$	$\int_{s}^{\infty} X(z) dz$ $\frac{1}{a} X\left(\frac{s}{a}\right)$
Scaling	$x(at), a \ge 0$	$\frac{1}{a}X\left(\frac{s}{a}\right)$
Time convolution	$x_1(t) * x_2(t)$	$X_1(s)X_2(s)$
Frequency convolution	$x_1(t)x_2(t)$	$\frac{1}{2\pi j}X_1(s) * X_2(s)$
Initial value	$x(0^+)$	$\lim_{s \to \infty} sX(s) \qquad (n > m)$
Final value	$x(\infty)$	$\lim_{s \to 0} \sup_{s \to 0} X(s) \qquad \text{[poles of } sX(s) \text{ in LHP]}$

TABLE 4.2 Unilateral Laplace Transform Properties

solved for Y(s). Next we take the inverse Laplace transform of Y(s) to find the desired solution y(t). The following examples demonstrate the Laplace transform procedure for solving linear differential equations with constant coefficients.

# **EXAMPLE 4.12** Laplace Transform to Solve a Second-Order Linear Differential Equation

Solve the second-order linear differential equation

$$(D^2 + 5D + 6)y(t) = (D+1)x(t)$$

for the initial conditions  $y(0^-) = 2$  and  $\dot{y}(0^-) = 1$  and the input  $x(t) = e^{-4t}u(t)$ .

.

The equation is

$$\frac{d^2 y(t)}{dt^2} + 5\frac{dy(t)}{dt} + 6y(t) = \frac{dx(t)}{dt} + x(t)$$
(4.22)

Let

$$y(t) \Longleftrightarrow Y(s)$$

Then from Eq. (4.15),

$$\frac{dy(t)}{dt} \iff sY(s) - y(0^{-}) = sY(s) - 2$$

and

$$\frac{d^2 y(t)}{dt^2} \Longleftrightarrow s^2 Y(s) - sy(0^-) - \dot{y}(0^-) = s^2 Y(s) - 2s - 1$$

Moreover, for  $x(t) = e^{-4t}u(t)$ ,

$$X(s) = \frac{1}{s+4}$$
 and  $\frac{dx(t)}{dt} \iff sX(s) - x(0^{-}) = \frac{s}{s+4} - 0 = \frac{s}{s+4}$ 

Taking the Laplace transform of Eq. (4.22), we obtain

$$[s^{2}Y(s) - 2s - 1] + 5[sY(s) - 2] + 6Y(s) = \frac{s}{s+4} + \frac{1}{s+4}$$

Collecting all the terms of Y(s) and the remaining terms separately on the left-hand side, we obtain

$$(s^{2} + 5s + 6)Y(s) - (2s + 11) = \frac{s+1}{s+4}$$
(4.23)

Therefore,

$$(s^{2}+5s+6)Y(s) = (2s+11) + \frac{s+1}{s+4} = \frac{2s^{2}+20s+45}{s+4}$$

and

$$Y(s) = \frac{2s^2 + 20s + 45}{(s^2 + 5s + 6)(s + 4)} = \frac{2s^2 + 20s + 45}{(s + 2)(s + 3)(s + 4)}$$

Expanding the right-hand side into partial fractions yields

$$Y(s) = \frac{13/2}{s+2} - \frac{3}{s+3} - \frac{3/2}{s+4}$$

The inverse Laplace transform of this equation yields

$$y(t) = \left(\frac{13}{2}e^{-2t} - 3e^{-3t} - \frac{3}{2}e^{-4t}\right)u(t)$$
(4.24)

Example 4.12 demonstrates the ease with which the Laplace transform can solve linear differential equations with constant coefficients. The method is general and can solve a linear differential equation with constant coefficients of any order.

## ZERO-INPUT AND ZERO-STATE COMPONENTS OF RESPONSE

The Laplace transform method gives the total response, which includes zero-input and zero-state components. It is possible to separate the two components if we so desire. The initial condition terms in the response give rise to the zero-input response. For instance, in Ex. 4.12, the terms attributable to initial conditions  $y(0^-) = 2$  and  $\dot{y}(0^-) = 1$  in Eq. (4.23) generate the zero-input response. These initial condition terms are -(2s + 11), as seen in Eq. (4.23). The terms on the right-hand side are exclusively due to the input. Equation (4.23) is reproduced below with the proper labeling of the terms

$$(s^{2}+5s+6)Y(s) - (2s+11) = \frac{s+1}{s+4}$$

so that

$$(s^2 + 5s + 6) Y(s) = \underbrace{(2s+11)}_{\text{initial condition terms}} + \underbrace{\frac{s+1}{s+4}}_{\text{input terms}}$$

Therefore,

$$Y(s) = \underbrace{\frac{2s+11}{s^2+5s+6}}_{ZIR} + \underbrace{\frac{s+1}{(s+4)(s^2+5s+6)}}_{ZSR}$$
$$= \left[\frac{7}{s+2} - \frac{5}{s+3}\right] + \left[\frac{-1/2}{s+2} + \frac{2}{s+3} - \frac{3/2}{s+4}\right]$$

Taking the inverse transform of this equation yields

$$y(t) = \underbrace{\left(7e^{-2t} - 5e^{-3t}\right)u(t)}_{\text{ZIR}} + \underbrace{\left(-\frac{1}{2}e^{-2t} + 2e^{-3t} - \frac{3}{2}e^{-4t}\right)u(t)}_{\text{ZSR}}$$

## 4.3-1 Comments on Initial Conditions at 0<sup>-</sup> and at 0<sup>+</sup>

The initial conditions in Ex. 4.12 are  $y(0^-) = 2$  and  $\dot{y}(0^-) = 1$ . If we let t = 0 in the total response in Eq. (4.24), we find y(0) = 2 and  $\dot{y}(0) = 2$ , which is at odds with the given initial conditions. Why? Because the initial conditions are given at  $t = 0^-$  (just before the input is applied), when only the zero-input response is present. The zero-state response is the result of the input x(t) applied at t = 0. Hence, this component does not exist at  $t = 0^-$ . Consequently, the initial conditions at  $t = 0^-$  are satisfied by the zero-input response, not by the total response. We can readily verify in this example that the zero-input response does indeed satisfy the given initial conditions at  $t = 0^-$ . It is the total response that satisfies the initial conditions at  $t = 0^+$ , which are generally different from the initial conditions at  $0^-$ .

There also exists a  $\mathcal{L}_+$  version of the Laplace transform, which uses the initial conditions at  $t = 0^+$  rather than at  $0^-$  (as in our present  $\mathcal{L}_-$  version). The  $\mathcal{L}_+$  version, which was in vogue till the early 1960s, is identical to the  $\mathcal{L}_-$  version except the limits of Laplace integral [Eq. (4.7)] are from  $0^+$  to  $\infty$ . Hence, by definition, the origin t = 0 is excluded from the domain. This version, still used in some math books, has some serious difficulties. For instance, the Laplace transform of  $\delta(t)$  is zero because  $\delta(t) = 0$  for  $t \ge 0^+$ . Moreover, this approach is rather clumsy in the theoretical study

of linear systems because the response obtained cannot be separated into zero-input and zero-state components. As we know, the zero-state component represents the system response as an explicit function of the input, and without knowing this component, it is not possible to assess the effect of the input on the system response in a general way. The  $\mathcal{L}_+$  version can separate the response in terms of the natural and the forced components, which are not as interesting as the zero-input and the zero-state components. Note that we can always determine the natural and the forced components [e.g., Eq. (2.44) from Eq. (2.43)], but the converse is not true. Because of these and some other problems, electrical engineers (wisely) started discarding the  $\mathcal{L}_+$  version in the early 1960s.

It is interesting to note the time-domain duals of these two Laplace versions. The classical method is the dual of the  $\mathcal{L}_+$  method, and the convolution (zero-input/zero-state) method is the dual of the  $\mathcal{L}_-$  method. The first pair uses the initial conditions at 0<sup>+</sup>, and the second pair uses those at  $t = 0^-$ . The first pair (the classical method and the  $\mathcal{L}_+$  version) is awkward in the theoretical study of linear system analysis. It was no coincidence that the  $\mathcal{L}_-$  version was adopted immediately after the introduction to the electrical engineering community of state-space analysis (which uses zero-input/zero-state separation of the output).

# **DRILL 4.7** Laplace Transform to Solve a Second-Order Linear Differential Equation

Solve

$$\frac{d^2y(t)}{dt^2} + 4\frac{dy(t)}{dt} + 3y(t) = 2\frac{dx(t)}{dt} + x(t)$$

for the input x(t) = u(t). The initial conditions are  $y(0^-) = 1$  and  $\dot{y}(0^-) = 2$ .

### ANSWER

 $y(t) = \frac{1}{3}(1 + 9e^{-t} - 7e^{-3t})u(t)$ 

#### **EXAMPLE 4.13** Laplace Transform to Solve an Electric Circuit

In the circuit of Fig. 4.7a, the switch is in the closed position for a long time before t = 0, when it is opened instantaneously. Find the inductor current y(t) for  $t \ge 0$ .

When the switch is in the closed position (for a long time), the inductor current is 2 amperes and the capacitor voltage is 10 volts. When the switch is opened, the circuit is equivalent to that depicted in Fig. 4.7b, with the initial inductor current  $y(0^-) = 2$  and the initial capacitor voltage  $v_C(0^-) = 10$ . The input voltage is 10 volts, starting at t = 0, and, therefore, can be represented by 10u(t).

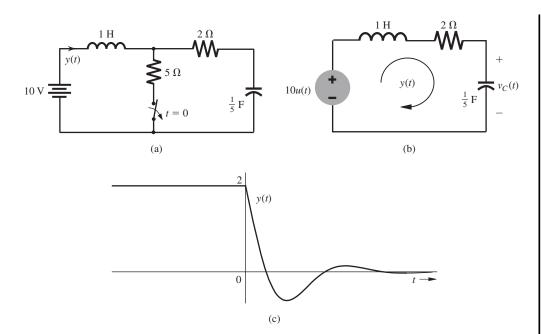


Figure 4.7 Analysis of a network with a switching action.

The loop equation of the circuit in Fig. 4.7b is

$$\frac{dy(t)}{dt} + 2y(t) + 5 \int_{-\infty}^{t} y(\tau) \, d\tau = 10u(t) \tag{4.25}$$

If

 $y(t) \iff Y(s)$ 

then

$$\frac{dy(t)}{dt} \iff sY(s) - y(0^{-}) = sY(s) - 2$$

and [see Eq. (4.16)]

$$\int_{-\infty}^{t} y(\tau) d\tau \Longleftrightarrow \frac{Y(s)}{s} + \frac{\int_{-\infty}^{0^{-}} y(\tau) d\tau}{s}$$

Because y(t) is the capacitor current, the integral  $\int_{-\infty}^{0^-} y(\tau) d\tau$  is  $q_C(0^-)$ , the capacitor charge at  $t = 0^-$ , which is given by *C* times the capacitor voltage at  $t = 0^-$ . Therefore,

$$\int_{-\infty}^{0^{-}} y(\tau) d\tau = q_{C}(0^{-}) = Cv_{C}(0^{-}) = \frac{1}{5}(10) = 2$$

and

$$\int_{-\infty}^{t} y(\tau) d\tau \Longleftrightarrow \frac{Y(s)}{s} + \frac{2}{s}$$

Using these results, the Laplace transform of Eq. (4.25) is

$$sY(s) - 2 + 2Y(s) + \frac{5Y(s)}{s} + \frac{10}{s} = \frac{10}{s}$$

or

$$\left[s+2+\frac{5}{s}\right]Y(s) = 2$$

and

$$Y(s) = \frac{2s}{s^2 + 2s + 5}$$

To find the inverse Laplace transform of Y(s), we use pair 10c (Table 4.1) with values A = 2, B = 0, a = 1, and c = 5. This yields

$$r = \sqrt{\frac{20}{4}} = \sqrt{5}, \quad b = \sqrt{c - a^2} = 2 \quad \text{and} \quad \theta = \tan^{-1}\left(\frac{2}{4}\right) = 26.6^\circ$$

Therefore,

$$y(t) = \sqrt{5}e^{-t}\cos(2t + 26.6^{\circ})u(t)$$

This response is shown in Fig. 4.7c.

**Comment.** In our discussion so far, we have multiplied input signals by u(t), implying that the signals are zero prior to t = 0. This is needlessly restrictive. These signals can have any arbitrary value prior to t = 0. As long as the initial conditions at t = 0 are specified, we need only the knowledge of the input for  $t \ge 0$  to compute the response for  $t \ge 0$ . Some authors use the notation 1(t) to denote a function that is equal to u(t) for  $t \ge 0$  and that has arbitrary value for negative *t*. We have abstained from this usage to avoid needless confusion caused by the introduction of a new function, which is very similar to u(t).

#### 4.3-2 Zero-State Response

Consider an Nth-order LTIC system specified by the equation

$$Q(D)y(t) = P(D)x(t)$$

or

$$(D^{N} + a_{1}D^{N-1} + \dots + a_{N-1}D + a_{N})y(t) = (b_{0}D^{N} + b_{1}D^{N-1} + \dots + b_{N-1}D + b_{N})x(t)$$
(4.26)

We shall now find the general expression for the zero-state response of an LTIC system. Zero-state response y(t), by definition, is the system response to an input when the system is initially relaxed (in zero state). Therefore, y(t) satisfies Eq. (4.26) with zero initial conditions

$$y(0^{-}) = \dot{y}(0^{-}) = \ddot{y}(0^{-}) = \dots = y^{(N-1)}(0^{-}) = 0$$

366

Moreover, the input x(t) is causal so that

$$x(0^{-}) = \dot{x}(0^{-}) = \ddot{x}(0^{-}) = \cdots = x^{(N-1)}(0^{-}) = 0$$

Let

$$y(t) \iff Y(s)$$
 and  $x(t) \iff X(s)$ 

Because of zero initial conditions,

$$D^{r}y(t) = \frac{d^{r}}{dt^{r}}y(t) \Longleftrightarrow s^{r}Y(s)$$
$$D^{k}x(t) = \frac{d^{k}}{dt^{k}}x(t) \Longleftrightarrow s^{k}X(s)$$

Therefore, the Laplace transform of Eq. (4.26) yields

$$(s^{N} + a_{1}s^{N-1} + \dots + a_{N-1}s + a_{N})Y(s) = (b_{0}s^{N} + b_{1}s^{N-1} + \dots + b_{N-1}s + b_{N})X(s)$$

or

$$Y(s) = \frac{b_0 s^N + b_1 s^{N-1} + \dots + b_{N-1} s + b_N}{s^N + a_1 s^{N-1} + \dots + a_{N-1} s + a_N} X(s) = \frac{P(s)}{Q(s)} X(s)$$

But we have shown in Eq. (4.18) that Y(s) = H(s)X(s). Consequently,

$$H(s) = \frac{P(s)}{Q(s)} \tag{4.27}$$

This is the transfer function of a linear differential system specified in Eq. (4.26). The same result has been derived earlier in Eq. (2.41) using an alternate (time-domain) approach.

We have shown that Y(s), the Laplace transform of the zero-state response y(t), is the product of X(s) and H(s), where X(s) is the Laplace transform of the input x(t) and H(s) is the system transfer function [relating the particular output y(t) to the input x(t)].

#### INTUITIVE INTERPRETATION OF THE LAPLACE TRANSFORM

So far we have treated the Laplace transform as a machine that converts linear integro-differential equations into algebraic equations. There is no physical understanding of how this is accomplished or what it means. We now discuss a more intuitive interpretation and meaning of the Laplace transform.

In Ch. 2, Eq. (2.38), we showed that LTI system response to an everlasting exponential  $e^{st}$  is  $H(s)e^{st}$ . If we could express every signal as a linear combination of everlasting exponentials of the form  $e^{st}$ , we could readily obtain the system response to any input. For example, if

$$x(t) = \sum_{k=1}^{K} X(s_i) e^{s_i t}$$

the response of an LTIC system to such input x(t) is given by

$$y(t) = \sum_{k=1}^{K} X(s_i) H(s_i) e^{s_i t}$$

Unfortunately, the class of signals that can be expressed in this form is very small. However, we can express almost all signals of practical utility as a sum of everlasting exponentials over a continuum of frequencies. This is precisely what the Laplace transform in Eq. (4.2) does.

$$x(t) = \frac{1}{2\pi j} \int_{c-j\infty}^{c+j\infty} X(s) e^{st} ds$$
(4.28)

Invoking the linearity property of the Laplace transform, we can find the system response y(t) to input x(t) in Eq. (4.28) as<sup>†</sup>

$$y(t) = \frac{1}{2\pi j} \int_{c'-j\infty}^{c'+j\infty} X(s)H(s)e^{st} \, ds = \mathcal{L}^{-1}X(s)H(s)$$
(4.29)

Clearly,

Y(s) = X(s)H(s)

We can now represent the transformed version of the system, as depicted in Fig. 4.8a. The input X(s) is the Laplace transform of x(t), and the output Y(s) is the Laplace transform of (the zero-input response) y(t). The system is described by the transfer function H(s). The output Y(s) is the product X(s)H(s).

Recall that *s* is the complex frequency of  $e^{st}$ . This explains why the Laplace transform method is also called the *frequency-domain* method. Note that X(s), Y(s), and H(s) are the frequency-domain representations of x(t), y(t), and h(t), respectively. We may view the boxes marked  $\mathcal{L}$  and  $\mathcal{L}^{-1}$  in Fig. 4.8a as the interfaces that convert the time-domain entities into the corresponding frequency-domain entities, and vice versa. All real-life signals begin in the time domain, and the final answers must also be in the time domain. First, we convert the time-domain input(s) into the frequency-domain counterparts. The problem itself is solved in the frequency domain, resulting in the answer Y(s), also in the frequency domain. Finally, we convert Y(s) to y(t). Solving the problem is relatively simpler in the frequency domain than in the time domain. Henceforth, we shall omit the explicit representation of the interface boxes  $\mathcal{L}$  and  $\mathcal{L}^{-1}$ , representing signals and systems in the frequency domain, as shown in Fig. 4.8b.

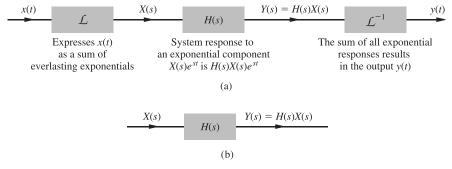


Figure 4.8 Alternate interpretation of the Laplace transform.

<sup>&</sup>lt;sup>†</sup> Recall that H(s) has its own region of validity. Hence, the limits of integration for the integral in Eq. (4.28) are modified in Eq. (4.29) to accommodate the region of existence (validity) of X(s) as well as H(s).

## **EXAMPLE 4.14** Laplace Transform to Find the Zero-State Response

Find the response y(t) of an LTIC system described by the equation

$$\frac{d^2 y(t)}{dt^2} + 5\frac{dy(t)}{dt} + 6y(t) = \frac{dx(t)}{dt} + x(t)$$

if the input  $x(t) = 3e^{-5t}u(t)$  and all the initial conditions are zero; that is, the system is in the zero state.

The system equation is

$$\underbrace{(D^2 + 5D + 6)}_{Q(D)} y(t) = \underbrace{(D+1)}_{P(D)} x(t)$$

Therefore,

$$H(s) = \frac{P(s)}{Q(s)} = \frac{s+1}{s^2 + 5s + 6}$$

Also,

$$X(s) = \mathcal{L}[3e^{-5t}u(t)] = \frac{3}{s+5}$$

and

$$Y(s) = X(s)H(s) = \frac{3(s+1)}{(s+5)(s^2+5s+6)}$$
$$= \frac{3(s+1)}{(s+5)(s+2)(s+3)} = \frac{-2}{s+5} - \frac{1}{s+2} + \frac{3}{s+3}$$

The inverse Laplace transform of this equation is

$$y(t) = (-2e^{-5t} - e^{-2t} + 3e^{-3t})u(t)$$

## **EXAMPLE 4.15** Laplace Transform to Find System Transfer Functions

Show that the transfer function of:

- (a) an ideal delay of T seconds is  $e^{-sT}$
- (b) an ideal differentiator is s
- (c) an ideal integrator is 1/s

(a) Ideal Delay. For an ideal delay of *T* seconds, the input x(t) and output y(t) are related by

y(t) = x(t - T) and  $Y(s) = X(s)e^{-sT}$  [see Eq. (4.12)]

Therefore,

$$H(s) = \frac{Y(s)}{X(s)} = e^{-sT}$$
(4.30)

(b) Ideal Differentiator. For an ideal differentiator, the input x(t) and the output y(t) are related by

$$y(t) = \frac{dx(t)}{dt}$$

The Laplace transform of this equation yields

$$Y(s) = sX(s)$$
  $[x(0^{-}) = 0 \text{ for a causal signal}]$ 

and

$$H(s) = \frac{Y(s)}{X(s)} = s \tag{4.31}$$

(c) Ideal Integrator. For an ideal integrator with zero initial state, that is,  $y(0^{-}) = 0$ ,

$$y(t) = \int_0^t x(\tau) d\tau$$
 and  $Y(s) = \frac{1}{s}X(s)$ 

Therefore,

$$H(s) = \frac{1}{s} \tag{4.32}$$

# **DRILL 4.8** Differential Equation and Zero-State Response from a System Transfer Function

For an LTIC system with transfer function,

$$H(s) = \frac{s+5}{s^2+4s+3}$$

- (a) Describe the differential equation relating the input x(t) and output y(t).
- (b) Find the system response y(t) to the input  $x(t) = e^{-2t}u(t)$  if the system is initially in zero state.


**ANSWERS** 

(a) 
$$\frac{d^2 y(t)}{dt^2} + 4 \frac{dy(t)}{dt} + 3y(t) = \frac{dx(t)}{dt} + 5x(t)$$

**(b)** 
$$y(t) = (2e^{-t} - 3e^{-2t} + e^{-3t})u(t)$$

## 4.3-3 Stability

Equation (4.27) shows that the denominator of H(s) is Q(s), which is apparently identical to the characteristic polynomial  $Q(\lambda)$  defined in Ch. 2. Does this mean that the denominator of H(s) is the characteristic polynomial of the system? This may or may not be the case, since if P(s) and Q(s) in Eq. (4.27) have any common factors, they cancel out, and the effective denominator of H(s) is not necessarily equal to Q(s). Recall also that the system transfer function H(s), like h(t), is defined in terms of measurements at the external terminals. Consequently, H(s) and h(t) are both external descriptions of the system. In contrast, the characteristic polynomial Q(s) is an internal description. Clearly, we can determine only external stability, that is, BIBO stability, from H(s). If all the poles of H(s) are in LHP, all the terms in h(t) are decaying exponentials, and h(t) is absolutely integrable [see Eq. (2.45)].<sup>†</sup> Consequently, the system is BIBO-stable.

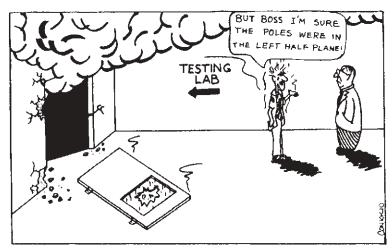

Beware of right half-plane poles!

So far, we have assumed that H(s) is a proper function, that is,  $M \le N$ . We now show that if H(s) is improper, that is, if M > N, the system is BIBO-unstable. In such a case, using long division, we obtain H(s) = R(s) + H'(s), where R(s) is an (M - N)th-order polynomial and H'(s) is a proper transfer function. For example,

$$H(s) = \frac{s^3 + 4s^2 + 4s + 5}{s^2 + 3s + 2} = s + \frac{s^2 + 2s + 5}{s^2 + 3s + 2}$$

As shown in Eq. (4.31), the term *s* is the transfer function of an ideal differentiator. If we apply step function (bounded input) to this system, the output will contain an impulse (unbounded output). Clearly, the system is BIBO-unstable. Moreover, such a system greatly amplifies noise because differentiation enhances higher frequencies, which generally predominate in a noise signal. These

<sup>&</sup>lt;sup>†</sup> Values of *s* for which H(s) is  $\infty$  are the *poles* of H(s). Thus, poles of H(s) are the values of *s* for which the denominator of H(s) is zero.

are two good reasons to avoid improper systems (M > N). In our future discussion, we shall implicitly assume that the systems are proper, unless stated otherwise.

If P(s) and Q(s) do not have common factors, then the denominator of H(s) is identical to Q(s), the characteristic polynomial of the system. In this case, we can determine internal stability by using the criterion described in Sec. 2.5. Thus, if P(s) and Q(s) have no common factors, the asymptotic stability criterion in Sec. 2.5 can be restated in terms of the poles of the transfer function of a system, as follows:

- 1. An LTIC system is asymptotically stable if and only if all the poles of its transfer function H(s) are in the LHP. The poles may be simple or repeated.
- 2. An LTIC system is unstable if and only if either one or both of the following conditions exist: (i) at least one pole of H(s) is in the RHP; (ii) there are repeated poles of H(s) on the imaginary axis.
- 3. An LTIC system is marginally stable if and only if there are no poles of H(s) in the RHP and some unrepeated poles on the imaginary axis.

The locations of zeros of H(s) have no role in determining the system stability.

## **EXAMPLE 4.16 BIBO and Asymptotic Stability**

Figure 4.9a shows a cascade connection of two LTIC systems  $S_1$  followed by  $S_2$ . The transfer functions of these systems are  $H_1(s) = 1/(s-1)$  and  $H_2(s) = (s-1)/(s+1)$ , respectively. Determine the BIBO and asymptotic stability of the composite (cascade) system.

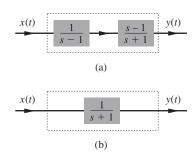


Figure 4.9 Distinction between BIBO and asymptotic stability.

If the impulse responses of  $S_1$  and  $S_2$  are  $h_1(t)$  and  $h_2(t)$ , respectively, then the impulse response of the cascade system is  $h(t) = h_1(t) * h_2(t)$ . Hence,  $H(s) = H_1(s)H_2(s)$ . In the present case,

$$H(s) = \left(\frac{1}{s-1}\right) \left(\frac{s-1}{s+1}\right) = \frac{1}{s+1}$$

The pole of  $S_1$  at s = 1 cancels with the zero at s = 1 of  $S_2$ . This results in a composite system having a single pole at s = -1. If the composite cascade system were to be enclosed inside a

black box with only the input and the output terminals accessible, any measurement from these external terminals would show that the transfer function of the system is 1/(s+1), without any hint of the fact that the system is housing an unstable system (Fig. 4.9b).

The impulse response of the cascade system is  $h(t) = e^{-t}u(t)$ , which is absolutely integrable. Consequently, the system is BIBO-stable.

To determine the asymptotic stability, we note that  $S_1$  has one characteristic root at 1, and  $S_2$  also has one root at -1. Recall that the two systems are independent (one does not load the other), and the characteristic modes generated in each subsystem are independent of the other. Clearly, the mode  $e^t$  will not be eliminated by the presence of  $S_2$ . Hence, the composite system has two characteristic roots, located at  $\pm 1$ , and the system is asymptotically unstable, though BIBO-stable.

Interchanging the positions of  $S_1$  and  $S_2$  makes no difference in this conclusion. This example shows that BIBO stability can be misleading. If a system is asymptotically unstable, it will destroy itself (or, more likely, lead to saturation condition) because of unchecked growth of the response due to intended or unintended stray initial conditions. BIBO stability is not going to save the system. Control systems are often compensated to realize certain desirable characteristics. One should never try to stabilize an unstable system by canceling its RHP pole(s) with RHP zero(s). Such a misguided attempt will fail, not because of the practical impossibility of exact cancellation but for the more fundamental reason, as just explained.

### DRILL 4.9 BIBO and Asymptotic Stability

Show that an ideal integrator is marginally stable but BIBO-unstable.

#### 4.3-4 Inverse Systems

If H(s) is the transfer function of a system S, then  $S_i$ , its inverse system has a transfer function  $H_i(s)$  given by

$$H_i(s) = \frac{1}{H(s)}$$

This follows from the fact the cascade of S with its inverse system  $S_i$  is an identity system, with impulse response  $\delta(t)$ , implying  $H(s)H_i(s) = 1$ . For example, an ideal integrator and its inverse, an ideal differentiator, have transfer functions 1/s and s, respectively, leading to  $H(s)H_i(s) = 1$ .

# 4.4 ANALYSIS OF ELECTRICAL NETWORKS: THE TRANSFORMED NETWORK

Example 4.12 shows how electrical networks may be analyzed by writing the integro-differential equation(s) of the system and then solving these equations by the Laplace transform. We now show that it is also possible to analyze electrical networks directly without having to write the

integro-differential equations. This procedure is considerably simpler because it permits us to treat an electrical network as if it were a resistive network. For this purpose, we need to represent a network in the "frequency domain" where all the voltages and currents are represented by their Laplace transforms.

For the sake of simplicity, let us first discuss the case with zero initial conditions. If v(t) and i(t) are the voltage across and the current through an inductor of L henries, then

$$v(t) = L \frac{di(t)}{dt}$$

The Laplace transform of this equation (assuming zero initial current) is

$$V(s) = LsI(s)$$

Similarly, for a capacitor of C farads, the voltage-current relationship is i(t) = C(dv/dt) and its Laplace transform, assuming zero initial capacitor voltage, yields I(s) = CsV(s); that is,

$$V(s) = \frac{1}{Cs}I(s)$$

For a resistor of *R* ohms, the voltage-current relationship is v(t) = Ri(t), and its Laplace transform is

$$V(s) = RI(s)$$

Thus, in the "frequency domain," the voltage-current relationships of an inductor and a capacitor are algebraic; these elements behave like resistors of "resistance" Ls and 1/Cs, respectively. The generalized "resistance" of an element is called its *impedance* and is given by the ratio V(s)/I(s) for the element (under zero initial conditions). The impedances of a resistor of R ohms, an inductor of L henries, and a capacitance of C farads are R, Ls, and 1/Cs, respectively.

Also, the interconnection constraints (Kirchhoff's laws) remain valid for voltages and currents in the frequency domain. To demonstrate this point, let  $v_j(t)$  (j = 1, 2, ..., k) be the voltages across k elements in a loop and let  $i_j(t)(j = 1, 2, ..., m)$  be the j currents entering a node. Then

$$\sum_{j=1}^{k} v_j(t) = 0 \quad \text{and} \quad \sum_{j=1}^{m} i_j(t) = 0$$

Now if

$$v_j(t) \iff V_j(s)$$
 and  $i_j(t) \iff I_j(s)$ 

then

$$\sum_{j=1}^{k} V_j(s) = 0 \quad \text{and} \quad \sum_{j=1}^{m} I_j(s) = 0$$

This result shows that if we represent all the voltages and currents in an electrical network by their Laplace transforms, we can treat the network as if it consisted of the "resistances" R, Ls, and 1/Cs corresponding to a resistor R, an inductor L, and a capacitor C, respectively. The system equations (loop or node) are now algebraic. Moreover, the simplification techniques that have been developed for resistive circuits—equivalent series and parallel impedances, voltage and current

divider rules, Thévenin and Norton theorems—can be applied to general electrical networks. The following examples demonstrate these concepts.

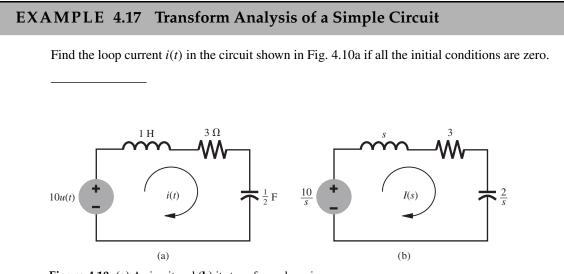


Figure 4.10 (a) A circuit and (b) its transformed version.

In the first step, we represent the circuit in the frequency domain, as illustrated in Fig. 4.10b. All the voltages and currents are represented by their Laplace transforms. The voltage 10u(t) is represented by 10/s and the (unknown) current i(t) is represented by its Laplace transform I(s). All the circuit elements are represented by their respective impedances. The inductor of 1 henry is represented by s, the capacitor of 1/2 farad is represented by 2/s, and the resistor of 3 ohms is represented by 3. We now consider the frequency-domain representation of voltages and currents. The voltage across any element is I(s) times its impedance. Therefore, the total voltage drop in the loop is I(s) times the total loop impedance, and it must be equal to V(s), (transform of) the input voltage. The total impedance in the loop is

$$Z(s) = s + 3 + \frac{2}{s} = \frac{s^2 + 3s + 2}{s}$$

The input "voltage" is V(s) = 10/s. Therefore, the "loop current" I(s) is

$$I(s) = \frac{V(s)}{Z(s)} = \frac{10/s}{(s^2 + 3s + 2)/s} = \frac{10}{s^2 + 3s + 2} = \frac{10}{(s+1)(s+2)} = \frac{10}{s+1} - \frac{10}{s+2}$$

The inverse transform of this equation yields the desired result:

$$i(t) = 10(e^{-t} - e^{-2t})u(t)$$

### INITIAL CONDITION GENERATORS

The discussion in which we assumed zero initial conditions can be readily extended to the case of nonzero initial conditions because the initial condition in a capacitor or an inductor can be represented by an equivalent source. We now show that a capacitor *C* with an initial voltage  $v(0^-)$ (Fig. 4.11a) can be represented in the frequency domain by an uncharged capacitor of impedance 1/Cs in series with a voltage source of value  $v(0^-)/s$  (Fig. 4.11b) or as the same uncharged capacitor in parallel with a current source of value  $Cv(0^-)$  (Fig. 4.11c). Similarly, an inductor *L* with an initial current  $i(0^-)$  (Fig. 4.11d) can be represented in the frequency domain by an inductor of impedance *Ls* in series with a voltage source of value  $Li(0^-)$  (Fig. 4.11e) or by the same inductor in parallel with a current source of value  $i(0^-)/s$  (Fig. 4.11f).

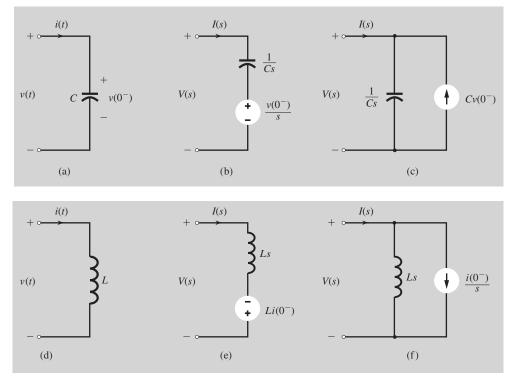


Figure 4.11 Initial condition generators for a capacitor and an inductor.

To prove this point, consider the terminal relationship of the capacitor in Fig. 4.11a:

$$i(t) = C \frac{dv(t)}{dt}$$

The Laplace transform of this equation yields

$$I(s) = C[sV(s) - v(0^{-})]$$

#### 4.4 Analysis of Electrical Networks: The Transformed Network 377

This equation can be rearranged as

$$V(s) = \frac{1}{Cs}I(s) + \frac{v(0^{-})}{s}$$
(4.33)

Observe that V(s) is the voltage (in the frequency domain) across the charged capacitor and I(s)/Cs is the voltage across the same capacitor without any charge. Therefore, the charged capacitor can be represented by the uncharged capacitor in series with a voltage source of value  $v(0^-)/s$ , as depicted in Fig. 4.11b. Equation (4.33) can also be rearranged as

$$V(s) = \frac{1}{Cs} [I(s) + Cv(0^{-})]$$

This equation shows that the charged capacitor voltage V(s) is equal to the uncharged capacitor voltage caused by a current  $I(s) + Cv(0^-)$ . This result is reflected precisely in Fig. 4.11c, where the current through the uncharged capacitor is  $I(s) + Cv(0^-)$ .<sup>†</sup>

For the inductor in Fig. 4.11d, the terminal equation is

$$v(t) = L \frac{di(t)}{dt}$$

and

$$V(s) = L[sI(s) - i(0^{-})] = LsI(s) - Li(0^{-})$$
(4.34)

This expression is consistent with Fig. 4.11e. We can rearrange Eq. (4.34) as

$$V(s) = Ls\left[I(s) - \frac{i(0^{-})}{s}\right]$$

This expression is consistent with Fig. 4.11f.

Let us rework Ex. 4.13 using these concepts. Figure 4.12a shows the circuit in Fig. 4.7b with the initial conditions  $y(0^-) = 2$  and  $v_c(0^-) = 10$ . Figure 4.12b shows the frequency-domain representation (transformed circuit) of the circuit in Fig. 4.12a. The resistor is represented by its impedance 2; the inductor with initial current of 2 amperes is represented according to the arrangement in Fig. 4.11e with a series voltage source  $Ly(0^-) = 2$ . The capacitor with initial voltage of 10 volts is represented according to the arrangement in Fig. 4.11b with a series voltage source  $v(0^-)/s = 10/s$ . Note that the impedance of the inductor is *s* and that of the capacitor is 5/s. The input of 10u(t) is represented by its Laplace transform 10/s.

The total voltage in the loop is (10/s) + 2 - (10/s) = 2, and the loop impedance is (s+2+(5/s)). Therefore,

$$Y(s) = \frac{2}{s+2+5/s} = \frac{2s}{s^2+2s+5}$$

which confirms our earlier result in Ex. 4.13.

<sup>&</sup>lt;sup>†</sup> In the time domain, a charged capacitor *C* with initial voltage  $v(0^-)$  can be represented as the same capacitor uncharged in series with a voltage source  $v(0^-)u(t)$ , or in parallel with a current source  $Cv(0^-)\delta(t)$ . Similarly, an inductor *L* with initial current  $i(0^-)$  can be represented by the same inductor with zero initial current in series with a voltage source  $Li(0^-)\delta(t)$  or with a parallel current source  $i(0^-)u(t)$ .

#### 378 CHAPTER 4 CONTINUOUS-TIME SYSTEM ANALYSIS

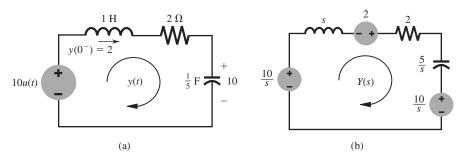


Figure 4.12 A circuit and its transformed version with initial-condition generators.

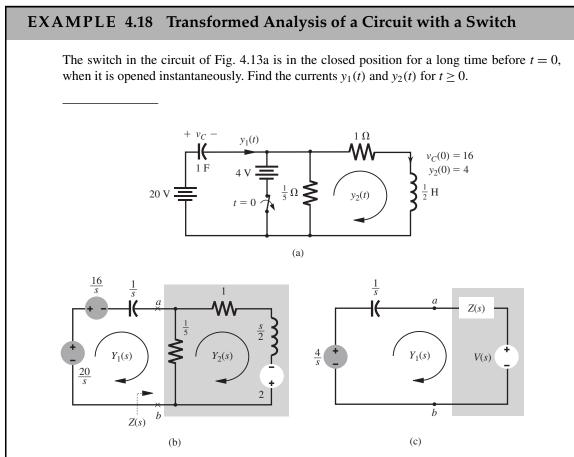


Figure 4.13 Using initial condition generators and Thévenin equivalent representation.

Inspection of this circuit shows that when the switch is closed and the steady-state conditions are reached, the capacitor voltage  $v_c = 16$  volts, and the inductor current  $y_2 = 4$ 

amperes. Therefore, when the switch is opened (at t = 0), the initial conditions are  $v_C(0^-) = 16$ and  $y_2(0^-) = 4$ . Figure 4.13b shows the transformed version of the circuit in Fig. 4.13a. We have used equivalent sources to account for the initial conditions. The initial capacitor voltage of 16 volts is represented by a series voltage of 16/s and the initial inductor current of 4 amperes is represented by a source of value  $Ly_2(0^-) = 2$ .

From Fig. 4.13b, the loop equations can be written directly in the frequency domain as

$$\frac{Y_1(s)}{s} + \frac{1}{5}[Y_1(s) - Y_2(s)] = \frac{4}{s}$$
$$-\frac{1}{5}Y_1(s) + \frac{6}{5}Y_2(s) + \frac{s}{2}Y_2(s) = 2$$
$$\begin{bmatrix} \frac{1}{s} + \frac{1}{5} & -\frac{1}{5}\\ -\frac{1}{5} & \frac{6}{5} + \frac{s}{2} \end{bmatrix} \begin{bmatrix} Y_1(s)\\ Y_2(s) \end{bmatrix} = \begin{bmatrix} \frac{4}{s}\\ 2 \end{bmatrix}$$

Application of Cramer's rule to this equation yields

$$Y_1(s) = \frac{24(s+2)}{s^2 + 7s + 12} = \frac{24(s+2)}{(s+3)(s+4)} = \frac{-24}{s+3} + \frac{48}{s+4}$$

and

$$y_1(t) = (-24e^{-3t} + 48e^{-4t})u(t)$$

Similarly, we obtain

$$Y_2(s) = \frac{4(s+7)}{s^2 + 7s + 12} = \frac{16}{s+3} - \frac{12}{s+4}$$

and

$$y_2(t) = (16e^{-3t} - 12e^{-4t})u(t)$$

We also could have used Thévenin's theorem to compute  $Y_1(s)$  and  $Y_2(s)$  by replacing the circuit to the right of the capacitor (right of terminals *ab*) with its Thévenin equivalent, as shown in Fig. 4.13c. Figure 4.13b shows that the Thévenin impedance Z(s) and the Thévenin source V(s) are

.

$$Z(s) = \frac{\frac{1}{5}\left(\frac{s}{2}+1\right)}{\frac{1}{5}+\frac{s}{2}+1} = \frac{s+2}{5s+12}$$
$$V(s) = \frac{-\frac{1}{5}}{\frac{1}{5}+\frac{s}{2}+1}2 = \frac{-4}{5s+12}$$

According to Fig. 4.13c, the current  $Y_1(s)$  is given by

$$Y_1(s) = \frac{\frac{4}{s} - V(s)}{\frac{1}{s} + Z(s)} = \frac{24(s+2)}{s^2 + 7s + 12}$$

which confirms the earlier result. We may determine  $Y_2(s)$  in a similar manner.

379

## **EXAMPLE 4.19** Transformed Analysis of a Coupled Inductive Network

The switch in the circuit in Fig. 4.14a is at position a for a long time before t = 0, when it is moved instantaneously to position b. Determine the current  $y_1(t)$  and the output voltage  $v_0(t)$  for  $t \ge 0$ .

Just before switching, the values of the loop currents are 2 and 1, respectively, that is,  $y_1(0^-) = 2$  and  $y_2(0^-) = 1$ .

The equivalent circuits for two types of inductive coupling are illustrated in Figs. 4.14b and 4.14c. For our situation, the circuit in Fig. 4.14c applies. Figure 4.14d shows the transformed version of the circuit in Fig. 4.14a after switching. Note that the inductors  $L_1 + M$ ,  $L_2 + M$ , and -M are 3, 4, and -1 henries with impedances 3s, 4s, and -s respectively. The initial condition voltages in the three branches are  $(L_1 + M)y_1(0^-) = 6$ ,  $(L_2 + M)y_2(0^-) = 4$ , and  $-M[y_1(0^-) - y_2(0^-)] = -1$ , respectively. The two loop equations of the circuit are

$$(2s+3)Y_1(s) + (s-1)Y_2(s) = \frac{10}{s} + 5$$
$$(s-1)Y_1(s) + (3s+2)Y_2(s) = 5$$

or

$$\begin{bmatrix} 2s+3 & s-1 \\ s-1 & 3s+2 \end{bmatrix} \begin{bmatrix} Y_1(s) \\ Y_2(s) \end{bmatrix} \begin{bmatrix} \frac{5s+10}{s} \\ 5 \end{bmatrix}$$

Solving for  $Y_1(s)$ , we obtain

$$Y_1(s) = \frac{2s^2 + 9s + 4}{s(s^2 + 3s + 1)} = \frac{4}{s} - \frac{1}{s + 0.382} - \frac{1}{s + 2.618}$$

Therefore,

$$y_1(t) = (4 - e^{-0.382t} - e^{-2.618t})u(t)$$

Similarly,

$$Y_2(s) = \frac{s^2 + 2s + 2}{s(s^2 + 3s + 1)} = \frac{2}{s} - \frac{1.618}{s + 0.382} + \frac{0.618}{s + 2.618}$$


and

$$y_2(t) = (2 - 1.618e^{-0.382t} + 0.618e^{-2.618t})u(t)$$

The output voltage is therefore

$$v_0(t) = y_2(t) = (2 - 1.618e^{-0.382t} + 0.618e^{-2.618t})u(t)$$



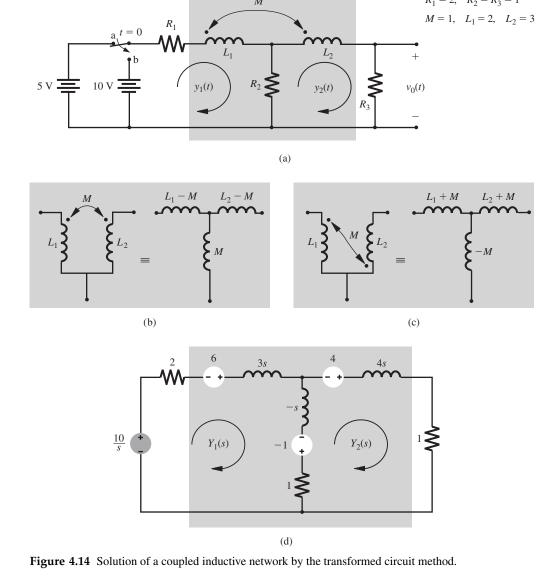


## DRILL 4.10 Transformed Analysis of an RLC Circuit with a Switch

For the *RLC* circuit in Fig. 4.15, the input is switched on at t = 0. The initial conditions are  $y(0^-) = 2$  amperes and  $v_C(0^-) = 50$  volts. Find the loop current y(t) and the capacitor voltage  $v_C(t)$  for  $t \ge 0$ .

## ANSWERS

381

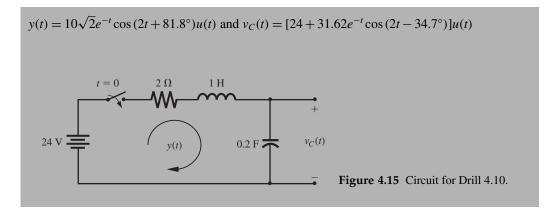

#### 4.4-1 Analysis of Active Circuits

Although we have considered examples of only passive networks so far, the circuit analysis procedure using the Laplace transform is also applicable to active circuits. All that is needed is to replace the active elements with their mathematical models (or equivalent circuits) and proceed as before.

The operational amplifier (depicted by the triangular symbol in Fig. 4.16a) is a well-known element in modern electronic circuits. The terminals with the positive and the negative signs correspond to noninverting and inverting terminals, respectively. This means that the polarity of the output voltage  $v_2$  is the same as that of the input voltage at the terminal marked by the positive sign (noninverting). The opposite is true for the inverting terminal, marked by the negative sign.

Figure 4.16b shows the model (equivalent circuit) of the operational amplifier (op amp) in Fig. 4.16a. A typical op amp has a very large gain. The output voltage  $v_2 = -Av_1$ , where A is typically 10<sup>5</sup> to 10<sup>6</sup>. The input impedance is very high, of the order of 10<sup>12</sup>  $\Omega$ , and the output impedance is very low (50–100  $\Omega$ ). For most applications, we are justified in assuming the gain A and the input impedance to be infinite and the output impedance to be zero. For this reason we see an ideal voltage source at the output.

Consider now the operational amplifier with resistors  $R_a$  and  $R_b$  connected, as shown in Fig. 4.16c. This configuration is known as the *noninverting amplifier*. Observe that the input polarities in this configuration are inverted in comparison to those in Fig. 4.16a. We now show that the output voltage  $v_2$  and the input voltage  $v_1$  in this case are related by

$$v_2 = K v_1$$
, where  $K = 1 + \frac{R_b}{R_a}$ 

First, we recognize that because the input impedance and the gain of the operational amplifier approach infinity, the input current  $i_x$  and the input voltage  $v_x$  in Fig. 4.16c are infinitesimal and may be taken as zero. The dependent source in this case is  $Av_x$  instead of  $-Av_x$  because of the input polarity inversion. The dependent source  $Av_x$  (see Fig. 4.16b) at the output will generate current  $i_o$ , as illustrated in Fig. 4.16c. Now

$$v_2 = (R_b + R_a)i_o$$

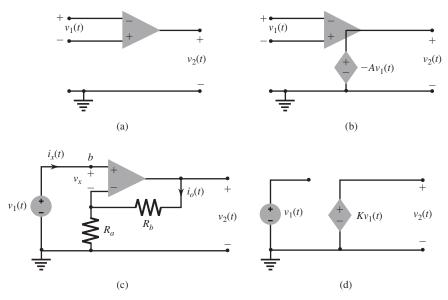


Figure 4.16 Operational amplifier and its equivalent circuit.

and also

$$v_1 = v_x + R_a i_o = R_a i_o$$

Therefore,

$$\frac{v_2}{v_1} = \frac{R_b + R_a}{R_a} = 1 + \frac{R_b}{R_a} = K$$

or

$$v_2(t) = K v_1(t)$$

The equivalent circuit of the noninverting amplifier is depicted in Fig. 4.16d.

## EXAMPLE 4.20 Transform Analysis of a Sallen–Key Circuit

The circuit in Fig. 4.17a is called the *Sallen–Key* circuit, which is frequently used in filter design. Find the transfer function H(s) relating the output voltage  $v_o(t)$  to the input voltage  $v_i(t)$ .

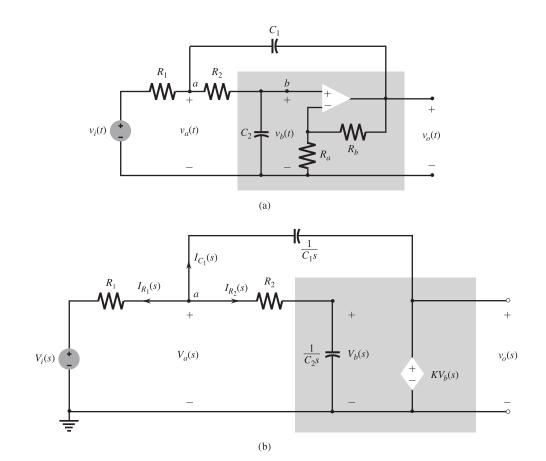


Figure 4.17 (a) Sallen–Key circuit and (b) its equivalent.

We are required to find

$$H(s) = \frac{V_o(s)}{V_i(s)}$$

assuming all initial conditions to be zero.

Figure 4.17b shows the transformed version of the circuit in Fig. 4.17a. The noninverting amplifier is replaced by its equivalent circuit. All the voltages are replaced by their Laplace transforms, and all the circuit elements are shown by their impedances. All the initial conditions are assumed to be zero, as required for determining H(s).

We shall use node analysis to derive the result. There are two unknown node voltages,  $V_a(s)$  and  $V_b(s)$ , requiring two node equations.

At node *a*,  $I_{R_1}(s)$ , the current in  $R_1$  (leaving the node *a*), is  $[V_a(s) - V_i(s)]/R_1$ . Similarly,  $I_{R_2}(s)$ , the current in  $R_2$  (leaving the node *a*), is  $[V_a(s) - V_b(s)]/R_2$ , and  $I_{C_1}(s)$ , the current in capacitor  $C_1$  (leaving the node *a*), is  $[V_a(s) - V_o(s)]C_1s = [V_a(s) - KV_b(s)]C_1s$ .

The sum of all the three currents is zero. Therefore,

$$\frac{V_a(s) - V_i(s)}{R_1} + \frac{V_a(s) - V_b(s)}{R_2} + [V_a(s) - KV_b(s)]C_1s = 0$$

or

$$\left(\frac{1}{R_1} + \frac{1}{R_2} + C_1 s\right) V_a(s) - \left(\frac{1}{R_2} + K C_1 s\right) V_b(s) = \frac{1}{R_1} V_i(s)$$

Similarly, the node equation at node b yields

$$\frac{V_b(s) - V_a(s)}{R_2} + C_2 s V_b(s) = 0$$

or

$$-\frac{1}{R_2}V_a(s) + \left(\frac{1}{R_2} + C_2s\right)V_b(s) = 0$$

The two node equations in two unknown node voltages  $V_a(s)$  and  $V_b(s)$  can be expressed in matrix form as

$$\begin{bmatrix} G_1 + G_2 + C_1 s & -(G_2 + KC_1 s) \\ -G_2 & (G_2 + C_2 s) \end{bmatrix} \begin{bmatrix} V_a(s) \\ V_b(s) \end{bmatrix} = \begin{bmatrix} G_1 V_i(s) \\ 0 \end{bmatrix}$$

where

$$G_1 = \frac{1}{R_1}$$
 and  $G_2 = \frac{1}{R_2}$ 

Application of Cramer's rule yields

$$\frac{V_b(s)}{V_i(s)} = \frac{G_1G_2}{C_1C_2s^2 + [G_1C_2 + G_2C_2 + G_2C_1(1-K)]s + G_1G_2}$$
$$= \frac{\omega_0^2}{s^2 + 2\alpha s + \omega_0^2}$$

where

$$K = 1 + \frac{R_b}{R_a} \text{ and } \omega_0^2 = \frac{G_1 G_2}{C_1 C_2} = \frac{1}{R_1 R_2 C_1 C_2}$$
$$2\alpha = \frac{G_1 C_2 + G_2 C_2 + G_2 C_1 (1 - K)}{C_1 C_2} = \frac{1}{R_1 C_1} + \frac{1}{R_2 C_1} + \frac{1}{R_2 C_2} (1 - K)$$

Now

$$V_o(s) = KV_b(s)$$

Therefore,

$$H(s) = \frac{V_o(s)}{V_i(s)} = K \frac{V_b(s)}{V_i(s)} = \frac{K\omega_0^2}{s^2 + 2\alpha s + \omega_0^2}$$

385

## 4.5 BLOCK DIAGRAMS

Large systems may consist of an enormous number of components or elements. As anyone who has seen the circuit diagram of a radio or a television receiver can appreciate, analyzing such systems all at once could be next to impossible. In such cases, it is convenient to represent a system by suitably interconnected subsystems, each of which can be readily analyzed. Each subsystem can be characterized in terms of its input–output relationships. A linear system can be characterized by its transfer function H(s). Figure 4.18a shows a block diagram of a system with a transfer function H(s) and its input and output X(s) and Y(s), respectively.

Subsystems may be interconnected by using cascade, parallel, and feedback interconnections (Figs. 4.18b, 4.18c, 4.18d), the three elementary types. When transfer functions appear in cascade, as depicted in Fig. 4.18b, then, as shown earlier, the transfer function of the overall system is the product of the two transfer functions. This result can also be proved by observing that in Fig. 4.18b

$$\frac{Y(s)}{X(s)} = \frac{W(s)}{X(s)} \frac{Y(s)}{W(s)} = H_1(s)H_2(s)$$

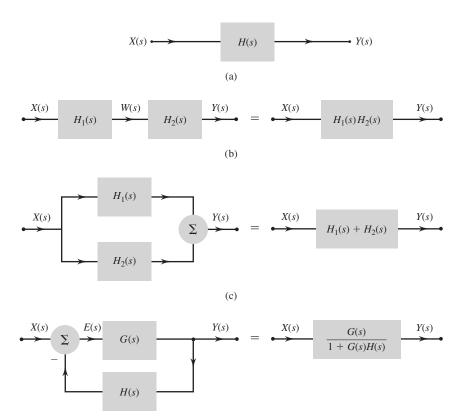


Figure 4.18 Elementary connections of blocks and their equivalents.

We can extend this result to any number of transfer functions in cascade. It follows from this discussion that the subsystems in cascade can be interchanged without affecting the overall transfer function. This commutation property of LTI systems follows directly from the commutative (and associative) property of convolution. We have already proved this property in Sec. 2.4-3. Every possible ordering of the subsystems yields the same overall transfer function. However, there may be practical consequences (such as sensitivity to parameter variation) affecting the behavior of different ordering.

Similarly, when two transfer functions,  $H_1(s)$  and  $H_2(s)$ , appear in parallel, as illustrated in Fig. 4.18c, the overall transfer function is given by  $H_1(s) + H_2(s)$ , the sum of the two transfer functions. The proof is trivial. This result can be extended to any number of systems in parallel.

When the output is fed back to the input, as shown in Fig. 4.18d, the overall transfer function Y(s)/X(s) can be computed as follows. The inputs to the adder are X(s) and -H(s)Y(s). Therefore, E(s), the output of the adder, is

$$E(s) = X(s) - H(s)Y(s)$$

But

$$Y(s) = G(s)E(s)$$
  
= G(s)[X(s) - H(s)Y(s)]

Therefore,

$$Y(s)[1+G(s)H(s)] = G(s)X(s)$$

so that

$$\frac{Y(s)}{X(s)} = \frac{G(s)}{1 + G(s)H(s)}$$
(4.35)

Therefore, the feedback loop can be replaced by a single block with the transfer function shown in Eq. (4.35) (see Fig. 4.18d).

In deriving these equations, we implicitly assume that when the output of one subsystem is connected to the input of another subsystem, the latter does not load the former. For example, the transfer function  $H_1(s)$  in Fig. 4.18b is computed by assuming that the second subsystem  $H_2(s)$  was not connected. This is the same as assuming that  $H_2(s)$  does not load  $H_1(s)$ . In other words, the input–output relationship of  $H_1(s)$  will remain unchanged regardless of whether  $H_2(s)$  is connected. Many modern circuits use op amps with high input impedances, so this assumption is justified. When such an assumption is not valid,  $H_1(s)$  must be computed under operating conditions [i.e., with  $H_2(s)$  connected].

## **EXAMPLE 4.21** Transfer Functions of Feedback Systems Using MATLAB

Consider the feedback system of Fig. 4.18d with G(s) = K/(s(s + 8)) and H(s) = 1. Use MATLAB to determine the transfer function for each of the following cases: (a) K = 7, (b) K = 16, and (c) K = 80.

We solve these cases using the control system toolbox function feedback.

```
(a)
   H = tf(1,1); K = 7; G = tf([0 \ 0 \ K], [1 \ 8 \ 0]); TFa = feedback(G,H)
>>
    Ha =
             7
      s^2 + 8 s + 7
Thus, H_a(s) = 7/(s^2 + 8s + 7).
(b)
>> H = tf(1,1); K = 16; G = tf([0 0 K],[1 8 0]); TFb = feedback(G,H)
    Hb =
             16
          _____
      s^2 + 8 s + 16
Thus, H_h(s) = 16/(s^2 + 8s + 16).
(c)
>> H = tf(1,1); K = 80; G = tf([0 0 K],[1 8 0]); TFc = feedback(G,H)
    Hc =
             80
       -----
      s<sup>2</sup> + 8 s + 80
Thus, H_c(s) = \frac{80}{(s^2 + 8s + 80)}.
```

## 4.6 SYSTEM REALIZATION

We now develop a systematic method for realization (or implementation) of an arbitrary *N*th-order transfer function. The most general transfer function with M = N is given by

$$H(s) = \frac{b_0 s^N + b_1 s^{N-1} + \dots + b_{N-1} s + b_N}{s^N + a_1 s^{N-1} + \dots + a_{N-1} s + a_N}$$
(4.36)

Since realization is basically a synthesis problem, there is no unique way of realizing a system. A given transfer function can be realized in many different ways. A transfer function H(s) can be realized by using integrators or differentiators along with adders and multipliers. We avoid use of differentiators for practical reasons discussed in Secs. 2.1 and 4.3-3. Hence, in our implementation, we shall use integrators along with scalar multipliers and adders. We are already familiar with representation of all these elements except the integrator. The integrator can be represented by a box with integral sign (time-domain representation, Fig. 4.19a) or by a box with transfer function 1/s (frequency-domain representation, Fig. 4.19b).

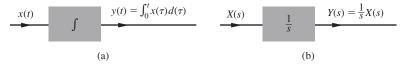


Figure 4.19 (a) Time-domain and (b) frequency-domain representations of an integrator.

### 4.6-1 Direct Form I Realization

Rather than realize the general *N*th-order system described by Eq. (4.36), we begin with a specific case of the following third-order system and then extend the results to the *N*th-order case:

$$H(s) = \frac{b_0 s^3 + b_1 s^2 + b_2 s + b_3}{s^3 + a_1 s^2 + a_2 s + a_3} = \frac{b_0 + \frac{b_1}{s} + \frac{b_2}{s^2} + \frac{b_3}{s^3}}{1 + \frac{a_1}{s} + \frac{a_2}{s^2} + \frac{a_3}{s^3}}$$

We can express H(s) as

$$H(s) = \underbrace{\left(b_0 + \frac{b_1}{s} + \frac{b_2}{s^2} + \frac{b_3}{s^3}\right)}_{H_1(s)} \underbrace{\left(\frac{1}{1 + \frac{a_1}{s} + \frac{a_2}{s^2} + \frac{a_3}{s^3}}\right)}_{H_2(s)}$$

We can realize H(s) as a cascade of transfer function  $H_1(s)$  followed by  $H_2(s)$ , as depicted in Fig. 4.20a, where the output of  $H_1(s)$  is denoted by W(s). Because of the commutative property of LTI system transfer functions in cascade, we can also realize H(s) as a cascade of  $H_2(s)$  followed by  $H_1(s)$ , as illustrated in Fig. 4.20b, where the (intermediate) output of  $H_2(s)$  is denoted by V(s).

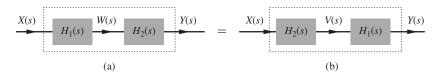


Figure 4.20 Realization of a transfer function in two steps.

The output of  $H_1(s)$  in Fig. 4.20a is given by  $W(s) = H_1(s)X(s)$ . Hence,

$$W(s) = \left(b_0 + \frac{b_1}{s} + \frac{b_2}{s^2} + \frac{b_3}{s^3}\right) X(s)$$
(4.37)

Also, the output Y(s) and the input W(s) of  $H_2(s)$  in Fig. 4.20a are related by  $Y(s) = H_2(s)W(s)$ . Hence,

$$W(s) = \left(1 + \frac{a_1}{s} + \frac{a_2}{s^2} + \frac{a_3}{s^3}\right)Y(s)$$
(4.38)

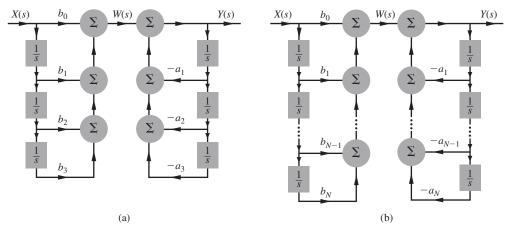


Figure 4.21 Direct form I realization of an LTIC system: (a) third-order and (b) Nth-order.

We shall first realize  $H_1(s)$ . Equation (4.37) shows that the output W(s) can be synthesized by adding the input  $b_0X(s)$  to  $b_1(X(s)/s)$ ,  $b_2(X(s)/s^2)$ , and  $b_3(X(s)/s^3)$ . Because the transfer function of an integrator is 1/s, the signals X(s)/s,  $X(s)/s^2$ , and  $X(s)/s^3$  can be obtained by successive integration of the input x(t). The left-half section of Fig. 4.21a shows how W(s) can be synthesized from X(s), according to Eq. (4.37). Hence, this section represents a realization of  $H_1(s)$ .

To complete the picture, we shall realize  $H_2(s)$ , which is specified by Eq. (4.38). We can rearrange Eq. (4.38) as

$$Y(s) = W(s) - \left(\frac{a_1}{s} + \frac{a_2}{s^2} + \frac{a_3}{s^3}\right)Y(s)$$
(4.39)

Hence, to obtain Y(s), we subtract  $a_1Y(s)/s$ ,  $a_2Y(s)/s^2$ , and  $a_3Y(s)/s^3$  from W(s). We have already obtained W(s) from the first step [output of  $H_1(s)$ ]. To obtain signals Y(s)/s,  $Y(s)/s^2$ , and  $Y(s)/s^3$ , we assume that we already have the desired output Y(s). Successive integration of Y(s) yields the needed signals Y(s)/s,  $Y(s)/s^2$ , and  $Y(s)/s^3$ . We now synthesize the final output Y(s) according to Eq. (4.39), as seen in the right-half section of Fig. 4.21a.<sup>†</sup> The left-half section in Fig. 4.21a represents  $H_1(s)$  and the right-half is  $H_2(s)$ . We can generalize this procedure, known as the *direct form I* (DFI) realization, for any value of N. This procedure requires 2N integrators to realize an Nth-order transfer function, as shown in Fig. 4.21b.

### 4.6-2 Direct Form II Realization

In the direct form I, we realize H(s) by implementing  $H_1(s)$  followed by  $H_2(s)$ , as shown in Fig. 4.20a. We can also realize H(s), as shown in Fig. 4.20b, where  $H_2(s)$  is followed by  $H_1(s)$ .

<sup>&</sup>lt;sup>†</sup> It may seem odd that we first assumed the existence of Y(s), integrated it successively, and then in turn generated Y(s) from W(s) and the three successive integrals of signal Y(s). This procedure poses a dilemma similar to "Which came first, the chicken or the egg?" The problem here is satisfactorily resolved by writing the expression for Y(s) at the output of the right-hand adder (at the top) in Fig. 4.21a and verifying that this expression is indeed the same as Eq. (4.38).

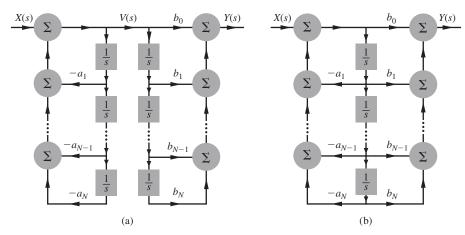


Figure 4.22 Direct form II realization of an *N*th-order LTIC system.

This procedure is known as the *direct form II* realization. Figure 4.22a shows direct form II realization, where we have interchanged sections representing  $H_1(s)$  and  $H_2(s)$  in Fig. 4.21b. The output of  $H_2(s)$  in this case is denoted by V(s).<sup>‡</sup>

An interesting observation in Fig. 4.22a is that the input signal to both the chains of integrators is V(s). Clearly, the outputs of integrators in the left-side chain are identical to the corresponding outputs of the right-side integrator chain, thus making the right-side chain redundant. We can eliminate this chain and obtain the required signals from the left-side chain, as shown in Fig. 4.22b. This implementation halves the number of integrators to N, and, thus, is more efficient in hardware utilization than either Figs. 4.21b or 4.22a. This is the *direct form II* (DFII) realization.

An *N*th-order differential equation with N = M has a property that its implementation requires a minimum of *N* integrators. A realization is *canonic* if the number of integrators used in the realization is equal to the order of the transfer function realized. Thus, canonic realization has no redundant integrators. The DFII form in Fig. 4.22b is a canonic realization, and is also called the *direct canonic* form. Note that the DFI is noncanonic.

The direct form I realization (Fig. 4.22b) implements zeros first [the left-half section represented by  $H_1(s)$ ] followed by realization of poles [the right-half section represented by  $H_2(s)$ ] of H(s). In contrast, canonic direct implements poles first followed by zeros. Although both these realizations result in the same transfer function, they generally behave differently from the viewpoint of sensitivity to parameter variations.

$$V(s) = X(s) - \left(\frac{a_1}{s} + \frac{a_2}{s^2} + \dots + \frac{a_N}{s^N}\right)V(s)$$

and

$$Y(s) = \left(b_0 + \frac{b_1}{s} + \frac{b_2}{s^2} + \dots + \frac{b_N}{s^N}\right)V(s)$$

<sup>&</sup>lt;sup>‡</sup> The reader can show that the equations relating X(s), V(s), and Y(s) in Fig. 4.22a are

#### **EXAMPLE 4.22** Canonic Direct Form Realizations

Find the canonic direct form realization of the following transfer functions:

(a) 
$$\frac{5}{s+7}$$
  
(b)  $\frac{s}{s+7}$   
(c)  $\frac{s+5}{s+7}$   
(d)  $\frac{4s+28}{s^2+6s+5}$ 

All four of these transfer functions are special cases of H(s) in Eq. (4.36).

(a) The transfer function 5/(s+7) is of the first order (N = 1); therefore, we need only one integrator for its realization. The feedback and feedforward coefficients are

$$a_1 = 7$$
 and  $b_0 = 0$ ,  $b_1 = 5$ 

The realization is depicted in Fig. 4.23a. Because N = 1, there is a single feedback connection from the output of the integrator to the input adder with coefficient  $a_1 = 7$ . For N = 1, generally, there are N + 1 = 2 feedforward connections. However, in this case,  $b_0 = 0$ , and there is only one feedforward connection with coefficient  $b_1 = 5$  from the output of the integrator to the output adder. Because there is only one input signal to the output adder, we can do away with the adder, as shown in Fig. 4.23a.

**(b)** 

$$H(s) = \frac{s}{s+7}$$

In this first-order transfer function,  $b_1 = 0$ . The realization is shown in Fig. 4.23b. Because there is only one signal to be added at the output adder, we can discard the adder.

(c)

$$H(s) = \frac{s+5}{s+7}$$

The realization appears in Fig. 4.23c. Here H(s) is a first-order transfer function with  $a_1 = 7$  and  $b_0 = 1$ ,  $b_1 = 5$ . There is a single feedback connection (with coefficient 7) from the integrator output to the input adder. There are two feedforward connections (Fig. 4.23c).<sup>†</sup>


$$H(s) = 1 - \frac{2}{s+7}$$

We now realize H(s) as a parallel combination of two transfer functions, as indicated by this equation.

<sup>&</sup>lt;sup>†</sup> When M = N (as in this case), H(s) can also be realized in another way by recognizing that

$$H(s) = \frac{4s + 28}{s^2 + 6s + 5}$$

This is a second-order system with  $b_0 = 0$ ,  $b_1 = 4$ ,  $b_2 = 28$ ,  $a_1 = 6$ , and  $a_2 = 5$ . Figure 4.23d shows a realization with two feedback connections and two feedforward connections.

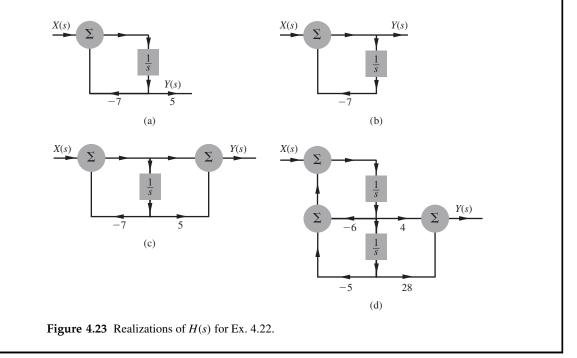

#### **DRILL 4.11 Canonic Direct Form Realization**

Give the canonic direct realization of

$$H(s) = \frac{2s}{s^2 + 6s + 2s}$$

## 4.6-3 Cascade and Parallel Realizations

An *N*th-order transfer function H(s) can be expressed as a product or a sum of *N* first-order transfer functions. Accordingly, we can also realize H(s) as a cascade (series) or parallel form of these *N* first-order transfer functions. Consider, for instance, the transfer function in part (d) of Ex. 4.22.

$$H(s) = \frac{4s + 28}{s^2 + 6s + 5}$$

We can express H(s) as

$$H(s) = \frac{4s+28}{(s+1)(s+5)} = \underbrace{\left(\frac{4s+28}{s+1}\right)}_{H_1(s)} \underbrace{\left(\frac{1}{s+5}\right)}_{H_2(s)}$$

We can also express H(s) as a sum of partial fractions as


$$H(s) = \frac{4s+28}{(s+1)(s+5)} = \underbrace{\frac{6}{s+1}}_{H_3(s)} - \underbrace{\frac{2}{s+5}}_{H_4(s)}$$

These equations give us the option of realizing H(s) as a cascade of  $H_1(s)$  and  $H_2(s)$ , as shown in Fig. 4.24a, or a parallel of  $H_3(s)$  and  $H_4(s)$ , as depicted in Fig. 4.24b. Each of the first-order transfer functions in Fig. 4.24 can be implemented by using canonic direct realizations, discussed earlier.

This discussion by no means exhausts all the possibilities. In the cascade form alone, there are different ways of grouping the factors in the numerator and the denominator of H(s), and each grouping can be realized in DFI or canonic direct form. Accordingly, several cascade forms are possible. In Sec. 4.6-4, we shall discuss yet another form that essentially doubles the numbers of realizations discussed so far.

From a practical viewpoint, parallel and cascade forms are preferable because parallel and certain cascade forms are numerically less sensitive than canonic direct form to small parameter variations in the system. Qualitatively, this difference can be explained by the fact that in a canonic realization all the coefficients interact with each other, and a change in any coefficient will be magnified through its repeated influence from feedback and feedforward connections. In a parallel realization, in contrast, the change in a coefficient will affect only a localized segment; the case with a cascade realization is similar.

In the examples of cascade and parallel realization, we have separated H(s) into first-order factors. For H(s) of higher orders, we could group H(s) into factors, not all of which are necessarily of the first order. For example, if H(s) is a third-order transfer function, we could realize this function as a cascade (or a parallel) combination of a first-order and a second-order factor.

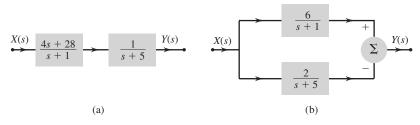

**Figure 4.24** Realization of (4s + 28)/[(s + 1)(s + 5)]: (a) cascade form and (b) parallel form.

#### **REALIZATION OF COMPLEX CONJUGATE POLES**

The complex poles in H(s) should be realized as a second-order (quadratic) factor because we cannot implement multiplication by complex numbers. Consider, for example,

$$H(s) = \frac{10s + 50}{(s+3)(s^2 + 4s + 13)}$$
$$= \frac{10s + 50}{(s+3)(s+2-j3)(s+2+j3)}$$
$$= \frac{2}{s+3} - \frac{1+j2}{s+2-j3} - \frac{1-j2}{s+2+j3}$$

We cannot realize first-order transfer functions individually with the poles  $-2 \pm j3$  because they require multiplication by complex numbers in the feedback and the feedforward paths. Therefore, we need to combine the conjugate poles and realize them as a second-order transfer function.<sup>†</sup> In the present example, we can create a cascade realization from H(s) expressed in product form as

$$H(s) = \left(\frac{10}{s+3}\right) \left(\frac{s+5}{s^2+4s+13}\right)$$

Similarly, we can create a parallel realization from H(s) expressed in sum form as

$$H(s) = \frac{2}{s+3} - \frac{2s-8}{s^2+4s+13}$$

## **REALIZATION OF REPEATED POLES**

When repeated poles occur, the procedure for canonic and cascade realization is exactly the same as before. For a parallel realization, however, the procedure requires special handling, as explained in Ex. 4.23.


## **EXAMPLE 4.23** Parallel Realization

Determine the parallel realization of

$$H(s) = \frac{7s^2 + 37s + 51}{(s+2)(s+3)^2} = \frac{5}{s+2} + \frac{2}{s+3} - \frac{3}{(s+3)^2}$$

This third-order transfer function should require no more than three integrators. But if we try to realize each of the three partial fractions separately, we require four integrators because of the one second-order term. This difficulty can be avoided by observing that the terms 1/(s+3) and

<sup>&</sup>lt;sup>†</sup> It is possible to realize complex, conjugate poles indirectly by using a cascade of two first-order transfer functions and feedback. A transfer function with poles  $-a \pm jb$  can be realized by using a cascade of two identical first-order transfer functions, each having a pole at -a (see Prob. 4.6-15).

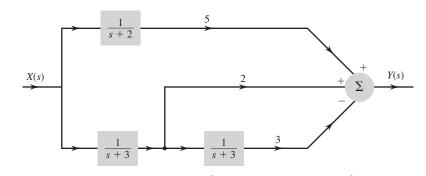

**Figure 4.25** Parallel realization of  $(7s^2 + 37s + 51)/((s+2)(s+3)^2)$ .

 $1/(s+3)^2$  can be realized with a cascade of two subsystems, each having a transfer function 1/(s+3), as shown in Fig. 4.25. Each of the three first-order transfer functions in Fig. 4.25 may now be realized as in Fig. 4.23.

#### DRILL 4.12 Canonic, Cascade, and Parallel Realizations

Find the canonic, cascade, and parallel realization of

$$H(s) = \frac{s+3}{s^2+7s+10} = \left(\frac{s+3}{s+2}\right) \left(\frac{1}{s+5}\right)$$

## 4.6-4 Transposed Realization

Two realizations are said to be *equivalent* if they have the same transfer function. A simple way to generate an equivalent realization from a given realization is to use its *transpose*. To generate a transpose of any realization, we change the given realization as follows:

- 1. Reverse all the arrow directions without changing the scalar multiplier values.
- 2. Replace pickoff nodes by adders and vice versa.
- 3. Replace the input X(s) with the output Y(s) and vice versa.

Figure 4.26a shows the transposed version of the canonic direct form realization in Fig. 4.22b found according to the rules just listed. Figure 4.26b is Fig. 4.26a reoriented in the conventional form so that the input X(s) appears at the left and the output Y(s) appears at the right. Observe that this realization is also canonic.

Rather than prove the theorem on equivalence of the transposed realizations, we shall verify that the transfer function of the realization in Fig. 4.26b is identical to that in Eq. (4.36).

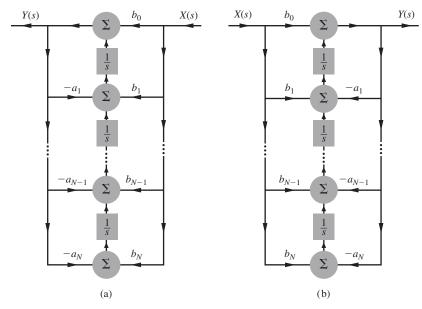


Figure 4.26 Realization of an Nth-order LTI transfer function in the transposed form.

Figure 4.26b shows that Y(s) is being fed back through N paths. The fed-back signal appearing at the input of the top adder is

$$\left(\frac{-a_1}{s} + \frac{-a_2}{s^2} + \dots + \frac{-a_{N-1}}{s^{N-1}} + \frac{-a_N}{s^N}\right)Y(s)$$

The signal X(s), fed to the top adder through N + 1 forward paths, contributes

$$\left(b_0 + \frac{b_1}{s} + \dots + \frac{b_{N-1}}{s^{N-1}} + \frac{b_N}{s^N}\right) X(s)$$

The output Y(s) is equal to the sum of these two signals (feed forward and feed back). Hence,

$$Y(s) = \left(\frac{-a_1}{s} + \frac{-a_2}{s^2} + \dots + \frac{-a_{N-1}}{s^{N-1}} + \frac{-a_N}{s^N}\right)Y(s) + \left(b_0 + \frac{b_1}{s} + \dots + \frac{b_{N-1}}{s^{N-1}} + \frac{b_N}{s^N}\right)X(s)$$

Transporting all the Y(s) terms to the left side and multiplying throughout by  $s^N$ , we obtain

$$(s^{N} + a_{1}s^{N-1} + \dots + a_{N-1}s + a_{N})Y(s) = (b_{0}s^{N} + b_{1}s^{N-1} + \dots + b_{N-1}s + b_{N})X(s)$$

Consequently,

$$H(s) = \frac{Y(s)}{X(s)} = \frac{b_0 s^N + b_1 s^{N-1} + \dots + b_{N-1} s + b_N}{s^N + a_1 s^{N-1} + \dots + a_{N-1} s + a_N}$$

Hence, the transfer function H(s) is identical to that in Eq. (4.36).

We have essentially doubled the number of possible realizations. Every realization that was found earlier has a transpose. Note that the transpose of a transpose results in the same realization.

#### **EXAMPLE 4.24** Transposed Realizations

Find the transpose canonic direct realizations for parts (a) and (d) of Ex. 4.22 (Figs. 4.23c and 4.23d). The transfer functions are:

(a) 
$$\frac{s+5}{s+7}$$
  
(b)  $\frac{4s+28}{s^2+6s+5}$ 

Both these realizations are special cases of the one in Fig. 4.26b.

(a) In this case, N = 1 with  $a_1 = 7, b_0 = 1, b_1 = 5$ . The desired realization can be obtained by transposing Fig. 4.23c. However, we already have the general model of the transposed realization in Fig. 4.26b. The desired solution is a special case of Fig. 4.26b with N = 1 and  $a_1 = 7, b_0 = 1, b_1 = 5$ , as shown in Fig. 4.27a.

(b) In this case, N = 2 with  $b_0 = 0$ ,  $b_1 = 4$ ,  $b_2 = 28$ ,  $a_1 = 6$ ,  $a_2 = 5$ . Using the model of Fig. 4.26b, we obtain the desired realization, as shown in Fig. 4.27b.

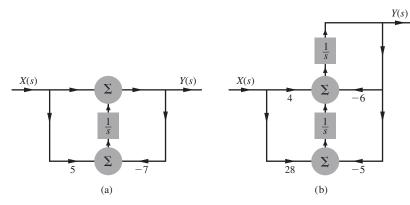


Figure 4.27 Transposed canonic direct form realizations of (a) (s+5)/(s+7) and (b)  $(4s+28)/(s^2+6s+5)$ .

#### **DRILL 4.13** Transposed Realizations

Find the transposed DFI and transposed canonic direct (TDFII) realizations of H(s) in Drill 4.11

#### 4.6-5 Using Operational Amplifiers for System Realization

In this section, we discuss practical implementation of the realizations described in Sec. 4.6-4. Earlier we saw that the basic elements required for the synthesis of an LTIC system (or a given transfer function) are (scalar) multipliers, integrators, and adders. All these elements can be realized by operational amplifier (op-amp) circuits.

#### **OPERATIONAL AMPLIFIER CIRCUITS**

Figure 4.28 shows an op-amp circuit in the frequency domain (the transformed circuit). Because the input impedance of the op amp is infinite (very high), all the current I(s) flows in the feedback path, as illustrated. Moreover  $V_x(s)$ , the voltage at the input of the op amp, is zero (very small) because of the infinite (very large) gain of the op amp. Therefore, for all practical purposes,

$$Y(s) = -I(s)Z_f(s)$$

Moreover, because  $v_x \approx 0$ ,

$$I(s) = \frac{X(s)}{Z(s)}$$


Substitution of the second equation in the first yields

$$Y(s) = -\frac{Z_f(s)}{Z(s)}X(s)$$

Therefore, the op-amp circuit in Fig. 4.28 has the transfer function

$$H(s) = -\frac{Z_f(s)}{Z(s)}$$

By properly choosing Z(s) and  $Z_f(s)$ , we can obtain a variety of transfer functions, as the following development shows.

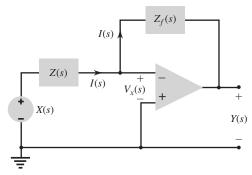

**Figure 4.28** A basic inverting configuration op-amp circuit.

## THE SCALAR MULTIPLIER

If we use a resistor  $R_f$  in the feedback and a resistor R at the input (Fig. 4.29a), then  $Z_f(s) = R_f$ , Z(s) = R, and

$$H(s) = -\frac{R_f}{R}$$

The system acts as a scalar multiplier (or an amplifier) with a negative gain  $R_f/R$ . A positive gain can be obtained by using two such multipliers in cascade or by using a single noninverting amplifier, as depicted in Fig. 4.16c. Figure 4.29a also shows the compact symbol used in circuit diagrams for a scalar multiplier.

#### THE INTEGRATOR

If we use a capacitor *C* in the feedback and a resistor *R* at the input (Fig. 4.29b), then  $Z_f(s) = 1/Cs$ , Z(s) = R, and

$$H(s) = \left(-\frac{1}{RC}\right)\frac{1}{s}$$

The system acts as an ideal integrator with a gain -1/RC. Figure 4.29b also shows the compact symbol used in circuit diagrams for an integrator.

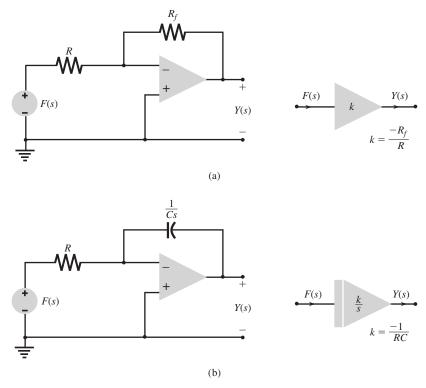


Figure 4.29 (a) Op-amp inverting amplifier. (b) Integrator.

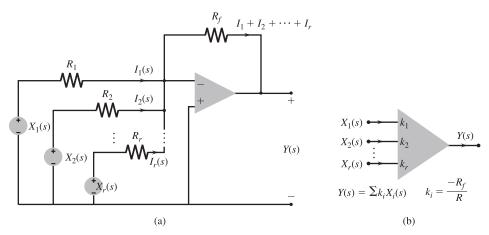


Figure 4.30 Op-amp summing and amplifying circuit.

## THE ADDER

Consider now the circuit in Fig. 4.30a with *r* inputs  $X_1(s), X_2(s), \ldots, X_r(s)$ . As usual, the input voltage  $V_x(s) \simeq 0$  because the op-amp gain  $\rightarrow \infty$ . Moreover, the current going into the op amp is very small ( $\simeq 0$ ) because the input impedance  $\rightarrow \infty$ . Therefore, the total current in the feedback resistor  $R_f$  is  $I_1(s) + I_2(s) + \cdots + I_r(s)$ . Moreover, because  $V_x(s) = 0$ ,

$$I_j(s) = \frac{X_j(s)}{R_j} \qquad j = 1, 2, \dots, n$$

Also,

$$Y(s) = -R_f [I_1(s) + I_2(s) + \dots + I_r(s)]$$
  
=  $-\left[\frac{R_f}{R_1}X_1(s) + \frac{R_f}{R_2}X_2(s) + \dots + \frac{R_f}{R_r}X_r(s)\right]$   
=  $k_1X_1(s) + k_2X_2(s) + \dots + k_rX_r(s)$ 

where


$$k_i = \frac{-R_f}{R_i}$$

Clearly, the circuit in Fig. 4.30 serves an adder and an amplifier with any desired gain for each of the input signals. Figure 4.30b shows the compact symbol used in circuit diagrams for an adder with r inputs.

## **EXAMPLE 4.25** Op-Amp Realization

Use op-amp circuits to realize the canonic direct form of the transfer function

$$H(s) = \frac{2s+5}{s^2+4s+10}$$

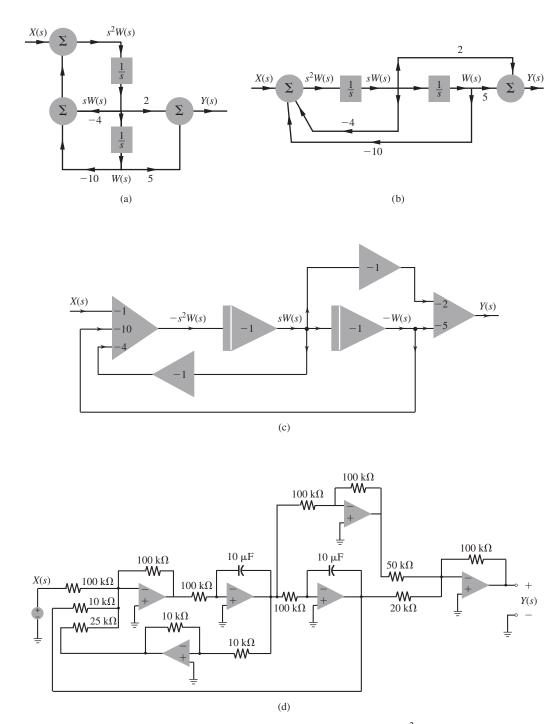

**Figure 4.31** Op-amp realization of a second-order transfer function  $(2s+5)/(s^2+4s+10)$ .

The basic canonic realization is shown in Fig. 4.31a. The same realization with horizontal reorientation is shown in Fig. 4.31b. Signals at various points are also indicated in the realization. For convenience, we denote the output of the last integrator by W(s). Consequently, the signals at the inputs of the two integrators are sW(s) and  $s^2W(s)$ , as shown in Figs. 4.31a and 4.31b. Op-amp elements (multipliers, integrators, and adders) change the polarity of the output signals. To incorporate this fact, we modify the canonic realization in Fig. 4.31b to that depicted in Fig. 4.31c. In Fig. 4.31b, the successive outputs of the adder and the integrators are  $s^2W(s)$ , sW(s), and W(s), respectively. Because of polarity reversals in op-amp circuits, these outputs are  $-s^2W(s)$ , sW(s), and -W(s), respectively, in Fig. 4.31c. This polarity reversal requires corresponding modifications in the signs of feedback and feedforward gains. According to Fig. 4.31b,

$$s^{2}W(s) = X(s) - 4sW(s) - 10W(s)$$

Therefore,

$$-s^{2}W(s) = -X(s) + 4sW(s) + 10W(s)$$

Because the adder gains are always negative (see Fig. 4.30b), we rewrite the foregoing equation as

$$-s^{2}W(s) = -1[X(s)] - 4[-sW(s)] - 10[-W(s)]$$

Figure 4.31c shows the implementation of this equation. The hardware realization appears in Fig. 4.31d. Both integrators have a unity gain, which requires RC = 1. We have used R = 100 k $\Omega$  and  $C = 10 \ \mu$ F. The gain of 10 in the outer feedback path is obtained in the adder by choosing the feedback resistor of the adder to be 100 k $\Omega$  and an input resistor of 10 k $\Omega$ . Similarly, the gain of 4 in the inner feedback path is obtained by using the corresponding input resistor of 25 k $\Omega$ . The gains of 2 and 5, required in the feedforward connections, are obtained by using a feedback resistor of 100 k $\Omega$  and input resistors of 50 and 20 k $\Omega$ , respectively.<sup>†</sup>


The op-amp realization in Fig. 4.31 is not necessarily the one that uses the fewest op amps. This example is given just to illustrate a systematic procedure for designing an op-amp circuit of an arbitrary transfer function. There are more efficient circuits (such as Sallen–Key or biquad) that use fewer op amps to realize a second-order transfer function.

#### DRILL 4.14 Transfer Functions of Op-Amp Circuits

Show that the transfer functions of the op-amp circuits in Figs. 4.32a and 4.32b are  $H_1(s)$  and  $H_2(s)$ , respectively, where


$$H_1(s) = \frac{-R_f}{R} \left(\frac{a}{s+a}\right) \qquad a = \frac{1}{R_f C_f}$$
$$H_2(s) = -\frac{C}{C_f} \left(\frac{s+b}{s+a}\right) \qquad a = \frac{1}{R_f C_f} \qquad b = \frac{1}{RC}$$


<sup>&</sup>lt;sup>†</sup> It is possible to avoid the two inverting op amps (with gain -1) in Fig. 4.31d by adding signal sW(s) to the input and output adders directly, using the noninverting amplifier configuration in Fig. 4.16d.

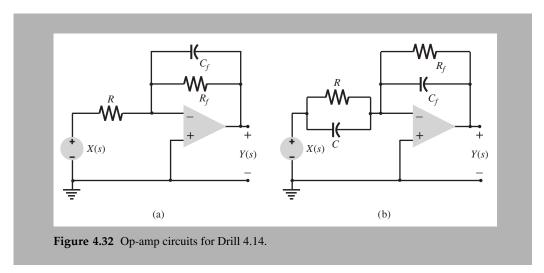

## 4.7 APPLICATION TO FEEDBACK AND CONTROLS

Generally, systems are designed to produce a desired output y(t) for a given input x(t). Using the given performance criteria, we can design a system, as shown in Fig. 4.33a. Ideally, such an open-loop system should yield the desired output. In practice, however, the system characteristics change with time, as a result of aging or replacement of some components, or because of changes in the operating environment. Such variations cause changes in the output for the same input. Clearly, this is undesirable in precision systems.

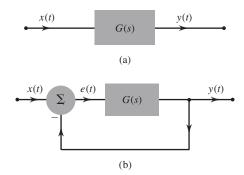

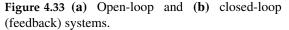

A possible solution to this problem is to add a signal component to the input that is not a predetermined function of time but will change to counteract the effects of changing system characteristics and the environment. In short, we must provide a correction at the system input to account for the undesired changes just mentioned. Yet since these changes are generally unpredictable, it is not clear how to preprogram appropriate corrections to the input. However, the difference between the actual output and the desired output gives an indication of the suitable correction to be applied to the system input. It may be possible to counteract the variations by feeding the output (or some function of output) back to the input.

We unconsciously apply this principle in daily life. Consider an example of marketing a certain product. The optimum price of the product is the value that maximizes the profit of a merchant. The output in this case is the profit, and the input is the price of the item. The output (profit) can be controlled (within limits) by varying the input (price). The merchant may price the product too high initially, in which case, he will sell too few items, reducing the profit. Using feedback of the profit (output), he adjusts the price (input), to maximize his profit. If there is a sudden or unexpected change in the business environment, such as a strike-imposed shutdown of a large factory in town, the demand for the item goes down, thus reducing his output (profit). He adjusts his input (reduces price) using the feedback of the output (profit) in a way that will optimize his profit in the changed circumstances. If the town suddenly becomes more prosperous because a new factory opens, he will increase the price to maximize the profit. Thus, by continuous feedback of the output to the input, he realizes his goal of maximum profit (optimum output) in any given circumstances. We observe thousands of examples of feedback systems around us in everyday life. Most social, economical, educational, and political processes are, in fact, feedback processes. A block diagram of such a system, called the *feedback* or *closed-loop* system, is shown in Fig. 4.33b.

A feedback system can address the problems arising because of unwanted disturbances such as random-noise signals in electronic systems, a gust of wind affecting a tracking antenna, a meteorite hitting a spacecraft, and the rolling motion of antiaircraft gun platforms mounted on ships or moving tanks. Feedback may also be used to reduce nonlinearities in a system or to control its rise time (or bandwidth). Feedback is used to achieve, with a given system, the desired objective within a given tolerance, despite partial ignorance of the system and the environment. A feedback system, thus, has an ability for supervision and self-correction in the face of changes in the system parameters and external disturbances (change in the environment).

Consider the feedback amplifier in Fig. 4.34. Let the forward amplifier gain G = 10,000. One-hundredth of the output is fed back to the input (H = 0.01). The gain T of the feedback amplifier is obtained by [see Eq. (4.35)]

$$T = \frac{G}{1+GH} = \frac{10,000}{1+100} = 99.01$$

Suppose that because of aging or replacement of some transistors, the gain G of the forward amplifier changes from 10,000 to 20,000. The new gain of the feedback amplifier is given by

$$T = \frac{G}{1+GH} = \frac{20,000}{1+200} = 99.5$$

Surprisingly, 100% variation in the forward gain G causes only 0.5% variation in the feedback amplifier gain T. Such reduced sensitivity to parameter variations is a must in precision amplifiers. In this example, we reduced the sensitivity of gain to parameter variations at the cost of forward

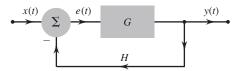


Figure 4.34 Effects of negative and positive feedback.

#### 406 CHAPTER 4 CONTINUOUS-TIME SYSTEM ANALYSIS

gain, which is reduced from 10,000 to 99. There is no dearth of forward gain (obtained by cascading stages). But low sensitivity is extremely precious in precision systems.

Now, consider what happens when we add (instead of subtract) the signal fed back to the input. Such addition means the sign on the feedback connection is + instead of - (which is same as changing the sign of H in Fig. 4.34). Consequently,

$$T = \frac{G}{1 - GH}$$

If we let G = 10,000 as before and  $H = 0.9 \times 10^{-4}$ , then

$$T = \frac{10,000}{1 - 0.9(10^4)(10^{-4})} = 100,000$$

Suppose that because of aging or replacement of some transistors, the gain of the forward amplifier changes to 11,000. The new gain of the feedback amplifier is

$$T = \frac{11,000}{1 - 0.9(11,000)(10^{-4})} = 1,100,000$$

Observe that in this case, a mere 10% increase in the forward gain G caused 1000% increase in the gain T (from 100,000 to 1,100,000). Clearly, the amplifier is very sensitive to parameter variations. This behavior is exactly opposite of what was observed earlier, when the signal fed back was subtracted from the input.

What is the difference between the two situations? Crudely speaking, the former case is called the negative feedback and the latter is the positive feedback. The positive feedback increases system gain but tends to make the system more sensitive to parameter variations. It can also lead to instability. In our example, if G were to be 111,111, then  $GH = 1, T = \infty$ , and the system would become unstable because the signal fed back was exactly equal to the input signal itself, since GH = 1. Hence, once a signal has been applied, no matter how small and how short in duration, it comes back to reinforce the input undiminished, which further passes to the output, and is fed back again and again and again. In essence, the signal perpetuates itself forever. This perpetuation, even when the input ceases to exist, is precisely the symptom of instability.

Generally speaking, a feedback system cannot be described in black and white terms, such as positive or negative. Usually H is a frequency-dependent component, more accurately represented by H(s); hence it varies with frequency. Consequently, what was negative feedback at lower frequencies can turn into positive feedback at higher frequencies and may give rise to instability. This is one of the serious aspects of feedback systems, which warrants a designer's careful attention.

## 4.7-1 Analysis of a Simple Control System

Figure 4.35a represents an automatic position control system, which can be used to control the angular position of a heavy object (e.g., a tracking antenna, an anti-aircraft gun mount, or the position of a ship). The input  $\theta_i$  is the desired angular position of the object, which can be set at any given value. The actual angular position  $\theta_o$  of the object (the output) is measured by a potentiometer whose wiper is mounted on the output shaft. The difference between the input  $\theta_i$ 

(set at the desired output position) and the output  $\theta_o$  (actual position) is amplified; the amplified output, which is proportional to  $\theta_i - \theta_o$ , is applied to the motor input. If  $\theta_i - \theta_o = 0$  (the output being equal to the desired angle), there is no input to the motor, and the motor stops. But if  $\theta_o \neq \theta_i$ , there will be a nonzero input to the motor, which will turn the shaft until  $\theta_o = \theta_i$ . It is evident that by setting the input potentiometer at a desired position in this system, we can control the angular position of a heavy remote object.

The block diagram of this system is shown in Fig. 4.35b. The amplifier gain is K, where K is adjustable. Let the motor (with load) transfer function that relates the output angle  $\theta_o$  to the motor input voltage be G(s) [for a starting point, see Eq. (1.32)]. This feedback arrangement is identical to that in Fig. 4.18d with H(s) = 1. Hence, T(s), the (closed-loop) system transfer function relating the output  $\theta_o$  to the input  $\theta_i$ , is

$$\frac{\Theta_o(s)}{\Theta_i(s)} = T(s) = \frac{KG(s)}{1 + KG(s)}$$

From this equation, we shall investigate the behavior of the automatic position control system in Fig. 4.35a for a step and a ramp input.

#### STEP INPUT

If we desire to change the angular position of the object instantaneously, we need to apply a step input. We may then want to know how long the system takes to position itself at the desired angle, whether it reaches the desired angle, and whether it reaches the desired position smoothly (monotonically) or oscillates about the final position. If the system oscillates, we may want to know how long it takes for the oscillations to settle down. All these questions can be readily answered by finding the output  $\theta_o(t)$  when the input  $\theta_i(t) = u(t)$ . A step input implies instantaneous change in the angle. This input would be one of the most difficult to follow; if the system can perform well for this input, it is likely to give a good account of itself under most other expected situations. This is why we test control systems for a step input.

For the step input  $\theta_i(t) = u(t)$ ,  $\Theta_i(s) = 1/s$  and

$$\Theta_o(s) = \frac{1}{s}T(s) = \frac{KG(s)}{s[1 + KG(s)]}$$

Let the motor (with load) transfer function relating the load angle  $\theta_o(t)$  to the motor input voltage be G(s) = 1/(s(s+8)). This yields

$$\Theta_o(s) = \frac{\frac{K}{s(s+8)}}{s\left[1 + \frac{K}{s(s+8)}\right]} = \frac{K}{s(s^2 + 8s + K)}$$

Let us investigate the system behavior for three different values of gain *K*. For K = 7,

$$\Theta_o(s) = \frac{7}{s(s^2 + 8s + 7)} = \frac{7}{s(s+1)(s+7)} = \frac{1}{s} - \frac{\frac{7}{6}}{s+1} + \frac{\frac{1}{6}}{s+7}$$

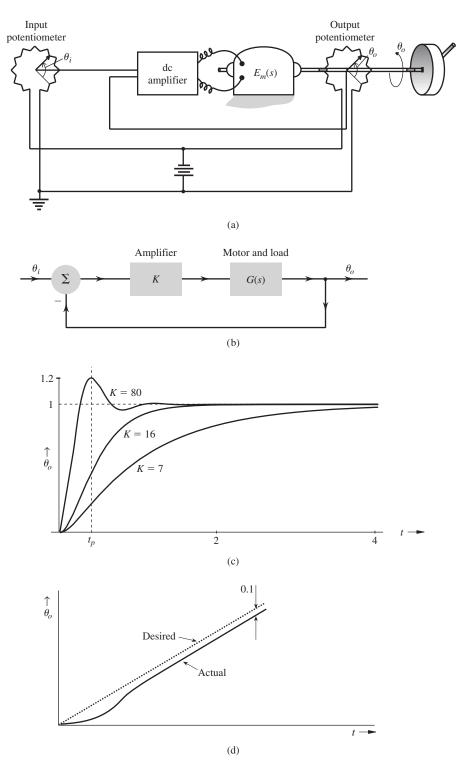


Figure 4.35 (a) An automatic position control system. (b) Its block diagram. (c) The unit step response. (d) The unit ramp response.

and

$$\theta_o(t) = \left(1 - \frac{7}{6}e^{-t} + \frac{1}{6}e^{-7t}\right)u(t)$$

This response, illustrated in Fig. 4.35c, shows that the system reaches the desired angle, but at a rather leisurely pace. To speed up the response let us increase the gain to, say, 80.

For K = 80,

$$\Theta_o(s) = \frac{80}{s(s^2 + 8s + 80)} = \frac{80}{s(s + 4 - j8)(s + 4 + j8)}$$
$$= \frac{1}{s} + \frac{\frac{\sqrt{5}}{4}e^{j153^\circ}}{s + 4 - j8} + \frac{\frac{\sqrt{5}}{4}e^{-j153^\circ}}{s + 4 + j8}$$

and

$$\theta_o(t) = \left[1 + \frac{\sqrt{5}}{2}e^{-4t}\cos(8t + 153^\circ)\right]u(t)$$

This response, also depicted in Fig. 4.35c, achieves the goal of reaching the final position at a faster rate than that in the earlier case (K = 7). Unfortunately the improvement is achieved at the cost of ringing (oscillations) with high overshoot. In the present case, the *percent overshoot* (PO) is 21%. The response reaches its peak value at *peak time*  $t_p = 0.393$  second. The *rise time*, defined as the time required for the response to rise from 10% to 90% of its steady-state value, indicates the speed of response.<sup>†</sup> In the present case  $t_r = 0.175$  second. The steady-state value of the response to reach the desired value of unity. In practice, however, we may consider the response to have settled to the final value if it closely approaches the final value. A widely accepted measure of closeness is within 2% of the final value. The time required for the response to reach and stay within 2% of the final value is called the settling time  $t_s$ .<sup>‡</sup> In Fig. 4.35c, we find  $t_s \approx 1$  second (when K = 80). A good system has a small overshoot, small  $t_r$  and  $t_s$  and a small steady-state error.

A large overshoot, as in the present case, may be unacceptable in many applications. Let us try to determine K (the gain) that yields the fastest response without oscillations. Complex characteristic roots lead to oscillations; to avoid oscillations, the characteristic roots should be real. In the present case, the characteristic polynomial is  $s^2 + 8s + K$ . For K > 16, the characteristic roots are complex; for K < 16, the roots are real. The fastest response without oscillations is obtained by choosing K = 16. We now consider this case.

For K = 16,

$$\Theta_o(s) = \frac{16}{s(s^2 + 8s + 16)} = \frac{16}{s(s+4)^2} = \frac{1}{s} - \frac{1}{s+4} - \frac{4}{(s+4)^2}$$

and

$$\theta_o(t) = [1 - (4t+1)e^{-4t}]u(t)$$

This response also appears in Fig. 4.35c. The system with K > 16 is said to be *underdamped* (oscillatory response), whereas the system with K < 16 is said to be *overdamped*. For K = 16, the system is said to be *critically damped*.

<sup>&</sup>lt;sup>†</sup> Delay time  $t_d$ , defined as the time required for the response to reach 50% of its steady-state value, is another indication of speed. For the present case,  $t_d = 0.141$  second.

<sup>&</sup>lt;sup>‡</sup> Typical percentage values used are 2 to 5% for  $t_s$ .

#### 410 CHAPTER 4 CONTINUOUS-TIME SYSTEM ANALYSIS

There is a trade-off between undesirable overshoot and rise time. Reducing overshoots leads to higher rise time (sluggish system). In practice, a small overshoot, which is still faster than the critical damping, may be acceptable. Note that percent overshoot PO and peak time  $t_p$  are meaningless for the overdamped or critically damped cases. In addition to adjusting gain K, we may need to augment the system with some type of compensator if the specifications on overshoot and the speed of response are too stringent.

#### RAMP INPUT

If the anti-aircraft gun in Fig. 4.35a is tracking an enemy plane moving with a uniform velocity, the gun-position angle must increase linearly with *t*. Hence, the input in this case is a ramp; that is,  $\theta_i(t) = tu(t)$ . Let us find the response of the system to this input when K = 80. In this case,  $\Theta_i(s) = 1/s^2$ , and

$$\Theta_o(s) = \frac{80}{s^2(s^2 + 8s + 80)} = -\frac{0.1}{s} + \frac{1}{s^2} + \frac{0.1(s-2)}{s^2 + 8s + 80}$$

Use of Table 4.1 yields

$$\theta_o(t) = \left[-0.1 + t + \frac{1}{8}e^{-8t}\cos(8t + 36.87^\circ)\right]u(t)$$

This response, sketched in Fig. 4.35d, shows that there is a steady-state error  $e_r = 0.1$  radian. In many cases such a small steady-state error may be tolerable. If, however, a zero steady-state error to a ramp input is required, this system in its present form is unsatisfactory. We must add some form of compensator to the system.

# **EXAMPLE 4.26** Step and Ramp Responses of Feedback Systems Using MATLAB

Using the feedback system of Fig. 4.18d with G(s) = K/(s(s+8)) and H(s) = 1, determine the step response for each of the following cases: (a) K = 7, (b) K = 16, and (c) K = 80. Additionally, find the unit ramp response when (d) K = 80.

Example 4.21 computes the transfer functions of these feedback systems in a simple way. In this example, the conv command is used to demonstrate polynomial multiplication of the two denominator factors of G(s). Step responses are computed by using the step command. (a-c)

>> H = tf(1,1); K = 7; G = tf([K],conv([1 0],[1 8])); Ha = feedback(G,H);

```
>> H = tf(1,1); K = 16; G = tf([K],conv([1 0],[1 8])); Hb = feedback(G,H);
```

```
>> H = tf(1,1); K = 80; G = tf([K],conv([1 0],[1 8])); Hc = feedback(G,H);
```

```
>> clf; step(Ha,'k-',Hb,'k--',Hc,'k-.');
```

<sup>&</sup>gt;> legend('K = 7', 'K = 16', 'K = 80', 'Location', 'best');


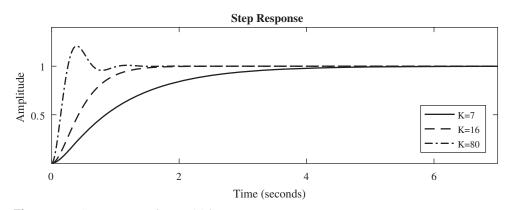


Figure 4.36 Step responses for Ex. 4.26.

(d) The unit ramp response is equivalent to the integral of the unit step response. We can obtain the ramp response by taking the step response of the system in cascade with an integrator. To help highlight waveform detail, we compute the ramp response over the short time interval of  $0 \le t \le 1.5$ .

>> t = 0:.001:1.5; Hd = series(Hc,tf([1],[1 0])); >> step(Hd,'k-',t); title('Unit Ramp Response');

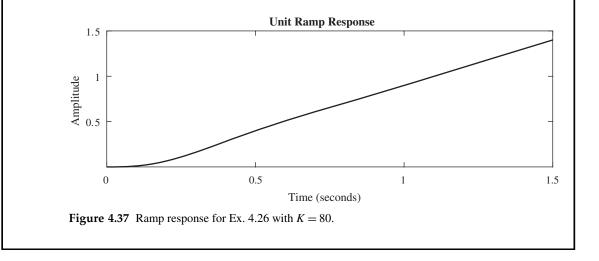

## DESIGN SPECIFICATIONS

Now the reader has some idea of the various specifications a control system might require. Generally, a control system is designed to meet given transient specifications, steady-state error specifications, and sensitivity specifications. Transient specifications include overshoot, rise time, and settling time of the response to step input. The steady-state error is the difference between

#### 412 CHAPTER 4 CONTINUOUS-TIME SYSTEM ANALYSIS

the desired response and the actual response to a test input in steady state. The system should also satisfy a specified sensitivity specifications to some system parameter variations, or to certain disturbances. Above all, the system must remain stable under operating conditions. Discussion of design procedures used to realize given specifications is beyond the scope of this book.

## 4.8 FREQUENCY RESPONSE OF AN LTIC SYSTEM

Filtering is an important area of signal processing. Filtering characteristics of a system are indicated by its response to sinusoids of various frequencies varying from 0 to  $\infty$ . Such characteristics are called the frequency response of the system. In this section, we shall find the frequency response of LTIC systems.

In Sec. 2.4-4 we showed that an LTIC system response to an everlasting exponential input  $x(t) = e^{st}$  is also an everlasting exponential  $H(s)e^{st}$ . As before, we use an arrow directed from the input to the output to represent an input–output pair:

$$e^{st} \Longrightarrow H(s)e^{st} \tag{4.40}$$

Setting  $s = j\omega$  in this relationship yields

$$e^{j\omega t} \Longrightarrow H(j\omega)e^{j\omega t} \tag{4.41}$$

Noting that  $\cos \omega t$  is the real part of  $e^{j\omega t}$ , use of Eq. (2.31) yields

$$\cos \omega t \Longrightarrow \operatorname{Re}[H(j\omega)e^{j\omega t}] \tag{4.42}$$

We can express  $H(j\omega)$  in the polar form as

$$H(j\omega) = |H(j\omega)|e^{j \angle H(j\omega)}$$

With this result, Eq. (4.42) becomes

$$\cos \omega t \Longrightarrow |H(j\omega)| \cos \left[\omega t + \angle H(j\omega)\right]$$

In other words, the system response y(t) to a sinusoidal input  $\cos \omega t$  is given by

$$y(t) = |H(j\omega)| \cos [\omega t + \Delta H(j\omega)]$$

Using a similar argument, we can show that the system response to a sinusoid  $\cos(\omega t + \theta)$  is

$$y(t) = |H(j\omega)| \cos [\omega t + \theta + \angle H(j\omega)]$$
(4.43)

This result is valid only for BIBO-stable systems. The frequency response is meaningless for BIBO-unstable systems. This follows from the fact that the frequency response in Eq. (4.41) is obtained by setting  $s = j\omega$  in Eq. (4.40). But, as shown in Sec. 2.4-4 [Eqs. (2.38) and (2.39)], Eq. (4.40) applies only for the values of *s* for which H(s) exists. For BIBO-unstable systems, the

ROC for H(s) does not include the  $\omega$  axis where  $s = j\omega$  [see Eq. (4.10)]. This means that H(s) when  $s = j\omega$  is meaningless for BIBO-unstable systems.<sup>†</sup>

Equation (4.43) shows that for a sinusoidal input of radian frequency  $\omega$ , the system response is also a sinusoid of the same frequency  $\omega$ . The amplitude of the output sinusoid is  $|H(j\omega)|$  times the input amplitude, and the phase of the output sinusoid is shifted by  $\angle H(j\omega)$  with respect to the input phase (see later Fig. 4.38 in Ex. 4.27). For instance, a certain system with |H(j10)| = 3and  $\angle H(j10) = -30^{\circ}$  amplifies a sinusoid of frequency  $\omega = 10$  by a factor of 3 and delays its phase by 30°. The system response to an input  $5\cos(10t + 50^{\circ})$  is  $3 \times 5\cos(10t + 50^{\circ} - 30^{\circ}) =$  $15\cos(10t + 20^{\circ})$ .

Clearly  $|H(j\omega)|$  is the amplitude *gain* of the system, and a plot of  $|H(j\omega)|$  versus  $\omega$  shows the amplitude gain as a function of frequency  $\omega$ . We shall call  $|H(j\omega)|$  the *amplitude response*. It also goes under the name *magnitude response*.<sup>‡</sup> Similarly,  $\angle H(j\omega)$  is the *phase response*, and a plot of  $\angle H(j\omega)$  versus  $\omega$  shows how the system modifies or changes the phase of the input sinusoid. Plots of the magnitude response  $|H(j\omega)|$  and phase response  $\angle H(j\omega)$  show at a glance how a system responds to sinusoids of various frequencies. Observe that  $H(j\omega)$  has the information of  $|H(j\omega)|$  and  $\angle H(j\omega)$  and is therefore termed the *frequency response* of the system. Clearly, the frequency response of a system represents its filtering characteristics.

## **EXAMPLE 4.27** Frequency Response

Find the frequency response (amplitude and phase responses) of a system whose transfer function is

$$H(s) = \frac{s+0.1}{s+5}$$

Also, find the system response y(t) if the input x(t) is

(a)  $\cos 2t$ 

**(b)**  $\cos(10t - 50^\circ)$ 

In this case,

$$H(j\omega) = \frac{j\omega + 0.1}{j\omega + 5}$$

<sup>&</sup>lt;sup>†</sup>This may also be argued as follows. For BIBO-unstable systems, the zero-input response contains nondecaying natural mode terms of the form  $\cos \omega_0 t$  or  $e^{at} \cos \omega_0 t$  (a > 0). Hence, the response of such a system to a sinusoid  $\cos \omega t$  will contain not just the sinusoid of frequency  $\omega$ , but also nondecaying natural modes, rendering the concept of frequency response meaningless.

<sup>&</sup>lt;sup>‡</sup> Strictly speaking,  $|H(\omega)|$  is magnitude response. There is a fine distinction between amplitude and magnitude. Amplitude *A* can be positive and negative. In contrast, the magnitude |A| is always nonnegative. We refrain from relying on this useful distinction between amplitude and magnitude in the interest of avoiding proliferation of essentially similar entities. This is also why we shall use the "amplitude" (instead of "magnitude") spectrum for  $|H(\omega)|$ .

Therefore,

$$|H(j\omega)| = \frac{\sqrt{\omega^2 + 0.01}}{\sqrt{\omega^2 + 25}} \quad \text{and} \quad \angle H(j\omega) = \tan^{-1}\left(\frac{\omega}{0.1}\right) - \tan^{-1}\left(\frac{\omega}{5}\right)$$

Both the amplitude and the phase response are depicted in Fig. 4.38a as functions of  $\omega$ . These plots furnish the complete information about the frequency response of the system to sinusoidal inputs.

(a) For the input  $x(t) = \cos 2t$ ,  $\omega = 2$ , and

$$|H(j2)| = \frac{\sqrt{(2)^2 + 0.01}}{\sqrt{(2)^2 + 25}} = 0.372$$
  
$$\angle H(j2) = \tan^{-1}\left(\frac{2}{0.1}\right) - \tan^{-1}\left(\frac{2}{5}\right) = 87.1^\circ - 21.8^\circ = 65.3^\circ$$

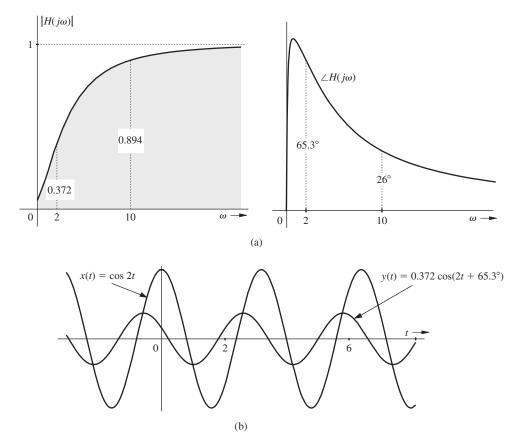


Figure 4.38 Responses for the system of Ex. 4.27.

414

We also could have read these values directly from the frequency response plots in Fig. 4.38a corresponding to  $\omega = 2$ . This result means that for a sinusoidal input with frequency  $\omega = 2$ , the amplitude gain of the system is 0.372, and the phase shift is 65.3°. In other words, the output amplitude is 0.372 times the input amplitude, and the phase of the output is shifted with respect to that of the input by 65.3°. Therefore, the system response to the input cos 2*t* is

$$y(t) = 0.372 \cos(2t + 65.3^{\circ})$$

The input  $\cos 2t$  and the corresponding system response  $0.372 \cos (2t + 65.3^{\circ})$  are illustrated in Fig. 4.38b.

(b) For the input  $\cos(10t - 50^\circ)$ , instead of computing the values  $|H(j\omega)|$  and  $\angle H(j\omega)$  as in part (a), we shall read them directly from the frequency response plots in Fig. 4.38a corresponding to  $\omega = 10$ . These are

$$|H(j10)| = 0.894$$
 and  $\angle H(j10) = 26^{\circ}$ 

Therefore, for a sinusoidal input of frequency  $\omega = 10$ , the output sinusoid amplitude is 0.894 times the input amplitude, and the output sinusoid is shifted with respect to the input sinusoid by 26°. Therefore, the system response y(t) to an input  $\cos(10t - 50^\circ)$  is

$$y(t) = 0.894 \cos(10t - 50^\circ + 26^\circ) = 0.894 \cos(10t - 24^\circ)$$

If the input were  $\sin(10t - 50^\circ)$ , the response would be  $0.894 \sin(10t - 50^\circ + 26^\circ) = 0.894 \sin(10t - 24^\circ)$ .

The frequency response plots in Fig. 4.38a show that the system has highpass filtering characteristics; it responds well to sinusoids of higher frequencies ( $\omega$  well above 5), and suppresses sinusoids of lower frequencies ( $\omega$  well below 5).

### PLOTTING FREQUENCY RESPONSE WITH MATLAB

It is simple to use MATLAB to create magnitude and phase response plots. Here, we consider two methods. In the first method, we use an anonymous function to define the transfer function H(s) and then obtain the frequency response plots by substituting  $j\omega$  for *s*.

```
>> H = @(s) (s+0.1)./(s+5); omega = 0:.01:20;
>> subplot(1,2,1); plot(omega,abs(H(1j*omega)),'k-');
>> subplot(1,2,2); plot(omega,angle(H(1j*omega))*180/pi,'k-');
```

In the second method, we define vectors that contain the numerator and denominator coefficients of H(s) and then use the freqs command to compute frequency response.

```
>> B = [1 0.1]; A = [1 5]; H = freqs(B,A,omega); omega = 0:.01:20;
>> subplot(1,2,1); plot(omega,abs(H),'k-');
>> subplot(1,2,2); plot(omega,angle(H)*180/pi,'k-');
```

Both approaches generate plots that match Fig. 4.38a.

# **EXAMPLE 4.28** Frequency Responses of Delay, Differentiator, and Integrator Systems

Find and sketch the frequency responses (magnitude and phase) for (a) an ideal delay of T seconds, (b) an ideal differentiator, and (c) an ideal integrator.

(a) Ideal delay of *T* seconds. The transfer function of an ideal delay is [see Eq. (4.30)]

$$H(s) = e^{-sT}$$

Therefore,

$$H(i\omega) = e^{-j\omega T}$$

Consequently,

$$|H(j\omega)| = 1$$
 and  $\angle H(j\omega) = -\omega T$ 

These amplitude and phase responses are shown in Fig. 4.39a. The amplitude response is constant (unity) for all frequencies. The phase shift increases linearly with frequency with a slope of -T. This result can be explained physically by recognizing that if a sinusoid  $\cos \omega t$  is passed through an ideal delay of T seconds, the output is  $\cos \omega (t - T)$ . The output sinusoid amplitude is the same as that of the input for all values of  $\omega$ . Therefore, the amplitude response (gain) is unity for all frequencies. Moreover, the output  $\cos \omega (t - T) = \cos (\omega t - \omega T)$  has a phase shift  $-\omega T$  with respect to the input  $\cos \omega t$ . Therefore, the phase response is linearly proportional to the frequency  $\omega$  with a slope -T.

(b) An ideal differentiator. The transfer function of an ideal differentiator is [see Eq. (4.31)]

H(s) = s

Therefore,

 $H(j\omega) = j\omega = \omega e^{j\pi/2}$ 

Consequently,

$$|H(j\omega)| = \omega$$
 and  $\angle H(j\omega) = \frac{\pi}{2}$ 

These amplitude and phase responses are depicted in Fig. 4.39b. The amplitude response increases linearly with frequency, and phase response is constant  $(\pi/2)$  for all frequencies. This result can be explained physically by recognizing that if a sinusoid  $\cos \omega t$  is passed through an ideal differentiator, the output is  $-\omega \sin \omega t = \omega \cos [\omega t + (\pi/2)]$ . Therefore, the output sinusoid amplitude is  $\omega$  times the input amplitude; that is, the amplitude response (gain) increases linearly with frequency  $\omega$ . Moreover, the output sinusoid undergoes a phase shift  $\pi/2$  with respect to the input  $\cos \omega t$ . Therefore, the phase response is constant  $(\pi/2)$  with frequency.

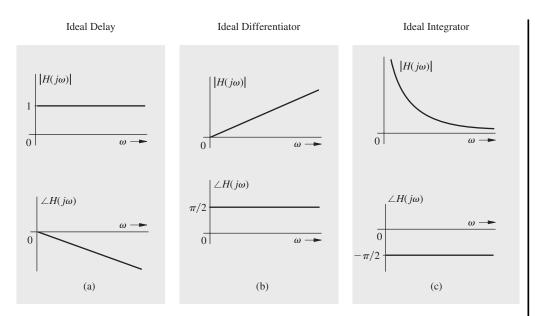


Figure 4.39 Frequency response of an ideal (a) delay, (b) differentiator, and (c) integrator.

In an ideal differentiator, the amplitude response (gain) is proportional to frequency  $[|H(j\omega)| = \omega]$  so that the higher-frequency components are enhanced (see Fig. 4.39b). All practical signals are contaminated with noise, which, by its nature, is a broadband (rapidly varying) signal containing components of very high frequencies. A differentiator can increase the noise disproportionately to the point of drowning out the desired signal. This is why ideal differentiators are avoided in practice.

(c) An ideal integrator. The transfer function of an ideal integrator is [see Eq. (4.32)]

$$H(s) = \frac{1}{s}$$

Therefore,

$$H(j\omega) = \frac{1}{j\omega} = \frac{-j}{\omega} = \frac{1}{\omega}e^{-j\pi/2}$$

Consequently,

$$|H(j\omega)| = \frac{1}{\omega}$$
 and  $\angle H(j\omega) = -\frac{\pi}{2}$ 

These amplitude and phase responses are illustrated in Fig. 4.39c. The amplitude response is inversely proportional to frequency, and the phase shift is constant  $(-\pi/2)$  with frequency. This result can be explained physically by recognizing that if a sinusoid  $\cos \omega t$  is passed through an ideal integrator, the output is  $(1/\omega) \sin \omega t = (1/\omega) \cos [\omega t - (\pi/2)]$ . Therefore, the amplitude response is inversely proportional to  $\omega$ , and the phase response is constant  $(-\pi/2)$ 

with frequency.<sup>†</sup> Because its gain is  $1/\omega$ , the ideal integrator suppresses higher-frequency components but enhances lower-frequency components with  $\omega < 1$ . Consequently, noise signals (if they do not contain an appreciable amount of very-low-frequency components) are suppressed (smoothed out) by an integrator.

## DRILL 4.15 Sinusoidal Response of an LTIC System

Find the response of an LTIC system specified by

$$\frac{d^2y(t)}{dt^2} + 3\frac{dy(t)}{dt} + 2y(t) = \frac{dx(t)}{dt} + 5x(t)$$

if the input is a sinusoid  $20\sin(3t+35^\circ)$ .

## ANSWER

 $10.23\sin(3t-61.91^\circ)$ 

### 4.8-1 Steady-State Response to Causal Sinusoidal Inputs

So far we have discussed the LTIC system response to everlasting sinusoidal inputs (starting at  $t = -\infty$ ). In practice, we are more interested in causal sinusoidal inputs (sinusoids starting at t = 0). Consider the input  $e^{j\omega t}u(t)$ , which starts at t = 0 rather than at  $t = -\infty$ . In this case  $X(s) = 1/(s + j\omega)$ . Moreover, according to Eq. (4.27), H(s) = P(s)/Q(s), where Q(s) is the

<sup>&</sup>lt;sup>†</sup> A puzzling aspect of this result is that in deriving the transfer function of the integrator in Eq. (4.32), we have assumed that the input starts at t = 0. In contrast, in deriving its frequency response, we assume that the everlasting exponential input  $e^{j\omega t}$  starts at  $t = -\infty$ . There appears to be a fundamental contradiction between the everlasting input, which starts at  $t = -\infty$ , and the integrator, which opens its gates only at t = 0. Of what use is everlasting input, since the integrator starts integrating at t = 0? The answer is that the integrator gates are always open, and integration begins whenever the input starts. We restricted the input to start at t = 0 in deriving Eq. (4.32) because we were finding the transfer function using the unilateral transform, where the inputs begin at t = 0. So the integrator starting to integrate at t = 0 is restricted because of the limitations of the unilateral transform method, not because of the limitations of the integrator itself. If we were to find the integrator transfer function using Eq. (2.40), where there is no such restriction on the input, we would still find the transfer function of an integrator as 1/s. Similarly, even if we were to use the bilateral Laplace transform, where t starts at  $-\infty$ , we would find the transfer function of an integrator to be 1/s. The transfer function of a system is the property of the system and does not depend on the method used to find it.

characteristic polynomial given by  $Q(s) = (s - \lambda_1)(s - \lambda_2) \cdots (s - \lambda_N)$ .<sup>†</sup> Hence,

$$Y(s) = X(s)H(s) = \frac{P(s)}{(s - \lambda_1)(s - \lambda_2) \cdots (s - \lambda_N)(s - j\omega)}$$

In the partial fraction expansion of the right-hand side, let the coefficients corresponding to the *N* terms  $(s - \lambda_1)$ ,  $(s - \lambda_2)$ , ...,  $(s - \lambda_N)$  be  $k_1, k_2, ..., k_N$ . The coefficient corresponding to the last term  $(s - j\omega)$  is  $P(s)/Q(s)|_{s=j\omega} = H(j\omega)$ . Hence,

$$Y(s) = \sum_{i=1}^{n} \frac{k_i}{s - \lambda_i} + \frac{H(j\omega)}{s - j\omega}$$

and

$$y(t) = \underbrace{\sum_{i=1}^{n} k_i e^{\lambda_i t} u(t)}_{\text{transient component } y_{\text{tr}}(t)} + \underbrace{H(j\omega) e^{j\omega t} u(t)}_{\text{steady-state component } y_{\text{ss}}(t)}$$

For an asymptotically stable system, the characteristic mode terms  $e^{\lambda_i t}$  decay with time, and, therefore, constitute the so-called *transient* component of the response. The last term  $H(j\omega)e^{j\omega t}$  persists forever, and is the *steady-state* component of the response given by

$$y_{\rm ss}(t) = H(j\omega)e^{j\omega t}u(t)$$

This result also explains why an everlasting exponential input  $e^{j\omega t}$  results in the total response  $H(j\omega)e^{j\omega t}$  for BIBO systems. Because the input started at  $t = -\infty$ , at any finite time the decaying transient component has long vanished, leaving only the steady-state component. Hence, the total response appears to be  $H(j\omega)e^{j\omega t}$ .

From the argument that led to Eq. (4.43), it follows that for a causal sinusoidal input  $\cos \omega t$ , the steady-state response  $y_{ss}(t)$  is given by

$$y_{ss}(t) = |H(j\omega)| \cos[\omega t + \angle H(j\omega)]u(t)$$

In summary,  $|H(j\omega)|\cos[\omega t + \zeta H(j\omega)]$  is the total response to everlasting sinusoid  $\cos \omega t$ . In contrast, it is the steady-state response to the same input applied at t = 0.

## **4.9 BODE PLOTS**

Sketching frequency response plots  $(|H(j\omega)| \text{ and } \angle H(j\omega) \text{ versus } \omega)$  is considerably facilitated by the use of logarithmic scales. The amplitude and phase response plots as a function of  $\omega$  on a logarithmic scale are known as *Bode plots*. By using the asymptotic behavior of the amplitude and the phase responses, we can sketch these plots with remarkable ease, even for higher-order transfer functions.

<sup>&</sup>lt;sup>†</sup> For simplicity, we have assumed nonrepeating characteristic roots. The procedure is readily modified for repeated roots, and the same conclusion results.

Let us consider a system with the transfer function

$$H(s) = \frac{K(s+a_1)(s+a_2)}{s(s+b_1)(s^2+b_2s+b_3)}$$
(4.44)

where the second-order factor  $(s^2 + b_2 s + b_3)$  is assumed to have complex conjugate roots.<sup>†</sup> We shall rearrange Eq. (4.44) in the form

$$H(s) = \frac{Ka_1a_2}{b_1b_3} \frac{\left(\frac{s}{a_1} + 1\right)\left(\frac{s}{a_2} + 1\right)}{s\left(\frac{s}{b_1} + 1\right)\left(\frac{s^2}{b_3} + \frac{b_2}{b_3}s + 1\right)}$$

and

$$H(j\omega) = \frac{Ka_1a_2}{b_1b_3} \frac{\left(1 + \frac{j\omega}{a_1}\right)\left(1 + \frac{j\omega}{a_2}\right)}{j\omega\left(1 + \frac{j\omega}{b_1}\right)\left[1 + j\frac{b_2\omega}{b_3} + \frac{(j\omega)^2}{b_3}\right]}$$

This equation shows that  $H(j\omega)$  is a complex function of  $\omega$ . The amplitude response  $|H(j\omega)|$  and the phase response  $\langle H(j\omega) \rangle$  are given by

$$|H(j\omega)| = \left|\frac{Ka_1a_2}{b_1b_3}\right| \frac{\left|1 + \frac{j\omega}{a_1}\right| \left|1 + \frac{j\omega}{a_2}\right|}{|j\omega| \left|1 + \frac{j\omega}{b_1}\right| \left|1 + j\frac{b_2\omega}{b_3} + \frac{(j\omega)^2}{b_3}\right|}$$
(4.45)

and

$$\mathcal{L}H(j\omega) = \mathcal{L}\left(\frac{Ka_1a_2}{b_1b_3}\right) + \mathcal{L}\left(1 + \frac{j\omega}{a_1}\right) + \mathcal{L}\left(1 + \frac{j\omega}{a_2}\right) - \mathcal{L}j\omega - \mathcal{L}\left(1 + \frac{j\omega}{b_1}\right) - \mathcal{L}\left[1 + \frac{jb_2\omega}{b_3} + \frac{(j\omega)^2}{b_3}\right]$$
(4.46)

From Eq. (4.46) we see that the phase function consists of the addition of terms of four kinds: (i) the phase of a constant, (ii) the phase of  $j\omega$ , which is 90° for all values of  $\omega$ , (iii) the phase for the first-order term of the form  $1 + j\omega/a$ , and (iv) the phase of the second-order term

$$\left[1 + \frac{jb_2\omega}{b_3} + \frac{(j\omega)^2}{b_3}\right]$$

We can plot these basic phase functions for  $\omega$  in the range 0 to  $\infty$  and then, using these plots, we can construct the phase function of any transfer function by properly adding these basic responses. Note that if a particular term is in the numerator, its phase is added, but if the term is in the

<sup>&</sup>lt;sup>†</sup>Coefficients  $a_1$ ,  $a_2$  and  $b_1$ ,  $b_2$ ,  $b_3$  used in this section are not to be confused with those used in the representation of *N*th-order LTIC system equations given earlier [Eqs. (2.1) or (4.26)].

denominator, its phase is subtracted. This makes it easy to plot the phase function  $\angle H(j\omega)$  as a function of  $\omega$ . Computation of  $|H(j\omega)|$ , unlike that of the phase function, however, involves the multiplication and division of various terms. This is a formidable task, especially when we have to plot this function for the entire range of  $\omega$  (0 to  $\infty$ ).

We know that a log operation converts multiplication and division to addition and subtraction. So, instead of plotting  $|H(j\omega)|$ , why not plot log  $|H(j\omega)|$  to simplify our task? We can take advantage of the fact that logarithmic units are desirable in several applications, where the variables considered have a very large range of variation. This is particularly true in frequency response plots, where we may have to plot frequency response over a range from a very low frequency, near 0, to a very high frequency, in the range of  $10^{10}$  or higher. A plot on a linear scale of frequencies for such a large range will bury much of the useful information at lower frequencies. Also, the amplitude response may have a very large dynamic range from a low of  $10^{-6}$  to a high of  $10^{6}$ . A linear plot would be unsuitable for such a situation. Therefore, logarithmic plots not only simplify our task of plotting, but, fortunately, they are also desirable in this situation.

There is another important reason for using logarithmic scale. The Weber–Fechner law (first observed by Weber in 1834) states that human senses (sight, touch, hearing, etc.) generally respond in a logarithmic way. For instance, when we hear sound at two different power levels, we judge one sound twice as loud when the ratio of the two sound powers is 10. Human senses respond to equal ratios of power, not equal increments in power [10]. This is clearly a logarithmic response.<sup>†</sup>

The logarithmic unit is the *decibel* and is equal to 20 times the logarithm of the quantity (log to the base 10). Therefore,  $20\log_{10} |H(j\omega)|$  is simply the log amplitude in decibels (dB).<sup>‡</sup> Thus, instead of plotting  $|H(j\omega)|$ , we shall plot  $20\log_{10} |H(j\omega)|$  as a function of  $\omega$ . These plots (log amplitude and phase) are called *Bode plots*. For the transfer function in Eq. (4.45), the *log amplitude* is

$$20\log|H(j\omega)| = 20\log\left|\frac{Ka_1a_2}{b_1b_3}\right| + 20\log\left|1 + \frac{j\omega}{a_1}\right| + 20\log\left|1 + \frac{j\omega}{a_2}\right| - 20\log|j\omega| - 20\log\left|1 + \frac{j\omega}{b_1}\right| - 20\log\left|1 + \frac{jb_2\omega}{b_3} + \frac{(j\omega)^2}{b_3}\right|$$
(4.47)

The term  $20\log(Ka_1a_2/b_1b_3)$  is a constant. We observe that the log amplitude is a sum of four basic terms corresponding to a constant, a pole or zero at the origin  $(20\log |j\omega|)$ , a first-order pole or zero  $(20\log |1+j\omega/a|)$ , and complex-conjugate poles or zeros  $(20\log |1+j\omega b_2/b_3+(j\omega)^2/b_3|)$ .

<sup>&</sup>lt;sup>†</sup> Observe that the frequencies of musical notes are spaced logarithmically (not linearly). The octave is a ratio of 2. The frequencies of the same note in the successive octaves have a ratio of 2. On the Western musical scale, there are 12 distinct notes in each octave. The frequency of each note is about 6% higher than the frequency of the preceding note. Thus, the successive notes are separated not by some constant frequency, but by constant ratio of 1.06.

<sup>&</sup>lt;sup>‡</sup> Originally, the unit *bel* (after the inventor of telephone, Alexander Graham Bell) was introduced to represent power ratio as  $\log_{10} P_2/P_1$  bels. A tenth of this unit is a decibel, as in  $10 \log_{10} P_2/P_1$  decibels. Since the power ratio of two signals is proportional to the amplitude ratio squared, or  $|H(j\omega)|^2$ , we have  $10 \log_{10} P_2/P_1 = 10 \log_{10} |H(j\omega)|^2 = 20 \log_{10} |H(j\omega)| \text{ dB}.$ 

We can sketch these four basic terms as functions of  $\omega$  and use them to construct the log-amplitude plot of any desired transfer function. Let us discuss each of the terms.

## 4.9-1 Constant $Ka_1a_2/b_1b_3$

The log amplitude of the constant  $Ka_1a_2/b_1b_2$  term is also a constant,  $20\log|Ka_1a_2/b_1b_3|$ . The phase contribution from this term is zero for positive value and  $\pi$  for negative value of the constant (complex constants can have different phases).

## 4.9-2 Pole (or Zero) at the Origin

LOG MAGNITUDE

A pole at the origin gives rise to the term  $-20 \log |j\omega|$ , which can be expressed as

$$-20\log|j\omega| = -20\log\omega$$

This function can be plotted as a function of  $\omega$ . However, we can effect further simplification by using the logarithmic scale for the variable  $\omega$  itself. Let us define a new variable u such that

 $u = \log \omega$ 

Hence,

$$-20\log\omega = -20u$$

The log-amplitude function -20u is plotted as a function of u in Fig. 4.40a. This is a straight line with a slope of -20. It crosses the u axis at u = 0. The  $\omega$ -scale ( $u = \log \omega$ ) also appears in Fig. 4.40a. Semilog graphs can be conveniently used for plotting, and we can directly plot  $\omega$  on semilog paper. A ratio of 10 is a *decade*, and a ratio of 2 is known as an *octave*. Furthermore, a decade along the  $\omega$  scale is equivalent to 1 unit along the u scale. We can also show that a ratio of 2 (an octave) along the  $\omega$  scale equals to 0.3010 (which is  $\log_{10} 2$ ) along the u scale.<sup>†</sup>

$$u_2 - u_1 = \log_{10} \omega_2 - \log_{10} \omega_1 = \log_{10} (\omega_2 / \omega_1)$$

Thus, if

 $(\omega_2/\omega_1) = 10$  (which is a decade)

then

 $u_2 - u_1 = \log_{10} 10 = 1$ 

and if

 $(\omega_2/\omega_1) = 2$  (which is an octave)

then

$$u_2 - u_1 = \log_{10} 2 = 0.3010$$

<sup>&</sup>lt;sup>†</sup> This point can be shown as follows. Let  $\omega_1$  and  $\omega_2$  along the  $\omega$  scale correspond to  $u_1$  and  $u_2$  along the u scale so that  $\log \omega_1 = u_1$  and  $\log \omega_2 = u_2$ . Then

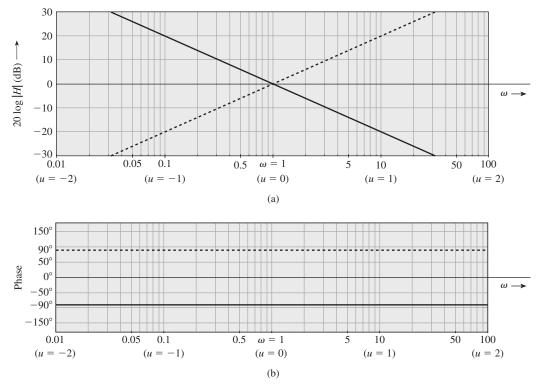


Figure 4.40 (a) Amplitude and (b) phase responses of a pole or a zero at the origin.

Note that equal increments in *u* are equivalent to equal ratios on the  $\omega$  scale. Thus, 1 unit along the *u* scale is the same as one decade along the  $\omega$  scale. This means that the amplitude plot has a slope of -20 dB/decade or -20(0.3010) = -6.02 dB/octave (commonly stated as -6 dB/octave). Moreover, the amplitude plot crosses the  $\omega$  axis at  $\omega = 1$ , since  $u = \log_{10} \omega = 0$  when  $\omega = 1$ .

For the case of a zero at the origin, the log-amplitude term is 20 log  $\omega$ . This is a straight line passing through  $\omega = 1$  and having a slope of 20 dB/decade (or 6 dB/octave). This plot is a mirror image about the  $\omega$  axis of the plot for a pole at the origin and is shown dashed in Fig. 4.40a.

## PHASE

The phase function corresponding to the pole at the origin is  $-\angle j\omega$  [see Eq. (4.46)]. Thus,

$$\angle H(j\omega) = -\angle j\omega = -90^{\circ}$$

The phase is constant  $(-90^\circ)$  for all values of  $\omega$ , as depicted in Fig. 4.40b. For a zero at the origin, the phase is  $\angle j\omega = 90^\circ$ . This is a mirror image of the phase plot for a pole at the origin and is shown dashed in Fig. 4.40b.

### 4.9-3 First-Order Pole (or Zero)

### THE LOG MAGNITUDE

The log amplitude of a first-order pole at -a is  $-20 \log |1+j\omega/a|$ . Let us investigate the asymptotic behavior of this function for extreme values of  $\omega$  ( $\omega \ll a$  and  $\omega \gg a$ ).

(a) For  $\omega \ll a$ ,

$$-20\log\left|1+\frac{j\omega}{a}\right|\approx-20\log 1=0$$

Hence, the log-amplitude function  $\rightarrow 0$  asymptotically for  $\omega \ll a$  (Fig. 4.41a).

(a) For the other extreme case, where  $\omega \gg a$ ,

$$-20\log\left|1+\frac{j\omega}{a}\right| \approx -20\log\left(\frac{\omega}{a}\right) = -20\log\omega + 20\log a = -20u + 20\log a$$

This represents a straight line (when plotted as a function of u, the log of  $\omega$ ) with a slope of -20 dB/decade (or -6 dB/octave). When  $\omega = a$ , the log amplitude is zero. Hence, this line crosses the  $\omega$  axis at  $\omega = a$ , as illustrated in Fig. 4.41a. Note that the asymptotes in (a) and (b) meet at  $\omega = a$ .

The exact log amplitude for this pole is

$$-20\log\left|1 + \frac{j\omega}{a}\right| = -20\log\left(1 + \frac{\omega^2}{a^2}\right)^{1/2} = -10\log\left(1 + \frac{\omega^2}{a^2}\right)$$

This exact log magnitude function also appears in Fig. 4.41a. Observe that the actual and the asymptotic plots are very close. A maximum error of 3 dB occurs at  $\omega = a$ . This frequency is known as the *corner frequency* or *break frequency*. The error everywhere else is less than 3 dB. A plot of the error as a function of  $\omega$  is shown in Fig. 4.42a. This figure shows that the error at 1 octave above or below the corner frequency is 1 dB and the error at 2 octaves above or below the corner frequency is 0.3 dB. The actual plot can be obtained by adding the error to the asymptotic plot.

The amplitude response for a zero at -a (shown dotted in Fig. 4.41a) is identical to that of the pole at -a with a sign change and therefore is the mirror image (about the 0 dB line) of the amplitude plot for a pole at -a.

### PHASE

The phase for the first-order pole at -a is

$$\angle H(j\omega) = -\angle \left(1 + \frac{j\omega}{a}\right) = -\tan^{-1}\left(\frac{\omega}{a}\right)$$

Let us investigate the asymptotic behavior of this function. For  $\omega \ll a$ ,

$$-\tan^{-1}\left(\frac{\omega}{a}\right) \approx 0$$

and, for  $\omega \gg a$ ,

$$-\tan^{-1}\left(\frac{\omega}{a}\right) \approx -90^{\circ}$$


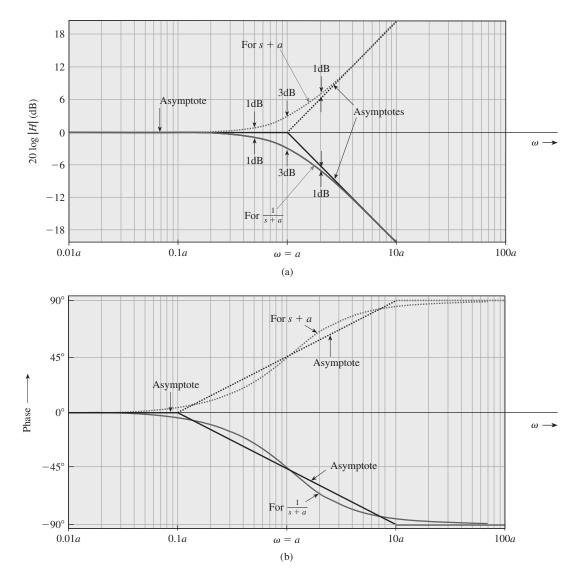


Figure 4.41 (a) Amplitude and (b) phase responses of a first-order pole or zero at s = -a.

The actual plot along with the asymptotes is depicted in Fig. 4.41b. In this case, we use a three-line segment asymptotic plot for greater accuracy. The asymptotes are a phase angle of  $0^{\circ}$  for  $\omega \le a/10$ , a phase angle of  $-90^{\circ}$  for  $\omega \ge 10a$ , and a straight line with a slope  $-45^{\circ}/\text{decade}$  connecting these two asymptotes (from  $\omega = a/10$  to 10a) crossing the  $\omega$  axis at  $\omega = a/10$ . It can be seen from Fig. 4.41b that the asymptotes are very close to the curve and the maximum error is 5.7°. Figure 4.42b plots the error as a function of  $\omega$ ; the actual plot can be obtained by adding the error to the asymptotic plot.

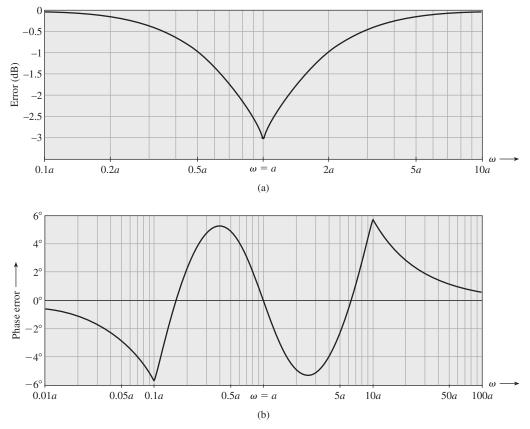

**Figure 4.42** Errors in asymptotic approximation of a first-order pole at s = -a.

The phase for a zero at -a (shown dotted in Fig. 4.41b) is identical to that of the pole at -a with a sign change, and therefore is the mirror image (about the 0° line) of the phase plot for a pole at -a.

## 4.9-4 Second-Order Pole (or Zero)

Let us consider the second-order pole in Eq. (4.44). The denominator term is  $s^2 + b_2s + b_3$ . We shall introduce the often-used standard form  $s^2 + 2\zeta \omega_n s + \omega_n^2$  instead of  $s^2 + b_2s + b_3$ . With this form, the log amplitude function for the second-order term in Eq. (4.47) becomes

$$-20\log\left|1+2j\zeta\frac{\omega}{\omega_n}+\left(\frac{j\omega}{\omega_n}\right)^2\right|$$

and the phase function is

$$-\angle \left[1+2j\zeta\frac{\omega}{\omega_n}+\left(\frac{j\omega}{\omega_n}\right)^2\right] \tag{4.48}$$

#### THE LOG MAGNITUDE

The log amplitude is given by

log amplitude = 
$$-20 \log \left| 1 + 2j\zeta \left( \frac{\omega}{\omega_n} \right) + \left( \frac{j\omega}{\omega_n} \right)^2 \right|$$
 (4.49)

For  $\omega \ll \omega_n$ , the log amplitude becomes

log amplitude 
$$\approx -20 \log 1 = 0$$

For  $\omega \gg \omega_n$ , the log amplitude is

log amplitude 
$$\approx -20 \log \left| \left( -\frac{\omega}{\omega_n} \right)^2 \right| = -40 \log \left( \frac{\omega}{\omega_n} \right)$$
  
=  $-40 \log \omega - 40 \log \omega_n = -40 u - 40 \log \omega_n$  (4.50)

The two asymptotes are zero for  $\omega < \omega_n$  and  $-40u - 40\log\omega_n$  for  $\omega > \omega_n$ . The second asymptote is a straight line with a slope of -40 dB/decade (or -12 dB/octave) when plotted against the log  $\omega$  scale. It begins at  $\omega = \omega_n$  [see Eq. (4.50)]. The asymptotes are depicted in Fig. 4.43a. The exact log amplitude is given by [see Eq. (4.49)]

$$\log \text{ amplitude} = -20 \log \left\{ \left[ 1 - \left(\frac{\omega}{\omega_n}\right)^2 \right]^2 + 4\zeta^2 \left(\frac{\omega}{\omega_n}\right)^2 \right\}^{1/2}$$
(4.51)

The log amplitude in this case involves a parameter  $\zeta$ , resulting in a different plot for each value of  $\zeta$ . For complex-conjugate poles,<sup>†</sup>  $\zeta < 1$ . Hence, we must sketch a family of curves for a number of values of  $\zeta$  in the range 0 to 1. This is illustrated in Fig. 4.43a. The error between the actual plot and the asymptotes is shown in Fig. 4.44. The actual plot can be obtained by adding the error to the asymptotic plot.

For second-order zeros (complex-conjugate zeros), the plots are mirror images (about the 0 dB line) of the plots depicted in Fig. 4.43a. Note the resonance phenomenon of the complex-conjugate poles. This phenomenon is barely noticeable for  $\zeta > 0.707$  but becomes pronounced as  $\zeta \rightarrow 0$ .

### PHASE

The phase function for second-order poles, as apparent in Eq. (4.48), is

$$\angle H(j\omega) = -\tan^{-1} \left[ \frac{2\zeta\left(\frac{\omega}{\omega_n}\right)}{1 - \left(\frac{\omega}{\omega_n}\right)^2} \right]$$
(4.52)

For  $\omega \ll \omega_n$ ,

$$\angle H(j\omega) \approx 0$$

<sup>&</sup>lt;sup>†</sup> For  $\zeta \ge 1$ , the two poles in the second-order factor are no longer complex but real, and each of these two real poles can be dealt with as a separate first-order factor.

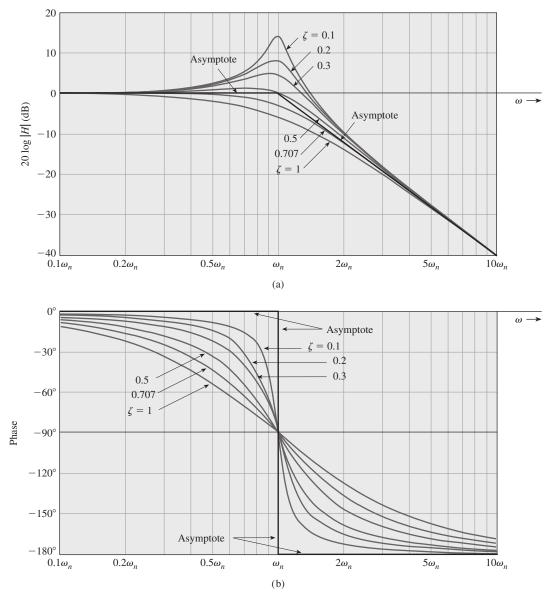


Figure 4.43 Amplitude and phase response of a second-order pole.

For  $\omega \gg \omega_n$ ,

$$\angle H(j\omega) \simeq -180^{\circ}$$

Hence, the phase  $\rightarrow -180^{\circ}$  as  $\omega \rightarrow \infty$ . As in the case of amplitude, we also have a family of phase plots for various values of  $\zeta$ , as illustrated in Fig. 4.43b. A convenient asymptote for the phase of complex-conjugate poles is a step function that is  $0^{\circ}$  for  $\omega < \omega_n$  and  $-180^{\circ}$  for  $\omega > \omega_n$ .

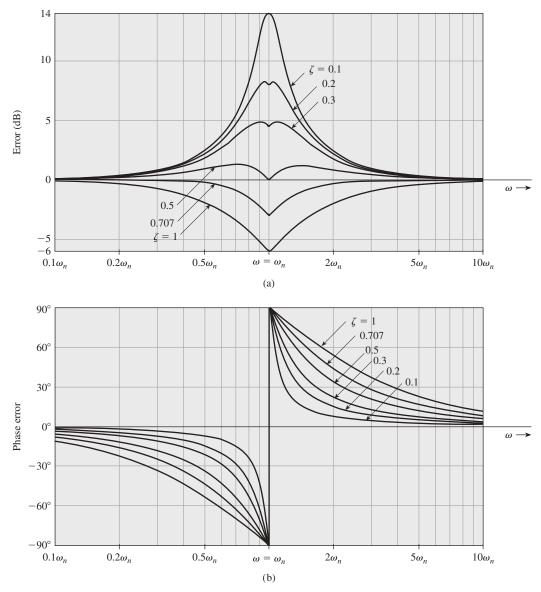


Figure 4.44 Errors in the asymptotic approximation of a second-order pole.

Error plots for such an asymptote are shown in Fig. 4.44 for various values of  $\zeta$ . The exact phase is the asymptotic value plus the error.

For complex-conjugate zeros, the amplitude and phase plots are mirror images of those for complex conjugate-poles.

We shall demonstrate the application of these techniques with two examples.

# **EXAMPLE 4.29** Bode Plots for Second-Order Transfer Function with Real Roots

Sketch Bode plots for the transfer function

$$H(s) = \frac{20s(s+100)}{(s+2)(s+10)}$$

## MAGNITUDE PLOT

First, we write the transfer function in normalized form

$$H(s) = \frac{20 \times 100}{2 \times 10} \frac{s\left(1 + \frac{s}{100}\right)}{\left(1 + \frac{s}{2}\right)\left(1 + \frac{s}{10}\right)} = 100 \frac{s\left(1 + \frac{s}{100}\right)}{\left(1 + \frac{s}{2}\right)\left(1 + \frac{s}{10}\right)}$$

Here, the constant term is 100; that is, 40 dB ( $20 \log 100 = 40$ ). This term can be added to the plot by simply relabeling the horizontal axis (from which the asymptotes begin) as the 40 dB line (see Fig. 4.45a). Such a step implies shifting the horizontal axis upward by 40 dB. This is precisely what is desired.

In addition, we have two first-order poles at -2 and -10, one zero at the origin, and one zero at -100.

**Step 1.** For each of these terms, we draw an asymptotic plot as follows (shown in Fig. 4.45a by dashed lines):

- (a) For the zero at the origin, draw a straight line with a slope of 20 dB/decade passing through  $\omega = 1$ .
- (b) For the pole at -2, draw a straight line with a slope of -20 dB/decade (for  $\omega > 2$ ) beginning at the corner frequency  $\omega = 2$ .
- (c) For the pole at -10, draw a straight line with a slope of -20 dB/decade beginning at the corner frequency  $\omega = 10$ .
- (d) For the zero at -100, draw a straight line with a slope of 20 dB/decade beginning at the corner frequency  $\omega = 100$ .
- Step 2. Add all the asymptotes, as depicted in Fig. 4.45a by solid line segments.
- **Step 3.** Apply the following corrections (see Fig. 4.42a):
  - (a) The correction at  $\omega = 1$  because of the corner frequency at  $\omega = 2$  is -1 dB. The correction at  $\omega = 1$  because of the corner frequencies at  $\omega = 10$  and  $\omega = 100$  is quite small (see Fig. 4.42a) and may be ignored. Hence, the net correction at  $\omega = 1$  is -1 dB.

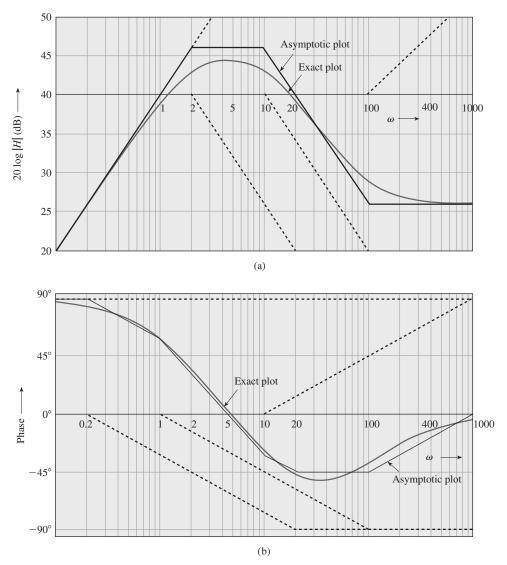


Figure 4.45 (a) Amplitude and (b) phase responses of the second-order system.

- (b) The correction at  $\omega = 2$  because of the corner frequency at  $\omega = 2$  is -3 dB, and the correction because of the corner frequency at  $\omega = 10$  is -0.17 dB. The correction because of the corner frequency  $\omega = 100$  can be safely ignored. Hence the net correction at  $\omega = 2$  is -3.17 dB.
- (c) The correction at  $\omega = 10$  because of the corner frequency at  $\omega = 10$  is -3 dB, and the correction because of the corner frequency at  $\omega = 2$  is -0.17 dB. The correction because of  $\omega = 100$  can be ignored. Hence the net correction at  $\omega = 10$  is -3.17 dB.

- (d) The correction at  $\omega = 100$  because of the corner frequency at  $\omega = 100$  is 3 dB, and the corrections because of the other corner frequencies may be ignored.
- (e) In addition to the corrections at corner frequencies, we may consider corrections at intermediate points for more accurate plots. For instance, the corrections at  $\omega = 4$  because of corner frequencies at  $\omega = 2$  and 10 are -1 and about -0.65, totaling -1.65 dB. In the same way, the corrections at  $\omega = 5$  because of corner frequencies at  $\omega = 2$  and 10 are -1.65 dB. In the same way, the corrections at  $\omega = 5$  because of corner frequencies at  $\omega = 2$  and 10 are -0.65 and -1, totaling -1.65 dB.

With these corrections, the resulting amplitude plot is illustrated in Fig. 4.45a.

## PHASE PLOT

We draw the asymptotes corresponding to each of the four factors:

- (a) The zero at the origin causes a  $90^{\circ}$  phase shift.
- (b) The pole at s = -2 has an asymptote with a zero value for  $-\infty < \omega < 0.2$  and a slope of  $-45^{\circ}$ /decade beginning at  $\omega = 0.2$  and going up to  $\omega = 20$ . The asymptotic value for  $\omega > 20$  is  $-90^{\circ}$ .
- (c) The pole at s = -10 has an asymptote with a zero value for  $-\infty < \omega < 1$  and a slope of  $-45^{\circ}$ /decade beginning at  $\omega = 1$  and going up to  $\omega = 100$ . The asymptotic value for  $\omega > 100$  is  $-90^{\circ}$ .
- (d) The zero at s = −100 has an asymptote with a zero value for −∞ < ω < 10 and a slope of 45°/decade beginning at ω = 10 and going up to ω = 1000. The asymptotic value for ω > 1000 is 90°. All the asymptotes are added, as shown in Fig. 4.45b. The appropriate corrections are applied from Fig. 4.42b, and the exact phase plot is depicted in Fig. 4.45b.

# **EXAMPLE 4.30** Bode Plots for Second-Order Transfer Function with Complex Poles

Sketch the amplitude and phase response (Bode plots) for the transfer function

$$H(s) = \frac{10(s+100)}{s^2 + 2s + 100} = 10 \frac{1 + \frac{s}{100}}{1 + \frac{s}{50} + \frac{s^2}{100}}$$

### MAGNITUDE PLOT

Here, the constant term is 10: that is, 20 dB(20 log 10 = 20). To add this term, we simply label the horizontal axis (from which the asymptotes begin) as the 20 dB line, as before (see Fig. 4.46a).

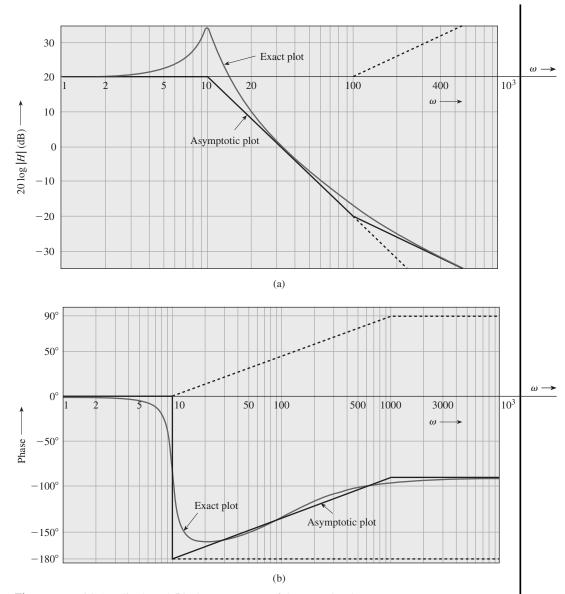


Figure 4.46 (a) Amplitude and (b) phase responses of the second-order system.

In addition, we have a real zero at s = -100 and a pair of complex conjugate poles. When we express the second-order factor in standard form,

$$s^{2} + 2s + 100 = s^{2} + 2\zeta \omega_{n}s + \omega_{n}^{2}$$

we have

$$\omega_n = 10$$
 and  $\zeta = 0.1$ 

**Step 1.** Draw an asymptote of -40 dB/decade (-12 dB/octave) starting at  $\omega = 10$  for the complex conjugate poles, and draw another asymptote of 20 dB/decade starting at  $\omega = 100$  for the (real) zero.

Step 2. Add both asymptotes.

**Step 3.** Apply the correction at  $\omega = 100$ , where the correction because of the corner frequency  $\omega = 100$  is 3 dB. The correction because of the corner frequency  $\omega = 10$ , as seen from Fig. 4.44a for  $\zeta = 0.1$ , can be safely ignored. Next, the correction at  $\omega = 10$  because of the corner frequency  $\omega = 10$  is 13.90 dB (see Fig. 4.44a for  $\zeta = 0.1$ ). The correction because of the real zero at -100 can be safely ignored at  $\omega = 10$ . We may find corrections at a few more points. The resulting plot is illustrated in Fig. 4.46a.

## PHASE PLOT

The asymptote for the complex conjugate poles is a step function with a jump of  $-180^{\circ}$  at  $\omega = 10$ . The asymptote for the zero at s = -100 is zero for  $\omega \le 10$  and is a straight line with a slope of 45°/decade, starting at  $\omega = 10$  and going to  $\omega = 1000$ . For  $\omega \ge 1000$ , the asymptote is 90°. The two asymptotes add to give the sawtooth shown in Fig. 4.46b. We now apply the corrections from Figs. 4.42b and 4.44b to obtain the exact plot.

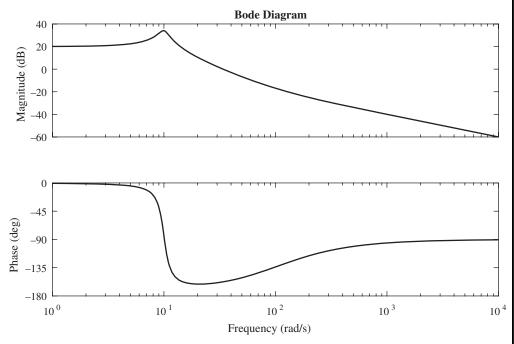


Figure 4.47 MATLAB-generated Bode plots for Ex. 4.30.

### BODE PLOTS WITH MATLAB

Bode plots make it relatively simple to hand-draw straight-line approximations to a system's magnitude and frequency responses. To produce exact Bode plots, we turn to MATLAB and its bode command.

>> bode(tf([10 1000],[1 2 100]),'k-');

The resulting MATLAB plots, shown in Fig. 4.47, match the plots shown in Fig. 4.46.

**Comment.** These two examples demonstrate that actual frequency response plots are very close to asymptotic plots, which are so easy to construct. Thus, by mere inspection of H(s) and its poles and zeros, one can rapidly construct a mental image of the frequency response of a system. This is the principal virtue of Bode plots.

## POLES AND ZEROS IN THE RIGHT HALF-PLANE

In our discussion so far, we have assumed the poles and zeros of the transfer function to be in the left half-plane. What if some of the poles and/or zeros of H(s) lie in the RHP? If there is a pole in the RHP, the system is unstable. Such systems are useless for any signal-processing application. For this reason, we shall consider only the case of the RHP zero. The term corresponding to RHP zero at s = a is (s/a) - 1, and the corresponding frequency response is  $(j\omega/a) - 1$ . The amplitude response is

$$\left|\frac{j\omega}{a} - 1\right| = \left(\frac{\omega^2}{a^2} + 1\right)^{1/2}$$

This shows that the amplitude response of an RHP zero at s = a is identical to that of an LHP zero or s = -a. Therefore, the log amplitude plots remain unchanged whether the zeros are in the LHP or the RHP. However, the phase corresponding to the RHP zero at s = a is

$$\angle \left(\frac{j\omega}{a} - 1\right) = \angle -\left(1 - \frac{j\omega}{a}\right) = \pi + \tan^{-1}\left(\frac{-\omega}{a}\right) = \pi - \tan^{-1}\left(\frac{\omega}{a}\right)$$

whereas the phase corresponding to the LHP zero at s = -a is  $\tan^{-1}(\omega/a)$ .

The complex-conjugate zeros in the RHP give rise to a term  $s^2 - 2\zeta \omega_n s + \omega_n^2$ , which is identical to the term  $s^2 + 2\zeta \omega_n s + \omega_n^2$  with a sign change in  $\zeta$ . Hence, from Eqs. (4.51) and (4.52), it follows that the amplitudes are identical, but the phases are of opposite signs for the two terms.

Systems whose poles and zeros are restricted to the LHP are classified as *minimum phase* systems. Minimum phase systems are particularly desirable because the system *and its inverse* are both stable.

## 4.9-5 The Transfer Function from the Frequency Response

In the preceding section we were given the transfer function of a system. From a knowledge of the transfer function, we developed techniques for determining the system response to sinusoidal inputs. We can also reverse the procedure to determine the transfer function of a minimum phase

system from the system's response to sinusoids. This application has significant practical utility. If we are given a system in a black box with only the input and output terminals available, the transfer function has to be determined by experimental measurements at the input and output terminals. The frequency response to sinusoidal inputs is one of the possibilities that is very attractive because the measurements involved are so simple. One needs only to apply a sinusoidal signal at the input and observe the output. We find the amplitude gain  $|H(j\omega)|$  and the output phase shift  $\angle H(j\omega)$ (with respect to the input sinusoid) for various values of  $\omega$  over the entire range from 0 to  $\infty$ . This information yields the frequency response plots (Bode plots) when plotted against log  $\omega$ . From these plots we determine the appropriate asymptotes by taking advantage of the fact that the slopes of all asymptotes must be multiples of  $\pm 20 \text{ dB}/\text{decade}$  if the transfer function is a rational function (function that is a ratio of two polynomials in *s*). From the asymptotes, the corner frequencies are obtained. Corner frequencies determine the poles and zeros of the transfer function. Because of the ambiguity about the location of zeros since LHP and RHP zeros (zeros at  $s = \pm a$ ) have identical magnitudes, this procedure works only for minimum phase systems.

## 4.10 FILTER DESIGN BY PLACEMENT OF POLES AND ZEROS OF H(s)

In this section we explore the strong dependence of frequency response on the location of poles and zeros of H(s). This dependence points to a simple intuitive procedure to filter design.

# **4.10-1** Dependence of Frequency Response on Poles and Zeros of *H*(*s*)

Frequency response of a system is basically the information about the filtering capability of the system. A system transfer function can be expressed as

$$H(s) = \frac{P(s)}{Q(s)} = b_0 \frac{(s-z_1)(s-z_2)\cdots(s-z_N)}{(s-\lambda_1)(s-\lambda_2)\cdots(s-\lambda_N)}$$

where  $z_1, z_2, \ldots, z_N$  are  $\lambda_1, \lambda_2, \ldots, \lambda_N$  are the poles of H(s). Now the value of the transfer function H(s) at some frequency s = p is

$$H(s)|_{s=p} = b_0 \frac{(p-z_1)(p-z_2)\cdots(p-z_N)}{(p-\lambda_1)(p-\lambda_2)\cdots(p-\lambda_N)}$$
(4.53)

This equation consists of factors of the form  $p - z_i$  and  $p - \lambda_i$ . The factor  $p - z_i$  is a complex number represented by a vector drawn from point z to the point p in the complex plane, as illustrated in Fig. 4.48a. The length of this line segment is  $|p - z_i|$ , the magnitude of  $p - z_i$ . The angle of this directed line segment (with the horizontal axis) is  $\angle (p - z_i)$ . To compute H(s) at s = p, we draw line segments from all poles and zeros of H(s) to the point p, as shown in Fig. 4.48b. The vector connecting a zero  $z_i$  to the point p is  $p - z_i$ . Let the length of this vector be  $r_i$ , and let its angle with the horizontal axis be  $\phi_i$ . Then  $p - z_i = r_i e^{i\phi_i}$ . Similarly, the vector connecting a pole  $\lambda_i$  to the point p is  $p - \lambda_i = d_i e^{i\theta_i}$ , where  $d_i$  and  $\theta_i$  are the length and the angle (with the horizontal axis),

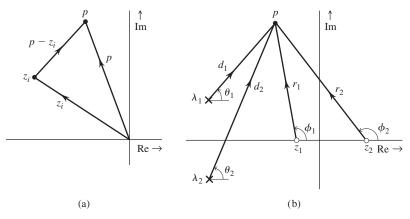


Figure 4.48 Vector representations of (a) complex numbers and (b) factors of H(s).

respectively, of the vector  $p - \lambda_i$ . Now from Eq. (4.53) it follows that

$$H(s)|_{s=p} = b_0 \frac{(r_1 e^{j\phi_1})(r_2 e^{j\phi_2}) \cdots (r_N e^{j\phi_N})}{(d_1 e^{j\theta_1})(d_2 e^{j\theta_2}) \cdots (d_N e^{j\theta_N})}$$
  
=  $b_0 \frac{r_1 r_2 \cdots r_N}{d_1 d_2 \cdots d_N} e^{j[(\phi_1 + \phi_2 + \dots + \phi_N) - (\theta_1 + \theta_2 + \dots + \theta_N)]}$ 

Therefore

$$|H(s)|_{s=p} = b_0 \frac{r_1 r_2 \cdots r_N}{d_1 d_2 \cdots d_N} = b_0 \frac{\text{product of distances of zeros to } p}{\text{product of distances of poles to } p}$$
(4.54)

and

Here, we have assumed positive  $b_0$ . If  $b_0$  is negative, there is an additional phase  $\pi$ . Using this procedure, we can determine H(s) for any value of s. To compute the frequency response  $H(j\omega)$ , we use  $s = j\omega$  (a point on the imaginary axis), connect all poles and zeros to the point  $j\omega$ , and determine  $|H(j\omega)|$  and  $\langle H(j\omega) \rangle$  from Eqs. (4.54) and (4.55). We repeat this procedure for all values of  $\omega$  from 0 to  $\infty$  to obtain the frequency response.

## GAIN ENHANCEMENT BY A POLE

To understand the effect of poles and zeros on the frequency response, consider a hypothetical case of a single pole  $-\alpha + j\omega_0$ , as depicted in Fig. 4.49a. To find the amplitude response  $|H(j\omega)|$  for a certain value of  $\omega$ , we connect the pole to the point  $j\omega$  (Fig. 4.49a). If the length of this line is d, then  $|H(j\omega)|$  is proportional to 1/d,

$$|H(j\omega)| = \frac{\kappa}{d} \tag{4.56}$$

where the exact value of constant K is not important at this point. As  $\omega$  increases from zero, d decreases progressively until  $\omega$  reaches the value  $\omega_0$ . As  $\omega$  increases beyond  $\omega_0$ , d increases

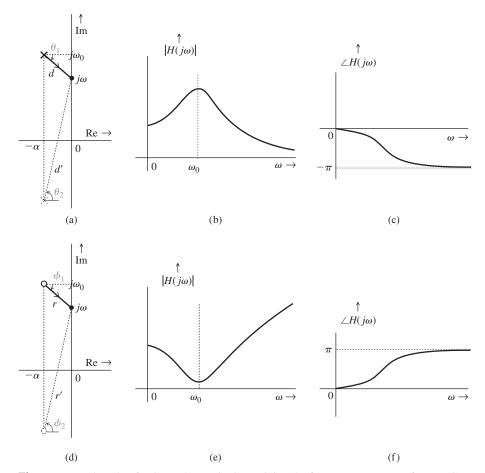


Figure 4.49 The role of poles and zeros in determining the frequency response of an LTIC system.

progressively. Therefore, according to Eq. (4.56), the amplitude response  $|H(j\omega)|$  increases from  $\omega = 0$  until  $\omega = \omega_0$ , and it decreases continuously as  $\omega$  increases beyond  $\omega_0$ , as illustrated in Fig. 4.49b. Therefore, a pole at  $-\alpha + j\omega_0$  results in a frequency-selective behavior that enhances the gain at the frequency  $\omega_0$  (resonance). Moreover, as the pole moves closer to the imaginary axis (as  $\alpha$  is reduced), this enhancement (resonance) becomes more pronounced. This is because  $\alpha$ , the distance between the pole and  $j\omega_0$  (*d* corresponding to  $j\omega_0$ ), becomes smaller, which increases the gain K/d. In the extreme case, when  $\alpha = 0$  (pole on the imaginary axis), the gain at  $\omega_0$  goes to infinity. Repeated poles further enhance the frequency-selective effect. To summarize, we can enhance a gain at a frequency  $\omega_0$  by placing a pole opposite the point  $j\omega_0$ . The closer the pole is to  $j\omega_0$ , the higher is the gain at  $\omega_0$ , and the gain variation is more rapid (more frequency selective) in the vicinity of frequency  $\omega_0$ . Note that a pole must be placed in the LHP for stability.

Here we have considered the effect of a single complex pole on the system gain. For a real system, a complex pole  $-\alpha + j\omega_0$  must accompany its conjugate  $-\alpha - j\omega_0$ . We can readily show that the presence of the conjugate pole does not appreciably change the frequency-selective

behavior in the vicinity of  $\omega_0$ . This is because the gain in this case is K/dd', where d' is the distance of a point  $j\omega$  from the conjugate pole  $-\alpha - j\omega_0$ . Because the conjugate pole is far from  $j\omega_0$ , there is no dramatic change in the length d' as  $\omega$  varies in the vicinity of  $\omega_0$ . There is a gradual increase in the value of d' as  $\omega$  increases, which leaves the frequency-selective behavior as it was originally, with only minor changes.

### GAIN SUPPRESSION BY A ZERO

Using the same argument, we observe that zeros at  $-\alpha \pm j\omega_0$  (Fig. 4.49d) will have exactly the opposite effect of suppressing the gain in the vicinity of  $\omega_0$ , as shown in Fig. 4.49e). A zero on the imaginary axis at  $j\omega_0$  will totally suppress the gain (zero gain) at frequency  $\omega_0$ . Repeated zeros will further enhance the effect. Also, a closely placed pair of a pole and a zero (dipole) tend to cancel out each other's influence on the frequency response. Clearly, a proper placement of poles and zeros can yield a variety of frequency-selective behavior. We can use these observations to design lowpass, highpass, bandpass, and bandstop (or notch) filters.

Phase response can also be computed graphically. In Fig. 4.49a, angles formed by the complex conjugate poles  $-\alpha \pm j\omega_0$  at  $\omega = 0$  (the origin) are equal and opposite. As  $\omega$  increases from 0 up, the angle  $\theta_1$  (due to the pole  $-\alpha + j\omega_0$ ), which has a negative value at  $\omega = 0$ , is reduced in magnitude; the angle  $\theta_2$  because of the pole  $-\alpha - j\omega_0$ , which has a positive value at  $\omega = 0$ , increases in magnitude. As a result,  $\theta_1 + \theta_2$ , the sum of the two angles, increases continuously, approaching a value  $\pi$  as  $\omega \to \infty$ . The resulting phase response  $\angle H(j\omega) = -(\theta_1 + \theta_2)$  is illustrated in Fig. 4.49c. Similar arguments apply to zeros at  $-\alpha \pm j\omega_0$ . The resulting phase response  $\angle H(j\omega) = (\phi_1 + \phi_2)$  is depicted in Fig. 4.49f.

We now focus on simple filters, using the intuitive insights gained in this discussion. The discussion is essentially qualitative.

### 4.10-2 Lowpass Filters

A typical lowpass filter has a maximum gain at  $\omega = 0$ . Because a pole enhances the gain at frequencies in its vicinity, we need to place a pole (or poles) on the real axis opposite the origin  $(j\omega = 0)$ , as shown in Fig. 4.50a. The transfer function of this system is

$$H(s) = \frac{\omega_c}{s + \omega_c}$$

We have chosen the numerator of H(s) to be  $\omega_c$  to normalize the dc gain H(0) to unity. If d is the distance from the pole  $-\omega_c$  to a point  $j\omega$  (Fig. 4.50a), then

$$|H(j\omega)| = \frac{\omega_c}{d}$$

with H(0) = 1. As  $\omega$  increases, d increases and  $|H(j\omega)|$  decreases monotonically with  $\omega$ , as illustrated in Fig. 4.50d with label N = 1. This is clearly a lowpass filter with gain enhanced in the vicinity of  $\omega = 0$ .

### WALL OF POLES

An ideal lowpass filter characteristic (shaded in Fig. 4.50d) has a constant gain of unity up to frequency  $\omega_c$ . Then the gain drops suddenly to 0 for  $\omega > \omega_c$ . To achieve the ideal lowpass

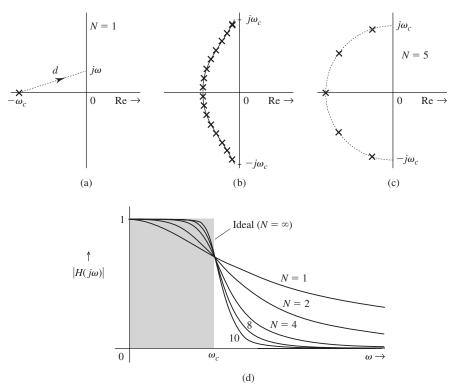


Figure 4.50 Pole-zero configuration and the amplitude response of a lowpass (Butterworth) filter.

characteristic, we need enhanced gain over the entire frequency band from 0 to  $\omega_c$ . We know that to enhance a gain at any frequency  $\omega$ , we need to place a pole opposite  $\omega$ . To achieve an enhanced gain for all frequencies over the band (0 to  $\omega_c$ ), we need to place a pole opposite every frequency in this band. In other words, we need a continuous wall of poles facing the imaginary axis opposite the frequency band 0 to  $\omega_c$  (and from 0 to  $-\omega_c$  for conjugate poles), as depicted in Fig. 4.50b. At this point, the optimum shape of this wall is not obvious because our arguments are qualitative and intuitive. Yet, it is certain that to have enhanced gain (constant gain) at every frequency over this range, we need an infinite number of poles on this wall. We can show that for a maximally flat<sup>†</sup> response over the frequency range (0 to  $\omega_c$ ), the wall is a semicircle with an infinite number of poles uniformly distributed along the wall [11]. In practice, we compromise by using a finite number (N) of poles with less-than-ideal characteristics. Figure 4.50c shows the pole configuration for a fifth-order (N = 5) filter. The amplitude response for various values of N is illustrated in Fig. 4.50d. As  $N \to \infty$ , the filter response approaches the ideal. This family of filters is known as the Butterworth filters. There are also other families. In Chebyshev filters, the wall shape is a semiellipse rather than a semicircle. The characteristics of a Chebyshev filter are inferior to those of Butterworth over the passband  $(0, \omega_c)$ , where the characteristics show a rippling effect

<sup>&</sup>lt;sup>†</sup> Maximally flat amplitude response means the first 2N - 1 derivatives of  $|H(j\omega)|$  with respect to  $\omega$  are zero at  $\omega = 0$ .

instead of the maximally flat response of Butterworth. But in the stopband ( $\omega > \omega_c$ ), Chebyshev behavior is superior in the sense that Chebyshev filter gain drops faster than that of the Butterworth.

## 4.10-3 Bandpass Filters

The shaded characteristic in Fig. 4.51b shows the ideal bandpass filter gain. In the bandpass filter, the gain is enhanced over the entire passband. Our earlier discussion indicates that this can be realized by a wall of poles opposite the imaginary axis in front of the passband centered at  $\omega_0$ . (There is also a wall of conjugate poles opposite  $-\omega_0$ .) Ideally, an infinite number of poles is required. In practice, we compromise by using a finite number of poles and accepting less-than-ideal characteristics (Fig. 4.51).

### 4.10-4 Notch (Bandstop) Filters

An ideal notch filter amplitude response (shaded in Fig. 4.52b) is a complement of the amplitude response of an ideal bandpass filter. Its gain is zero over a small band centered at some frequency  $\omega_0$  and is unity over the remaining frequencies. Realization of such a characteristic requires an infinite number of poles and zeros. Let us consider a practical second-order notch filter to obtain zero gain at a frequency  $\omega = \omega_0$ . For this purpose, we must have zeros at  $\pm j\omega_0$ . The requirement of unity gain at  $\omega = \infty$  requires the number of poles to be equal to the number of zeros (M = N). This ensures that for very large values of  $\omega$ , the product of the distances of poles from  $\omega$  will be equal to the product of the distances of zeros from  $\omega$ . Moreover, unity gain at  $\omega = 0$  requires a pole and the corresponding zero to be equidistant from the origin. For example, if we use two (complex-conjugate) zeros, we must have two poles; the distance from the origin of the poles and of the zeros should be the same. This requirement can be met by placing the two conjugate poles on the semicircle of radius  $\omega_0$ , as depicted in Fig. 4.52a. The poles can be anywhere on the semicircle to satisfy the equidistance condition. Let the two conjugate poles be at angles  $\pm \theta$  with respect to the negative real axis. Recall that a pole and a zero in the same vicinity tend to cancel out

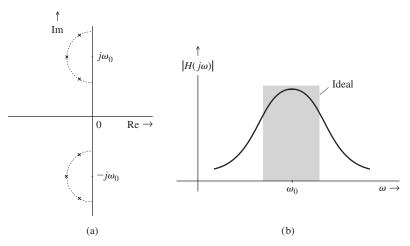


Figure 4.51 (a) Pole-zero configuration and (b) the amplitude response of a bandpass filter.

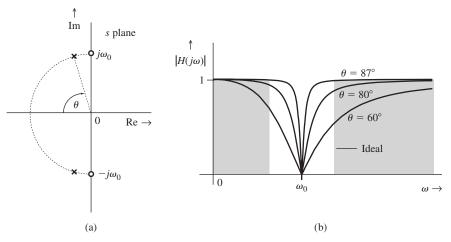


Figure 4.52 (a) Pole-zero configuration and (b) the amplitude response of a bandstop (notch) filter.

each other's influences. Therefore, placing poles closer to zeros (selecting  $\theta$  closer to  $\pi/2$ ) results in a rapid recovery of the gain from value 0 to 1 as we move away from  $\omega_0$  in either direction. Figure 4.52b shows the gain  $|H(j\omega)|$  for three different values of  $\theta$ .

## **EXAMPLE 4.31** Notch Filter Design

Design a second-order notch filter to suppress 60 Hz hum in a radio receiver.

We use the poles and zeros in Fig. 4.52a with  $\omega_0 = 120\pi$ . The zeros are at  $s = \pm j\omega_0$ . The two poles are at  $-\omega_0 \cos \theta \pm j\omega_0 \sin \theta$ . The filter transfer function is (with  $\omega_0 = 120\pi$ )

$$H(s) = \frac{(s - j\omega_0)(s + j\omega_0)}{(s + \omega_0 \cos \theta + j\omega_0 \sin \theta)(s + \omega_0 \cos \theta - j\omega_0 \sin \theta)}$$
  
=  $\frac{s^2 + \omega_0^2}{s^2 + (2\omega_0 \cos \theta)s + \omega_0^2} = \frac{s^2 + 142122.3}{s^2 + (753.98 \cos \theta)s + 142122.3}$ 


and

$$|H(j\omega)| = \frac{-\omega^2 + 142122.3}{\sqrt{(-\omega^2 + 142122.3)^2 + (753.98\omega\cos\theta)^2}}$$

The closer the poles are to the zeros (the closer  $\theta$  is to  $\pi/2$ ), the faster the gain recovery from 0 to 1 on either side of  $\omega_0 = 120\pi$ . Figure 4.52b shows the amplitude response for three different values of  $\theta$ . This example is a case of very simple design. To achieve zero gain over a band, we need an infinite number of poles as well as an infinite number of zeros.


MATLAB easily computes and plots the magnitude response curves of Fig. 4.52b. To illustrate, let us plot the magnitude response using  $\theta = 60^{\circ}$  over a frequency range of  $0 \le f \le 150$  Hz. The result, shown in Fig. 4.53, matches the  $\theta = 60^{\circ}$  case of Fig. 4.52b. >> f = (0:.01:150); omega0 = 2\*pi\*60; theta = 60\*pi/180;  $H = @(s) (s.^{2}+omega0^{2})./(s.^{2}+2*omega0*cos(theta)*s+omega0^{2});$ 

- >>
- plot(f,abs(H(1j\*2\*pi\*f)),'k-'); >>
- xlabel('f [Hz]'); ylabel('|H(j2\pi f)|'); >>

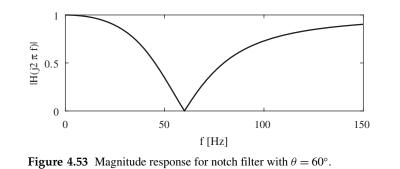

## DRILL 4.16 Magnitude Response from Pole-Zero Plots

Use the qualitative method of sketching the frequency response to show that the system with the pole-zero configuration in Fig. 4.54a is a highpass filter and the configuration in Fig. 4.54b is a bandpass filter.

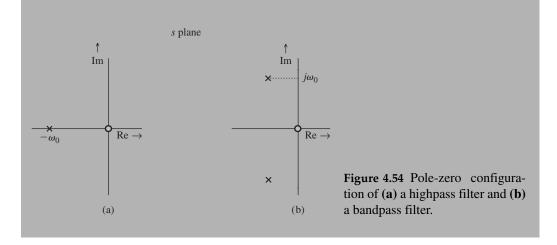

### 4.10-5 Practical Filters and Their Specifications

For ideal filters, everything is black and white; the gains are either zero or unity over certain bands. As we saw earlier, real life does not permit such a worldview. Things have to be gray or shades of gray. In practice, we can realize a variety of filter characteristics that can only approach ideal characteristics.

An ideal filter has a passband (unity gain) and a stopband (zero gain) with a sudden transition from the passband to the stopband. There is no transition band. For practical (or realizable) filters, on the other hand, the transition from the passband to the stopband (or vice versa) is gradual and takes place over a finite band of frequencies. Moreover, for realizable filters, the gain cannot be zero over a finite band (Paley–Wiener condition). As a result, there can be no true stopband for practical filters. We therefore define a *stopband* to be a band over which the gain is below some small number  $G_s$ , as illustrated in Fig. 4.55. Similarly, we define a *passband* to be a band over which the gain is between 1 and some number  $G_p$  ( $G_p < 1$ ), as shown in Fig. 4.55. We have selected the passband gain of unity for convenience. It could be any constant. Usually the gains are specified in terms of decibels. This is simply 20 times the log (to base 10) of the gain. Thus,

$$\tilde{G}(dB) = 20\log_{10}G$$

A gain of unity is 0 dB and a gain of  $\sqrt{2}$  is 3.01 dB, usually approximated by 3 dB. Sometimes the specification may be in terms of attenuation, which is the negative of the gain in dB. Thus, a gain of  $1/\sqrt{2}$ , that is, 0.707, is -3 dB, but is an attenuation of 3 dB.

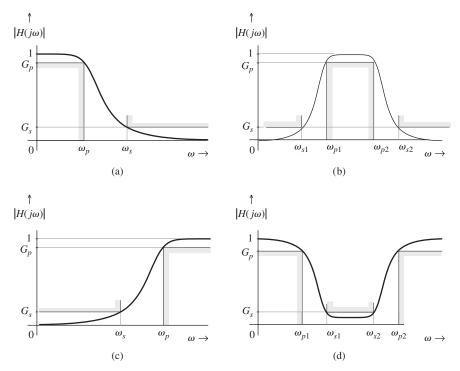


Figure 4.55 Passband, stopband, and transition band in filters of various types.

In a typical design procedure,  $G_p$  (minimum passband gain) and  $G_s$  (maximum stopband gain) are specified. Figure 4.55 shows the passband, the stopband, and the transition band for typical lowpass, bandpass, highpass, and bandstop filters. Fortunately, the highpass, bandpass, and bandstop filters can be obtained from a basic lowpass filter by simple frequency transformations. For example, replacing *s* with  $\omega_c/s$  in the lowpass filter transfer function results in a highpass filter. Similarly, other frequency transformations yield the bandpass and bandstop filters. Hence, it is necessary to develop a design procedure only for a basic lowpass filter. Then, by using appropriate transformations, we can design filters of other types. The design procedures are beyond our scope here and will not be discussed. The interested reader is referred to [1].

## 4.11 THE BILATERAL LAPLACE TRANSFORM

Situations involving noncausal signals and/or systems cannot be handled by the (unilateral) Laplace transform discussed so far. These cases can be analyzed by the *bilateral* (or *two-sided*) Laplace transform defined by

$$X(s) = \int_{-\infty}^{\infty} x(t) e^{-st} dt$$

and x(t) can be obtained from X(s) by the inverse transformation

$$x(t) = \frac{1}{2\pi j} \int_{c-j\infty}^{c+j\infty} X(s) e^{st} ds$$


Observe that the unilateral Laplace transform discussed so far is a special case of the bilateral Laplace transform, where the signals are restricted to the causal type. Basically, the two transforms are the same. For this reason we use the same notation for the bilateral Laplace transform.

Earlier we showed that the Laplace transforms of  $e^{-at}u(t)$  and of  $-e^{-at}u(-t)$  are identical. The only difference is in their regions of convergence (ROC). The ROC for the former is Re s > -a; that for the latter is Re s < -a, as illustrated in Fig. 4.1. Clearly, the inverse Laplace transform of X(s) is not unique unless the ROC is specified. If we restrict all our signals to the causal type, however, this ambiguity does not arise. The inverse transform of 1/(s+a) is  $e^{-at}u(t)$ . Thus, in the unilateral Laplace transform, we can ignore the ROC in determining the inverse transform of X(s).

We now show that any bilateral transform can be expressed in terms of two unilateral transforms. It is, therefore, possible to evaluate bilateral transforms from a table of unilateral transforms.

Consider the function x(t) appearing in Fig. 4.56a. We separate x(t) into two components,  $x_1(t)$  and  $x_2(t)$ , representing the positive time (*causal*) component and the negative time (*anticausal*) component of x(t), respectively (Figs. 4.56b and 4.56c):

$$x_1(t) = x(t)u(t)$$
 and  $x_2(t) = x(t)u(-t)$ 

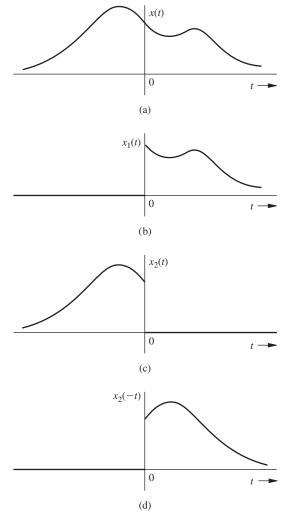

**Figure 4.56** Expressing a signal as a sum of causal and anticausal components.

The bilateral Laplace transform of x(t) is given by

$$X(s) = \int_{-\infty}^{\infty} x(t)e^{-st} dt$$
  
=  $\int_{-\infty}^{0^{-}} x_{2}(t)e^{-st} dt + \int_{0^{-}}^{\infty} x_{1}(t)e^{-st} dt$   
=  $X_{2}(s) + X_{1}(s)$  (4.57)

where  $X_1(s)$  is the Laplace transform of the causal component  $x_1(t)$ , and  $X_2(s)$  is the Laplace transform of the anticausal component  $x_2(t)$ . Consider  $X_2(s)$ , given by

$$X_2(s) = \int_{-\infty}^{0^-} x_2(t) e^{-st} dt = \int_{0^+}^{\infty} x_2(-t) e^{st} dt$$

Therefore,

$$X_2(-s) = \int_{0^+}^{\infty} x_2(-t)e^{-st} dt$$

If x(t) has any impulse or its derivative(s) at the origin, they are included in  $x_1(t)$ . Consequently,  $x_2(t) = 0$  at the origin; that is,  $x_2(0) = 0$ . Hence, the lower limit on the integration in the preceding equation can be taken as  $0^-$  instead of  $0^+$ . Therefore,

$$X_2(-s) = \int_{0^-}^{\infty} x_2(-t)e^{-st} dt$$

Because  $x_2(-t)$  is causal (Fig. 4.56d),  $X_2(-s)$  can be found from the unilateral transform table. Changing the sign of s in  $X_2(-s)$  yields  $X_2(s)$ .

To summarize, the bilateral transform X(s) in Eq. (4.57) can be computed from the unilateral transforms in two steps:

- 1. Split x(t) into its causal and anticausal components,  $x_1(t)$  and  $x_2(t)$ , respectively.
- 2. Since the signals  $x_1(t)$  and  $x_2(-t)$  are both causal, take the (unilateral) Laplace transform of  $x_1(t)$  and add to it the (unilateral) Laplace transform of  $x_2(-t)$ , with *s* replaced by -s. This procedure gives the (bilateral) Laplace transform of x(t).

Since  $x_1(t)$  and  $x_2(-t)$  are both causal,  $X_1(s)$  and  $X_2(-s)$  are both unilateral Laplace transforms. Let  $\sigma_{c1}$  and  $\sigma_{c2}$  be the abscissas of convergence of  $X_1(s)$  and  $X_2(-s)$ , respectively. This statement implies that  $X_1(s)$  exists for all *s* with Re $s > \sigma_{c1}$ , and  $X_2(-s)$  exists for all *s* with Re $s > \sigma_{c2}$ . Therefore,  $X_2(s)$  exists for all *s* with Re $s < -\sigma_{c2}$ .<sup>†</sup> Therefore,  $X(s) = X_1(s) + X_2(s)$  exists for all *s* such that


$$\sigma_{c1} < \operatorname{Re} s < -\sigma_{c2}$$

The regions of convergence of  $X_1(s)$ ,  $X_2(s)$ , and X(s) are shown in Fig. 4.57. Because X(s) is finite for all values of *s* lying in the strip of convergence ( $\sigma_{c1} < \text{Re } s < -\sigma_{c2}$ ), poles of X(s) must lie outside this strip. The poles of X(s) arising from the causal component  $x_1(t)$  lie to the left of the *strip* (region) *of convergence*, and those arising from its anticausal component  $x_2(t)$  lie to its right (see Fig. 4.57). This fact is of crucial importance in finding the inverse bilateral transform.

This result can be generalized to left-sided and right-sided signals. We define a signal x(t) as a *right-sided* signal if x(t) = 0 for  $t < T_1$  for some finite positive or negative number  $T_1$ . A causal signal is always a right-sided signal, but the converse is not necessarily true. A signal is said to *left-sided* if it is zero for  $t > T_2$  for some finite, positive, or negative number  $T_2$ . An anticausal signal is always a left-sided signal, but the converse is not necessarily true. A *two-sided* signal is of infinite duration on both positive and negative sides of t and is neither right-sided nor left-sided.

We can show that the conclusions for ROC for causal signals also hold for right-sided signals, and those for anticausal signals hold for left-sided signals. In other words, if x(t) is causal or

<sup>&</sup>lt;sup>†</sup> For instance, if x(t) exists for all t > 10, then x(-t), its time-inverted form, exists for t < -10.

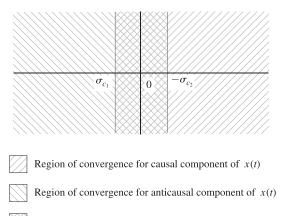

Region (strip) of convergence for the entire x(t)

Figure 4.57 Regions of convergence for causal, anticausal, and combined signals.

right-sided, the poles of X(s) lie to the left of the ROC, and if x(t) is anticausal or left-sided, the poles of X(s) lie to the right of the ROC.

To prove this generalization, we observe that a right-sided signal can be expressed as  $x(t) + x_f(t)$ , where x(t) is a causal signal and  $x_f(t)$  is some finite-duration signal. The ROC of any finite-duration signal is the entire *s*-plane (no finite poles). Hence, the ROC of the right-sided signal  $x(t) + x_f(t)$  is the region common to the ROCs of x(t) and  $x_f(t)$ , which is same as the ROC for x(t). This proves the generalization for right-sided signals. We can use a similar argument to generalize the result for left-sided signals. Let us find the bilateral Laplace transform of

$$x(t) = e^{bt}u(-t) + e^{at}u(t)$$
(4.58)

We already know the Laplace transform of the causal component

$$e^{at}u(t) \Longleftrightarrow \frac{1}{s-a}$$
 Re $s > a$  (4.59)

For the anticausal component,  $x_2(t) = e^{bt}u(-t)$ , we have

$$x_2(-t) = e^{-bt}u(t) \iff \frac{1}{s+b}$$
 Res > -b

so that

$$X_2(s) = \frac{1}{-s+b} = \frac{-1}{s-b} \qquad \text{Re}\,s < b$$

Therefore,

$$e^{bt}u(-t) \Longleftrightarrow \frac{-1}{s-b}$$
 Res < b (4.60)

and the Laplace transform of x(t) in Eq. (4.58) is

$$X(s) = -\frac{1}{s-b} + \frac{1}{s-a} \qquad \text{Re} s > a \quad \text{and} \quad \text{Re} s < b$$
$$= \frac{a-b}{(s-b)(s-a)} \qquad a < \text{Re} s < b \qquad (4.61)$$

Figure 4.58 shows x(t) and the ROC of X(s) for various values of a and b. Equation (4.61) indicates that the ROC of X(s) does not exist if a > b, which is precisely the case in Fig. 4.58f. Observe that the poles of X(s) are outside (on the edges) of the ROC. The poles of X(s) because of the anticausal component of x(t) lie to the right of the ROC, and those due to the causal component of x(t) lie to its left.

When X(s) is expressed as a sum of several terms, the ROC for X(s) is the intersection of (region common to) the ROCs of all the terms. In general, if  $x(t) = \sum_{i=1}^{k} x_i(t)$ , then the ROC for X(s) is the intersection of the ROCs (region common to all ROCs) for the transforms  $X_1(s), X_2(s), \ldots, X_k(s)$ .

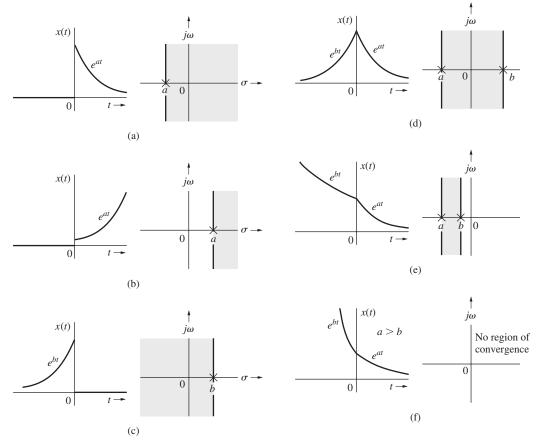


Figure 4.58 Various two exponential signals and their regions of convergence.

# **EXAMPLE 4.32** Inverse Bilateral Laplace Transform

Find the inverse bilateral Laplace transform of

$$X(s) = \frac{-3}{(s+2)(s-1)}$$

if the ROC is (a) -2 < Re s < 1, (b) Re s > 1, and (c) Re s < -2.


**(a)** 

$$X(s) = \frac{1}{s+2} - \frac{1}{s-1}$$

Now, X(s) has poles at -2 and 1. The strip of convergence is -2 < Res < 1. The pole at -2, being to the left of the strip of convergence, corresponds to a causal signal. The pole at 1, being to the right of the strip of convergence, corresponds to an anticausal signal. Equations (4.59) and (4.60) yield

$$x(t) = e^{-2t}u(t) + e^{t}u(-t)$$

(b) Both poles lie to the left of the ROC, so both poles correspond to causal signals. Therefore,  $x(t) = (e^{-2t} - e^t)u(t)$ 

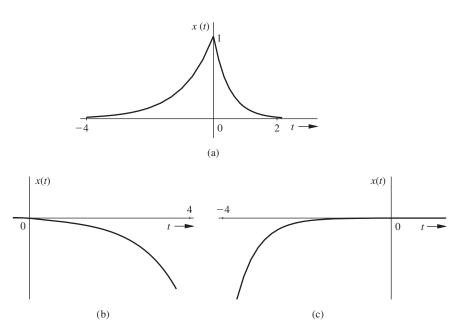

**Figure 4.59** Three possible inverse transforms of -3/((s+2)(s-1)).

(c) Both poles lie to the right of the region of convergence, so both poles correspond to anticausal signals, and

$$x(t) = (-e^{-2t} + e^{t})u(-t)$$

Figure 4.59 shows the three inverse transforms corresponding to the same X(s) but with different regions of convergence.

## 4.11-1 Properties of the Bilateral Laplace Transform

Properties of the bilateral Laplace transform are similar to those of the unilateral transform. We shall merely state the properties here without proofs. Let the ROC of X(s) be a < Re s < b. Similarly, let the ROC of  $X_i(s)$  be  $a_i < \text{Re } s < b_i$  for (i = 1, 2).

LINEARITY

$$a_1x_1(t) + a_2x_2(t) \iff a_1X_1(s) + a_2X_2(s)$$

The ROC for  $a_1X_1(s) + a_2X_2(s)$  is the region common to (intersection of) the ROCs for  $X_1(s)$  and  $X_2(s)$ .

TIME SHIFT

$$x(t-T) \iff X(s)e^{-sT}$$

The ROC for  $X(s)e^{-sT}$  is identical to the ROC for X(s).

FREQUENCY SHIFT

$$x(t)e^{s_0t} \iff X(s-s_0)$$

The ROC for  $X(s - s_0)$  is a + c < Re s < b + c, where  $c = \text{Re } s_0$ .

TIME DIFFERENTIATION

$$\frac{dx(t)}{dt} \Longleftrightarrow sX(s)$$

The ROC for sX(s) contains the ROC for X(s) and may be larger than that of X(s) under certain conditions [e.g., if X(s) has a first-order pole at s = 0, it is canceled by the factor s in sX(s)].

TIME INTEGRATION

$$\int_{-\infty}^{t} x(\tau) \, d\tau \Longleftrightarrow X(s)/s$$

The ROC for sX(s) is max (a, 0) < Re s < b.

TIME SCALING

$$x(\beta t) \Longleftrightarrow \frac{1}{|\beta|} X\left(\frac{s}{\beta}\right)$$

The ROC for  $X(s/\beta)$  is  $\beta a < \text{Re } s < \beta b$ . For  $\beta > 1, x(\beta t)$  represents time compression and the corresponding ROC expands by factor  $\beta$ . For  $0 > \beta > 1, x(\beta t)$  represents time expansion and the corresponding ROC is compressed by factor  $\beta$ .

TIME CONVOLUTION

$$x_1(t) * x_2(t) \iff X_1(s)X_2(s)$$

The ROC for  $X_1(s)X_2(s)$  is the region common to (intersection of) the ROCs for  $X_1(s)$  and  $X_2(s)$ .

FREQUENCY CONVOLUTION

$$x_1(t)x_2(t) \iff \frac{1}{2\pi j} \int_{c-j\infty}^{c+j\infty} X_1(w)X_2(s-w) \, dw$$

The ROC for  $X_1(s) * X_2(s)$  is  $a_1 + a_2 < \text{Re } s < b_1 + b_2$ .

TIME REVERSAL

$$x(-t) \iff X(-s)$$

The ROC for X(-s) is -b < Re s < -a.

## 4.11-2 Using the Bilateral Transform for Linear System Analysis

Since the bilateral Laplace transform can handle noncausal signals, we can analyze noncausal LTIC systems using the bilateral Laplace transform. We have shown that the (zero-state) output y(t) is given by

$$y(t) = \mathcal{L}^{-1}[X(s)H(s)]$$

This expression is valid only if X(s)H(s) exists. The ROC of X(s)H(s) is the region in which both X(s) and H(s) exist. In other words, the ROC of X(s)H(s) is the region common to the regions of convergence of both X(s) and H(s). These ideas are clarified in the following examples.

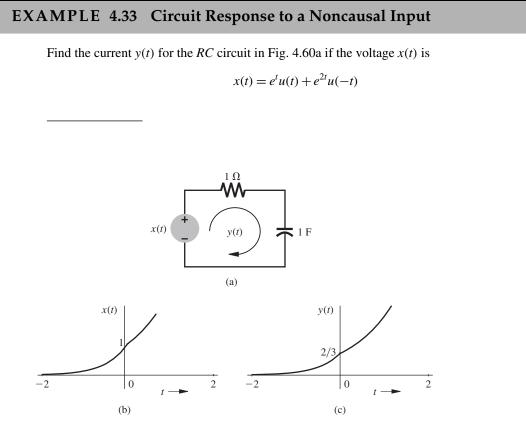


Figure 4.60 Response of a circuit to a noncausal input.

The transfer function H(s) of the circuit is given by

$$H(s) = \frac{s}{s+1} \qquad \text{Re}\,s > -1$$

Because h(t) is a causal function, the ROC of H(s) is Res > -1. Next, the bilateral Laplace transform of x(t) is given by

$$X(s) = \frac{1}{s-1} - \frac{1}{s-2} = \frac{-1}{(s-1)(s-2)} \qquad 1 < \operatorname{Re} s < 2$$

The response y(t) is the inverse transform of X(s)H(s):

$$y(t) = \mathcal{L}^{-1}\left[\frac{-s}{(s+1)(s-1)(s-2)}\right] = \mathcal{L}^{-1}\left[\frac{1}{6}\frac{1}{s+1} + \frac{1}{2}\frac{1}{s-1} - \frac{2}{3}\frac{1}{s-2}\right]$$

The ROC of X(s)H(s) is that ROC common to both X(s) and H(s). This is 1 < Res < 2. The poles  $s = \pm 1$  lie to the left of the ROC and, therefore, correspond to causal signals; the pole

## 454 CHAPTER 4 CONTINUOUS-TIME SYSTEM ANALYSIS

s = 2 lies to the right of the ROC and thus represents an anticausal signal. Hence,

$$y(t) = \frac{1}{6}e^{-t}u(t) + \frac{1}{2}e^{t}u(t) + \frac{2}{3}e^{2t}u(-t)$$

Figure 4.60c shows y(t). Note that in this example, if

$$x(t) = e^{-4t}u(t) + e^{-2t}u(-t)$$

then the ROC of X(s) is -4 < Re s < -2. Here no region of convergence exists for X(s)H(s). Hence, the response y(t) goes to infinity.

# **EXAMPLE 4.34** Response of a Noncausal System

Find the response y(t) of a noncausal system with the transfer function

$$H(s) = \frac{-1}{s-1} \qquad \text{Re}\,s < 1$$

to the input  $x(t) = e^{-2t}u(t)$ .

We have

$$X(s) = \frac{1}{s+2} \qquad \text{Re}\,s > -2$$

and

$$Y(s) = X(s)H(s) = \frac{-1}{(s-1)(s+2)}$$

The ROC of X(s)H(s) is the region -2 < Re s < 1. By partial fraction expansion,

$$Y(s) = \frac{-1/3}{s-1} + \frac{1/3}{s+2} \qquad -2 < \operatorname{Re} s < 1$$

and

$$y(t) = \frac{1}{3} [e^{t} u(-t) + e^{-2t} u(t)]$$

Note that the pole of H(s) lies in the RHP at 1. Yet the system is not unstable. The pole(s) in the RHP may indicate instability or noncausality, depending on its location with respect to the region of convergence of H(s). For example, if H(s) = -1/(s-1) with Re s > 1, the system is causal and unstable, with  $h(t) = -e^t u(t)$ . In contrast, if H(s) = -1/(s-1) with Re s < 1, the system is noncausal and stable, with  $h(t) = e^t u(-t)$ .

# EXAMPLE 4.35 System Response to a Noncausal Input

Find the response y(t) of a system with the transfer function

$$H(s) = \frac{1}{s+5} \qquad \text{Re}\,s > -5$$

and the input

$$x(t) = e^{-t}u(t) + e^{-2t}u(-t)$$

The input x(t) is of the type depicted in Fig. 4.58f, and the region of convergence for X(s) does not exist. In this case, we must determine separately the system response to each of the two input components,  $x_1(t) = e^{-t}u(t)$  and  $x_2(t) = e^{-2t}u(-t)$ .

$$X_1(s) = \frac{1}{s+1} \qquad \text{Re}\,s > -1$$
$$X_2(s) = \frac{-1}{s+2} \qquad \text{Re}\,s < -2$$

If  $y_1(t)$  and  $y_2(t)$  are the system responses to  $x_1(t)$  and  $x_2(t)$ , respectively, then

$$Y_1(s) = \frac{1}{(s+1)(s+5)} = \frac{1/4}{s+1} - \frac{1/4}{s+5} \qquad \text{Re}\,s > -1$$

so that

$$y_1(t) = \frac{1}{4}(e^{-t} - e^{-5t})u(t)$$

and

$$Y_2(s) = \frac{-1}{(s+2)(s+5)} = \frac{-1/3}{s+2} + \frac{1/3}{s+5} \qquad -5 < \operatorname{Re} s < -2$$

so that

$$y_2(t) = \frac{1}{3} [e^{-2t}u(-t) + e^{-5t}u(t)]$$

Therefore,

$$y(t) = y_1(t) + y_2(t) = \frac{1}{3}e^{-2t}u(-t) + \left(\frac{1}{4}e^{-t} + \frac{1}{12}e^{-5t}\right)u(t)$$

# 4.12 MATLAB: CONTINUOUS-TIME FILTERS

Continuous-time filters are essential to many if not most engineering systems, and MATLAB is an excellent assistant for filter design and analysis. Although a comprehensive treatment of continuous-time filter techniques is outside the scope of this book, quality filters can be designed and realized with minimal additional theory.

A simple yet practical example demonstrates basic filtering concepts. Telephone voice signals are often lowpass-filtered to eliminate frequencies above a cutoff of 3 kHz, or  $\omega_c = 3000(2\pi) \approx 18,850$  rad/s. Filtering maintains satisfactory speech quality and reduces signal bandwidth, thereby increasing the phone company's call capacity. How, then, do we design and realize an acceptable 3 kHz lowpass filter?

## 4.12-1 Frequency Response and Polynomial Evaluation

Magnitude response plots help assess a filter's performance and quality. The magnitude response of an ideal filter is a brick-wall function with unity passband gain and perfect stopband attenuation. For a lowpass filter with cutoff frequency  $\omega_c$ , the ideal magnitude response is

$$|H_{\text{ideal}}(j\omega)| = \begin{cases} 1 & |\omega| \le \omega_c \\ 0 & |\omega| > \omega_c \end{cases}$$

Unfortunately, ideal filters cannot be implemented in practice. Realizable filters require compromises, although good designs will closely approximate the desired brick-wall response.

A realizable LTIC system often has a rational transfer function that is represented in the *s*-domain as

$$H(s) = \frac{Y(s)}{X(s)} = \frac{B(s)}{A(s)} = \frac{\sum_{k=0}^{M} b_{k+N-M} s^{M-k}}{\sum_{k=0}^{N} a_k s^{N-k}}$$

Frequency response  $H(j\omega)$  is obtained by letting  $s = j\omega$ , where frequency  $\omega$  is in radians per second.

MATLAB is ideally suited to evaluate frequency response functions. Defining a length-(N + 1) coefficient vector  $\mathbf{A} = [a_0, a_1, \dots, a_N]$  and a length-(M + 1) coefficient vector  $\mathbf{B} = [b_{N-M}, b_{N-M+1}, \dots, b_N]$ , program CH4MP1 computes  $H(j\omega)$  for each frequency in the input vector  $\boldsymbol{\omega}$ .

```
function [H] = CH4MP1(B,A,omega);
% CH4MP1.m : Chapter 4, MATLAB Program 1
% Function M-file computes frequency response for LTIC system
% INPUTS: B = vector of feedforward coefficients
% A = vector of feedback coefficients
% omega = vector of frequencies [rad/s].
% OUTPUTS: H = frequency response
```

```
H = polyval(B,j*omega)./polyval(A,j*omega);
```


The function polyval efficiently evaluates simple polynomials and makes the program nearly trivial. For example, when A is the vector of coefficients  $[a_0, a_1, \ldots, a_N]$ , polyval (A, j\*omega) computes

$$\sum_{k=0}^{N} a_k (j\omega)^{N-k}$$

for each value of the frequency vector omega. It is also possible to compute frequency responses by using the signal-processing toolbox function freqs.

# DESIGN AND EVALUATION OF A SIMPLE RC FILTER

One of the simplest lowpass filters is realized by using an *RC* circuit, as shown in Fig. 4.61. This one-pole system has transfer function  $H_{RC}(s) = (RCs + 1)^{-1}$  and magnitude response  $|H_{RC}(j\omega)| = |(j\omega RC + 1)^{-1}| = 1/\sqrt{1 + (RC\omega)^2}$ . Independent of component values *R* and *C*, this circuit has many desirable characteristics, such as unity gain at  $\omega = 0$  and magnitude response that monotonically decreases to zero as  $\omega \to \infty$ .

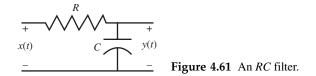

Components *R* and *C* are chosen to set the desired 3 kHz cutoff frequency. For many filter types, the cutoff frequency corresponds to the half-power point, or  $|H_{RC}(j\omega_c)| = 1/\sqrt{2}$ . Assign *C* a realistic capacitance of 1 nF, then the required resistance is computed by  $R = 1/\sqrt{C^2\omega_c^2} = 1/\sqrt{(10^{-9})^2(2\pi 3000)^2}$ .

```
>> omega_c = 2*pi*3000; C = 1e-9; R = 1/sqrt(C^2*omega_c^2)
R = 5.3052e+004
```

The root of this first-order *RC* filter is directly related to the cutoff frequency,  $\lambda = -1/RC = -18,850 = -\omega_c$ .

To evaluate the *RC* filter performance, the magnitude response is plotted over the mostly audible frequency range ( $0 \le f \le 20 \text{ kHz}$ ).

```
>> f = linspace(0,20000,200); Hmag_RC = abs(CH4MP1([1],[R*C 1],f*2*pi));
```


```
>> plot(f,abs(f*2*pi)<=omega_c,'k-',f,Hmag_RC,'k--');</pre>
```

```
>> axis([0 20000 -0.05 1.05]); xlabel('f [Hz]'); ylabel('|H(j2\pi f)|');
```

```
>> legend('Ideal','First-order RC','location','best');
```

The linspace(X1,X2,N) command generates an N-length vector of linearly spaced points between X1 and X2.

As shown in Fig. 4.62, the first-order *RC* response is indeed lowpass with a half-power cutoff frequency equal to 3 kHz. It rather poorly approximates the desired brick-wall response: the passband is not very flat, and stopband attenuation increases very slowly to less than 20 dB at 20 kHz.

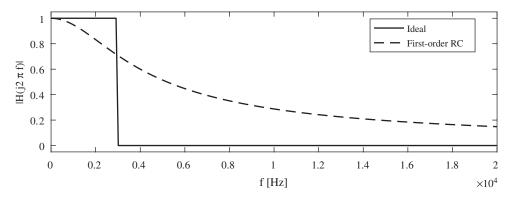

**Figure 4.62** Magnitude response  $|H_{RC}(j2\pi f)|$  of a first-order *RC* filter.

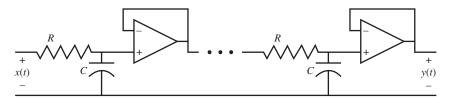


Figure 4.63 A cascaded RC filter.

# A CASCADED RC FILTER AND POLYNOMIAL EXPANSION

A first-order *RC* filter is destined for poor performance; one pole is simply insufficient to obtain good results. A cascade of *RC* circuits increases the number of poles and improves the filter response. To simplify the analysis and prevent loading between stages, we employ op-amp followers to buffer the output of each stage, as shown in Fig. 4.63. A cascade of *N* stages results in an *N*th-order filter with transfer function given by

$$H_{\text{cascade}}(s) = [H_{RC}(s)]^N = (RCs+1)^{-N}$$

Upon choosing a cascade of 10 stages and C = 1 nF, a 3 kHz cutoff frequency is obtained by setting  $R = \sqrt{2^{1/10} - 1}/(C\omega_c) = \sqrt{2^{1/10} - 1}/(6\pi (10)^{-6})$ .


>> R = sqrt(2^(1/10)-1)/(C\*omega\_c)
R = 1.4213e+004

This cascaded filter has a 10th-order pole at  $\lambda = -1/RC$  and no finite zeros. To compute the magnitude response, polynomial coefficient vectors **A** and **B** are needed. Setting **B** = [1] ensures there are no finite zeros or, equivalently, that all zeros are at infinity. The poly command, which expands a vector of roots into a corresponding vector of polynomial coefficients, is used to obtain **A**.

- >> B = 1; A = poly(-1/(R\*C)\*ones(10,1)); A = A/A(end);
- >> Hmag\_cascade = abs(CH4MP1(B,A,f\*2\*pi));
- >> plot(f,abs(f\*2\*pi)<=omega\_c,'k-',f,Hmag\_cascade,'k--');</pre>
- >> axis([0 20000 -0.05 1.05]); xlabel('f [Hz]'); ylabel('|H(j2\pi f)|');
- >> legend('Ideal','Tenth-order RC cascade','location','best');

Notice that scaling a polynomial by a constant does not change its roots. Conversely, the roots of a polynomial specify a polynomial within a scale factor. The command A = A/A(end) properly scales the denominator polynomial to ensure unity gain at  $\omega = 0$ .

The magnitude response plot of the tenth-order *RC* cascade is shown in Fig. 4.64. Compared with the simple *RC* response of Fig. 4.62, the passband remains relatively unchanged, but stopband attenuation is greatly improved to over 60 dB at 20 kHz.

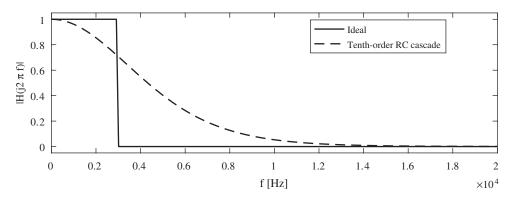

**Figure 4.64** Magnitude response  $|H_{cascade}(j2\pi f)|$  of a tenth-order *RC* cascade.

## 4.12-2 Butterworth Filters and the Find Command


The pole location of a first-order lowpass filter is necessarily fixed by the cutoff frequency. There is little reason, however, to place all the poles of a 10th-order filter at one location. Better pole placement will improve our filter's magnitude response. One strategy, discussed in Sec. 4.10, is to place a wall of poles opposite the passband frequencies. A semicircular wall of poles leads to the Butterworth family of filters, and a semi-elliptical shape leads to the Chebyshev family of filters. Butterworth filters are considered first.

To begin, notice that a transfer function H(s) with real coefficients has a squared magnitude response given by  $|H(j\omega)|^2 = H(j\omega)H^*(j\omega) = H(j\omega)H(-j\omega) = H(s)H(-s)|_{s=j\omega}$ . Thus, half the poles of  $|H(j\omega)|^2$  correspond to the filter H(s) and the other half correspond to H(-s). Filters that are both stable and causal require H(s) to include only left-half-plane poles.

The squared magnitude response of a Butterworth filter is

$$|H_{\rm BW}(j\omega)|^2 = \frac{1}{1 + (j\omega/j\omega_c)^{2N}}$$

This function has the same appealing characteristics as the first-order *RC* filter: a gain that is unity at  $\omega = 0$  and monotonically decreases to zero as  $\omega \to \infty$ . By construction, the half-power gain

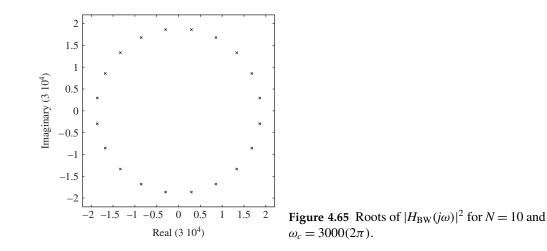

occurs at  $\omega_c$ . Perhaps most importantly, however, the first 2N - 1 derivatives of  $|H_{BW}(j\omega)|$  with respect to  $\omega$  are zero at  $\omega = 0$ . Put another way, the passband is constrained to be very flat for low frequencies. For this reason, Butterworth filters are sometimes called maximally flat filters.

As discussed in Sec. B.7, the roots of minus 1 must lie equally spaced on a circle centered at the origin. Thus, the 2N poles of  $|H_{BW}(j\omega)|^2$  naturally lie equally spaced on a circle of radius  $\omega_c$  centered at the origin. Figure 4.65 displays the 20 poles corresponding to the case N = 10 and  $\omega_c = 3000(2\pi)$  rad/s. An Nth-order Butterworth filter that is both causal and stable uses the N left-half-plane poles of  $|H_{BW}(j\omega)|^2$ .

To design a 10th-order Butterworth filter, we first compute the 20 poles of  $|H_{BW}(j\omega)|^2$ :

>> N=10; poles = roots([(1j\*omega\_c)^(-2\*N),zeros(1,2\*N-1),1]);

The find command is a powerful and useful function that returns the indices of a vector's nonzero elements. Combined with relational operators, the find command allows us to extract the 10 left-half-plane roots that correspond to the poles of our Butterworth filter.

>> BW\_poles = poles(find(real(poles)<0));</pre>

To compute the magnitude response, these roots are converted to coefficient vector A.


```
>> A = poly(BW_poles); A = A/A(end); Hmag_BW = abs(CH4MP1(B,A,f*2*pi));
```

```
>> plot(f,abs(f*2*pi)<=omega_c,'k-',f,Hmag_BW,'k--');</pre>
```

```
>> axis([0 20000 -0.05 1.05]); xlabel('f [Hz]'); ylabel('|H(j2\pi f)|');
```

```
>> legend('Ideal', 'Tenth-order Butterworth', 'location', 'best');
```

The magnitude response plot of the Butterworth filter is shown in Fig. 4.66. The Butterworth response closely approximates the brick-wall function and provides excellent filter characteristics: flat passband, rapid transition to the stopband, and excellent stopband attenuation (>40 dB at 5 kHz).

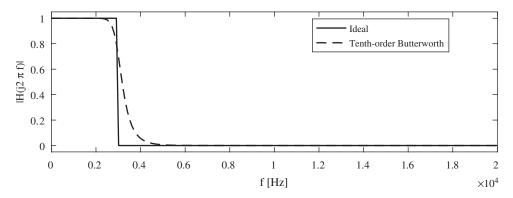

**Figure 4.66** Magnitude response  $|H_{BW}(j2\pi f)|$  of a tenth-order Butterworth filter.

# 4.12-3 Using Cascaded Second-Order Sections for Butterworth Filter Realization

For our *RC* filters, realization preceded design. For our Butterworth filter, however, design has preceded realization. For our Butterworth filter to be useful, we must be able to implement it.

Since the transfer function  $H_{BW}(s)$  is known, the differential equation is also known. Therefore, it is possible to try to implement the design by using op-amp integrators, summers, and scalar multipliers. Unfortunately, this approach will not work well. To understand why, consider the denominator coefficients  $a_0 = 1.766 \times 10^{-43}$  and  $a_{10} = 1$ . The smallest coefficient is 43 orders of magnitude smaller than the largest coefficient! It is practically impossible to accurately realize such a broad range in scale values. To understand this, skeptics should try to find realistic resistors such that  $R_f/R = 1.766 \times 10^{-43}$ . Additionally, small component variations will cause large changes in actual pole location.

A better approach is to cascade five second-order sections, where each section implements one complex conjugate pair of poles. By pairing poles in complex conjugate pairs, each of the resulting second-order sections has real coefficients. With this approach, the smallest coefficients are only about nine orders of magnitude smaller than the largest coefficients. Furthermore, pole placement is typically less sensitive to component variations for cascaded structures.

The Sallen–Key circuit shown in Fig. 4.67 provides a good way to realize a pair of complex-conjugate poles.<sup>†</sup> The transfer function of this circuit is

$$H_{\rm SK}(s) = \frac{\frac{1}{R_1 R_2 C_1 C_2}}{s^2 + \left(\frac{1}{R_1 C_1} + \frac{1}{R_2 C_1}\right)s + \frac{1}{R_1 R_2 C_1 C_2}} = \frac{\omega_0^2}{s^2 + \left(\frac{\omega_0}{Q}\right)s + \omega_0^2}$$

Geometrically,  $\omega_0$  is the distance from the origin to the poles and  $Q = 1/2\cos\psi$ , where  $\psi$  is the angle between the negative real axis and the pole. Termed the "quality factor" of a circuit, Q

<sup>&</sup>lt;sup>†</sup> A more general version of the Sallen–Key circuit has a resistor  $R_a$  from the negative terminal to ground and a resistor  $R_b$  between the negative terminal and the output. In Fig. 4.67,  $R_a = \infty$  and  $R_b = 0$ .

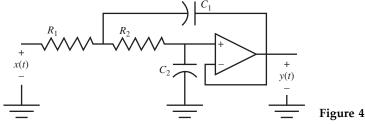


Figure 4.67 Sallen–Key filter stage.

provides a measure of the peakedness of the response. High-Q filters have poles close to the  $\omega$  axis, which boost the magnitude response near those frequencies.

Although many ways exist to determine suitable component values, a simple method is to assign  $R_1$  a realistic value and then let  $R_2 = R_1$ ,  $C_1 = 2Q/\omega_0 R_1$ , and  $C_2 = 1/2Q\omega_0 R_2$ . Butterworth poles are a distance  $\omega_c$  from the origin, so  $\omega_0 = \omega_c$ . For our 10th-order Butterworth filter, the angles  $\psi$  are regularly spaced at 9, 27, 45, 63, and 81 degrees. MATLAB program CH4MP2 automates the task of computing component values and magnitude responses for each stage.

```
% CH4MP2.m : Chapter 4, MATLAB Program 2
% Script M-file computes Sallen-Key component values and magnitude
\% responses for each of the five cascaded second-order filter sections.
omega_0 = 3000*2*pi; % Filter cut-off frequency
psi = [9 27 45 63 81]*pi/180; % Butterworth pole angles
f = linspace(0,6000,200); % Frequency range for magnitude response calculations
Hmag_SK = zeros(5,200); % Pre-allocate array for magnitude responses
for stage = 1:5,
    Q = 1/(2*cos(psi(stage))); % Compute Q for current stage
    % Compute and display filter components to the screen:
   disp(['Stage ',num2str(stage),...
            ' (Q = ',num2str(Q),...
            '): R1 = R2 = ',num2str(56000),...
            ', C1 = ',num2str(2*Q/(omega_0*56000)),...
            ', C2 = ',num2str(1/(2*Q*omega_0*56000))]);
    B = omega_0^2; A = [1 omega_0/Q omega_0^2]; % Compute filter coefficients
    Hmag_SK(stage,:) = abs(CH4MP1(B,A,2*pi*f)); % Compute magnitude response
end
plot(f,Hmag_SK,'k',f,prod(Hmag_SK),'k:')
xlabel('f [Hz]'); ylabel('Magnitude Response')
```

The disp command displays a character string to the screen. Character strings must be enclosed in single quotation marks. The num2str command converts numbers to character strings and facilitates the formatted display of information. The prod command multiplies along the columns of a matrix; it computes the total magnitude response as the product of the magnitude responses of the five stages.

Executing the program produces the following output:

```
>> CH4MP2
Stage 1 (Q = 0.50623): R1 = R2 = 56000, C1 = 9.5916e-10, C2 = 9.3569e-10
Stage 2 (Q = 0.56116): R1 = R2 = 56000, C1 = 1.0632e-09, C2 = 8.441e-10
Stage 3 (Q = 0.70711): R1 = R2 = 56000, C1 = 1.3398e-09, C2 = 6.6988e-10
Stage 4 (Q = 1.1013): R1 = R2 = 56000, C1 = 2.0867e-09, C2 = 4.3009e-10
Stage 5 (Q = 3.1962): R1 = R2 = 56000, C1 = 6.0559e-09, C2 = 1.482e-10
```

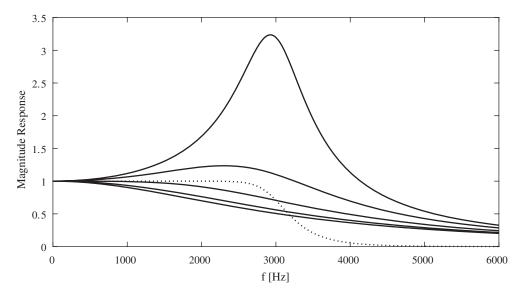


Figure 4.68 Magnitude responses for Sallen-Key filter stages.

Since all the component values are practical, this filter is possible to implement. Figure 4.68 displays the magnitude responses for all five stages (solid lines). The total response (dotted line) confirms a 10th-order Butterworth response. Stage 5, which has the largest Q and implements the pair of conjugate poles nearest the  $\omega$  axis, is the most peaked response. Stage 1, which has the smallest Q and implements the pair of conjugate poles furthest from the  $\omega$  axis, is the least peaked response. In practice, it is best to order high-Q stages last; this reduces the risk that the high gains will saturate the filter hardware.

## 4.12-4 Chebyshev Filters

Like an order-*N* Butterworth lowpass filter (LPF), an order-*N* Chebyshev LPF is an all-pole filter that possesses many desirable characteristics. Compared with an equal-order Butterworth filter, the Chebyshev filter achieves better stopband attenuation and reduced transition bandwidth by allowing an adjustable amount of ripple within the passband.

The squared magnitude response of a Chebyshev filter is

$$|H_{\rm C}(j\omega)|^2 = \frac{1}{1 + \epsilon^2 C_N^2(\omega/\omega_c)}$$

where  $\epsilon$  controls the passband ripple,  $C_N(\omega/\omega_c)$  is a degree-N Chebyshev polynomial, and  $\omega_c$  is the radian cutoff frequency. Several characteristics of Chebyshev LPFs are noteworthy:

• An order-*N* Chebyshev LPF is equi-ripple in the passband  $(|\omega| \le \omega_c)$ , has a total of *N* maxima and minima over  $(0 \le \omega \le \omega_c)$ , and is monotonic decreasing in the stopband  $(|\omega| > \omega_c)$ .

#### 464 CHAPTER 4 CONTINUOUS-TIME SYSTEM ANALYSIS

- In the passband, the maximum gain is 1 and the minimum gain is  $1/\sqrt{1+\epsilon^2}$ . For odd-valued N, |H(i0)| = 1. For even-valued N,  $|H_C(i0)| = 1/\sqrt{1+\epsilon^2}$ .
- Ripple is controlled by setting  $\epsilon = \sqrt{10^{R/10} 1}$ , where *R* is the allowable passband ripple expressed in decibels. Reducing  $\epsilon$  adversely affects filter performance (see Prob. 4.12-10).
- Unlike Butterworth filters, the cutoff frequency  $\omega_c$  rarely specifies the 3 dB point. For  $\epsilon \neq 1$ ,  $|H_{\rm C}(j\omega_c)|^2 = 1/(1+\epsilon^2) \neq 0.5$ . The cutoff frequency  $\omega_c$  simply indicates the frequency after which  $|H_{\rm C}(j\omega)| < 1/\sqrt{1+\epsilon^2}$ .

The Chebyshev polynomial  $C_N(x)$  is defined as

$$C_N(x) = \cos[N\cos^{-1}(x)] = \cosh[N\cosh^{-1}(x)]$$

In this form, it is difficult to verify that  $C_N(x)$  is a degree-N polynomial in x. A recursive form of  $C_N(x)$  makes this fact more clear (see Prob. 4.12-13).

$$C_N(x) = 2xC_{N-1}(x) - C_{N-2}(x)$$

With  $C_0(x) = 1$  and  $C_1(x) = x$ , the recursive form shows that any  $C_N$  is a linear combination of degree-N polynomials and is therefore a degree-N polynomial itself. For  $N \ge 2$ , MATLAB program CH4MP3 generates the (N + 1) coefficients of Chebyshev polynomial  $C_N(x)$ .

```
function [C_N] = CH4MP3(N);
% CH4MP3.m : Chapter 4, MATLAB Program 3
% Function M-file computes Chebyshev polynomial coefficients
% using the recursion relation C_N(x) = 2xC_{N-1}(x) - C_{N-2}(x)
           N = degree of Chebyshev polynomial
% INPUTS:
% OUTPUTS: C_N = vector of Chebyshev polynomial coefficients
C_Nm2 = 1; C_Nm1 = [1 0]; % Initial polynomial coefficients:
for t = 2:N;
   C_N = 2*conv([1 0], C_Nm1) - [zeros(1, length(C_Nm1) - length(C_Nm2)+1), C_Nm2];
    C_Nm2 = C_Nm1; C_Nm1 = C_N;
```

```
end
```

```
As examples, consider C_2(x) = 2xC_1(x) - C_0(x) = 2x(x) - 1 = 2x^2 - 1 and C_3(x) = 2xC_2(x) - 1
C_1(x) = 2x(2x^2 - 1) - x = 4x^3 - 3x. CH4MP3 easily confirms these cases.
```

```
>> CH4MP3(2)
   ans = 2
               0
                    -1
>> CH4MP3(3)
                   -3
   ans = 4
               0
                          0
```

Since  $C_N(\omega/\omega_c)$  is a degree-N polynomial,  $|H_C(j\omega)|^2$  is an all-pole rational function with 2N finite poles. Similar to the Butterworth case, the N poles specifying a causal and stable Chebyshev filter can be found by selecting the N left-half-plane roots of  $1 + \epsilon^2 C_N^2[s/(j\omega_c)]$ .

Root locations and dc gain are sufficient to specify a Chebyshev filter for a given N and  $\epsilon$ . To demonstrate, consider the design of an order-8 Chebyshev filter with cutoff frequency  $f_c = 1 \text{ kHz}$ and allowable passband ripple R = 1 dB. First, filter parameters are specified.

```
>> omega_c = 2*pi*1000; R = 1; N = 8;
>> epsilon = sqrt(10^(R/10)-1);
```

The coefficients of  $C_N[s/(j\omega_c)]$  are obtained with the help of CH4MP3, and then the coefficients of  $[1 + \epsilon^2 C_N^2(s/(j\omega_c))]$  are computed by using convolution to perform polynomial multiplication.

```
>> CN = CH4MP3(N).*((1/(1j*omega_c)).^[N:-1:0]);
>> CP = epsilon^2*conv(CN,CN); CP(end) = CP(end)+1;
```

Next, the polynomial roots are found, and the left-half-plane poles are retained and plotted.

```
>> poles = roots(CP); i = find(real(poles)<0); C_poles = poles(i);
>> plot(real(C_poles),imag(C_poles),'kx'); axis equal;
>> axis(omega_c*[-1.1 1.1 -1.1 1.1]);
>> xlabel('Real'); ylabel('Imaginary');
```

As shown in Fig. 4.69, the roots of a Chebyshev filter lie on an ellipse<sup>†</sup> (see Prob. 4.12-14).

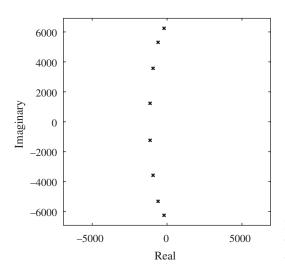


Figure 4.69 Pole-zero plot for an order-8 Chebyshev LPF with  $f_c = 1$  kHz and R = 1 dB.

To compute the filter's magnitude response, the poles are expanded into a polynomial, the dc gain is set based on the even value of *N*, and CH4MP1 is used.


```
>> A = poly(C_poles); B = A(end)/sqrt(1+epsilon^2);
```

```
>> omega = linspace(0,2*pi*2000,2001); H_C = CH4MP1(B,A,omega);
```

```
>> plot(omega/2/pi,abs(H_C),'k'); axis([0 2000 0 1.1]);
```

```
>> xlabel('f [Hz]'); ylabel('|H_C(j2\pi f)|');
```

<sup>&</sup>lt;sup>†</sup> E. A. Guillemin demonstrates a wonderful relationship between the Chebyshev ellipse and the Butterworth circle in his book *Synthesis of Passive Networks* (Wiley, New York, 1957).

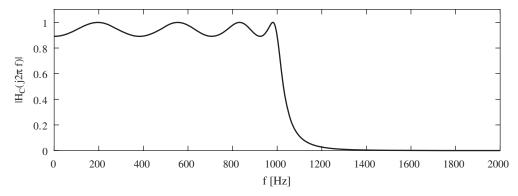

**Figure 4.70** Magnitude responses for an order-8 Chebyshev LPF with  $f_c = 1$  kHz and R = 1 dB.

As seen in Fig. 4.70, the magnitude response exhibits correct Chebyshev filter characteristics: passband ripples are equal in height and never exceed R = 1 dB; there are a total of N = 8 maxima and minima in the passband; and the gain rapidly and monotonically decreases after the cutoff frequency of  $f_c = 1$  kHz.

For higher-order filters, polynomial rooting may not provide reliable results. Fortunately, Chebyshev roots can also be determined analytically. For

$$\phi_k = \frac{2k+1}{2N}\pi$$
 and  $\xi = \frac{1}{N}\sinh^{-1}\left(\frac{1}{\epsilon}\right)$ 

the Chebyshev poles are

$$p_k = \omega_c \sinh(\xi) \sin(\phi_k) + j\omega_c \cosh(\xi) \cos(\phi_k)$$

Continuing the same example, the poles are recomputed and again plotted. The result is identical to Fig. 4.69.

```
>> k = [1:N]; xi = 1/N*asinh(1/epsilon); phi = (k*2-1)/(2*N)*pi;
>> C_poles = omega_c*(-sinh(xi)*sin(phi)+1j*cosh(xi)*cos(phi));
>> plot(real(C_poles),imag(C_poles),'kx'); axis equal;
>> axis(omega_c*[-1.1 1.1 -1.1 1.1]);
>> xlabel('Real'); ylabel('Imaginary');
```

As in the case of high-order Butterworth filters, a cascade of second-order filter sections facilitates practical implementation of Chebyshev filters. Problems 4.12-5 and 4.12-8 use second-order Sallen–Key circuit stages to investigate such implementations.

# 4.13 SUMMARY

This chapter discusses analysis of LTIC (linear, time-invariant, continuous-time) systems by the Laplace transform, which transforms integro-differential equations of such systems into algebraic

equations. Therefore solving these integro-differential equations reduces to solving algebraic equations. The Laplace transform method cannot be used for time-varying-parameter systems or for nonlinear systems in general.

The transfer function H(s) of an LTIC system is the Laplace transform of its impulse response. It may also be defined as a ratio of the Laplace transform of the output to the Laplace transform of the input when all initial conditions are zero (system in zero state). If X(s) is the Laplace transform of the input x(t) and Y(s) is the Laplace transform of the corresponding output y(t)(when all initial conditions are zero), then Y(s) = X(s)H(s). For an LTIC system described by an *N*th-order differential equation Q(D)y(t) = P(D)x(t), the transfer function H(s) = P(s)/Q(s). Like the impulse response h(t), the transfer function H(s) is also an external description of the system.

Electrical circuit analysis can also be carried out by using a transformed circuit method, in which all signals (voltages and currents) are represented by their Laplace transforms, all elements by their impedances (or admittances), and initial conditions by their equivalent sources (initial condition generators). In this method, a network can be analyzed as if it were a resistive circuit.

Large systems can be depicted by suitably interconnected subsystems represented by blocks. Each subsystem, being a smaller system, can be readily analyzed and represented by its input–output relationship, such as its transfer function. Analysis of large systems can be carried out with the knowledge of input–output relationships of its subsystems and the nature of interconnection of various subsystems.

LTIC systems can be realized by scalar multipliers, adders, and integrators. A given transfer function can be synthesized in many different ways, such as canonic, cascade, and parallel. Moreover, every realization has a transpose, which also has the same transfer function. In practice, all the building blocks (scalar multipliers, adders, and integrators) can be obtained from operational amplifiers.

The system response to an everlasting exponential  $e^{st}$  is also an everlasting exponential  $H(s)e^{st}$ . Consequently, the system response to an everlasting exponential  $e^{j\omega t}$  is  $H(j\omega)e^{j\omega t}$ . Hence,  $H(j\omega)$  is the frequency response of the system. For a sinusoidal input of unit amplitude and having frequency  $\omega$ , the system response is also a sinusoid of the same frequency ( $\omega$ ) with amplitude  $|H(j\omega)|$ , and its phase is shifted by  $\angle H(j\omega)$  with respect to the input sinusoid. For this reason  $|H(j\omega)|$  is called the amplitude response (gain) and  $\angle H(j\omega)$  is called the phase response of the system. The general nature of the filtering characteristics of a system can be quickly determined from a knowledge of the location of poles and zeros of the system transfer function.

Most of the input signals and practical systems are causal. Consequently we are required most of the time to deal with causal signals. When all signals must be causal, the Laplace transform analysis is greatly simplified; the region of convergence of a signal becomes irrelevant to the analysis process. This special case of the Laplace transform (which is restricted to causal signals) is called the unilateral Laplace transform. Much of the chapter deals with this variety of Laplace transform. Section 4.11 discusses the general Laplace transform (the bilateral Laplace transform), which can handle causal and noncausal signals and systems. In the bilateral transform, the inverse transform of X(s) is not unique but depends on the region of convergence of X(s). Thus, the region of convergence plays a very crucial role in the bilateral Laplace transform.

### 468 CHAPTER 4 CONTINUOUS-TIME SYSTEM ANALYSIS

## REFERENCES

- 1. Lathi, B. P. Signal Processing and Linear Systems, 1st ed. Oxford University Press, New York, 1998.
- 2. Doetsch, G. Introduction to the Theory and Applications of the Laplace Transformation with a Table of Laplace Transformations. Springer-Verlag, New York, 1974.
- 3. LePage, W. R. *Complex Variables and the Laplace Transforms for Engineers*. McGraw-Hill, New York, 1961.
- Durant, Will, and Ariel Durant. The Age of Napoleon, Part XI in The Story of Civilization Series. Simon & Schuster, New York, 1975.
- 5. Bell, E. T. Men of Mathematics. Simon & Schuster, New York, 1937.
- Nahin, P. J. "Oliver Heaviside: Genius and Curmudgeon." *IEEE Spectrum*, vol. 20, pp. 63–69, July 1983.
- 7. Berkey, D. Calculus, 2nd ed. Saunders, Philadelphia, 1988.
- 8. Encyclopaedia Britannica. Micropaedia IV, 15th ed., p. 981, Chicago, 1982.
- 9. Churchill, R. V. Operational Mathematics, 2nd ed. McGraw-Hill, New York, 1958.
- 10. Truxal, J. G. The Age of Electronic Messages. McGraw-Hill, New York, 1990.
- 11. Van Valkenberg, M. Analog Filter Design. Oxford University Press, New York, 1982.

# PROBLEMS

- **4.1-1** By direct integration [Eq. (4.1)] find the Laplace transforms and the region of convergence of the following functions:
  - (a) u(t) u(t-1)
  - (b)  $te^{-t}u(t)$

(c) 
$$t \cos \omega_0 t u(t)$$

- (d)  $(e^{2t} 2e^{-t})u(t)$
- (e)  $\cos \omega_1 t \cos \omega_2 t u(t)$
- (f)  $\cosh(at)u(t)$
- (g)  $\sinh(at)u(t)$
- (h)  $e^{-2t}\cos(5t+\theta)u(t)$
- **4.1-2** By direct integration [Eq. (4.1)] find the Laplace transforms and the region of convergence of the following functions:

(a) 
$$e^{-2t}u(t-5) + \delta(t-1)$$

(b) 
$$\pi e^{3t}u(t+5) - \delta(2t)$$

(c) 
$$\sum_{k=0}^{\infty} \delta(t-kT), T > 0$$

- **4.1-3** By direct integration find the Laplace transforms of the signals shown in Fig. P4.1-3.
- **4.1-4** Find the inverse (unilateral) Laplace transforms of the following functions:

(a) 
$$\frac{2s+5}{s^2+5s+6}$$
  
(b) 
$$\frac{3s+5}{s^2+4s+13}$$
  
(c) 
$$\frac{(s+1)^2}{s^2-s-6}$$
  
(d) 
$$\frac{5}{s^2(s+2)}$$


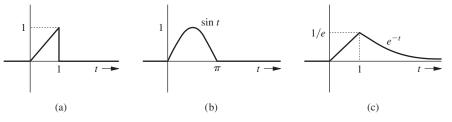


Figure P4.1-3

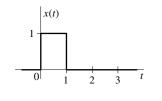

(e) 
$$\frac{2s+1}{(s+1)(s^2+2s+2)}$$
  
(f) 
$$\frac{s+2}{s(s+1)^2}$$
  
(g) 
$$\frac{1}{(s+1)(s+2)^4}$$
  
(h) 
$$\frac{s+1}{s(s+2)^2(s^2+4s+5)}$$

(i) 
$$\frac{s^3}{(s+1)^2(s^2+2s+5)}$$

- 4.2-1 Suppose a CT signal x(t) = 2[u(t-2) - u(t+1)]has a transform X(s).
  - (a) If  $Y_a(s) = e^{-5s} sX(s+\frac{1}{2})$ , determine and sketch the corresponding signal  $y_a(t)$ .
  - (b) If  $Y_b(s) = 2^{-s}sX(s-2)$ , determine and sketch the corresponding signal  $y_{b}(t)$ .
- 4.2-2 Find the Laplace transforms of the following functions using only Table 4.1 and the time-shifting property (if needed) of the unilateral Laplace transform:
  - (a) u(t) u(t-1)
  - (b)  $e^{-(t-\tau)}u(t-\tau)$
  - (c)  $e^{-(t-\tau)}u(t)$
  - (d)  $e^{-t}u(t-\tau)$
  - (e)  $te^{-t}u(t-\tau)$
  - (f)  $\sin[\omega_0(t-\tau)]u(t-\tau)$
  - (g)  $\sin[\omega_0(t-\tau)]u(t)$
  - (h)  $\sin \omega_0 t u(t-\tau)$
  - (i)  $t\sin(t)u(t)$
  - (j)  $(1-t)\cos(t-1)u(t-1)$
- 4.2-3 Using only Table 4.1 and the time-shifting property, determine the Laplace transform of the signals in Fig. P4.1-3. [Hint: See Sec. 1.4 for discussion of expressing such signals analytically.]
- 4.2-4 Prove the frequency-differentiation property,  $-tx(t) \iff \frac{d}{ds}X(s)$ . This property holds for both the unilateral and bilateral Laplace transforms.
- 4.2-5 Consider the signal  $x(t) = te^{-2(t-3)}u(t-2)$ .
  - (a) Determine the *unilateral* Laplace transform  $X_{\mathrm{u}}(s) = \mathcal{L}_{\mathrm{u}}\{x(t)\}.$

y(t)1 0 Figure P4.2-6

- (b) Determine the *bilateral* Laplace transform  $X(s) = \mathcal{L}\{x(t)\}.$
- 4.2-6 Consider the signals x(t) and y(t), as shown in Fig. P4.2-6.
  - (a) Using the definition, compute X(s), the bilateral Laplace transform of x(t).
  - (b) Using Laplace transform properties, express Y(s), the bilateral Laplace transform of y(t), as a function of X(s), the bilateral Laplace transform of x(t). Simplify as much as possible without substituting your answer from part (a).
- Find the inverse Laplace transforms of the 4.2-7 following functions:

(a) 
$$\frac{(2s+5)e^{-2s}}{s^2+5s+6}$$
  
(b) 
$$\frac{se^{-3s}+2}{s^2+2s+2}e^{-(s-1)}+3$$


(c) 
$$\frac{e^{-s}+5}{s^2-2s+5}$$
  
(d)  $\frac{e^{-s}+e^{-2s}+1}{s^2+2s+2}$ 

d) 
$$\frac{1}{s^2 + 3s + 2}$$

- 4.2-8 Using ROC  $\sigma > 0$ , determine the inverse Laplace transform of  $X(s) = s^{-1} \frac{d}{ds} \left( \frac{e^{-2s}}{s} \right)$ .
- 4.2-9 The Laplace transform of a causal periodic signal can be determined from the knowledge of the Laplace transform of its first cycle (period).
  - (a) If the Laplace transform of x(t) in Fig. P4.2-9a is X(s), then show that G(s), the Laplace transform of g(t)(Fig. P4.2-9b), is

$$G(s) = \frac{X(s)}{1 - e^{-sT_0}} \qquad \text{Re}\,s > 0$$

- (b) Use this result to find the Laplace transform of the signal p(t) illustrated in Fig. P4.2-9c.
- 4.2-10 Starting only with the fact that  $\delta(t) \iff 1$ , build pairs 2 through 10b in Table 4.1, using various properties of the Laplace transform.

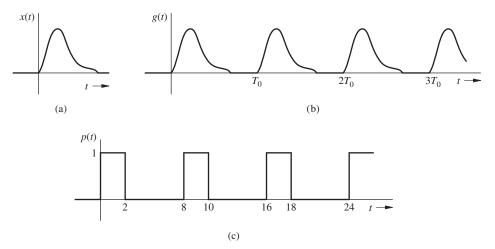

### Figure P4.2-9

- **4.2-11** (a) Find the Laplace transform of the pulses in Fig. 4.2 by using only the time-different iation property, the time-shifting property, and the fact that  $\delta(t) \iff 1$ .
  - (b) In Ex. 4.9, the Laplace transform of x(t) is found by finding the Laplace transform of  $d^2x/dt^2$ . Find the Laplace transform of x(t) in that example by finding the Laplace transform of dx/dt and using Table 4.1, if necessary.
- **4.2-12** Determine the inverse unilateral Laplace transform of

$$X(s) = \frac{1}{e^{s+3}} \frac{s^2}{(s+1)(s+2)}$$

- **4.2-13** Since 13 is such a lucky number, determine the inverse Laplace transform of  $X(s) = 1/(s+1)^{13}$  given region of convergence  $\sigma > -1$ . [*Hint:* What is the *n*th derivative of 1/(s+a)?]
- **4.2-14** It is difficult to compute the Laplace transform X(s) of signal

$$x(t) = \frac{1}{t}u(t)$$

by using direct integration. Instead, properties provide a simpler method.

- (a) Use Laplace transform properties to express the Laplace transform of *tx*(*t*) in terms of the unknown quantity *X*(*s*).
- (b) Use the definition to determine the Laplace transform of y(t) = tx(t).

- (c) Solve for X(s) by using the two pieces from ()(a) and ()(b). Simplify your answer.
- **4.3-1** Use the Laplace transform to solve the following differential equations:
  - (a)  $(D^2 + 3D + 2)y(t) = Dx(t)$  if  $y(0^-) = \dot{y}(0^-) = 0$  and x(t) = u(t)
  - (b)  $(D^2 + 4D + 4)y(t) = (D + 1)x(t)$  if  $y(0^-) = 2$ ,  $\dot{y}(0^-) = 1$  and  $x(t) = e^{-t}u(t)$
  - (c)  $(D^2 + 6D + 25)y(t) = (D+2)x(t)$  if  $y(0^-) = \dot{y}(0^-) = 1$  and x(t) = 25u(t)
- **4.3-2** Solve the differential equations in Prob. 4.3-1 using the Laplace transform. In each case determine the zero-input and zero-state components of the solution.
- **4.3-3** Consider a causal LTIC system described by the differential equation

$$2\dot{y}(t) + 6y(t) = \dot{x}(t) - 4x(t)$$

- (a) Using transform-domain techniques, determine the ZIR  $y_{zir}(t)$  if  $y(0^-) = -3$ .
- (b) Using transform-domain techniques, determine the ZSR  $y_{zsr}(t)$  to the input  $x(t) = e\delta(t \pi)$ .
- **4.3-4** Consider a causal LTIC system described by the differential equation

$$\ddot{y}(t) + 3\dot{y}(t) + 2y(t) = 2\dot{x}(t) - x(t)$$

- (a) Using transform-domain techniques, determine the ZIR  $y_{zir}(t)$  if  $\dot{y}(0^-) = 2$  and  $y(0^-) = -3$ .
- (b) Using transform-domain techniques, determine the ZSR  $y_{zsr}(t)$  to the input x(t) = u(t).
- **4.3-5** Solve the following simultaneous differential equations using the Laplace transform, assuming all initial conditions to be zero and the input x(t) = u(t):
  - (a)  $(D+3)y_1(t) 2y_2(t) = x(t)$ -2y<sub>1</sub>(t) + (2D+4)y<sub>2</sub>(t) = 0
  - (b)  $(D+2)y_1(t) (D+1)y_2(t) = 0$  $-(D+1)y_1(t) + (2D+1)y_2(t) = x(t)$

Determine the transfer functions relating outputs  $y_1(t)$  and  $y_2(t)$  to the input x(t).

- **4.3-6** Consider a causal LTIC system described by  $\dot{y}(t) + 2y(t) = \dot{x}(t)$ .
  - (a) Determine the transfer function *H*(*s*) for this system.
  - (b) Using your result from part (a), determine the impulse response h(t) for this system.
  - (c) Using Laplace transform techniques, determine the output y(t) if the input is  $x(t) = e^{-t}u(t)$  and  $y(0^-) = \sqrt{2}$ .
- **4.3-7** Repeat Prob. 4.3-6 for a causal LTIC system described by  $3y(t) + \dot{y}(t) + \dot{x}(t) = 0$ .
- **4.3-8** For the circuit in Fig. P4.3-8, the switch is in the open position for a long time before t = 0, when it is closed instantaneously.
  - (a) Write loop equations (in time domain) for  $t \ge 0$ .
  - (b) Solve for  $y_1(t)$  and  $y_2(t)$  by taking the Laplace transform of loop equations found in part (a).

**4.3-9** For each of the systems described by the following differential equations, find the system transfer function:

(a) 
$$\frac{d^2y(t)}{dt^2} + 11\frac{dy(t)}{dt} + 24y(t) = 5\frac{dx(t)}{dt} + 3x(t)$$
  
(b)  $\frac{d^3y(t)}{dt^3} + 6\frac{d^2y(t)}{dt^2} - 11\frac{dy(t)}{dt} + 6y(t)$   
 $= 3\frac{d^2x(t)}{dt^2} + 7\frac{dx(t)}{dt} + 5x(t)$   
(c)  $\frac{d^4y(t)}{dt^4} + 4\frac{dy(t)}{dt} = 3\frac{dx(t)}{dt} + 2x(t)$   
(d)  $\frac{d^2y(t)}{dt^2} - y(t) = \frac{dx(t)}{dt} - x(t)$ 

**4.3-10** For each of the systems specified by the following transfer functions, find the differential equation relating the output y(t) to the input x(t), assuming that the systems are controllable and observable:

(a) 
$$H(s) = \frac{s+5}{s^2+3s+8}$$
  
(b)  $H(s) = \frac{s^2+3s+5}{s^3+8s^2+5s+7}$   
(c)  $H(s) = \frac{5s^2+7s+2}{s^2-2s+5}$ 

4.3-11 For a system with transfer function

$$H(s) = \frac{2s+3}{s^2+2s+5}$$

- (a) Find the (zero-state) response for inputs  $x_1(t) = 10u(t)$  and  $x_2(t) = u(t-5)$ .
- (b) For this system write the differential equation relating the output y(t) to the input x(t), assuming that the systems are controllable and observable.
- 4.3-12 For a system with transfer function

$$H(s) = \frac{s}{s^2 + 9}$$

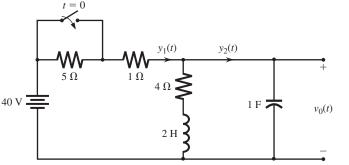


Figure P4.3-8

- (a) Find the (zero-state) response if the input  $x(t) = (1 - e^{-t})u(t)$
- (b) For this system write the differential equation relating the output y(t) to the input x(t), assuming that the systems are controllable and observable.
- **4.3-13** Consider a system with transfer function

$$H(s) = \frac{s+5}{s^2+5s+6}$$

Find the (zero-state) response for the following inputs:

- (a)  $x_a(t) = e^{-3t}u(t)$
- (b)  $x_{\rm b}(t) = e^{-4t}u(t)$
- (c)  $x_c(t) = e^{-4(t-5)}u(t-5)$ (d)  $x_d(t) = e^{-4(t-5)}u(t)$
- (e)  $x_e(t) = e^{-4t}u(t-5)$

Assuming that the system H(s) is controllable and observable,

- (f) write the differential equation relating the output y(t) to the input x(t).
- 4.3-14 An LTI system has a step response given by  $s(t) = e^{-t}u(t) - e^{-2t}u(t)$ . Determine the output of this system y(t) given an input  $x(t) = \delta(t - \delta(t))$  $\pi$ ) – cos ( $\sqrt{3}$ )u(t).
- 4.3-15 For an LTIC system with zero initial conditions (system initially in zero state), if an input x(t)produces an output y(t), then using the Laplace transform, show the following:
  - (a) The input dx/dt produces an output dy/dt.
  - (b) The input  $\int_0^t x(\tau) d\tau$  produces an output  $\int_0^t y(\tau) d\tau$ . Hence, show that the unit step response of a system is an integral of the impulse response; that is,  $\int_0^t h(\tau) d\tau$ .
- Discuss asymptotic and BIBO stabilities for 4.3-16 the systems described by the following transfer functions, assuming that the systems are controllable and observable:

(a) 
$$\frac{(s+5)}{s^2+3s+2}$$


(b) 
$$\frac{s+s}{s^2(s+2)}$$

(c) 
$$\frac{s(s+2)}{s+5}$$


(d) 
$$\frac{s+5}{s(s+2)}$$

(e) 
$$\frac{s+5}{s^2-2s+3}$$


- 4.3-17 Repeat Prob. 4.3-16 for systems described by the following differential equations. Systems may be uncontrollable and/or unobservable.
  - (a)  $(D^2 + 3D + 2)y(t) = (D + 3)x(t)$
  - (b)  $(D^2 + 3D + 2)y(t) = (D+1)x(t)$
  - (c)  $(D^2 + D 2)y(t) = (D 1)x(t)$
  - (d)  $(D^2 3D + 2)y(t) = (D 1)x(t)$
- The circuit shown in Fig. P4.4-1 has system 4.4-1 function given by  $H(s) = \frac{1}{1+RCs}$ . Let R = 2 and C = 3 and use Laplace transform techniques to solve the following.
  - (a) Find the output y(t) given an initial capacitor voltage of  $y(0^-) = 3$  and an input x(t) =u(t).
  - (b) Given an input x(t) = u(t 3), determine the initial capacitor voltage  $y(0^{-})$  so that the output y(t) is 1 volt at t = 6 seconds.

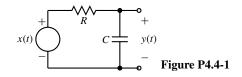

- 4.4-2 Consider the circuit shown in Fig. P4.4-2. Use Laplace transform techniques to solve the following.
  - (a) Determine the standard-form, constantcoefficient differential equation description of this circuit.
  - (b) Letting R = C = 1, determine the total response y(t) to input  $x(t) = 3e^{-t}u(t)$  and initial capacitor voltage of  $v_C(0^-) = 5$ .

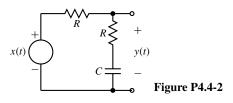


Find the zero-state response y(t) of the network 4.4-3 in Fig. P4.4-3 if the input voltage  $x(t) = te^{-t}u(t)$ . Find the transfer function relating the output Y(s) to the input X(s). From the transfer function, write the differential equation relating y(t)to x(t).

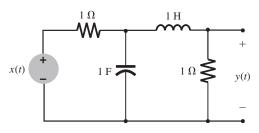

### Figure P4.4-3

**4.4-4** The switch in the circuit of Fig. P4.4-4 is closed for a long time and then opened instantaneously at t = 0. Find and sketch the current y(t).

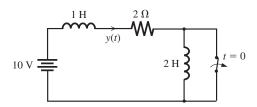

### Figure P4.4-4

**4.4-5** Find the current y(t) for the parallel resonant circuit in Fig. P4.4-5 if the input is: (a)  $x(t) = A \cos \omega_0 t u(t)$ (b)  $x(t) = A \sin \omega_0 t u(t)$ Assume all initial conditions to be zero and, in both cases,  $\omega_0^2 = 1/LC$ .

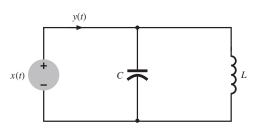


Figure P4.4-5


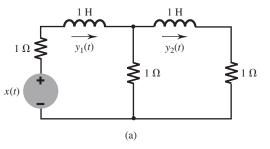


Figure P4.4-6

- **4.4-6** Find the loop currents  $y_1(t)$  and  $y_2(t)$  for  $t \ge 0$  in the circuit of Fig. P4.4-6a for the input x(t) in Fig. P4.4-6b.
- **4.4-7** For the network in Fig. P4.4-7, the switch is in a closed position for a long time before t = 0, when it is opened instantaneously. Find  $y_1(t)$  and  $v_s(t)$  for  $t \ge 0$ .

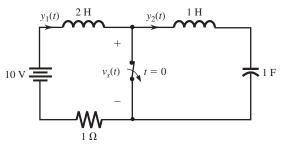


### Figure P4.4-7

- **4.4-8** Find the output voltage  $v_0(t)$  for  $t \ge 0$  for the circuit in Fig. P4.4-8, if the input x(t) = 100u(t). The system is in the zero state initially.
- **4.4-9** Find the output voltage y(t) for the network in Fig. P4.4-9 for the initial conditions  $i_L(0) = 1$  A and  $v_C(0) = 3$  V.
- **4.4-10** For the network in Fig. P4.4-10, the switch is in position *a* for a long time and then is moved to position *b* instantaneously at t = 0. Determine the current y(t) for t > 0.

**4.4-11** Consider the circuit of Fig. P4.4-11.

- (a) Using transform-domain techniques, determine the system's standard-form transfer function *H*(*s*).
- (b) Using transform-domain techniques and letting R = L = 1, determine the circuit's zero-state response  $y_{zsr}(t)$  to the input  $x(t) = e^{-2t}u(t-1)$ .

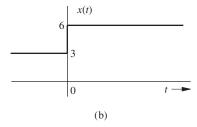


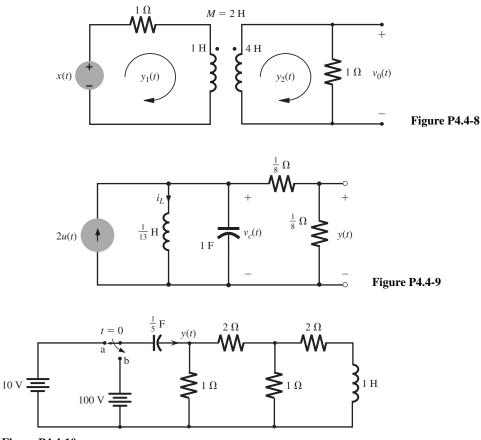


Figure P4.4-10

(c) Using transform-domain techniques and letting R = 2L = 1, determine the circuit's zero-state response  $y_{zsr}(t)$  to the input  $x(t) = e^{-2t}u(t-1)$ .

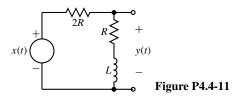

**4.4-12** Show that the transfer function that relates the output voltage y(t) to the input voltage x(t) for


the op-amp circuit in Fig. P4.4-12a is given by

$$H(s) = \frac{Ka}{s+a} \quad \text{where}$$
$$K = 1 + \frac{R_b}{R_a} \quad \text{and} \quad a = \frac{1}{RC}$$


and that the transfer function for the circuit in Fig. P4.4-12b is given by

$$H(s) = \frac{Ks}{s+a}$$

**4.4-13** For the second-order op-amp circuit in Fig. P4.4-13, show that the transfer function H(s) relating the output voltage y(t) to the input

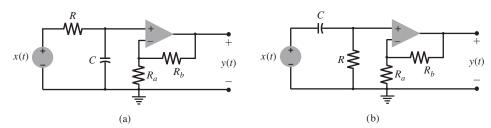



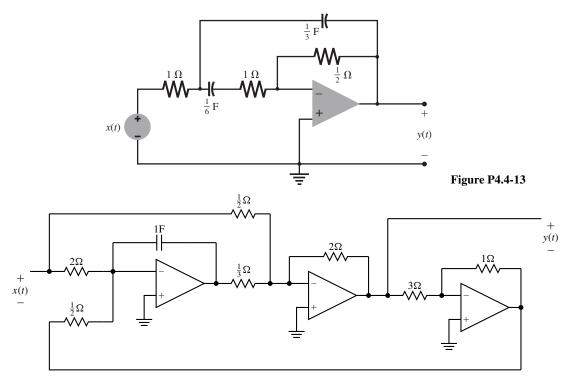


## Figure P4.4-14

voltage x(t) is given by


$$H(s) = \frac{-s}{s^2 + 8s + 12}$$

- **4.4-14** Consider the op-amp circuit of Fig. P4.4-14.
  - (a) Determine the standard-form transfer function H(s) of this system.
  - (b) Determine the standard-form constant coefficient linear differential equation description of this circuit.

- (c) Using transform-domain techniques, determine the circuit's zero-state response  $y_{zsr}(t)$  to the input  $x(t) = e^{2t}u(t+1)$ .
- (d) Using transform-domain techniques, determine the circuit's zero-input response  $y_{zir}(t)$  if the  $t = 0^-$  capacitor voltage (first op-amp output voltage) is 3 volts.
- **4.4-15** We desire the op-amp circuit of Fig. P4.4-15 to behave as  $\dot{y}(t) 1.5y(t) = -3\dot{x}(t) + 0.75x(t)$ .
  - (a) Determine resistors  $R_1$ ,  $R_2$ , and  $R_3$  so that the circuit's input–output behavior follows

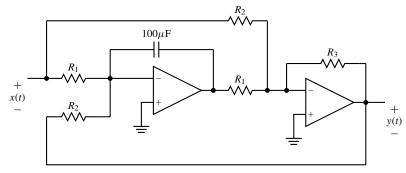



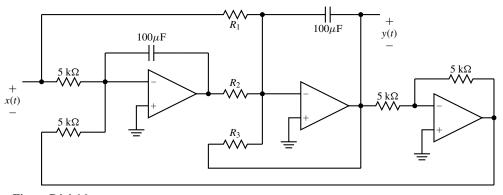



the desired differential equation of  $\dot{y}(t) - 1.5y(t) = -3\dot{x}(t) + 0.75x(t)$ .

- (b) Using transform-domain techniques, determine the circuit's zero-input response  $y_{zir}(t)$  if the t = 0 capacitor voltage (first op-amp output voltage) is 2 volts.
- (c) Using transform-domain techniques, determine the impulse response h(t) of this circuit.
- (d) Determine the circuit's zero-state response  $y_{zsr}(t)$  to the input x(t) = u(t-2).
- **4.4-16** We desire the op-amp circuit of Fig. P4.4-16 to behave as  $\int \int y(t) + \frac{2}{5} \int y(t) + \frac{1}{5}y(t) = \int \int x(t) \int x(t)$ 
  - (a) Determine the resistors  $R_1$ ,  $R_2$ , and  $R_3$  to produce the desired behavior.
  - (b) Using transform-domain techniques, determine the circuit's zero-input response y<sub>zir</sub>(t) if the t = 0 capacitor voltages (first two op-amp outputs) are each 1 volt.

**4.4-17** (a) Using the initial and final value theorems, find the initial and final value of the zero-state response of a system with the transfer function

$$H(s) = \frac{6s^2 + 3s + 10}{2s^2 + 6s + 5}$$

and input x(t) = u(t).

(b) Repeat part (a) for the input  $x(t) = e^{-t}u(t)$ .

(c) Find 
$$y(0^+)$$
 and  $y(\infty)$  if  $Y(s) = \frac{s^2 + 3s + 6}{s^2 + 3s + 2}$ 

- (d) Find  $y(0^+)$  and  $y(\infty)$  if  $y(0^+) = \frac{s^2 + 3s + 2}{s^2 + 3s + 2}$ . (d) Find  $y(0^+)$  and  $y(\infty)$  if  $Y(s) = \frac{s^3 + 4s^2 + 10s + 7}{s^2 + 2s + 3}$ .
- **4.5-1** Consider two LTIC systems. The first has transfer function  $H_1(s) = \frac{2s}{s+1}$ , and the second has transfer function  $H_2(s) = \frac{1}{se^{3(s-1)}}$ .

y(t)



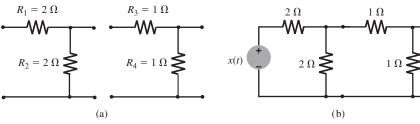


Figure P4.5-2

- (a) Determine the overall impulse response  $h_s(t)$  if the two systems are connected in series.
- (b) Determine the overall impulse response  $h_{\rm p}(t)$  if the two systems are connected in parallel.
- 4.5-2 Figure P4.5-2a shows two resistive ladder segments. The transfer function of each segment (ratio of output to input voltage) is 1/2. Figure P4.5-2b shows these two segments connected in cascade.
  - (a) Is the transfer function (ratio of output to input voltage) of this cascaded network (1/2)(1/2) = 1/4?
  - (b) If your answer is affirmative, verify the answer by direct computation of the transfer function. Does this computation confirm the earlier value 1/4? If not, why?
  - (c) Repeat the problem with R<sub>3</sub> = R<sub>4</sub> = 20 kΩ.
     Does this result suggest the answer to the problem in part (b)?
- **4.5-3** In communication channels, transmitted signal is propagated simultaneously by several paths of varying lengths. This causes the signal to reach the destination with varying time delays and varying gains. Such a system generally distorts the received signal. For error-free communication, it is necessary to undo this distortion as

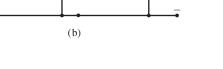

much as possible by using the system that is inverse of the channel model.

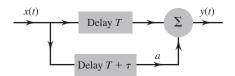



For simplicity, let us assume that a signal is propagated by two paths whose time delays differ by  $\tau$  seconds. The channel over the intended path has a delay of T seconds and unity gain. The signal over the unintended path has a delay of  $T + \tau$  seconds and gain *a*. Such a channel can be modeled, as shown in Fig. P4.5-3. Find the inverse system transfer function to correct the delay distortion and show that the inverse system can be realized by a feedback system. The inverse system should be causal to be realizable. [Hint: We want to correct only the distortion caused by the relative delay  $\tau$  seconds. For distortionless transmission, the signal may be delayed. What is important is to maintain the shape of x(t). Thus, a received signal of the form cx(t-T) is considered to be distortionless.]

**4.5-4** Discuss BIBO stability of the feedback systems depicted in Fig. P4.5-4. For the system in

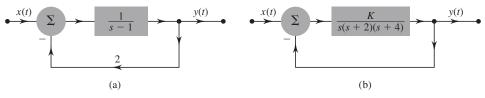


Figure P4.5-4

Fig. P4.5-4b, consider three cases: (a) K = 10, (b) K = 50, and (c) K = 48.

4.6-1 Realize

$$H(s) = \frac{s(s+2)}{(s+1)(s+3)(s+4)}$$

by canonic direct, series, and parallel forms.

- **4.6-2** Realize the transfer function in Prob. 4.6-1 by using the transposed form of the realizations found in Prob. 4.6-1.
- 4.6-3 Repeat Prob. 4.6-1 for (a)  $H(s) = \frac{3s(s+2)}{(s+1)(s^2+2s+2)}$ (b)  $H(s) = \frac{2s-4}{(s+2)(s^2+4)}$
- **4.6-4** Realize the transfer functions in Prob. 4.6-3 by using the transposed form of the realizations found in Prob. 4.6-3.
- 4.6-5 Repeat Prob. 4.6-1 for

$$H(s) = \frac{2s+3}{5s(s+2)^2(s+3)}$$

- **4.6-6** Realize the transfer function in Prob. 4.6-5 by using the transposed form of the realizations found in Prob. 4.6-5.
- **4.6-7** Repeat Prob. 4.6-1 for

$$H(s) = \frac{s(s+1)(s+2)}{(s+5)(s+6)(s+8)}$$

- **4.6-8** Realize the transfer function in Prob. 4.6-7 by using the transposed form of the realizations found in Prob. 4.6-7.
- 4.6-9 Repeat Prob. 4.6-1 for

$$H(s) = \frac{s^3}{(s+1)^2(s+2)(s+3)}$$

- **4.6-10** Realize the transfer function in Prob. 4.6-9 by using the transposed form of the realizations found in Prob. 4.6-9.
- **4.6-11** Repeat Prob. 4.6-1 for

$$H(s) = \frac{s^3}{(s+1)(s^2+4s+13)}$$

**4.6-12** Realize the transfer function in Prob. 4.6-11 by using the transposed form of the realizations found in Prob. 4.6-11.

- **4.6-13** Draw a TDFII block realization of a causal LTIC system with transfer function  $H(s) = \frac{(s-2j)(s+2j)}{(s-j)(s+2)(s+2)}$ . Give two reasons why TDFII tends to be a good structure.
- **4.6-14** Consider a causal LTIC system with transfer function  $H(s) = \frac{(s-2j)(s+2j)(s-3j)(s+3j)}{9(s+1)(s+2)(s+1-j)(s+1+j)}$ . (a) Realize H(s) using a single fourth-order real
  - (a) Realize H(s) using a single fourth-order real TDFII structure. Is this block realization unique? Explain.
  - (b) Realize H(s) using a cascade of secondorder real DFII structures. Is this block realization unique? Explain.
  - (c) Realize H(s) using a parallel connection of second-order real DFI structures. Is this block realization unique? Explain.
- 4.6-15 In this problem we show how a pair of complex conjugate poles may be realized by using a cascade of two first-order transfer functions and feedback. Show that the transfer functions of the block diagrams in Figs. P4.6-15a and P4.6-15b are:(a)

$$H_{a}(s) = \frac{1}{(s+a)^{2} + b^{2}}$$
$$= \frac{1}{s^{2} + 2as + (a^{2} + b^{2})}$$

(b)


$$H_{b}(s) = \frac{s+a}{(s+a)^{2}+b^{2}}$$
$$= \frac{s+a}{s^{2}+2as+(a^{2}+b^{2})}$$

Hence, show that the transfer function of the (c) block diagram in Fig. P4.6-15c is


$$H_{c}(s) = \frac{As + B}{(s+a)^{2} + b^{2}}$$
$$= \frac{As + B}{s^{2} + 2as + (a^{2} + b^{2})}$$

**4.6-16** Show op-amp realizations of the following transfer functions:

(a) 
$$\frac{-10}{s+5}$$
  
(b)  $\frac{10}{s+5}$   
(c)  $\frac{s+2}{s+5}$ 

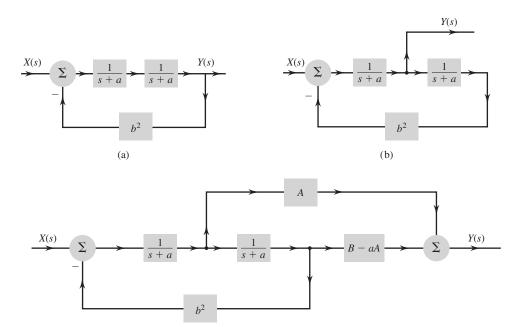

### Figure P4.6-15

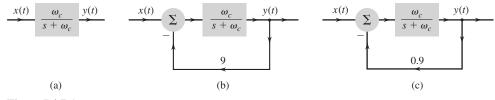

(c)



**4.6-17** Show two different op-amp circuit realizations of the transfer function

$$H(s) = \frac{s+2}{s+5} = 1 - \frac{3}{s+5}$$

**4.6-18** Show an op-amp canonic direct realization of the transfer function

$$H(s) = \frac{3s+7}{s^2+4s+10}$$

**4.6-19** Show an op-amp canonic direct realization of the transfer function

$$H(s) = \frac{s^2 + 5s + 2}{s^2 + 4s + 13}$$

**4.6-20** Consider a system described by a constantcoefficient linear differential equation as  $\frac{d}{dt}y(t)$   $+2y(t) = x(t) - 3\frac{d}{dt}x(t)$ . Draw an op-amp realization of this system if resistors and inductors are available but not capacitors. Would using inductors rather than capacitors in this circuit pose any problem? Explain.

- **4.7-1** Feedback can be used to increase (or decrease) the system bandwidth. Consider the system in Fig. P4.7-1a with transfer function  $G(s) = \omega_c/(s + \omega_c)$ .
  - (a) Show that the 3 dB bandwidth of this system is  $\omega_c$  and the dc gain is unity; that is, |H(j0)| = 1.
  - (b) To increase the bandwidth of this system, we use negative feedback with H(s) = 9, as depicted in Fig. P4.7-1b. Show that the 3 dB bandwidth of this system is  $10\omega_c$ . What is the dc gain?

- (c) To decrease the bandwidth of this system, we use positive feedback with H(s) = -0.9, as illustrated in Fig. P4.7-1c. Show that the 3 dB bandwidth of this system is  $\omega_c/10$ . What is the dc gain?
- (d) The system gain at dc times its 3 dB bandwidth is the gain-bandwidth product of a system. Show that this product is the same for all the three systems in Fig. P4.7-1. This result shows that if we increase the bandwidth, the gain decreases and vice versa.
- **4.8-1** Suppose an engineer builds a controllable, observable LTIC system with transfer function  $H(s) = \frac{s^2 + 4}{2s^2 + 4s + 4}.$ 
  - (a) By direct calculation, compute the magnitude response at frequencies ω = 0, 1, 2, 3, 5, 10, and ∞. Use these calculations to roughly sketch the magnitude response over 0 ≤ ω ≤ 10.
  - (b) To test the system, the engineer connects a signal generator to the system in hopes to measure the magnitude response using a standard oscilloscope. What type of signal should the engineer input into the system to make the measurements? How should the engineer make the measurements? Provide sufficient detail to fully justify your answers.
  - (c) Suppose the engineer accidentally constructs the system  $H^{-1}(s) = \frac{1}{H(s)} = \frac{2s^2+4s+4}{s^2+4}$ . What impact will this mistake have on his tests?
- **4.8-2** For an LTIC system described by the transfer function

$$H(s) = \frac{s+2}{s^2 + 5s + 4}$$

find the response to the following everlasting sinusoidal inputs:

- (a)  $5\cos(2t+30^\circ)$
- (b)  $10\sin(2t+45^\circ)$
- (c)  $10\cos(3t+40^\circ)$

Observe that these are everlasting sinusoids.

**4.8-3** For an LTIC system described by the transfer function

$$H(s) = \frac{s+3}{(s+2)^2}$$

find the steady-state system response to the following inputs:

- (a) 10u(t)
- (b)  $\cos(2t+60^\circ)u(t)$
- (c)  $\sin(3t 45^\circ)u(t)$
- (d)  $e^{j3t}u(t)$
- **4.8-4** For an allpass filter specified by the transfer function


$$H(s) = \frac{-(s-10)}{s+10}$$

find the system response to the following (everlasting) inputs:

- (a)  $e^{j\omega t}$
- (b)  $\cos(\omega t + \theta)$
- (c)  $\cos t$
- (d)  $\sin 2t$
- (e) cos 10*t*
- (f) cos 100t

Comment on the filter response.

- **4.8-5** The pole-zero plot of a second-order system H(s) is shown in Fig. P4.8-5. The dc response of this system is minus 1, H(j0) = -1.
  - (a) Letting  $H(s) = k(s^2 + b_1s + b_2)/(s^2 + a_1s + a_2)$ , determine the constants k,  $b_1$ ,  $b_2$ ,  $a_1$ , and  $a_2$ .
  - (b) What is the output y(t) of this system in response to the input x(t) = 4 + cos (t/2 + π/3)?

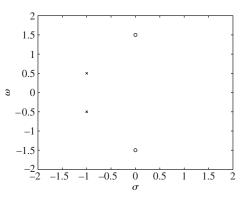

### Figure P4.8-5

- **4.8-6** Consider a CT system described by  $(D+1)(D+2){y(t)} = x(t-1)$ . Notice that this differential equation is in terms of x(t-1), not x(t)!
  - (a) Determine the output y(t) given input x(t) = 1.

- (b) Determine the output y(t) given input x(t) = cos(t).
- **4.8-7** An LTIC system has transfer function  $H(s) = \frac{4s}{s^2+2s+37} = \frac{4s}{(s+1+6j)(s+1-6j)}$ . Determine the steady-state output in response to input  $x(t) = \frac{1}{3}e^{j(6t+\pi/3)}u(6t+\pi/3)$ .
- **4.9-1** Suppose a real first-order lowpass system H(s) has unity gain in the passband, one finite pole at s = -2, and one finite zero at an unspecified location.
  - (a) Determine the location of the system zero so that the filter achieves 40 dB of stopband attenuation. Sketch the corresponding straight-line Bode approximation of the system magnitude response.
  - (b) Determine the location of the system zero so that the filter achieves 30 dB of stopband attenuation. Sketch the corresponding straight-line Bode approximation of the system magnitude response.
- **4.9-2** Repeat Prob. 4.9-1 for a highpass rather than a lowpass system.
- **4.9-3** Repeat Prob. 4.9-1 for a second-order system that has a pair of repeated poles and a pair of repeated zeros.
- **4.9-4** Sketch Bode plots for the following transfer functions:

(a) 
$$\frac{s(s+100)}{(s+2)(s+20)}$$
  
(b)  $\frac{(s+10)(s+20)}{s^2(s+100)}$ 

(c) 
$$\frac{(s+10)(s+200)}{(s+20)^2(s+1000)}$$

(a) 
$$\frac{s^{-1}}{(s+1)(s^{2}+4s+16)}$$
  
(b) 
$$\frac{s}{(s+1)(s^{2}+14.14s+100)}$$
  
(c) 
$$\frac{(s+10)}{s(s^{2}+14.14s+100)}$$

- **4.9-6** Using the lowest order possible, determine a system function H(s) with real-valued roots that matches the frequency response in Fig. P4.9-6. Verify your answer with MATLAB.
- **4.9-7** A graduate student recently implemented an analog phase lock loop (PLL) as part of his thesis. His PLL consists of four basic components: a phase/frequency detector, a charge pump, a loop filter, and a voltage-controlled oscillator. This problem considers only the loop filter, which is shown in Fig. P4.9-7a. The loop filter input is the current x(t), and the output is the voltage y(t).
  - (a) Derive the loop filter's transfer function H(s). Express H(s) in standard form.
  - (b) Figure P4.9-7b provides four possible frequency response plots, labeled A through D. Each log-log plot is drawn to the same scale, and line slopes are either 20 dB/decade, 0 dB/decade, or -20 dB/decade. Clearly identify which plot(s), if any, could represent the loop filter.
  - (c) Holding the other components constant, what is the general effect of increasing the resistance *R* on the magnitude response for low-frequency inputs?

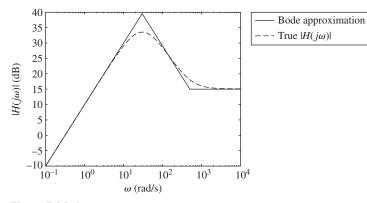


Figure P4.9-6

(d) Holding the other components constant, what is the general effect of increasing the resistance *R* on the magnitude response for high-frequency inputs?

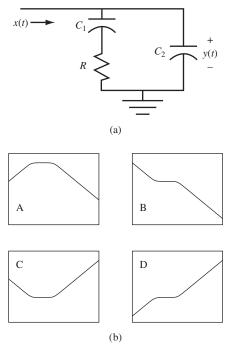


Figure P4.9-7

- **4.10-1** A causal LTIC system  $H(s) = \frac{2(s-4j)(s+4j)}{(s+1+2j)(s+1-2j)}$ has input  $x(t) = -1 + 2\cos(2t) - 3\sin(4t + \pi/3) + 4\cos(10t)$ . Below, perform accurate calculations at  $\omega = 0, \pm 2, \pm 4$ , and  $\pm 10$ .
  - (a) Using the graphical method of Sec. 4.10-1, accurately sketch the magnitude response  $|H(j\omega)|$  over  $-10 \le \omega \le 10$ .
  - (b) Using the graphical method of Sec. 4.10-1, accurately sketch the phase response  $\angle H(j\omega)$  over  $-10 \le \omega \le 10$ .
  - (c) Approximate the system output y(t) in response to the input x(t).
- **4.10-2** The pole-zero plot of a second-order system H(s) is shown in Fig. P4.10-2. The dc response of this system is minus 2, H(j0) = -2.
  - (a) Letting  $H(s) = k \frac{s^2 + b_1 s + b_2}{s^2 + a_1 s + a_2}$ , determine the constants  $k, b_1, b_2, a_1$ , and  $a_2$ .

- (b) Using the graphical method of Sec. 4.10-1, hand-sketch the magnitude response |*H*(*jω*)| over −10 ≤ ω ≤ 10. Verify your sketch with MATLAB.
- (c) Using the graphical method of Sec. 4.10-1, hand-sketch the phase response  $\angle H(j\omega)$  over  $-10 \le \omega \le 10$ . Verify your sketch with MATLAB.
- (d) What is the output y(t) in response to input  $x(t) = -3 + \cos(3t + \pi/3) \sin(4t \pi/8)$ ?

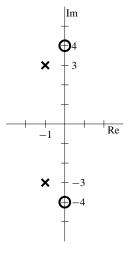


Figure P4.10-2

**4.10-3** Using the graphical method of Sec. 4.10-1, draw a rough sketch of the amplitude and phase responses of an LTIC system described by the transfer function

$$H(s) = \frac{s^2 - 2s + 50}{s^2 + 2s + 50}$$
$$= \frac{(s - 1 - j7)(s - 1 + j7)}{(s + 1 - j7)(s + 1 + j7)}$$

What kind of filter is this?

**4.10-4** Using the graphical method of Sec. 4.10-1, draw a rough sketch of the amplitude and phase responses of LTIC systems whose pole-zero plots are shown in Fig. P4.10-4.

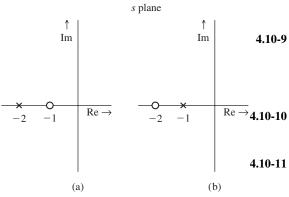


Figure P4.10-4

- **4.10-5** A causal LTIC system  $H(s) = \frac{(s-3j)(s+3j)}{3(s+2+j)(s+2-j)}$ has input  $x(t) = \cos(t) + \sin(3t + \pi/3) + \cos(100t)$ .
  - (a) Using the graphical method of Sec. 4.10-1, sketch the magnitude response  $|H(j\omega)|$  over  $-10 \le \omega \le 10$ .
  - (b) Determine the system output y(t) in response to the input x(t).
  - (c) Suppose we create a second causal system with transfer function  $H_2(s) = H(-s)$ . Sketch this system's pole/zero plot. What is the response  $y_2(t)$  of system  $H_2(s)$  to input x(t)?
- **4.10-6** Design a second-order bandpass filter with center frequency  $\omega = 10$ . The gain should be zero at  $\omega = 0$  and at  $\omega = \infty$ . Select poles at  $-a \pm j10$ . Leave your answer in terms of *a*. Explain the influence of *a* on the frequency response.
- **4.10-7** The LTIC system described by H(s) = (s-1)/(s+1) has unity magnitude response  $|H(j\omega)| = 1$ . Positive Pat claims that the output y(t) of this system is equal the input x(t), since the system is allpass. Cynical Cynthia doesn't think so. "This is *signals and systems* class," she complains. "It *has* to be more complicated!" Who is correct, Pat or Cynthia? Justify your answer.
- **4.10-8** Two students, Amy and Jeff, disagree about an analog system function given by  $H_1(s) = s$ . Sensible Jeff claims the system has a zero at s = 0. Rebellious Amy, however, notes that the system function can be rewritten as  $H_1(s) = 1/s^{-1}$  and claims that this implies a system pole

at  $s = \infty$ . Who is correct? Why? What are the poles and zeros of the system  $H_2(s) = 1/s$ ?

- **4.10-9** A rational transfer function *H*(*s*) is often used to represent an analog filter. Why must *H*(*s*) be strictly proper for lowpass and bandpass filters? Why must *H*(*s*) be proper for highpass and bandstop filters?
  - **10** For a given filter order *N*, why is the stopband attenuation rate of an all-pole lowpass filter better than filters with finite zeros?
- **4.10-11** Is it possible, with real coefficients  $([k,b_1,b_2,a_1,a_2] \in \mathcal{R})$ , for a system

$$H(s) = k \frac{s^2 + b_1 s + b_2}{s^2 + a_1 s + a_2}$$

to function as a lowpass filter? Explain your answer.

- **4.10-12** Nick recently built a simple second-order Butterworth lowpass filter for his home stereo. Although the system performs fairly well, Nick is an overachiever and hopes to improve the system performance. Unfortunately, Nick is lazy and doesn't want to design another filter. Thinking "Twice the filtering gives twice the performance," he suggests filtering the audio signal not once but twice with a cascade of two identical filters. His overworked, underpaid signals professor is skeptical and states, "If you are using *identical* filters, it makes no difference whether you filter once or twice!" Who is correct? Why?
- **4.10-13** An LTIC system impulse response is given by h(t) = u(t) u(t-1).
  - (a) Determine the transfer function H(s). Using H(s), determine and plot the magnitude response  $|H(j\omega)|$ . Which type of filter most accurately describes the behavior of this system: lowpass, highpass, bandpass, or bandstop?
  - (b) What are the poles and zeros of H(s)? Explain your answer.
  - (c) Can you determine the impulse response of the inverse system? If so, provide it. If not, suggest a method that could be used to approximate the impulse response of the inverse system.
- **4.10-14** An ideal lowpass filter  $H_{LP}(s)$  has magnitude response that is unity for low frequencies

and zero for high frequencies. An ideal highpass filter  $H_{\rm HP}(s)$  has an opposite magnitude response: zero for low frequencies and unity for high frequencies. A student suggests a possible lowpass-to-highpass filter transformation:  $H_{\rm HP}(s) = 1 - H_{\rm LP}(s)$ . In general, will this transformation work? Explain your answer.

- **4.10-15** An LTIC system has a rational transfer function H(s). When appropriate, assume that all initial conditions are zero.
  - (a) Is is possible for this system to output  $y(t) = \sin(100\pi t)u(t)$  in response to an input  $x(t) = \cos(100\pi t)u(t)$ ? Explain.
  - (b) Is is possible for this system to output  $y(t) = \sin(100\pi t)u(t)$  in response to an input  $x(t) = \sin(50\pi t)u(t)$ ? Explain.
  - (c) Is is possible for this system to output  $y(t) = sin(100\pi t)$  in response to an input  $x(t) = cos(100\pi t)$ ? Explain.
  - (d) Is is possible for this system to output  $y(t) = sin(100\pi t)$  in response to an input  $x(t) = sin(50\pi t)$ ? Explain.
  - **4.11-1** Find the ROC, if it exists, of the (bilateral) Laplace transform of the following signals:
    - (a)  $e^{tu(t)}$ (b)  $e^{-tu(t)}$

(d) 
$$\frac{1+t^2}{1-t^2}$$

(u) 
$$1 + e^t$$
  
(e)  $e^{-kt^2}$ 

- **4.11-2** Using the definition and direct integration, find the (bilateral) Laplace transform and the corresponding region of convergence for the following signals. If the Laplace transform does not exist, carefully explain why.
  - (a)  $x_a(t) = e^{(-1-j)t}u(1-t)$
  - (b)  $x_{b}(t) = j^{(t+1)}u(-t-1)$
  - (c)  $x_c(t) = e^{j\pi/3}u(2-t) + j\delta(t-5)$
  - (d)  $x_d(t) = 1 + 1 = 2$
  - (e)  $x_e(t) = 3u(-t) + e^{-2t}[u(t) u(t-10)]$
  - (f)  $x_f(t) = e^{t-2}u(1-t) + e^{-2t}u(t+1)$
- **4.11-3** Determine the bilateral Laplace transform X(s) of the signal

$$x(t) = \left[e^{t}u(-t)\right] * \left[t\cos(2t)u(t)\right]$$

**4.11-4** A signal has bilateral Laplace transform  $X(s) = \frac{(s+1)}{(s-2)(s-3)}$  but unknown region of convergence.

What ROC results in the smallest maximum amplitude of x(t)? Justify your answer.

- **4.11-5** Find the (bilateral) Laplace transform and the corresponding region of convergence for the following signals:
  - (a)  $e^{-|t|}$
  - (b)  $e^{-|t|} \cos t$ (c)  $e^t u(t) + e^{2t} u(-t)$

(c) 
$$e u(t) + e^{-tu(-t)}$$
  
(d)  $e^{-tu(t)}$ 

(c) 
$$e^{tu(-t)}$$

- (f)  $\cos \omega_0 t u(t) + e^t u(-t)$
- **4.11-6** Find the inverse (bilateral) Laplace transforms of the following functions:

(a) 
$$\frac{2s+5}{(s+2)(s+3)}$$
  $-3 < \sigma < -2$   
(b)  $\frac{2s-5}{(s-2)(s-3)}$   $2 < \sigma < 3$   
(c)  $\frac{2s+3}{(s+1)(s+2)}$   $\sigma > -1$ 

(d) 
$$\frac{2s+3}{(s+1)(s+2)}$$
  $\sigma < -2$   
(e)  $\frac{3s^2-2s-17}{(s+1)(s+3)(s-5)}$   $-1 < \sigma < 5$ 

4.11-7 Find

$$\mathcal{L}^{-1}\left[\frac{2s^2 - 2s - 6}{(s+1)(s-1)(s+2)}\right]$$

if the ROC is

(a) Re 
$$s > 1$$

(b) Re 
$$s < -2$$

(c) -1 < Res < 1(d) 2 < Res < 1

(d) 
$$-2 < \text{Res} < -1$$

**4.11-8** For a causal LTIC system having a transfer function H(s) = 1/(s+1), find the output y(t) if the input x(t) is given by (a)  $e^{-|t|/2}$ (b)  $e^{t}u(t) + e^{2t}u(-t)$ (c)  $e^{-t/2}u(t) + e^{-t/4}u(-t)$ (d)  $e^{2t}u(t) + e^{t}u(-t)$ 

(e) 
$$e^{-t/4}u(t) + e^{-t/2}u(-t)$$

(f) 
$$e^{-3t}u(t) + e^{-2t}u(-t)$$

**4.11-9** The autocorrelation function  $r_{xx}(t)$  of a signal x(t) is given by

$$r_{xx}(t) = \int_{-\infty}^{\infty} x(\tau) x(\tau + t) d\tau$$

Derive an expression for  $R_{xx}(s) = \mathcal{L}(r_{xx}(t))$  in terms of X(s), where  $X(s) = \mathcal{L}(x(t))$ .

**4.11-10** Determine the inverse Laplace transform of

$$X(s) = \frac{2}{s} + \frac{s}{2}$$

given that the region of convergence is  $\sigma < 0$ .

**4.11-11** An absolutely integrable signal x(t) has a pole at  $s = \pi$ . It is possible that other poles may be present. Recall that an absolutely integrable signal satisfies

$$\int_{-\infty}^{\infty} |x(t)| \, dt < \infty$$

- (a) Can x(t) be left-sided? Explain.
- (b) Can x(t) be right-sided? Explain.
- (c) Can x(t) be two-sided? Explain.
- (d) Can x(t) be of finite duration? Explain.
- **4.11-12** Using ROC  $\sigma < 0$ , determine the inverse Laplace transform of  $X(s) = s \frac{d}{ds} \left( \frac{e^{-2s}}{s} \right)$ . [*Hint:* Use Laplace transform properties to avoid tedious calculus.]
- **4.11-13** With the assistance of Laplace transform properties, determine the inverse bilateral Laplace transform x(t) of signal

$$X(s) = \frac{2}{e^s} + \frac{1}{s} \left[ e^s \frac{4}{\frac{s}{3} + 2} \right]$$

where the ROC is  $-6 < \text{Re}\{s\} < 0$ .

**4.11-14** With the assistance of Laplace transform properties, determine the inverse bilateral Laplace transform x(t) of signal

$$X(s) = \frac{d^7}{ds^7} \left[ \frac{e^{-4s}}{(s+2)(s+3)} \right]$$

where the ROC is  $-3 < \text{Re}\{s\} < -2$ .

**4.11-15** Using the definition, compute the bilateral Laplace transform, including the region of convergence (ROC), of the following complex-valued functions:

(a) 
$$x_1(t) = (i + e^{jt})u(t)$$

- (b)  $x_2(t) = j \cosh(t)u(-t)$
- (c)  $x_3(t) = e^{j(\frac{\pi}{4})}u(-t+1) + j\delta(t-5)$
- (d)  $x_4(t) = j^t u(-t) + \delta(t \pi)$

**4.11-16** A bounded-amplitude signal x(t) has bilateral Laplace transform X(s) given by

$$X(s) = \frac{s2^s}{(s-1)(s+1)}$$

- (a) Determine the corresponding region of convergence.
- (b) Determine the time-domain signal x(t).
- **4.12-1** Express the polynomial  $C_{20}(x)$  in standard form. That is, determine the coefficients  $a_k$  of  $C_{20}(x) = \sum_{k=0}^{20} a_k x^{20-k}$ .
- 4.12-2 Consider an LTIC system with

$$H(s) = \frac{1}{s^3 + 4s^2 + 8s + 8} = \frac{1}{(s^2 + 2s + 4)(s + 2)}$$
$$= \frac{1}{(s - 2e^{j2\pi/3})(s - 2e^{-j2\pi/3})(s + 2)}.$$

- (a) Write MATLAB code that accurately plots the system magnitude response  $|H(j\omega)|$  over  $-10 < \omega < 10$ .
- (b) Write MATLAB code that accurately plots the system phase response over −10 ≤ ω ≤ 10.
- (c) Determine the max value  $y_{\text{max}}$  of output y(t)in response to input  $x(t) = 2 - \sin(2t + \pi/3)$ .
- (d) Draw a parallel representation of this system using real DFI structures of order 2 or less.[*Hint:* Use MATLAB to perform a partial fraction expansion of *H*(*s*).]
- **4.12-3** Consider the op-amp circuit of Fig. P4.12-3. Further, let RC = 1.
  - (a) From Fig. P4.12-3, determine the (simplified, standard form, rational) transfer function *H*(*s*).
  - (b) Use MATLAB to accurately plot  $|H(j\omega)|$ over  $-10 \le \omega \le 10$ .
  - (c) Determine the output of this system in response to x(t) = cos(10t) 1.
  - (d) The circuit of Fig. P4.12-3 contains two capacitors. Suppose one capacitor must be a 25% tolerance part, while the other must be a 10% tolerance part. If the goal is to preserve the original magnitude response, should you use the 25% tolerance capacitor with the first op-amp or the second op-amp? Justify your answer with appropriate MAT-LAB simulations.


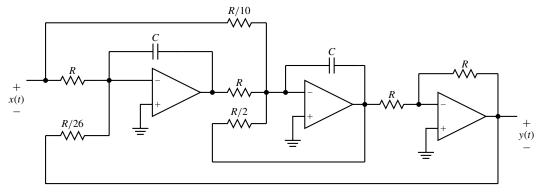


Figure P4.12-3

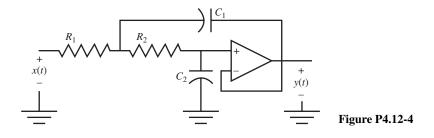

- **4.12-4** Design an order-12 Butterworth lowpass filter with a cutoff frequency of  $\omega_c = 2\pi 5000$  by completing the following.
  - (a) Locate and plot the filter's poles and zeros in the complex plane. Plot the corresponding magnitude response  $|H_{LP}(j\omega)|$  to verify proper design.
  - (b) Setting all resistor values to 100,000, determine the capacitor values to implement the filter using a cascade of six second-order Sallen–Key circuit sections. The form of a Sallen–Key stage is shown in Fig. P4.12-4. On a single plot, plot the magnitude response of each section as well as the overall magnitude response. Identify the poles that correspond to each section's magnitude response curve. Are the capacitor values realistic?
- **4.12-5** Rather than a Butterworth filter, repeat Prob. 4.12-4 for a Chebyshev LPF with R = 3 dB of passband ripple. Since each Sallen–Key stage is constrained to have unity gain at dc, an overall gain error of  $1/\sqrt{1+\epsilon^2}$  is acceptable.
- **4.12-6** An analog lowpass filter with cutoff frequency  $\omega_c$  can be transformed into a highpass filter

with cutoff frequency  $\omega_c$  by using an *RC*–*CR* transformation rule: each resistor  $R_i$  is replaced by a capacitor  $C'_i = 1/R_i\omega_c$  and each capacitor  $C_i$  is replaced by a resistor  $R'_i = 1/C_i\omega_c$ .

Use this rule to design an order-8 Butterworth highpass filter with  $\omega_c = 2\pi 4000$  by completing the following.

- (a) Design an order-8 Butterworth lowpass filter with  $\omega_c = 2\pi 4000$  by using four second-order Sallen–Key circuit stages, the form of which is shown in Fig. P4.12-4. Give resistor and capacitor values for each stage. Choose the resistors so that the *RC–CR* transformation will result in 1 nF capacitors. At this point, are the component values realistic?
- (b) Draw an *RC*-*CR* transformed Sallen-Key circuit stage. Determine the transfer function *H(s)* of the transformed stage in terms of the variables *R'*<sub>1</sub>, *R'*<sub>2</sub>, *C'*<sub>1</sub>, and *C'*<sub>2</sub>.
- (c) Transform the LPF designed in part (a) by using an *RC-CR* transformation. Give the resistor and capacitor values for each stage. Are the component values realistic? Using *H(s)* derived in part (b), plot the magnitude response of each section as well

as the overall magnitude response. Does the overall response look like a highpass Butterworth filter?

Plot the HPF system poles and zeros in the complex *s* plane. How do these locations compare with those of the Butterworth LPF?

- **4.12-7** Repeat Prob. 4.12-6, using  $\omega_c = 2\pi 1500$  and an order-16 filter. That is, eight second-order stages need to be designed.
- **4.12-8** Rather than a Butterworth filter, repeat Prob. 4.12-6 for a Chebyshev LPF with R = 3 dB of passband ripple. Since each transformed Sallen–Key stage is constrained to have unity gain at  $\omega = \infty$ , an overall gain error of  $1/\sqrt{1+\epsilon^2}$  is acceptable.
- **4.12-9** The MATLAB signal-processing toolbox function butter helps design analog Butterworth filters. Use MATLAB help to learn how butter works. For each of the following cases, design the filter, plot the filter's poles and zeros in the complex s plane, and plot the decibel magnitude response  $20\log_{10}|H(j\omega)|$ :
  - (a) Design a sixth-order analog lowpass filter with  $\omega_c = 2\pi 3500$ .
  - (b) Design a sixth-order analog highpass filter with  $\omega_c = 2\pi 3500$ .
  - (c) Design a sixth-order analog bandpass filter with a passband between 2 and 4 kHz.
  - (d) Design a sixth-order analog bandstop filter with a stopband between 2 and 4 kHz.
- **4.12-10** The MATLAB signal-processing toolbox function cheby1 helps design analog Chebyshev

type I filters. A Chebyshev type I filter has a passband ripple and a smooth stopband. Setting the passband ripple to  $R_p = 3 \text{ dB}$ , repeat Prob. 4.12-9 using the cheby1 command. With all other parameters held constant, what is the general effect of reducing  $R_p$ , the allowable passband ripple?

- **4.12-11** The MATLAB signal-processing toolbox function cheby2 helps design analog Chebyshev type II filters. A Chebyshev type II filter has a smooth passband and ripple in the stopband. Setting the stopband ripple  $R_s = 20$  dB down, repeat Prob. 4.12-9 using the cheby2 command. With all other parameters held constant, what is the general effect of increasing  $R_s$ , the minimum stopband attenuation?
- **4.12-12** The MATLAB signal-processing toolbox function ellip helps design analog elliptic filters. An elliptic filter has ripple in both the passband and the stopband. Setting the passband ripple to  $R_p = 3 \text{ dB}$  and the stopband ripple  $R_s = 20 \text{ dB}$  down, repeat Prob. 4.12-9 using the ellip command.
- **4.12-13** Using the definition  $C_N(x) = \cosh(N\cosh^{-1}(x))$ , prove the recursive relation  $C_N(x) = 2xC_{N-1}(x) - C_{N-2}(x)$ .
- **4.12-14** Prove that the poles of a Chebyshev filter, which are located at  $p_k = \omega_c \sinh(\xi) \sin(\phi_k) + j\omega_c \cosh(\xi) \cos(\phi_k)$ , lie on an ellipse. [*Hint:* The equation of an ellipse in the *x*-*y* plane is  $(x/a)^2 + (y/b)^2 = 1$ , where constants *a* and *b* define the major and minor axes of the ellipse.]

# DISCRETE-TIME SYSTEM ANALYSIS USING THE z-TRANSFORM

The counterpart of the Laplace transform for discrete-time systems is the *z*-transform. The Laplace transform converts integro-differential equations into algebraic equations. In the same way, the *z*-transforms changes difference equations into algebraic equations, thereby simplifying the analysis of discrete-time systems. The *z*-transform method of analysis of discrete-time systems parallels the Laplace transform method of analysis of continuous-time systems, with some minor differences. In fact, we shall see that *the z*-transform is the Laplace transform in disguise.

The behavior of discrete-time systems is similar to that of continuous-time systems (with some differences). The frequency-domain analysis of discrete-time systems is based on the fact (proved in Sec. 3.8-2) that the response of a linear, time-invariant, discrete-time (LTID) system to an everlasting exponential  $z^n$  is the same exponential (within a multiplicative constant) given by  $H[z]z^n$ . We then express an input x[n] as a sum of (everlasting) exponentials of the form  $z^n$ . The system response to x[n] is then found as a sum of the system's responses to all these exponential components. The tool that allows us to represent an arbitrary input x[n] as a sum of (everlasting) exponentials of the form  $z^n$  is the z-transform.

# 5.1 THE z-TRANSFORM

We define X[z], the direct *z*-transform of x[n], as

$$X[z] = \sum_{n=-\infty}^{\infty} x[n] z^{-n}$$
(5.1)

where z is a complex variable. The signal x[n], which is the inverse z-transform of X[z], can be obtained from X[z] by using the following inverse z-transformation:

$$x[n] = \frac{1}{2\pi j} \oint X[z] z^{n-1} dz$$
 (5.2)

The symbol  $\oint$  indicates an integration in counterclockwise direction around a closed path in the complex plane (see Fig. 5.1). We derive this *z*-transform pair later, in Ch. 9, as an extension of the discrete-time Fourier transform pair.

CHAPTER

As in the case of the Laplace transform, we need not worry about this integral at this point because inverse *z*-transforms of many signals of engineering interest can be found in a *z*-transform table. The direct and inverse *z*-transforms can be expressed symbolically as

$$X[z] = \mathcal{Z}\{x[n]\} \quad \text{and} \quad x[n] = \mathcal{Z}^{-1}\{X[z]\}$$

or simply as

$$x[n] \Longleftrightarrow X[z]$$

Note that

$$\mathcal{Z}^{-1}[\mathcal{Z}\{x[n]\}] = x[n] \quad \text{and} \quad \mathcal{Z}[\mathcal{Z}^{-1}\{X[z]\}] = X[z]$$

#### LINEARITY OF THE *z*-TRANSFORM

Like the Laplace transform, the z-transform is a linear operator. If

 $x_1[n] \Longleftrightarrow X_1[z]$  and  $x_2[n] \Longleftrightarrow X_2[z]$ 

then

$$a_1x_1[n] + a_2x_2[n] \iff a_1X_1[z] + a_2X_2[z]$$

The proof is trivial and follows from the definition of the *z*-transform. This result can be extended to finite sums.

#### THE UNILATERAL z-TRANSFORM

For the same reasons discussed in Ch. 4, we find it convenient to consider the unilateral *z*-transform. As seen for the Laplace case, the bilateral transform has some complications because of the non-uniqueness of the inverse transform. In contrast, the unilateral transform has a unique inverse. This fact simplifies the analysis problem considerably, but at a price: the unilateral version can handle only causal signals and systems. Fortunately, most of the practical cases are causal. The more general *bilateral z-transform* is discussed later, in Sec. 5.8. In practice, the term *z-transform* generally means *the unilateral z-transform*.

In a basic sense, there is no difference between the unilateral and the bilateral *z*-transform. The unilateral transform is the bilateral transform that deals with a subclass of signals starting at n = 0 (causal signals). Hence, the definition of the unilateral transform is the same as that of the bilateral [Eq. (5.1)], except that the limits of the sum are from 0 to  $\infty$ :

$$X[z] = \sum_{n=0}^{\infty} x[n] z^{-n}$$
(5.3)

The expression for the inverse z-transform in Eq. (5.2) remains valid for the unilateral case also.

#### THE REGION OF CONVERGENCE (ROC) OF X[z]

The sum in Eq. (5.1) [or Eq. (5.3)] defining the direct z-transform X[z] may not converge (exist) for all values of z. The values of z (the region in the complex plane) for which the sum in Eq. (5.1) converges (or exists) are called the *region of existence*, or more commonly the *region of convergence* (ROC), for X[z]. This concept will become clear in the following example.

# **EXAMPLE 5.1** Bilateral *z*-Transform of a Causal Exponential

Find the *z*-transform and the corresponding ROC for the signal  $\gamma^n u[n]$ .

By definition,

$$X[z] = \sum_{n=0}^{\infty} \gamma^n u[n] z^{-n}$$

Since u[n] = 1 for all  $n \ge 0$ ,

$$X[z] = \sum_{n=0}^{\infty} \left(\frac{\gamma}{z}\right)^n = 1 + \left(\frac{\gamma}{z}\right) + \left(\frac{\gamma}{z}\right)^2 + \left(\frac{\gamma}{z}\right)^3 + \dots + \dots$$
(5.4)


It is helpful to remember the geometric progression and its sum [see Sec. B.8-3]:

$$1 + x + x^2 + x^3 + \dots = \frac{1}{1 - x}$$
 if  $|x| < 1$ 

Applying this relationship to Eq. (5.4) yields

$$X[z] = \frac{1}{1 - \frac{\gamma}{z}} \qquad \left| \frac{\gamma}{z} \right| < 1$$
$$= \frac{z}{z - \gamma} \qquad |z| > |\gamma| \qquad (5.5)$$

Observe that X[z] exists only for  $|z| > |\gamma|$ . For  $|z| < |\gamma|$ , the sum in Eq. (5.4) does not converge; it goes to infinity. Therefore, the ROC of X[z] is the shaded region outside the circle of radius  $|\gamma|$ , centered at the origin, in the *z*-plane, as depicted in Fig. 5.1b.

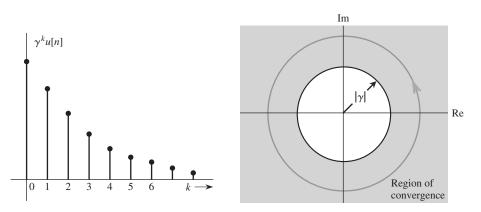

**Figure 5.1**  $\gamma^n u[n]$  and the region of convergence of its *z*-transform.

Later in Eq. (5.52), we show that the z-transform of another signal,  $-\gamma^n u[-(n+1)]$ , is also  $z/(z-\gamma)$ . However, the ROC in this case is  $|z| < |\gamma|$ . Clearly, the inverse z-transform of  $z/(z-\gamma)$  is not unique. However, if we restrict the inverse transform to be causal, then the inverse transform is unique, namely,  $\gamma^n u[n]$ .

The ROC is required for evaluating x[n] from X[z], according to Eq. (5.2). The integral in Eq. (5.2) is a contour integral, implying integration in a counterclockwise direction along a closed path centered at the origin and satisfying the condition  $|z| > |\gamma|$ . Thus, any circular path centered at the origin and with a radius greater than  $|\gamma|$  (Fig. 5.1b) will suffice. We can show that the integral in Eq. (5.2) along any such path (with a radius greater than  $|\gamma|$ ) yields the same result, namely, x[n].<sup>†</sup> Such integration in the complex plane requires a background in the theory of functions of complex variables. We can avoid this integration by compiling a table of *z*-transforms (Table 5.1), where *z*-transform pairs are tabulated for a variety of signals. To find the inverse *z*-transform of say,  $z/(z - \gamma)$ , instead of using the complex integration in Eq. (5.2), we consult the table and find the inverse *z*-transform of  $z/(z-\gamma)$  as  $\gamma^n u[n]$ . Because of the uniqueness property of the unilateral *z*-transform, there is only one inverse for each X[z]. Although the table given here is rather short, it comprises the functions of most practical interest.

The situation of the *z*-transform regarding the uniqueness of the inverse transform is parallel to that of the Laplace transform. For the bilateral case, the inverse *z*-transform is not unique unless the ROC is specified. For the unilateral case, the inverse transform is unique; the region of convergence need not be specified to determine the inverse *z*-transform. For this reason, we shall ignore the ROC in the unilateral *z*-transform Table 5.1.

# EXISTENCE OF THE *z*-TRANSFORM

By definition,

$$X[z] = \sum_{n=0}^{\infty} x[n] z^{-n} = \sum_{n=0}^{\infty} \frac{x[n]}{z^n}$$

The existence of the *z*-transform is guaranteed if

$$|X[z]| \le \sum_{n=0}^{\infty} \frac{|x[n]|}{|z|^n} < \infty$$

for some |z|. Any signal x[n] that grows no faster than an exponential signal  $r_0^n$ , for some  $r_0$ , satisfies this condition. Thus, if

$$|x[n]| \le r_0^n \qquad \text{for some } r_0 \tag{5.6}$$


<sup>&</sup>lt;sup>†</sup> Indeed, the path need not even be circular. It can have any odd shape, as long as it encloses the pole(s) of X[z] and the path of integration is counterclockwise.

No.	<i>x</i> [ <i>n</i> ]	X[z]
1	$\delta[n-k]$	$z^{-k}$
2	u[n]	$\frac{z}{z-1}$
3	nu[n]	$\frac{z}{(z-1)^2}$
4	$n^2u[n]$	$\frac{z(z+1)}{(z-1)^3}$
5	$n^3u[n]$	$\frac{z(z^2+4z+1)}{(z-1)^4}$
6	$\gamma^n u[n]$	$\frac{z}{z-\gamma}$
7	$\gamma^{n-1}u[n-1]$	$\frac{1}{z-\gamma}$
8	$n\gamma^n u[n]$	$\frac{\gamma z}{(z-\gamma)^2}$
9	$n^2 \gamma^n u[n]$	$\frac{\gamma z(z+\gamma)}{(z-\gamma)^3}$
10	$\frac{n(n-1)(n-2)\cdots(n-m+1)}{\gamma^m m!}\gamma^n u[n]$	$\frac{z}{(z-\gamma)^{m+1}}$
11a	$ \gamma ^n \cos \beta n u[n]$	$\frac{z(z -  \gamma  \cos \beta)}{z^2 - (2 \gamma  \cos \beta)z +  \gamma ^2}$
11b	$ \gamma ^n \sin \beta n u[n]$	$\frac{z \gamma \sin\beta}{z^2 - (2 \gamma \cos\beta)z +  \gamma ^2}$
12a	$r \gamma ^n\cos{(\beta n+ heta)u[n]}$	$\frac{rz[z\cos\theta -  \gamma \cos(\beta - \theta)]}{z^2 - (2 \gamma \cos\beta)z +  \gamma ^2}$
12b	$r \gamma ^n \cos{(\beta n + \theta)u[n]} \qquad \gamma =  \gamma e^{j\beta}$	$\frac{(0.5re^{j\theta})z}{z-\gamma} + \frac{(0.5re^{-j\theta})z}{z-\gamma^*}$
12c	$r \gamma ^n\cos{(\beta n+ heta)u[n]}$	$\frac{z(Az+B)}{z^2+2az+ \gamma ^2}$
	$r = \sqrt{\frac{A^2  \gamma ^2 + B^2 - 2AaB}{ \gamma ^2 - a^2}}$	
	$\beta = \cos^{-1} \frac{-a}{ \gamma }$	
	$\theta = \tan^{-1} \frac{Aa - B}{A\sqrt{ \gamma ^2 - a^2}}$	

**TABLE 5.1**Select (Unilateral) z-Transform Pairs

$$|X[z]| \le \sum_{n=0}^{\infty} \left(\frac{r_0}{|z|}\right)^n = \frac{1}{1 - \frac{r_0}{|z|}} \qquad |z| > r_0$$

Therefore, X[z] exists for  $|z| > r_0$ . Almost all practical signals satisfy Eq. (5.6) and are therefore *z*-transformable. Some signal models (e.g.,  $\gamma^{n^2}$ ) grow faster than the exponential signal  $r_0^n$  (for any  $r_0$ ) and do not satisfy Eq. (5.6) and therefore are not *z*-transformable. Fortunately, such signals are of little practical or theoretical interest. Even such signals over a finite interval are *z*-transformable.

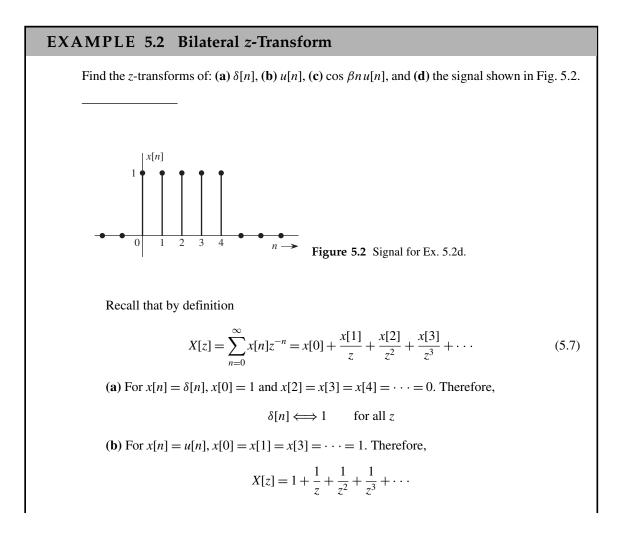

then

#### CHAPTER 5 DISCRETE-TIME SYSTEM ANALYSIS USING THE Z-TRANSFORM

This geometric sum simplifies [see Sec. B.8-3] to

$$X[z] = \frac{1}{1 - \frac{1}{z}} \qquad \left| \frac{1}{z} \right| < 1$$
$$= \frac{z}{z - 1} \qquad |z| > 1$$

Therefore,

$$u[n] \Longleftrightarrow \frac{z}{z-1} \qquad |z| > 1$$

(c) Recall that  $\cos \beta n = (e^{j\beta n} + e^{-j\beta n})/2$ . Moreover, according to Eq. (5.5),

$$e^{\pm j\beta n}u[n] \Longleftrightarrow \frac{z}{z - e^{\pm j\beta}} \qquad |z| > |e^{\pm j\beta}| = 1$$

Therefore,

$$X[z] = \frac{1}{2} \left[ \frac{z}{z - e^{j\beta}} + \frac{z}{z - e^{-j\beta}} \right] = \frac{z(z - \cos\beta)}{z^2 - 2z\cos\beta + 1} \qquad |z| > 1$$

(d) Here x[0] = x[1] = x[2] = x[3] = x[4] = 1 and  $x[5] = x[6] = \cdots = 0$ . Therefore, according to Eq. (5.7),

$$X[z] = 1 + \frac{1}{z} + \frac{1}{z^2} + \frac{1}{z^3} + \frac{1}{z^4} = \frac{z^4 + z^3 + z^2 + z + 1}{z^4} \qquad \text{for all } z \neq 0$$


We can also express this result in a more compact form by summing the geometric progression on the right-hand side of the foregoing equation. From the result in Sec. B.8-3 with r = 1/z, m = 0, and n = 4, we obtain

$$X[z] = \frac{\left(\frac{1}{z}\right)^5 - \left(\frac{1}{z}\right)^0}{\frac{1}{z} - 1} = \frac{z}{z - 1}(1 - z^{-5})$$

## DRILL 5.1 Bilateral *z*-Transform

- (a) Find the *z*-transform of a signal shown in Fig. 5.3.
- (b) Use pair 12a (Table 5.1) to find the *z*-transform of  $x[n] = 20.65(\sqrt{2})^n \cos[(\pi/4)n 1.415]u[n]$ .

494

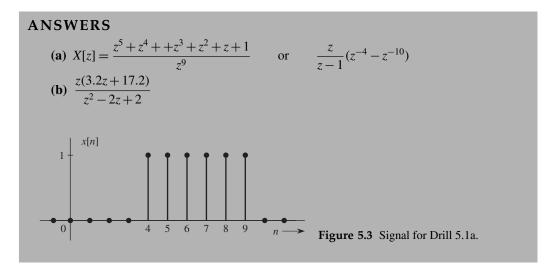

#### 5.1-1 Inverse Transform by Partial Fraction Expansion and Tables

As in the Laplace transform, we shall avoid the integration in the complex plane required to find the inverse z-transform [Eq. (5.2)] by using the (unilateral) transform table (Table 5.1). Many of the transforms X[z] of practical interest are rational functions (ratio of polynomials in z), which can be expressed as a sum of partial fractions, whose inverse transforms can be readily found in a table of transform. The partial fraction method works because for every transformable x[n] defined for  $n \ge 0$ , there is a corresponding unique X[z] defined for  $|z| > r_0$  (where  $r_0$  is some constant), and vice versa.

# **EXAMPLE 5.3** Inverse z-Transform by Partial Fraction Expansion

Find the inverse z-transforms of

(a) 
$$\frac{8z-19}{(z-2)(z-3)}$$
  
(b) 
$$\frac{z(2z^2-11z+12)}{(z-1)(z-2)^3}$$
  
(c) 
$$\frac{2z(3z+17)}{(z-1)(z^2-6z+25)}$$

(a) Expanding X[z] into partial fractions yields

$$X[z] = \frac{8z - 19}{(z - 2)(z - 3)} = \frac{3}{z - 2} + \frac{5}{z - 3}$$

#### CHAPTER 5 DISCRETE-TIME SYSTEM ANALYSIS USING THE Z-TRANSFORM

From Table 5.1, pair 7, we obtain

$$x[n] = [3(2)^{n-1} + 5(3)^{n-1}]u[n-1]$$
(5.8)

If we expand rational X[z] into partial fractions directly, we shall always obtain an answer that is multiplied by u[n-1] because of the nature of pair 7 in Table 5.1. This form is rather awkward as well as inconvenient. We prefer the form that contains u[n] rather than u[n-1]. A glance at Table 5.1 shows that the z-transform of every signal that is multiplied by u[n] has a factor z in the numerator. This observation suggests that we expand X[z] into modified partial fractions, where each term has a factor z in the numerator. This goal can be accomplished by expanding X[z]/z into partial fractions and then multiplying both sides by z. We shall demonstrate this procedure by reworking part (a). For this case,

$$\frac{X[z]}{z} = \frac{8z - 19}{z(z - 2)(z - 3)} = \frac{(-19/6)}{z} + \frac{(3/2)}{z - 2} + \frac{(5/3)}{z - 3}$$

Multiplying both sides by z yields

$$X[z] = -\frac{19}{6} + \frac{3}{2} \left(\frac{z}{z-2}\right) + \frac{5}{3} \left(\frac{z}{z-3}\right)$$

From pairs 1 and 6 in Table 5.1, it follows that

$$x[n] = -\frac{19}{6}\delta[n] + \left[\frac{3}{2}(2)^n + \frac{5}{3}(3)^n\right]u[n]$$
(5.9)

The reader can verify that this answer is equivalent to that in Eq. (5.8) by computing x[n] in both cases for n = 0, 1, 2, 3, ..., and comparing the results. The form in Eq. (5.9) is more convenient than that in Eq. (5.8). For this reason, we shall always expand X[z]/z rather than X[z] into partial fractions and then multiply both sides by z to obtain modified partial fractions of X[z], which have a factor z in the numerator.

**(b)** 

$$X[z] = \frac{z(2z^2 - 11z + 12)}{(z-1)(z-2)^3}$$

and

$$\frac{X[z]}{z} = \frac{2z^2 - 11z + 12}{(z-1)(z-2)^3} = \frac{k}{z-1} + \frac{a_0}{(z-2)^3} + \frac{a_1}{(z-2)^2} + \frac{a_2}{(z-2)}$$

where

$$k = \frac{2z^2 - 11z + 12}{(z - 1)(z - 2)^3}\Big|_{z=1} = -3$$
$$a_0 = \frac{2z^2 - 11z + 12}{(z - 1)(z - 2)^3}\Big|_{z=2} = -2$$

Therefore,

$$\frac{X[z]}{z} = \frac{2z^2 - 11z + 12}{(z-1)(z-2)^3} = \frac{-3}{z-1} - \frac{2}{(z-2)^3} + \frac{a_1}{(z-2)^2} + \frac{a_2}{(z-2)}$$
(5.10)

496

We can determine  $a_1$  and  $a_2$  by clearing fractions. Or we may use a shortcut. For example, to determine  $a_2$ , we multiply both sides of Eq. (5.10) by z and let  $z \to \infty$ . This yields

$$0 = -3 - 0 + 0 + a_2 \implies a_2 = 3$$

This result leaves only one unknown,  $a_1$ , which is readily determined by letting z take any convenient value, say, z = 0, on both sides of Eq. (5.10). This produces

$$\frac{12}{8} = 3 + \frac{1}{4} + \frac{a_1}{4} - \frac{3}{2}$$

which yields  $a_1 = -1$ . Therefore,

$$\frac{X[z]}{z} = \frac{-3}{z-1} - \frac{2}{(z-2)^3} - \frac{1}{(z-2)^2} + \frac{3}{z-2}$$

and

$$X[z] = -3\frac{z}{z-1} - 2\frac{z}{(z-2)^3} - \frac{z}{(z-2)^2} + 3\frac{z}{z-2}$$

Now the use of Table 5.1, pairs 6 and 10, yields

$$x[n] = \left[-3 - 2\frac{n(n-1)}{8}(2)^n - \frac{n}{2}(2)^n + 3(2)^n\right]u[n]$$
$$= -\left[3 + \frac{1}{4}(n^2 + n - 12)2^n\right]u[n]$$

(c) Complex Poles.

$$X[z] = \frac{2z(3z+17)}{(z-1)(z^2-6z+25)} = \frac{2z(3z+17)}{(z-1)(z-3-j4)(z-3+j4)}$$

The poles of X[z] are 1, 3 + j4, and 3 - j4. Whenever there are complex-conjugate poles, the problem can be worked out in two ways. In the first method we expand X[z] into (modified) first-order partial fractions. In the second method, rather than obtain one factor corresponding to each complex-conjugate pole, we obtain quadratic factors corresponding to each pair of complex-conjugate poles. This procedure is explained next.

# METHOD OF FIRST-ORDER FACTORS $\frac{X[z]}{z} = \frac{2(3z+17)}{(z-1)(z^2-6z+25)} = \frac{2(3z+17)}{(z-1)(z-3-j4)(z-3+j4)}$

We find the partial fraction of X[z]/z using the Heaviside "cover-up" method:

$$\frac{X[z]}{z} = \frac{2}{z-1} + \frac{1.6e^{-j2.246}}{z-3-j4} + \frac{1.6e^{j2.246}}{z-3+j4}$$

and

$$X[z] = 2\frac{z}{z-1} + (1.6e^{-j2.246})\frac{z}{z-3-j4} + (1.6e^{j2.246})\frac{z}{z-3+j4}$$

The inverse transform of the first term on the right-hand side is 2u[n]. The inverse transform of the remaining two terms (complex conjugate poles) can be obtained from pair 12b (Table 5.1) by identifying r/2 = 1.6,  $\theta = -2.246$  rad,  $\gamma = 3 + j4 = 5e^{j0.927}$ , so that  $|\gamma| = 5$ ,  $\beta = 0.927$ . Therefore,

$$x[n] = [2 + 3.2(5)^n \cos(0.927n - 2.246)]u[n]$$

## METHOD OF QUADRATIC FACTORS

$$\frac{X[z]}{z} = \frac{2(3z+17)}{(z-1)(z^2-6z+25)} = \frac{2}{z-1} + \frac{Az+B}{z^2-6z+25}$$

Multiplying both sides by z and letting  $z \to \infty$ , we find

$$0 = 2 + A \Longrightarrow A = -2$$

and

$$\frac{2(3z+17)}{(z-1)(z^2-6z+25)} = \frac{2}{z-1} + \frac{-2z+B}{z^2-6z+25}$$

To find *B*, we let *z* take any convenient value, say, z = 0. This step yields

$$\frac{-34}{25} = -2 + \frac{B}{25} \Longrightarrow B = 16$$

Therefore,

$$\frac{X[z]}{z} = \frac{2}{z-1} + \frac{-2z+16}{z^2 - 6z + 25}$$

and

$$X[z] = \frac{2z}{z-1} + \frac{z(-2z+16)}{z^2 - 6z + 25}$$

We now use pair 12c, where we identify A = -2, B = 16,  $|\gamma| = 5$ , and a = -3. Therefore,

$$r = \sqrt{\frac{100 + 256 - 192}{25 - 9}} = 3.2, \quad \beta = \cos^{-1}\left(\frac{3}{5}\right) = 0.927 \,\mathrm{rad}$$

and

$$\theta = \tan^{-1}\left(\frac{-10}{-8}\right) = -2.246 \,\mathrm{rad}$$

so that

$$x[n] = [2 + 3.2(5)^n \cos(0.927n - 2.246)]u[n]$$

498

# DRILL 5.2 Inverse z-Transform by Partial Fraction Expansion

Find the inverse *z*-transform of the following functions:

(a) 
$$\frac{z(2z-1)}{(z-1)(z+0.5)}$$
  
(b)  $\frac{1}{(z-1)(z+0.5)}$   
(c)  $\frac{9}{(z+2)(z-0.5)^2}$   
(d)  $\frac{5z(z-1)}{z^2-1.6z+0.8}$   
*Hint:*  $\sqrt{0.8} = 2/\sqrt{5}$ .]  
**ANSWERS**  
(a)  $\left[\frac{2}{3} + \frac{4}{3}(-0.5)^n\right]u[n]$   
(b)  $-2\delta[n] + \left[\frac{2}{5} + \frac{4}{3}(-0.5)^n\right]u[n]$ 

- (c)  $18\delta[n] [0.72(-2)^n + 17.28(0.5)^n 14.4n(0.5)^n]u[n]$
- (d)  $\frac{5\sqrt{5}}{2} \left(\frac{2}{\sqrt{5}}\right)^n \cos(0.464n + 0.464)u[n]$

# 5.1-2 Inverse z-Transform by Power Series Expansion

By definition,

$$X[z] = \sum_{n=0}^{\infty} x[n] z^{-n}$$
  
=  $x[0] + \frac{x[1]}{z} + \frac{x[2]}{z^2} + \frac{x[3]}{z^3} + \cdots$   
=  $x[0] z^0 + x[1] z^{-1} + x[2] z^{-2} + x[3] z^{-3} + \cdots$ 

This result is a power series in  $z^{-1}$ . Therefore, if we can expand X[z] into the power series in  $z^{-1}$ , the coefficients of this power series can be identified as  $x[0], x[1], x[2], x[3], \ldots$ . A rational X[z] can be expanded into a power series of  $z^{-1}$  by dividing its numerator by the denominator. Consider, for example,

$$X[z] = \frac{z^2(7z-2)}{(z-0.2)(z-0.5)(z-1)} = \frac{7z^3 - 2z^2}{z^3 - 1.7z^2 + 0.8z - 0.1}$$

#### 500 CHAPTER 5 DISCRETE-TIME SYSTEM ANALYSIS USING THE Z-TRANSFORM

To obtain a series expansion in powers of  $z^{-1}$ , we divide the numerator by the denominator as follows:

$$z^{3} - 1.7z^{2} + 0.8z - 0.1 \overline{)7z^{3} - 2z^{2}} \underbrace{7z^{3} - 11.9z^{2} + 5.60z - 0.7}_{9.9z^{2} - 5.60z + 0.7} \\ \underbrace{9.9z^{2} - 5.60z + 0.7}_{11.23z - 7.22 + 0.99z^{-1}} \\ \underbrace{11.23z - 7.22 + 0.99z^{-1}}_{11.87 - 7.99z^{-1}} \\ \underbrace{11.87 - 7.99z^{-1}}_{11.87 - 7.99z^{-1}} \\ \underbrace{11.87 - 7.99z^{-1$$

Thus,

$$X[z] = \frac{z^2(7z-2)}{(z-0.2)(z-0.5)(z-1)} = 7 + 9.9z^{-1} + 11.23z^{-2} + 11.87z^{-3} + \cdots$$

Therefore,

$$x[0] = 7, x[1] = 9.9, x[2] = 11.23, x[3] = 11.87, \dots$$

Although this procedure yields x[n] directly, it does not provide a closed-form solution. For this reason, it is not very useful unless we want to know only the first few terms of the sequence x[n].

## DRILL 5.3 Inverse z-Transform by Long Division

Using long division to find the power series in  $z^{-1}$ , show that the inverse z-transform of z/(z-0.5) is  $(0.5)^n u[n]$  or  $(2)^{-n} u[n]$ .

#### RELATIONSHIP BETWEEN h[n] AND H[z]

For an LTID system, if h[n] is its unit impulse response, then from Eq. (3.39), where we defined H[z], the system transfer function, we write

$$H[z] = \sum_{n=-\infty}^{\infty} h[n] z^{-n}$$
(5.11)

For causal systems, the limits on the sum are from n = 0 to  $\infty$ . This equation shows that the transfer function H[z] is the z-transform of the impulse response h[n] of an LTID system; that is,

$$h[n] \Longleftrightarrow H[z]$$

This important result relates the time-domain specification h[n] of a system to H[z], the frequency-domain specification of a system. The result is parallel to that for LTIC systems.

# DRILL 5.4 Impulse Response by Inverse z-Transform

Redo Drill 3.14 by taking the inverse z-transform of H[z], as given by Eq. (3.41).

# 5.2 Some Properties of the *z*-Transform

The *z*-transform properties are useful in the derivation of *z*-transforms of many functions and also in the solution of linear difference equations with constant coefficients. Here we consider a few important properties of the *z*-transform.

In our discussion, the variable n appearing in signals, such as x[n] and y[n], may or may not stand for time. However, in most applications of our interest, n is proportional to time. For this reason, we shall loosely refer to the variable n as time.

#### 5.2-1 Time-Shifting Properties

In the following discussion of the shift property, we deal with shifted signals x[n]u[n], x[n-k]u[n-k], x[n-k]u[n], and x[n+k]u[n]. Unless we physically understand the meaning of such shifts, our understanding of the shift property remains mechanical rather than intuitive or heuristic. For this reason, using a hypothetical signal x[n], we have illustrated various shifted signals for k = 1 in Fig. 5.4.

# RIGHT SHIFT (DELAY)

 $x[n]u[n] \iff X[z]$ 

then

$$x[n-1]u[n-1] \Longleftrightarrow \frac{1}{z}X[z]$$
 (5.12)

In general,

$$x[n-m]u[n-m] \Longleftrightarrow \frac{1}{z^m} X[z]$$
(5.13)

Moreover,


$$x[n-1]u[n] \Longleftrightarrow \frac{1}{z}X[z] + x[-1]$$
(5.14)


Repeated application of this property yields

$$x[n-2]u[n] \longleftrightarrow \frac{1}{z} \left[ \frac{1}{z} X[z] + x[-1] \right] + x[-2] = \frac{1}{z^2} X[z] + \frac{1}{z} x[-1] + x[-2]$$

In general, for integer value of *m*,

$$x[n-m]u[n] \Longleftrightarrow z^{-m}X[z] + z^{-m} \sum_{n=1}^{m} x[-n]z^n$$
(5.15)

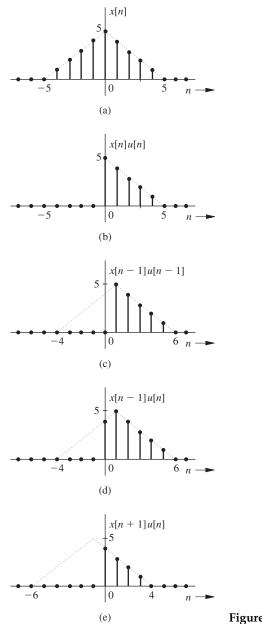

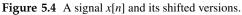

A look at Eqs. (5.12) and (5.14) shows that they are identical except for the extra term x[-1] in Eq. (5.14). We see from Figs. 5.4c and 5.4d that x[n-1]u[n] is the same as x[n-1]u[n-1] plus  $x[-1]\delta[n]$ . Hence, the difference between their transforms is x[-1].

# 5.2 Some Properties of the *z*-Transform 503

**Proof.** For the integer value of *m*,

$$\mathcal{Z}\{x[n-m]u[n-m]\} = \sum_{n=0}^{\infty} x[n-m]u[n-m]z^{-n}$$

Recall that x[n-m]u[n-m] = 0 for n < m so that the limits on the summation on the right-hand side can be taken from n = m to  $\infty$ . Therefore,

$$\mathcal{Z}\{x[n-m]u[n-m]\} = \sum_{n=m}^{\infty} x[n-m]z^{-n}$$
$$= \sum_{r=0}^{\infty} x[r]z^{-(r+m)}$$
$$= \frac{1}{z^m} \sum_{r=0}^{\infty} x[r]z^{-r} = \frac{1}{z^m} X[z]$$

To prove Eq. (5.15), we have

$$\mathcal{Z}\{x[n-m]u[n]\} = \sum_{n=0}^{\infty} x[n-m]z^{-n} = \sum_{r=-m}^{\infty} x[r]z^{-(r+m)}$$
$$= z^{-m} \left[\sum_{r=-m}^{-1} x[r]z^{-r} + \sum_{r=0}^{\infty} x[r]z^{-r}\right]$$
$$= z^{-m} \sum_{n=1}^{m} x[-n]z^{n} + z^{-m}X[z]$$

LEFT SHIFT (ADVANCE) If

$$x[n]u[n] \iff X[z]$$

then

$$x[n+1]u[n] \iff zX[z] - zx[0]$$

Repeated application of this property yields

$$x[n+2]u[n] \iff z\{z(X[z] - zx[0]) - x[1]\} = z^2 X[z] - z^2 x[0] - zx[1]$$

and for the integer value of *m*,

$$x[n+m]u[n] \Longleftrightarrow z^m X[z] - z^m \sum_{n=0}^{m-1} x[n] z^{-n}$$
(5.16)


#### 504 CHAPTER 5 DISCRETE-TIME SYSTEM ANALYSIS USING THE Z-TRANSFORM

**Proof.** By definition,

$$\mathcal{Z}\{x[n+m]u[n]\} = \sum_{n=0}^{\infty} x[n+m]z^{-n}$$
  
=  $\sum_{r=m}^{\infty} x[r]z^{-(r-m)}$   
=  $z^m \sum_{r=m}^{\infty} x[r]z^{-r}$   
=  $z^m \Big[\sum_{r=0}^{\infty} x[r]z^{-r} - \sum_{r=0}^{m-1} x[r]z^{-r}\Big]$   
=  $z^m X[z] - z^m \sum_{r=0}^{m-1} x[r]z^{-r}$ 

# EXAMPLE 5.4 z-Transform Using the Right-Shift Property

Find the *z*-transform of the signal x[n] depicted in Fig. 5.5.

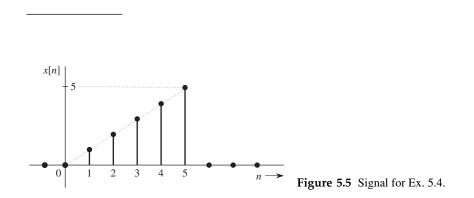

The signal x[n] can be expressed as a product of n and a gate pulse u[n] - u[n - 6]. Therefore,

$$x[n] = n\{u[n] - u[n-6]\} = nu[n] - nu[n-6]$$

We cannot find the z-transform of nu[n-6] directly by using the right-shift property [Eq. (5.13)]. So we rearrange it in terms of (n-6)u[n-6] as follows:

$$x[n] = nu[n] - (n - 6 + 6)u[n - 6]$$
  
= nu[n] - (n - 6)u[n - 6] - 6u[n - 6]

We can now find the z-transform of the bracketed term by using the right-shift property [Eq. (5.13)]. Because  $u[n] \iff z/(z-1)$ ,

$$u[n-6] \Longleftrightarrow \frac{1}{z^6} \frac{z}{z-1} = \frac{1}{z^5(z-1)}$$

Also, because  $nu[n] \iff z/(z-1)^2$ ,

$$(n-6)u[n-6] \iff \frac{1}{z^6} \frac{z}{(z-1)^2} = \frac{1}{z^5(z-1)^2}$$

Therefore,

$$X[z] = \frac{z}{(z-1)^2} - \frac{1}{z^5(z-1)^2} - \frac{6}{z^5(z-1)} = \frac{z^6 - 6z + 5}{z^5(z-1)^2}$$

# DRILL 5.5 z-Transform Using the Right-Shift Property

Using only the fact that  $u[n] \iff z/(z-1)$  and the right-shift property [Eq. (5.13)], find the *z*-transforms of the signals in Figs. 5.2 and 5.3.

#### **ANSWERS**

See Ex. 5.2d and Drill 5.1a.

# 5.2-2 *z*-Domain Scaling Property (Multiplication by $\gamma^n$ )

Scaling in the *z*-domain is equivalent to multiplying a time-domain signal by an exponential. That is, if

$$x[n]u[n] \Longleftrightarrow X[z]$$

then

$$\gamma^{n} x[n] u[n] \Longleftrightarrow X\left[\frac{z}{\gamma}\right]$$
(5.17)

**Proof.** 

$$\mathcal{Z}\{\gamma^n x[n]u[n]\} = \sum_{n=0}^{\infty} \gamma^n x[n] z^{-n} = \sum_{n=0}^{\infty} x[n] \left(\frac{z}{\gamma}\right)^{-n} = X\left[\frac{z}{\gamma}\right]$$

# DRILL 5.6 Using the z-Domain Scaling Property

Use Eq. (5.17) to derive pairs 6 and 8 in Table 5.1 from pairs 2 and 3, respectively.

# 5.2-3 *z*-Domain Differentiation Property (Multiplication by *n*)

Multiplying a signal by n in the time domain produces differentiation in the z-domain. That is, if

$$x[n]u[n] \Longleftrightarrow X[z]$$

then

$$nx[n]u[n] \longleftrightarrow -z\frac{d}{dz}X[z]$$
(5.18)

Proof.

$$-z\frac{d}{dz}X[z] = -z\frac{d}{dz}\sum_{n=0}^{\infty}x[n]z^{-n}$$
$$= -z\sum_{n=0}^{\infty}-nx[n]z^{-n-1}$$
$$= \sum_{n=0}^{\infty}nx[n]z^{-n} = \mathcal{Z}\{nx[n]u[n]\}$$

# DRILL 5.7 Using the z-Domain Differentiation Property

Use Eq. (5.18) to derive pairs 3 and 4 in Table 5.1 from pair 2. Similarly, derive pairs 8 and 9 from pair 6.

# 5.2-4 Time-Reversal Property

If

$$x[n] \iff X[z]$$

 $\text{then}^{\dagger}$ 

$$x[-n] \iff X[1/z]$$

Proof.

$$\mathcal{Z}\{x[-n]\} = \sum_{n=-\infty}^{\infty} x[-n]z^{-n}$$

$$x^*[-n] \iff X^*[1/z^*]$$

<sup>&</sup>lt;sup>†</sup> For complex signal x[n], the time-reversal property is modified as follows:

Changing the sign of the dummy variable *n* yields

$$\mathcal{Z}\{x[-n]\} = \sum_{n=-\infty}^{\infty} x[n] z^n$$
$$= \sum_{n=-\infty}^{\infty} x[n] (1/z)^{-n}$$
$$= X[1/z]$$

The region of convergence is also inverted; that is, if the ROC of x[n] is  $|z| > |\gamma|$ , then the ROC of x[-n] is  $|z| < 1/|\gamma|$ .

# DRILL 5.8 Using the Time-Reversal Property

Use the time-reversal property and pair 2 in Table 5.1 to show that  $u[-n] \iff -1/(z-1)$  with the ROC |z| < 1.

## 5.2-5 Convolution Property

The time-convolution property states that if<sup>‡</sup>

$$x_1[n] \iff X_1[z]$$
 and  $x_2[n] \iff X_2[z]$ ,

then (time convolution)

$$x_1[n] * x_2[n] \Longleftrightarrow X_1[z] X_2[z]$$
(5.19)

**Proof.** This property applies to causal as well as noncausal sequences. We shall prove it for the more general case of noncausal sequences, where the convolution sum ranges from  $-\infty$  to  $\infty$ .

We have

$$\mathcal{Z}\{x_1[n] * x_2[n]\} = \mathcal{Z}\left[\sum_{m=-\infty}^{\infty} x_1[m]x_2[n-m]\right]$$
$$= \sum_{n=-\infty}^{\infty} z^{-n} \sum_{m=-\infty}^{\infty} x_1[m]x_2[n-m]$$

<sup>‡</sup> There is also the frequency-convolution property, which states that

$$x_1[n]x_2[n] \Longleftrightarrow \frac{1}{2\pi j} \oint X_1[u]X_2\left[\frac{z}{u}\right] u^{-1} du$$

#### 508 CHAPTER 5 DISCRETE-TIME SYSTEM ANALYSIS USING THE Z-TRANSFORM

Interchanging the order of summation, we have

$$\mathcal{Z}[x_1[n] * x_2[n]] = \sum_{m=-\infty}^{\infty} x_1[m] \sum_{n=-\infty}^{\infty} x_2[n-m] z^{-n}$$
$$= \sum_{m=-\infty}^{\infty} x_1[m] \sum_{r=-\infty}^{\infty} x_2[r] z^{-(r+m)}$$
$$= \sum_{m=-\infty}^{\infty} x_1[m] z^{-m} \sum_{r=-\infty}^{\infty} x_2[r] z^{-r}$$
$$= X_1[z] X_2[z]$$

# LTID SYSTEM RESPONSE

It is interesting to apply the time-convolution property to the LTID input–output equation y[n] = x[n] \* h[n]. Since  $h[n] \iff H[z]$ , it follows from Eq. (5.19) that

$$Y[z] = X[z]H[z]$$
 (5.20)

# DRILL 5.9 Using the Convolution Property

Use the time-convolution property and appropriate pairs in Table 5.1 to show that u[n] \* u[n-1] = nu[n].

#### INITIAL AND FINAL VALUES

For a causal x[n], the initial value theorem states that

$$x[0] = \lim_{z \to \infty} X[z]$$

This result follows immediately from Eq. (5.7).

If (z-1)X[z] has no poles outside the unit circle, then the final value theorem states that

$$\lim_{N \to \infty} x[N] = \lim_{z \to 1} (z - 1)X[z]$$

This can be shown from the fact that

$$x[n] - x[n-1] \Longleftrightarrow \left\{1 - \frac{1}{z}\right\} X[z] = \frac{(z-1)X[z]}{z}$$

and

$$\frac{(z-1)X[z]}{z} = \sum_{n=-\infty}^{\infty} \{x[n] - x[n-1]\} z^{-n}$$

$$\lim_{z \to 1} \frac{(z-1)X[z]}{z} = \lim_{z \to 1} (z-1)X[z] = \lim_{z \to 1} \lim_{N \to \infty} \sum_{n=-\infty}^{N} \{x[n] - x[n-1]\} z^{-n} = \lim_{N \to \infty} x[N]$$

All these properties of the *z*-transform are listed in Table 5.2.

Operation	x[n]	X[z]
Addition	$x_1[n] + x_2[n]$	$X_1[z] + X_2[z]$
Scalar multiplication	ax[n]	aX[z]
Right shifting	x[n-m]u[n-m]	$\frac{1}{z^m}X[z]$
	x[n-m]u[n]	$\frac{1}{z^m}X[z] + \frac{1}{z^m}\sum_{n=1}^m x[-n]z^n$
	x[n-1]u[n]	$\frac{1}{z}X[z] + x[-1]$
	x[n-2]u[n]	$\frac{1}{z^2}X[z] + \frac{1}{z}x[-1] + x[-2]$
	x[n-3]u[n]	$\frac{1}{z^3}X[z] + \frac{1}{z^2}x[-1] + \frac{1}{z}x[-2] + x[-3]$
Left shifting	x[n+m]u[n]	$z^m X[z] - z^m \sum_{n=0}^{m-1} x[n] z^{-n}$
	x[n+1]u[n]	zX[z] - zx[0]
	x[n+2]u[n]	$z^2 X[z] - z^2 x[0] - z x[1]$
	x[n+3]u[n]	$z^{3}X[z] - z^{3}x[0] - z^{2}x[1] - zx[2]$
Multiplication by $\gamma^n$	$\gamma^n x[n]u[n]$	$X\left[\frac{z}{\gamma}\right]$
Multiplication by <i>n</i>	nx[n]u[n]	$-z\frac{d}{dz}X[z]$
Time reversal	x[-n]	X[1/z]
Time convolution	$x_1[n] * x_2[n]$	$X_1[z]X_2[z]$
Initial value	<i>x</i> [0]	$\lim_{z \to \infty} X[z]$
Final value	$\lim_{N\to\infty} x[N]$	$\lim_{z \to 1} (z-1)X[z]$ Poles of $(z-1)X[z]$ inside the unit circle

**TABLE 5.2**z-Transform Properties

and

# **5.3** *z***-Transform Solution of Linear Difference Equations**

The time-shifting (left-shift or right-shift) property has set the stage for solving linear difference equations with constant coefficients. As in the case of the Laplace transform with differential equations, the *z*-transform converts difference equations into algebraic equations that are readily solved to find the solution in the *z* domain. Taking the inverse *z*-transform of the *z*-domain solution yields the desired time-domain solution. The following examples demonstrate the procedure.

#### **EXAMPLE 5.5** *z*-Transform Solution of a Linear Difference Equation

Solve

$$y[n+2] - 5y[n+1] + 6y[n] = 3x[n+1] + 5x[n]$$

if the initial conditions are  $y[-1] = \frac{11}{6}$ ,  $y[-2] = \frac{37}{36}$ , and the input  $x[n] = (2)^{-n}u[n]$ .

As we shall see, difference equations can be solved by using the right-shift or the left-shift property. Because the difference equation here is in advance form, the use of the left-shift property in Eq. (5.16) may seem appropriate for its solution. Unfortunately, this left-shift property requires a knowledge of auxiliary conditions y[0], y[1], ..., y[N-1] rather than of the initial conditions y[-1], y[-2], ..., y[-n], which are generally given. This difficulty can be overcome by expressing the difference equation in delay form (obtained by replacing *n* with n-2) and then using the right-shift property.<sup>†</sup> The resulting delay-form difference equation is

$$y[n] - 5y[n-1] + 6y[n-2] = 3x[n-1] + 5x[n-2]$$
(5.21)

We now use the right-shift property to take the z-transform of this equation. But before proceeding, we must be clear about the meaning of a term like y[n-1] here. Does it mean y[n-1]u[n-1] or y[n-1]u[n]? In any equation, we must have some time reference n = 0, and every term is referenced from this instant. Hence, y[n-k] means y[n-k]u[n]. Remember also that although we are considering the situation for  $n \ge 0$ , y[n] is present even before n = 0 (in the form of initial conditions). Now

$$y[n]u[n] \iff Y[z]$$
  

$$y[n-1]u[n] \iff \frac{1}{z}Y[z] + y[-1] = \frac{1}{z}Y[z] + \frac{11}{6}$$
  

$$y[n-2]u[n] \iff \frac{1}{z^2}Y[z] + \frac{1}{z}y[-1] + y[-2] = \frac{1}{z^2}Y[z] + \frac{11}{6z} + \frac{37}{36}$$

Noting that for causal input *x*[*n*],

$$x[-1] = x[-2] = \dots = x[-n] = 0$$

<sup>&</sup>lt;sup>†</sup> Another approach is to find y[0], y[1], y[2], ..., y[N-1] from y[-1], y[-2], ..., y[-n] iteratively, as in Sec. 3.5-1, and then apply the left-shift property to the advance-form difference equation.

We obtain

$$x[n] = (2)^{-n}u[n] = (2^{-1})^{n}u[n] = (0.5)^{n}u[n] \Longleftrightarrow \frac{z}{z - 0.5}$$

$$x[n-1]u[n] \iff \frac{1}{z}X[z] + x[-1] = \frac{1}{z}\frac{z}{z-0.5} + 0 = \frac{1}{z-0.5}$$
$$x[n-2]u[n] \iff \frac{1}{z^2}X[z] + \frac{1}{z}x[-1] + x[-2] = \frac{1}{z^2}X[z] + 0 + 0 = \frac{1}{z(z-0.5)}$$

In general,

$$x[n-r]u[n] \Longleftrightarrow \frac{1}{z^r}X[z]$$

Taking the *z*-transform of Eq. (5.21) and substituting the foregoing results, we obtain

$$Y[z] - 5\left[\frac{1}{z}Y[z] + \frac{11}{6}\right] + 6\left[\frac{1}{z^2}Y[z] + \frac{11}{6z} + \frac{37}{36}\right] = \frac{3}{z - 0.5} + \frac{5}{z(z - 0.5)}$$

$$\left(1 - \frac{5}{z} + \frac{6}{2}\right) = \frac{3}{z - 0.5} + \frac{5}{z(z - 0.5)}$$

or

 $\left(1 - \frac{5}{z} + \frac{6}{z^2}\right)Y[z] - \left(3 - \frac{11}{z}\right) = \frac{3}{z - 0.5} + \frac{5}{z(z - 0.5)}$ (5.22)

from which we obtain

$$(z^2 - 5z + 6)Y[z] = \frac{z(3z^2 - 9.5z + 10.5)}{(z - 0.5)}$$

so that

$$Y[z] = \frac{z(3z^2 - 9.5z + 10.5)}{(z - 0.5)(z^2 - 5z + 6)}$$

and

$$\frac{Y[z]}{z} = \frac{3z^2 - 9.5z + 10.5}{(z - 0.5)(z - 2)(z - 3)} = \frac{(26/15)}{z - 0.5} - \frac{(7/3)}{z - 2} + \frac{(18/5)}{z - 3}$$

Therefore,

$$Y[z] = \frac{26}{15} \left(\frac{z}{z-0.5}\right) - \frac{7}{3} \left(\frac{z}{z-2}\right) + \frac{18}{5} \left(\frac{z}{z-3}\right)$$
$$y[n] = \left[\frac{26}{15} (0.5)^n - \frac{7}{3} (2)^n + \frac{18}{5} (3)^n\right] u[n]$$
(5.23)

and

This example demonstrates the ease with which linear difference equations with constant coefficients can be solved by the *z*-transform. This method is general: it can be used to solve a single difference equation or a set of simultaneous difference equations of any order as long as the equations are linear with constant coefficients.

#### Comment.

Sometimes, instead of initial conditions y[-1], y[-2], ..., y[-n], auxiliary conditions y[0], y[1], ..., y[N-1] are given to solve a difference equation. In this case, the equation can be solved by expressing it in the advance form and then using the left-shift property (see Drill 5.11).

#### DRILL 5.10 *z*-Transform Solution of a Linear Difference Equation

Solve the following equation if the initial conditions y[-1] = 2, y[-2] = 0, and the input x[n] = u[n]:

$$y[n+2] - \frac{5}{6}y[n+1] + \frac{1}{6}y[n] = 5x[n+1] - x[n]$$

#### **ANSWER**

 $y[n] = \left[12 - 15\left(\frac{1}{2}\right)^n + \frac{14}{3}\left(\frac{1}{3}\right)^n\right]u[n]$ 

# **DRILL 5.11** Difference Equation Solution Using $y[0], y[1], \ldots, y[N-1]$

Solve the following equation if the auxiliary conditions are y[0] = 1, y[1] = 2, and the input x[n] = u[n]:

y[n] + 3y[n-1] + 2y[n-2] = x[n-1] + 3x[n-2]

#### ANSWER

 $y[n] = \left[\frac{2}{3} + 2(-1)^n - \frac{5}{3}(-2)^n\right] u[n]$ 

## ZERO-INPUT AND ZERO-STATE COMPONENTS

In Ex. 5.5 we found the total solution of the difference equation. It is relatively easy to separate the solution into zero-input and zero-state components. All we have to do is to separate the response into terms arising from the input and terms arising from initial conditions (IC). We can separate the response in Eq. (5.22) as follows:

$$\left(1 - \frac{5}{z} + \frac{6}{z^2}\right) Y[z] - \underbrace{\left(3 - \frac{11}{z}\right)}_{\text{IC terms}} = \underbrace{\frac{3}{z - 0.5} + \frac{5}{z(z - 0.5)}}_{\text{input terms}}$$

Therefore,

$$\left(1 - \frac{5}{z} + \frac{6}{z^2}\right)Y[z] = \underbrace{\left(3 - \frac{11}{z}\right)}_{\text{IC terms}} + \underbrace{\frac{(3z+5)}{z(z-0.5)}}_{\text{input terms}}$$

Multiplying both sides by  $z^2$  yields

$$(z^{2} - 5z + 6)Y[z] = \underbrace{z(3z - 11)}_{\text{IC terms}} + \underbrace{\frac{z(3z + 5)}{z - 0.5}}_{\text{input terms}}$$

and

$$Y[z] = \underbrace{\frac{z(3z-11)}{z^2 - 5z + 6}}_{\text{zero-input response}} + \underbrace{\frac{z(3z+5)}{(z-0.5)(z^2 - 5z + 6)}}_{\text{zero-state response}}$$

We expand both terms on the right-hand side into modified partial fractions to yield

$$Y[z] = \underbrace{\left[5\left(\frac{z}{z-2}\right) - 2\left(\frac{z}{z-3}\right)\right]}_{\text{zero-input response}} + \underbrace{\left[\frac{26}{15}\left(\frac{z}{z-0.5}\right) - \frac{22}{3}\left(\frac{z}{z-2}\right) + \frac{28}{5}\left(\frac{z}{z-3}\right)\right]}_{\text{zero-state response}}$$

and

$$y[n] = \underbrace{(5(2)^n - 2(3)^n) u[n]}_{\text{zero-input response}} + \underbrace{\left(\frac{26}{15}(0.5)^n - \frac{22}{3}(2)^n + \frac{28}{5}(3)^n\right) u[n]}_{\text{zero-state response}}$$
$$= \left[-\frac{7}{3}(2)^n + \frac{18}{5}(3)^n + \frac{26}{15}(0.5)^n\right] u[n]$$

which agrees with the result in Eq. (5.23).

# DRILL 5.12 Separating Zero-Input and Zero-State Responses

Solve

$$y[n+2] - \frac{5}{6}y[n+1] + \frac{1}{6}y[n] = 5x[n+1] - x[n]$$

if the initial conditions are y[-1] = 2, y[-2] = 0, and the input x[n] = u[n]. Separate the response into zero-input and zero-state responses.

#### ANSWER

$$y[n] = \underbrace{\left(3\left(\frac{1}{2}\right)^{n} - \frac{4}{3}\left(\frac{1}{3}\right)^{n}\right)u[n]}_{\text{zero-input response}} + \underbrace{\left(12 - 18\left(\frac{1}{2}\right)^{n} + 6\left(\frac{1}{3}\right)^{n}\right)u[n]}_{\text{zero-state response}}$$
$$= \left[12 - 15\left(\frac{1}{2}\right)^{n} + \frac{14}{3}\left(\frac{1}{3}\right)^{n}\right]u[n]$$

# 5.3-1 Zero-State Response of LTID Systems: The Transfer Function

Consider an Nth-order LTID system specified by the difference equation

$$Q[E]y[n] = P[E]x[n]$$

or

$$(E^{N} + a_{1}E^{N-1} + \dots + a_{N-1}E + a_{N})y[n]$$
  
=  $(b_{0}E^{N} + b_{1}E^{N-1} + \dots + b_{N-1}E + b_{N})x[n]$ 

or

$$y[n+N] + a_1y[n+N-1] + \dots + a_{N-1}y[n+1] + a_Ny[n]$$
  
=  $b_0x[n+N] + \dots + b_{N-1}x[n+1] + b_Nx[n]$  (5.24)

We now derive the general expression for the zero-state response: that is, the system response to input x[n] when all the initial conditions  $y[-1] = y[-2] = \cdots = y[-N] = 0$  (zero state). The input x[n] is assumed to be causal so that  $x[-1] = x[-2] = \cdots = x[-N] = 0$ .

Equation (5.24) can be expressed in delay form as

$$y[n] + a_1 y[n-1] + \dots + a_N y[n-N] = b_0 x[n] + b_1 x[n-1] + \dots + b_N x[n-N]$$
(5.25)

Because y[-r] = x[-r] = 0 for r = 1, 2, ..., N,

$$y[n-m]u[n] \longleftrightarrow \frac{1}{z^m} Y[z]$$
$$x[n-m]u[n] \longleftrightarrow \frac{1}{z^m} X[z] \qquad m = 1, 2, \dots, N$$

Now the z-transform of Eq. (5.25) is given by

$$\left(1 + \frac{a_1}{z} + \frac{a_2}{z^2} + \dots + \frac{a_N}{z^N}\right) Y[z] = \left(b_0 + \frac{b_1}{z} + \frac{b_2}{z^2} + \dots + \frac{b_N}{z^N}\right) X[z]$$

Multiplication of both sides by  $z^N$  yields

$$(z^{N} + a_{1}z^{N-1} + \dots + a_{N-1}z + a_{N})Y[z]$$
  
=  $(b_{0}z^{N} + b_{1}z^{N-1} + \dots + b_{N-1}z + b_{N})X[z]$ 

Therefore,

$$Y[z] = \left(\frac{b_0 z^N + b_1 z^{N-1} + \dots + b_{N-1} z + b_N}{z^N + a_1 z^{N-1} + \dots + a_{N-1} z + a_N}\right) X[z]$$
  
=  $\frac{P[z]}{Q[z]} X[z]$ 

We have shown in Eq. (5.20) that Y[z] = X[z]H[z]. Hence, it follows that

$$H[z] = \frac{P[z]}{Q[z]} = \frac{b_0 z^N + b_1 z^{N-1} + \dots + b_{N-1} z + b_N}{z^N + a_1 z^{N-1} + \dots + a_{N-1} z + a_N}$$
(5.26)

As in the case of LTIC systems, this result leads to an alternative definition of the LTID system transfer function as the ratio of Y[z] to X[z] (assuming all initial conditions zero).

$$H[z] \equiv \frac{Y[z]}{X[z]} = \frac{\mathcal{Z}[\text{zero-state response}]}{\mathcal{Z}[\text{input}]}$$

#### ALTERNATE INTERPRETATION OF THE z-TRANSFORM

So far we have treated the *z*-transform as a machine that converts linear difference equations into algebraic equations. There is no physical understanding of how this is accomplished or what it means. We now discuss more intuitive interpretation and meaning of the *z*-transform.

In Ch. 3, Eq. (3.38), we showed that the LTID system response to an everlasting exponential  $z^n$  is  $H[z]z^n$ . If we could express every discrete-time signal as a linear combination of everlasting exponentials of the form  $z^n$ , we could readily obtain the system response to any input. For example, if

$$x[n] = \sum_{k=1}^{K} X[z_k] z_k^n$$
(5.27)

the response of an LTID system to this input is given by

$$y[n] = \sum_{k=1}^{K} X[z_k] H[z_k] z_k^n$$

Unfortunately, a very small class of signals can be expressed in the form of Eq. (5.27). However, we can express almost all signals of practical utility as a sum of everlasting exponentials over a continuum of values of z. This is precisely what the z-transform in Eq. (5.2) does.

$$x[n] = \frac{1}{2\pi j} \oint X[z] z^{n-1} dz$$
 (5.28)

Invoking the linearity property of the *z*-transform, we can find the system response y[n] to input x[n] in Eq. (5.28) as<sup>†</sup>

$$y[n] = \frac{1}{2\pi j} \oint X[z] H[z] z^{n-1} dz = \mathcal{Z}^{-1} \{X[z] H[z]\}$$

Clearly,

Y[z] = X[z]H[z]

This viewpoint of finding the response of LTID system is illustrated in Fig. 5.6a. Just as in continuous-time systems, we can model discrete-time systems in the transformed manner by

<sup>&</sup>lt;sup>†</sup> In computing y[n], the contour along which the integration is performed is modified to consider the ROC of X[z] as well as H[z]. We ignore this consideration in this intuitive discussion.

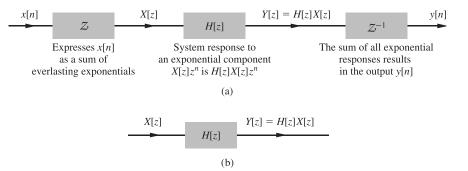


Figure 5.6 The transformed representation of an LTID system.

representing all signals by their *z*-transforms and all system components (or elements) by their transfer functions, as shown in Fig. 5.6b.

The result Y[z] = H[z]X[z] greatly facilitates derivation of the system response to a given input. We shall demonstrate this assertion by an example.

# **EXAMPLE 5.6** Transfer Function to Find the Zero-State Response

Find the response y[n] of an LTID system described by the difference equation

$$y[n+2] + y[n+1] + 0.16y[n] = x[n+1] + 0.32x[n]$$

or

$$(E^{2} + E + 0.16)y[n] = (E + 0.32)x[n]$$

for the input  $x[n] = (-2)^{-n}u[n]$  and with all the initial conditions zero (system in the zero state).

From the difference equation, we find

$$H[z] = \frac{P[z]}{Q[z]} = \frac{z + 0.32}{z^2 + z + 0.16}$$

For the input  $x[n] = (-2)^{-n}u[n] = [(-2)^{-1}]^n u(n) = (-0.5)^n u[n]$ ,

$$X[z] = \frac{z}{z+0.5}$$

and

$$Y[z] = X[z]H[z] = \frac{z(z+0.32)}{(z^2+z+0.16)(z+0.5)}$$

Therefore,

$$\frac{Y[z]}{z} = \frac{(z+0.32)}{(z^2+z+0.16)(z+0.5)} = \frac{(z+0.32)}{(z+0.2)(z+0.8)(z+0.5)}$$
$$= \frac{2/3}{z+0.2} - \frac{8/3}{z+0.8} + \frac{2}{z+0.5}$$

so that

$$Y[z] = \frac{2}{3} \left(\frac{z}{z+0.2}\right) - \frac{8}{3} \left(\frac{z}{z+0.8}\right) + 2 \left(\frac{z}{z+0.5}\right)$$

and

$$y[n] = \left[\frac{2}{3}(-0.2)^n - \frac{8}{3}(-0.8)^n + 2(-0.5)^n\right]u[n]$$

# **EXAMPLE 5.7** Transfer Function of a Unit Delay

Show that the transfer function of a unit delay is 1/z.

If the input to the unit delay is x[n]u[n], then its output (Fig. 5.7) is given by

y[n] = x[n-1]u[n-1]

The *z*-transform of this equation yields [see Eq. (5.12)]

$$Y[z] = \frac{1}{z}X[z] = H[z]X[z]$$

It follows that the transfer function of the unit delay is

$$H[z] = \frac{1}{z}$$

 $\frac{x[n]u[n]}{X[z]} \qquad \frac{1}{z} \qquad \frac{x[n-1]u[n-1]}{Y[z] = \frac{1}{z}X[z]} \qquad Figure 5.7 Ideal unit delay and its transfer function.$ 

# **DRILL 5.13** Transfer Function to Find Zero-State Response and Difference Equation

A discrete-time system is described by the following transfer function:

$$H[z] = \frac{z - 0.5}{(z + 0.5)(z - 1)}$$

- (a) Find the system response to input  $x[n] = 3^{-(n+1)}u[n]$  if all initial conditions are zero.
- (b) Write the difference equation relating the output y[n] to input x[n] for this system.

#### **ANSWERS**

(a) 
$$y[n] = \frac{1}{2} \left[ \frac{1}{2} - 0.8(-0.5)^n + 0.3(\frac{1}{2})^n \right] u[n]$$

(b) y[n+2] = 0.5y[n+1] = 0.5y[n] = x[n+1] = 0.5x[n]

#### 5.3-2 Stability

Equation (5.26) shows that the denominator of H[z] is Q[z], which is apparently identical to the characteristic polynomial  $Q[\gamma]$  defined in Ch. 3. Does this mean that the denominator of H[z] is the characteristic polynomial of the system? This may or may not be the case: if P[z] and Q[z] in Eq. (5.26) have any common factors, they cancel out, and the effective denominator of H[z] is not necessarily equal to Q[z]. Recall also that the system transfer function H[z], like h[n], is defined in terms of measurements at the external terminals. Consequently, H[z] and h[n] are both external descriptions of the system. In contrast, the characteristic polynomial Q[z] is an internal description. Clearly, we can determine only external stability, that is, BIBO stability, from H[z]. If all the poles of H[z] are within the unit circle, all the terms in h[n] are decaying exponentials, and as shown in Sec. 3.9, h[n] is absolutely summable. Consequently, the system is BIBO-stable.

If P[z] and Q[z] do not have common factors, then the denominator of H[z] is identical to Q[z].<sup>†</sup> The poles of H[z] are the characteristic roots of the system. We can now determine internal stability. The internal stability criterion in Sec. 3.9-2 can be restated in terms of the poles of H[z], as follows.

- 1. An LTID system is asymptotically stable if and only if all the poles of its transfer function H[z] are within the unit circle. The poles may be repeated or simple.
- 2. An LTID system is unstable if and only if either one or both of the following conditions exist: (i) at least one pole of H[z] is outside the unit circle; (ii) there are repeated poles of H[z] on the unit circle.

<sup>&</sup>lt;sup>†</sup> There is no way of determining whether any common factors in P[z] and Q[z] were canceled out. This is because in our derivation of H[z], we generally get the final result after the cancellations have been effected. When we use internal description of the system to derive Q[z], however, we find pure Q[z] unaffected by any common factor in P[z].

3. An LTID system is marginally stable if and only if there are no poles of H[z] outside the unit circle, and there are some simple poles on the unit circle.

#### DRILL 5.14 Transfer Function to Determine Stability

Show that an *accumulator* whose impulse response is h[n] = u[n] is marginally stable but BIBO-unstable.

#### 5.3-3 Inverse Systems

If H[z] is the transfer function of a system S, then  $S_i$ , its inverse system, has a transfer function  $H_i[z]$  given by

$$H_i[z] = \frac{1}{H[z]}$$

This follows from the fact the inverse system  $S_i$  undoes the operation of S. Hence, if H[z] is placed in cascade with  $H_i[z]$ , the transfer function of the composite system (identity system) is unity. For example, an *accumulator* whose transfer function is H[z] = z/(z-1) and a *backward difference* system whose transfer function is  $H_i[z] = (z-1)/z$  are inverse of each other. Similarly if

$$H[z] = \frac{z - 0.4}{z - 0.7}$$

its inverse system transfer function is

$$H_i[z] = \frac{z - 0.7}{z - 0.4}$$

as required by the property  $H[z]H_i[z] = 1$ . Hence, it follows that

$$h[n] * h_i[n] = \delta[n]$$

#### **DRILL 5.15** Inverse Systems


Find the impulse responses of an accumulator and a first-order backward difference system. Show that the convolution of the two impulse responses yields  $\delta[n]$ .

# **5.4 System Realization**

Because of the similarity between LTIC and LTID systems, conventions for block diagrams and rules of interconnection for LTID are identical to those for continuous-time (LTIC) systems. It is not necessary to rederive these relationships. We shall merely restate them to refresh the reader's memory.

The block diagram representations of the basic operations, such as an adder, a scalar multiplier, unit delay, and pickoff points, is shown in Fig. 3.13. In our development, the unit delay, which is represented by a box marked D in Fig. 3.13, will be represented by its transfer function 1/z. All the signals will also be represented in terms of their *z*-transforms. Thus, the input and the output will be labeled X[z] and Y[z], respectively.

When two systems with transfer functions  $H_1[z]$  and  $H_2[z]$  are connected in cascade (as in Fig. 4.18b), the transfer function of the composite system is  $H_1[z]H_2[z]$ . If the same two systems are connected in parallel (as in Fig. 4.18c), the transfer function of the composite

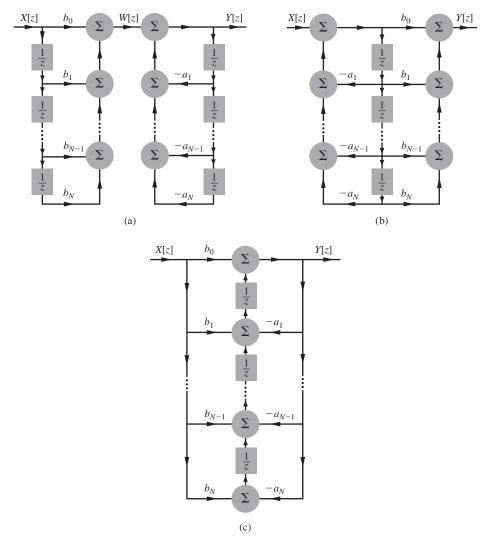

**Figure 5.8** Realization of an *N*th-order causal LTID system transfer function by using (a) DFI, (b) canonic direct (DFII), and (c) the transpose form of DFII.

system is  $H_1[z] + H_2[z]$ . For a feedback system (as in Fig. 4.18d), the transfer function is G[z]/(1 + G[z]H[z]).

We now consider a systematic method for realization (or simulation) of an arbitrary *N*th-order LTID transfer function. Since realization is basically a synthesis problem, there is no unique way of realizing a system. A given transfer function can be realized in many different ways. We present here the two forms of *direct realization*. Each of these forms can be executed in several other ways, such as cascade and parallel. Furthermore, a system can be realized by the transposed version of any known realization of that system. This artifice doubles the number of system realizations. A transfer function H[z] can be realized by using time delays along with adders and multipliers.

We shall consider a realization of a general *N*th-order causal LTID system, whose transfer function is given by

$$H[z] = \frac{b_0 z^N + b_1 z^{N-1} + \dots + b_{N-1} z + b_N}{z^N + a_1 z^{N-1} + \dots + a_{N-1} z + a_N}$$
(5.29)

This equation is identical to the transfer function of a general Nth-order proper LTIC system given in Eq. (4.36). The only difference is that the variable z in the former is replaced by the variable s in the latter. Hence, the procedure for realizing an LTID transfer function is identical to that for the LTIC transfer function with the basic element 1/s (integrator) replaced by the element 1/z(unit delay). The reader is encouraged to follow the steps in Sec. 4.6 and rederive the results for the LTID transfer function in Eq. (5.29). Here we shall merely reproduce the realizations from Sec. 4.6 with integrators (1/s) replaced by unit delays (1/z).

The direct form I (DFI) is shown in Fig. 5.8a, the canonic direct form (DFII) is shown in Fig. 5.8b and the transpose of canonic direct is shown in Fig. 5.8c. The DFII and its transpose are canonic because they require N delays, which is the minimum number needed to implement the Nth-order LTID transfer function in Eq. (5.29). In contrast, the form DFI is a noncanonic because it generally requires 2N delays. The DFII realization in Fig. 5.8b is also called a *canonic direct* form.

#### **EXAMPLE 5.8** Canonical Realizations of Transfer Functions

Find the canonic direct and the transposed canonic direct realizations of the following transfer functions: (a)  $\frac{2}{z+5}$ , (b)  $\frac{4z+28}{z+1}$ , (c)  $\frac{z}{z+7}$ , and (d)  $\frac{4z+28}{z^2+6z+5}$ .

All four of these transfer functions are special cases of H[z] in Eq. (5.29). (a)

$$H[z] = \frac{2}{z+5}$$

For this case, the transfer function is of the first order (N = 1); therefore, we need only one delay for its realization. The feedback and feedforward coefficients are

$$a_1 = 5$$
 and  $b_0 = 0$ ,  $b_1 = 2$ 

We use Fig. 5.8 as our model and reduce it to the case of N = 1. Figure 5.9a shows the canonic direct (DFII) form, and Fig. 5.9b its transpose. The two realizations are almost the same. The minor difference is that in the DFII form, the gain 2 is provided at the output, and in the transpose, the same gain is provided at the input.

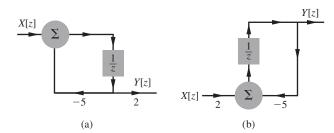


Figure 5.9 Realization of transfer function 2/(z+5): (a) canonic direct form and (b) its transpose.


In a similar way, we realize the remaining transfer functions. (b)

$$H[z] = \frac{4z + 28}{z+1}$$

In this case also, the transfer function is of the first order (N = 1); therefore, we need only one delay for its realization. The feedback and feedforward coefficients are

$$a_1 = 1$$
 and  $b_0 = 4$ ,  $b_1 = 28$ 

Figure 5.10 illustrates the canonic direct and its transpose for this case.<sup>†</sup>

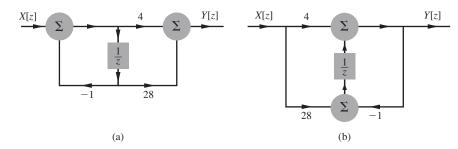

**Figure 5.10** Realization of (4z+28)/(z+1): (a) canonic direct form and (b) its transpose.

$$H[z] = \frac{4z+28}{z+1} = 4 + \frac{24}{z+1}$$


Hence, this transfer function can also be realized as two transfer functions in parallel.

522

<sup>&</sup>lt;sup>†</sup> Transfer functions with N = M may also be expressed as a sum of a constant and a strictly proper transfer function. For example,

$$H[z] = \frac{z}{z+7}$$

Here N = 1 and  $b_0 = 1, b_1 = 0$  and  $a_1 = 7$ . Figure 5.11 shows the direct and the transposed realizations. Observe that the realizations are almost alike.

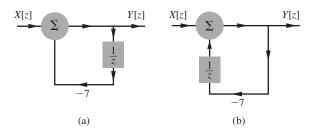


**Figure 5.11** Realization of z/(z+7): (a) canonic direct form and (b) its transpose.

(**d**)

$$H[z] = \frac{4z + 28}{z^2 + 6z + 5}$$

This is a second-order system (N = 2) with  $b_0 = 0$ ,  $b_1 = 4$ ,  $b_2 = 28$ ,  $a_1 = 6$ ,  $a_2 = 5$ . Figure 5.12 shows the canonic direct and transposed canonic direct realizations.

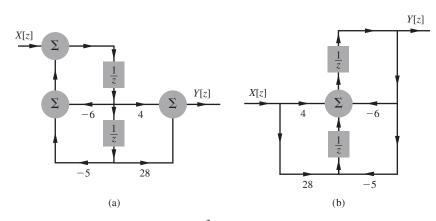

**Figure 5.12** Realization of  $(4z+28)/(z^2+6z+5)$ : (a) canonic direct form and (b) its transpose.

(c)

## DRILL 5.16 Realization of a Second-Order Transfer Function

Realize the transfer function


$$H[z] = \frac{2z}{z^2 + 6z + 25}$$

## **REALIZATION OF FINITE IMPULSE RESPONSE (FIR) FILTERS**

So far we have been quite general in our development of realization techniques. They can be applied to infinite impulse response (IIR) or FIR filters. For FIR filters, the coefficients  $a_i = 0$  for all  $i \neq 0$ .<sup>†</sup> Hence, FIR filters can be readily implemented by means of the schemes developed so far by eliminating all branches with  $a_i$  coefficients. The condition  $a_i = 0$  implies that all the poles of a FIR filter are at z = 0.

## **EXAMPLE 5.9** Realization of an FIR Filter

Realize  $H[z] = (z^3 + 4z^2 + 5z + 2)/z^3$  using canonic direct and transposed forms.

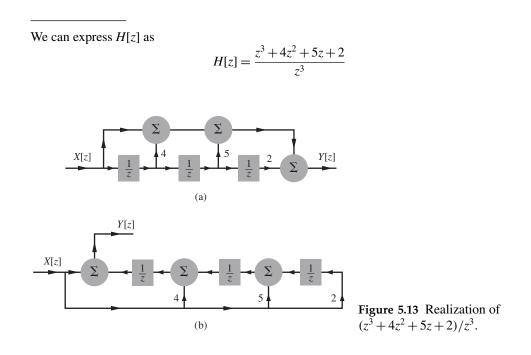

<sup>&</sup>lt;sup>†</sup> This statement is true for all  $i \neq 0$  because  $a_0$  is assumed to be unity.

For H[z],  $b_0 = 1$ ,  $b_1 = 4$ ,  $b_2 = 5$ , and  $b_3 = 2$ . Hence, we obtain the canonic direct realization, shown in Fig. 5.13a. We have shown the horizontal orientation because it is easier to see that this filter is basically a tapped delay line. That is why this structure is also known as a *tapped delay line* or *transversal filter*. Figure 5.13b shows the corresponding transposed implementation.

## CASCADE AND PARALLEL REALIZATIONS, COMPLEX AND REPEATED POLES

The considerations and observations for cascade and parallel realizations as well as complex and multiple poles are identical to those discussed for LTIC systems in Sec. 4.6-3.

# DRILL 5.17 Cascade and Parallel Realizations of a Transfer Function

Find canonic direct realizations of the following transfer function by using the cascade and parallel forms. The specific cascade decomposition is as follows:

$$H[z] = \frac{z+3}{z^2+7z+10} = \left(\frac{z+3}{z+2}\right) \left(\frac{1}{z+5}\right)$$

## DO ALL REALIZATIONS LEAD TO THE SAME PERFORMANCE?

For a given transfer function, we have presented here several possible different realizations (DFI, canonic form DFII, and its transpose). There are also cascade and parallel versions, and there are many possible grouping of the factors in the numerator and the denominator of H[z], leading to different realizations. We can also use various combinations of these forms in implementing different subsections of a system. Moreover, the transpose of each version doubles the number. However, this discussion by no means exhausts all the possibilities. Transforming variables affords limitless potential realizations of the same transfer function.

Theoretically, all these realizations are equivalent; that is, they lead to the same transfer function. This, however, is true only when we implement them with infinite precision. In practice, finite wordlength restriction causes each realization to behave differently in terms of sensitivity to parameter variation, stability, frequency response distortion error, and so on. These effects are serious for higher-order transfer functions, which require correspondingly higher numbers of delay elements. The finite wordlength errors that plague these implementations are coefficient quantization, overflow errors, and round-off errors. From a practical viewpoint, parallel and cascade forms using low-order filters minimize the effects of finite wordlength. Parallel and certain cascade forms are numerically less sensitive than the canonic direct form to small parameter variations in the system. In the canonic direct form structure with large N, a small change in a filter coefficient due to parameter quantization results in a large change in the location of the poles and the zeros of the system. Qualitatively, this difference can be explained by the fact that

in a direct form (or its transpose), all the coefficients interact with each other, and a change in any coefficient will be magnified through its repeated influence from feedback and feedforward connections. In a parallel realization, in contrast, a change in a coefficient will affect only a localized segment; the case of a cascade realization is similar. For this reason, the most popular technique for minimizing finite wordlength effects is to design filters by using cascade or parallel forms employing low-order filters. In practice, high-order filters are realized by using multiple second-order sections in cascade, because second-order filters not only are easier to design but are less susceptible to coefficient quantization and round-off errors, and their implementations allow easier data word scaling to reduce the potential overflow effects of data word-size growth. A cascaded system using second-order building blocks usually requires fewer multiplications for a given filter frequency response [1].

There are several ways to pair the poles and zeros of an Nth-order H[z] into a cascade of second-order sections, and several ways to order the resulting sections. Quantizing error will be different for each combination. Although several papers published provide guidelines in predicting and minimizing finite wordlength errors, it is advisable to resort to computer simulation of the filter design. This way, one can vary filter hardware characteristic, such as coefficient wordlengths, accumulator register sizes, sequencing of cascaded sections, and input signal sets. Such an approach is both reliable and economical [1].

# 5.5 FREQUENCY RESPONSE OF DISCRETE-TIME SYSTEMS

For (asymptotically or BIBO-stable) continuous-time systems, we showed that the system response to an input  $e^{j\omega t}$  is  $H(j\omega)e^{j\omega t}$  and that the response to an input  $\cos \omega t$  is  $|H(j\omega)|\cos[\omega t + \langle H(j\omega)]$ . Similar results hold for discrete-time systems. We now show that for an (asymptotically or BIBO-stable) LTID system, the system response to an input  $e^{j\Omega n}$  is  $H[e^{j\Omega}]e^{j\Omega n}$  and the response to an input  $\cos \Omega n$  is  $|H[e^{j\Omega}]|\cos(\Omega n + \langle H[e^{j\Omega}])$ .

The proof is similar to the one used for continuous-time systems. In Sec. 3.8-2, we showed that an LTID system response to an (everlasting) exponential  $z^n$  is also an (everlasting) exponential  $H[z]z^n$ . This result is valid only for values of z for which H[z], as defined in Eq. (5.11), exists (converges). As usual, we represent this input–output relationship by a directed arrow notation as

$$z^n \Longrightarrow H[z] z^n \tag{5.30}$$

Setting  $z = e^{j\Omega}$  in this relationship yields

$$e^{j\Omega n} \Longrightarrow H[e^{j\Omega}]e^{j\Omega n} \tag{5.31}$$

Noting that  $\cos \Omega n$  is the real part of  $e^{i\Omega n}$ , use of Eq. (3.34) yields

$$\cos \Omega n \Longrightarrow \operatorname{Re} \left\{ H[e^{j\Omega}] e^{j\Omega n} \right\}$$
(5.32)

Expressing  $H[e^{j\Omega}]$  in the polar form

$$H[e^{j\Omega}] = |H[e^{j\Omega}]|e^{j \angle H[e^{j\Omega}]}$$

Eq. (5.32) can be expressed as

$$\cos \Omega n \Longrightarrow |H[e^{j\Omega}]| \cos \left(\Omega n + \angle H[e^{j\Omega}]\right)$$

In other words, the system response y[n] to a sinusoidal input  $\cos \Omega n$  is given by

$$y[n] = |H[e^{j\Omega}]| \cos\left(\Omega n + \angle H[e^{j\Omega}]\right)$$

Following the same argument, the system response to a sinusoid  $\cos(\Omega n + \theta)$  is

$$y[n] = |H[e^{j\Omega}]|\cos\left(\Omega n + \theta + \angle H[e^{j\Omega}]\right)$$
(5.33)

This result is valid only for BIBO-stable or asymptotically stable systems. The frequency response is meaningless for BIBO-unstable systems (which include marginally stable and asymptotically unstable systems). This follows from the fact that the frequency response in Eq. (5.31) is obtained by setting  $z = e^{i\Omega}$  in Eq. (5.30). But, as shown in Sec. 3.8-2 [Eqs. (3.38) and (3.39)], the relationship of Eq. (5.30) applies only for values of z for which H[z] exists. For BIBO-unstable systems, the ROC for H[z] does not include the unit circle where  $z = e^{i\Omega}$ . This means, for BIBO-unstable systems, that H[z] is meaningless when  $z = e^{i\Omega}$ .<sup>†</sup>

This important result shows that the response of an asymptotically or BIBO-stable LTID system to a discrete-time sinusoidal input of frequency  $\Omega$  is also a discrete-time sinusoid of the same frequency. The amplitude of the output sinusoid is  $|H[e^{j\Omega}]|$  times the input amplitude, and the phase of the output sinusoid is shifted by  $\angle H[e^{j\Omega}]|$  with respect to the input phase. Clearly,  $|H[e^{i\Omega}]|$  is the amplitude gain, and a plot of  $|H[e^{j\Omega}]|$  versus  $\Omega$  is the amplitude response of the discrete-time system. Similarly,  $\angle H[e^{j\Omega}]$  is the phase response of the system, and a plot of  $\angle H[e^{j\Omega}]|$  versus  $\Omega$  shows how the system modifies or shifts the phase of the input sinusoid. Note that  $H[e^{j\Omega}]|$  incorporates the information of both amplitude and phase responses and therefore is called the frequency responses of the system.

#### STEADY-STATE RESPONSE TO CAUSAL SINUSOIDAL INPUT

As in the case of continuous-time systems, we can show that the response of an LTID system to a causal sinusoidal input  $\cos \Omega n u[n]$  is y[n] in Eq. (5.33), plus a natural component consisting of the characteristic modes (see Prob. 5.5-9). For a stable system, all the modes decay exponentially, and only the sinusoidal component in Eq. (5.33) persists. For this reason, this component is called the sinusoidal *steady-state* response of the system. Thus,  $y_{ss}[n]$ , the steady-state response of a system to a causal sinusoidal input  $\cos \Omega n u[n]$ , is

$$y_{ss}[n] = |H[e^{j\Omega}]| \cos{(\Omega n + \angle H[e^{j\Omega}])u[n]}$$

#### SYSTEM RESPONSE TO SAMPLED CONTINUOUS-TIME SINUSOIDS

So far we have considered the response of a discrete-time system to a discrete-time sinusoid  $\cos \Omega n$  (or exponential  $e^{j\Omega n}$ ). In practice, the input may be a sampled continuous-time sinusoid  $\cos \omega t$  (or an exponential  $e^{j\omega t}$ ). When a sinusoid  $\cos \omega t$  is sampled with sampling interval T, the resulting

<sup>&</sup>lt;sup>†</sup>This may also be argued as follows. For BIBO-unstable systems, the zero-input response contains nondecaying natural mode terms of the form  $\cos \Omega_0 n$  or  $\gamma^n \cos \Omega_0 n$  ( $\gamma > 1$ ). Hence, the response of such a system to a sinusoid  $\cos \Omega n$  will contain not just the sinusoid of frequency  $\Omega$  but also nondecaying natural modes, rendering the concept of frequency response meaningless. Alternately, we can argue that when  $z = e^{j\Omega}$ , a BIBO-unstable system violates the dominance condition  $|\gamma_i| < |e^{j\Omega}|$  for all *i*, where  $\gamma_i$  represents *i*th characteristic root of the system.

signal is a discrete-time sinusoid  $\cos \omega nT$ , obtained by setting t = nT in  $\cos \omega t$ . Therefore, all the results developed in this section apply if we substitute  $\omega T$  for  $\Omega$ :

$$\Omega = \omega T \tag{5.34}$$

## **EXAMPLE 5.10** Sinusoidal Response of a Difference Equation System

For a system specified by the equation

$$y[n+1] - 0.8y[n] = x[n+1]$$

find the system response to the inputs

(a) 
$$1^n = 1$$
  
(b)  $\cos\left[\frac{\pi}{6}n - 0.2\right]$ 

(c) a sampled sinusoid  $\cos 1500t$  with sampling interval T = 0.001

The system equation can be expressed as

$$(E - 0.8)y[n] = Ex[n]$$

Therefore, the transfer function of the system is

$$H[z] = \frac{z}{z - 0.8} = \frac{1}{1 - 0.8z^{-1}}$$

The frequency response is

$$H[e^{j\Omega}] = \frac{1}{1 - 0.8e^{-j\Omega}} = \frac{1}{(1 - 0.8\cos\Omega) + j0.8\sin\Omega}$$

Therefore,

$$|H[e^{j\Omega}]| = \frac{1}{\sqrt{(1 - 0.8\cos\Omega)^2 + (0.8\sin\Omega)^2}} = \frac{1}{\sqrt{1.64 - 1.6\cos\Omega}}$$
(5.35)

and

$$\angle H[e^{j\Omega}] = -\tan^{-1}\left[\frac{0.8\sin\Omega}{1 - 0.8\cos\Omega}\right]$$
(5.36)

The amplitude response  $|H[e^{j\Omega}]|$  can also be obtained by observing that  $|H|^2 = HH^*$ . Since our system is real, we therefore see that

$$|H[e^{j\Omega}]|^{2} = H[e^{j\Omega}]H^{*}[e^{j\Omega}] = H[e^{j\Omega}]H[e^{-j\Omega}]$$
(5.37)

Substituting for  $H[e^{j\Omega}]$ , it follows that

$$|H[e^{j\Omega}]|^2 = \left(\frac{1}{1 - 0.8e^{-j\Omega}}\right) \left(\frac{1}{1 - 0.8e^{j\Omega}}\right) = \frac{1}{1.64 - 1.6\cos\Omega}$$

which matches the result found earlier.

Figure 5.14 shows plots of amplitude and phase response as functions of  $\Omega$ . We now compute the amplitude and the phase response for the various inputs.

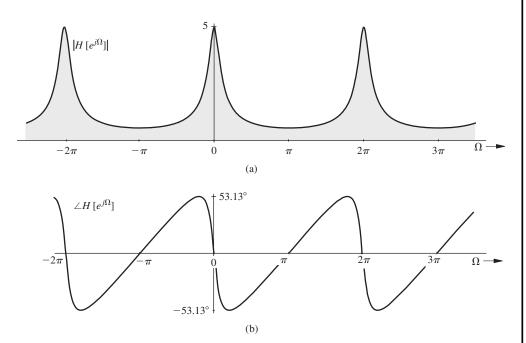


Figure 5.14 Frequency response of the LTID system.

(a) Since  $1^n = (e^{j\Omega})^n$  with  $\Omega = 0$ , the amplitude response is  $H[e^{j0}]$ . From Eq. (5.35) we obtain

$$H[e^{j0}] = \frac{1}{\sqrt{1.64 - 1.6\cos(0)}} = \frac{1}{\sqrt{0.04}} = 5 = 5\angle 0$$

Therefore,

$$|H[e^{j0}]| = 5$$
 and  $\angle H[e^{j0}] = 0$ 

These values also can be read directly from Figs. 5.14a and 5.14b, respectively, corresponding to  $\Omega = 0$ . Therefore, the system response to input 1 is

$$y[n] = 5(1^n) = 5$$
 for all *n*

(**b**) For  $x[n] = \cos[(\pi/6)n - 0.2]$ ,  $\Omega = \pi/6$ . According to Eqs. (5.35) and (5.36),

$$|H[e^{j\pi/6}]| = \frac{1}{\sqrt{1.64 - 1.6\cos\frac{\pi}{6}}} = 1.983$$
$$\angle H[e^{j\pi/6}] = -\tan^{-1}\left[\frac{0.8\sin\frac{\pi}{6}}{1 - 0.8\cos\frac{\pi}{6}}\right] = -0.916 \text{ rad}$$

These values also can be read directly from Figs. 5.14a and 5.14b, respectively, corresponding to  $\Omega = \pi/6$ . Therefore,

$$y[n] = 1.983 \cos\left(\frac{\pi}{6}n - 0.2 - 0.916\right) = 1.983 \cos\left(\frac{\pi}{6}n - 1.116\right)$$

Figure 5.15 shows the input x[n] and the corresponding system response.

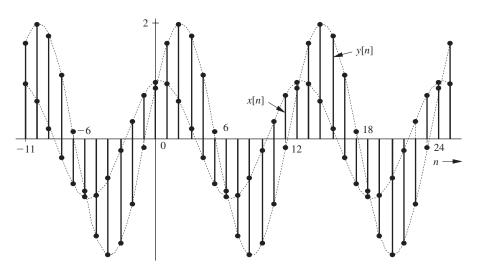


Figure 5.15 Sinusoidal input and the corresponding output of the LTID system.

(c) A sinusoid cos 1500t sampled every T seconds (t = nT) results in a discrete-time sinusoid

$$x[n] = \cos 1500nT$$

For T = 0.001, the input is

 $x[n] = \cos\left(1.5n\right)$ 

In this case,  $\Omega = 1.5$ . According to Eqs. (5.35) and (5.36),

$$|H[e^{j1.5}]| = \frac{1}{\sqrt{1.64 - 1.6\cos(1.5)}} = 0.809$$
$$\angle H[e^{j1.5}] = -\tan^{-1} \left[ \frac{0.8\sin(1.5)}{1 - 0.8\cos(1.5)} \right] = -0.702 \text{ rad}$$

These values also could be read directly from Fig. 5.14 corresponding to  $\Omega = 1.5$ . Therefore,

$$y[n] = 0.809 \cos(1.5n - 0.702)$$

## FREQUENCY RESPONSE PLOTS USING MATLAB

MATLAB makes it easy to compute and plot magnitude and phase responses directly using a system's transfer function. As the following code demonstrates, there is no need to derive separate expressions for the magnitude and phase responses.

>> Omega = linspace(-pi,pi,400); H = @(z) z./(z-0.8);


>> subplot(1,2,1); plot(Omega,abs(H(exp(1j\*Omega))),'k'); axis tight;

>> xlabel('\Omega'); ylabel('|H[e^{j \Omega}]|');

>> subplot(1,2,2); plot(Omega,angle(H(exp(1j\*Omega))\*180/pi),'k'); axis tight;

```
>> xlabel('\Omega'); ylabel('\angle H[e^{j \Omega}] [deg]');
```

The resulting plots, shown in Fig. 5.16, confirm the earlier results of Fig. 5.14.

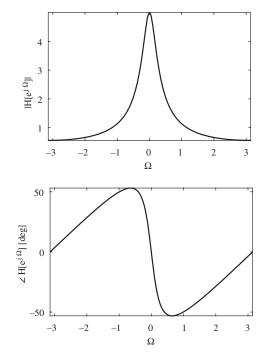



**Comment:** Figures 5.14 and 5.16 show amplitude and phase response plots as functions of  $\Omega$ . These plots as well as Eqs. (5.35) and (5.36) indicate that the frequency response of a discrete-time system is a continuous (rather than discrete) function of frequency  $\Omega$ . There is no contradiction here. This behavior is merely an indication of the fact that the frequency variable  $\Omega$  is continuous (takes on all possible values) and therefore the system response exists at every value of  $\Omega$ .

## **DRILL 5.18** Frequency Response of Difference Equation

For a system specified by the equation

$$y[n+1] - 0.5y[n] = x[n]$$

find the amplitude and the phase response. Find the system response to sinusoidal input  $\cos[1000t - (\pi/3)]$  sampled every T = 0.5 ms.

#### ANSWER

$$|H[e^{j\Omega}]| = \frac{1}{\sqrt{1.25 - \cos \Omega}}$$
$$\angle H[e^{j\Omega}] = -\tan^{-1} \left[ \frac{\sin \Omega}{\cos \Omega - 0.5} \right]$$
$$y[n] = 1.639 \cos \left( 0.5n - \frac{\pi}{3} - 0.904 \right) = 1.639 \cos \left( 0.5n - 1.951 \right)$$

#### DRILL 5.19 Frequency Response of an Ideal Delay System

Show that for an ideal delay (H[z] = 1/z), the amplitude response  $|H[e^{j\Omega}]| = 1$ , and the phase response  $\angle H[e^{j\Omega}] = -\Omega$ . Thus, a pure time delay does not affect the amplitude gain of sinusoidal input, but it causes a phase shift (delay) of  $\Omega$  radians in a discrete sinusoid of frequency  $\Omega$ . Thus, for an ideal delay, the phase shift of the output sinusoid is proportional to the frequency of the input sinusoid (linear phase shift).

## 5.5-1 The Periodic Nature of Frequency Response

In Ex. 5.10 and Fig. 5.14, we saw that the frequency response  $H[e^{i\Omega}]$  is a periodic function of  $\Omega$ . This is not a coincidence. Unlike continuous-time systems, all LTID systems have periodic frequency response. This is seen clearly from the nature of the expression of the frequency

response of an LTID system. Because  $e^{\pm j2\pi m} = 1$  for all integer values of m [see Eq. (B.10)],

$$H[e^{j\Omega}] = H[e^{j(\Omega+2\pi m)}]$$
 m integer

Therefore, the frequency response  $H[e^{j\Omega}]$  is a periodic function of  $\Omega$  with a period  $2\pi$ . This is the mathematical explanation of the periodic behavior. The physical explanation that follows provides a much better insight into the periodic behavior.

#### NON-UNIQUENESS OF DISCRETE-TIME SINUSOID WAVEFORMS

A continuous-time sinusoid  $\cos \omega t$  has a unique waveform for every real value of  $\omega$  in the range 0 to  $\infty$ . Increasing  $\omega$  results in a sinusoid of ever-increasing frequency. Such is not the case for the discrete-time sinusoid  $\cos \Omega n$  because

$$\cos[(\Omega \pm 2\pi m)n] = \cos \Omega n$$
 m integer

and

$$e^{j(\Omega \pm 2\pi m)n} = e^{j\Omega n}$$
 m integer

This shows that the discrete-time sinusoids  $\cos \Omega n$  (and exponentials  $e^{j\Omega n}$ ) separated by values of  $\Omega$  in integral multiples of  $2\pi$  are identical. The reason for the periodic nature of the frequency response of an LTID system is now clear. Since the sinusoids (or exponentials) with frequencies separated by interval  $2\pi$  are identical, the system response to such sinusoids is also identical and, hence, is periodic with period  $2\pi$ .

This discussion shows that the discrete-time sinusoid  $\cos \Omega n$  has a unique waveform only for the values of  $\Omega$  in the range  $-\pi$  to  $\pi$ . This band is called the *fundamental band*. Every frequency  $\Omega$ , no matter how large, is identical to some frequency,  $\Omega_a$ , in the fundamental band  $(-\pi \leq \Omega_a < \pi)$ , where

$$\Omega_a = \Omega - 2\pi m \qquad -\pi \le \Omega_a < \pi \quad \text{and} \quad m \text{ integer} \tag{5.38}$$

The integer *m* can be positive or negative. We use Eq. (5.38) to plot the fundamental band frequency  $\Omega_a$  versus the frequency  $\Omega$  of a sinusoid (Fig. 5.17a). The frequency  $\Omega_a$  is modulo  $2\pi$  value of  $\Omega$ .

All these conclusions are also valid for exponential  $e^{j\Omega n}$ .

#### ALL DISCRETE-TIME SIGNALS ARE INHERENTLY BANDLIMITED

This discussion leads to the surprising conclusion that all discrete-time signals are inherently bandlimited, with frequencies lying in the range  $-\pi$  to  $\pi$  radians per sample. In terms of frequency  $\mathcal{F} = \Omega/2\pi$ , where  $\mathcal{F}$  is in cycles per sample, all frequencies  $\mathcal{F}$  separated by an integer number are identical. For instance, all discrete-time sinusoids of frequencies 0.3, 1.3, 2.3, . . . cycles per sample are identical. The fundamental range of frequencies is -0.5 to 0.5 cycles per sample.

Any discrete-time sinusoid of frequency beyond the fundamental band, when plotted, appears and behaves, in every way, like a sinusoid having its frequency in the fundamental band. It is impossible to distinguish between the two signals. Thus, in a basic sense, discrete-time frequencies beyond  $|\Omega| = \pi$  or  $|\mathcal{F}| = 1/2$  do not exist. Yet, in a "mathematical" sense, we must admit the existence of sinusoids of frequencies beyond  $\Omega = \pi$ . What does this mean?

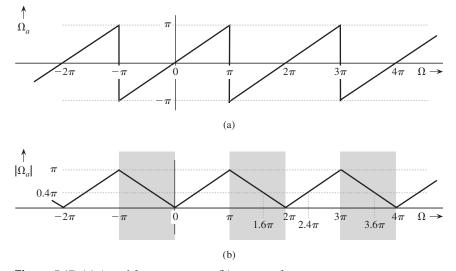


Figure 5.17 (a) Actual frequency versus (b) apparent frequency.

## A MAN NAMED ROBERT

To give an analogy, consider a fictitious person Mr. Robert Thompson. His mother calls him Robby; his acquaintances call him Bob, his close friends call him by his nickname, Shorty. Yet, Robert, Robby, Bob, and Shorty are one and the same person. However, we cannot say that only Mr. Robert Thompson exists, or only Robby exists, or only Shorty exists, or only Bob exists. All these four persons exist, although they are one and the same individual. In a same way, we cannot say that the frequency  $\pi/2$  exists and frequency  $5\pi/2$  does not exist; they are both the same entity, called by different names.

It is in this sense that we have to admit the existence of frequencies beyond the fundamental band. Indeed, mathematical expressions in the frequency domain automatically cater to this need by their built-in periodicity. As seen earlier, the very structure of the frequency response is  $2\pi$ -periodic. We shall also see later, in Ch. 9, that discrete-time signal spectra are also  $2\pi$ -periodic.

Admitting the existence of frequencies beyond  $\pi$  also serves mathematical and computational convenience in digital signal-processing applications. Values of frequencies beyond  $\pi$  may also originate naturally in the process of sampling continuous-time sinusoids. Because there is no upper limit on the value of  $\omega$ , there is no upper limit on the value of the resulting discrete-time frequency  $\Omega = \omega T$  either.<sup>†</sup>

The highest possible frequency is  $\pi$  and the lowest frequency is 0 (dc or constant). Clearly, the high frequencies are those in the vicinity of  $\Omega = (2m + 1)\pi$  and the low frequencies are those in the vicinity of  $\Omega = 2\pi m$  for all positive or negative integer values of m.

<sup>&</sup>lt;sup>†</sup> However, if  $\Omega$  goes beyond  $\pi$ , the resulting aliasing reduces the apparent frequency to  $\Omega_a < \pi$ .

#### FURTHER REDUCTION IN THE FREQUENCY RANGE

Because  $\cos(-\Omega n + \theta) = \cos(\Omega n - \theta)$ , a frequency in the range  $-\pi$  to 0 is identical to the frequency (of the same magnitude) in the range 0 to  $\pi$  (but with a change in phase sign). Consequently the *apparent frequency* for a discrete-time sinusoid of any frequency is equal to some value in the range 0 to  $\pi$ . Thus,  $\cos(8.7\pi n + \theta) = \cos(0.7\pi n + \theta)$ , and the apparent frequency is  $0.7\pi$ . Similarly,

$$\cos\left(9.6\pi n + \theta\right) = \cos\left(-0.4\pi n + \theta\right) = \cos\left(0.4\pi n - \theta\right)$$

Hence, the frequency  $9.6\pi$  is identical (in every respect) to frequency  $-0.4\pi$ , which, in turn, is equal (within the sign of its phase) to frequency  $0.4\pi$ . In this case, the apparent frequency reduces to  $|\Omega_a| = 0.4\pi$ . We can generalize the result to say that the apparent frequency of a discrete-time sinusoid  $\Omega$  is  $|\Omega_a|$ , as found from Eq. (5.38), and if  $\Omega_a < 0$ , there is a phase reversal. Figure 5.17b plots  $\Omega$  versus the apparent frequency  $|\Omega_a|$ . The shaded bands represent the ranges of  $\Omega$  for which there is a phase reversal, when represented in terms of  $|\Omega_a|$ . For example, the apparent frequency for both the sinusoids  $\cos(2.4\pi + \theta)$  and  $\cos(3.6\pi + \theta)$  is  $|\Omega_a| = 0.4\pi$ , as seen from Fig. 5.17b. But  $2.4\pi$  is in a clear band and  $3.6\pi$  is in a shaded band. Hence, these sinusoids appear as  $\cos(0.4\pi + \theta)$  and  $\cos(0.4\pi - \theta)$ , respectively.

Although every discrete-time sinusoid can be expressed as having frequency in the range from 0 to  $\pi$ , we generally use the frequency range from  $-\pi$  to  $\pi$  instead of 0 to  $\pi$  for two reasons. First, exponential representation of sinusoids with frequencies in the range 0 to  $\pi$  requires a frequency range  $-\pi$  to  $\pi$ . Second, even when we are using a trigonometric representation, we generally need the frequency range  $-\pi$  to  $\pi$  to have exact identity (without phase reversal) of a higher-frequency sinusoid.

For certain practical advantages, in place of the range  $-\pi$  to  $\pi$ , we often use other contiguous ranges of width  $2\pi$ . The range 0 to  $2\pi$ , for instance, is used in many applications. It is left as an exercise for the reader to show that the frequencies in the range from  $\pi$  to  $2\pi$  are identical to those in the range from  $-\pi$  to 0.

## **EXAMPLE 5.11** Apparent Frequency

Express the following signals in terms of their apparent frequencies: (a)  $\cos(0.5\pi n + \theta)$ , (b)  $\cos(1.6\pi n + \theta)$ , (c)  $\sin(1.6\pi n + \theta)$ , (d)  $\cos(2.3\pi n + \theta)$ , and (e)  $\cos(34.699n + \theta)$ .

(a)  $\Omega = 0.5\pi$  is in the reduced range already. This is also apparent from Fig. 5.17a or 5.17b. Because  $\Omega_a = 0.5\pi$ , there is no phase reversal, and the apparent sinusoid is  $\cos(0.5\pi n + \theta)$ .

(b) We express  $1.6\pi = -0.4\pi + 2\pi$  so that  $\Omega_a = -0.4\pi$  and  $|\Omega_a| = 0.4$ . Also,  $\Omega_a$  is negative, implying sign change for the phase. Hence, the apparent sinusoid is  $\cos(0.4\pi n - \theta)$ . This fact is also apparent from Fig. 5.17b.

(c) We first convert the sine form to cosine form as  $\sin(1.6\pi n + \theta) = \cos(1.6\pi n - (\pi/2) + \theta)$ . In part (b), we found  $\Omega_a = -0.4\pi$ . Hence, the apparent sinusoid is  $\cos(0.4\pi n + (\pi/2) - \theta) = -\sin(0.4\pi n - \theta)$ . In this case, both the phase and the amplitude change signs.

(d)  $2.3\pi = 0.3\pi + 2\pi$  so that  $\Omega_a = 0.3\pi$ . Hence, the apparent sinusoid is  $\cos(0.3\pi n + \theta)$ .

(e) We have  $34.699 = -3 + 6(2\pi)$ . Hence,  $\Omega_a = -3$ , and the apparent frequency  $|\Omega_a| = 3$  rad/sample. Because  $\Omega_a$  is negative, there is a sign change of the phase. Hence, the apparent sinusoid is  $\cos(3n - \theta)$ .

#### **DRILL 5.20** Apparent Frequency

Show that the sinusoids having frequencies  $\Omega$  of (a)  $2\pi$ , (b)  $3\pi$ , (c)  $5\pi$ , (d)  $3.2\pi$ , (e) 22.1327, and (f)  $\pi + 2$  can be expressed, respectively, as sinusoids of frequencies (a) 0, (b)  $\pi$ , (c)  $\pi$ , (d)  $0.8\pi$ , (e) 3, and (f)  $\pi - 2$ . Show that in cases (d), (e), and (f), phase changes sign.

#### 5.5-2 Aliasing and Sampling Rate

The non-uniqueness of discrete-time sinusoids and the periodic repetition of the same waveforms at intervals of  $2\pi$  may seem innocuous, but in reality it leads to a serious problem for processing continuous-time signals by digital filters. A continuous-time sinusoid  $\cos \omega t$  sampled every T seconds (t = nT) results in a discrete-time sinusoid  $\cos \omega nT$ , which is  $\cos \Omega n$  with  $\Omega = \omega T$ . The discrete-time sinusoids  $\cos \Omega n$  have unique waveforms only for the values of frequencies in the range  $\Omega < \pi$  or  $\omega T < \pi$ . Therefore, samples of continuous-time sinusoids of two (or more) different frequencies can generate the same discrete-time signal, as shown in Fig. 5.18. This phenomenon is known as aliasing because through sampling, two entirely different analog sinusoids take on the same "discrete-time" identity.<sup>†</sup>

Aliasing causes ambiguity in digital signal processing, which makes it impossible to determine the true frequency of the sampled signal. Consider, for instance, digitally processing

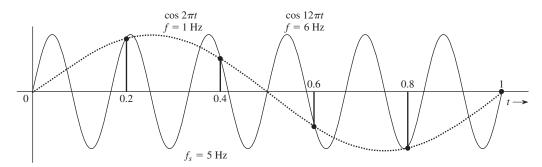


Figure 5.18 Demonstration of the aliasing effect.

<sup>&</sup>lt;sup>†</sup> Figure 5.18 shows samples of two sinusoids  $\cos 12\pi t$  and  $\cos 2\pi t$  taken every 0.2 second. The corresponding discrete-time frequencies ( $\Omega = \omega T = 0.2\omega$ ) are  $\cos 2.4\pi$  and  $\cos 0.4\pi$ . The apparent frequency of  $2.4\pi$  is  $0.4\pi$ , identical to the discrete-time frequency corresponding to the lower sinusoid. This shows that the samples of both these continuous-time sinusoids at 0.2-second intervals are identical, as verified from Fig. 5.18.

a continuous-time signal that contains two distinct components of frequencies  $\omega_1$  and  $\omega_2$ . The samples of these components appear as discrete-time sinusoids of frequencies  $\Omega_1 = \omega_1 T$  and  $\Omega_2 = \omega_2 T$ . If  $\Omega_1$  and  $\Omega_2$  happen to differ by an integer multiple of  $2\pi$  (if  $\omega_2 - \omega_1 = 2k\pi/T$ ), the two frequencies will be read as the same (lower of the two) frequency by the digital processor.<sup>‡</sup> As a result, the higher-frequency component  $\omega_2$  not only is lost for good (by losing its identity to  $\omega_1$ ), but also it reincarnates as a component of frequency  $\omega_1$ , thus distorting the true amplitude of the original component of frequency  $\omega_1$ . Hence, the resulting processed signal will be distorted. Clearly, aliasing is highly undesirable and should be avoided. To avoid aliasing, the frequencies of the continuous-time sinusoids to be processed should be kept within the fundamental band  $\omega T \le \pi$  or  $\omega \le \pi/T$ . Under this condition the question of ambiguity or aliasing does not arise because any continuous-time sinusoid of frequency in this range has a unique waveform when it is sampled. Therefore, if  $\omega_h$  is the highest frequency to be processed, then, to avoid aliasing,

$$\omega_h < \frac{\pi}{T}$$

If  $f_h$  is the highest frequency in hertz,  $f_h = \omega_h/2\pi$ , and we avoid aliasing if

$$f_h < \frac{1}{2T} \qquad \text{or} \qquad T < \frac{1}{2f_h} \tag{5.39}$$

This shows that discrete-time signal processing places the limit on the highest frequency  $f_h$  that can be processed for a given value of the sampling interval *T*. Fortunately, we can process a signal of any frequency (without aliasing) by choosing a suitably small value of *T*. Since the sampling frequency  $f_s$  is the reciprocal of the sampling interval *T*, we can also express Eq. (5.39) as

$$f_s = \frac{1}{T} > 2f_h \qquad \text{or} \qquad f_h < \frac{f_s}{2} \tag{5.40}$$

This result is a special case of the well-known *sampling theorem* (to be proved in Ch. 8). It states that for a discrete-time system to process a continuous-time sinusoid, the sampling rate must be greater than twice the frequency (in hertz) of the sinusoid. In short, *a sampled sinusoid must have a minimum of two samples per cycle*.<sup>†</sup> For sampling rates below this minimum value, the output signal will be aliased, which means it will be mistaken for a sinusoid of lower frequency.

#### ANTI-ALIASING FILTER

If the sampling rate fails to satisfy Eq. (5.40), aliasing occurs, causing the frequencies beyond  $f_s/2$  Hz to masquerade as lower frequencies to corrupt the spectrum at frequencies below  $f_s/2$ . To avoid such a corruption, a signal to be sampled is passed through an *anti-aliasing* filter of bandwidth  $f_s/2$  prior to sampling. This operation ensures the condition of Eq. (5.40). The drawback of such a filter is that we lose the spectral components of the signal beyond frequency  $f_s/2$ , which is preferable to the aliasing corruption of the signal at frequencies below  $f_s/2$ . Chapter 8 presents a detailed analysis of the aliasing problem.

<sup>&</sup>lt;sup>‡</sup> In the case shown in Fig. 5.18,  $\omega_1 = 12\pi$ ,  $\omega_2 = 2\pi$ , and T = 0.2. Hence,  $\omega_2 - \omega_1 = 10\pi T = 2\pi$ , and the two frequencies are read as the same frequency  $\Omega = 0.4\pi$  by the digital processor.

<sup>&</sup>lt;sup>†</sup> Strictly speaking, we must have more than two samples per cycle.

#### EXAMPLE 5.12 Maximum Sampling Interval

Determine the maximum sampling interval T that can be used in a discrete-time oscillator that generates a sinusoid of 50 kHz.

Here the highest significant frequency  $f_h = 50$  kHz. Therefore from Eq. (5.39),

$$T < \frac{1}{2f_h} = 10\,\mu s$$

The sampling interval must be less than 10  $\mu$ s. The sampling frequency is  $f_s = 1/T > 100$  kHz.

## EXAMPLE 5.13 Maximum Frequency Without Aliasing

A discrete-time amplifier uses a sampling interval  $T = 25 \,\mu$ s. What is the highest frequency of a signal that can be processed with this amplifier without aliasing?

From Eq. (5.39)

$$f_h < \frac{1}{2T} = 20 \text{ kHz}$$

# 5.6 FREQUENCY RESPONSE FROM POLE-ZERO LOCATIONS

The frequency responses (amplitude and phase responses) of a system are determined by pole-zero locations of the transfer function H[z]. Just as in continuous-time systems, it is possible to determine quickly the amplitude and the phase response and to obtain physical insight into the filter characteristics of a discrete-time system by using a graphical technique. The general *N*th-order transfer function H[z] in Eq. (5.26) can be expressed in factored form as

$$H[z] = b_0 \frac{(z - z_1)(z - z_2) \cdots (z - z_N)}{(z - \gamma_1)(z - \gamma_2) \cdots (z - \gamma_N)}$$

We can compute H[z] graphically by using the concepts discussed in Sec. 4.10. The directed line segment from  $z_i$  to z in the complex plane (Fig. 5.19a) represents the complex number  $z - z_i$ . The length of this segment is  $|z - z_i|$  and its angle with the horizontal axis is  $\angle (z - z_i)$ .

To compute the frequency response  $H[e^{j\Omega}]$  we evaluate H[z] at  $z = e^{j\Omega}$ . But for  $z = e^{j\Omega}$ , |z| = 1 and  $\angle z = \Omega$  so that  $z = e^{j\Omega}$  represents a point on the unit circle at an angle  $\Omega$  with the horizontal. We now connect all zeros  $(z_1, z_2, \ldots, z_N)$  and all poles  $(\gamma_1, \gamma_2, \ldots, \gamma_N)$  to the point  $e^{j\Omega}$ , as indicated in

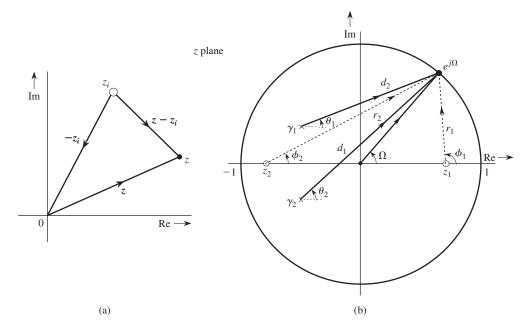


Figure 5.19 Vector representations of (a) complex numbers and (b) factors of H[z].

Fig. 5.19b. Let  $r_1, r_2, \ldots, r_N$  be the lengths and  $\phi_1, \phi_2, \ldots, \phi_N$  be the angles, respectively, of the straight lines connecting  $z_1, z_2, \ldots, z_N$  to the point  $e^{j\Omega}$ . Similarly, let  $d_1, d_2, \ldots, d_N$  be the lengths and  $\theta_1, \theta_2, \ldots, \theta_N$  be the angles, respectively, of the lines connecting  $\gamma_1, \gamma_2, \ldots, \gamma_N$  to  $e^{j\Omega}$ . Then

$$H[e^{j\Omega}] = H[z]|_{z=e^{j\Omega}} = b_0 \frac{(r_1 e^{j\phi_1})(r_2 e^{j\phi_2}) \cdots (r_N e^{j\phi_N})}{(d_1 e^{j\theta_1})(d_2 e^{j\theta_2}) \cdots (d_N e^{j\theta_N})}$$
  
=  $b_0 \frac{r_1 r_2 \cdots r_N}{d_1 d_2 \cdots d_N} e^{j[(\phi_1 + \phi_2 + \dots + \phi_N) - (\theta_1 + \theta_2 + \dots + \theta_N)]}$ 

Therefore (assuming  $b_0 > 0$ ),

$$|H[e^{j\Omega}]| = b_0 \frac{r_1 r_2 \cdots r_N}{d_1 d_2 \cdots d_N} = b_0 \frac{\text{product of the distances of zeros to } e^{j\Omega}}{\text{product of distances of poles to } e^{j\Omega}}$$
(5.41)

and

In this manner, we can compute the frequency response  $H[e^{j\Omega}]$  for any value of  $\Omega$  by selecting the point on the unit circle at an angle  $\Omega$ . This point is  $e^{j\Omega}$ . To compute the frequency response  $H[e^{j\Omega}]$ , we connect all poles and zeros to this point and use the foregoing equations to determine  $|H[e^{j\Omega}]|$  and  $\angle H[e^{j\Omega}]$ . We repeat this procedure for all values of  $\Omega$  from 0 to  $\pi$  to obtain the frequency response.

## CONTROLLING GAIN BY PLACEMENT OF POLES AND ZEROS

The nature of the influence of pole and zero locations on the frequency response is similar to that observed in continuous-time systems, with minor differences. In place of the imaginary axis of the continuous-time systems, we have the unit circle in the discrete-time case. The nearer the pole (or zero) is to a point  $e^{j\Omega}$  (on the unit circle) representing some frequency  $\Omega$ , the more influence that pole (or zero) wields on the amplitude response at that frequency because the length of the vector joining that pole (or zero) to the point  $e^{j\Omega}$  is small. The proximity of a pole (or a zero) has a similar effect on the phase response. From Eq. (5.41), it is clear that to enhance the amplitude response at a frequency  $\Omega$ , we should place a pole as close as possible to the point  $e^{j\Omega}$  (which is on the unit circle).<sup>†</sup> Similarly, to suppress the amplitude response at a frequency  $\Omega$ , we should place a zero as close as possible to the point  $e^{j\Omega}$  on the unit circle. Placing repeated poles or zeros will further enhance their influence.

Total suppression of signal transmission at any frequency can be achieved by placing a zero on the unit circle at a point corresponding to that frequency. This observation is used in the notch (bandstop) filter design.

Placing a pole or a zero at the origin does not influence the amplitude response because the length of the vector connecting the origin to any point on the unit circle is unity. However, a pole (or a zero) at the origin adds angle  $-\Omega$  (or  $\Omega$ ) to  $\angle H[e^{i\Omega}]$ . Hence, the phase spectrum  $-\Omega$  (or  $\Omega$ ) is a linear function of frequency and therefore represents a pure time delay (or time advance) of T seconds (see Drill 5.19). Therefore, a pole (a zero) at the origin causes a time delay (or a time advance) of T seconds in the response. There is no change in the amplitude response.

For a stable system, all the poles must be located inside the unit circle. The zeros may lie anywhere. Also, for a physically realizable system, H[z] must be a proper fraction, that is,  $N \ge M$ . If, to achieve a certain amplitude response, we require M > N, we can still make the system realizable by placing a sufficient number of poles at the origin to make N = M. This will not change the amplitude response, but it will increase the time delay of the response.

In general, a pole at a point has the opposite effect of a zero at that point. Placing a zero closer to a pole tends to cancel the effect of that pole on the frequency response.

#### LOWPASS FILTERS

A lowpass filter generally has a maximum gain at or near  $\Omega = 0$ , which corresponds to point  $e^{j0} = 1$  on the unit circle. Clearly, placing a pole inside the unit circle near the point z = 1 (Fig. 5.20a) would result in a lowpass response.<sup>‡</sup> The corresponding amplitude and phase response appear in Fig. 5.20a. For smaller values of  $\Omega$ , the point  $e^{j\Omega}$  (a point on the unit circle at an angle  $\Omega$ ) is closer to the pole, and consequently the gain is higher. As  $\Omega$  increases, the distance of the point  $e^{j\Omega}$  from the pole increases. Consequently the gain decreases, resulting in a lowpass characteristic. Placing a zero at the origin does not change the amplitude response but it does modify the phase response, as illustrated in Fig. 5.20b. Placing a zero at z = -1, however, changes both the amplitude and the phase response (Fig. 5.20c). The point z = -1 corresponds to frequency

<sup>&</sup>lt;sup>†</sup> The closest we can place a pole is on the unit circle at the point representing  $\Omega$ . This choice would lead to infinite gain, but should be avoided because it will render the system marginally stable (BIBO-unstable). The closer the point to the unit circle, the more sensitive the system gain to parameter variations.

<sup>&</sup>lt;sup>‡</sup> Placing the pole at z = 1 results in maximum (infinite) gain but renders the system BIBO-unstable, hence should be avoided.

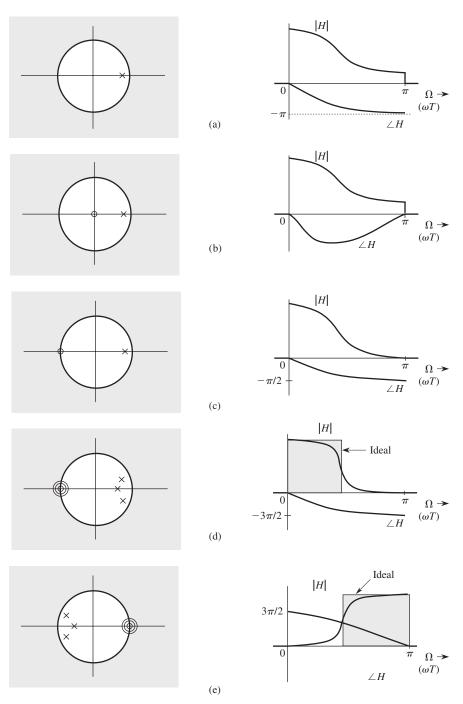


Figure 5.20 Various pole-zero configurations and the corresponding frequency responses.

 $\Omega = \pi$  ( $z = e^{j\Omega} = e^{j\pi} = -1$ ). Consequently, the amplitude response now becomes more attenuated at higher frequencies, with a zero gain at  $\Omega = \pi$ . We can approach ideal lowpass characteristics by using more poles staggered near z = 1 (but within the unit circle). Figure 5.20d shows a third-order lowpass filter with three poles near z = 1 and a third-order zero at z = -1, with corresponding amplitude and phase response. For an ideal lowpass filter, we need an enhanced gain at every frequency in the band  $(0, \Omega_c)$ . This can be achieved by placing a continuous wall of poles (requiring an infinite number of poles) opposite this band.

## HIGHPASS FILTERS

A highpass filter has a small gain at lower frequencies and a high gain at higher frequencies. Such a characteristic can be realized by placing a pole or poles near z = -1 because we want the gain at  $\Omega = \pi$  to be the highest. Placing a zero at z = 1 further enhances suppression of gain at lower frequencies. Figure 5.20e shows a possible pole-zero configuration of the third-order highpass filter with corresponding amplitude and phase responses.

In the following two examples, we shall realize analog filters by using digital processors and suitable interface devices (C/D and D/C), as shown in Fig. 3.2. At this point, we shall examine the design of a digital processor with the transfer function H[z] for the purpose of realizing bandpass and bandstop filters in the following examples.

As Fig. 3.2 shows, the C/D device samples the continuous-time input x(t) to yield a discrete-time signal x[n], which serves as the input to H[z]. The output y[n] of H[z] is converted to a continuous-time signal y(t) by a D/C device. We also saw in Eq. (5.34) that a continuous-time sinusoid of frequency  $\omega$ , when sampled, results in a discrete-time sinusoid  $\Omega = \omega T$ .

#### **EXAMPLE 5.14 Bandpass Filter by Pole-Zero Placement**

By trial and error, design a tuned (bandpass) analog filter with zero transmission at 0 Hz and also at the highest frequency  $f_h = 500$  Hz. The resonant frequency is required to be 125 Hz.

Because  $f_h = 500$ , we require T < 1/1000 [see Eq. (5.39)]. Let us select  $T = 10^{-3.^{\dagger}}$  Recall that the analog frequencies  $\omega$  correspond to digital frequencies  $\Omega = \omega T$ . Hence, analog frequencies  $\omega = 0$  and  $1000\pi$  correspond to  $\Omega = 0$  and  $\pi$ , respectively. The gain is required to be zero at these frequencies. Hence, we need to place zeros at  $e^{j\Omega}$  corresponding to  $\Omega = 0$  and  $\Omega = \pi$ . For  $\Omega = 0, z = e^{j\Omega} = 1$ ; for  $\Omega = \pi, e^{j\Omega} = -1$ . Hence, there must be zeros at  $z = \pm 1$ . Moreover, we need enhanced response at the resonant frequency  $\omega = 250\pi$ , which corresponds to  $\Omega = \pi/4$ , which, in turn, corresponds to  $z = e^{j\Omega} = e^{j\pi/4}$ . Therefore, to enhance the frequency response at  $\omega = 250\pi$ , we place a pole in the vicinity of  $e^{j\pi/4}$ . Because this is a complex pole, we also need its conjugate near  $e^{-j\pi/4}$ , as indicated in Fig. 5.21a. Let us choose these poles  $\gamma_1$  and  $\gamma_2$ as

 $\gamma_1 = |\gamma| e^{j\pi/4}$  and  $\gamma_2 = |\gamma| e^{-j\pi/4}$ 

<sup>&</sup>lt;sup>†</sup> Strictly speaking, we need T < 0.001. However, we shall show in Ch. 8 that if the input does not contain a finite amplitude component of 500 Hz, T = 0.001 is adequate. Generally, practical signals satisfy this condition.

where  $|\gamma| < 1$  for stability. The closer  $\gamma$  is to the unit circle, the more sharply peaked is the response around  $\omega = 250\pi$ . We also have zeros at  $\pm 1$ . Hence,

$$H[z] = K \frac{(z-1)(z+1)}{(z-|\gamma|e^{j\pi/4})(z-|\gamma|e^{-j\pi/4})} = K \frac{z^2 - 1}{z^2 - \sqrt{2}|\gamma|z+|\gamma|^2}$$

For convenience, we shall choose K = 1. The amplitude response is given by

$$|H[e^{j\Omega}]| = \frac{|e^{j2\Omega} - 1|}{|e^{j\Omega} - |\gamma|e^{j\pi/4}||e^{j\Omega} - |\gamma|e^{-j\pi/4}|}$$

Now, by using Eq. (5.37), we obtain

$$|H[e^{j\Omega}]|^2 = \frac{2(1-\cos 2\Omega)}{\left[1+|\gamma|^2-2|\gamma|\cos\left(\Omega-\frac{\pi}{4}\right)\right]\left[1+|\gamma|^2-2|\gamma|\cos\left(\Omega+\frac{\pi}{4}\right)\right]}$$

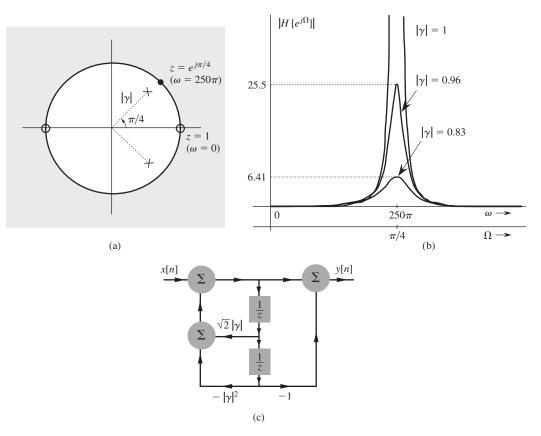


Figure 5.21 Designing a bandpass filter.

Figure 5.21b shows the amplitude response as a function of  $\omega$ , as well as  $\Omega = \omega T = 10^{-3}\omega$  for values of  $|\gamma| = 0.83$ , 0.96, and 1. As expected, the gain is zero at  $\omega = 0$  and at 500 Hz ( $\omega = 1000\pi$ ). The gain peaks at about 125 Hz ( $\omega = 250\pi$ ). The resonance (peaking) becomes pronounced as  $|\gamma|$  approaches 1. Figure 5.21c shows a canonical realization of this filter, which follows from the transfer function H[z].

## MULTIPLE MAGNITUDE RESPONSE CURVES USING MATLAB

By defining an anonymous function of the two variables z and  $\gamma$  in MATLAB, it is straightforward to duplicate the three magnitude response curves in Fig. 5.21b, corresponding to the cases  $\gamma = 0.83$ , 0.96, and 1.

```
>>
    Omega = linspace(0,pi,400);
    H = @(z,gamma_m) (z.^2-1)./(z.^2-sqrt(2)*gamma_m*z+gamma_m^2);
>>
>>
    plot(Omega,abs(H(exp(1j*Omega),0.83)),...
>>
        Omega, abs(H(exp(1j*Omega), 0.96)),...
>>
        Omega,abs(H(exp(1j*Omega),0.99)));
>>
    text(.27*pi,35,'|\gamma|=1');
>>
   text(.28*pi,25.5,'|\gamma|=0.96');
   text(.35*pi,6.41,'|\gamma|=0.83');
>>
    set(gca,'xtick',0:pi/4:pi,'ytick',[0 6.41,25.5]);
>>
    axis([0 pi 0 40]); xlabel('\Omega'); ylabel('|H[e^{j \Omega}]|');
>>
```

The result, shown in Fig. 5.22, confirms the earlier result of Fig. 5.21b. Phase response curves can be generated with minor modification to the MATLAB code.

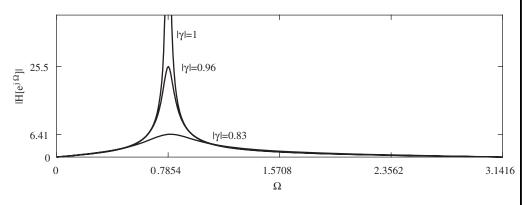


Figure 5.22 MATLAB-generated magnitude response curves for Ex. 5.14.

## EXAMPLE 5.15 Bandstop Filter by Pole-Zero Placement

Design a second-order notch filter to have zero transmission at 250 Hz and a sharp recovery of gain to unity on both sides of 250 Hz. The highest significant frequency to be processed is  $f_h = 400$  Hz.

In this case,  $T < 1/2f_h = 1.25 \times 10^{-3}$ . Let us choose  $T = 10^{-3}$ . For the frequency 250 Hz,  $\Omega = 2\pi (250)T = \pi/2$ . Thus, the frequency 250 Hz is represented by a point  $e^{j\Omega} = e^{j\pi/2} = j$  on the unit circle, as depicted in Fig. 5.23a. Since we need zero transmission at this frequency, we must place a zero at  $z = e^{j\pi/2} = j$  and its conjugate at  $z = e^{-j\pi/2} = -j$ . We also require a sharp recovery of gain on both sides of frequency 250 Hz. To accomplish this goal, we place two poles close to the two zeros, to cancel out the effect of the two zeros as we move away from the point *j* (corresponding to frequency 250 Hz). For this reason, let us use poles at  $\pm ja$  with a < 1 for stability. The closer the poles are to zeros (the closer the *a* to 1), the faster is the gain recovery on either side of 250 Hz. The resulting transfer function is

$$H[z] = K \frac{(z-j)(z+j)}{(z-ja)(z+ja)} = K \frac{z^2+1}{z^2+a^2}$$

The dc gain (gain at  $\Omega = 0$ , or z = 1) of this filter is

$$H[1] = K \frac{2}{1+a^2}$$

Because we require a dc gain of unity, we must select  $K = (1 + a^2)/2$ . The transfer function is therefore


$$H[z] = \frac{(1+a^2)(z^2+1)}{2(z^2+a^2)}$$

and according to Eq. (5.37),

$$|H[e^{i\Omega}]|^2 = \frac{(1+a^2)^2}{4} \frac{(e^{i2\Omega}+1)(e^{-i2\Omega}+1)}{(e^{i2\Omega}+a^2)(e^{-i2\Omega}+a^2)}$$
$$= \frac{(1+a^2)^2(1+\cos 2\Omega)}{2(1+a^4+2a^2\cos 2\Omega)}$$

Figure 5.23b shows  $|H[e^{j\Omega}]|$  for values of a = 0.3, 0.6, and 0.95. Figure 5.23c shows a realization of this filter.

546

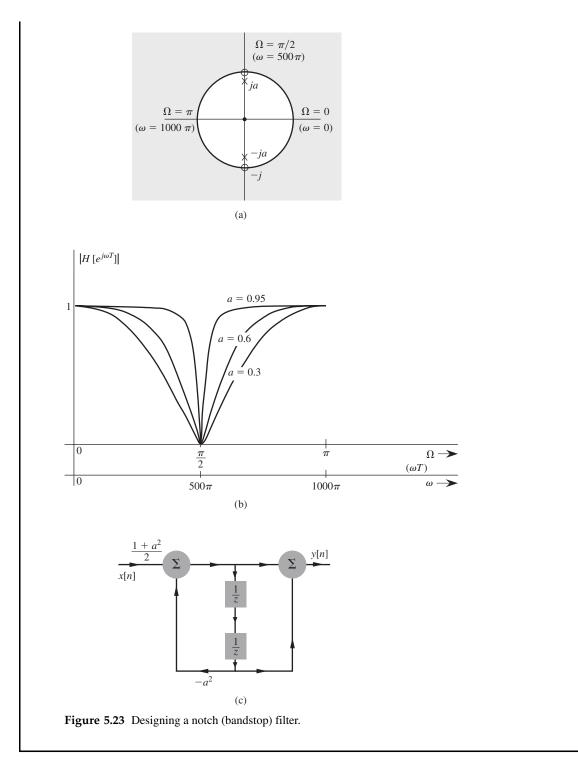

## DRILL 5.21 Highpass Filter by Pole-Zero Placement

Use the graphical argument to show that a filter with transfer function

$$H[z] = \frac{z - 0.9}{z}$$

acts like a highpass filter. Make a rough sketch of the amplitude response.

## 5.7 DIGITAL PROCESSING OF ANALOG SIGNALS

An analog (meaning continuous-time) signal can be processed digitally by sampling the analog signal and processing the samples by a digital (meaning discrete-time) processor. The output of the processor is then converted back to analog signal, as shown in Fig. 5.24a. We saw some simple cases of such processing in Exs. 3.8, 3.9, 5.14, and 5.15. In this section, we shall derive a criterion for designing such a digital processor for a general LTIC system.

Suppose that we wish to realize an equivalent of an analog system with transfer function  $H_a(s)$ , shown in Fig. 5.24b. Let the digital processor transfer function in Fig. 5.24a that realizes this desired  $H_a(s)$  be H[z]. In other words, we wish to make the two systems in Fig. 5.24 equivalent (at least approximately).

By "equivalence" we mean that for a given input x(t), the systems in Fig. 5.24 yield the same output y(t). Therefore, y(nT), the samples of the output in Fig. 5.24b, are identical to y[n], the output of H[z] in Fig. 5.24a.

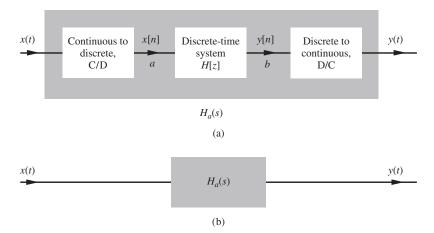


Figure 5.24 Analog filter realization with a digital filter.

For the sake of generality, we are assuming a noncausal system. The argument and the results are also valid for causal systems. The output y(t) of the system in Fig. 5.24b is

$$y(t) = \int_{-\infty}^{\infty} x(\tau) h_a(t-\tau) d\tau \qquad \qquad = \lim_{\Delta \tau \to 0} \sum_{m=-\infty}^{\infty} x(m\Delta \tau) h_a(t-m\Delta \tau) \Delta \tau$$

For our purpose, it is convenient to use the notation T for  $\Delta \tau$ . Assuming T (the sampling interval) to be small enough, such a change of notation yields

$$y(t) = T \sum_{m=-\infty}^{\infty} x(mT) h_a(t - mT)$$

The response at the *n*th sampling instant is y(nT) obtained by setting t = nT in the equation is

$$y(nT) = T \sum_{m=-\infty}^{\infty} x(mT)h_a[(n-m)T]$$
(5.42)

In Fig. 5.24a, the input to H[z] is x(nT) = x[n]. If h[n] is the unit impulse response of H[z], then y[n], the output of H[z], is given by

$$y[n] = \sum_{m=-\infty}^{\infty} x[m]h[n-m]$$
(5.43)

If the two systems are to be equivalent, y(nT) in Eq. (5.42) must be equal to y[n] in Eq. (5.43). Therefore,

$$h[n] = Th_a(nT) \tag{5.44}$$

This is the time-domain criterion for equivalence of the two systems.<sup>†</sup> According to this criterion, h[n], the unit impulse response of H[z] in Fig. 5.24a, should be T times the samples of  $h_a(t)$ , the unit impulse response of the system in Fig. 5.24b. This is known as the *impulse invariance criterion* of filter design.

Strictly speaking, this realization guarantees the output equivalence only at the sampling instants, that is, y(nT) = y[n], and that also requires the assumption that  $T \rightarrow 0$ . Clearly, this criterion leads to an approximate realization of  $H_a(s)$ . However, it can be shown that when the frequency response of  $|H_a(j\omega)|$  is bandlimited, the realization is exact [2], provided the sampling rate is high enough to avoid any aliasing  $(T < 1/2f_h)$ .

## REALIZATION OF RATIONAL H(s)

If we wish to realize an analog filter with transfer function

$$H_a(s) = \frac{c}{s - \lambda}$$

<sup>&</sup>lt;sup>†</sup> Because *T* is a constant, some authors ignore the factor *T*, which yields a simplified criterion  $h[n] = h_a(nT)$ . Ignoring *T* merely scales the amplitude response of the resulting filter.


The impulse response h(t), given by the inverse Laplace transform of  $H_a(s)$ , is

$$h_a(t) = c e^{\lambda t} u(t)$$

The corresponding digital filter unit impulse response h[n], per Eq. (5.44), is

$$h[n] = Th_a(nT) = Tce^{n\lambda T}$$

Figure 5.25 shows  $h_a(t)$  and h[n]. The corresponding H[z], the *z*-transform of h[n], as found from Table 5.1, is

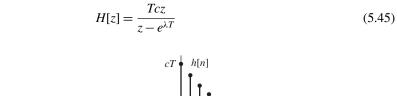

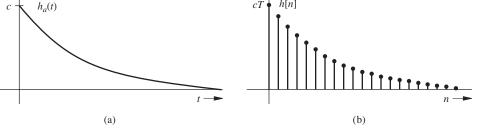


Figure 5.25 Impulse response for analog and digital systems in the impulse invariance method of filter design.

No.	$H_a(s)$	$h_a(t)$	<i>h</i> [ <i>n</i> ]	H[z]
1	K	$K\delta(t)$	$TK\delta[n]$	ТК
2	$\frac{1}{s}$	u(t)	Tu[n]	$\frac{Tz}{z-1}$
3	$\frac{1}{s^2}$	t	$nT^2$	$\frac{T^2 z}{(z-1)^2}$
4	$\frac{1}{s^3}$	$\frac{t^2}{2}$	$\frac{k^2T^3}{2}$	$\frac{T^3 z(z+1)}{2(z-1)^3}$
5	$\frac{1}{s-\lambda}$	$e^{\lambda t}$	$Te^{\lambda nT}$	$\frac{Tz}{z-e^{\lambda T}}$
6	$\frac{1}{(s-\lambda)^2}$	$te^{\lambda t}$	$nT^2e^{\lambda nT}$	$\frac{T^2 z e^{\lambda T}}{(z - e^{\lambda T})^2}$
7	$\frac{As+B}{s^2+2as+c}$	$Tre^{-at}\cos(bt+\theta)$	$Tre^{-anT}\cos(bnT+\theta)$	$\frac{Trz[z\cos\theta - e^{-aT}\cos(bT - \theta)]}{z^2 - (2e^{-aT}\cos bT)z + e^{-2aT}}$
	<i>r</i> =	$=\sqrt{\frac{A^2c+B^2-2ABa}{c-a^2}},$	$b = \sqrt{c - a^2},  \theta = \tan^{-1}$	$\left(\frac{Aa-B}{A\sqrt{c-a^2}}\right)$

TABLE 5.3 Select Impulse-Invariance Pairs

The procedure of finding H[z] can be systematized for any *N*th-order system. First we express an *N*th-order analog transfer function  $H_a(s)$  as a sum of partial fractions as<sup>‡</sup>

$$H_a(s) = \sum_{i=1}^n \frac{c_i}{s - \lambda_i}$$

Then the corresponding H[z] is given by

$$H[z] = T \sum_{i=1}^{n} \frac{c_i z}{z - e^{\lambda_i T}}$$

This transfer function can be readily realized, as explained in Sec. 5.4. Table 5.3 lists several pairs of  $H_a(s)$  and their corresponding H[z]. For instance, to realize a digital integrator, we examine its  $H_a(s) = 1/s$ . From Table 5.3, corresponding to  $H_a(s) = 1/s$  (pair 2), we find H[z] = Tz/(z-1). This is exactly the result we obtained in Ex. 3.9 using another approach.

Note that the frequency response  $H_a(j\omega)$  of a practical analog filter cannot be bandlimited. Consequently, all these realizations are approximate.

#### CHOOSING THE SAMPLING INTERVAL T

The impulse-invariance criterion (5.44) was derived under the assumption that  $T \rightarrow 0$ . Such an assumption is neither practical nor necessary for satisfactory design. Avoiding of aliasing is the most important consideration for the choice of T. In Eq. (5.39), we showed that for a sampling interval T seconds, the highest frequency that can be sampled without aliasing is 1/2T Hz or  $\pi/T$  radians per second. This implies that  $H_a(j\omega)$ , the frequency response of the analog filter in Fig. 5.24b should not have spectral components beyond frequency  $\pi/T$  radians per second. In other words, to avoid aliasing, the frequency response of the system  $H_a(s)$  must be bandlimited to  $\pi/T$  radians per second. We shall see later in Ch. 7 that frequency response of a realizable LTIC system cannot be bandlimited; that is, the response generally exists for all frequencies up to  $\infty$ . Therefore, it is impossible to digitally realize an LTIC system exactly without aliasing. The saving grace is that the frequency response of every realizable LTIC system decays with frequency. This allows for a compromise in digitally realizing an LTIC system with an acceptable level of aliasing. The smaller the value of T, the smaller the aliasing, and the better the approximation. Since it is impossible to make  $|H_a(j\omega)|$  zero, we are satisfied with making it negligible beyond the frequency  $\pi/T$ . As a rule of thumb [3], we choose T such that  $|H_a(j\omega)|$  at the frequency  $\omega = \pi/T$  is less than a certain fraction (often taken as 1%) of the peak value of  $|H_a(j\omega)|$ . This ensures that aliasing is negligible. The peak  $|H_a(j\omega)|$  usually occurs at  $\omega = 0$  for lowpass filters and at the band center frequency  $\omega_c$  for bandpass filters.

<sup>&</sup>lt;sup>‡</sup> Assuming  $H_a(s)$  has simple poles. For repeated poles, the form changes accordingly. Entry 6 in Table 5.3 is suitable for repeated poles.

# **EXAMPLE 5.16** Butterworth Filter Design by the Impulse-Invariance Method

Design a digital filter to realize a first-order lowpass Butterworth filter with the transfer function

$$H_a(s) = \frac{\omega_c}{s + \omega_c} \qquad \omega_c = 10^5 \tag{5.46}$$

For this filter, we find the corresponding H[z] according to Eq. (5.45) (or pair 5 in Table 5.3) as

$$H[z] = \frac{\omega_c T z}{z - e^{-\omega_c T}}$$
(5.47)

Next, we select the value of T by means of the criterion according to which the gain at  $\omega = \pi/T$  drops to 1% of the maximum filter gain. However, this choice results in such a good design that aliasing is imperceptible. The resulting amplitude response is so close to the desired response that we can hardly notice the aliasing effect in our plot. For the sake of demonstrating the aliasing effect, we shall deliberately select a 10% criterion (instead of 1%). We have

$$|H_a(j\omega)| = \left|\frac{\omega_c}{\sqrt{\omega^2 + \omega_c^2}}\right|$$

In this case  $|H_a(j\omega)|_{\text{max}} = 1$ , which occurs at  $\omega = 0$ . Use of 10% criterion leads to  $|H_a(\pi/T)| = 0.1$ . Observe that

$$|H_a(j\omega)| \approx \frac{\omega_c}{\omega} \qquad \omega \gg \omega_c$$

Hence,

$$|H_a(\pi/T)| \approx \frac{\omega_c}{\pi/T} = 0.1 \implies \pi/T = 10\omega_c = 10^6$$

Thus, the 10% criterion yields  $T = 10^{-6}\pi$ . The 1% criterion would have given  $T = 10^{-7}\pi$ . Substitution of  $T = 10^{-6}\pi$  in Eq. (5.47) yields

$$H[z] = \frac{0.3142z}{z - 0.7304} \tag{5.48}$$

A canonical realization of this filter is shown in Fig. 5.26a.

To find the frequency response of this digital filter, we rewrite H[z] as

$$H[z] = \frac{0.3142}{1 - 0.7304z^{-1}}$$

Therefore,

$$H[e^{j\omega T}] = \frac{0.3142}{1 - 0.7304e^{-j\omega T}} = \frac{0.3142}{(1 - 0.7304\cos\omega T) + j0.7304\sin\omega T}$$

552

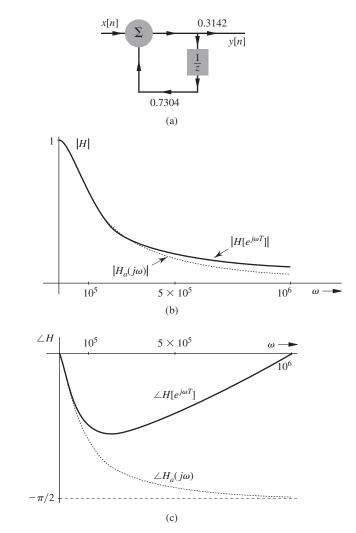


Figure 5.26 An example of filter design by the impulse-invariance method: (a) filter realization, (b) amplitude response, and (c) phase response.

The corresponding magnitude response is

$$|H[e^{j\omega T}]| = \frac{0.3142}{\sqrt{(1 - 0.7304\cos\omega T)^2 + (0.7304\sin\omega T)^2}}$$
$$= \frac{0.3142}{\sqrt{1.533 - 1.4608\cos\omega T}}$$
(5.49)

#### 5.7 Digital Processing of Analog Signals 553

and the phase response is

$$\angle H[e^{j\omega T}] = -\tan^{-1}\left(\frac{0.7304\sin\omega T}{1 - 0.7304\cos\omega T}\right)$$
(5.50)

This frequency response differs from the desired response  $H_a(j\omega)$  because aliasing causes frequencies above  $\pi/T$  to appear as frequencies below  $\pi/T$ . This generally results in increased gain for frequencies below  $\pi/T$ . For instance, the realized filter gain at  $\omega = 0$  is  $H[e^{i0}] = H[1]$ . This value, as obtained from Eq. (5.48), is 1.1654 instead of the desired value 1. We can partly compensate for this distortion by multiplying H[z] or  $H[e^{j\omega T}]$  by a normalizing constant  $K = H_a(0)/H[1] = 1/1.1654 = 0.858$ . This forces the resulting gain of  $H[e^{j\omega T}]$  to be equal to 1 at  $\omega = 0$ . The normalized  $H_n[z] = 0.858H[z] = 0.858(0.1\pi z/(z - 0.7304))$ . The amplitude response in Eq. (5.49) is multiplied by K = 0.858 and plotted in Fig. 5.26b over the frequency range  $0 \le \omega \le \pi/T = 10^6$ . The multiplying constant K has no effect on the phase response in Eq. (5.50), which is shown in Fig. 5.26c.

Also, the desired frequency response, according to Eq. (5.46) with  $\omega_c = 10^5$ , is

$$H_a(j\omega) = \frac{\omega_c}{j\omega + \omega_c} = \frac{10^5}{j\omega + 10^5}$$

Therefore,

$$|H_a(j\omega)| = \frac{10^5}{\sqrt{\omega^2 + 10^{10}}}$$
 and  $\angle H_a(j\omega) = -\tan^{-1}\frac{\omega}{10^5}$ 

This desired amplitude and phase response are plotted (dotted) in Figs. 5.26b and 5.26c for comparison with realized digital filter response. Observe that the amplitude response behavior of the analog and the digital filter is very close over the range  $\omega \le \omega_c = 10^5$ . However, for higher frequencies, there is considerable aliasing, especially in the phase spectrum. Had we used the 1% rule, the realized frequency response would have been closer over another decade of the frequency range.

#### IMPULSE INVARIANCE BY MATLAB

We can readily use the MATLAB impinvar command to confirm our digital filter designed by the impulse-invariance method.

```
>> omegac = 10^5; Ba = [omegac]; Aa = [1 omegac]; Fs = 10^6/pi;
>> [B,A] = impinvar(Ba,Aa,Fs)
B = 0.3142
A = 1.0000 -0.7304
```

This confirms our earlier result of Eq. (5.48) that the digital filter transfer function is

$$H[z] = \frac{0.3142z}{z - 0.7304}$$

## DRILL 5.22 Filter Design by the Impulse-Invariance Method

Design a digital filter to realize an analog transfer function

$$H_a(s) = \frac{20}{s+20}$$

ANSWER

 $H[z] = \frac{20Tz}{z - e^{-20T}}$  with  $T = \frac{\pi}{2000}$ 

# 5.8 THE BILATERAL z-TRANSFORM

Situations involving noncausal signals or systems cannot be handled by the (unilateral) *z*-transform discussed so far. Such cases can be analyzed by the *bilateral* (or two-sided) *z*-transform defined in Eq. (5.1) as

$$X[z] = \sum_{n=-\infty}^{\infty} x[n] z^{-n}$$

As in Eq. (5.2), the inverse *z*-transform is given by

$$x[n] = \frac{1}{2\pi j} \oint X[z] z^{n-1} dz$$


These equations define the bilateral z-transform. Earlier, we showed that

$$\gamma^{n}u[n] \Longleftrightarrow \frac{z}{z-\gamma} \qquad |z| > |\gamma|$$

$$(5.51)$$

In contrast, the *z*-transform of the signal  $-\gamma^n u[-(n+1)]$ , illustrated in Fig. 5.27a, is

$$\begin{aligned} \mathcal{Z}\{-\gamma^n u[-(n+1)]\} &= \sum_{-\infty}^{-1} -\gamma^n z^{-n} = \sum_{-\infty}^{-1} -\left(\frac{\gamma}{z}\right)^n \\ &= -\left[\frac{z}{\gamma} + \left(\frac{z}{\gamma}\right)^2 + \left(\frac{z}{\gamma}\right)^3 + \cdots\right] \\ &= 1 - \left[1 + \frac{z}{\gamma} + \left(\frac{z}{\gamma}\right)^2 + \left(\frac{z}{\gamma}\right)^3 + \cdots\right] \\ &= 1 - \frac{1}{1 - \frac{z}{\gamma}} \qquad \left|\frac{z}{\gamma}\right| < 1 \\ &= \frac{z}{z - \gamma} \qquad |z| < |\gamma| \end{aligned}$$

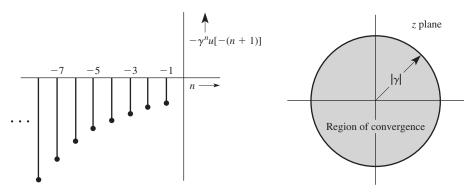

**Figure 5.27** (a)  $-\gamma^n u[-(n+1)]$  and (b) the region of convergence (ROC) of its *z*-transform.

Therefore,

$$\mathcal{Z}\{-\gamma^n u[-(n+1)]\} = \frac{z}{z-\gamma} \qquad |z| < |\gamma| \qquad (5.52)$$

A comparison of Eqs. (5.51) and (5.52) shows that the z-transform of  $\gamma^n u[n]$  is identical to that of  $-\gamma^n u[-(n+1)]$ . The regions of convergence, however, are different. In the former case, X[z] converges for  $|z| > |\gamma|$ ; in the latter, X[z] converges for  $|z| < |\gamma|$  (see Fig. 5.27b). Clearly, the inverse transform of X[z] is not unique unless the region of convergence is specified. If we add the restriction that all our signals be causal, however, this ambiguity does not arise. The inverse transform of  $z/(z - \gamma)$  is  $\gamma^n u[n]$  even without specifying the ROC. Thus, in the unilateral transform, we can ignore the ROC in determining the inverse z-transform of X[z].

As in the case of the bilateral Laplace transform, if  $x[n] = \sum_{i=1}^{k} x_i[n]$ , then the ROC for X[z] is the intersection of the ROCs (region common to all ROCs) for the transforms  $X_1[z], X_2[z], \ldots, X_k[z]$ .

The preceding results lead to the conclusion (similar to that for the Laplace transform) that if  $z = \beta$  is the largest magnitude pole for a causal sequence, its ROC is  $|z| > |\beta|$ . If  $z = \alpha$  is the smallest magnitude nonzero pole for an anticausal sequence, its ROC is  $|z| < |\alpha|$ .

## REGION OF CONVERGENCE FOR LEFT-SIDED AND RIGHT-SIDED SEQUENCES

Let us first consider a finite duration sequence  $x_f[n]$ , defined as a sequence that is nonzero for  $N_1 \le n \le N_2$ , where both  $N_1$  and  $N_2$  are finite numbers and  $N_2 > N_1$ . Also,

$$X_f[z] = \sum_{n=N_1}^{N_2} x_f[n] z^{-n}$$

For example, if  $N_1 = -2$  and  $N_2 = 1$ , then

$$X_f[z] = x_f[-2]z^2 + x_f[-1]z + x_f[0] + \frac{x_f[1]}{z}$$

Assuming all the elements in  $x_f[n]$  are finite, we observe that  $X_f[z]$  has two poles at  $z = \infty$  because of terms  $x_f[-2]z^2 + x_f[-1]z$  and one pole at z = 0 because of term  $x_f[1]/z$ . Thus, a finite-duration sequence could have poles at z = 0 and  $z = \infty$ . Observe that  $X_f[z]$  converges for all values of z except possibly z = 0 and  $z = \infty$ .

This means that the ROC of a general signal  $x[n] + x_f[n]$  is the same as the ROC of x[n] with the possible exception of z = 0 and  $z = \infty$ .

A *right-sided* sequence is zero for  $n < N_2 < \infty$  and a left-sided sequence is zero for  $n > N_1 > -\infty$ . A causal sequence is always a right-sided sequence, but the converse is not necessarily true. An anticausal sequence is always a left-sided sequence, but the converse is not necessarily true. A *two-sided* sequence is of infinite duration and is neither right-sided nor left-sided.

A right-sided sequence  $x_r[n]$  can be expressed as  $x_r[n] = x_c[n] + x_f[n]$ , where  $x_c[n]$  is a causal signal and  $x_f[n]$  is a finite-duration signal. Therefore, the ROC for  $x_r[n]$  is the same as the ROC for  $x_c[n]$  except possibly  $z = \infty$ . If  $z = \beta$  is the largest magnitude pole for a right-sided sequence  $x_r[n]$ , its ROC is  $|\beta| < |z| \le \infty$ . Similarly, a left-sided sequence can be expressed as  $x_l[n] = x_a[n] + x_f[n]$ , where  $x_a[n]$  is an anticausal sequence and  $x_f[n]$  is a finite-duration signal. Therefore, the ROC for  $x_l[n]$  is the same as the ROC for  $x_a[n]$  except possibly z = 0. Thus, if  $z = \alpha$  is the smallest magnitude nonzero pole for a left-sided sequence, its ROC is  $0 \le |z| < |\alpha|$ .

#### **EXAMPLE 5.17** Bilateral z-Transform

Determine the bilateral z-transform of

$$x[n] = \underbrace{(0.9)^{n}u[n]}_{x_{1}[n]} + \underbrace{(1.2)^{n}u[-(n+1)]}_{x_{2}[n]}$$


From the results in Eqs. (5.51) and (5.52), we have

$$X_1[z] = \frac{z}{z - 0.9} \qquad |z| > 0.9$$
$$X_2[z] = \frac{-z}{z - 1.2} \qquad |z| < 1.2$$

The common region where both  $X_1[z]$  and  $X_2[z]$  converge is 0.9 < |z| < 1.2 (Fig. 5.28b). Hence,

$$X[z] = X_1[z] + X_2[z]$$
  
=  $\frac{z}{z - 0.9} - \frac{z}{z - 1.2}$   
=  $\frac{-0.3z}{(z - 0.9)(z - 1.2)}$  0.9 < |z| < 1.2

The sequence x[n] and the ROC of X[z] are depicted in Fig. 5.28.

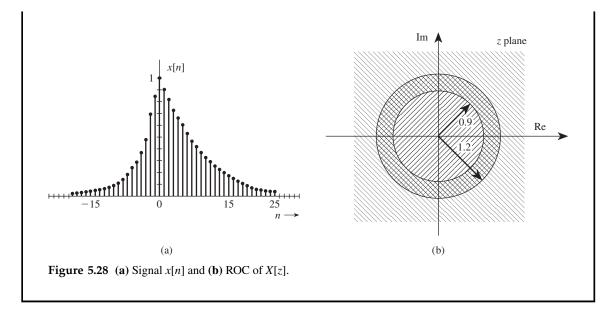

## **EXAMPLE 5.18** Inverse Bilateral z-Transform

Find the inverse bilateral z-transform of

$$X[z] = \frac{-z(z+0.4)}{(z-0.8)(z-2)}$$

if the ROC is (a) |z| > 2, (b) |z| < 0.8, and (c) 0.8 < |z| < 2.

**(a)** 

$$\frac{X[z]}{z} = \frac{-(z+0.4)}{(z-0.8)(z-2)} = \frac{1}{z-0.8} - \frac{2}{z-2}$$

and

$$X[z] = \frac{z}{z - 0.8} - 2\frac{z}{z - 2}$$

Since the ROC is |z| > 2, both terms correspond to causal sequences and

$$x[n] = [(0.8)^n - 2(2)^n]u[n]$$

This sequence appears in Fig. 5.29a.

(b) In this case, |z| < 0.8, which is less than the magnitudes of both poles. Hence, both terms correspond to anticausal sequences, and

$$x[n] = [-(0.8)^n + 2(2)^n]u[-(n+1)]$$


This sequence appears in Fig. 5.29b.

558

(c) In this case, 0.8 < |z| < 2; the part of X[z] corresponding to the pole at 0.8 is a causal sequence, and the part corresponding to the pole at 2 is an anticausal sequence:

$$x[n] = (0.8)^n u[n] + 2(2)^n u[-(n+1)]$$

This sequence appears in Fig. 5.29c.

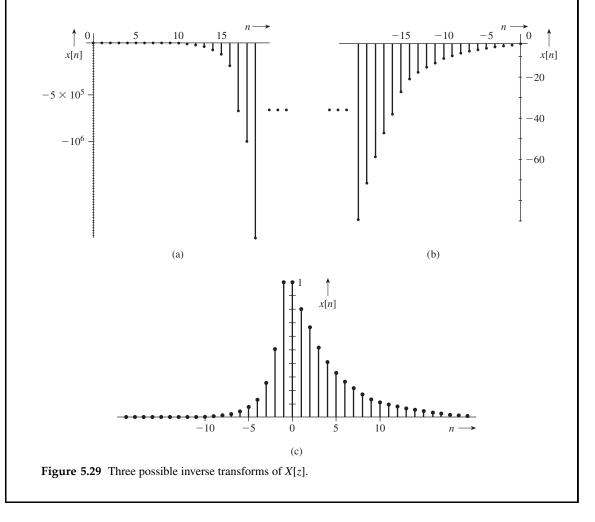

### DRILL 5.23 Inverse Bilateral z-Transform

Find the inverse bilateral z-transform of

$$X[z] = \frac{z}{z^2 + \frac{5}{6}z + \frac{1}{6}} \qquad \frac{1}{2} > |z| > \frac{1}{3}$$

#### **ANSWER**

 $\left(-\frac{1}{3}\right)^{n}u[n] + 6\left(-\frac{1}{2}\right)^{n}u[-(n+1)]$ 

INVERSE TRANSFORM BY EXPANSION OF X[z] IN POWER SERIES OF zWe have

$$X[z] = \sum_{n} x[n] z^{-n}$$

For an anticausal sequence, which exists only for  $n \leq -1$ , this equation becomes

$$X[z] = x[-1]z + x[-2]z^{2} + x[-3]z^{3} + \cdots$$

We can find the inverse z-transform of X[z] by dividing the numerator polynomial by the denominator polynomial, both in ascending powers of z, to obtain a polynomial in ascending powers of z. Thus, to find the inverse transform of z/(z - 0.5) (when the ROC is |z| < 0.5), we divide z by -0.5+z to obtain  $-2z-4z^2-8z^3-\cdots$ . Hence, x[-1]=-2, x[-2]=-4, x[-3]=-8, and so on.

### 5.8-1 Properties of the Bilateral z-Transform

Properties of the bilateral *z*-transform are similar to those of the unilateral transform. We shall merely state the properties here, without proofs, for  $x_i[n] \iff X_i[z]$ .

LINEARITY

$$a_1x_1[n] + a_2x_2[n] \Longleftrightarrow a_1X_1[z] + a_2X_2[z]$$

The ROC for  $a_1X_1[z] + a_2X_2[z]$  is the region common to (intersection of) the ROCs for  $X_1[z]$  and  $X_2[z]$ .

SHIFT

 $x[n-m] \iff \frac{1}{z^m} X[z]$  *m* is positive or negative integer

The ROC for  $X[z]/z^m$  is the ROC for X[z] except for the addition or deletion of z = 0 or  $z = \infty$  caused by the factor  $1/z^m$ .

560 CHAPTER 5 DISCRETE-TIME SYSTEM ANALYSIS USING THE Z-TRANSFORM

CONVOLUTION

$$x_1[n] * x_2[n] \Longleftrightarrow X_1[z]X_2[z]$$

The ROC for  $X_1[z]X_2[z]$  is the region common to (intersection of) the ROCs for  $X_1[z]$  and  $X_2[z]$ .

MULTIPLICATION BY  $\gamma^n$ 

$$\gamma^n x[n] \Longleftrightarrow X\left[\frac{z}{\gamma}\right]$$

If the ROC for X[z] is  $|\gamma_1| < |z| < |\gamma_2|$ , then the ROC for  $X[z/\gamma]$  is  $|\gamma\gamma_1| < |z| < |\gamma\gamma_2|$ , indicating that the ROC is scaled by the factor  $|\gamma|$ .

MULTIPLICATION BY n

$$nx[n]u[n] \Longleftrightarrow -z \frac{d}{dz}X[z]$$

The ROC for -z(dX/dz) is the same as the ROC for X[z].

TIME REVERSAL

$$x[-n] \iff X[1/z]$$

If the ROC for *X*[*z*] is  $|\gamma_1| < |z| < |\gamma_2|$ , then the ROC for *X*[1/*z*] is  $1/|\gamma_1| > |z| > |1/\gamma_2|$ .

COMPLEX CONJUGATION

 $x^*[n] \Longleftrightarrow X^*[z^*]$ 

The ROC for  $X^*[z^*]$  is the same as the ROC for X[z].

### 5.8-2 Using the Bilateral z-Transform for Analysis of LTID Systems

Because the bilateral *z*-transform can handle noncausal signals, we can use this transform to analyze noncausal linear systems. The zero-state response y[n] is given by

$$y[n] = \mathcal{Z}^{-1}\{X[z]H[z]\}$$

provided X[z]H[z] exists. The ROC of X[z]H[z] is the region in which both X[z] and H[z] exist, which means that the region is the common part of the ROC of both X[z] and H[z].

# EXAMPLE 5.19 Zero-State Response by Bilateral z-Transform

For a causal system specified by the transfer function

$$H[z] = \frac{z}{z - 0.5}$$

find the zero-state response to input

$$x[n] = (0.8)^{n}u[n] + 2(2)^{n}u[-(n+1)]$$
  
$$X[z] = \frac{z}{z-0.8} - \frac{2z}{z-2} = \frac{-z(z+0.4)}{(z-0.8)(z-2)}$$

The ROC corresponding to the causal term is |z| > 0.8, and that corresponding to the anticausal term is |z| < 2. Hence, the ROC for X[z] is the common region, given by 0.8 < |z| < 2. Hence,

$$X[z] = \frac{-z(z+0.4)}{(z-0.8)(z-2)} \qquad 0.8 < |z| < 2$$

Therefore,

$$Y[z] = X[z]H[z] = \frac{-z^2(z+0.4)}{(z-0.5)(z-0.8)(z-2)}$$

Since the system is causal, the ROC of H[z] is |z| > 0.5. The ROC of X[z] is 0.8 < |z| < 2. The common region of convergence for X[z] and H[z] is 0.8 < |z| < 2. Therefore,

$$Y[z] = \frac{-z^2(z+0.4)}{(z-0.5)(z-0.8)(z-2)} \qquad 0.8 < |z| < 2$$

Expanding Y[z] into modified partial fractions yields

$$Y[z] = -\frac{z}{z - 0.5} + \frac{8}{3} \left(\frac{z}{z - 0.8}\right) - \frac{8}{3} \left(\frac{z}{z - 2}\right) \qquad 0.8 < |z| < 2$$

Since the ROC extends outward from the pole at 0.8, both poles at 0.5 and 0.8 correspond to causal sequence. The ROC extends inward from the pole at 2. Hence, the pole at 2 corresponds to anticausal sequence. Therefore,

$$y[n] = \left[ -(0.5)^n + \frac{8}{3}(0.8)^n \right] u[n] + \frac{8}{3}(2)^n u[-(n+1)]$$

# **EXAMPLE 5.20** Zero-State Response for an Input with No *z*-Transform

For the system in Ex. 5.19, find the zero-state response to input

$$x[n] = \underbrace{(0.8)^n u[n]}_{x_1[n]} + \underbrace{(0.6)^n u[-(n+1)]}_{x_2[n]}$$

The *z*-transforms of the causal and anticausal components  $x_1[n]$  and  $x_2[n]$  of the output are

$$X_1[z] = \frac{z}{z - 0.8} \qquad |z| > 0.8$$
$$X_2[z] = \frac{-z}{z - 0.6} \qquad |z| < 0.6$$

Observe that a common ROC for  $X_1[z]$  and  $X_2[z]$  does not exist. Therefore, X[z] does not exist. In such a case we take advantage of the superposition principle and find  $y_1[n]$  and  $y_2[n]$ , the system responses to  $x_1[n]$  and  $x_2[n]$ , separately. The desired response y[n] is the sum of  $y_1[n]$  and  $y_2[n]$ . Now

$$H[z] = \frac{z}{z - 0.5} \qquad |z| > 0.5$$
  

$$Y_1[z] = X_1[z]H[z] = \frac{z^2}{(z - 0.5)(z - 0.8)} \qquad |z| > 0.8$$
  

$$Y_2[z] = X_2[z]H[z] = \frac{-z^2}{(z - 0.5)(z - 0.6)} \qquad 0.5 < |z| < 0.6$$

Expanding  $Y_1[z]$  and  $Y_2[z]$  into modified partial fractions yields

$$Y_1[z] = -\frac{5}{3} \left(\frac{z}{z-0.5}\right) + \frac{8}{3} \left(\frac{z}{z-0.8}\right) \qquad |z| > 0.8$$
$$Y_2[z] = 5 \left(\frac{z}{z-0.5}\right) - 6 \left(\frac{z}{z-0.6}\right) \qquad 0.5 < |z| < 0.6$$

Therefore,

$$y_1[n] = \left[ -\frac{5}{3}(0.5)^n + \frac{8}{3}(0.8)^n \right] u[n]$$
  
$$y_2[n] = 5(0.5)^n u[n] + 6(0.6)^n u[-(n+1)]$$

and

$$y[n] = y_1[n] + y_2[n] = \left[\frac{10}{3}(0.5)^n + \frac{8}{3}(0.8)^n\right]u[n] + 6(0.6)^n u[-(n+1)]$$

### DRILL 5.24 Zero-State Response by Bilateral z-Transform

For the causal system in Ex. 5.19, find the zero-state response to input

$$x[n] = \left(\frac{1}{4}\right)^n u[n] + 5(3)^n u[-(n+1)]$$

ANSWER

 $\left[-\left(\frac{1}{4}\right)^{n}+3\left(\frac{1}{2}\right)^{n}\right]u[n]+6(3)^{n}u[-(n+1)]$ 

# 5.9 CONNECTING THE LAPLACE AND *z*-TRANSFORMS

We now show that discrete-time systems also can be analyzed by means of the Laplace transform. In fact, we shall see that *the z-transform is the Laplace transform in disguise* and that discrete-time systems can be analyzed as if they were continuous-time systems.

So far we have considered the discrete-time signal as a sequence of numbers and not as an electrical signal (voltage or current). Similarly, we considered a discrete-time system as a mechanism that processes a sequence of numbers (input) to yield another sequence of numbers (output). The system was built by using delays (along with adders and multipliers) that delay sequences of numbers. A digital computer is a perfect example: every signal is a sequence of numbers, and the processing involves delaying sequences of numbers (along with addition and multiplication).

Now suppose we have a discrete-time system with transfer function H[z] and input x[n]. Consider a continuous-time signal x(t) such that its *n*th sample value is x[n], as shown in Fig. 5.30.<sup>†</sup> Let the sampled signal be  $\overline{x}(t)$ , consisting of impulses spaced *T* seconds apart with the *n*th impulse of strength x[n]. Thus,

$$\overline{x}(t) = \sum_{n=0}^{\infty} x[n]\delta(t - nT)$$

Figure 5.30 shows x[n] and the corresponding  $\overline{x}(t)$ . The signal x[n] is applied to the input of a discrete-time system with transfer function H[z], which is generally made up of delays, adders, and scalar multipliers. Hence, processing x[n] through H[z] amounts to operating on the sequence x[n] by means of delays, adders, and scalar multipliers. Suppose for  $\overline{x}(t)$  samples, we perform operations identical to those performed on the samples of x[n] by H[z]. For this purpose, we need a continuous-time system with transfer function H(s) that is identical in structure to the discrete-time system H[z] except that the delays in H[z] are replaced by elements that delay continuous-time signals (such as voltages or currents). There is no other difference between realizations of H[z]and H(s). If a continuous-time impulse  $\delta(t)$  is applied to such a delay of T seconds, the output will be  $\delta(t - T)$ . The continuous-time transfer function of such a delay is  $e^{-sT}$  [see Eq. (4.30)]. Hence, the delay elements with transfer function 1/z in the realization of H[z] will be replaced by the delay elements with transfer function  $e^{-sT}$  in the realization of the corresponding H(s). This is the same

<sup>&</sup>lt;sup>†</sup> We can construct such x(t) from the sample values, as will be explained in Ch. 8.

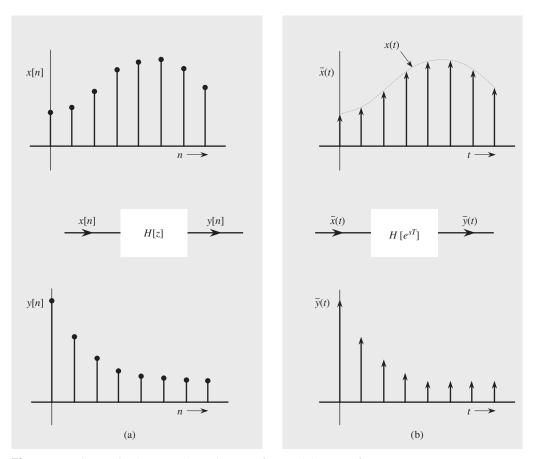


Figure 5.30 Connection between the Laplace transform and the z-transform.

as z being replaced by  $e^{sT}$ . Therefore,  $H(s) = H[e^{sT}]$ . Let us now apply x[n] to the input of H[z] and apply  $\overline{x}(t)$  at the input of  $H[e^{sT}]$ . Whatever operations are performed by the discrete-time system H[z] on x[n] (Fig. 5.30a) are also performed by the corresponding continuous-time system  $H[e^{sT}]$ on the impulse sequence  $\overline{x}(t)$  (Fig. 5.30b). The delaying of a sequence in H[z] would amount to delaying of an impulse train in  $H[e^{sT}]$ . Adding and multiplying operations are the same in both cases. In other words, one-to-one correspondence of the two systems is preserved in every aspect. Therefore if y[n] is the output of the discrete-time system in Fig. 5.30a, then  $\overline{y}(t)$ , the output of the continuous-time system in Fig. 5.30b, would be a sequence of impulse whose *n*th impulse strength is y[n]. Thus,

$$\bar{y}(t) = \sum_{n=0}^{\infty} y[n]\delta(t - nT)$$

The system in Fig. 5.30b, being a continuous-time system, can be analyzed via the Laplace transform. If

$$\overline{x}(t) \Longleftrightarrow \overline{X}(s)$$
 and  $\overline{y}(t) \Longleftrightarrow \overline{Y}(s)$ 

then

$$\overline{Y}(s) = H[e^{sT}]\overline{X}(s) \tag{5.53}$$

Also,

$$\overline{X}(s) = \mathcal{L}\left[\sum_{n=0}^{\infty} x[n]\delta(t - nT)\right]$$

Now because the Laplace transform of  $\delta(t - nT)$  is  $e^{-snT}$ ,

$$\overline{X}(s) = \sum_{n=0}^{\infty} x[n]e^{-snT}$$
 and  $\overline{Y}(s) = \sum_{n=0}^{\infty} y[n]e^{-snT}$ 

Substitution of these expressions into Eq. (5.53) yields

$$\sum_{n=0}^{\infty} y[n]e^{-snT} = H[e^{sT}]\left[\sum_{n=0}^{\infty} x[n]e^{-snT}\right]$$

By introducing a new variable  $z = e^{sT}$ , this equation can be expressed as

$$\sum_{n=0}^{\infty} y[n] z^{-n} = H[z] \sum_{n=0}^{\infty} x[n] z^{-n}$$

or

$$Y[z] = H[z]X[z]$$

where

$$X[z] = \sum_{n=0}^{\infty} x[n]z^{-n}$$
 and  $Y[z] = \sum_{n=0}^{\infty} y[n]z^{-n}$ 

It is clear from this discussion that the z-transform can be considered to be the Laplace transform with a change of variable  $z = e^{sT}$  or  $s = (1/T) \ln z$ . Note that the transformation  $z = e^{sT}$  transforms the imaginary axis in the s plane  $(s = j\omega)$  into a unit circle in the z plane  $(z = e^{sT} = e^{j\omega T}, \text{ or } |z| = 1)$ . The LHP and RHP in the s-plane map into the inside and the outside, respectively, of the unit circle in the z plane.

# 5.10 MATLAB: DISCRETE-TIME IIR FILTERS

Recent technological advancements have dramatically increased the popularity of discrete-time filters. Unlike their continuous-time counterparts, the performance of discrete-time filters is not affected by component variations, temperature, humidity, or age. Furthermore, digital hardware is easily reprogrammed, which allows convenient change of device function. For example, certain digital hearing aids are individually programmed to match the required response of a user.

Typically, discrete-time filters are categorized as infinite-impulse response (IIR) or finite-impulse response (FIR). A popular method to obtain a discrete-time IIR filter is by transformation of a corresponding continuous-time filter design. MATLAB greatly assists this process. Although discrete-time IIR filter design is the emphasis of this section, methods for discrete-time FIR filter design are considered in Sec. 9.7.

#### 5.10-1 Frequency Response and Pole-Zero Plots

Frequency response and pole-zero plots help characterize filter behavior. Similar to continuous-time systems, rational transfer functions for realizable LTID systems are represented in the *z*-domain as

$$H[z] = \frac{Y[z]}{X[z]} = \frac{B[z]}{A[z]} = \frac{\sum_{k=0}^{N} b_k z^{-k}}{\sum_{k=0}^{N} a_k z^{-k}} = \frac{\sum_{k=0}^{N} b_k z^{N-k}}{\sum_{k=0}^{N} a_k z^{N-k}}$$
(5.54)

When only the first  $(N_1 + 1)$  numerator coefficients are nonzero and only the first  $(N_2 + 1)$  denominator coefficients are nonzero, Eq. (5.54) simplifies to

$$H[z] = \frac{Y[z]}{X[z]} = \frac{B[z]}{A[z]} = \frac{\sum_{k=0}^{N_1} b_k z^{-k}}{\sum_{k=0}^{N_2} a_k z^{-k}} = \frac{\sum_{k=0}^{N_1} b_k z^{N_1-k}}{\sum_{k=0}^{N_2} a_k z^{N_2-k}} z^{N_2-N_1}$$
(5.55)

The form of Eq. (5.55) has many advantages. It can be more efficient than Eq. (5.54); it still works when  $N_1 = N_2 = N$ ; and it more closely conforms to the notation of built-in MATLAB discrete-time signal-processing functions.

The right-hand side of Eq. (5.55) is a form that is convenient for MATLAB computations. The frequency response  $H[e^{j\Omega}]$  is obtained by letting  $z = e^{j\Omega}$ , where  $\Omega$  has units of radians. Often,  $\Omega = \omega T$ , where  $\omega$  is the continuous-time frequency in radians per second and T is the sampling period in seconds. Defining length- $(N_2 + 1)$  coefficient vector  $\mathbf{A} = [a_0, a_1, \dots, a_{N_2}]$  and length- $(N_1 + 1)$  coefficient vector  $\mathbf{B} = [b_0, b_1, \dots, b_{N_1}]$ , program CH5MP1 computes  $H[e^{j\Omega}]$  by using Eq. (5.55) for each frequency in the input vector  $\mathbf{\Omega}$ .

```
function [H] = CH5MP1(B,A,Omega);
% CH5MP1.m : Chapter 5, MATLAB Program 1
% Function M-file computes frequency response for LTID systems
% INPUTS: B = vector of feedforward coefficients
% A = vector of feedback coefficients
% Omega = vector of frequencies [rad], typically -pi<=Omega<=pi
% OUTPUTS: H = frequency response
N_1 = length(B)-1; N_2 = length(A)-1;
H = polyval(B,exp(1j*Omega))./polyval(A,exp(1j*Omega)).*...
exp(1j*Omega*(N_2-N_1));
```

Note that owing to MATLAB's indexing scheme, A(k) corresponds to coefficient  $a_{k-1}$  and B(k) corresponds to coefficient  $b_{k-1}$ . It is also possible to use the signal-processing toolbox function freqz to evaluate the frequency response of a system described by Eq. (5.55). Under special circumstances, the control system toolbox function bode can also be used.

Program CH5MP2 computes and plots the poles and zeros of an LTID system described by Eq. (5.55), again using vectors **B** and **A**.

```
function [p,z] = CH5MP2(B,A);
% CH5MP2.m : Chapter 5, MATLAB Program 2
% Function M-file computes and plots poles and zeros for LTID systems
% INPUTS: B = vector of feedbork coefficients
% A = vector of feedback coefficients
N_1 = length(B)-1; N_2 = length(A)-1;
p = roots([A,zeros(1,N_1-N_2)]); z = roots([B,zeros(1,N_2-N_1)]);
ucirc = exp(1j*linspace(0,2*pi,200)); % Compute unit circle for plot
plot(real(p),imag(p),'xk',real(z),imag(z),'ok',real(ucirc),imag(ucirc),'k:');
xlabel('Real'); ylabel('Imag');
ax = axis; dx = 0.05*(ax(2)-ax(1)); dy = 0.05*(ax(4)-ax(3));
axis(ax+[-dx,dx,-dy,dy]); axis equal;
```

The right-hand side of Eq. (5.55) helps explain how the roots are computed. When  $N_1 \neq N_2$ , the term  $z^{N_2-N_1}$  implies additional roots at the origin. If  $N_1 > N_2$ , the roots are poles, which are added by concatenating A with zeros  $(N_1-N_2,1)$ ; since  $N_2 - N_1 \leq 0$ , zeros  $(N_2-N_1,1)$  produces the empty set and B is unchanged. If  $N_2 > N_1$ , the roots are zeros, which are added by concatenating B with zeros  $(N_2-N_1,1)$ ; since  $N_1 - N_2 \leq 0$ , zeros  $(N_1-N_2,1)$  produces the empty set and A is unchanged. Poles and zeros are indicated with black x's and o's, respectively. For visual reference, the unit circle is also plotted. The last two lines in CH5MP2 expand the plot axis box so that root locations are not obscured and also ensure that the real and imaginary axes are drawn to the same scale.

#### 5.10-2 Transformation Basics

Transformation of a continuous-time filter to a discrete-time filter begins with the desired continuous-time transfer function

$$H(s) = \frac{Y(s)}{X(s)} = \frac{B(s)}{A(s)} = \frac{\sum_{k=0}^{M} b_{k+N-M} s^{M-k}}{\sum_{k=0}^{N} a_k s^{N-k}}$$

As a matter of convenience, H(s) is represented in factored form as

$$H(s) = \frac{b_{N-M}}{a_0} \frac{\prod_{k=1}^{M} (s - z_k)}{\prod_{k=1}^{N} (s - p_k)}$$
(5.56)

where  $z_k$  and  $p_k$  are the system poles and zeros, respectively.

A mapping rule converts the rational function H(s) to a rational function H[z]. Requiring that the result be rational ensures that the system realization can proceed with only delay, sum, and multiplier blocks. There are many possible mapping rules. For obvious reasons, good transformations tend to map the  $\omega$  axis to the unit circle,  $\omega = 0$  to z = 1,  $\omega = \infty$  to z = -1, and the left half-plane to the interior of the unit circle. Put another way, sinusoids map to sinusoids, zero frequency maps to zero frequency, high frequency maps to high frequency, and stable systems map to stable systems.

#### 568 CHAPTER 5 DISCRETE-TIME SYSTEM ANALYSIS USING THE Z-TRANSFORM

Section 5.9 suggests that the z-transform can be considered to be a Laplace transform with a change of variable  $z = e^{sT}$  or  $s = (1/T) \ln z$ , where T is the sampling interval. It is tempting, therefore, to convert a continuous-time filter to a discrete-time filter by substituting  $s = (1/T) \ln z$  into H(s), or  $H[z] = H(s)|_{s=(1/T)\ln z}$ . This approach is impractical, however, since the resulting H[z] is not rational and therefore cannot be implemented by using standard blocks. Although not considered here, the so-called matched-z transformation relies on the relationship  $z = e^{sT}$  to transform system poles and zeros, so the connection is not completely without merit.

### 5.10-3 Transformation by First-Order Backward Difference

Consider the transfer function H(s) = Y(s)/X(s) = s, which corresponds to the first-order continuous-time differentiator

$$y(t) = \frac{d}{dt}x(t)$$

An approximation that resembles the fundamental theorem of calculus is the first-order backward difference

$$y(t) = \frac{x(t) - x(t - T)}{T}$$

For sampling interval T and t = nT, the corresponding discrete-time approximation is

$$y[n] = \frac{x[n] - x[n-1]}{T}$$

which has transfer function

$$H[z] = Y[z]/X[z] = \frac{1 - z^{-1}}{T}$$

This implies a transformation rule that uses the change of variable  $s = (1 - z^{-1})/T$  or z = 1/(1 - sT). This transformation rule is appealing since the resulting H[z] is rational and has the same number of poles and zeros as H(s). Section 3.4 discusses this transformation strategy in a different way in describing the kinship of difference equations to differential equations.

After some algebra, substituting  $s = (1 - z^{-1})/T$  into Eq. (5.56) yields

$$H[z] = \left(\frac{b_{N-M}\prod_{k=1}^{M}(1/T - z_k)}{a_0\prod_{k=1}^{N}(1/T - p_k)}\right) \frac{\prod_{k=1}^{M}\left(1 - \frac{1}{1 - Tz_k}z^{-1}\right)}{\prod_{k=1}^{N}\left(1 - \frac{1}{1 - Tp_k}z^{-1}\right)}$$
(5.57)

The discrete-time system has M zeros at  $1/(1 - Tz_k)$  and N poles at  $1/(1 - Tp_k)$ . This transformation rule preserves system stability but does not map the  $\omega$  axis to the unit circle (see Prob. 5.7-10).

MATLAB program CH5MP3 uses the first-order backward difference method of Eq. (5.57) to convert a continuous-time filter described by coefficient vectors  $\mathbf{A} = [a_0, a_1, \dots, a_N]$  and  $\mathbf{B} = [b_{N-M}, b_{N-M+1}, \dots, b_N]$  into a discrete-time filter. The form of the discrete-time filter follows Eq. (5.55).

function [Bd,Ad] = CH5MP3(B,A,T);
% CH5MP3.m : Chapter 5, MATLAB Program 3
% Function M-file first-order backward difference transformation

```
% of a continuous-time filter described by B and A into a discrete-time filter.
% INPUTS: B = vector of continuous-time filter feedforward coefficients
% A = vector of continuous-time filter feedback coefficients
% T = sampling interval
% OUTPUTS: Bd = vector of discrete-time filter feedforward coefficients
% Ad = vector of discrete-time filter feedback coefficients
% Ad = vector of discrete-time filter feedback coefficients
% z = roots(B); p = roots(A); % s-domain roots
gain = B(1)/A(1)*prod(1/T-z)/prod(1/T-p);
zd = 1./(1-T*z); pd = 1./(1-T*p); % z-domain roots
Bd = gain*poly(zd); Ad = poly(pd);
```

#### 5.10-4 Bilinear Transformation

The bilinear transformation is based on a better approximation than first-order backward differences. Again, consider the continuous-time integrator

$$y(t) = \frac{d}{dt}x(t)$$

Represent signal x(t) as

$$x(t) = \int_{t-T}^{t} \frac{d}{d\tau} x(\tau) d\tau + x(t-T)$$

Letting t = nT and replacing the integral with a trapezoidal approximation yield

$$x(nT) = \frac{T}{2} \left[ \frac{d}{dt} x(nT) + \frac{d}{dt} x(nT - T) \right] + x(nT - T)$$

Substituting y(t) for (d/dt)x(t), the equivalent discrete-time system is

$$x[n] = \frac{T}{2}(y[n] + y[n-1]) + x[n-1]$$

From z-transforms, the transfer function is

$$H[z] = \frac{Y[z]}{X[z]} = \frac{2(1-z^{-1})}{T(1+z^{-1})}$$

The implied change of variable  $s = 2(1 - z^{-1})/T(1 + z^{-1})$  or z = (1 + sT/2)/(1 - sT/2) is called the bilinear transformation. Not only does the bilinear transformation result in a rational function H[z], the  $\omega$  axis is correctly mapped to the unit circle (see Prob. 5.6-18a).

After some algebra, substituting  $s = 2(1 - z^{-1})/T(1 + z^{-1})$  into Eq. (5.56) yields

$$H[z] = \left(\frac{b_{N-M}\prod_{k=1}^{M}(2/T - z_k)}{a_0\prod_{k=1}^{N}(2/T - p_k)}\right) \frac{\prod_{k=1}^{M}\left(1 - \frac{1 + z_kT/2}{1 - z_kT/2}z^{-1}\right)}{\prod_{k=1}^{N}\left(1 - \frac{1 + p_kT/2}{1 - p_kT/2}z^{-1}\right)} (1 + z^{-1})^{N-M}$$
(5.58)

In addition to the *M* zeros at  $(1+z_kT/2)/(1-z_kT/2)$  and *N* poles at  $(1+p_kT/2)/(1-p_kT/2)$ , there are *N*-*M* zeros at minus 1. Since practical continuous-time filters require  $M \le N$  for stability, the number of added zeros is thankfully always nonnegative.

MATLAB program CH5MP4 converts a continuous-time filter described by coefficient vectors  $\mathbf{A} = [a_0, a_1, \dots, a_N]$  and  $\mathbf{B} = [b_{N-M}, b_{N-M+1}, \dots, b_N]$  into a discrete-time filter by using the bilinear transformation of Eq. (5.58). The form of the discrete-time filter follows Eq. (5.55). If available, it is also possible to use the signal-processing toolbox function bilinear to perform the bilinear transformation.

```
function [Bd,Ad] = CH5MP4(B,A,T);
% CH5MP4.m : Chapter 5, MATLAB Program 4
% Function M-file bilinear transformation of a continuous-time filter
% described by vectors B and A into a discrete-time filter.
% Length of B must not exceed A.
% INPUTS:
           B = vector of continuous-time filter feedforward coefficients
%
            A = vector of continuous-time filter feedback coefficients
%
           T = sampling interval
% OUTPUTS: Bd = vector of discrete-time filter feedforward coefficients
%
           Ad = vector of discrete-time filter feedback coefficients
if (length(B)>length(A)),
    disp('Numerator order must not exceed denominator order.');
    return
end
z = roots(B); p = roots(A); % s-domain roots
gain = real(B(1)/A(1)*prod(2/T-z)/prod(2/T-p));
zd = (1+z*T/2)./(1-z*T/2); pd = (1+p*T/2)./(1-p*T/2); % z-domain roots
Bd = gain*poly([zd;-ones(length(A)-length(B),1)]); Ad = poly(pd);
```

As with most high-level languages, MATLAB supports general if-structures:

In the program CH5MP4, the if statement tests M > N. When true, an error message is displayed and the return command terminates program execution to prevent errors.

#### 5.10-5 Bilinear Transformation with Prewarping

The bilinear transformation maps the entire infinite-length  $\omega$  axis onto the finite-length unit circle  $(z = e^{j\Omega})$  according to  $\omega = (2/T) \tan (\Omega/2)$  (see Prob. 5.6-18b). Equivalently,  $\Omega = 2 \arctan(\omega T/2)$ . The nonlinearity of the tangent function causes a frequency compression, commonly called frequency warping, that distorts the transformation.

To illustrate the warping effect, consider the bilinear transformation of a continuous-time lowpass filter with cutoff frequency  $\omega_c = 2\pi 3000$  rad/s. If the target digital system uses a sampling

rate of 10 kHz, then T = 1/(10,000) and  $\omega_c$  maps to  $\Omega_c = 2 \arctan(\omega_c T/2) = 1.5116$ . Thus, the transformed cutoff frequency is short of the desired  $\Omega_c = \omega_c T = 0.6\pi = 1.8850$ .

Cutoff frequencies are important and need to be as accurate as possible. By adjusting the parameter T used in the bilinear transform, one continuous-time frequency can be exactly mapped to one discrete-time frequency; the process is called prewarping. Continuing the last example, adjusting  $T = (2/\omega_c) \tan(\Omega_c/2) \approx 1/6848$  achieves the appropriate prewarping to ensure  $\omega_c = 2\pi 3000$  maps to  $\Omega_c = 0.6\pi$ .

#### 5.10-6 Example: Butterworth Filter Transformation

To illustrate the transformation techniques, consider a continuous-time 10th-order Butterworth lowpass filter with cutoff frequency  $\omega_c = 2\pi 3000$ , as designed in Sec. 4.12. First, we determine continuous-time coefficient vectors **A** and **B**.

```
>> omega_c = 2*pi*3000; N=10;
>> poles = roots([(1j*omega_c)^(-2*N),zeros(1,2*N-1),1]);
>> poles = poles(find(poles<0));
>> B = 1; A = poly(poles); A = A/A(end);
```

Programs CH5MP3 and CH5MP4 are used to perform first-order forward difference and bilinear transformations, respectively.

```
>> Omega = linspace(0,pi,200); T = 1/10000; Omega_c = omega_c*T;
>> [B1,A1] = CH5MP3(B,A,T); % First-order backward difference transformation
>> [B2,A2] = CH5MP4(B,A,T); % Bilinear transformation
>> [B3,A3] = CH5MP4(B,A,2/omega_c*tan(Omega_c/2)); % Bilinear with prewarping
```

Magnitude responses are computed using CH5MP1 and then plotted.

```
>> H1mag = abs(CH5MP1(B1,A1,Omega));
>> H2mag = abs(CH5MP1(B2,A2,Omega));
>> H3mag = abs(CH5MP1(B3,A3,Omega));
>> plot(Omega,(Omega<=Omega_c),'k',Omega,H1mag,'k-.',...
>> Omega,H2mag,'k--',Omega,H3mag,'k:');
>> axis([0 pi -.05 1.5]);
>> xlabel('\Omega [rad]'); ylabel('Magnitude Response');
>> legend('Ideal','FOBD','BLT','Prewarp BLT','location','best');
```

The result of each transformation method is shown in Fig. 5.31, where FOBD and BLT stand for first-order backward difference and bilinear transformation, respectively.

Although the first-order backward difference results in a lowpass filter, the method causes significant distortion that makes the resulting filter unacceptable with regard to cutoff frequency. The bilinear transformation is better, but, as predicted, the cutoff frequency falls short of the desired value. Bilinear transformation with prewarping properly locates the cutoff frequency and produces a very acceptable filter response.

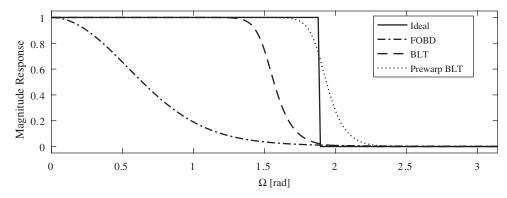


Figure 5.31 Comparison of various transformation techniques.

#### 5.10-7 Problems Finding Polynomial Roots

Numerically, it is difficult to accurately determine the roots of a polynomial. Consider, for example, a simple polynomial that has a root at minus 1 repeated four times,  $(s + 1)^4 = s^4 + 4s^3 + 6s^2 + 4s + 1$ . The MATLAB roots command returns a surprising result:

```
>> roots([1 4 6 4 1])'
ans = -1.0002 -1.0000-0.0002i -1.0000+0.0002i -0.9998
```

Even for this low-degree polynomial, MATLAB does not return the true roots.

The problem worsens as polynomial degree increases. The bilinear transformation of the 10th-order Butterworth filter, for example, should have 10 zeros at minus 1. Figure 5.32 shows that the zeros, computed by CH5MP2 with the roots command, are not correctly located.

When possible, programs should avoid root computations that may limit accuracy. For example, results from the transformation programs CH5MP3 and CH5MP4 are more accurate if the true transfer function poles and zeros are passed directly as inputs rather than the polynomial coefficient vectors. When roots must be computed, result accuracy should always be verified.

### 5.10-8 Using Cascaded Second-Order Sections to Improve Design

The dynamic range of high-degree polynomial coefficients is often large. Adding the difficulties associated with factoring a high-degree polynomial, it is little surprise that high-order designs are difficult.

As with continuous-time filters, performance is improved by using a cascade of second-order sections to design and realize a discrete-time filter. Cascades of second-order sections are also more robust to the coefficient quantization that occurs when discrete-time filters are implemented on fixed-point digital hardware.

To illustrate the performance possible with a cascade of second-order sections, consider a 180th-order transformed Butterworth discrete-time filter with cutoff frequency  $\Omega_c = 0.6\pi \approx$ 1.8850. Program CH5MP5 completes this design, taking care to initially locate poles and zeros without root computations.

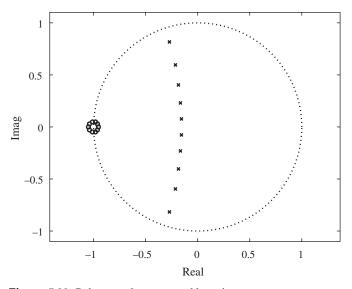


Figure 5.32 Pole-zero plot computed by using roots.

```
% CH5MP5.m : Chapter 5, MATLAB Program 5
% Script M-file designs a 180th-order Butterworth lowpass discrete-time filter
\% with cutoff <code>Omega_c</code> = 0.6*pi using 90 cascaded second-order filter sections.
omega_0 = 1; % Use normalized cutoff frequency for analog prototype
psi = [0.5:1:90]*pi/180; % Butterworth pole angles
Omega_c = 0.6*pi; % Discrete-time cutoff frequency
Omega = linspace(0,pi,1000); % Frequency range for magnitude response
Hmag = zeros(90,1000); p = zeros(1,180); z = zeros(1,180); % Pre-allocation
for stage = 1:90,
    Q = 1/(2*cos(psi(stage))); % Compute Q for stage
    B = omega_0^2; A = [1 omega_0/Q omega_0^2]; % Compute stage coefficients
    [B1,A1] = CH5MP4(B,A,2/omega_0*tan(0.6*pi/2)); % Transform stage to DT
    p(stage*2-1:stage*2) = roots(A1); % Compute z-domain poles for stage
    z(stage*2-1:stage*2) = roots(B1); % Compute z-domain zeros for stage
    Hmag(stage,:) = abs(CH5MP1(B1,A1,Omega)); % Compute stage mag response
end
ucirc = exp(j*linspace(0,2*pi,200)); % Compute unit circle for pole-zero plot
figure;
plot(real(p),imag(p),'kx',real(z),imag(z),'ok',real(ucirc),imag(ucirc),'k:');
axis equal; xlabel('Real'); ylabel('Imag');
figure; plot(Omega,prod(Hmag),'k'); axis([0 pi -0.05 1.05]);
xlabel('\Omega [rad]'); ylabel('Magnitude Response');
```

The figure command preceding each plot command opens a separate window for each plot.

The filter's pole-zero plot is shown in Fig. 5.33, along with the unit circle, for reference. All 180 zeros of the cascaded design are properly located at minus 1. The wall of poles provides an amazing approximation to the desired brick-wall response, as shown by the magnitude response in Fig. 5.34. It is virtually impossible to realize such high-order designs with continuous-time filters, which adds another reason for the popularity of discrete-time filters. Still, the design is not

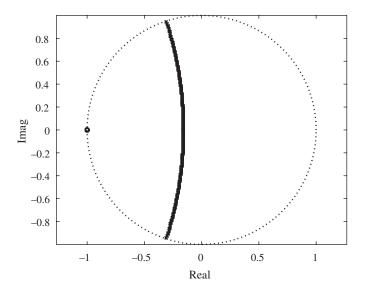


Figure 5.33 Pole-zero plot for 180th-order discrete-time Butterworth filter.

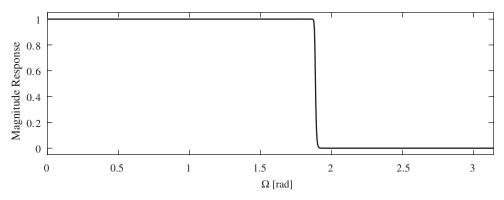


Figure 5.34 Magnitude response for a 180th-order discrete-time Butterworth filter.

trivial; even functions from the MATLAB signal-processing toolbox fail to properly design such a high-order discrete-time Butterworth filter.

# 5.11 SUMMARY

In this chapter we discussed the analysis of linear, time-invariant, discrete-time (LTID) systems by means of the *z*-transform. The *z*-transform changes the difference equations of LTID systems into algebraic equations. Therefore, solving these difference equations reduces to solving algebraic equations.

The transfer function H[z] of an LTID system is equal to the ratio of the z-transform of the output to the z-transform of the input when all initial conditions are zero. Therefore, if X[z] is the z-transform of the input x[n] and Y[z] is the z-transform of the corresponding output y[n]

(when all initial conditions are zero), then Y[z] = H[z]X[z]. For an LTID system specified by the difference equation Q[E]y[n] = P[E]x[n], the transfer function H[z] = P[z]/Q[z]. Moreover, H[z] is the z-transform of the system impulse response h[n]. We showed in Ch. 3 that the system response to an everlasting exponential  $z^n$  is  $H[z]z^n$ .

We may also view the z-transform as a tool that expresses a signal x[n] as a sum of exponentials of the form  $z^n$  over a continuum of the values of z. Using the fact that an LTID system response to  $z^n$  is  $H[z]z^n$ , we find the system response to x[n] as a sum of the system's responses to all the components of the form  $z^n$  over the continuum of values of z.

LTID systems can be realized by scalar multipliers, adders, and time delays. A given transfer function can be synthesized in many different ways. We discussed canonical, transposed canonical, cascade, and parallel forms of realization. The realization procedure is identical to that for continuous-time systems with 1/s (integrator) replaced by 1/z (unit delay).

The majority of the input signals and practical systems are causal. Consequently, we are required to deal with causal signals most of the time. Restricting all signals to the causal type greatly simplifies z-transform analysis; the ROC of a signal becomes irrelevant to the analysis process. This special case of z-transform (which is restricted to causal signals) is called the unilateral z-transform. Much of the chapter deals with this transform. Section 5.8 discusses the general variety of the z-transform (bilateral z-transform), which can handle causal and noncausal signals and systems. In the bilateral transform, the inverse transform of X[z] is not unique, but depends on the ROC of X[z]. Thus, the ROC plays a crucial role in the bilateral z-transform.

In Sec. 5.9, we showed that discrete-time systems can be analyzed by the Laplace transform as if they were continuous-time systems. In fact, we showed that the *z*-transform is the Laplace transform with a change in variable.

#### REFERENCES

- 1. Lyons, R. G. Understanding Digital Signal Processing. Addison-Wesley, Reading, MA, 1997.
- Oppenheim, A. V., and R. W. Schafer. *Discrete-Time Signal Processing*, 2nd ed. Prentice-Hall, Upper Saddle River, NJ, 1999.
- 3. Mitra, S. K. Digital Signal Processing, 2nd ed. McGraw-Hill, New York, 2001.

# PROBLEMS

- **5.1-1** Using the definition, compute the *z*-transform of  $x[n] = (-1)^n (u[n] u[n 8])$ . Sketch the poles and zeros of X[z] in the *z* plane. No calculator is needed to do this problem!
- **5.1-2** Determine the unilateral *z*-transform X[z] of the signal x[n] shown in Fig. P5.1-2. As the picture suggests, x[n] = -3 for all  $n \ge 9$  and x[n] = 0 for all n < 3.
- **5.1-3** (a) A causal signal has *z*-transform given by  $X[z] = \frac{z^2}{z^3-1}$ . Determine the time-domain signal x[n] and sketch x[n] over  $-4 \le n \le 11$ . [*Hint:* No complex arithmetic is needed to solve this problem!]

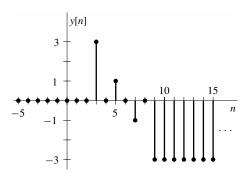


Figure P5.1-2

- (b) Consider the causal semiperiodic signal y[n]shown in Fig. P5.1-3. Notice, y[n] continually repeats the sequence [1,2,3] for  $n \ge 0$ . Determine the unilateral z-transform Y[z] of this signal. If possible, express your result as a rational function in standard form.
- 5.1-4 Using the definition of the z-transform, find the z-transform and the ROC for each of the following signals.
  - (a) u[n-m]
  - (b)  $\gamma^n \sin \pi n u[n]$
  - (c)  $\gamma^n \cos \pi n u[n]$

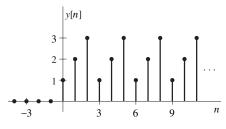


Figure P5.1-3

(d) 
$$\gamma^n \sin \frac{\pi n}{2} u[n]$$
  
(e)  $\gamma^n \cos \frac{\pi n}{2} u[n]$   
(f)  $\sum_{k=0}^{\infty} 2^{2k} \delta[n-2k]$   
(g)  $\gamma^{n-1} u[n-1]$ 

(h)  $n\gamma^n u[n]$ 

(1) 
$$nu[n]$$

(j) 
$$\frac{\gamma}{n!}u[n]$$

(k) 
$$[2^{n-1} - (-2)^{n-1}]u[n]$$
  
(l)  $\frac{(\ln \alpha)^n}{n!}u[n]$ 

- **5.1-5** Showing all work, evaluate  $\sum_{n=0}^{\infty} n(-3/2)^{-n}$ .
- Using only the z-transforms of Table 5.1, deter-5.1-6 mine the z-transform of each of the following signals.

(a) u[n] - u[n-2](b)  $\gamma^{n-2}u[n-2]$ 

- (c)  $2^{n+1}u[n-1] + e^{n-1}u[n]$ (d)  $\left[2^{-n}\cos\left(\frac{\pi}{3}n\right)\right]u[n-1]$ (e)  $n\gamma^n u[n-1]$

- (f)  $n(n-1)(n-2)2^{n-3}u[n-m]$ for m = 0, 1, 2, 3

(g) 
$$(-1)^n nu[n]$$

(h) 
$$\sum_{k=0}^{\infty} k\delta(n-2k+1)$$

5.1-7 Find the inverse unilateral z-transform of each of the following: z(z-4)

(a) 
$$\frac{z(z-4)}{z^2-5z+6}$$
  
(b)  $\frac{z-4}{z^2-5z+6}$   
(c)  $\frac{(e^{-2}-2)z}{(z-e^{-2})(z-2)}$   
(d)  $\frac{(z-1)^2}{z^3}$   
(e)  $\frac{z(2z+3)}{(z-1)(z^2-5z+6)}$   
(f)  $\frac{z(-5z+22)}{(z+1)(z-2)^2}$ 

(g) 
$$\frac{z(1.4z+0.08)}{(z-0.2)(z-0.8)^2}$$

(h) 
$$\frac{z(z-2)}{z^2-z+1}$$
  
(i)  $\frac{2z^2-0.3z+0.25}{z^2+0.6z+0.25}$   
 $2z(3z-23)$ 

(j) 
$$\frac{2z(3z-23)}{(z-1)(z^2-6z+25)}$$
$$z(3,83z+11,34)$$

(k) 
$$\frac{1}{(z-2)(z^2-5z+25)}$$

(l) 
$$\frac{z^2(-2z^2+8z-7)}{(z-1)(z-2)^3}$$

(a) Expanding X[z] as a power series in  $z^{-1}$ , 5.1-8 find the first three terms of x[n] if

$$X[z] = \frac{2z^3 + 13z^2 + z}{z^3 + 7z^2 + 2z + 1}$$

(b) Extend the procedure used in part (a) to find the first four terms of x[n] if

$$X[z] = \frac{2z^4 + 16z^3 + 17z^2 + 3z}{z^3 + 7z^2 + 2z + 1}$$

- A right-sided signal x[n] has z-transform given 5.1-9 by  $X[z] = \frac{z^6 + 2z^7 + 3z^4 + 4z^3}{z^4 - 1}$ . Using a power series expansion of X[z], determine x[n] over  $-5 \le$  $n \leq 5$ .
- **5.1-10** Find x[n] by expanding

$$X[z] = \frac{\gamma z}{(z - \gamma)^2}$$

as a power series in  $z^{-1}$ .

- 5.1-11 (a) In Table 5.1, if the numerator and the denominator powers of X[z] are M and N, respectively, explain why in some cases N M = 0, while in others N M = 1 or N M = m (*m* any positive integer).
  - (b) Without actually finding the *z*-transform, state what is N M for X[z] corresponding to  $x[n] = \gamma^n u[n-4]$ .
- **5.2-1** For a discrete-time signal shown in Fig. P5.2-1, show that

$$X[z] = \frac{1 - z^{-m}}{1 - z^{-1}}$$

Find your answer by using the definition in Eq. (5.1) and by using Table 5.1 and an appropriate property of the *z*-transform.

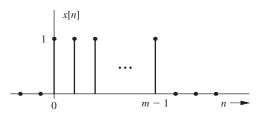


Figure P5.2-1

- **5.2-2** Determine the unilateral *z*-transform of signal  $x[n] = (1-n)\cos(\frac{\pi}{2}(n-1))u[n-1].$
- **5.2-3** Suppose a DT signal x[n] = 2(u[n-10] u[n-6]) has a transform X(z). Define  $Y(z) = \frac{1}{2z^{-3}}\frac{d}{dz}X(2z)$ . Using graphic plot or vector notation, determine the corresponding signal y[n].
- **5.2-4** Suppose a DT signal x[n] = 3(u[n] u[n-5])has a transform X(z). Define  $Y(z) = 2z^{-4}\frac{d}{dz}X(\frac{z}{2})$ . Using graphic plot or vector notation, determine the corresponding signal y[n].
- **5.2-5** Find the *z*-transform of the signal illustrated in Fig. P5.2-5. Solve this problem in two ways, as in Exs. 5.2d and 5.4. Verify that the two answers are equivalent.
- **5.2-6** Using *z*-transform techniques and properties (no time-domain convolution sum!), determine the convolution  $y[n] = (\frac{1}{2})^n u[n-3]*(\frac{1}{3})^{n-6}u[n-4]$ . Express your answer in the form  $y[n] = c_1 \gamma_1^{n-N_1} u[n-N_1] + c_2 \gamma_2^{n-N_2} u[n-N_2]$ , making sure to clearly identify the constants  $c_1$ ,  $c_2$ ,  $\gamma_1$ ,  $\gamma_2$ ,  $N_1$ , and  $N_2$ .

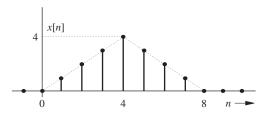


Figure P5.2-5

**5.2-7** Determine the inverse unilateral *z*-transform x[n] of the signal

$$X[z] = \frac{d^7}{dz^7} \left[ \frac{z^{-4}}{(z - \frac{1}{2})(z+3)} \right]$$

- **5.2-8** Using only the fact that  $\gamma^n u[n] \iff z/(z-\gamma)$  and properties of the *z*-transform, find the *z*-transform of each of the following:
  - (a)  $n^2 u[n]$
  - (b)  $n^2 \gamma^n u[n]$
  - (c)  $n^3 u[n]$
  - (d)  $a^{n}[u[n] u[n m]]$
  - (e)  $ne^{-2n}u[n-m]$
  - (f)  $(n-2)(0.5)^{n-3}u[n-4]$
- **5.2-9** Using only pair 1 in Table 5.1 and appropriate properties of the *z*-transform, derive iteratively pairs 2 through 9. In other words, first derive pair 2. Then use pair 2 (and pair 1, if needed) to derive pair 3, and so on.
- **5.2-10** Find the *z*-transform of  $cos(\pi n/4)u[n]$  using only pairs 1 and 11b in Table 5.1 and a suitable property of the *z*-transform.
- **5.2-11** Apply the time-reversal property to pair 6 of Table 5.1 to show that  $\gamma^n u[-(n + 1)] \iff -z/(z-\gamma)$  and the ROC is given by  $|z| < |\gamma|$ .
- **5.2-12** (a) If  $x[n] \iff X[z]$ , then show that  $(-1)^n x[n] \iff X[-z]$ .
  - (b) Use this result to show that  $(-\gamma)^n u[n] \iff z/(z+\gamma)$ .
  - (c) Use these results to find the *z*-transforms of  $x_i[n] = [2^{n-1} (-2)^{n-1}]u[n]$  and  $x ii[n] = \gamma^n \cos \pi n u[n]$
- **5.2-13** (a) If  $x[n] \iff X[z]$ , then show that

$$\sum_{k=0}^{n} x[k] \longleftrightarrow \frac{zX[z]}{z-1}$$

#### 578 CHAPTER 5 DISCRETE-TIME SYSTEM ANALYSIS USING THE Z-TRANSFORM

- (b) Use this result to derive pair 2 from pair 1 in Table 5.1.
- **5.2-14** A number of causal time-domain functions are shown in Fig. P5.2-14. List the function of time that corresponds to each of the following functions of *z*. Few or no calculations are necessary! Be careful, the graphs may be scaled differently.

(a) 
$$\frac{z^2}{(z-0.75)^2}$$
  
(b)  $\frac{z^2-0.9z/\sqrt{2}}{z^2-0.9\sqrt{2}z+0.81}$   
(c)  $\sum_{k=0}^4 z^{-2k}$ 

(d) 
$$\frac{z^{-5}}{1-z^{-1}}$$

(e) 
$$\frac{z}{z^4 - 1}$$
  
(f)  $\frac{0.75z}{(z - 0.75)^2}$ 

(z = 0.75)<sup>2</sup>  
(g) 
$$\frac{z^2 - z/\sqrt{2}}{z^2 - \sqrt{2}z + 1}$$
  
(h)  $\frac{z^{-1} - 5z^{-5} + 4z^{-5}}{z^{-1} - 5z^{-5} + 4z^{-5}}$ 

(i) 
$$5(1-z^{-1})$$
  
(i)  $\frac{z}{z-1}$ 


(j) 
$$\frac{0.25z^{-1}}{(1-z^{-1})(1-0.75z^{-1})}$$

- **5.2-15** Suppose we upsample a causal signal x[n] by factor N to produce signal y[n]. Express Y(z) in terms of X(z), taking care to mathematically justify your result.
- **5.3-1** Using *z*-transform techniques, find the output y[n] of an LTID system specified by the equation  $y[n] \frac{1}{3}y[n-1] = x[n-1]$  if the initial condition is y[-1] = 2 and the input is x[n] = -u[n].
- 5.3-2 Consider an LTID system y[n] y[n-2] = x[n]with y[-1] = 0, y[-2] = 1, and x[n] = u[n].
  - (a) Determine Y[z], expressed as a rational function in standard factored form.
  - (b) Use Y[z] from part (a) to solve for the system output y[n].
- **5.3-3** Solve Prob. 3.8-23 by the *z*-transform method.
- **5.3-4** Consider a DT system with transfer function  $H[z] = \frac{2z-2}{z-0.5}$ . Assuming the system is both controllable and observable, determine the ZIR  $y_{zir}[n]$  given y[-1] = 1.
- 5.3-5 (a) Solve

$$y[n+1] + 2y[n] = x[n+1]$$

when 
$$y[0] = 1$$
 and  $x[n] = e^{-(n-1)}u[n]$ 

- (b) Find the zero-input and the zero-state components of the response.
- **5.3-6** Consider a LTID system that is described by the difference equation  $y[n] \frac{1}{4}y[n-2] = x[n-1]$ .

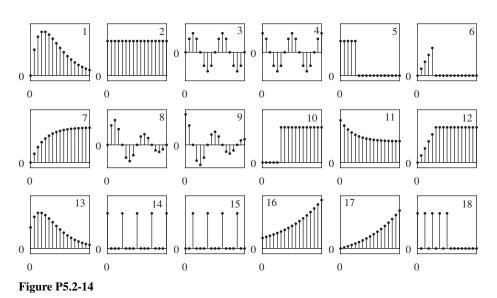

- (a) Use transform-domain techniques to determine the zero-state response  $y_{zsr}[n]$  to input x[n] = 3u[n-5].
- (b) Use transform-domain techniques to determine the zero-input response  $y_{zir}[n]$  given  $y_{zir}[-2] = y_{zir}[-1] = 1$ .
- **5.3-7** (a) Find the output y[n] of an LTID system specified by the equation

$$2y[n+2] - 3y[n+1] + y[n] = 4x[n+2] - 3x[n+1]$$

for input  $x[n] = (4)^{-n}u[n]$  and initial conditions y[-1] = 0 and y[-2] = 1.

- (b) Find the zero-input and the zero-state components of the response.
- (c) Find the transient and the steady-state components of the response.
- **5.3-8** Solve Prob. 5.3-7 if initial conditions y[-1] and y[-2] are instead replaced with auxiliary conditions y[0] = 3/2 and y[1] = 35/4.
- 5.3-9 (a) Solve

$$4y[n+2] + 4y[n+1] + y[n] = x[n+1]$$

with y[-1] = 0, y[-2] = 1, and x[n] = u[n].

- (b) Find the zero-input and the zero-state components of the response.
- (c) Find the transient and the steady-state components of the response.
- 5.3-10 Solve

$$y[n+2] - 3y[n+1] + 2y[n] = x[n+1]$$

if y[-1] = 2, y[-2] = 3, and  $x[n] = (3)^n u[n]$ .

5.3-11 Solve

$$y[n+2] - 2y[n+1] + 2y[n] = x[n]$$

with y[-1] = 1, y[-2] = 0, and x[n] = u[n].

- 5.3-12 Consider a causal LTID system described as  $H(z) = \frac{21(z^2+1)}{16(z^2+\frac{1}{4}z-\frac{3}{8})}.$ 
  - (a) Determine the standard delay-form difference equation description of this system.
  - (b) Using transform-domain techniques, determine the system impulse response h[n].
  - (c) Using transform-domain techniques, determine  $y_{zir}[n]$  given y[-1] = 16 and y[-2] = 8.

- **5.3-13** Consider a causal LTID system described as  $y[n] \frac{5}{6}y[n-1] + \frac{1}{6}y[n-2] = \frac{3}{2}x[n-1] + \frac{3}{7}x[n-2].$ 
  - (a) Determine the (standard-form) system transfer function H(z) and sketch the system pole-zero plot.
  - (b) Using transform-domain techniques, determine  $y_{zir}[n]$  given y[-1] = 2 and y[-2] = -2.
- 5.3-14 Solve

$$y[n] + 2y[n-1] + 2y[n-2] = x[n-1] + 2x[n-2]$$

with y[0] = 0, y[1] = 1, and  $x[n] = e^n u[n]$ .

- **5.3-15** A system with impulse response  $h[n] = 2(1/3)^n u[n-1]$  produces an output  $y[n] = (-2)^n u[n-1]$ . Determine the corresponding input x[n].
- 5.3-16 A professor recently received an unexpected \$10 (a futile bribe attached to a test). Being the savvy investor that she is, the professor decides to invest the \$10 into a savings account that earns 0.5% interest compounded monthly (6.17% APY). Furthermore, she decides to supplement this initial investment with an additional \$5 deposit made every month, beginning the month immediately following her initial investment.
  - (a) Model the professor's savings account as a constant coefficient linear difference equation. Designate y[n] as the account balance at month n, where n = 0corresponds to the first month that interest is awarded (and that her \$5 deposits begin).
  - (b) Determine a closed-form solution for y[n]. That is, you should express y[n] as a function only of n.
  - (c) If we consider the professor's bank account as a system, what is the system impulse response *h*[*n*]? What is the system transfer function *H*[*z*]?
  - (d) Explain this fact: if the input to the professor's bank account is the everlasting exponential  $x[n] = 1^n = 1$ , then the output is **not**  $y[n] = 1^n H[1] = H[1]$ .
- **5.3-17** Sally deposits \$100 into her savings account on the first day of every month except for each December, when she uses her money to buy

holiday gifts. Define b[m] as the balance in Sally's account on the first day of month m. Assume Sally opens her account in January (m = 0), continues making monthly payments forever (except each December!), and that her monthly interest rate is 1%. Sally's account balance satisfies a simple difference equation b[m] = (1.01)b[m - 1] + p[m], where p[m] designates Sally's monthly deposits. Determine a closed-form expression for b[m] that is only a function of the month m.

- **5.3-18** For each impulse response, determine the number of system poles, whether the poles are real or complex, and whether the system is BIBO-stable.
  - (a)  $h_1[n] = (-1 + (0.5)^n)u[n]$
  - (b)  $h_2[n] = (j)^n (u[n] u[n-10])$
- **5.3-19** Find the following sums:

(a) 
$$\sum_{k=0}^{n} k$$
  
(b) 
$$\sum_{k=0}^{n} k^{2}$$

[*Hint*: Consider a system whose output y[n] is the desired sum. Examine the relationship between y[n] and y[n - 1]. Note also that y[0] = 0.]

**5.3-20** Find the following sum:

$$\sum_{k=0}^{n} k^3$$

[Hint: See the hint for Prob. 5.3-19.]

**5.3-21** Find the following sum:

$$\sum_{k=0}^{n} ka^{k} \qquad a \neq$$

1

[Hint: See the hint for Prob. 5.3-19.]

- **5.3-22** Redo Prob. 5.3-19 using the result in Prob. 5.2-13a.
- **5.3-23** Redo Prob. 5.3-20 using the result in Prob. 5.2-13a.
- **5.3-24** Redo Prob. 5.3-21 using the result in Prob. 5.2-13a.

**5.3-25** (a) Find the zero-state response of an LTID system with transfer function

$$H[z] = \frac{z}{(z+0.2)(z-0.8)}$$

and the input  $x[n] = e^{(n+1)}u[n]$ .

(b) Write the difference equation relating the output y[n] to input x[n].

**5.3-26** Repeat Prob. 5.3-25 for x[n] = u[n] and

$$H[z] = \frac{2z+3}{(z-2)(z-3)}$$

5.3-27 Repeat Prob. 5.3-25 for

$$H[z] = \frac{6(5z-1)}{6z^2 - 5z + 1}$$

- and the input x[n] is (a)  $(4)^{-n}u[n]$ (b)  $(4)^{-(n-2)}u[n-2]$ (c)  $(4)^{-(n-2)}u[n]$ (d)  $(4)^{-n}u[n-2]$
- **5.3-28** Repeat Prob. 5.3-25 for x[n] = u[n] and

$$H[z] = \frac{2z - 1}{z^2 - 1.6z + 0.8}$$

- **5.3-29** Find the transfer functions corresponding to each of the systems specified by difference equations in Probs. 5.3-5, 5.3-7, 5.3-9, and 5.3-14.
- **5.3-30** Find h[n], the unit impulse response of the systems described by the following equations:
  - (a) y[n] + 3y[n-1] + 2y[n-2] = x[n] + 3x[n-1] + 3x[n-2]
  - (b) y[n+2] + 2y[n+1] + y[n] = 2x[n+2] x[n+1]
  - (c) y[n] y[n-1] + 0.5y[n-2] = x[n] + 2x[n-1]
- **5.3-31** Find h[n], the unit impulse response of the systems in Probs. 5.3-25, 5.3-26, and 5.3-28.
- **5.3-32** A system has impulse response h[n] = u[n 3].
  - (a) Determine the impulse response of the inverse system  $h^{-1}[n]$ .
  - (b) Is the inverse stable? Is the inverse causal?
  - (c) Your boss asks you to implement  $h^{-1}[n]$  to the best of your ability. Describe your realizable design, taking care to identify any deficiencies.

**5.4-1** A system has impulse response given by

$$h[n] = \left[ \left( \frac{1+j}{\sqrt{8}} \right)^n + \left( \frac{1-j}{\sqrt{8}} \right)^n \right] u[n]$$

This system can be implemented according to Fig. P5.4-1.

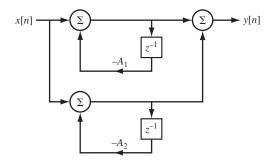


Figure P5.4-1

- (a) Determine the coefficients A<sub>1</sub> and A<sub>2</sub> to implement h[n] using the structure shown in Fig. P5.4-1.
- (b) What is the zero-state response y<sub>0</sub>[n] of this system, given a shifted unit step input x[n] = u[n + 3]?
- **5.4-2** (a) Show the canonic direct form, a cascade, and a parallel realization of

$$H[z] = \frac{z(3z - 1.8)}{z^2 - z + 0.16}$$

- (b) Find the transpose of the realizations obtained in part (a).
- **5.4-3** Repeat Prob. 5.4-2 for

$$H[z] = \frac{5z + 2.2}{z^2 + z + 0.16}$$

5.4-4 Repeat Prob. 5.4-2 for

$$H[z] = \frac{3.8z - 1.1}{(z - 0.2)(z^2 - 0.6z + 0.25)}$$

5.4-5 Repeat Prob. 5.4-2 for

$$H[z] = \frac{z(1.6z - 1.8)}{(z - 0.2)(z^2 + z + 0.5)}$$

5.4-6 Repeat Prob. 5.4-2 for

$$H[z] = \frac{z(2z^2 + 1.3z + 0.96)}{(z + 0.5)(z - 0.4)^2}$$

5.4-7 Consider the LTID system shown in Fig. P5.4-7.

$$x[n] \xrightarrow{3} \qquad z^{-1} \qquad \Sigma \qquad z^{-1} \qquad y[n]$$

- Figure P5.4-7
- (a) Determine the standard delay-form difference equation description of this system.
- (b) Determine the impulse response h[n] of this system.
- (c) Is this realization canonical? Explain.
- (d) Is this system stable? Explain.
- (e) Is this system causal? Explain.
- 5.4-8 Realize a system whose transfer function is

$$H[z] = \frac{2z^4 + z^3 + 0.8z^2 + 2z + 8}{z^4}$$

**5.4-9** Realize a system whose transfer function is given by

$$H[z] = \sum_{n=0}^{6} n z^{-n}$$

**5.4-10** Consider the LTID system shown in Fig. P5.4-10, where parameter *c* is an arbitrary, real constant.

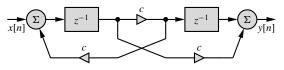


Figure P5.4-10

- (a) Determine the system transfer function H[z], expressed in standard rational form.
- (b) Determine all system poles and all system zeros.
- (c) Is the system of Fig. P5.4-10 canonical? Explain.
- (d) What constraints, if any, exist on parameter *c* to ensure that the system is stable?
- **5.4-11** This problem demonstrates the enormous number of ways of implementing even a relatively low-order transfer function. A second-order transfer function has two real zeros and two real poles. Discuss various ways of realizing

such a transfer function. Consider canonic direct, cascade, parallel, and the corresponding transposed forms. Note also that interchange of cascaded sections yields a different realization.

**5.4-12** Consider a digital audio system: an input analog-to-digital converter (ADC) is used to collect input samples at a CD-quality rate  $F_s = 44$  kHz. Input samples are processed with a digital filter to generate output samples, which are sent to a digital-to-analog converter (DAC) at the same rate  $F_s$ . Every sample interval  $T = 1/F_s$ , the digital processor executes the following MATLAB-compatible code:

```
% Read input sample from the ADC
x = read_ADC;
% Process input and...
mem(1) = x - mem(3)*9/16;
% ...compute output sample
y = mem(1)*7/16 - mem(3)*7/16;
% Send output sample to the DAC
write_DAC = y;
% Update memory for next iteration
mem(3) = mem(2);
mem(2) = mem(1);
```

- (a) Does the code implement DFI, DFII, TDFI, or TDFII? Support your answer by drawing the appropriate block diagram labeled in a manner that is consistent with the code.
- (b) Determine the transfer function *H*[*z*] of this system.
- (c) What is the basic filtering function of this system: LP, HP, BP, or BS? Justify your answer.
- (d) Determine the transfer function H<sup>-1</sup>[z] of the inverse system to H[z] and draw its DFI block implementation. How well will the inverse system operate?
- **5.4-13** Repeat Prob. 5.4-12 but instead use the code:

```
% Read input sample from the ADC
x = read_ADC;
% Compute output sample
y = x*7/32+mem(1);
% Send output sample to the DAC
write_DAC = y;
% Update memory for next iteration
mem(1) = mem(2);
mem(2) = x*7/32 + y*9/16;
```

- 5.5-1 A CT sinusoid  $x(t) = \cos(\omega t)$  is sampled at a greater-than-Nyquist rate  $F_s = 1000$  Hz to produce a DT sinusoid  $x(t) = \cos(\Omega n)$ . Determine the analog frequency  $\omega$  if (a)  $\Omega = \frac{\pi}{4}$ 
  - (b)  $\Omega = \frac{2\pi}{3}$
  - (c)  $\Omega = \frac{7}{8}$
- **5.5-2** Find the amplitude and phase response of the digital filters depicted in Fig. P5.5-2.
- **5.5-3** A causal LTID system  $H(z) = \frac{21(z-j)(z+j)}{16(z-\frac{1}{2})(z+\frac{3}{4})}$  has a periodic input x[n] that toggles between the values 1 and 2. That is,  $x[n] = [\ldots, 1, 2, 1, \frac{1}{2}, 1, 2, 1, \ldots]$ , where x[0] = 2.
  - (a) Plot the magnitude response  $|H(e^{j\Omega})|$  over  $-2\pi \le \Omega \le 2\pi$ .
  - (b) Plot the phase response  $\angle H(e^{i\Omega})$  over  $-2\pi \le \Omega \le 2\pi$ .
  - (c) Determine the system output y[n] in response to the periodic input x[n].

**5.5-4** A causal LTID system  $H(z) = \frac{-7(z+1)}{32(z-j_4^3)(z+j_4^3)}$ has a periodic input x[n] that cycles through the 4 values 3, 2, 1, and 2. That is, x[n] = $[..., 3, 2, 1, 2, \overset{\downarrow}{3}, 2, 1, 2, ...]$ , where x[0] =3.

- (a) Plot the magnitude response  $|H(e^{i\Omega})|$  over  $-2\pi \le \Omega \le 2\pi$ .
- (b) Plot the phase response  $\angle H(e^{j\Omega})$  over  $-2\pi \le \Omega \le 2\pi$ .
- (c) Determine the system output y[n] in response to the periodic input x[n].
- **5.5-5** Find the amplitude and the phase response of the filters shown in Fig. P5.5-5. [*Hint:* Express  $H[e^{j\Omega}]$  as  $e^{-j2.5\Omega}H_a[e^{j\Omega}]$ .]
- **5.5-6** Find the frequency response for the moving-average system in Prob. 3.4-3. The input–output equation of this system is given by

$$y[n] = \frac{1}{5} \sum_{k=0}^{4} x[n-k]$$

- **5.5-7** (a) Input–output relationships of two filters are described by
  - (i) y[n] = -0.9y[n-1] + x[n]

(ii) y[n] = 0.9y[n-1] + x[n]

For each case, find the transfer function, the amplitude response, and the phase response.

Sketch the amplitude response, and state the type (highpass, lowpass, etc.) of each filter.

- (b) Find the response of each of these filters to a sinusoid x[n] = cos Ωn for Ω = 0.01π and 0.99π. In general, show that the gain (amplitude response) of filter (i) at frequency Ω<sub>0</sub> is the same as the gain of filter (ii) at frequency π - Ω<sub>0</sub>.
- 5.5-8 For an LTID system specified by the equation

$$y[n+1] - 0.5y[n] = x[n+1] + 0.8x[n]$$

(a) Find the amplitude and the phase response.

- (b) Find the system response y[n] for the input  $x[n] = \cos(0.5k (\pi/3))$ .
- **5.5-9** For an asymptotically stable LTID system, show that the steady-state response to input  $e^{j\Omega n}u[n]$  is  $H[e^{j\Omega}]e^{j\Omega n}u[n]$ . The steady-state response is that part of the response which does not decay with time and persists forever.
- **5.5-10** Express the following signals in terms of apparent frequencies:
  - (a)  $\cos(0.8\pi n + \theta)$
  - (b)  $\sin(1.2\pi n + \theta)$
  - (c)  $\cos(6.9n + \theta)$

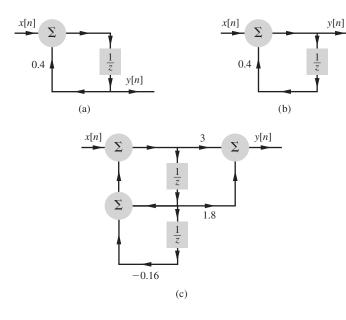
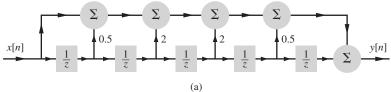


Figure P5.5-2




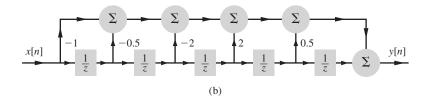


Figure P5.5-5

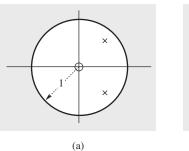

- (d)  $\cos(2.8\pi n + \theta) + 2\sin(3.7\pi n + \theta)$
- (e) sinc  $(\pi n/2)$
- (f) sinc  $(3\pi n/2)$
- (g) sinc  $(2\pi n)$
- 5.5-11 Show that  $\cos(0.6\pi n + (\pi/6)) + \sqrt{3}\cos(1.4\pi n + (\pi/3)) = 2\cos(0.6\pi n (\pi/6)).$
- 5.5-12 (a) A digital filter has the sampling interval  $T = 50 \,\mu$ s. Determine the highest frequency that can be processed by this filter without aliasing.
  - (b) If the highest frequency to be processed is 50 kHz, determine the minimum value of the sampling frequency  $\mathcal{F}_s$  and the maximum value of the sampling interval *T* that can be used.
- **5.5-13** Consider the discrete-time system represented by

$$y[n] = \sum_{k=0}^{\infty} (0.5)^k x[n-k]$$

- (a) Determine and plot the magnitude response  $|H[e^{j\Omega}]|$  of the system.
- (b) Determine and plot the phase response  $\angle H[e^{j\Omega}]$  of the system.
- (c) Find an efficient block representation that implements this system.
- **5.6-1** Pole-zero configurations of certain filters are shown in Fig. P5.6-1. Sketch roughly the amplitude response of these filters.
- **5.6-2** Figure P5.6-2 displays the pole-zero plot of a second-order real, causal LTID system that has H[-1] = -1.


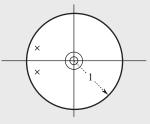




Figure P5.6-1

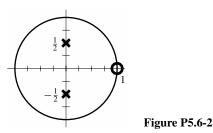

- (a) Determine the five constants  $b_0$ ,  $b_1$ ,  $b_2$ ,  $a_1$ , and  $a_2$  that specify the transfer function  $H[z] = \frac{b_0 z^2 + b_1 z + b_2}{z^2 + a_1 z + a_2}$ .
- (b) Using the techniques of Sec. 5.6, accurately hand-sketch the system magnitude response |*H*[e<sup>jΩ</sup>]| over the range (−2π ≤ Ω ≤ 0).
- (c) Determine the output y[n] of this system if the input is  $x[n] = \sin\left(\frac{\pi n}{2}\right)$ .
- **5.6-3** Repeat Prob. 5.6-2 if the zero at z = 1 is moved to z = -1 and H[1] = -1 is specified rather than H[-1] = -1.
- **5.6-4** Figure P5.6-4 displays the pole-zero plot of a second-order real, causal LTID system that has H[-1] = 1.
  - (a) Determine the five constants k, b<sub>1</sub>, b<sub>2</sub>, a<sub>1</sub>, and a<sub>2</sub> that specify the transfer function  $H[z] = k \frac{z^2 + b_1 z + b_2}{z^2 + a_1 z + a_2}.$


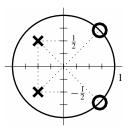


Figure P5.6-4


- (b) Using the techniques of Sec. 5.6, accurately hand-sketch the system magnitude response |*H*[e<sup>jΩ</sup>]| over the range (−π ≤ Ω ≤ π).
- (c) A signal  $x(t) = \cos(100\pi t) + \cos(500\pi t)$  is sampled at a greater than Nyquist rate  $F_s$  Hz and then input into the above LTID system to produce DT output  $y[n] = \beta \cos(\Omega_0 n + \theta)$ . Determine  $F_s$  and  $\Omega_0$ . You do not need to find constants  $\beta$  and  $\theta$ .
- (d) Is the inpulse response *h*[*n*] of this system absolutely summable? Justify your answer.
- **5.6-5** Figure P5.6-5 displays the pole-zero plot of a second-order real, causal LTID system that has H[1] = -1.

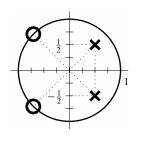

(a) Determine the five constants k, b<sub>1</sub>, b<sub>2</sub>, a<sub>1</sub>, and a<sub>2</sub> that specify the transfer function H[z] = k<sup>2+b<sub>1</sub>z+b<sub>2</sub></sup>/<sub>z<sup>2</sup>+a<sub>1</sub>z+a<sub>2</sub></sub>.
(b) Using the techniques of Sec. 5.6, accurately

Figure P5.6-5

- (b) Using the techniques of Sec. 5.6, accurately hand-sketch the system magnitude response |*H*[*e*<sup>jΩ</sup>]| over the range (−π < Ω < π).</p>
- (c) A signal  $x(t) = \cos(2\pi ft)$  is sampled at a rate  $F_s = 1$  kHz and then input into the above LTID system to produce DT output y[n]. Determine, if possible, the frequency or frequencies f that will produce zero output, y[n] = 0.
- **5.6-6** The system y[n] y[n-1] = x[n] x[n-1] is an all-pass system that has zero phase response. Is there any difference between this system and the system y[n] = x[n]? Justify your answer.
- **5.6-7** Figure P5.6-7 displays the pole-zero plot of a second-order real, causal LTID system that has a repeated zero and H[1] = 4. The solid circle is the unit circle.

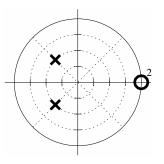

#### Figure P5.6-7


- (a) Determine the five constants k, b<sub>1</sub>, b<sub>2</sub>, a<sub>1</sub>, and a<sub>2</sub> that specify the transfer function H[z] = k<sup>2+b<sub>1</sub>z+b<sub>2</sub></sup>/<sub>z<sup>2</sup>+a<sub>1</sub>z+a<sub>2</sub></sub>.
  (b) Using the techniques of Sec. 5.6, accurately
- (b) Using the techniques of Sec. 5.6, accurately hand-sketch the system magnitude response |*H*[*e<sup>jΩ</sup>*]| over the range (−π ≤ Ω ≤ π).
- (c) Determine the steady-state output  $y_{ss}[n]$  of this system if the input is  $x[n] = \cos(\frac{3\pi n}{4})u[n]$ .
- (d) State whether this system is LP, HP, BP, BS, or other. If the digital system operates at  $F_s = 8$  kHz, what is the approximate hertzian cutoff frequency (or frequencies) of this system?
- **5.6-8** The magnitude and phase responses of a real, stable, LTI system are shown in Fig. P5.6-8.
  - (a) What type of system is this: lowpass, highpass, bandpass, or bandstop?
  - (b) What is the output of this system in response to

$$x_1[n] = 2\sin\left(\frac{\pi}{2}n + \frac{\pi}{4}\right)$$

(c) What is the output of this system in response to

$$x_2[n] = \cos\left(\frac{7\pi}{4}n\right)$$

- **5.6-9** Consider an LTID system with system function  $H[z] = b_0 \frac{z^2+1}{z^2-9/16}$ .
  - (a) Determine the constant  $b_0$  so that the system frequency response at  $\Omega = -\pi$  is -1.
  - (b) Accurately sketch the system poles and zeros.
  - (c) Using the locations of the system poles and zeros, sketch  $|H[e^{i\Omega}]|$  over  $0 \le \Omega \le 2\pi$ .

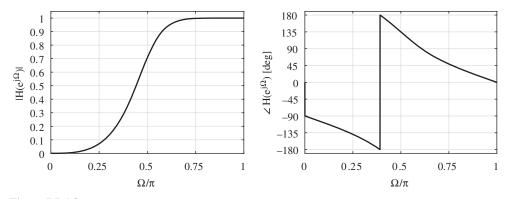



- (d) Determine the response y[n] to the input  $x[n] = (-1+j) + j^n + (1-j)\sin(\pi n + 1).$
- (e) Draw an appropriate block diagram representation of this system.
- **5.6-10** Do Prob. 5.10-3 by graphical procedure. Do the sketches approximately, without using MATLAB.
- **5.6-11** Do Prob. 5.10-8 by graphical procedure. Do the sketches approximately, without using MATLAB.
- **5.6-12** (a) Realize a digital filter whose transfer function is given by

$$H[z] = K \frac{z+1}{z-a}$$

- (b) Sketch the amplitude response of this filter, assuming |a| < 1.</p>
- (c) The amplitude response of this lowpass filter is maximum at  $\Omega = 0$ . The 3 dB bandwidth is the frequency at which the amplitude response drops to 0.707 (or  $1/\sqrt{2}$ ) times its maximum value. Determine the 3 dB bandwidth of this filter when a = 0.2.
- **5.6-13** Design a digital notch filter to reject frequency 5000 Hz completely and to have a sharp recovery on either side of 5000 Hz to a gain of unity. The highest frequency to be processed is 20 kHz ( $\mathcal{F}_h = 20,000$ ). [*Hint:* See Ex. 5.15. The zeros should be at  $e^{\pm j\omega T}$  for  $\omega$  corresponding to 5000 Hz, and the poles are at  $ae^{\pm j\omega T}$  with a < 1. Leave your answer in terms of *a*. Realize this filter using the canonical form. Find the amplitude response of the filter.]

**5.6-14** Consider the desired DT system magnitude response  $|H[e^{i\Omega}]|$  in Fig. P5.6-14.

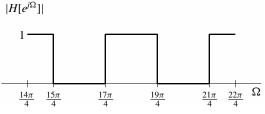


Figure P5.6-14

- (a) Is the filter LP, HP, BP, BS, or other? Explain.
- (b) Sketch the pole-zero plot of a 2nd-order system that behaves as a reasonable approximation of Fig. P5.6-14. What is the coefficient  $b_0$ ?
- **5.6-15** Show that a first-order LTID system with a pole at z = r and a zero at z = 1/r ( $r \le 1$ ) is an allpass filter. In other words, show that the amplitude response  $|H[e^{j\Omega}]|$  of a system with the transfer function

$$H[z] = \frac{z - \frac{1}{r}}{z - r} \qquad r \le 1$$

is constant with frequency. This is a first-order allpass filter. [*Hint:* Show that the ratio of the distances of any point on the unit circle from the zero (at z = 1/r) and the pole (at z = r) is a constant 1/r.]

Generalize this result to show that an LTID system with two poles at  $z = re^{\pm j\theta}$  and two zeros

at  $z = (1/r)e^{\pm j\theta}$   $(r \le 1)$  is an allpass filter. In other words, show that the amplitude response of a system with the transfer function

$$H[z] = \frac{\left(z - \frac{1}{r}e^{j\theta}\right)\left(z - \frac{1}{r}e^{-j\theta}\right)}{(z - re^{j\theta})(z - re^{-j\theta})}$$
$$= \frac{z^2 - \left(\frac{2}{r}\cos\theta\right)z + \frac{1}{r^2}}{z^2 - (2r\cos\theta)z + r^2} \qquad r \le 1$$

is constant with frequency.

**5.6-16** (a) If  $h_1[n]$  and  $h_2[n]$ , the impulse responses of two LTID systems are related by  $h_2[n] = (-1)^n h_1[n]$ , then show that

$$H_2[e^{j\Omega}] = H_1[e^{j(\Omega \pm \pi)}]$$

How is the frequency response spectrum  $H_2[e^{j\Omega}]$  related to the  $H_1[e^{j\Omega}]$ ?

- (b) If H<sub>1</sub>[z] represents an ideal lowpass filter with cutoff frequency Ω<sub>c</sub>, sketch H<sub>2</sub>[e<sup>jΩ</sup>]. What type of filter is H<sub>2</sub>[e<sup>jΩ</sup>]?
- **5.6-17** Mappings such as the bilinear transformation are useful in the conversion of continuous-time filters to discrete-time filters. Another useful type of transformation is one that converts a discrete-time filter into a different type of discrete-time filter. Consider a transformation that replaces z with -z.
  - (a) Show that this transformation converts lowpass filters into highpass filters and highpass filters into lowpass filters.
  - (b) If the original filter is an FIR filter with impulse response *h*[*n*], what is the impulse response of the transformed filter?
- **5.6-18** The bilinear transformation is defined by the rule  $s = 2(1 z^{-1})/T(1 + z^{-1})$ .
  - (a) Show that this transformation maps the  $\omega$  axis in the *s* plane to the unit circle  $z = e^{j\Omega}$  in the *z* plane.
  - (b) Show that this transformation maps  $\Omega$  to  $2 \arctan(\omega T/2)$ .
- **5.7-1** In Ch. 3, we used another approximation to find a digital system to realize an analog system. We showed that an analog system specified by Eq. (3.12) can be realized by using the digital system specified by Eq. (3.13). Compare that solution with the one resulting from the

impulse-invariance method. Show that one result is a close approximation of the other and that the approximation improves as  $T \rightarrow 0$ .

- **5.7-2** A CT system has impulse response  $h_{ct}(t) = e^{-t}u(t)$ . Draw the DFI realization of the corresponding DT system designed by the impulse-invariance method with T = 0.1.
- **5.7-3** (a) Using the impulse-invariance criterion, design a digital filter to realize an analog filter with transfer function

$$H_a(s) = \frac{7s + 20}{2(s^2 + 7s + 10)}$$

- (b) Show a canonical and a parallel realization of the filter. Use a 1% criterion for the choice of *T*.
- **5.7-4** Use the impulse-invariance criterion to design a digital filter to realize the second-order analog Butterworth filter with transfer function

$$H_a(s) = \frac{1}{s^2 + \sqrt{2}s + 1}$$

Use a 1% criterion for the choice of T.

- **5.7-5** Design a digital integrator using the impulse-invariance method. Find and give a rough sketch of the amplitude response, and compare it with that of the ideal integrator. If this integrator is used primarily for integrating audio signals (whose bandwidth is 20 kHz), determine a suitable value for *T*.
- **5.7-6** An oscillator by definition is a source (no input) that generates a sinusoid of a certain frequency  $\omega_0$ . Therefore, an oscillator is a system whose zero-input response is a sinusoid of the desired frequency. Find the transfer function of a digital oscillator to oscillate at 10 kHz by the methods described in parts (a) and (b). In both methods, select *T* so that there are 10 samples in each cycle of the sinusoid.
  - (a) Choose H[z] directly so that its zero-input response is a discrete-time sinusoid of frequency  $\Omega = \omega T$  corresponding to 10 kHz.
  - (b) Choose  $H_a(s)$  whose zero-input response is an analog sinusoid of 10 kHz. Now use the impulse invariance method to determine H[z].
  - (c) Show a canonical realization of the oscillator.

- **5.7-7** A variant of the impulse invariance method is the *step-invariance* method of digital filter synthesis. In this method, for a given  $H_a(s)$ , we design H[z] in Fig. 5.24a such that y(nT) in Fig. 5.24b is identical to y[n] in Fig. 5.24a when x(t) = u(t).
  - (a) Show that, in general,

$$H[z] = \frac{z-1}{z} \mathcal{Z}\left[\left(\mathcal{L}^{-1}\frac{H_a(s)}{s}\right)_{t=kT}\right]$$

(b) Use this method to design H[z] for

$$H_a(s) = \frac{\omega_c}{s + \omega_c}$$

- (c) Use the step-invariance method to synthesize a discrete-time integrator and compare its amplitude response with that of the ideal integrator.
- **5.7-8** Use the *ramp-invariance* method to synthesize a discrete-time differentiator and integrator. In this method, for a given  $H_a(s)$ , we design H[z] such that y(nT) in Fig. 5.24b is identical to y[n] in Fig. 5.24a when x(t) = tu(t).
- **5.7-9** In an impulse-invariance design, show that if  $H_a(s)$  is a transfer function of a stable system, the corresponding H[z] is also a transfer function of a stable system.
- 5.7-10 First-order backward differences provide the transformation rule  $s = (1 z^{-1})/T$ .
  - (a) Show that this transformation maps the  $\omega$  axis in the *s* plane to a circle of radius 1/2 centered at (1/2, 0) in the *z* plane.
  - (b) Show that this transformation maps the left-half *s* plane to the interior of the unit circle in the *z* plane, which ensures that stability is preserved.
- **5.8-1** Find the *z*-transform (if it exists) and the corresponding ROC for each of the following signals:
  - (a)  $(0.8)^n u[n] + 2^n u[-(n+1)]$
  - (b)  $2^n u[n] 3^n u[-(n+1)]$
  - (c)  $(-2)^{n+3}u[-n] + \sum_{k=0}^{\infty} (0.5)^{k-1} \delta(n-2k)$
  - (d)  $(0.8)^n u[n] + (0.9)^n u[-(n+1)]$
  - (e)  $[(0.8)^n + 3(0.4)^n]u[-(n+1)]$
  - (f)  $[(0.8)^n + 3(0.4)^n]u[n]$
  - (g)  $(0.8)^n u[n] + 3(0.4)^n u[-(n+1)]$
  - (h)  $(0.5)^{|n|}$

(i) 
$$nu[-(n+1)]$$

- 5.8-2 Using the definition, compute the bilateral *z*-transform *X*(*z*) of
  (a) *x*[*n*] = 3<sup>*nu*[-*n*]</sup>
  (b) *x*[*n*] = (<sup>1</sup>/<sub>3</sub>)<sup>*nu*[*n*]</sup>
  Express your answers in standard rational form.
- **5.8-3** Determine the inverse *z*-transform x[n] of  $X[z] = \frac{z^2 \frac{1}{3}z}{(z-1)(z+2)}$  with ROC 1 < |z| < 2.
- **5.8-4** Find the inverse *z*-transform of

$$X[z] = \frac{(e^{-2} - 2)z}{(z - e^{-2})(z - 2)}$$

when the ROC is, (a) |z| > 2(b)  $e^{-2} < |z| < 2$ 

c) 
$$|z| < e^{-2}$$

**5.8-5** Use partial fraction expansions, *z*-transform tables, and a region of convergence (|z| < 1/2) to determine the inverse *z*-transform of

$$X(z) = \frac{1}{(2z+1)(z+1)\left(z+\frac{1}{2}\right)}$$

- **5.8-6** Using *z*-transform techniques and properties (no time-domain convolution sum!), determine the convolution  $y[n] = (\frac{1}{3})^{n-3}u[n-2] * (2)^nu[-n]$ . Express your answer in the form  $y[n] = c_1\gamma_1^nu[n+N_1] + c_2\gamma_2^nu[-n+N_2]$ , making sure to clearly identify the constants  $c_1$ ,  $c_2$ ,  $\gamma_1$ ,  $\gamma_2$ ,  $N_1$ , and  $N_2$ .
- **5.8-7** Using partial fraction expansions, *z*-transform tables, and the fact that h[n] is stable, determine the inverse *z*-transform of

$$H[z] = \frac{z^4 + z^3}{(z-2)(z+\frac{1}{2})}.$$

**5.8-8** Consider the system

$$H[z] = \frac{z\left(z - \frac{1}{2}\right)}{\left(z^3 - \frac{27}{8}\right)}$$

- (a) Draw the pole-zero diagram for H[z] and identify all possible regions of convergence.
- (b) Draw the pole-zero diagram for  $H^{-1}[z]$  and identify all possible regions of convergence.
- **5.8-9** A discrete-time signal x[n] has a rational *z*-transform that contains a pole at z = 0.5. Given  $x_1[n] = (1/3)^n x[n]$  is absolutely summable and

Problems 589

 $x_2[n] = (1/4)^n x[n]$  is **not** absolutely summable, determine whether *x*[*n*] is left-sided, right-sided, or two-sided. Justify your answer!

- 5.8-10 Let x[n] be an absolutely summable signal with rational z-transform X[z]. X[z] is known to have a pole at z = (0.75 + 0.75j), and other poles may be present. Recall that an absolutely summable signal satisfies  $\sum_{-\infty}^{\infty} |x[n]| < \infty$ .
  - (a) Can x[n] be left-sided? Explain.
  - (b) Can x[n] be right-sided? Explain.
  - (c) Can x[n] be two-sided? Explain.
  - (d) Can x[n] be of finite duration? Explain.
- 5.8-11 Consider a causal system that has transfer function

$$H[z] = \frac{z - 0.5}{z + 0.5}$$

When appropriate, assume initial conditions of zero.

- (a) Determine the output  $y_1[n]$  of this system in response to  $x_1[n] = (3/4)^n u[n]$ .
- (b) Determine the output  $y_2[n]$  of this system in response to  $x_2[n] = (3/4)^n$ .
- (c) Determine the output  $y_3[n]$  of this system in response to  $x_3[n] = (3/4)^n u[-n-1].$
- **5.8-12** Let  $x[n] = (-1)^n u[n-n_0] + \alpha^n u[-n]$ . Determine the constraints on the complex number  $\alpha$  and the integer  $n_0$  so that the z-transform X[z] exists with region of convergence 1 < |z| < 2.
- Using the definition, compute the bilateral 5.8-13 z-transform, including the region of convergence (ROC), of the following complex-valued functions:
  - (a)  $x_1[n] = (-j)^{-n}u[-n] + \delta[-n]$
  - (b)  $x_2[n] = (j)^n \cos(n+1)u[n]$

  - (c)  $x_3[n] = j \sinh(n)u[-n+1]$ (d)  $x_4[n] = \sum_{k=-\infty}^{0} (2j)^n \delta[n-2k]$
- 5.8-14 Use partial fraction expansions, z-transform tables, and a region of convergence (0.5 < |z| <2) to determine the inverse z-transform of
  - (a)  $X_1[z] = \frac{1}{1 + \frac{13}{6}z^{-1} + \frac{1}{6}z^{-2} \frac{1}{3}z^{-3}}$ (b)  $X_2[z] = \frac{1}{z^{-3}(2-z^{-1})(1+2z^{-1})}$
- 5.8-15 Use partial fraction expansions, z-transform tables, and the fact that the systems are stable to determine the inverse z-transform of

(a) 
$$H_1[z] = \frac{z^{-1}}{(z - \frac{1}{2})(1 + \frac{1}{2}z^{-1})}$$

(b) 
$$H_2[z] = \frac{z+1}{z^3(z-2)(z+\frac{1}{2})}$$

5.8-16 By inserting N-1 zeros between every sample of a unit step, we obtain a signal

$$h[n] = \sum_{k=0}^{\infty} \delta[n - Nk]$$

Determine H[z], the bilateral z-transform of h[n]. Identify the number and location(s) of the poles of H[z].

- 5.8-17 Using transform-domain techniques, determine the zero-state response  $y_{zsr}[n]$  of LTID system  $y[n] - \frac{1}{4}y[n-2] = x[n]$  to the noncausal input  $x[n] = 2^n u[2-n].$
- 5.8-18 Determine the zero-state response of a system having a transfer function

$$H[z] = \frac{z}{(z+0.2)(z-0.8)} \qquad |z| > 0.8$$

and an input x[n] given by

- (a)  $x[n] = e^n u[n]$
- (b)  $x[n] = 2^n u[-(n+1)]$
- (c)  $x[n] = e^n u[n] + 2^n u[-(n+1)]$
- (d)  $x[n] = 2^n u[n] + u[-(n+1)]$
- (e)  $x[n] = e^{-2n}u[-(n+1)]$
- 5.8-19 The discrete cross-correlation between real signal x[n] and real signal y[n] is

$$c_{xy}[n] = \sum_{k=-\infty}^{\infty} x[k]y[k-n]$$

Let signal x[n] have z-transform X[z] with ROC  $R_x$ , and let signal y[n] have z-transform Y[z] with ROC  $R_y$ . Determine  $C_{XY}[z]$  (the bilateral z-transform of  $c_{xy}[n]$  in terms of the *z*-transforms of x[n] and y[n].

5.8-20 Transform properties can be very useful. The accumulation property states

$$\sum_{k=-\infty}^{n} x[k] \longleftrightarrow \frac{z}{z-1} X[z]$$

This property is the DT version of the Laplace transform "integration in time" property. Given  $x[n] \iff X[z]$ , prove the accumulation property. [Hint: Polynomial long division can be helpful.] **5.10-1** Use MATLAB to generate pole-zero plots for the causal systems with the following transfer functions:

(a) 
$$H_a[z] = \frac{z^4 - \sqrt{2z^2 + 1}}{z^4 + 0.4096}$$

(b) 
$$H_{\rm b}[z] = \frac{3z + 4z}{3 + \frac{3}{2}z^{-2} + 2z^{-4}}$$

In each case, determine whether the system is stable.

-3


5.10-2 For each of the following stable LTID systems, use MATLAB to generate magnitude and phase response plots over -π ≤ Ω < π.</li>
(a) H<sub>2</sub>[z] = cos(z)/(2)

(a) 
$$\Pi_{a[2,]} = \frac{1}{z-0.5}$$

(b) 
$$H_{\rm b}[z] = z^3 \sin(z^{-1})$$

- **5.10-3** Consider an LTID system described by the difference equation 4y[n + 2] y[n] = x[n + 2] + x[n].
  - (a) Plot the pole-zero diagram for this system.
  - (b) Plot the system's magnitude response  $|H[e^{i\Omega}]|$  over  $-\pi \le \Omega \le \pi$ .
  - (c) What type of system is this: lowpass, highpass, bandpass, or bandstop?
  - (d) Is this system stable? Justify your answer.
  - (e) Is this system real? Justify your answer.
  - (f) If the system input is of the form  $x[n] = \cos(\Omega n)$ , what is the greatest possible amplitude of the output? Justify your answer.
  - (g) Draw an efficient, causal implementation of this system using only add, scale, and delay blocks.
- **5.10-4** Consider an LTID system with system function  $H(z) = b_0 \frac{z^2+1}{z^2-4/9}$ .
  - (a) Determine the constant  $b_0$  so that the system frequency response at  $\Omega = -\pi$  is -1.
  - (b) Plot the pole-zero diagram for this system.
  - (c) Plot the system's magnitude response  $|H[e^{i\Omega}]|$  over  $-\pi \leq \Omega \leq \pi$ .
  - (d) Plot the system's phase response  $\angle H[e^{j\Omega}]$ over  $-\pi \le \Omega \le \pi$ .
  - (e) What type of system is this: lowpass, highpass, bandpass, or bandstop?
  - (f) Determine the response y[n] to the input  $x[n] = (-1-j) + (-j)^n + (1-j)\cos(\pi n + \frac{1}{3}).$
  - (g) Draw a TDFII block diagram representation of this system.

**5.10-5** Consider the LTID system shown in Fig. P5.10-5, where parameters  $c_1$  and  $c_2$  are arbitrary constants.

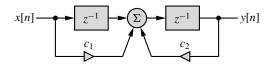

#### Figure P5.10-5

- (a) Determine the system function H[z], expressed in standard rational form.
- (b) What is the order N of this system?
- (c) Determine the *N* poles and *N* zeros of this system. Use MATLAB to create the corresponding pole-zero plot.
- (d) What constraints, if any, exist on parameters  $c_1$  and  $c_2$  to ensure that the system is stable?
- (e) Determine  $c_1$  and  $c_2$  so that this system functions as an LPF with narrow passband. Use MATLAB to generate the corresponding magnitude response  $|H[e^{j\Omega}]|$  over  $-\pi \leq \Omega \leq \pi$ .
- (f) Ms. Zeroine, the heroine of DT systems, believes that if x[n] = 0, then y[n] = 0 also. Is Ms. Zeroine correct? Fully justify your answer.
- (g) Dr. Strange suggests that by setting  $c_1 = -1$ and  $c_2 = -2$ , the system will act as a highpass filter. Is Dr. Strange right? Fully justify your answer.
- **5.10-6** One interesting and useful application of discrete systems is the implementation of complex (rather than real) systems. A complex system is one in which a real-valued input can produce a complex-valued output. Complex systems that are described by constant coefficient difference equations require at least one complex-valued coefficient, and they are capable of operating on complex-valued inputs. Consider the complex discrete-time system

$$H[z] = \frac{z^2 - j}{z - 0.9e^{j3\pi/4}}$$

(a) Determine and plot the system zeros and poles.

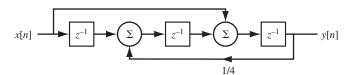


Figure P5.10-9

- (b) Sketch the magnitude response  $|H[e^{i\omega}]|$  of this system over  $-2\pi \le \omega \le 2\pi$ . Comment on the system's behavior.
- 5.10-7 Consider the complex system

$$H[z] = \frac{z^4 - 1}{2(z^2 + 0.81j)}$$

Refer to Prob. 5.10-6 for an introduction to complex systems.

- (a) Plot the pole-zero diagram for H[z].
- (b) Plot the system's magnitude response  $|H[e^{i\Omega}]|$  over  $-\pi \le \Omega \le \pi$ .
- (c) Explain why H[z] is a noncausal system. Do not give a general definition of causality; specifically identify what makes this system noncausal.
- (d) One way to make this system causal is to add two poles to *H*[*z*]. That is,

$$H_{\text{causal}}[z] = H[z] \frac{1}{(z-a)(z-b)}$$

Find poles *a* and *b* such that  $|H_{\text{causal}}[e^{j\Omega}]| = |H[e^{j\Omega}]|$ .

- (e) Draw an efficient block implementation of *H*<sub>causal</sub>[z].
- **5.10-8** A discrete-time LTI system is shown in Fig. P5.10-8.
  - (a) Determine the difference equation that describes this system.
  - (b) Determine the magnitude response |*H*[e<sup>jΩ</sup>]| for this system and simplify your answer. Plot the magnitude response over -π ≤ Ω ≤ π. What type of standard filter (lowpass, highpass, bandpass, or bandstop) best describes this system?
  - (c) Determine the impulse response h[n] of this system.

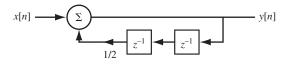


Figure P5.10-8

- **5.10-9** Determine the impulse response h[n] for the system shown in Fig. P5.10-9. Is the system stable? Is the system causal?
- **5.10-10** An LTID filter has an impulse response function given by  $h[n] = \delta[n-1] + \delta[n+1]$ . Determine and carefully sketch the magnitude response  $|H[e^{i\Omega}]|$  over the range  $-\pi \leq \Omega \leq \pi$ . For this range of frequencies, is this filter lowpass, highpass, bandpass, or bandstop?
- **5.10-11** A causal, stable discrete system has the rather strange transfer function  $H[z] = \cos(z^{-1})$ .
  - (a) Write MATLAB code that will compute and plot the magnitude response of this system over an appropriate range of digital frequencies Ω. Comment on the system.
  - (b) Determine the impulse response h[n]. Plot h[n] over (0 ≤ n ≤ 10).
  - (c) Determine a difference equation description for an FIR filter that closely approximates the system  $H[z] = \cos(z^{-1})$ . To verify proper behavior, plot the FIR filter's magnitude response and compare it with the magnitude response computed in part (a).
- **5.10-12** The MATLAB signal-processing toolbox function butter helps design digital Butterworth filters. Use MATLAB help to learn how butter works. For each of the following cases, design the filter, plot the filter's poles and zeros in the complex z plane, and plot the decibel magnitude response  $20 \log_{10} |H[e^{j\Omega}]|$ .
  - (a) Design an eighth-order digital lowpass filter with  $\Omega_c = \pi/3$ .
  - (b) Design an eighth-order digital highpass filter with  $\Omega_c = \pi/3$ .
  - (c) Design an eighth-order digital bandpass filter with passband between  $5\pi/24$  and  $11\pi/24$ .
  - (d) Design an eighth-order digital bandstop filter with stopband between  $5\pi/24$  and  $11\pi/24$ .
- 5.10-13 The MATLAB signal-processing toolbox function cheby1 helps design digital Chebyshev

type I filters. A Chebyshev type I filter has passband ripple and smooth stopband. Setting the passband ripple to  $R_p = 3$  dB, repeat Prob. 5.10-12 using the cheby1 command. With all other parameters held constant, what is the general effect of reducing  $R_p$ , the allowable passband ripple?

**5.10-14** The MATLAB signal-processing toolbox function cheby2 helps design digital Chebyshev type II filters. A Chebyshev type II filter has smooth passband and ripple in the stopband. Setting the stopband ripple  $R_s = 20 \text{ dB}$ 

down, repeat Prob. 5.10-12 using the cheby2 command. With all other parameters held constant, what is the general effect of increasing  $R_s$ , the minimum stopband attenuation?

**5.10-15** The MATLAB signal-processing toolbox function ellip helps design digital elliptic filters. An elliptic filter has ripple in both the passband and the stopband. Setting the passband ripple to  $R_p = 3$  dB and the stopband ripple  $R_s = 20$  dB down, repeat Prob. 5.10-12 using the ellip command.



## CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

Electrical engineers instinctively think of signals in terms of their frequency spectra and think of systems in terms of their frequency response. Most teenagers know about the audible portion of audio signals having a bandwidth of about 20 kHz and the need for good-quality speakers to respond up to 20 kHz. This is basically thinking in the frequency domain. In Chs. 4 and 5 we discussed extensively the frequency-domain representation of systems and their spectral response (system response to signals of various frequencies). In Chs. 6 through 9, we discuss spectral representation of signals, where signals are expressed as a sum of sinusoids or exponentials. Actually, we touched on this topic in Chs. 4 and 5. Recall that the Laplace transform of a continuous-time signal is its spectral representation in terms of exponentials (or sinusoids) of complex frequencies. Similarly the *z*-transform of a discrete-time signal is its spectral representation in terms of discrete-time exponentials. However, in the earlier chapters we were concerned mainly with system representation; the spectral representation of signals was incidental to the system analysis. Spectral analysis of signals is an important topic in its own right, and now we turn to this subject.


In this chapter we show that a periodic signal can be represented as a sum of sinusoids (or exponentials) of various frequencies. These results are extended to aperiodic signals in Ch. 7 and to discrete-time signals in Ch. 9. The fascinating subject of sampling of continuous-time signals is discussed in Ch. 8, leading to A/D (analog-to-digital) and D/A conversion. Chapter 8 forms the bridge between the continuous-time and the discrete-time worlds.

## 6.1 PERIODIC SIGNAL REPRESENTATION BY TRIGONOMETRIC FOURIER SERIES

As seen in Sec. 1.3-3 [Eq. (1.7)], a periodic signal x(t) with period  $T_0$  (Fig. 6.1) has the property

$$x(t) = x(t+T_0)$$
 for all  $t$ 

The *smallest* value of  $T_0$  that satisfies this periodicity condition is the *fundamental period* of x(t). As argued in Sec. 1.3-3, this equation implies that x(t) starts at  $-\infty$  and continues to  $\infty$ . Moreover, the area under a periodic signal x(t) over any interval of duration  $T_0$  is the same; that is, for any

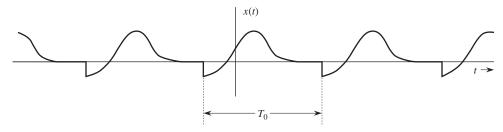

**Figure 6.1** A periodic signal of period  $T_0$ .

real numbers a and b

$$\int_{a}^{a+T_{0}} x(t) \, dt = \int_{b}^{b+T_{0}} x(t) \, dt$$

This result follows from the fact that a periodic signal takes the same values at intervals of  $T_0$ . Hence, the values over any segment of duration  $T_0$  are repeated in any other interval of the same duration. For convenience, the area under x(t) over any interval of duration  $T_0$  will be denoted by

$$\int_{T_0} x(t) \, dt$$

The frequency of a sinusoid  $\cos 2\pi f_0 t$  or  $\sin 2\pi f_0 t$  is  $f_0$ , and the period is  $T_0 = 1/f_0$ . These sinusoids can also be expressed as  $\cos \omega_0 t$  or  $\sin \omega_0 t$ , where  $\omega_0 = 2\pi f_0$  is the *radian frequency*, although for brevity, it is often referred to as frequency (see Sec. B.2). A sinusoid of frequency  $nf_0$  is said to be the *nth harmonic* of the sinusoid of frequency  $f_0$ .

Let us consider a signal x(t) made up of a sines and cosines of frequency  $\omega_0$  and all of its harmonics (including the zeroth harmonic; i.e., dc) with arbitrary amplitudes<sup>†</sup>:

$$x(t) = a_0 + \sum_{n=1}^{\infty} a_n \cos n\omega_0 t + b_n \sin n\omega_0 t$$
 (6.1)

The frequency  $\omega_0$  is called the *fundamental frequency*.

We now prove an extremely important property: x(t) in Eq. (6.1) is a periodic signal with the same period as that of the fundamental, regardless of the values of the amplitudes  $a_n$  and  $b_n$ . Note that the period  $T_0$  of the fundamental satisfies

$$T_0 = \frac{1}{f_0} = \frac{2\pi}{\omega_0}$$
 and  $\omega_0 T_0 = 2\pi$  (6.2)

<sup>&</sup>lt;sup>†</sup> In Eq. (6.1), the constant term  $a_0$  corresponds to the cosine term for n = 0 because  $\cos(0 \times \omega_0)t = 1$ . However,  $\sin(0 \times \omega_0)t = 0$ . Hence, the sine term for n = 0 is nonexistent.

To prove the periodicity of x(t), all we need is to show that  $x(t) = x(t + T_0)$ . From Eq. (6.1),

$$x(t+T_0) = a_0 + \sum_{n=1}^{\infty} a_n \cos n\omega_0 (t+T_0) + b_n \sin n\omega_0 (t+T_0)$$
  
=  $a_0 + \sum_{n=1}^{\infty} a_n \cos(n\omega_0 t + n\omega_0 T_0) + b_n \sin(n\omega_0 t + n\omega_0 T_0)$ 

From Eq. (6.2), we have  $n\omega_0 T_0 = 2\pi n$ , and

$$x(t+T_0) = a_0 + \sum_{n=1}^{\infty} a_n \cos(n\omega_0 t + 2\pi n) + b_n \sin(n\omega_0 t + 2\pi n)$$
  
=  $a_0 + \sum_{n=1}^{\infty} a_n \cos n\omega_0 t + b_n \sin n\omega_0 t = x(t)$ 

We could also infer this result intuitively. In one fundamental period  $T_0$ , the *n*th harmonic executes *n* complete cycles. Hence, every sinusoid on the right-hand side of Eq. (6.1) executes a complete number of cycles in one fundamental period  $T_0$ . Therefore, at  $t = T_0$ , every sinusoid starts as if it were the origin and repeats the same drama over the next  $T_0$  seconds, and so on, ad infinitum. Hence, the sum of such harmonics results in a periodic signal of period  $T_0$ .

This result shows that any combination of sinusoids of frequencies 0,  $f_0$ ,  $2f_0$ , ...,  $kf_0$  is a periodic signal of period  $T_0 = 1/f_0$  regardless of the values of amplitudes  $a_k$  and  $b_k$  of these sinusoids. By changing the values of  $a_k$  and  $b_k$  in Eq. (6.1), we can construct a variety of periodic signals, all of the same period  $T_0 (T_0 = 1/f_0 = 2\pi/\omega_0)$ .

The converse of this result is also true. We shall show in Sec. 6.5-4 that a periodic signal x(t) with a period  $T_0$  can be expressed as a sum of a sinusoid of frequency  $f_0$  ( $f_0 = 1/T_0$ ) and all its harmonics, as shown in Eq. (6.1).<sup>†</sup> The infinite series on the right-hand side of Eq. (6.1) is known as the trigonometric Fourier series of a periodic signal x(t).

#### COMPUTING THE COEFFICIENTS OF A FOURIER SERIES

To determine the coefficients of a Fourier series, consider an integral I defined by

$$I = \int_{T_0} \cos n\omega_0 t \cos m\omega_0 t \, dt$$

where  $\int_{T_0}$  stands for integration over any contiguous interval of  $T_0$  seconds. By using a trigonometric identity (see Sec. B.8-6), this integral can be expressed as

$$I = \frac{1}{2} \left[ \int_{T_0} \cos(n+m)\omega_0 t \, dt + \int_{T_0} \cos(n-m)\omega_0 t \, dt \right]$$
(6.3)

<sup>&</sup>lt;sup>†</sup> Strictly speaking, this statement applies only if a periodic signal x(t) is a continuous function of t. However, Sec. 6.5-4 shows that it can be applied even for discontinuous signals, if we interpret the equality in Eq. (6.1) in the mean-square sense instead of in the ordinary sense. This means that the power of the difference between the periodic signal x(t) and its Fourier series on the right-hand side of Eq. (6.1) approaches zero as the number of terms in the series approaches infinity.

#### 596 CHAPTER 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

Because  $\cos \omega_0 t$  executes one complete cycle during any interval of duration  $T_0$ ,  $\cos (n + m)\omega_0 t$  executes (n + m) complete cycles during any interval of duration  $T_0$ . Therefore, the first integral in Eq. (6.3), which represents the area under n + m complete cycles of a sinusoid, equals zero. The same argument shows that the second integral in Eq. (6.3) is also zero, except when n = m. Hence, I in Eq. (6.3) is zero for all  $n \neq m$ . When n = m, the first integral in Eq. (6.3) is still zero, but the second integral yields

$$I = \frac{1}{2} \int_{T_0} dt = \frac{T_0}{2}$$

Thus,

$$\int_{T_0} \cos n\omega_0 t \cos m\omega_0 t \, dt = \begin{cases} 0 & n \neq m \\ \frac{T_0}{2} & m = n \neq 0 \end{cases}$$
(6.4)

Using similar arguments, we can show that

$$\int_{T_0} \sin n\omega_0 t \sin m\omega_0 t \, dt = \begin{cases} 0 & n \neq m \\ \frac{T_0}{2} & n = m \neq 0 \end{cases}$$
(6.5)

and

$$\int_{T_0} \sin n\omega_0 t \cos m\omega_0 t \, dt = 0 \qquad \text{for all } n \text{ and } m \tag{6.6}$$

To determine  $a_0$  in Eq. (6.1), we integrate both sides of Eq. (6.1) over one period  $T_0$  to yield

$$\int_{T_0} x(t) dt = a_0 \int_{T_0} dt + \sum_{n=1}^{\infty} \left[ a_n \int_{T_0} \cos n\omega_0 t \, dt + b_n \int_{T_0} \sin n\omega_0 t \, dt \right]$$

Recall that  $T_0$  is the period of a sinusoid of frequency  $\omega_0$ . Therefore, functions  $\cos n\omega_0 t$  and  $\sin n\omega_0 t$  execute *n* complete cycles over any interval of  $T_0$  seconds so that the area under these functions over an interval  $T_0$  is zero, and the last two integrals on the right-hand side of the foregoing equation are zero. This yields

$$\int_{T_0} x(t) dt = a_0 \int_{T_0} dt = a_0 T_0 \quad \text{and} \quad a_0 = \frac{1}{T_0} \int_{T_0} x(t) dt$$

Next we multiply both sides of Eq. (6.1) by  $\cos m\omega_0 t$  and integrate the resulting equation over an interval  $T_0$ :

$$\int_{T_0} x(t) \cos m\omega_0 t \, dt = a_0 \int_{T_0} \cos m\omega_0 t \, dt + \sum_{n=1}^{\infty} \left[ a_n \int_{T_0} \cos n\omega_0 t \cos m\omega_0 t \, dt + b_n \int_{T_0} \sin n\omega_0 t \cos m\omega_0 t \, dt \right]$$

The first integral on the right-hand side is zero because it is an area under *m* integral number of cycles of a sinusoid. Also, the last integral on the right-hand side vanishes because of Eq. (6.6). This leaves only the middle integral, which is also zero for all  $n \neq m$  because of Eq. (6.4). But

*n* takes on all values from 1 to  $\infty$ , including *m*. When n = m, this integral is  $T_0/2$ , according to Eq. (6.4). Therefore, from the infinite number of terms on the right-hand side, only one term survives to yield  $a_n T_0/2 = a_m T_0/2$  (recall that n = m). Therefore,

$$\int_{T_0} x(t) \cos m\omega_0 t \, dt = \frac{a_m T_0}{2} \qquad \text{and} \qquad a_m = \frac{2}{T_0} \int_{T_0} x(t) \cos m\omega_0 t \, dt$$

Similarly, by multiplying both sides of Eq. (6.1) by  $\sin n\omega_0 t$  and then integrating over an interval  $T_0$ , we obtain

$$b_m = \frac{2}{T_0} \int_{T_0} x(t) \sin m\omega_0 t \, dt$$

To sum up our discussion, which applies to real or complex x(t), we have shown that a periodic signal x(t) with period  $T_0$  can be expressed as a sum of a sinusoid of period  $T_0$  and its harmonics:

$$x(t) = a_0 + \sum_{n=1}^{\infty} a_n \cos n\omega_0 t + b_n \sin n\omega_0 t$$
(6.7)

where  $\omega_0 = 2\pi f_0 = \frac{2\pi}{T_0}$  and

$$a_0 = \frac{1}{T_0} \int_{T_0} x(t) dt, \quad a_n = \frac{2}{T_0} \int_{T_0} x(t) \cos n\omega_0 t dt, \quad \text{and} \quad b_n = \frac{2}{T_0} \int_{T_0} x(t) \sin n\omega_0 t dt$$
(6.8)

### COMPACT FORM OF FOURIER SERIES

The results derived so far are general and apply whether x(t) is a real or a complex function of t. However, when x(t) is real, coefficients  $a_n$  and  $b_n$  are real for all n, and the trigonometric Fourier series can be expressed in a *compact form*, using the results in Eq. (B.16):

$$x(t) = C_0 + \sum_{n=1}^{\infty} C_n \cos\left(n\omega_0 t + \theta_n\right)$$
(6.9)

where  $C_n$  and  $\theta_n$  are related to  $a_n$  and  $b_n$ , as [see Eq. (B.17)]

$$C_0 = a_0, \quad C_n = \sqrt{a_n^2 + b_n^2}, \quad \text{and} \quad \theta_n = \tan^{-1}\left(\frac{-b_n}{a_n}\right)$$
 (6.10)

These results are summarized in Table 6.1.

The compact form in Eq. (6.9) uses the cosine form. We could just as well have used the sine form, with terms  $\sin(n\omega_0 t + \theta_n)$  instead of  $\cos(n\omega_0 t + \theta_n)$ . The literature overwhelmingly favors the cosine form, for no apparent reason except possibly that the cosine phasor is represented by the horizontal axis, which happens to be the reference axis in phasor representation.

Equation (6.8) shows that  $a_0$  (or  $C_0$ ) is the average value of x(t) (averaged over one period). This value can often be determined by inspection of x(t).

Because  $a_n$  and  $b_n$  are real,  $C_n$  and  $\theta_n$  are also real. In the following discussion of trigonometric Fourier series, we shall assume real x(t), unless mentioned otherwise.

Coefficient Computation	<b>Conversion Formulas</b> $a_0 = C_0 = D_0$		
$a_0 = \frac{1}{T_0} \int_{T_0} f(t) dt$			
$a_n = \frac{2}{T_0} \int_{T_0} f(t) \cos n\omega_0 t  dt$	$a_n - jb_n = C_n e^{j\theta_n} = 2D_n$		
$b_n = \frac{2}{T_0} \int_{T_0} f(t) \sin n\omega_0 t  dt$	$a_n + jb_n = C_n e^{-j\theta_n} = 2D_{-n}$		
$C_0 = a_0$	$C_0 = D_0$		
$C_n = \sqrt{{a_n}^2 + {b_n}^2}$	$C_n = 2 D_n  \qquad n \ge 1$		
$\theta_n = \tan^{-1}\left(\frac{-b_n}{a_n}\right)$	$\theta_n = \angle D_n$		
$D_n = \frac{1}{T_0} \int_{T_0} f(t) e^{-jn\omega_0 t} dt$			
	$a_n = \frac{2}{T_0} \int_{T_0}^{T_0} f(t) \cos n\omega_0 t  dt$ $b_n = \frac{2}{T_0} \int_{T_0}^{T_0} f(t) \sin n\omega_0 t  dt$ $C_0 = a_0$ $C_n = \sqrt{a_n^2 + b_n^2}$ $\theta_n = \tan^{-1} \left(\frac{-b_n}{a_n}\right)$		

**TABLE 6.1** Fourier Series Representation of a Periodic Signal of Period  $T_0$  ( $\omega_0 = 2\pi/T_0$ )

#### 6.1-1 The Fourier Spectrum

The compact trigonometric Fourier series in Eq. (6.9) indicates that a periodic signal x(t) can be expressed as a sum of sinusoids of frequencies 0 (dc),  $\omega_0, 2\omega_0, \ldots, n\omega_0, \ldots$ , whose amplitudes are  $C_0, C_1, C_2, \ldots, C_n, \ldots$ , and whose phases are  $0, \theta_1, \theta_2, \ldots, \theta_n, \ldots$ , respectively. We can readily plot amplitude  $C_n$  versus *n* (the amplitude spectrum) and  $\theta_n$  versus *n* (the phase spectrum).<sup>†</sup> Because *n* is proportional to the frequency  $n\omega_0$ , these plots are scaled plots of  $C_n$  versus  $\omega$  and  $\theta_n$  versus  $\omega$ . The two plots together are the frequency spectra of x(t). These spectra show at a glance the frequency contents of the signal x(t) with their amplitudes and phases. Knowing these spectra, we can reconstruct or synthesize the signal x(t) according to Eq. (6.9). Therefore, frequency spectra, which are an alternative way of describing a periodic signal x(t), are in every way equivalent to the plot of x(t) as a function of t. The frequency spectra of a signal constitute the frequency-domain description of x(t), in contrast to the time-domain description, where x(t) is specified as a function of time.

In computing  $\theta_n$ , the phase of the *n*th harmonic from Eq. (6.10), the quadrant in which  $\theta_n$  lies should be determined from the signs of  $a_n$  and  $b_n$ . For example, if  $a_n = -1$  and  $b_n = 1$ ,  $\theta_n$  lies in the third quadrant, and

$$\theta_n = \tan^{-1}\left(\frac{-1}{-1}\right) = -135^{\circ}$$

Observe that

$$\tan^{-1}\left(\frac{-1}{-1}\right) \neq \tan^{-1}(1) = 45^{\circ}$$

<sup>&</sup>lt;sup>†</sup> The amplitude  $C_n$ , by definition here, is nonnegative. Some authors define amplitude  $A_n$  that can take positive or negative values and magnitude  $C_n = |A_n|$  that can only be nonnegative. Thus, what we call amplitude spectrum becomes magnitude spectrum. The distinction between amplitude and magnitude, although useful, is avoided in this book in the interest of keeping definitions of essentially similar entities to a minimum.

Although  $C_n$ , the amplitude of the *n*th harmonic as defined in Eq. (6.10), is positive, we shall find it convenient to allow  $C_n$  to take on negative values when  $b_n = 0$ . This will become clear in later examples.

## **EXAMPLE 6.1** Compact Trigonometric Fourier Series of Periodic Exponential Wave

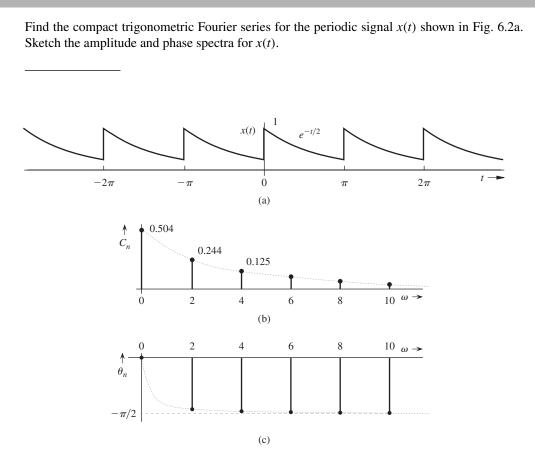


Figure 6.2 (a) A periodic signal and (b, c) its Fourier spectra.

In this case the period  $T_0 = \pi$  and the fundamental frequency  $f_0 = 1/T_0 = 1/\pi$  Hz, and

$$\omega_0 = \frac{2\pi}{T_0} = 2 \, \text{rad/s}$$

Therefore,

$$x(t) = a_0 + \sum_{n=1}^{\infty} a_n \cos 2nt + b_n \sin 2nt$$

where

$$a_0 = \frac{1}{\pi} \int_{T_0} x(t) \, dt$$

In this example the obvious choice for the interval of integration is from 0 to  $\pi$ . Hence,

$$a_0 = \frac{1}{\pi} \int_0^{\pi} e^{-t/2} dt = 0.504$$
$$a_n = \frac{2}{\pi} \int_0^{\pi} e^{-t/2} \cos 2nt \, dt = 0.504 \left(\frac{2}{1+16n^2}\right)$$

and

$$b_n = \frac{2}{\pi} \int_0^{\pi} e^{-t/2} \sin 2nt \, dt = 0.504 \left(\frac{8n}{1+16n^2}\right)$$

Therefore,

$$x(t) = 0.504 \left[ 1 + \sum_{n=1}^{\infty} \frac{2}{1 + 16n^2} (\cos 2nt + 4n \sin 2nt) \right]$$

Also from Eq. (6.10),

$$C_0 = a_0 = 0.504$$

$$C_n = \sqrt{a_n^2 + b_n^2} = 0.504 \sqrt{\frac{4}{(1 + 16n^2)^2} + \frac{64n^2}{(1 + 16n^2)^2}} = 0.504 \left(\frac{2}{\sqrt{1 + 16n^2}}\right)$$

$$\theta_n = \tan^{-1}\left(\frac{-b_n}{a_n}\right) = \tan^{-1}(-4n) = -\tan^{-1}4n$$

Amplitude and phases of the dc and the first seven harmonics are computed from the above equations as


n	0	1	2	3	4	5	6	7
$C_n$	0.504	0.244	0.125	0.084	0.063	0.0504	0.042	0.036
$\theta_n$	0°	-75.96°	-82.87°	-85.24°	-86.42°	-87.14°	-87.61°	-87.95°

We can use these numerical values to express x(t) as

$$x(t) = 0.504 + 0.504 \sum_{n=1}^{\infty} \frac{2}{\sqrt{1+16n^2}} \cos(2nt - \tan^{-1}4n)$$
  
= 0.504 + 0.244 cos (2t - 75.96°) + 0.125 cos (4t - 82.87°)  
+ 0.084 cos (6t - 85.24°) + 0.063 cos (8t - 86.42°) + · · · (6.11)

#### PLOTTING FOURIER SERIES SPECTRA USING MATLAB

MATLAB is well suited to compute and plot Fourier series spectra. The results in Fig. 6.3, which plot  $C_n$  and  $\theta_n$  as functions of n, match Figs. 6.2b and 6.2c, which plot  $C_n$  and  $\theta_n$  as functions of  $\omega = n\omega_0 = 2n$ . Plots of  $a_n$  and  $b_n$  are similarly simple to generate.

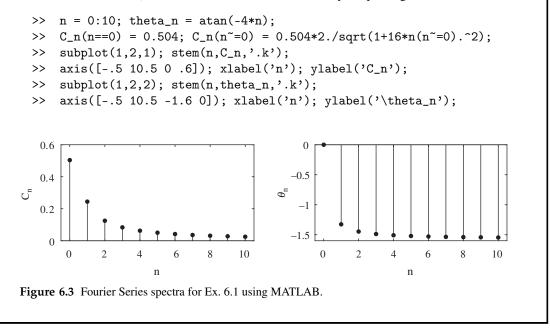

The amplitude and phase spectra for x(t), in Figs. 6.2b and 6.2c, tell us at a glance the frequency composition of x(t), that is, the amplitudes and phases of various sinusoidal components of x(t). Knowing the frequency spectra, we can reconstruct x(t), as shown on the right-hand side of Eq. (6.11). Therefore the frequency spectra (Figs. 6.2b, 6.2c) provide an alternative description—the frequency-domain description of x(t). The time-domain description of x(t) is shown in Fig. 6.2a. A signal, therefore, has a dual identity: the time-domain identity x(t) and the frequency-domain identity (Fourier spectra). The two identities complement each other; taken together, they provide a better understanding of a signal.

An interesting aspect of Fourier series is that whenever there is a jump discontinuity in x(t), the series at the point of discontinuity converges to an average of the left-hand and right-hand limits of x(t) at the instant of discontinuity.<sup>†</sup> In the present example, for instance, x(t) is discontinuous at t = 0 with  $x(0^+) = 1$  and  $x(0^-) = x(\pi) = e^{-\pi/2} = 0.208$ . The corresponding Fourier series converges to a value (1 + 0.208)/2 = 0.604 at t = 0. This is easily verified from Eq. (6.11) by setting t = 0.

<sup>&</sup>lt;sup>†</sup>This behavior of the Fourier series is dictated by its convergence in the mean, discussed later in Secs. 6.2 and 6.5.

#### 602 CHAPTER 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

## **EXAMPLE 6.2** Compact Trigonometric Fourier Series of a Periodic Triangle Wave

Find the compact trigonometric Fourier series for the triangular periodic signal x(t) shown in Fig. 6.4a, and sketch the amplitude and phase spectra for x(t).

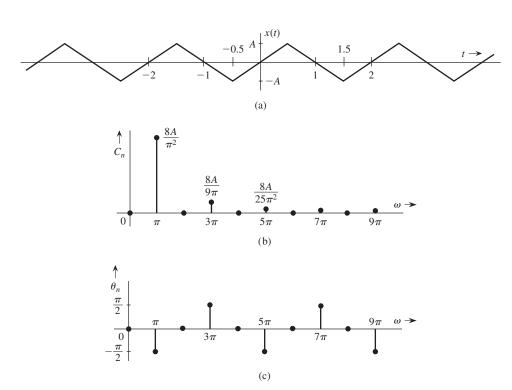


Figure 6.4 (a) A triangular periodic signal and (b, c) its Fourier spectra.

In this case the period  $T_0 = 2$ . Hence,

$$\omega_0 = \frac{2\pi}{2} = \pi$$

and

$$x(t) = a_0 + \sum_{n=1}^{\infty} a_n \cos n\pi t + b_n \sin n\pi t$$

where

$$x(t) = \begin{cases} 2At & |t| < \frac{1}{2} \\ 2A(1-t) & \frac{1}{2} < t < \frac{3}{2} \end{cases}$$

Here it will be advantageous to choose the interval of integration from -1/2 to 3/2 rather than 0 to 2.

A glance at Fig. 6.4a shows that the average value (dc) of x(t) is zero so that  $a_0 = 0$ . Also,

$$a_n = \frac{2}{2} \int_{-1/2}^{3/2} x(t) \cos n\pi t \, dt$$
  
=  $\int_{-1/2}^{1/2} 2At \cos n\pi t \, dt + \int_{1/2}^{3/2} 2A(1-t) \cos n\pi t \, dt$ 

Detailed evaluation of these integrals shows that both have a value of zero. Therefore  $a_n = 0$ . Next,

$$b_n = \int_{-1/2}^{1/2} 2At \sin n\pi t \, dt + \int_{1/2}^{3/2} 2A(1-t) \sin n\pi t \, dt$$

Detailed evaluation of these integrals yields, in turn,

$$b_n = \frac{8A}{n^2 \pi^2} \sin\left(\frac{n\pi}{2}\right) = \begin{cases} 0 & n \text{ even} \\ \frac{8A}{n^2 \pi^2} & n = 1, 5, 9, 13, \dots \\ -\frac{8A}{n^2 \pi^2} & n = 3, 7, 11, 15, \dots \end{cases}$$

Therefore,

$$x(t) = \frac{8A}{\pi^2} \left[ \sin \pi t - \frac{1}{9} \sin 3\pi t + \frac{1}{25} \sin 5\pi t - \frac{1}{49} \sin 7\pi t + \cdots \right]$$
(6.12)

To plot Fourier spectra, the series must be converted into compact trigonometric form as in Eq. (6.9). In this case this is readily done by converting sine terms into cosine terms with a suitable phase shift. For example,

$$\sin kt = \cos (kt - 90^\circ)$$
 and  $-\sin kt = \cos (kt + 90^\circ)$ 

By using these identities, Eq. (6.12) can be expressed as

$$x(t) = \frac{8A}{\pi^2} \left[ \cos\left(\pi t - 90^\circ\right) + \frac{1}{9}\cos\left(3\pi t + 90^\circ\right) + \frac{1}{25}\cos\left(5\pi t - 90^\circ\right) + \frac{1}{49}\cos\left(7\pi t + 90^\circ\right) + \cdots \right]$$

In this series all the even harmonics are missing. The phases of the odd harmonics alternate from  $-90^{\circ}$  to  $90^{\circ}$ . Figure 6.4 shows amplitude and phase spectra for x(t).

## **EXAMPLE 6.3** Converting a Trigonometric FS to a Compact Trigonometric FS

A periodic signal x(t) is represented by a trigonometric Fourier series

$$x(t) = 2 + 3\cos 2t + 4\sin 2t + 2\sin (3t + 30^\circ) - \cos (7t + 150^\circ)$$

Express this series as a compact trigonometric Fourier series, and sketch amplitude and phase spectra for x(t).

In compact trigonometric Fourier series, the sine and cosine terms of the same frequency are combined into a single term and all terms are expressed as cosine terms with positive amplitudes. Using Eqs. (6.9) and (6.10), we have

$$3\cos 2t + 4\sin 2t = 5\cos(2t - 53.13^{\circ})$$

Also,

$$\sin(3t+30^\circ) = \cos(3t+30^\circ-90^\circ) = \cos(3t-60^\circ)$$

and

$$-\cos(7t + 150^\circ) = \cos(7t + 150^\circ - 180^\circ) = \cos(7t - 30^\circ)$$

Therefore,

$$x(t) = 2 + 5\cos(2t - 53.13^\circ) + 2\cos(3t - 60^\circ) + \cos(7t - 30^\circ)$$

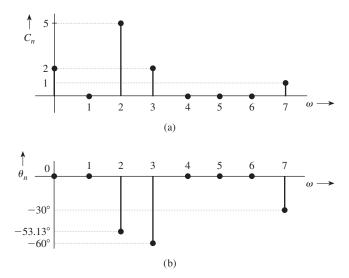


Figure 6.5 Fourier spectra of the signal.

In this case only four components (including dc) are present. The amplitude of dc is 2. The remaining three components are of frequencies  $\omega = 2$ , 3, and 7 with amplitudes 5, 2, and 1 and phases  $-53.13^{\circ}$ ,  $-60^{\circ}$ , and  $-30^{\circ}$ , respectively. The amplitude and phase spectra for this signal are shown in Figs. 6.5a and 6.5b, respectively.

# **EXAMPLE 6.4 Compact Trigonometric Fourier Series of a Periodic Square Wave**

Find the compact trigonometric Fourier series for the square-pulse periodic signal shown in Fig. 6.6a and sketch its Fourier spectrum.

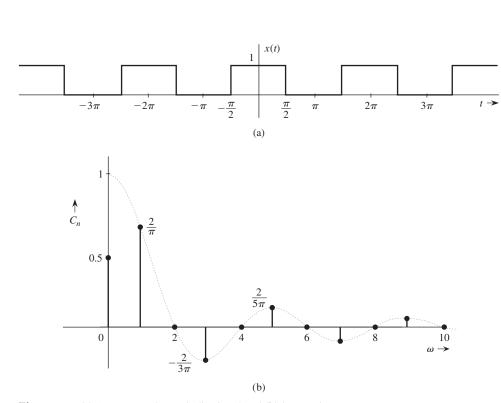


Figure 6.6 (a) A square pulse periodic signal and (b) its Fourier spectrum.

Here the period is  $T_0 = 2\pi$  and  $\omega_0 = 2\pi/T_0 = 1$ . Therefore,

$$x(t) = a_0 + \sum_{n=1}^{\infty} a_n \cos nt + b_n \sin nt$$

where

$$a_0 = \frac{1}{T_0} \int_{T_0} x(t) \, dt$$

From Fig. 6.6a, it is clear that a proper choice of region of integration is from  $-\pi$  to  $\pi$ . But since x(t) = 1 only over  $(-\pi/2, \pi/2)$ , and x(t) = 0 over the remaining segment,

$$a_0 = \frac{1}{2\pi} \int_{-\pi/2}^{\pi/2} dt = \frac{1}{2}$$

We could have found  $a_0$ , the average value of x(t), to be 1/2 merely by inspection of x(t) in Fig. 6.6a. Also,

$$a_n = \frac{1}{\pi} \int_{-\pi/2}^{\pi/2} \cos nt \, dt = \frac{2}{n\pi} \sin\left(\frac{n\pi}{2}\right)$$
$$= \begin{cases} 0 & n \text{ even} \\ \frac{2}{\pi n} & n = 1, 5, 9, 13, \dots \\ -\frac{2}{\pi n} & n = 3, 7, 11, 15, \dots \end{cases}$$
$$b_n = \frac{1}{\pi} \int_{-\pi/2}^{\pi/2} \sin nt \, dt = 0$$

Therefore

$$x(t) = \frac{1}{2} + \frac{2}{\pi} \left( \cos t - \frac{1}{3} \cos 3t + \frac{1}{5} \cos 5t - \frac{1}{7} \cos 7t + \cdots \right)$$
(6.13)

Observe that  $b_n = 0$  and all the sine terms are zero. Only the cosine terms appear in the trigonometric series. The series is therefore already in the compact form except that the amplitudes of alternating harmonics are negative. Now by definition, amplitudes  $C_n$  are positive [see Eq. (6.10)]. The negative sign can be accommodated by associating a proper phase, as seen from the trigonometric identity<sup>†</sup>

 $-\cos x = \cos (x - \pi)$ 

Using this fact, we can express the series in Eq. (6.13) as

$$x(t) = \frac{1}{2} + \frac{2}{\pi} \left[ \cos \omega_0 t + \frac{1}{3} \cos (3\omega_0 t - \pi) + \frac{1}{5} \cos 5\omega_0 t + \frac{1}{7} \cos (7\omega_0 t - \pi) + \frac{1}{9} \cos 9\omega_0 t + \cdots \right]$$

<sup>&</sup>lt;sup>†</sup> Because  $\cos(x \pm \pi) = -\cos x$ , we could have chosen the phase  $\pi$  or  $-\pi$ . In fact,  $\cos(x \pm N\pi) = -\cos x$  for any odd integral value of *N*. Therefore the phase can be chosen as  $\pm N\pi$ , where *N* is any convenient odd integer.

This is the desired form of the compact trigonometric Fourier series. The amplitudes are

$$C_0 = \frac{1}{2}$$
 and  $C_n = \begin{cases} 0 & n \text{ even} \\ \frac{2}{\pi n} & n \text{ odd} \end{cases}$ 

The phases are

$$\theta_n = \begin{cases} 0 & \text{for all } n \neq 3, 7, 11, 15, \dots \\ -\pi & n = 3, 7, 11, 15, \dots \end{cases}$$

We might use these values to plot amplitude and phase spectra. However, we can simplify our task in this special case if we allow amplitude  $C_n$  to take on negative values. If this is allowed, we do not need a phase of  $-\pi$  to account for the sign as seen from Eq. (6.13). This means that phases of all components are zero, and we can discard the phase spectrum and manage with only the amplitude spectrum, as shown in Fig. 6.6b. Observe that there is no loss of information in doing so and that the amplitude spectrum in Fig. 6.6b has the complete information about the Fourier series in Eq. (6.13). Therefore, whenever all sine terms vanish ( $b_n = 0$ ), it is convenient to allow  $C_n$  to take on negative values. This permits the spectral information to be conveyed by a single spectrum.<sup>†</sup>

Let us investigate the behavior of the series at the points of discontinuities. For the discontinuity at  $t = \pi/2$ , the values of x(t) on either sides of the discontinuity are  $x((\pi/2)^-) = 1$  and  $x((\pi/2)^+) = 0$ . We can verify by setting  $t = \pi/2$  in Eq. (6.13) that  $x(\pi/2) = 0.5$ , which is a value midway between the values of x(t) on either side of the discontinuity at  $t = \pi/2$ .

#### 6.1-2 The Effect of Symmetry

The Fourier series for the signal x(t) in Fig. 6.2a (Ex. 6.1) consists of sine and cosine terms, but the series for the signal x(t) in Fig. 6.4a (Ex. 6.2) consists of sine terms only, and the series for the signal x(t) in Fig. 6.6a (Ex. 6.4) consists of cosine terms only. This is no accident. We can show that the Fourier series of any even periodic function x(t) consists of cosine terms only and the series for any odd periodic function x(t) consists of sine terms only. Moreover, because of symmetry (even or odd), the information of one period of x(t) is implicit in only half the period, as seen in Figs. 6.4a and 6.6a. In these cases, knowing the signal over a half-period and knowing the kind of symmetry (even or odd), we can determine the signal waveform over a complete period. For this reason, the Fourier coefficients in these cases can be computed by integrating over only half the period rather than a complete period. To prove this result, recall that

$$a_0 = \frac{1}{T_0} \int_{-T_0/2}^{T_0/2} x(t) dt, \quad a_n = \frac{2}{T_0} \int_{-T_0/2}^{T_0/2} x(t) \cos n\omega_0 t dt, \quad \text{and} \quad b_n = \frac{2}{T_0} \int_{-T_0/2}^{T_0/2} x(t) \sin n\omega_0 t dt$$

Recall also that  $\cos n\omega_0 t$  is an even function and  $\sin n\omega_0 t$  is an odd function of t. If x(t) is an even function of t, then  $x(t) \cos n\omega_0 t$  is also an even function and  $x(t) \sin n\omega_0 t$  is an odd function of t

<sup>&</sup>lt;sup>†</sup> Here, the distinction between amplitude  $A_n$  and magnitude  $C_n = |A_n|$  would have been useful. But, for the reasons mentioned in the footnote on page 598, we refrain from this distinction formally.

#### 3 CHAPTER 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

(see Sec. 1.5-1). Therefore, following from Eq. (1.16),

$$a_0 = \frac{2}{T_0} \int_0^{T_0/2} x(t) dt, \quad a_n = \frac{4}{T_0} \int_0^{T_0/2} x(t) \cos n\omega_0 t dt, \quad \text{and} \quad b_n = 0$$
(6.14)

Similarly, if x(t) is an odd function of t, then  $x(t) \cos n\omega_0 t$  is an odd function of t and  $x(t) \sin n\omega_0 t$  is an even function of t. Therefore,

$$a_n = 0$$
 and  $b_n = \frac{4}{T_0} \int_0^{T_0/2} x(t) \sin n\omega_0 t \, dt$  (6.15)

Observe that because of symmetry, the integration required to compute the coefficients need be performed over only half the period.

If a periodic signal x(t) shifted by half the period remains unchanged except for a sign—that is, if

$$x\left(t-\frac{T_0}{2}\right) = -x(t)$$


then the signal is said to have a *half-wave* symmetry. It can be shown that for a signal with a half-wave symmetry, all the even-numbered harmonics vanish (see Prob. 6.1-6). The signal in Fig. 6.4a is an example of such a symmetry. The signal in Fig. 6.6a also has this symmetry, although it is not obvious owing to a dc component. If we subtract the dc component of 0.5 from this signal, the remaining signal has half-wave symmetry. For this reason, this signal has only odd harmonics and a dc component of 0.5.

## **DRILL 6.1 Compact Trigonometric Fourier Series**

Find the compact trigonometric Fourier series for periodic signals shown in Fig. 6.7. Sketch their amplitude and phase spectra. Allow  $C_n$  to take on negative values if  $b_n = 0$  so that the phase spectrum can be eliminated. [*Hint:* Use Eqs. (6.14) and (6.15) for appropriate symmetry conditions.]

#### ANSWERS

(a) 
$$x(t) = \frac{1}{3} - \frac{4}{\pi^2} \left( \cos \pi t - \frac{1}{4} \cos 2\pi t + \frac{1}{9} \cos 3\pi t - \frac{1}{16} \cos 4\pi t + \cdots \right)$$
  
 $= \frac{1}{3} + \frac{4}{\pi^2} \sum_{n=1}^{\infty} \frac{(-1)^n}{n^2} \cos n\pi t$   
(b)  $x(t) = \frac{2A}{\pi} \left[ \sin \pi t - \frac{1}{2} \sin 2\pi t + \frac{1}{3} \sin 3\pi t - \frac{1}{4} \sin 4\pi t + \cdots \right]$   
 $= \frac{2A}{\pi} \left[ \cos (\pi t - 90^\circ) + \frac{1}{2} \cos (2\pi t + 90^\circ) + \frac{1}{3} \cos (3\pi t - 90^\circ) + \frac{1}{4} \cos (4\pi t + 90^\circ) + \cdots \right]$ 

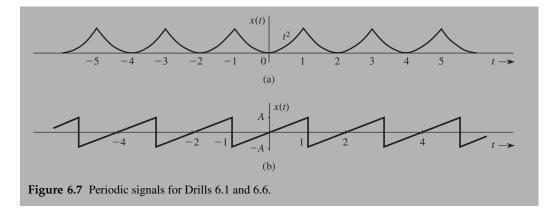

#### 6.1-3 Determining the Fundamental Frequency and Period

We have seen that every periodic signal can be expressed as a sum of sinusoids of a fundamental frequency  $\omega_0$  and its harmonics. One may ask whether a sum of sinusoids of *any* frequencies represents a periodic signal. If so, how does one determine the period? Consider the following three functions:

$$x_{1}(t) = 2 + 7\cos\left(\frac{1}{2}t + \theta_{1}\right) + 3\cos\left(\frac{2}{3}t + \theta_{2}\right) + 5\cos\left(\frac{7}{6}t + \theta_{3}\right)$$
  

$$x_{2}(t) = 2\cos\left(2t + \theta_{1}\right) + 5\sin\left(\pi t + \theta_{2}\right)$$
  

$$x_{3}(t) = 3\sin\left(3\sqrt{2}t + \theta\right) + 7\cos\left(6\sqrt{2}t + \phi\right)$$

Recall that every frequency in a periodic signal is an integer multiple of the fundamental frequency  $\omega_0$ . Therefore the ratio of any two frequencies is of the form m/n, where m and n are integers. This means that the ratio of any two frequencies is a rational number. When the ratio of two frequencies is a rational number, the frequencies are said to be *harmonically* related.

The largest number of which all the frequencies are integer multiples is the fundamental frequency. In other words, the fundamental frequency is the *greatest common factor* (GCF) of all the frequencies in the series. The frequencies in the spectrum of  $x_1(t)$  are 1/2, 2/3, and 7/6 (we do not consider dc). The ratios of the successive frequencies are 3:4 and 4:7, respectively. Because both these numbers are rational, all the three frequencies in the spectrum are harmonically related, and the signal  $x_1(t)$  is periodic. The GCF, that is, the greatest number of which 1/2, 2/3, and 7/6 are integer multiples, is 1/6.<sup>†</sup> Moreover, 3(1/6) = 1/2, 4(1/6) = 2/3, and 7(1/6) = 7/6. Therefore the fundamental frequency is 1/6, and the three frequencies in the spectrum are the third, fourth, and seventh harmonics. Observe that the fundamental frequency component is absent in this Fourier series.

<sup>&</sup>lt;sup>†</sup> The greatest common factor of  $a_1/b_1, a_2/b_2, \ldots, a_m/b_m$  is the ratio of the GCF of the numerators set  $(a_1, a_2, \ldots, a_m)$  to the LCM (least common multiple) of the denominator set  $(b_1, b_2, \ldots, b_m)$ . For instance, for the set (2/3, 6/7, 2), the GCF of the numerator set (2, 6, 2) is 2; the LCM of the denominator set (3, 7, 1) is 21. Therefore, 2/21 is the largest number of which 2/3, 6/7, and 2 are integer multiples.

#### 610 CHAPTER 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

The signal  $x_2(t)$  is not periodic because the ratio of two frequencies in the spectrum is  $2/\pi$ , which is not a rational number. The signal  $x_3(t)$  is periodic because the ratio of frequencies  $3\sqrt{2}$  and  $6\sqrt{2}$  is 1/2, a rational number. The greatest common factor of  $3\sqrt{2}$  and  $6\sqrt{2}$  is  $3\sqrt{2}$ . Therefore, the fundamental frequency  $\omega_0 = 3\sqrt{2}$ , and the period

$$T_0 = \frac{2\pi}{(3\sqrt{2})} = \frac{\sqrt{2}}{3}\pi$$

## DRILL 6.2 Determining Periodicity, Fundamental Frequency, and Harmonic Content

Determine whether the signal

$$x(t) = \cos\left(\frac{2}{3}t + 30^{\circ}\right) + \sin\left(\frac{4}{5}t + 45^{\circ}\right)$$

is periodic. If it is periodic, find the fundamental frequency and the period. What harmonics are present in x(t)?


#### ANSWERS

Periodic with  $\omega_0 = 2/15$  and period  $T_0 = 15\pi$ . Signal x(t) contains the fifth and sixth harmonics.

## A HISTORICAL NOTE: BARON JEAN-BAPTISTE-JOSEPH FOURIER (1768–1830)

The Fourier series and integral comprise a most beautiful and fruitful development, which serves as an indispensable instrument in the treatment of many problems in mathematics, science, and engineering. Maxwell was so taken by the beauty of the Fourier series that he called it a great mathematical poem. In electrical engineering, it is central to the areas of communication, signal processing, and several other fields, including antennas, but its initial reception by the scientific world was not enthusiastic. In fact, Fourier could not get his results published as a paper.

Fourier, a tailor's son, was orphaned at age 8 and educated at a local military college (run by Benedictine monks), where he excelled in mathematics. The Benedictines prevailed upon the young genius to choose the priesthood as his vocation, but revolution broke out before he could take his vows. Fourier joined the people's party. But in its early days, the French Revolution, like most such upheavals, liquidated a large segment of the intelligentsia, including prominent scientists such as Lavoisier. Observing this trend, many intellectuals decided to leave France to save themselves from a rapidly rising tide of barbarism. Fourier, despite his early enthusiasm for the Revolution, narrowly escaped the guillotine twice. It was to the everlasting credit of Napoleon that he stopped the persecution of the intelligentsia and founded new schools to replenish their ranks. The 26-year-old Fourier was appointed chair of mathematics at the newly created École Normale in 1794 [1].

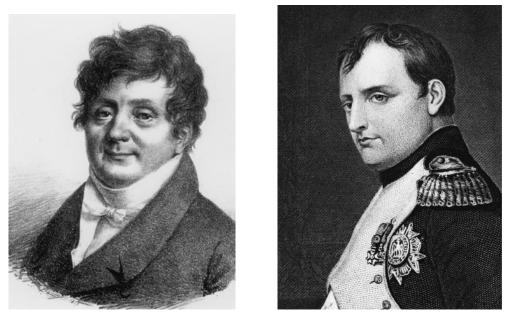

Jean-Baptiste-Joseph Fourier and Napoleon

Napoleon was the first modern ruler with a scientific education, and he was one of the rare persons who are equally comfortable with soldiers and scientists. The age of Napoleon was one of the most fruitful in the history of science. Napoleon liked to sign himself as "member of *Institut de France*" (a fraternity of scientists), and he once expressed to Laplace his regret that "force of circumstances has led me so far from the career of a scientist" [2]. Many great figures in science and mathematics, including Fourier and Laplace, were honored and promoted by Napoleon. In 1798 he took a group of scientists, artists, and scholars—Fourier among them—on his Egyptian expedition, with the promise of an exciting and historic union of adventure and research. Fourier proved to be a capable administrator of the newly formed Institut d'Égypte, which, incidentally, was responsible for the discovery of the Rosetta Stone. The inscription on this stone in two languages and three scripts (hieroglyphic, demotic, and Greek) enabled Thomas Young and Jean-François Champollion, a protégé of Fourier, to invent a method of translating hieroglyphic writings of ancient Egypt—the only significant result of Napoleon's Egyptian expedition.

Back in France in 1801, Fourier briefly served in his former position as professor of mathematics at the École Polytechnique in Paris. In 1802 Napoleon appointed him the prefect of Isère (with its headquarters in Grenoble), a position in which Fourier served with distinction. Fourier was named Baron of the Empire by Napoleon in 1809. Later, when Napoleon was exiled to Elba, his route was to take him through Grenoble. Fourier had the route changed to avoid meeting Napoleon, which would have displeased Fourier's new master, King Louis XVIII. Within a year, Napoleon escaped from Elba and returned to France. At Grenoble, Fourier was brought before him in chains. Napoleon scolded Fourier for his ungrateful behavior but reappointed him the prefect of Rhône at Lyons. Within four months Napoleon was defeated at Waterloo and was exiled to St. Helena, where he died in 1821. Fourier once again was in disgrace as a Bonapartist and had

to pawn his possessions to keep himself alive. But through the intercession of a former student, who was now a prefect of Paris, he was appointed director of the statistical bureau of the Seine, a position that allowed him ample time for scholarly pursuits. Later, in 1827, he was elected to the powerful position of perpetual secretary of the Paris Academy of Science, a section of the Institut de France [3].

While serving as the prefect of Grenoble, Fourier carried on his elaborate investigation of the propagation of heat in solid bodies, which led him to the Fourier series and the Fourier integral. On December 21, 1807, he announced these results in a prize paper on the theory of heat. Fourier claimed that an arbitrary function (continuous or with discontinuities) defined in a finite interval by an arbitrarily capricious graph can always be expressed as a sum of sinusoids (Fourier series). The judges, who included the great French mathematicians Laplace, Lagrange, Legendre, Monge, and LaCroix, admitted the novelty and importance of Fourier's work but criticized it for lack of mathematical rigor and generality. Lagrange thought it incredible that a sum of sines and cosines could add up to anything but an infinitely differentiable function. Moreover, one of the properties of an infinitely differentiable function is that if we know its behavior over an arbitrarily small interval, we can determine its behavior over the entire range (the Taylor-Maclaurin series). Such a function is far from an arbitrary or a capriciously drawn graph [4]. Laplace had additional reason to criticize Fourier's work. Laplace and his students had already approached the problem of heat conduction from a different angle, and Laplace was reluctant to accept the superiority of Fourier's method [5]. Fourier thought the criticism unjustified but was unable to prove his claim because the tools required for operations with infinite series were not available at the time. However, posterity has proved Fourier to be closer to the truth than his critics. This is the classic conflict between pure mathematicians and physicists or engineers, as we saw earlier (Ch. 4) in the life of Oliver Heaviside. In 1829 Dirichlet proved Fourier's claim concerning capriciously drawn functions with a few restrictions (Dirichlet conditions).

Although three of the four judges were in favor of publication, Fourier's paper was rejected because of vehement opposition by Lagrange. Fifteen years later, after several attempts and disappointments, Fourier published the results in expanded form as a text, *Théorie analytique de la chaleur*, which is now a classic.

# **6.2 EXISTENCE AND CONVERGENCE OF THE FOURIER SERIES**

For the existence of the Fourier series, coefficients  $a_0, a_n$ , and  $b_n$  in Eq. (6.8) must be finite. It follows from Eq. (6.8) that the existence of these coefficients is guaranteed if x(t) is absolutely integrable over one period; that is,

$$\int_{T_0} |x(t)| dt < \infty \tag{6.16}$$

However, existence, by itself, does not inform us about the nature and the manner in which the series converges. We shall first discuss the notion of convergence.

#### 6.2-1 Convergence of a Series

The key to many puzzles lies in the nature of the convergence of the Fourier series. Convergence of infinite series is a complex problem. It took mathematicians several decades to understand the convergence aspect of the Fourier series. We shall barely scratch the surface here.

Nothing annoys a student more than the discussion of convergence. "Have we not proved," they ask, "that a periodic signal x(t) can be expressed as a Fourier series"? Then why spoil the fun by this annoying discussion? All we have shown so far is that a signal represented by a Fourier series in Eq. (6.1) is periodic. We have not proved the converse, that every periodic signal can be expressed as a Fourier series. This issue will be tackled later, in Sec. 6.5-4, where it will be shown that a periodic signal can be represented by a Fourier series, as in Eq. (6.1), where the equality of the two sides of the equation is not in the ordinary sense, but in the mean-square sense (explained later in this discussion). But the astute reader should have been skeptical of the claims of the Fourier series to represent discontinuous functions in Figs. 6.2a and 6.6a. If x(t) has a jump discontinuity, say, at t = 0, then  $x(0^+), x(0)$ , and  $x(0^-)$  are generally different. How could a series consisting of the sum of continuous functions of the smoothest type (sinusoids) add to one value at  $t = 0^-$  and a different value at t = 0 and yet another value at  $t = 0^+$ ? The demand is impossible to satisfy unless the math involved executes some spectacular acrobatics. How does a Fourier series act under such conditions? Precisely for this reason, the great mathematicians Lagrange and Laplace, two of the judges examining Fourier's paper, were skeptical of Fourier's claims and voted against publication of the paper that later became a classic.

There are also other issues. In any practical application, we can use only a finite number of terms in a series. If, with a fixed number of terms, the series guarantees convergence within an arbitrarily small error at every value of *t*, such a series is highly desirable and is called a *uniformly convergent* series. If a series converges at every value of *t*, but to guarantee convergence within a given error requires a different number of terms at different *t*, then the series is still convergent, but less desirable. It goes under the name *pointwise convergent* series.

Finally, we have the case of a series that refuses to converge at some *t*, no matter how many terms are added. But the series may *converge in the mean*; that is, the energy of the difference between x(t) and the corresponding finite term series approaches zero as the number of terms approaches infinity.<sup>†</sup> To explain this concept, let us consider representation of a function x(t) by an infinite series

$$x(t) = \sum_{n=1}^{\infty} z_n(t)$$

Let the partial sum of the first N terms of the series on the right-hand side be denoted by  $x_N(t)$ , that is,

$$x_N(t) = \sum_{n=1}^N z_n(t)$$

<sup>&</sup>lt;sup>†</sup> The behavior is called "convergence in the mean" because minimizing the error energy over a certain interval is equivalent to minimizing the mean-square value of the error over the same interval.

#### 614 CHAPTER 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

If we approximate x(t) by  $x_N(t)$  (the partial sum of the first N terms of the series), the *error* in the approximation is the difference  $x(t) - x_N(t)$ . The series converges *in the mean* to x(t) in the interval  $(0, T_0)$  if

$$\int_0^{T_0} |x(t) - x_N(t)|^2 dt \to 0 \quad \text{as} \quad N \to \infty$$

Hence, the energy of the error  $x(t) - x_N(t)$  approaches zero as  $N \to \infty$ . This form of convergence does not require the series to be equal to x(t) for all t. It just requires the energy of the difference (area under  $|x(t) - x_N(t)|^2$ ) to vanish as  $N \to \infty$ . Superficially it may appear that if the energy of a signal over an interval is zero, the signal (the error) must be zero everywhere. This is not true. The signal energy can be zero even if there are nonzero values at a finite number of isolated points. This is because although the signal is nonzero at a point (and zero everywhere else), the area under its square is still zero. Thus, a series that converges in the mean to x(t) need not converge to x(t) at a finite number of points. This is precisely what happens to the Fourier series when x(t) has jump discontinuities. This is also what makes Fourier series convergence compatible with the Gibbs phenomenon, to be discussed later in this section.

There is a simple criterion for ensuring that a periodic signal x(t) has a Fourier series that converges in the mean. The Fourier series for x(t) converges to x(t) in the mean if x(t) has a finite energy over one period, that is,

$$\int_{T_0} |x(t)|^2 dt < \infty \tag{6.17}$$

Thus, the periodic signal x(t), having a finite energy over one period, guarantees the convergence in the mean of its Fourier series. In all the examples discussed so far, Eq. (6.17) is satisfied; hence the corresponding Fourier series converges in the mean. Equation (6.17), like Eq. (6.16), guarantees that the Fourier coefficients are finite.

We shall now discuss an alternate set of criteria, due to Dirichlet, for convergence of the Fourier series.

### DIRICHLET CONDITIONS

Dirichlet showed that if x(t) satisfies certain conditions (*Dirichlet conditions*), its Fourier series is guaranteed to converge pointwise at all points where x(t) is continuous. Moreover, at the points of discontinuities, x(t) converges to the value midway between the two values of x(t) on either side of the discontinuity. These conditions are:

- 1. The function x(t) must be absolutely integrable; that is, it must satisfy Eq. (6.16).
- 2. The function x(t) must have only a finite number of finite discontinuities in one period.
- 3. The function x(t) must contain only a finite number of maxima and minima in one period.

All practical signals, including those in Exs. 6.1, 6.2, 6.3, and 6.4, satisfy these conditions.

#### 6.2-2 The Role of Amplitude and Phase Spectra in Waveshaping

The trigonometric Fourier series of a signal x(t) shows explicitly the sinusoidal components of x(t). We can synthesize x(t) by adding the sinusoids in the spectrum of x(t). Let us synthesize the square-pulse periodic signal x(t) of Fig. 6.6a by adding successive harmonics in its spectrum step by step and observing the similarity of the resulting signal to x(t). The Fourier series for this function as found in Eq. (6.13) is

$$x(t) = \frac{1}{2} + \frac{2}{\pi} \left( \cos t - \frac{1}{3} \cos 3t + \frac{1}{5} \cos 5t - \frac{1}{7} \cos 7t + \cdots \right)$$

We start the synthesis with only the first term in the series (n = 0), a constant 1/2 (dc); this is a gross approximation of the square wave, as shown in Fig. 6.8a. In the next step we add the dc (n = 0) and the first harmonic (fundamental), which results in a signal shown in Fig. 6.8b. Observe that the synthesized signal somewhat resembles x(t). It is a smoothed-out version of x(t). The sharp corners in x(t) are not reproduced in this signal because sharp corners mean rapid changes, and their reproduction requires rapidly varying (i.e., higher-frequency) components, which are excluded. Figure 6.8c shows the sum of dc, first, and third harmonics (even harmonics are absent). As we increase the number of harmonics progressively, as shown in Figs. 6.8d (sum up to the fifth harmonic) and 6.8e (sum up to the nineteenth harmonic), the edges of the pulses become sharper and the signal resembles x(t) more closely.

#### ASYMPTOTIC RATE OF AMPLITUDE SPECTRUM DECAY

Figure 6.8 brings out one interesting aspect of the Fourier series. Lower frequencies in the Fourier series affect the large-scale behavior of x(t), whereas the higher frequencies determine the fine structure such as rapid wiggling. Hence, sharp changes in x(t), being a part of fine structure, necessitate higher frequencies in the Fourier series. The sharper the change [the higher the time derivative  $\dot{x}(t)$ ], the higher are the frequencies needed in the series.

The amplitude spectrum indicates the amounts (amplitudes) of various frequency components of x(t). If x(t) is a smooth function, its variations are less rapid. Synthesis of such a function requires predominantly lower-frequency sinusoids and relatively small amounts of rapidly varying (higher-frequency) sinusoids. The amplitude spectrum of such a function would decay swiftly with frequency. To synthesize such a function, we require fewer terms in the Fourier series for a good approximation. On the other hand, a signal with sharp changes, such as jump discontinuities, contains rapid variations, and its synthesis requires a relatively large amount of high-frequency components. The amplitude spectrum of such a signal would decay slowly with frequency, and to synthesize such a function, we require many terms in its Fourier series for a good approximation. The square wave x(t) is a discontinuous function with jump discontinuities, and therefore its amplitude spectrum decays rather slowly, as 1/n [see Eq. (6.13)]. On the other hand, the triangular-pulse periodic signal in Fig. 6.4a is smoother because it is a continuous function (no jump discontinuities). Its spectrum decays rapidly with frequency as  $1/n^2$ [see Eq. (6.12)].

We can show that if the first k - 1 derivatives of a periodic signal x(t) are continuous and the *k*th derivative is discontinuous, then its amplitude spectrum  $C_n$  decays with frequency at least as rapidly as  $1/n^{k+1}$  [6]. This result provides a simple and useful means for predicting the asymptotic

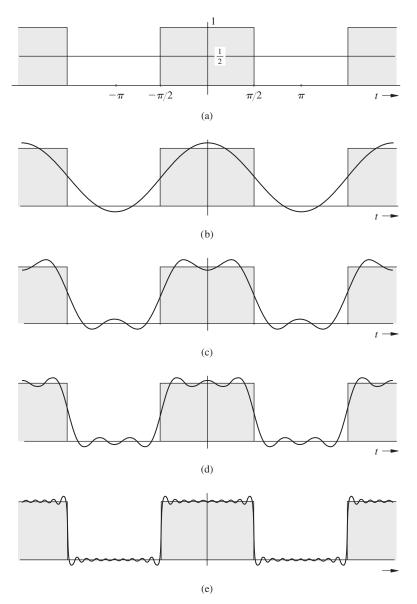



Figure 6.8 Synthesis of a square-pulse periodic signal by successive addition of its harmonics.

rate of convergence of the Fourier series. In the case of the square-wave signal (Fig. 6.6a), the zeroth derivative of the signal (the signal itself) is discontinuous so that k = 0. For the triangular periodic signal in Fig. 6.4a, the first derivative is discontinuous; that is, k = 1. For this reason, the spectra of these signals decay as 1/n and  $1/n^2$ , respectively.


## **EXAMPLE 6.5** Square-Wave Synthesis by Truncated Fourier Series Using MATLAB

Use MATLAB to synthesize and plot the square wave of Fig. 6.8a using a Fourier series that is truncated to the 19th harmonic. The result should match Fig. 6.8e.

To synthesize the waveform, we use the Fourier series of Eq. (6.13).

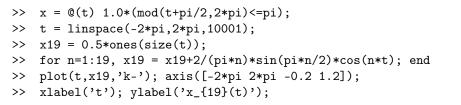

As expected, the result of Fig. 6.9 matches Fig. 6.8e.

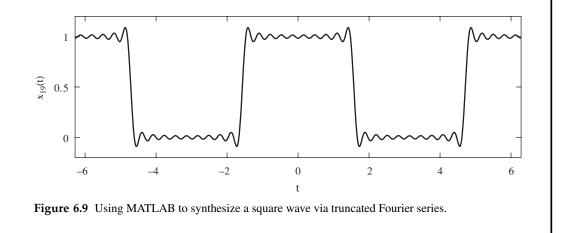

## PHASE SPECTRUM: THE WOMAN BEHIND A SUCCESSFUL MAN

The role of the amplitude spectrum in shaping the waveform x(t) is quite clear. However, the role of the phase spectrum in shaping this waveform is less obvious. Yet, the phase spectrum, like the woman behind a successful man,<sup>†</sup> plays an equally important role in waveshaping. We can explain this role by considering a signal x(t) that has rapid changes, such as jump discontinuities. To synthesize an instantaneous change at a jump discontinuity, the phases of the various sinusoidal components in its spectrum must be such that all (or most) of the harmonic components will have

<sup>&</sup>lt;sup>†</sup> Or, to keep up with the times, the man behind a successful woman.

#### 618 CHAPTER 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

one sign before the discontinuity and the opposite sign after the discontinuity. This will result in a sharp change in x(t) at the point of discontinuity. We can verify this fact in any waveform with jump discontinuity. Consider, for example, the sawtooth waveform in Fig. 6.7b. This waveform has a discontinuity at t = 1. The Fourier series for this waveform, as given in Drill 6.1b, is

$$x(t) = \frac{2A}{\pi} \left[ \cos\left(\pi t - 90^\circ\right) + \frac{1}{2}\cos\left(2\pi t + 90^\circ\right) + \frac{1}{3}\cos\left(3\pi t - 90^\circ\right) + \frac{1}{4}\cos\left(4\pi t + 90^\circ\right) + \cdots \right]$$

Figure 6.10 shows the first three components of this series. The phases of all the (infinite) components are such that all the components are positive just before t = 1 and turn negative just after t = 1, the point of discontinuity. The same behavior is also observed at t = -1, where a similar discontinuity occurs. This sign change in all the harmonics adds up to produce very nearly a jump discontinuity. The role of the phase spectrum is crucial in achieving a sharp change in the waveform. If we ignore the phase spectrum when trying to reconstruct this signal, the result will be a smeared and spread-out waveform. In general, the phase spectrum is just as crucial as the amplitude spectrum in determining the waveform. The synthesis of any signal x(t) is achieved by using a proper combination of amplitudes and phases of various sinusoids. This unique combination is the Fourier spectrum of x(t).

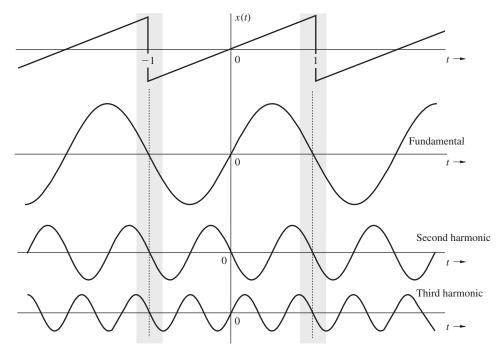


Figure 6.10 Role of the phase spectrum in shaping a periodic signal.

## FOURIER SYNTHESIS OF DISCONTINUOUS FUNCTIONS: THE GIBBS PHENOMENON

Figure 6.8 showed the square function x(t) and its approximation by a truncated trigonometric Fourier series that includes only the first N harmonics for N = 1, 3, 5, and 19. The plot of the truncated series approximates closely the function x(t) as N increases, and we expect that the series will converge exactly to x(t) as  $N \to \infty$ . Yet the curious fact, as seen from Fig. 6.8, is that even for large N, the truncated series exhibits an oscillatory behavior and an overshoot approaching a value of about 9% in the vicinity of the discontinuity at the nearest peak of oscillation.<sup>†</sup> Regardless of the value of N, the overshoot remains at about 9%. Such strange behavior certainly would undermine anyone's faith in the Fourier series. In fact, this behavior puzzled many scholars at the turn of the century. Josiah Willard Gibbs, an eminent mathematical physicist who was the inventor of vector analysis, gave a mathematical explanation of this behavior (now called the *Gibbs phenomenon*).

We can reconcile the apparent aberration in the behavior of the Fourier series by observing from Fig. 6.8 that the frequency of oscillation of the synthesized signal is  $Nf_0$ , so the width of the spike with 9% overshoot is approximately  $1/2Nf_0$ . As we increase N, the frequency of oscillation increases and the spike width  $1/2Nf_0$  diminishes. As  $N \to \infty$ , the error power  $\to 0$  because the error consists mostly of the spikes, whose widths  $\to 0$ . Therefore, as  $N \to \infty$ , the corresponding Fourier series differs from x(t) by about 9% at the immediate left and right of the points of discontinuity, and yet the error power  $\to 0$ . The reason for all this confusion is that in this case, the Fourier series converges in the mean. When this happens, all we promise is that the error energy (over one period)  $\to 0$  as  $N \to \infty$ . Thus, the series may differ from x(t) at some points and yet have the error signal power zero, as verified earlier. Note that the series, in this case, also converges pointwise at all points except the points of discontinuity. It is precisely at the discontinuities that the series differs from x(t) by 9%.<sup>‡</sup>

When we use only the first N terms in the Fourier series to synthesize a signal, we are abruptly terminating the series, giving a unit weight to the first N harmonics and zero weight to all the remaining harmonics beyond N. This abrupt termination of the series causes the Gibbs phenomenon in synthesis of discontinuous functions. Section 7.8 offers more discussion on the Gibbs phenomenon, its ramifications, and cure.

The Gibbs phenomenon is present only when there is a jump discontinuity in x(t). When a continuous function x(t) is synthesized by using the first N terms of the Fourier series, the synthesized function approaches x(t) for all t as  $N \to \infty$ . No Gibbs phenomenon appears. This can be seen in Fig. 6.11, which shows one cycle of a continuous periodic signal being synthesized from the first 19 harmonics. Compare the similar situation for a discontinuous signal in Fig. 6.8.

#### DRILL 6.3 Rate of Spectral Decay

By inspection of signals in Figs. 6.2a, 6.7a, and 6.7b, determine the asymptotic rate of decay of their amplitude spectra.

<sup>&</sup>lt;sup>†</sup> There is also an undershoot of 9% at the other side [at  $t = (\pi/2)^+$ ] of the discontinuity.

<sup>&</sup>lt;sup>‡</sup> Actually, at discontinuities, the series converges to a value midway between the values on either side of the discontinuity. The 9% overshoot occurs at  $t = (\pi/2)^-$  and 9% undershoot occurs at  $t = (\pi/2)^+$ .

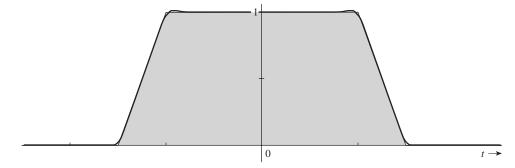


Figure 6.11 Fourier synthesis of a continuous signal using first 19 harmonics.

### ANSWERS

1/n,  $1/n^2$ , and 1/n, respectively.


### A HISTORICAL NOTE ON THE GIBBS PHENOMENON

Normally speaking, troublesome functions with strange behavior are invented by mathematicians; we rarely see such oddities in practice. In the case of the Gibbs phenomenon, however, the tables were turned. A rather puzzling behavior was observed in a mundane object, a mechanical wave synthesizer, and then well-known mathematicians of the day were dispatched on the scent of it to discover its hideout.

Albert Michelson (of Michelson–Morley fame) was an intense, practical man who developed ingenious physical instruments of extraordinary precision, mostly in the field of optics. His harmonic analyzer, developed in 1898, could compute the first 80 coefficients of the Fourier series of a signal x(t) specified by any graphical description. The instrument could also be used as a harmonic synthesizer, which could plot a function x(t) generated by summing the first 80 harmonics (Fourier components) of arbitrary amplitudes and phases. This analyzer, therefore, had the ability of self-checking its operation by analyzing a signal x(t) and then adding the resulting 80 components to see whether the sum yielded a close approximation of x(t).

Michelson found that the instrument checked very well with most of signals analyzed. However, when he tried a discontinuous function, such as a square wave,<sup>†</sup> a curious behavior was observed. The sum of 80 components showed oscillatory behavior (ringing), with an overshoot of 9% in the vicinity of the points of discontinuity. Moreover, this behavior was a constant feature regardless of the number of terms added. A larger number of terms made the oscillations proportionately faster, but regardless of the number of terms added, the overshoot remained 9%. This puzzling behavior caused Michelson to suspect some mechanical defect in his synthesizer. He wrote about his observation in a letter to *Nature* (December 1898). Josiah Willard Gibbs, who was a professor at Yale, investigated and clarified this behavior for a sawtooth periodic signal in a letter to *Nature* [7]. Later, in 1906, Bôcher generalized the result for any function with discontinuity [8].

<sup>&</sup>lt;sup>†</sup> Actually, it was a periodic sawtooth signal.

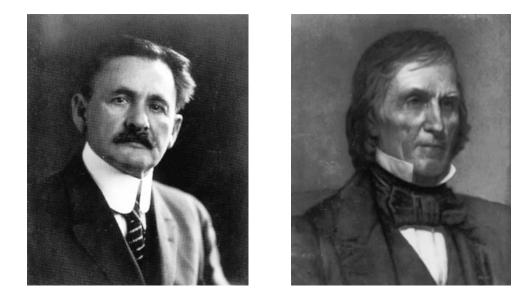

Albert Michelson and Josiah Willard Gibbs

It was Bôcher who gave the name *Gibbs phenomenon* to this behavior. Gibbs showed that the peculiar behavior in the synthesis of a square wave was inherent in the behavior of the Fourier series because of nonuniform convergence at the points of discontinuity.

This, however, is not the end of the story. Both Bôcher and Gibbs were under the impression that this property had remained undiscovered until Gibbs's work published in 1899. It is now known that what is called the Gibbs phenomenon had been observed in 1848 by Wilbraham of Trinity College, Cambridge, who clearly saw the behavior of the sum of the Fourier series components in the periodic sawtooth signal later investigated by Gibbs [9]. Apparently, this work was not known to most people, including Gibbs and Bôcher.

## **6.3 EXPONENTIAL FOURIER SERIES**

By using Euler's equality, we can express  $\cos n\omega_0 t$  and  $\sin n\omega_0 t$  in terms of exponentials  $e^{in\omega_0 t}$ and  $e^{-in\omega_0 t}$ . Clearly, we should be able to express the trigonometric Fourier series in Eq. (6.7) in terms of exponentials of the form  $e^{jn\omega_0 t}$  with the index *n* taking on all integer values from  $-\infty$  to  $\infty$ , including zero. Derivation of the exponential Fourier series from the results already derived for the trigonometric Fourier series is straightforward, involving conversion of sinusoids to exponentials. We shall, however, derive them here independently, without using the prior results of the trigonometric series.

This discussion shows that the *exponential Fourier series* for a periodic signal x(t) can be expressed as

$$x(t) = \sum_{n=-\infty}^{\infty} D_n e^{jn\omega_0 t}$$

#### 622 CHAPTER 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

To derive the coefficients  $D_n$ , we multiply both sides of this equation by  $e^{-jm\omega_0 t}$  (*m* integer) and integrate over one period. This yields

$$\int_{T_0} x(t) e^{-jm\omega_0 t} dt = \sum_{n=-\infty}^{\infty} D_n \int_{T_0} e^{j(n-m)\omega_0 t} dt$$

To simplify this expression, we use the *orthogonality* property of exponentials, which states that<sup>†</sup>

$$\int_{T_0} e^{jn\omega_0 t} e^{-jm\omega_0 t} dt = \begin{cases} 0 & m \neq n \\ T_0 & m = n \end{cases}$$
(6.18)

Thus,

$$\int_{T_0} x(t) e^{-jm\omega_0 t} dt = D_m T_0$$

from which we obtain

$$D_m = \frac{1}{T_0} \int_{T_0} x(t) \, e^{-jm\omega_0 t} \, dt.$$

To summarize, the exponential Fourier series can be expressed as

$$x(t) = \sum_{n=-\infty}^{\infty} D_n e^{jn\omega_0 t} \qquad \text{where} \qquad D_n = \frac{1}{T_0} \int_{T_0} x(t) e^{-jn\omega_0 t} dt \tag{6.19}$$

Observe the compactness of Eq. (6.19) and compare it with the trigonometric Fourier series expression. Such a comparison demonstrates very clearly the principal virtue of the exponential Fourier series. First, the form of the series is most compact. Second, the mathematical expression for deriving the coefficients of the series is also compact. It is much more convenient to handle the exponential series than the trigonometric one. For these reasons we shall use the exponential (rather than trigonometric) representation of signals in the rest of the book.

We can now relate  $D_n$  to trigonometric series coefficients  $a_n$  and  $b_n$ . Setting n = 0 in Eq. (6.19), we obtain

 $D_0 = a_0$ 

Moreover, for  $n \neq 0$ ,

$$D_n = \frac{1}{T_0} \int_{T_0} x(t) \cos n\omega_0 t \, dt - \frac{j}{T_0} \int_{T_0} x(t) \sin n\omega_0 t \, dt = \frac{1}{2} \left( a_n - jb_n \right) \tag{6.20}$$

$$\int_{T_0} e^{j(n-m)\omega_0 t} dt = \int_{T_0} \cos(n-m)\omega_0 t \, dt + j \int_{T_0} \sin(n-m)\omega_0 t \, dt$$

Both the integrals on the right-hand side represent area under n - m number of cycles. Because n - m is an integer, both the areas are zero. Hence, Eq. (6.18) follows.

<sup>&</sup>lt;sup>†</sup> We can readily prove this property as follows. For the case of m = n, the integrand in Eq. (6.18) is unity and the integral is  $T_0$ . When  $m \neq n$ , the integral on the left-hand side of Eq. (6.18) can be expressed as

and

$$D_{-n} = \frac{1}{T_0} \int_{T_0} x(t) \cos n\omega_0 t \, dt + \frac{j}{T_0} \int_{T_0} x(t) \sin n\omega_0 t \, dt = \frac{1}{2} \left( a_n + jb_n \right) \tag{6.21}$$

These results are valid for general x(t), real or complex. When x(t) is real,  $a_n$  and  $b_n$  are real, and Eqs. (6.20) and (6.21) show that  $D_n$  and  $D_{-n}$  are conjugates.

$$D_{-n} = D_n^*$$

Moreover, from Eq. (6.10), we observe that

$$a_n - jb_n = \sqrt{a_n^2 + b_n^2} e^{j \tan^{-1}\left(\frac{-b_n}{a_n}\right)} = C_n e^{j\theta_n}$$

Hence,

$$D_0 = a_0 = C_0$$

and

$$D_n = \frac{1}{2}C_n e^{j\theta_n} \qquad D_{-n} = \frac{1}{2}C_n e^{-j\theta_n}$$

Therefore, for  $n \neq 0$ ,

$$|D_n| = |D_{-n}| = \frac{1}{2}C_n, \quad \angle D_n = \theta_n, \quad \text{and} \angle D_{-n} = -\theta_n \tag{6.22}$$

Note that  $|D_n|$  are the amplitudes and  $\angle D_n$  are the angles of various exponential components. From Eq. (6.22) it follows that when x(t) is real, the amplitude spectrum  $(|D_n| \text{ versus } \omega)$  is an even function of  $\omega$  and the angle spectrum  $(\angle D_n \text{ versus } \omega)$  is an odd function of  $\omega$ . For complex x(t),  $D_n$  and  $D_{-n}$  are generally not conjugates.

### **EXAMPLE 6.6** Exponential Fourier Series of Periodic Exponential Wave

Find the exponential Fourier series for the signal of Fig. 6.2a from Ex. 6.1.

In this case  $T_0 = \pi$ ,  $\omega_0 = 2\pi/T_0 = 2$ , and

$$x(t) = \sum_{n=-\infty}^{\infty} D_n e^{j2nt}$$

where

$$D_n = \frac{1}{T_0} \int_{T_0} x(t) e^{-j2nt} dt = \frac{1}{\pi} \int_0^{\pi} e^{-t/2} e^{-j2nt} dt = \frac{1}{\pi} \int_0^{\pi} e^{-(1/2+j2n)t} dt$$
$$= \frac{-1}{\pi \left(\frac{1}{2} + j2n\right)} e^{-(1/2+j2n)t} \Big|_0^{\pi} = \frac{0.504}{1+j4n}$$

$$\begin{aligned} x(t) &= 0.504 \sum_{n=-\infty}^{\infty} \frac{1}{1+j4n} e^{j2nt} \\ &= 0.504 \left[ 1 + \frac{1}{1+j4} e^{j2t} + \frac{1}{1+j8} e^{j4t} + \frac{1}{1+j12} e^{j6t} + \cdots \right. \\ &+ \frac{1}{1-j4} e^{-j2t} + \frac{1}{1-j8} e^{-j4t} + \frac{1}{1-j12} e^{-j6t} + \cdots \end{aligned}$$

Observe that the coefficients  $D_n$  are complex. Moreover,  $D_n$  and  $D_{-n}$  are conjugates, as expected.

#### 6.3-1 Exponential Fourier Spectra

In exponential spectra, we plot coefficients  $D_n$  as a function of  $\omega$ . But since  $D_n$  is complex in general, we need both parts of one of two sets of plots: the real and the imaginary parts of  $D_n$ , or the magnitude and the angle of  $D_n$ . We prefer the latter because of its close connection to the amplitudes and phases of corresponding components of the trigonometric Fourier series. We therefore plot  $|D_n|$  versus  $\omega$  and  $\angle D_n$  versus  $\omega$ . This requires that the coefficients  $D_n$  be expressed in polar form as  $|D_n|e^{j\angle D_n}$ , where  $|D_n|$  are the amplitudes and  $\angle D_n$  are the angles of various exponential components. Equation (6.22) shows that for real x(t), the amplitude spectrum ( $|D_n|$  versus  $\omega$ ) is an even function of  $\omega$  and the angle spectrum ( $\angle D_n$  versus  $\omega$ ) is an odd function of  $\omega$ .

For the series in Ex. 6.6, for instance,

$$D_{0} = 0.504$$

$$D_{1} = \frac{0.504}{1+j4} = 0.122e^{-j75.96^{\circ}} \implies |D_{1}| = 0.122, \ \angle D_{1} = -75.96^{\circ}$$

$$D_{-1} = \frac{0.504}{1-j4} = 0.122e^{j75.96^{\circ}} \implies |D_{-1}| = 0.122, \ \angle D_{-1} = 75.96^{\circ}$$

and

$$D_{2} = \frac{0.504}{1+j8} = 0.0625e^{-j82.87^{\circ}} \implies |D_{2}| = 0.0625, \ \angle D_{2} = -82.87^{\circ}$$
$$D_{-2} = \frac{0.504}{1-j8} = 0.0625e^{j82.87^{\circ}} \implies |D_{-2}| = 0.0625, \ \angle D_{-2} = 82.87^{\circ}$$

and so on. Note that  $D_n$  and  $D_{-n}$  are conjugates, as expected [see Eq. (6.22)].

Figure 6.12 shows the frequency spectra (amplitude and angle) of the exponential Fourier series for the periodic signal x(t) in Fig. 6.2a.

We notice some interesting features of these spectra. First, the spectra exist for positive as well as negative values of  $\omega$  (the frequency). Second, the amplitude spectrum is an even function of  $\omega$  and the angle spectrum is an odd function of  $\omega$ .

and

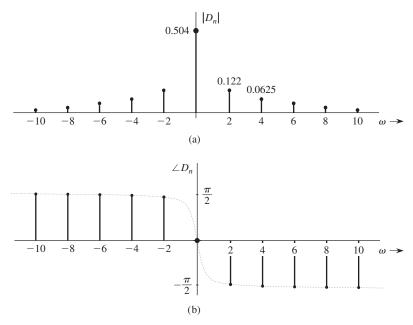


Figure 6.12 Exponential Fourier spectra for the signal in Fig. 6.2a.

At times it may appear that the phase spectrum of a real periodic signal fails to satisfy the odd symmetry: for example, when  $D_k = D_{-k} = -10$ . In this case,  $D_k = 10e^{j\pi}$ , and therefore,  $D_{-k} = 10e^{-j\pi}$ . Recall that  $e^{\pm j\pi} = -1$ . Here, although  $D_k = D_{-k}$ , their phases should be taken as  $\pi$  and  $-\pi$ .

## **EXAMPLE 6.7** Plotting Fourier Series Spectra with MATLAB


Using MATLAB and the results of Ex. 6.6, compute and plot the exponential Fourier spectra for the periodic signal x(t) shown in Fig. 6.2a. The result should match Fig. 6.12.

The expression for  $D_n$  is derived in Ex. 6.6.

```
>> clf; n = (-5:5); D_n = 0.504./(1+4j*n);
```

- >> subplot(1,2,1); stem(n,abs(D\_n),'.k');
- >> xlabel('n'); ylabel('|D\_n|');
- >> subplot(1,2,2); stem(n,angle(D\_n),'.k');
- >> xlabel('n'); ylabel('\angle D\_n [rad]');

Except that it is plotted as a function of *n* rather than  $\omega$ , the result in Fig. 6.13 matches Fig. 6.12.

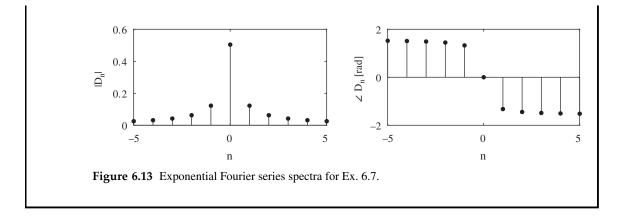

#### WHAT IS A NEGATIVE FREQUENCY?

The existence of the spectrum at negative frequencies is somewhat disturbing because, by definition, the frequency (number of repetitions per second) is a positive quantity. How do we interpret a negative frequency? We can use a trigonometric identity to express a sinusoid of a negative frequency  $-\omega_0$  as

$$\cos\left(-\omega_0 t + \theta\right) = \cos\left(\omega_0 t - \theta\right)$$

This equation clearly shows that the frequency of a sinusoid  $\cos(\omega_0 t + \theta)$  is  $|\omega_0|$ , which is a positive quantity. The same conclusion is reached by observing that

$$e^{\pm j\omega_0 t} = \cos \omega_0 t \pm j \sin \omega_0 t$$

Thus, the frequency of exponentials  $e^{\pm j\omega_0 t}$  is indeed  $|\omega_0|$ . How do we then interpret the spectral plots for negative values of  $\omega$ ? A more satisfying way of looking at the situation is to say that exponential spectra are a graphical representation of coefficients  $D_n$  as a function of  $\omega$ . Existence of the spectrum at  $\omega = -n\omega_0$  is merely an indication that an exponential component  $e^{-jn\omega_0 t}$  exists in the series. We know that a sinusoid of frequency  $n\omega_0$  can be expressed in terms of a pair of exponentials  $e^{jn\omega_0 t}$  and  $e^{-jn\omega_0 t}$ .

We see a close connection between the exponential spectra in Fig. 6.12 and the spectra of the corresponding trigonometric Fourier series for x(t) (Figs. 6.2b, 6.2c). Equation (6.22) explains the reason for the close connection, for real x(t), between the trigonometric spectra ( $C_n$  and  $\theta_n$ ) with exponential spectra ( $|D_n|$  and  $\angle D_n$ ). The dc components  $D_0$  and  $C_0$  are identical in both spectra. Moreover, the exponential amplitude spectrum  $|D_n|$  is half the trigonometric amplitude spectrum  $C_n$  for  $n \ge 1$ . The exponential angle spectrum  $\angle D_n$  is identical to the trigonometric phase spectrum  $\theta_n$  for  $n \ge 0$ . We can therefore produce the exponential spectra merely by inspection of trigonometric spectra, and vice versa. The following example demonstrates this feature.

## **EXAMPLE 6.8 Relating Exponential to Trigonometric Fourier Series** Spectra

The trigonometric Fourier spectra of a certain periodic signal x(t) are shown in Fig. 6.14a. After inspecting these spectra, sketch the corresponding exponential Fourier spectra and verify your results analytically.

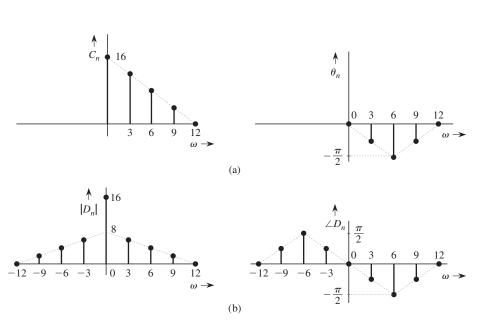


Figure 6.14 Fourier series spectra for Ex. 6.8.

The trigonometric spectral components exist at frequencies 0, 3, 6, and 9. The exponential spectral components exist at 0, 3, 6, 9, and -3, -6, -9. Consider first the amplitude spectrum. The dc component remains unchanged: that is,  $D_0 = C_0 = 16$ . Now  $|D_n|$  is an even function of  $\omega$  and  $|D_n| = |D_{-n}| = C_n/2$ . Thus, all the remaining spectrum  $|D_n|$  for positive *n* is half the trigonometric amplitude spectrum  $C_n$ , and the spectrum  $|D_n|$  for negative *n* is a reflection about the vertical axis of the spectrum for positive *n*, as shown in Fig. 6.14b.

The angle spectrum is  $\angle D_n = \theta_n$  for positive *n* and is  $-\theta_n$  for negative *n*, as depicted in Fig. 6.14b. We shall now verify that both sets of spectra represent the same signal.

Signal x(t), whose trigonometric spectra are shown in Fig. 6.14a, has four spectral components of frequencies 0, 3, 6, and 9. The dc component is 16. The amplitude and the phase of the component of frequency 3 are 12 and  $-\pi/4$ , respectively. Therefore, this component can be expressed as  $12 \cos (3t - \pi/4)$ . Proceeding in this manner, we can write the Fourier series

for x(t) as

$$x(t) = 16 + 12\cos\left(3t - \frac{\pi}{4}\right) + 8\cos\left(6t - \frac{\pi}{2}\right) + 4\cos\left(9t - \frac{\pi}{4}\right)$$

Consider now the exponential spectra in Fig. 6.14b. They contain components of frequencies 0 (dc),  $\pm 3$ ,  $\pm 6$ , and  $\pm 9$ . The dc component is  $D_0 = 16$ . The component  $e^{j3t}$  (frequency 3) has magnitude 6 and angle  $-\pi/4$ . Therefore, this component strength is  $6e^{-j\pi/4}$ , and it can be expressed as  $(6e^{-j\pi/4})e^{j3t}$ . Similarly, the component of frequency -3 is  $(6e^{j\pi/4})e^{-j3t}$ . Proceeding in this manner,  $\hat{x}(t)$ , the signal corresponding to the spectra in Fig. 6.14b, is

$$\hat{x}(t) = 16 + \left[6e^{-j\pi/4}e^{j3t} + 6e^{j\pi/4}e^{-j3t}\right] + \left[4e^{-j\pi/2}e^{j6t} + 4e^{j\pi/2}e^{-j6t}\right] + \left[2e^{-j\pi/4}e^{j9t} + 2e^{j\pi/4}e^{-j9t}\right] = 16 + 6\left[e^{j(3t-\pi/4)} + e^{-j(3t-\pi/4)}\right] + 4\left[e^{j(6t-\pi/2)} + e^{-j(6t-\pi/2)}\right] + 2\left[e^{j(9t-\pi/4)} + e^{-j(9t-\pi/4)}\right] = 16 + 12\cos\left(3t - \frac{\pi}{4}\right) + 8\cos\left(6t - \frac{\pi}{2}\right) + 4\cos\left(9t - \frac{\pi}{4}\right)$$

Clearly both sets of spectra represent the same periodic signal.

### BANDWIDTH OF A SIGNAL

The difference between the highest and the lowest frequencies of the spectral components of a signal is the *bandwidth* of the signal. The bandwidth of the signal whose exponential spectra are shown in Fig. 6.14b is 9 (in radians). The highest and lowest frequencies are 9 and 0, respectively. Note that the component of frequency 12 has zero amplitude and is nonexistent. Moreover, the lowest frequency is 0, not -9. Recall that the frequencies (in the conventional sense) of the spectral components at  $\omega = -3$ , -6, and -9 in reality are 3, 6, and 9.<sup>†</sup> The bandwidth can be more readily seen from the trigonometric spectra in Fig. 6.14a.

#### EXAMPLE 6.9 Fourier Series Spectra of an Impulse Train

Find the exponential Fourier series and sketch the corresponding spectra for the impulse train  $\delta_{T_0}(t)$  depicted in Fig. 6.15a. From this result, sketch the trigonometric spectrum and write the trigonometric Fourier series for  $\delta_{T_0}(t)$ .

<sup>&</sup>lt;sup>†</sup> Some authors *do* define bandwidth as the difference between the highest and the lowest (negative) frequency in the exponential spectrum. The bandwidth according to this definition is twice that defined here. In reality, this phrasing defines not the signal bandwidth but the *spectral width* (width of the exponential spectrum of the signal).

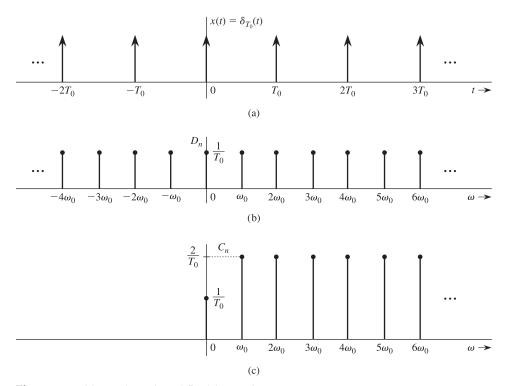


Figure 6.15 (a) Impulse train and (b, c) its Fourier spectra.

The unit impulse train shown in Fig. 6.15a can be expressed as

$$\sum_{n=-\infty}^{\infty} \delta(t - nT_0)$$

Following Papoulis, we shall denote this function as  $\delta_{T_0}(t)$  for the sake of notational brevity. The exponential Fourier series is given by

$$\delta_{T_0}(t) = \sum_{n=-\infty}^{\infty} D_n e^{jn\omega_0 t} \qquad \omega_0 = \frac{2\pi}{T_0}$$
(6.23)

where

$$D_n = \frac{1}{T_0} \int_{T_0} \delta_{T_0}(t) e^{-jn\omega_0 t} dt$$

Choosing the interval of integration  $(-T_0/2, T_0/2)$  and recognizing that over this interval  $\delta_{T_0}(t) = \delta(t)$ , we get

$$D_n = \frac{1}{T_0} \int_{-T_0/2}^{T_0/2} \delta(t) e^{-jn\omega_0 t} dt$$

In this integral, the impulse is located at t = 0. From the sampling property of Eq. (1.11), the integral on the right-hand side is the value of  $e^{-jn\omega_0 t}$  at t = 0 (where the impulse is located). Therefore,

$$D_n = \frac{1}{T_0} \tag{6.24}$$

From this result, we see that the exponential spectrum is constant for all frequencies, as shown in Fig. 6.15b. The spectrum, being real, requires only the amplitude plot. All phases are zero.

Substituting  $D_n = \frac{1}{T_0}$  into Eq. (6.23) yields the desired exponential Fourier series

$$\delta_{T_0}(t) = \frac{1}{T_0} \sum_{n=-\infty}^{\infty} e^{jn\omega_0 t} \qquad \omega_0 = \frac{2\pi}{T_0}$$

To sketch the trigonometric spectrum, we use Eq. (6.22) to obtain

$$C_0 = D_0 = \frac{1}{T_0}$$
  
 $C_n = 2|D_n| = \frac{2}{T_0}$   $n = 1, 2, 3, ...$   
 $\theta_n = 0$ 

Figure 6.15c shows the trigonometric Fourier spectrum. From this spectrum we can express  $\delta_{T_0}(t)$  as


$$\delta_{T_0}(t) = \frac{1}{T_0} \left[ 1 + 2(\cos \omega_0 t + \cos 2\omega_0 t + \cos 3\omega_0 t + \cdots) \right] \qquad \omega_0 = \frac{2\pi}{T_0} \tag{6.25}$$

# **EFFECT OF SYMMETRY IN EXPONENTIAL FOURIER SERIES**

When x(t) has an even symmetry,  $b_n = 0$ , and from Eq. (6.20),  $D_n = a_n/2$ , which is real (positive or negative). Hence,  $\angle D_n$  can only be 0 or  $\pm \pi$ . Moreover, we may compute  $D_n = a_n/2$  by using Eq. (6.14), which requires integration over a half-period only. Similarly, when x(t) has an odd symmetry,  $a_n = 0$ , and  $D_n = -jb_n/2$  is imaginary (positive or negative). Hence,  $\angle D_n$  can only be 0 or  $\pm \pi/2$ . Moreover, we may compute  $D_n = -jb_n/2$  by using Eq. (6.15), which requires integration over a half-period only. Note, however, that in the exponential case, we are using the symmetry property indirectly by finding the trigonometric coefficients. We cannot apply it directly in finding  $D_n$  from Eq. (6.19) since the function  $e^{jn\omega_0 t}$  is neither even nor odd.

# DRILL 6.4 Relating Trigonometric to Exponential Fourier Series Spectra


The exponential Fourier spectra of a certain periodic signal x(t) are shown in Fig. 6.16. Determine and sketch the trigonometric Fourier spectra of x(t) by inspection of Fig. 6.16. Now write the (compact) trigonometric Fourier series for x(t).

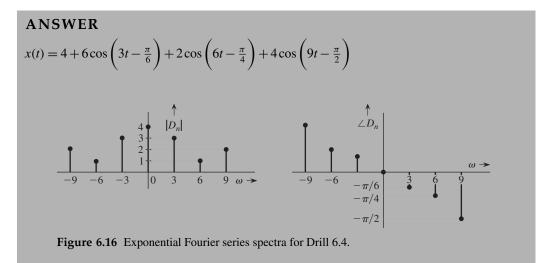

# **DRILL 6.5** Fourier Series Spectrum of a Full-Wave Rectified Sine Wave

Find the exponential Fourier series and sketch the corresponding Fourier spectrum  $D_n$  versus  $\omega$  for the full-wave rectified sine wave depicted in Fig. 6.17.

# ANSWER

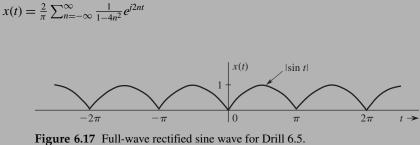

rigule 0.17 Tull-wave rectified sine wave for Diff 0.5.

# **DRILL 6.6 Exponential Fourier Series and Spectra**

Find the exponential Fourier series and sketch the corresponding Fourier spectra for the periodic signals shown in Fig. 6.7.

ANSWERS  
(a) 
$$x(t) = \frac{1}{3} + \frac{2}{\pi^2} \sum_{n=-\infty}^{\infty} \frac{(-1)^n}{n^2} e^{jn\pi t}$$
  
(b)  $x(t) = \frac{jA}{\pi} \sum_{n=-\infty}^{\infty} \frac{(-1)^n}{n} e^{jn\pi t}$ 

# 6.3-2 Parseval's Theorem

The trigonometric Fourier series of a periodic signal x(t) is given by

$$x(t) = C_0 + \sum_{n=1}^{\infty} C_n \cos(n\omega_0 t + \theta_n)$$

Every term on the right-hand side of this equation is a power signal. As shown in Ex. 1.2, Eq. (1.3), the power of x(t) is equal to the sum of the powers of all the sinusoidal components on the right-hand side.

$$P_x = C_0^2 + \frac{1}{2} \sum_{n=1}^{\infty} C_n^2$$
(6.26)

This result is one form of *Parseval's theorem*, as applied to power signals. It states that the power of a periodic signal is equal to the sum of the powers of its Fourier components.

We can apply the same argument to the exponential Fourier series (see Prob. 1.1-11). The power of a periodic signal x(t) can be expressed as a sum of the powers of its exponential components. In Eq. (1.4), we showed that the power of an exponential  $De^{j\omega_0 t}$  is  $|D^2|$ . We can use this result to express the power of a periodic signal x(t) in terms of its exponential Fourier series coefficients as


$$P_x = \sum_{n=-\infty}^{\infty} |D_n|^2 \tag{6.27}$$

For a real x(t),  $|D_{-n}| = |D_n|$ . Therefore,

$$P_x = D_0^2 + 2\sum_{n=1}^{\infty} |D_n|^2$$
(6.28)

# **EXAMPLE 6.10 Harmonic Distortion of Clipped Sinusoid**

The input signal to an audio amplifier of gain 100 is given by  $x(t) = 0.1 \cos \omega_0 t$ . Hence, the output is a sinusoid 10 cos  $\omega_0 t$ . However, the amplifier, being nonlinear at higher amplitude levels, clips all amplitudes beyond  $\pm 8$  volts, as shown in Fig. 6.18a. We shall determine the harmonic distortion incurred in this operation.

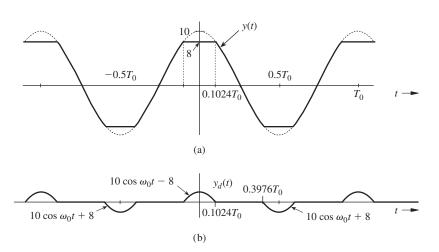

**Figure 6.18** (a) A clipped sinusoid  $\cos \omega_0 t$ . (b) The distortion component  $x_d(t)$  of the signal in (a).

The output y(t) is the clipped signal in Fig. 6.18a. The distortion signal  $y_d(t)$ , shown in Fig. 6.18b, is the difference between the undistorted sinusoid  $10\cos\omega_0 t$  and the output signal y(t). The signal  $y_d(t)$ , whose period is  $T_0$  [the same as that of y(t)], can be described over the first cycle as

$$y_d(t) = \begin{cases} 10\cos\omega_0 t - 8 & |t| \le 0.1024T_0\\ 10\cos\omega_0 t + 8 & \frac{T_0}{2} - 0.1024T_0 \le |t| \le \frac{T_0}{2} + 0.1024T_0\\ 0 & \text{everywhere else} \end{cases}$$

Observe that  $y_d(t)$  is an even function of t and its mean value is zero. Hence,  $a_0 = C_0 = 0$ , and  $b_n = 0$ . Thus,  $C_n = a_n$  and the Fourier series for  $y_d(t)$  can be expressed as

$$y_d(t) = \sum_{n=1}^{\infty} C_n \cos n\omega_0 t$$

As usual, we can compute the coefficients  $C_n$  (which is equal to  $a_n$ ) by integrating  $y_d(t) \cos n\omega_0 t$  over one cycle (and then dividing by  $2/T_0$ ). Because  $y_d(t)$  has even symmetry, we can find  $a_n$  by integrating the expression over a half-cycle only using Eq. (6.14). The

straightforward evaluation of the appropriate integral yields<sup>†</sup>

$$C_n = \begin{cases} \frac{20}{\pi} \left[ \frac{\sin[0.6435(n+1)]}{n+1} + \frac{\sin[0.6435(n-1)]}{n-1} \right] - \frac{32}{\pi} \left[ \frac{\sin(0.6435n)}{n} \right] & n \text{ odd} \\ n \text{ even} \end{cases}$$

Computing the coefficients  $C_1, C_2, C_3, \ldots$  from this expression, we can write

 $y_d(t) = 1.04 \cos \omega_0 t + 0.733 \cos 3\omega_0 t + 0.311 \cos 5\omega_0 t + \cdots$ 

# COMPUTING HARMONIC DISTORTION

We can compute the amount of harmonic distortion in the output signal by computing the power of the distortion component  $y_d(t)$ . Because  $y_d(t)$  is an even function of t and because the energy in the first half-cycle is identical to the energy in the second half-cycle, we can compute the power by averaging the energy over a quarter-cycle. Thus,

$$P_{y_d} = \frac{1}{T_0} \int_{-T_0/2}^{T_0/2} y_d^2(t) dt = \frac{1}{T_0/4} \int_0^{T_0/4} y_d^2(t) dt$$
$$= \frac{4}{T_0} \int_0^{0.1024T_0} (10\cos\omega_0 t - 8)^2 dt = 0.865$$

The power of the desired signal  $10\cos\omega_0 t$  is  $(10)^2/2 = 50$ . Hence, the total harmonic distortion is<sup>‡</sup>

$$D_{\rm tot} = \frac{0.865}{50} \times 100 = 1.73\%$$

The power of the third harmonic components of  $y_d(t)$  is  $(0.733)^2/2 = 0.2686$ . The third harmonic distortion is

$$D_3 = \frac{0.2686}{50} \times 100 = 0.5372\%$$

$$C_n = a_n = \frac{8}{T_0} \int_0^{0.1024T_0} [10\cos\omega_0 t - 8]\cos n\omega_0 t \, dt$$

<sup>&</sup>lt;sup>†</sup> In addition,  $y_d(t)$  exhibits half-wave symmetry (see Prob. 6.1-6), where the second half-cycle is the negative of the first. Because of this property, all the even harmonics vanish, and the odd harmonics can be computed by integrating the appropriate expressions over the first half-cycle only (from  $-T_0/4$  to  $T_0/4$ ) and doubling the resulting values. Moreover, because of even symmetry, we can integrate the appropriate expressions over 0 to  $T_0/4$  (instead of from  $-T_0/4$  to  $T_0/4$ ) and double the resulting values. In essence, this allows us to compute  $C_n$  by integrating the expression over the quarter-cycle only and then quadrupling the resulting values. Thus,

<sup>&</sup>lt;sup>‡</sup> In the literature, the harmonic distortion often refers to the rms distortion rather than the power distortion. The rms values are the square-root values of the corresponding powers. Thus, the third harmonic distortion in this sense is  $\sqrt{(0.2686/50)} \times 100 = 7.33\%$ . Alternately, we may also compute this value directly from the amplitudes of the third harmonic 0.733 and that of the fundamental as 10. The ratio of the rms values is  $(0.733/\sqrt{2}): (10/\sqrt{2}) = 0.0733$  and the percentage distortion is 7.33\%.

# **6.3-3** Properties of the Fourier Series

As with the Laplace and *z*-transforms, the Fourier series has a variety of properties that can simplify work and help provide a more intuitive understanding of signals. Table 6.2 provides the most important properties of the Fourier series for a periodic signal x(t) and its spectrum  $D_n$ . Properties that involve two signals require that the two signals have a common fundamental frequency  $\omega_0$ . While not given here, the proofs of these properties are straightforward and parallel the proofs of the Fourier transform properties given in Ch. 7.

To demonstrate the utility of Fourier series properties, let us consider an example where we use a selection of properties to simplify the work of finding a piecewise polynomial signal's spectrum.

Operation	x(t)	$D_n$
Scalar multiplication	kx(t)	$kD_n$
Addition	$x_1(t) + x_2(t)$	$D_{1,n} + D_{2,n}$
	$x_1(t), x_2(t)$ require same $\omega_0$	
Conjugation	$x^*(t)$	$D^*_{-n}$
Reversal	x(-t)	$D_{-n}^{n}$
Time shifting	$x(t-t_0)$	$D_n e^{-jn\omega_0 t_0}$
Frequency shifting	$x(t)e^{jn_0\omega_0t}$	$D_{n-n_0}$
Frequency convolution	$x_1(t)x_2(t)$	$D_{1,n} * D_{2,n}$
	$x_1(t), x_2(t)$ require same $\omega_0$	
Time differentiation	$\frac{d^k x(t)}{dt^k}$	$(jn\omega_0)^k D_n$

 TABLE 6.2
 Selected Fourier Series Properties

# **EXAMPLE 6.11** Using Fourier Series Properties

Use properties rather than integration to compute the exponential Fourier series coefficients  $D_n$  of the triangular signal x(t) shown in Fig. 6.4. Verify the correctness of  $D_n$  for A = 1 by synthesizing x(t) with a suitable truncation of Eq. (6.19).

From Fig. 6.4, we see that x(t) is a piecewise linear function that is  $T_0 = 2$  periodic. To compute  $D_n$  directly using Eq. (6.19) would therefore require tedious integration by parts. Fortunately, we can compute  $D_n$  without integration by instead using Fourier series properties. First, however, we must compute the dc component  $D_0$  separately from other  $D_n$ . By simple inspection of Fig. 6.4, we see that x(t) has no dc component, so  $D_0 = 0$ .

To determine the remaining  $D_n$ , we begin by noting that x(t) has a constant slope of either 2A or -2A. Thus, differentiating x(t) once yields a square wave with amplitudes  $\pm 2A$ . Here, differentiation reduces x(t) from a piecewise linear to a piecewise constant function,

thereby eliminating the need for integration by parts.<sup>†</sup> Differentiating x(t) twice yields a pair of shifted impulse trains, weighted by  $\pm 4A$ . This second differentiation eliminates the need for any integration whatsoever, since the Fourier series coefficients of an impulse train are known to be  $\frac{1}{T_0}$  (see Ex. 6.9).

Stated mathematically, we see that

636

$$\frac{d^2}{dt^2}x(t) = 4A\delta_2(t+\frac{1}{2}) - 4A\delta_2(t-\frac{1}{2})$$

Transforming this expression and using the Fourier series properties of scalar multiplication, addition, frequency shifting, and time differentiation yield (for  $n \neq 0$ )

$$(jn\pi)^2 D_n = 4A \frac{e^{jn\omega_0/2}}{2} - 4A \frac{e^{-jn\omega_0/2}}{2}$$

Substituting  $\omega_0 = 2\pi/T_0 = \pi$  and solving for  $D_n$  yield

$$D_n = 4A \frac{e^{jn\pi/2} - e^{-jn\pi/2}}{-2n^2\pi^2}$$

Combining with the dc component and simplifying expressions, the final result is

$$D_n = \begin{cases} 0 & n = 0\\ \frac{-A4j\sin(n\pi/2)}{n^2\pi^2} & n \neq 0 \end{cases}$$

Overall, this is a neat way to determine the signal's spectrum. Through the selective use of properties, we have determined  $D_n$  without any integration. With a little care, this basic approach can yield the spectrum of *any piecewise polynomial periodic function*. Since all periodic functions of practical interest to engineers can, to an arbitrary level of accuracy, be represented as piecewise polynomial functions, we can always find their spectra without integration except for the dc term  $D_0$ .

# USING A TRUNCATED FOURIER SERIES TO VERIFY SPECTRUM CORRECTNESS

While a signal's spectrum  $D_n$  provides useful insight into signal character, it can be difficult to look at  $D_n$  and know that it is correct for a particular signal x(t). For example, is it at all obvious that  $D_n = \frac{4Aj\sin(n\pi/2)}{-n^2\pi^2}$  is the spectrum for the triangle wave of Fig. 6.4? Probably not.

There is an easy way, however, to verify a signal's spectrum: synthesize x(t) using a suitable truncation of Eq. (6.19). If the synthesized signal closely matches the original, we can be relatively certain that the spectrum  $D_n$  is correct. What is a suitable truncation? Well, it depends. All significant  $D_n$  terms need to be included, but not so many as to make the reconstruction impractical to compute. Since in the present case  $D_n$  decays at a rate  $1/n^2$ , a good approximation is possible with a relatively few number of terms; a 10-harmonic truncation should be just fine. Let us use MATLAB to synthesize x(t) using a 10-harmonic truncated Fourier series.

<sup>&</sup>lt;sup>†</sup> Differentiation also destroys the dc component of the signal, providing further justification as to why the dc component needs to be separately computed.

To begin, we define A,  $D_n$ ,  $T_0$ ,  $\omega_0$ , and a time vector that spans two periods of the waveform.

```
>> A = 1; D = @(n) -A*4j*sin(n*pi/2)./(n.^2*pi^2);
>> T0 = 2; omega0 = 2*pi/T0; t = (-T0:.001:T0);
```

Next, we set the dc portion of the signal.

>> D0 = 0; x10 = D0\*ones(size(t));


To add the desired 10 harmonics, we enter a loop for  $1 \le n \le 10$  and add in the  $D_n$  and  $D_{-n}$  terms. Although x(t) should be real, small round-off errors cause the reconstruction to be complex. These small imaginary parts are removed using the real command.

```
>> for n = 1:10,
>> x10 = x10+real(D(n)*exp(1j*omega0*n*t)+D(-n)*exp(-1j*omega0*n*t));
>> end
```

Lastly, we plot the resulting truncated Fourier series synthesis of x(t).

>> plot(t,x10,'k'); xlabel('t'); ylabel('x\_{10}(t)');

Since the synthesized waveform shown in Fig. 6.19 closely matches the original waveform in Fig. 6.4, we have high confidence that the computed  $D_n$  are correct.

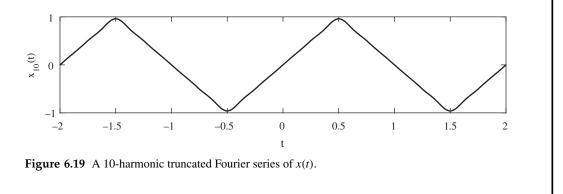

# 6.4 LTIC System Response to Periodic Inputs

A periodic signal can be expressed as a sum of everlasting exponentials (or sinusoids). We also know how to find the response of an LTIC system to an everlasting exponential. From this information, we can readily determine the response of an LTIC system to periodic inputs. A periodic signal x(t) with period  $T_0$  can be expressed as an exponential Fourier series

$$x(t) = \sum_{n=-\infty}^{\infty} D_n e^{jn\omega_0 t} \qquad \omega_0 = \frac{2\pi}{T_0}$$

637

In Sec. 4.8, we showed that the response of an LTIC system with transfer function H(s) to an everlasting exponential input  $e^{j\omega t}$  is an everlasting exponential  $H(j\omega)e^{j\omega t}$ . This input–output pair can be displayed as<sup>†</sup>

$$\underbrace{e^{j\omega t}}_{\text{input}} \Longrightarrow \underbrace{H(j\omega)e^{j\omega t}}_{\text{output}}$$

Therefore, from the linearity property,

$$\underbrace{\sum_{n=-\infty}^{\infty} D_n e^{jn\omega_0 t}}_{\text{input } x(t)} \Longrightarrow \underbrace{\sum_{n=-\infty}^{\infty} D_n H(jn\omega_0) e^{jn\omega_0 t}}_{\text{response } y(t)}$$
(6.29)

The response y(t) is obtained in the form of an exponential Fourier series and is therefore a periodic signal of the same period as that of the input.

We shall demonstrate the utility of these results by the following example.

# **EXAMPLE 6.12** Full-Wave Rectifier

A full-wave rectifier (Fig. 6.20a) is used to obtain a dc signal from a sinusoid sin *t*. The rectified signal x(t), depicted in Fig. 6.17, is applied to the input of a lowpass *RC* filter, which suppresses the time-varying component and yields a dc component with some residual ripple. Find the filter output y(t). Find also the dc output and the rms value of the ripple voltage.

First, we shall find the Fourier series for the rectified signal x(t), whose period is  $T_0 = \pi$ . Consequently,  $\omega_0 = 2$ , and

$$x(t) = \sum_{n=-\infty}^{\infty} D_n e^{j2nt}$$

where

$$D_n = \frac{1}{\pi} \int_0^{\pi} \sin t \, e^{-j2nt} \, dt = \frac{2}{\pi (1 - 4n^2)} \tag{6.30}$$

Therefore,

$$x(t) = \sum_{n = -\infty}^{\infty} \frac{2}{\pi (1 - 4n^2)} e^{j2n}$$

<sup>&</sup>lt;sup>†</sup> This result applies only to asymptotically stable systems. This is because when  $s = j\omega$ , the integral on the right-hand side of Eq. (2.39) does not converge for unstable systems. Moreover, for marginally stable systems also, that integral does not converge in the ordinary sense, and  $H(j\omega)$  cannot be obtained from H(s) by replacing s with  $j\omega$ .

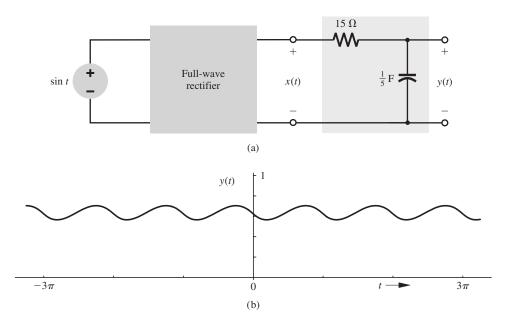


Figure 6.20 (a) Full-wave rectifier with a lowpass filter and (b) its output.

Next, we find the transfer function of the *RC* filter in Fig. 6.20a. This filter is identical to the *RC* circuit in Ex. 1.17 (Fig. 1.35) for which the differential equation relating the output (capacitor voltage) to the input x(t) was found to be [Eq. (1.31)]:

$$(3D+1)y(t) = x(t)$$

The transfer function H(s) for this system is found from Eq. (2.41) as

$$H(s) = \frac{1}{3s+1}$$

and

$$H(j\omega) = \frac{1}{3j\omega + 1} \tag{6.31}$$

From Eq. (6.29), the filter output y(t) can be expressed as (with  $\omega_0 = 2$ )

$$y(t) = \sum_{n=-\infty}^{\infty} D_n H(jn\omega_0) e^{jn\omega_0 t} = \sum_{n=-\infty}^{\infty} D_n H(j2n) e^{j2nt}$$

Substituting  $D_n$  and H(j2n) from Eqs. (6.30) and (6.31) in the foregoing equation, we obtain

$$y(t) = \sum_{n = -\infty}^{\infty} \frac{2}{\pi (1 - 4n^2)(j6n + 1)} e^{j2nt}$$

Note that the output y(t) is also a periodic signal given by the exponential Fourier series on the right-hand side. The output is shown in Fig. 6.20b.

The output Fourier series coefficient corresponding to n = 0 is the dc component of the output, given by  $2/\pi$ . The remaining terms in the Fourier series constitute the unwanted component called the ripple. We can determine the rms value of the ripple voltage by using Eq. (6.27) to find the power of the ripple component. The power of the ripple is the power of all the components except the dc (n = 0). Note that  $\hat{D}_n$ , the exponential Fourier coefficient for the output y(t), is

$$\hat{D}_n = \frac{2}{\pi (1 - 4n^2)(j6n + 1)}$$

Therefore, from Eq. (6.28), we have

$$P_{\text{ripple}} = 2\sum_{n=1}^{\infty} |D_n|^2 = 2\sum_{n=1}^{\infty} \left| \frac{2}{\pi (1 - 4n^2)(j6n + 1)} \right|^2 = \frac{8}{\pi^2} \sum_{n=1}^{\infty} \frac{1}{(1 - 4n^2)^2 (36n^2 + 1)}$$

Numerical computation of the right-hand side yields  $P_{\text{ripple}} = 0.0025$ , and the ripple rms value =  $\sqrt{P_{\text{ripple}}} = 0.05$ . This shows that the rms ripple voltage is 5% of the amplitude of the input sinusoid.

# WHY USE EXPONENTIALS?

The exponential Fourier series is just another way of representing trigonometric Fourier series (or vice versa). The two forms carry identical information—no more, no less. The reasons for preferring the exponential form have already been mentioned: this form is more compact, and the expression for deriving the exponential coefficients is also more compact than those in the trigonometric series. Furthermore, the LTIC system response to exponential signals is also simpler (more compact) than the system response to sinusoids. In addition, the exponential form proves to be much easier than the trigonometric form to manipulate mathematically and otherwise handle in the area of signals as well as systems. Moreover, exponential representation proves much more convenient for analysis of complex x(t). For these reasons, in our future discussion we shall use the exponential form exclusively.

A minor disadvantage of the exponential form is that it cannot be visualized as easily as sinusoids. For intuitive and qualitative understanding, the sinusoids have the edge over exponentials. Fortunately, this difficulty can be overcome readily because of the close connection between exponential and Fourier spectra. For the purpose of mathematical analysis, we shall continue to use exponential signals and spectra; but to understand the physical situation intuitively or qualitatively, we shall speak in terms of sinusoids and trigonometric spectra. Thus, although all mathematical manipulation will be in terms of exponential spectra, we shall now speak of exponential and sinusoids interchangeably when we discuss intuitive and qualitative insights in attempting to arrive at an understanding of physical situations. This is an important point; readers should make an extra effort to familiarize themselves with the two forms of spectra, their relationships, and their convertibility.

# DUAL PERSONALITY OF A SIGNAL

The discussion so far shows that a periodic signal has a dual personality—the time domain and the frequency domain. It can be described by its waveform or by its Fourier spectra. The timeand frequency-domain descriptions provide complementary insights into a signal. For in-depth perspective, we need to understand both these identities. It is important to learn to think of a signal from both perspectives. In the next chapter, we shall see that aperiodic signals also have this dual personality. Moreover, we shall show that even LTI systems have this dual personality, which offers complementary insights into the system behavior.

# LIMITATIONS OF THE FOURIER SERIES METHOD OF ANALYSIS

We have developed here a method of representing a periodic signal as a weighted sum of everlasting exponentials whose frequencies lie along the  $\omega$  axis in the *s* plane. This representation (Fourier series) is valuable in many applications. However, as a tool for analyzing linear systems, it has serious limitations and consequently has limited utility for the following reasons:

- 1. The Fourier series can be used only for periodic inputs. All practical inputs are aperiodic (remember that a periodic signal starts at  $t = -\infty$ ).
- 2. The Fourier methods can be applied readily to BIBO-stable (or asymptotically stable) systems. It cannot handle unstable or even marginally stable systems.

The first limitation can be overcome by representing aperiodic signals in terms of everlasting exponentials. This representation can be achieved through the Fourier integral, which may be considered to be an extension of the Fourier series. We shall therefore use the Fourier series as a stepping-stone to the Fourier integral developed in the next chapter. The second limitation can be overcome by using exponentials  $e^{st}$ , where *s* is not restricted to the imaginary axis but is free to take on complex values. This generalization leads to the Laplace integral, discussed in Ch. 4 (the Laplace transform).

# 6.5 GENERALIZED FOURIER SERIES: SIGNALS AS VECTORS

We now consider a very general approach to signal representation with far-reaching consequences.<sup>†</sup> There is a perfect analogy between signals and vectors; the analogy is so strong that the term *analogy* understates the reality. Signals are not just *like* vectors. Signals *are* vectors! A vector can be represented as a sum of its components in a variety of ways, depending on the choice of coordinate system. A signal can also be represented as a sum of its components in a variety of ways. Let us begin with some basic vector concepts and then apply these concepts to signals.

<sup>&</sup>lt;sup>†</sup> This section closely follows the material from the author's earlier book [10]. Omission of this section will not cause any discontinuity in understanding the rest of the book. Derivation of Fourier series through the signal-vector analogy provides an interesting insight into signal representation and other topics such as signal correlation, data truncation, and signal detection.

### 6.5-1 Component of a Vector

A vector is specified by its magnitude and its direction. We shall denote all vectors by boldface. For example,  $\mathbf{x}$  is a certain vector with magnitude or length  $|\mathbf{x}|$ . For the two vectors  $\mathbf{x}$  and  $\mathbf{y}$  shown in Fig. 6.21, we define their dot (inner or scalar) product as

$$\mathbf{x} \cdot \mathbf{y} = |\mathbf{x}| |\mathbf{y}| \cos \theta$$

where  $\theta$  is the angle between these vectors. Using this definition, we can express  $|\mathbf{x}|$ , the length of a vector  $\mathbf{x}$ , as

$$|\mathbf{x}|^2 = \mathbf{x} \cdot \mathbf{x}$$

Let the component of  $\mathbf{x}$  along  $\mathbf{y}$  be  $c\mathbf{y}$  as depicted in Fig. 6.21. Geometrically, the component of  $\mathbf{x}$  along  $\mathbf{y}$  is the projection of  $\mathbf{x}$  on  $\mathbf{y}$  and is obtained by drawing a perpendicular from the tip of  $\mathbf{x}$  on the vector  $\mathbf{y}$ , as illustrated in Fig. 6.21. What is the mathematical significance of a component of a vector along another vector? As seen from Fig. 6.21, the vector  $\mathbf{x}$  can be expressed in terms of vector  $\mathbf{y}$  as

$$\mathbf{x} = c\mathbf{y} + \mathbf{e}$$

However, this is not the only way to express  $\mathbf{x}$  in terms of  $\mathbf{y}$ . From Fig. 6.22, which shows two of the infinite other possibilities, we have

$$\mathbf{x} = c_1 \mathbf{y} + \mathbf{e}_1 = c_2 \mathbf{y} + \mathbf{e}_2$$

In each of these three representations,  $\mathbf{x}$  is represented in terms of  $\mathbf{y}$  plus another vector called the *error vector*. If we approximate  $\mathbf{x}$  by  $c\mathbf{y}$ ,

$$\mathbf{x} \simeq c\mathbf{y}$$

the error in the approximation is the vector  $\mathbf{e} = \mathbf{x} - c\mathbf{y}$ . Similarly, the errors in approximations in these drawings are  $\mathbf{e}_1$  (Fig. 6.22a) and  $\mathbf{e}_2$  (Fig. 6.22b). What is unique about the approximation in Fig. 6.21 is that the error vector is the smallest. We can now define mathematically the component of a vector  $\mathbf{x}$  along vector  $\mathbf{y}$  to be  $c\mathbf{y}$  where c is chosen to minimize the length of the error vector  $\mathbf{e} = \mathbf{x} - c\mathbf{y}$ . Now, the length of the component of  $\mathbf{x}$  along  $\mathbf{y}$  is  $|\mathbf{x}| \cos \theta$ . But it is also  $c|\mathbf{y}|$ , as seen from Fig. 6.21. Therefore,

$$c|\mathbf{y}| = |\mathbf{x}|\cos\theta$$

Multiplying both sides by  $|\mathbf{y}|$  yields

$$c|\mathbf{y}|^2 = |\mathbf{x}||\mathbf{y}|\cos\theta = \mathbf{x}\cdot\mathbf{y}$$

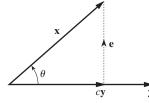


Figure 6.21 Component (projection) of a vector along another vector.

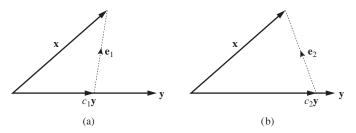


Figure 6.22 Approximation of a vector in terms of another vector.

Therefore,

$$c = \frac{\mathbf{x} \cdot \mathbf{y}}{\mathbf{y} \cdot \mathbf{y}} = \frac{1}{|\mathbf{y}|^2} \mathbf{x} \cdot \mathbf{y}$$
(6.32)

From Fig. 6.21, it is apparent that when **x** and **y** are perpendicular, or orthogonal, then **x** has a zero component along **y**; consequently, c = 0. Keeping an eye on Eq. (6.32), we therefore define **x** and **y** to be *orthogonal* if the inner (scalar or dot) product of the two vectors is zero, that is, if

 $\mathbf{x} \cdot \mathbf{y} = 0$ 

# 6.5-2 Signal Comparison and Component of a Signal

The concept of a vector component and orthogonality can be extended to signals. Consider the problem of approximating a real signal x(t) in terms of another real signal y(t) over an interval  $(t_1, t_2)$ :

$$\kappa(t) \simeq cy(t) \qquad t_1 < t < t_2$$

The error e(t) in this approximation is

$$e(t) = \begin{cases} x(t) - cy(t) & t_1 < t < t_2 \\ 0 & \text{otherwise} \end{cases}$$

We now select a criterion for the "best approximation." We know that the signal energy is one possible measure of a signal size. For best approximation, we shall use the criterion that minimizes the size or energy of the error signal e(t) over the interval  $(t_1, t_2)$ . This energy  $E_e$  is given by

$$E_e = \int_{t_1}^{t_2} e^2(t) dt = \int_{t_1}^{t_2} [x(t) - cy(t)]^2 dt$$

Note that the right-hand side is a definite integral with t as the dummy variable. Hence,  $E_e$  is a function of the parameter c (not t) and  $E_e$  is minimum for some choice of c. To minimize  $E_e$ , a necessary condition is

$$\frac{dE_e}{dc} = 0$$
$$\frac{d}{dc} \left[ \int_{t_1}^{t_2} [x(t) - cy(t)]^2 dt \right] = 0$$

or

Expanding the squared term inside the integral, we obtain

$$\frac{d}{dc} \left[ \int_{t_1}^{t_2} x^2(t) \, dt \right] - \frac{d}{dc} \left[ 2c \int_{t_1}^{t_2} x(t) y(t) \, dt \right] + \frac{d}{dc} \left[ c^2 \int_{t_1}^{t_2} y^2(t) \, dt \right] = 0$$

from which we get

$$-2\int_{t_1}^{t_2} x(t)y(t) dt + 2c\int_{t_1}^{t_2} y^2(t) dt = 0$$

$$c = \frac{\int_{t_1}^{t_2} x(t)y(t) dt}{\int_{t_1}^{t_2} y^2(t) dt} = \frac{1}{E_y}\int_{t_1}^{t_2} x(t)y(t) dt$$
(6.33)

We observe a remarkable similarity between the behavior of vectors and signals, as indicated by Eqs. (6.32) and (6.33). It is evident from these two parallel expressions that *the area under the product of two signals corresponds to the inner (scalar or dot) product of two vectors*. In fact, the area under the product of x(t) and y(t) is called the *inner product* of x(t) and y(t), and is denoted by (x, y). The energy of a signal is the inner product of a signal with itself, and corresponds to the vector length square (which is the inner product of the vector with itself).

To summarize our discussion, if a signal x(t) is approximated by another signal y(t) as

 $x(t) \simeq cy(t)$ 

then the optimum value of c that minimizes the energy of the error signal in this approximation is given by Eq. (6.33).

Taking our clue from vectors, we say that a signal x(t) contains a component cy(t), where *c* is given by Eq. (6.33). Note that in vector terminology, cy(t) is the projection of x(t) on y(t). Continuing with the analogy, we say that if the component of a signal x(t) of the form y(t) is zero (i.e., c = 0), the signals x(t) and y(t) are orthogonal over the interval  $(t_1, t_2)$ . Therefore, we define the real signals x(t) and y(t) to be orthogonal over the interval  $(t_1, t_2)$  if<sup>†</sup>

$$\int_{t_1}^{t_2} x(t)y(t) \, dt = 0 \tag{6.34}$$

# **EXAMPLE 6.13** Sine-Wave Approximation of a Square Wave

For the square signal x(t) shown in Fig. 6.23, find the component in x(t) of the form sin t. In other words, approximate x(t) in terms of sin t

 $x(t) \simeq c \sin t \qquad 0 < t < 2\pi$ 

so that the energy of the error signal is minimum.

<sup>&</sup>lt;sup>†</sup> For complex signals, the definition is modified as in Eq. (6.37), in Sec. 6.5-3.

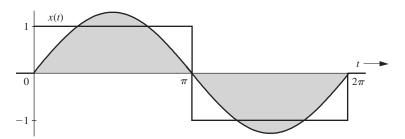


Figure 6.23 Approximation of a square wave in terms of a single sinusoid.

In this case,

$$y(t) = \sin t$$
 and  $E_y = \int_0^{2\pi} \sin^2(t) dt = \pi$ 

From Eq. (6.33), we find

$$c = \frac{1}{\pi} \int_0^{2\pi} x(t) \sin t \, dt = \frac{1}{\pi} \left[ \int_0^{\pi} \sin t \, dt + \int_{\pi}^{2\pi} -\sin t \, dt \right] = \frac{4}{\pi}$$

Thus,

$$x(t) \simeq \frac{4}{\pi} \sin t$$

represents the best approximation of x(t) by the function  $\sin t$ , which will minimize the error energy. This sinusoidal component of x(t) is shaded in Fig. 6.23. By analogy with vectors, we say that the square function x(t) depicted in Fig. 6.23 has a component of signal  $\sin t$  and that the magnitude of this component is  $4/\pi$ .

# DRILL 6.7 Sine Wave Approximation of a Ramp Function

Show that over an interval  $(-\pi < t < \pi)$ , the "best" approximation of the signal x(t) = t in terms of the function  $\sin t$  is  $2\sin t$ . Verify that the error signal  $e(t) = t - 2\sin t$  is orthogonal to the signal  $\sin t$  over the interval  $-\pi < t < \pi$ . Sketch the signals t and  $2\sin t$  over the interval  $-\pi < t < \pi$ .

# 6.5-3 Extension to Complex Signals

So far we have restricted ourselves to real functions of t. To generalize the results to complex functions of t, consider again the problem of approximating a signal x(t) by a signal y(t) over an

645

interval ( $t_1 < t < t_2$ ):

$$x(t) \simeq cy(t)$$

where x(t) and y(t) now can be complex functions of t. Recall that the energy  $E_y$  of the complex signal y(t) over an interval  $(t_1, t_2)$  is

$$E_{y} = \int_{t_{1}}^{t_{2}} |y(t)|^{2} dt$$

In this case, both the coefficient c and the error

$$e(t) = x(t) - cy(t)$$

are complex (in general). For the "best" approximation, we choose c to minimize the energy  $E_e$  of the error signal e(t). Now,

$$E_e = \int_{t_1}^{t_2} |x(t) - cy(t)|^2 dt$$
(6.35)

Recall also that

$$|u+v|^{2} = (u+v)(u^{*}+v^{*}) = |u|^{2} + |v|^{2} + u^{*}v + uv^{*}$$
(6.36)

After some manipulation, we can use this result to rearrange Eq. (6.35) as

$$E_e = \int_{t_1}^{t_2} |x(t)|^2 dt - \left| \frac{1}{\sqrt{E_y}} \int_a^{t_2} x(t) y^*(t) dt \right|^2 + \left| c\sqrt{E_y} - \frac{1}{\sqrt{E_y}} \int_{t_1}^{t_2} x(t) y^*(t) dt \right|^2$$

Since the first two terms on the right-hand side are independent of c, it is clear that  $E_e$  is minimized by choosing c so that the third term on the right-hand side is zero. This yields

$$c = \frac{1}{E_y} \int_{t_1}^{t_2} x(t) y^*(t) \, dt$$

In light of this result, we need to redefine orthogonality for the complex case as follows: two complex functions  $x_1(t)$  and  $x_2(t)$  are orthogonal over an interval  $(t_1 < t < t_2)$  if

$$\int_{t_1}^{t_2} x_1(t) x_2^*(t) dt = 0 \quad \text{or} \quad \int_{t_1}^{t_2} x_1^*(t) x_2(t) dt = 0 \quad (6.37)$$

Either equality suffices. This is a general definition of orthogonality, which reduces to Eq. (6.34) when the functions are real.

# DRILL 6.8 Complex Exponential Approximation of a Square Wave

Show that over an interval  $(0 < t < 2\pi)$ , the "best" approximation of the square signal x(t) in Fig. 6.23 in terms of the signal  $e^{it}$  is given by  $(2/j\pi)e^{jt}$ . Verify that the error signal  $e(t) = x(t) - (2/j\pi)e^{jt}$  is orthogonal to the signal  $e^{jt}$ .

# ENERGY OF THE SUM OF ORTHOGONAL SIGNALS

We know that the square of the length of a sum of two orthogonal vectors is equal to the sum of the squares of the lengths of the two vectors. Thus, if vectors  $\mathbf{x}$  and  $\mathbf{y}$  are orthogonal, and if  $\mathbf{z} = \mathbf{x} + \mathbf{y}$ , then

$$|\mathbf{z}|^2 = |\mathbf{x}|^2 + |\mathbf{y}|^2$$

We have a similar result for signals. The energy of the sum of two orthogonal signals is equal to the sum of the energies of the two signals. Thus, if signals x(t) and y(t) are orthogonal over an interval  $(t_1, t_2)$ , and if z(t) = x(t) + y(t), then

$$E_z = E_x + E_y$$

We now prove this result for complex signals, of which real signals are a special case. From Eq. (6.36), it follows that

$$\int_{t_1}^{t_2} |x(t) + y(t)|^2 dt = \int_{t_1}^{t_2} |x(t)|^2 dt + \int_{t_1}^{t_2} |y(t)|^2 dt + \int_{t_1}^{t_2} x(t) y^*(t) dt + \int_{t_1}^{t_2} x^*(t) y(t) dt$$
$$= \int_{t_1}^{t_2} |x(t)|^2 dt + \int_{t_1}^{t_2} |y(t)|^2 dt$$

The last result follows from the fact that because of orthogonality, the two integrals of the products  $x(t)y^*(t)$  and  $x^*(t)y(t)$  are zero [see Eq. (6.37)]. This result can be extended to the sum of any number of mutually orthogonal signals.

## 6.5-4 Signal Representation by an Orthogonal Signal Set

In this section we show a way of representing a signal as a sum of orthogonal signals. Here again we can benefit from the insight gained from a similar problem in vectors. We know that a vector can be represented as a sum of orthogonal vectors, which form the coordinate system of a vector space. The problem in signals is analogous, and the results for signals are parallel to those for vectors. So, let us review the case of vector representation.

#### **ORTHOGONAL VECTOR SPACE**

Let us investigate a three-dimensional Cartesian vector space described by three mutually orthogonal vectors  $\mathbf{x}_1$ ,  $\mathbf{x}_2$ , and  $\mathbf{x}_3$ , as illustrated in Fig. 6.24. First, we shall seek to approximate a three-dimensional vector  $\mathbf{x}$  in terms of two mutually orthogonal vectors  $\mathbf{x}_1$  and  $\mathbf{x}_2$ :


$$\mathbf{x} \simeq c_1 \mathbf{x}_1 + c_2 \mathbf{x}_2$$

The error  $\mathbf{e}$  in this approximation is

$$\mathbf{e} = \mathbf{x} - (c_1 \mathbf{x}_1 + c_2 \mathbf{x}_2)$$

or

$$\mathbf{x} = c_1 \mathbf{x}_1 + c_2 \mathbf{x}_2 + \mathbf{e}$$

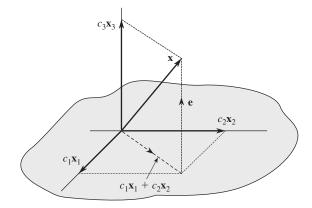

**Figure 6.24** Representation of a vector in three-dimensional space.

As in the earlier geometrical argument, we see from Fig. 6.24 that the length of **e** is minimum when **e** is perpendicular to the  $\mathbf{x}_1$ - $\mathbf{x}_2$  plane, and  $c_1\mathbf{x}_1$  and  $c_2\mathbf{x}_2$  are the projections (components) of **x** on  $\mathbf{x}_1$  and  $\mathbf{x}_2$ , respectively. Therefore, the constants  $c_1$  and  $c_2$  are given by Eq. (6.32). Observe that the error vector is orthogonal to both the vectors  $\mathbf{x}_1$  and  $\mathbf{x}_2$ .

Now, let us determine the "best" approximation to  $\mathbf{x}$  in terms of all three mutually orthogonal vectors  $\mathbf{x}_1$ ,  $\mathbf{x}_2$ , and  $\mathbf{x}_3$ :

$$\mathbf{x} \simeq c_1 \mathbf{x}_1 + c_2 \mathbf{x}_2 + c_3 \mathbf{x}_3 \tag{6.38}$$

Figure 6.24 shows that a unique choice of  $c_1$ ,  $c_2$ , and  $c_3$  exists, for which Eq. (6.38) is no longer an approximation but an equality

$$\mathbf{x} = c_1 \mathbf{x}_1 + c_2 \mathbf{x}_2 + c_3 \mathbf{x}_3$$

In this case,  $c_1 \mathbf{x}_1, c_2 \mathbf{x}_2$ , and  $c_3 \mathbf{x}_3$  are the projections (components) of  $\mathbf{x}$  on  $\mathbf{x}_1, \mathbf{x}_2$ , and  $\mathbf{x}_3$ , respectively; that is,

$$c_i = \frac{\mathbf{x} \cdot \mathbf{x}_i}{\mathbf{x}_i \cdot \mathbf{x}_i} = \frac{1}{|\mathbf{x}_i|^2} \mathbf{x} \cdot \mathbf{x}_i \qquad i = 1, 2, 3$$
(6.39)

Note that the error in the approximation is zero when **x** is approximated in terms of three mutually orthogonal vectors:  $\mathbf{x}_1$ ,  $\mathbf{x}_2$ , and  $\mathbf{x}_3$ . The reason is that **x** is a three-dimensional vector, and the vectors  $\mathbf{x}_1$ ,  $\mathbf{x}_2$ , and  $\mathbf{x}_3$  represent a *complete set* of orthogonal vectors in three-dimensional space. Completeness here means that it is impossible to find another vector  $\mathbf{x}_4$  in this space, which is orthogonal to all three vectors,  $\mathbf{x}_1$ ,  $\mathbf{x}_2$ , and  $\mathbf{x}_3$ . Any vector in this space can then be represented (with zero error) in terms of these three vectors. Such vectors are known as *basis* vectors. If a set of vectors { $\mathbf{x}_i$ } is not complete, the error in the approximation will generally not be zero. Thus, in the three-dimensional case discussed earlier, it is generally not possible to represent a vector  $\mathbf{x}$  in terms of only two basis vectors without an error.

The choice of basis vectors is not unique. In fact, a set of basis vectors corresponds to a particular choice of coordinate system. Thus, a three-dimensional vector  $\mathbf{x}$  may be represented in many different ways, depending on the coordinate system used.

# **ORTHOGONAL SIGNAL SPACE**

We start with real signals and then extend the discussion to complex signals. We proceed with our signal approximation problem, using clues and insights developed for vector approximation. As before, we define orthogonality of a real signal set  $x_1(t), x_2(t), \ldots, x_N(t)$  over interval  $(t_1, t_2)$  as

$$\int_{t_1}^{t_2} x_m(t) x_n(t) dt = \begin{cases} 0 & m \neq n \\ E_n & m = n \end{cases}$$
(6.40)

If the energies  $E_n = 1$  for all *n*, then the set is *normalized* and is called an *orthonormal set*. An orthogonal set can always be normalized by dividing  $x_n(t)$  by  $\sqrt{E_n}$  for all *n*.

Now, consider approximating a signal x(t) over the interval  $(t_1, t_2)$  by a set of N real, mutually orthogonal signals  $x_1(t), x_2(t), \ldots, x_N(t)$  as

$$x(t) \simeq c_1 x_1(t) + c_2 x_2(t) + \dots + c_N x_N(t) \simeq \sum_{n=1}^N c_n x_n(t)$$
 (6.41)

In the approximation of Eq. (6.41), the error e(t) is

$$e(t) = x(t) - \sum_{n=1}^{N} c_n x_n(t)$$

and  $E_e$ , the error signal energy, is

$$E_e = \int_{t_1}^{t_2} e^2(t) dt = \int_{t_1}^{t_2} \left[ x(t) - \sum_{n=1}^N c_n x_n(t) \right]^2 dt$$
(6.42)

According to our criterion for best approximation, we select the values of  $c_i$  that minimize  $E_e$ . Hence, the necessary condition is  $\partial E_e/dc_i = 0$  for i = 1, 2, ..., N, that is,

$$\frac{\partial}{\partial c_i} \int_{t_1}^{t_2} \left[ x(t) - \sum_{n=1}^N c_n x_n(t) \right]^2 dt = 0$$

When we expand the integrand, we find that all the cross-multiplication terms arising from the orthogonal signals are zero by virtue of orthogonality: that is, all terms of the form  $\int x_m(t)x_n(t) dt$  with  $m \neq n$  vanish. Similarly, the derivative with respect to  $c_i$  of all terms that do not contain  $c_i$  is zero. For each *i*, this leaves only two nonzero terms:

$$\frac{\partial}{\partial c_i} \int_{t_1}^{t_2} \left[ -2c_i x(t) x_i(t) + c_i^2 x_i^2(t) \right] dt = 0$$

$$-2\int_{t_1}^{t_2} x(t)x_i(t)\,dt + 2c_i\int_{t_1}^{t_2} x_i^2(t)\,dt = 0 \qquad i = 1, 2, \dots, N$$

Therefore,

$$c_{i} = \frac{\int_{t_{1}}^{t_{2}} x(t)x_{i}(t) dt}{\int_{t_{1}}^{t_{2}} x_{i}^{2}(t) dt} = \frac{1}{E_{i}} \int_{t_{1}}^{t_{2}} x(t)x_{i}(t) dt \qquad i = 1, 2, \dots, N$$
(6.43)

A comparison of Eq. (6.43) with Eq. (6.39) forcefully brings out the analogy of signals with vectors.

**Finality Property.** Equation (6.43) shows one interesting property of the coefficients of  $c_1$ ,  $c_2$ , ...,  $c_N$ : the optimum value of any coefficient in Eq. (6.41) is independent of the number of terms used in the approximation. For example, if we used only one term (N = 1) or two terms (N = 2) or any number of terms, the optimum value of the coefficient  $c_1$  would be the same [as given by Eq. (6.43)]. The advantage of this approximation of a signal x(t) by a set of mutually orthogonal signals is that we can continue to add terms to the approximation without disturbing the previous terms. This property of *finality* of the values of the coefficients is very important from a practical point of view.<sup>†</sup>

# ENERGY OF THE ERROR SIGNAL

When the coefficients  $c_i$  in Eq. (6.41) are chosen according to Eq. (6.43), the error signal energy is minimized. This minimum value of  $E_e$  is given by Eq. (6.42):

$$E_e = \int_{t_1}^{t_2} \left[ x(t) - \sum_{n=1}^{N} c_n x_n(t) \right]^2 dt$$
  
=  $\int_{t_1}^{t_2} x^2(t) dt + \sum_{n=1}^{N} c_n^2 \int_{t_1}^{t_2} x_n^2(t) dt - 2 \sum_{n=1}^{N} c_n \int_{t_1}^{t_2} x(t) x_n(t) dt$ 

$$x(t_1) = a_0 + a_1 t_1$$
 and  $x(t_2) = a_0 + a_1 t_2$ 

Solution of these equations yields the desired values of  $a_0$  and  $a_1$ . For a three-point approximation, we must choose the polynomial  $a_0 + a_1t + a_2t^2$  with

$$x(t_i) = a_0 + a_1 t_i + a_2 t_i^2$$
  $i = 1, 2, \text{ and } 3$ 

The approximation improves with a larger number of points (higher-order polynomial), but the coefficients  $a_0, a_1, a_2, \ldots$  do not have the finality property. Every time we increase the number of terms in the polynomial, we need to recalculate the coefficients.

650

<sup>&</sup>lt;sup>†</sup> Contrast this situation with a polynomial approximation of x(t). Suppose we wish to find a two-point approximation of x(t) by a polynomial in t; that is, the polynomial is to be equal to x(t) at two points  $t_1$  and  $t_2$ . This can be done by choosing a first-order polynomial  $a_0 + a_1 t$  with

Substitution of Eqs. (6.40) and (6.43) in this equation yields

$$E_e = \int_{t_1}^{t_2} x^2(t) dt + \sum_{n=1}^{N} c_n^2 E_n - 2 \sum_{n=1}^{N} c_n^2 E_n = \int_{t_1}^{t_2} x^2(t) dt - \sum_{n=1}^{N} c_n^2 E_n$$
(6.44)

Observe that because the term  $c_k^2 E_k$  is nonnegative, the error energy  $E_e$  generally decreases as N, the number of terms, is increased. Hence, it is possible that the error energy  $\rightarrow 0$  as  $N \rightarrow \infty$ . When this happens, the orthogonal signal set is said to be *complete*. In this case, Eq. (6.41) is no more an approximation but an equality

$$x(t) = c_1 x_1(t) + c_2 x_2(t) + \dots + c_n x_n(t) + \dots = \sum_{n=1}^{\infty} c_n x_n(t) \qquad t_1 < t < t_2$$
(6.45)

where the coefficients  $c_n$  are given by Eq. (6.43). Because the error signal energy approaches zero, it follows that the energy of x(t) is now equal to the sum of the energies of its orthogonal components  $c_1x_1(t), c_2x_2(t), c_3x_3(t), \ldots$ 

The series on the right-hand side of Eq. (6.45) is called the *generalized Fourier series* of x(t) with respect to the set  $\{x_n(t)\}$ . When the set  $\{x_n(t)\}$  is such that the error energy  $E_e \rightarrow 0$  as  $N \rightarrow \infty$  for every member of some particular class, we say that the set  $\{x_n(t)\}$  is complete on  $(t_1, t_2)$  for that class of x(t), and the set  $\{x_n(t)\}$  is called a set of *basis functions* or *basis signals*. Unless otherwise mentioned, in the future we shall consider only the class of energy signals.

Thus, when the set  $\{x_n(t)\}$  is complete, we have the equality of Eq. (6.45). One subtle point that must be understood clearly is the meaning of equality in Eq. (6.45). The equality here is not an equality in the ordinary sense, but in the sense that the error energy, that is, the energy of the difference between the two sides of Eq. (6.45), approaches zero. If the equality exists in the ordinary sense, the error energy is always zero, but the converse is not necessarily true. The error energy can approach zero even though e(t), the difference between the two sides, is nonzero at some isolated instants. The reason is that even if e(t) is nonzero at such instants, the area under  $e^2(t)$  is still zero; thus the Fourier series on the right-hand side of Eq. (6.45) may differ from x(t) at a finite number of points.

In Eq. (6.45), the energy of the left-hand side is  $E_x$ , and the energy of the right-hand side is the sum of the energies of all the orthogonal components.<sup>†</sup> Thus,

$$\int_{t_1}^{t_2} x^2(t) \, dt = c_1^2 E_1 + c_2^2 E_2 + \dots = \sum_{n=1}^{\infty} c_n^2 E_n \tag{6.46}$$

This is *Parseval's theorem* expressed for energy signals. In Eqs. (6.26) and (6.27), we have already encountered Parseval's theorem for power signals. Recall that the signal energy (area under the squared value of a signal) is analogous to the square of the length of a vector in the vector-signal analogy. In vector space, we know that the square of the length of a vector is equal to the sum of

<sup>&</sup>lt;sup>†</sup> Note that the energy of a signal cx(t) is  $c^2E_x$ .

the squares of the lengths of its orthogonal components. Parseval's theorem of Eq. (6.46) is the statement of this fact as it applies to signals.

### GENERALIZATION TO COMPLEX SIGNALS

The foregoing results can be generalized to complex signals as follows: a set of functions  $x_1(t)$ ,  $x_2(t)$ , ...,  $x_N(t)$  is mutually orthogonal over the interval  $(t_1, t_2)$  if

$$\int_{t_1}^{t_2} x_m(t) x_n^*(t) dt = \begin{cases} 0 & m \neq n \\ E_n & m = n \end{cases}$$

If this set is complete for a certain class of functions, then a function x(t) in this class can be expressed as

$$x(t) = c_1 x_1(t) + c_2 x_2(t) + \dots + c_i x_i(t) + \dots$$

where

$$c_n = \frac{1}{E_n} \int_{t_1}^{t_2} x(t) x_n^*(t) dt$$
(6.47)

# **EXAMPLE 6.14** Approximating a Square Wave with a Set of Harmonic Sine Waves

In Ex. 6.13, the square signal x(t) in Fig. 6.23 is approximated by a single sinusoid sin t. In this example, we approximate x(t) using the set of harmonic sine waves sin t, sin 2t, . . ., sin nt, . . ., and see how the approximation improves with the number of terms.

To begin, we note that the set of harmonic sine waves  $\sin t$ ,  $\sin 2t$ , ...,  $\sin nt$ , ... is orthogonal over any interval of duration  $2\pi$ .<sup>†</sup> The reader can verify this fact by showing that for any real number *a*,

$$\int_{a}^{a+2\pi} \sin mt \sin nt \, dt = \begin{cases} 0 & m \neq n \\ \pi & m = n \end{cases}$$
(6.48)

Using this set, we approximate x(t) as

 $x(t) \simeq c_1 \sin t + c_2 \sin 2t + \dots + c_n \sin Nt$ 

<sup>&</sup>lt;sup>†</sup> This sine set, along with the cosine set  $\cos 0t$ ,  $\cos t$ ,  $\cos 2t$ , ...,  $\cos nt$ , ..., forms a complete set. In this case, however, the coefficients  $c_i$  corresponding to the cosine terms are zero. For this reason, we have omitted cosine terms in this example. This composite sine and cosine set is the basis set for the trigonometric Fourier series.

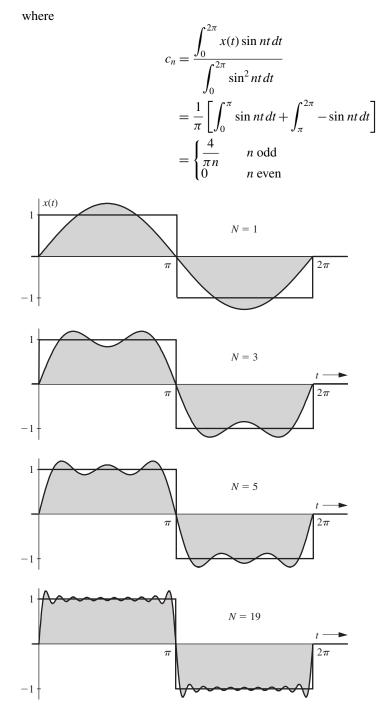


Figure 6.25 Approximation of a square wave by a sum of harmonic sinusoids.

Therefore,

654

$$x(t) \simeq \frac{4}{\pi} \left( \sin t + \frac{1}{3} \sin 3t + \frac{1}{5} \sin 5t + \dots + \frac{1}{N} \sin Nt \right)$$
(6.49)

Note that coefficients of terms  $\sin kt$  are zero for even values of k. Figure 6.25 shows how the approximation improves as we increase the number of terms in the series.

Let us investigate the error signal energy as  $N \rightarrow \infty$ . From Eq. (6.44),

$$E_e = \int_0^{2\pi} x^2(t) \, dt - \sum_{n=1}^\infty c_n^2 E_n$$

Note that

$$\int_0^{2\pi} x^2(t) dt = \int_0^{\pi} 1^2 dt + \int_{\pi}^{2\pi} -1^2 dt = 2\pi$$
$$c_n^2 = \begin{cases} \frac{16}{n^2 \pi^2} & n \text{ odd} \\ 0 & n \text{ even} \end{cases}$$

and from Eq. (6.48),

$$E_n = \pi$$

Therefore,

$$E_e = 2\pi - \sum_{n=1,3,5,\dots}^{N} \frac{16}{n^2 \pi^2} \pi = 2\pi - \frac{16}{\pi} \sum_{n=1,3,5,\dots}^{N} \frac{1}{n^2}$$

For a single-term approximation (N = 1),

$$E_e = 2\pi - \frac{16}{\pi} = 1.1938$$

For a two-term approximation (N = 3),

$$E_e = 2\pi - \frac{16}{\pi} \left( 1 + \frac{1}{9} \right) = 0.6243$$

Continuing this process, we compute the error energy  $E_e$  for various values of N as

Clearly, x(t) can be represented by the infinite series


$$x(t) = \frac{4}{\pi} \left( \sin t + \frac{1}{3} \sin 3t + \frac{1}{5} \sin 5t + \dots \right) = \frac{4}{\pi} \sum_{n=1,3,5,\dots}^{\infty} \frac{1}{n} \sin nt$$

The equality exists in the sense that the error signal energy  $\rightarrow 0$  as  $N \rightarrow \infty$ . In this case, the error energy decreases rather slowly with *N*, indicating that the series converges slowly. This is to be expected because x(t) has jump discontinuities and consequently, according to discussion in Sec. 6.2-2, the series converges asymptotically as 1/n.

# **DRILL 6.9** Approximating a Ramp Signal with a Set of Harmonic Sine Waves

Approximate the signal  $x(t) = t - \pi$  (Fig. 6.26) over the interval  $(0, 2\pi)$  in terms of the set of sinusoids  $\{\sin nt\}, n = 0, 1, 2, ..., used in Ex. 6.14$ . Find  $E_e$ , the error energy. Show that  $E_e \to 0$  as  $N \to \infty$ .

# ANSWERS

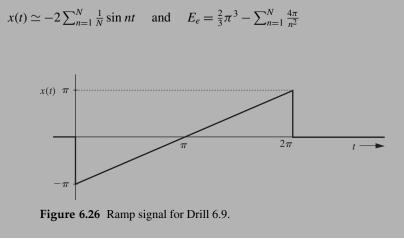

# Some Examples of Generalized Fourier Series

Signals are vectors in every sense. Like a vector, a signal can be represented as a sum of its components in a variety of ways. Just as vector coordinate systems are formed by mutually orthogonal vectors (rectangular, cylindrical, spherical), we also have signal coordinate systems (basis signals) formed by a variety of sets of mutually orthogonal signals. There exist a large number of orthogonal signal sets that can be used as basis signals for generalized Fourier series. Some well-known signal sets are trigonometric (sinusoid) functions, exponential functions, Walsh functions, Bessel functions, Legendre polynomials, Laguerre functions, Jacobi polynomials, Hermite polynomials, and Chebyshev polynomials. The functions that concern us most in this book are the trigonometric and the exponential sets discussed earlier in this chapter.

# LEGENDRE FOURIER SERIES

A set of Legendre polynomials  $P_n(t)$  (n = 0, 1, 2, 3, ...) forms a complete set of mutually orthogonal functions over an interval (-1 < t < 1). These polynomials can be defined by the Rodrigues formula:

$$P_n(t) = \frac{1}{2^n n!} \frac{d^n}{dt^n} (t^2 - 1)^n \qquad n = 0, 1, 2, \dots$$

It follows from this equation that

$$P_0(t) = 1, P_1(t) = t, P_2(t) = \left(\frac{3}{2}t^2 - \frac{1}{2}\right), P_3(t) = \left(\frac{5}{2}t^3 - \frac{3}{2}t\right), \text{ and so on}$$

We may verify the orthogonality of these polynomials by showing that

$$\int_{-1}^{1} P_m(t) P_n(t) dt = \begin{cases} 0 & m \neq n \\ \frac{2}{2m+1} & m = n \end{cases}$$

We can express a function x(t) in terms of Legendre polynomials over an interval (-1 < t < 1) as

$$x(t) = c_0 P_0(t) + c_1 P_1(t) + \dots + c_r P_r(t) + \dots$$
(6.50)

where

$$c_r = \frac{\int_{-1}^{1} x(t) P_r(t) dt}{\int_{-1}^{1} P_r^2(t) dt} = \frac{2r+1}{2} \int_{-1}^{1} x(t) P_r(t) dt$$
(6.51)

Note that although the series representation is valid over the interval (-1, 1), it can be extended to any interval by the appropriate time scaling (see Prob. 6.5-8).

# **EXAMPLE 6.15** Legendre Fourier Series

Determine the Legendre Fourier series of the square signal shown in Fig. 6.27.

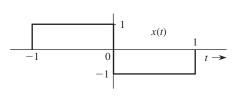


Figure 6.27 Square signal for Ex. 6.15.

From Eq. (6.50), we know that the Legendre Fourier series takes the form

$$x(t) = c_0 P_0(t) + c_1 P_1(t) + \dots + c_r P_r(t) + \dots$$

The coefficients  $c_0, c_1, c_2, \ldots, c_r$  may be found from Eq. (6.51). We have

$$x(t) = \begin{cases} 1 & \cdots - 1 < t < 0 \\ -1 & \cdots 0 < t < 1 \end{cases}$$

and

$$c_{0} = \frac{1}{2} \int_{-1}^{1} x(t) dt = 0$$
  

$$c_{1} = \frac{3}{2} \int_{-1}^{1} tx(t) dt = \frac{3}{2} \left( \int_{-1}^{0} t dt - \int_{0}^{1} t dt \right) = -\frac{3}{2}$$
  

$$c_{2} = \frac{5}{2} \int_{-1}^{1} x(t) \left( \frac{3}{2}t^{2} - \frac{1}{2} \right) dt = 0$$

This result follows immediately from the fact that the integrand is an odd function of t. In fact, this is true of all  $c_r$  for even values of r, that is,

$$c_0 = c_2 = c_4 = c_6 = \cdots = 0$$

Also,

$$c_{3} = \frac{7}{2} \int_{-1}^{1} x(t) \left(\frac{5}{2}t^{3} - \frac{3}{2}t\right) dt = \frac{7}{2} \left[ \int_{-1}^{0} \left(\frac{5}{2}t^{3} - \frac{3}{2}t\right) dt - \int_{0}^{1} \left(\frac{5}{2}t^{3} - \frac{3}{2}t\right) dt \right] = \frac{7}{8}$$

In a similar way, coefficients  $c_5, c_7, \ldots$  can be evaluated. We now have

$$x(t) = -\frac{3}{2}t + \frac{7}{8}\left(\frac{5}{2}t^3 - \frac{3}{2}t\right) + \cdots$$

## **TRIGONOMETRIC FOURIER SERIES**

We have already proved [see Eqs. (6.4), (6.5), and (6.6)] that the trigonometric signal set

{1, 
$$\cos \omega_0 t$$
,  $\cos 2\omega_0 t$ , ...,  $\cos n\omega_0 t$ , ...;  
 $\sin \omega_0 t$ ,  $\sin 2\omega_0 t$ , ...,  $\sin n\omega_0 t$ , ...}

is orthogonal over any interval of duration  $T_0$ , where  $T_0 = 1/f_0$  is the period of the sinusoid of frequency  $f_0$ . This is a complete set for a class of signals with finite energies [11, 12]. Therefore, we can express a signal x(t) by a trigonometric Fourier series over any interval of duration  $T_0$  seconds as

$$x(t) = a_0 + a_1 \cos \omega_0 t + a_2 \cos 2\omega_0 t + \cdots$$
$$+ b_1 \sin \omega_0 t + b_2 \sin 2\omega_0 t + \cdots$$

657

or

$$x(t) = a_0 + \sum_{n=1}^{\infty} a_n \cos n\omega_0 t + b_n \sin n\omega_0 t \qquad t_1 < t < t_1 + T_0$$

where

$$\omega_0 = 2\pi f_0 = \frac{2\pi}{T_0}$$

We can use Eq. (6.43) to determine the Fourier coefficients  $a_0$ ,  $a_n$ , and  $b_n$ . Thus,

$$a_n = \frac{\int_{t_1}^{t_1+T_0} x(t) \cos n\omega_0 t \, dt}{\int_{t_1}^{t_1+T_0} \cos^2 n\omega_0 t \, dt}$$
(6.52)

The integral in the denominator of Eq. (6.52) has already been found to be  $T_0/2$  when  $n \neq 0$  [Eq. (6.4) with m = n]. For n = 0, the denominator is  $T_0$ . Hence,

$$a_0 = \frac{1}{T_0} \int_{t_1}^{t_1 + T_0} x(t) dt \quad \text{and} \quad a_n = \frac{2}{T_0} \int_{t_1}^{t_1 + T_0} x(t) \cos n\omega_0 t dt \qquad n = 1, 2, 3, \dots$$
(6.53)

Similarly, we find that

$$b_n = \frac{2}{T_0} \int_{t_1}^{t_1 + T_0} x(t) \sin n\omega_0 t \, dt \qquad n = 1, 2, 3, \dots$$
(6.54)

Note that the Fourier series in Eq. (6.49) of Ex. 6.14 is indeed the trigonometric Fourier series with  $T_0 = 2\pi$  and  $\omega_0 = 2\pi/T_0$ . In this particular example, it is easy to verify from Eq. (6.53) that  $a_n = 0$  for all *n*, including n = 0. Hence, the Fourier series in that example consisted only of sine terms.

## **EXPONENTIAL FOURIER SERIES**

As shown in the footnote on page 622, the set of exponentials  $e^{jn\omega_0 t}$   $(n = 0, \pm 1, \pm 2, ...)$  is a set of functions orthogonal over any interval of duration  $T_0 = 2\pi/\omega_0$ . An arbitrary signal x(t) can now be expressed over an interval  $(t_1, t_1 + T_0)$  as

$$x(t) = \sum_{n = -\infty}^{\infty} D_n e^{jn\omega_0 t} \qquad t_1 < t < t_1 + T_0$$

where [see Eq. (6.47)]

$$D_n = \frac{1}{T_0} \int_{t_1}^{t_1 + T_0} x(t) e^{-jn\omega_0 t} dt$$

# WHY USE THE EXPONENTIAL SET?

If x(t) can be represented in terms of hundreds of different orthogonal sets, why do we exclusively use the exponential (or trigonometric) set for the representation of signals or LTI systems? It so

658

happens that the exponential signal is an eigenfunction of LTI systems. In other words, for an LTI system, only an exponential input  $e^{st}$  yields the response that is also an exponential of the same form, given by  $H(s)e^{st}$ . The same is true of the trigonometric set. This fact makes the use of exponential signals natural for LTI systems in the sense that the system analysis using exponentials as the basis signals is greatly simplified.

# 6.6 NUMERICAL COMPUTATION OF $D_n$

Ì

We can compute  $D_n$  numerically by using the DFT (the discrete Fourier transform discussed in Sec. 8.5), which uses the samples of a periodic signal x(t) over one period. The sampling interval is T seconds. Hence, there are  $N_0 = T_0/T$  number of samples in one period  $T_0$ . To find the relationship between  $D_n$  and the samples of x(t), consider Eq. (6.19) and write

$$D_{n} = \frac{1}{T_{0}} \int_{T_{0}} x(t) e^{-jn\omega_{0}t} dt$$
  
=  $\lim_{T \to 0} \frac{1}{N_{0}T} \sum_{k=0}^{N_{0}-1} x(kT) e^{-jn\omega_{0}kT} T$   
=  $\lim_{T \to 0} \frac{1}{N_{0}} \sum_{k=0}^{N_{0}-1} x(kT) e^{-jn\Omega_{0}k}$  (6.55)

where x(kT) is the *k*th sample of x(t) and

$$N_0 = \frac{T_0}{T}$$
 and  $\Omega_0 = \omega_0 T = \frac{2\pi}{N_0}$ 

In practice, it is impossible to make  $T \rightarrow 0$  in computing the right-hand side of Eq. (6.55). We can make T small, but not zero, which will cause the data to increase without limit. Thus, we shall ignore the limit on T in Eq. (6.55) with the implicit understanding that T is reasonably small. Nonzero T will result in some computational error, which is inevitable in any numerical evaluation of an integral. The error resulting from nonzero T is called the *aliasing error*, which is discussed in more detail in Ch. 8. Thus, we can express Eq. (6.55) as

$$D_n \approx \frac{1}{N_0} \sum_{k=0}^{N_0 - 1} x(kT) e^{-jn\Omega_0 k}$$
(6.56)

Since  $\Omega_0 N_0 = 2\pi$ , we know that  $e^{in\Omega_0(k+N_0)} = e^{jn\Omega_0 k}$ , and it follows that

$$D_{n+N_0} = D_n$$

The periodicity property  $D_{n+N_0} = D_n$  means that beyond  $n = N_0/2$ , the coefficients represent the values for negative *n*. For instance, when  $N_0 = 32$ ,  $D_{17} = D_{-15}$ ,  $D_{18} = D_{-14}$ , ...,  $D_{31} = D_{-1}$ . The cycle repeats again from n = 32 on.

We can use the efficient FFT (the *fast Fourier transform* discussed in Sec. 8.6) to compute the right-hand side of Eq. (6.56). We shall use MATLAB to implement the FFT algorithm. For

this purpose, we need samples of x(t) over one period starting at t = 0. In this algorithm, it is also preferable (although not necessary) that  $N_0$  be a power of 2, (i.e.,  $N_0 = 2^m$  where *m* is an integer).

# **EXAMPLE 6.16** Numerical Computation of Fourier Spectra

Numerically compute and then plot the exponential Fourier spectra for the periodic signal in Fig. 6.2a (Ex. 6.1).

The samples of x(t) start at t = 0 and the last  $(N_0$ th) sample is at  $t = T_0 - T$ . At the points of discontinuity, the sample value is taken as the average of the values of the function on two sides of the discontinuity. Thus, the sample at t = 0 is not 1 but  $(e^{-\pi/2} + 1)/2 = 0.604$ . To determine  $N_0$ , we require that  $D_n$  for  $n \ge N_0/2$  be negligible. Because x(t) has a jump discontinuity,  $D_n$  decays rather slowly as 1/n. Hence, a choice of  $N_0 = 200$  is acceptable because the  $(N_0/2)$ nd (100th) harmonic is about 1% of the fundamental. However, we also require  $N_0$  to be a power of 2. Hence, we shall take  $N_0 = 256 = 2^8$ .

First, the basic parameters are established.

>> T\_0 = pi; N\_0 = 256; T = T\_0/N\_0; t = (0:T:T\*(N\_0-1))'; >> x = exp(-t/2); x(1) = (exp(-pi/2)+1)/2;


Next, the DFT, computed by means of the fft function, is used to approximate the exponential Fourier spectra up to  $n = N_0/2$ . To facilitate comparison with previous plots of  $D_n$ , we only plot the results over  $-5 \le n \le 5$ .

```
>> D_n = fft(x)/N_0; n = [-N_0/2:N_0/2-1]';
>> clf; subplot(1,2,1); stem(n,abs(fftshift(D_n)),'.k');
>> axis([-5 5 0 .6]); xlabel('n'); ylabel('|D_n|');
```

```
>> subplot(1,2,2); stem(n,angle(fftshift(D_n)),'.k');
```

```
>> axis([-5 5 -2 2]); xlabel('n'); ylabel('\angle D_n [rad]');
```

As shown in Fig. 6.28, the resulting approximation is visually indistinguishable from the true Fourier series spectra shown in Fig. 6.12 or Fig. 6.13.

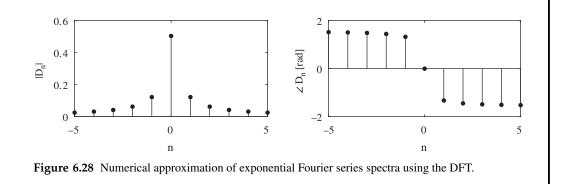

# 6.7 MATLAB: FOURIER SERIES APPLICATIONS

Computational packages such as MATLAB simplify the Fourier-based analysis, design, and synthesis of periodic signals. MATLAB permits rapid and sophisticated calculations, which promote practical application and intuitive understanding of the Fourier series.

# 6.7-1 Periodic Functions and the Gibbs Phenomenon

It is sufficient to define any  $T_0$ -periodic function over the interval  $(0 \le t < T_0)$ . For example, consider the  $2\pi$ -periodic function given by

$$x(t) = \begin{cases} t/A & 0 \le t < A \\ 1 & A \le t < \pi \\ 0 & \pi \le t < 2\pi \\ x(t+2\pi) & \text{otherwise} \end{cases}$$

Although similar to a square wave, x(t) has a linearly rising edge of width A, where  $(0 < A < \pi)$ . As  $A \to 0$ , x(t) approaches a square wave; as  $A \to \pi$ , x(t) approaches a type of sawtooth wave.

In MATLAB, the mod command helps represent periodic functions such as x(t).

>> x = @(t,A) mod(t,2\*pi)/A.\*(mod(t,2\*pi)<A)+((mod(t,2\*pi)>=A)&(mod(t,2\*pi)<pi));

Sometimes referred to as the signed remainder after division, mod(t, 2\*pi) returns the value t modulo  $2\pi$ . Thought of another way, the mod operator appropriately shifts t into  $[0, T_0)$ , where x(t) is conveniently defined. Notice also that an anonymous function can be defined with multiple input variables.

The exponential Fourier series coefficients for x(t) (see Prob. 6.3-2) are given by

$$D_n = \begin{cases} \frac{2\pi - A}{4\pi} & n = 0\\ \frac{1}{2\pi n} \left( \frac{e^{-jnA} - 1}{nA} + je^{-jn\pi} \right) & \text{otherwise} \end{cases}$$

Since x(t) is real,  $D_{-n} = D_n^*$ . Truncating the Fourier series at |n| = N yields the approximation

$$x(t) \approx x_N(t) = D_0 + \sum_{n=1}^{N} \left( D_n e^{jnt} + D_n^* e^{-jnt} \right)$$
(6.57)

For a user-specified N, program CH6MP1 uses Eq. (6.57) to compute  $x_N(t)$  over  $(-\pi/4 \le t < 2\pi + \pi/4)$ .

```
function [x_N,t] = CH6MP1(A,N);
% CH6MP1.m : Chapter 6, MATLAB Program 1
% Function M-file approximates x(t) using Fourier series truncated at |n|=N
% INPUTS: A = width of rising edge
% N = largest harmonic of truncated Fourier series
% OUTPUTS: x_N = Nth harmonic truncated Fourier series
```

```
%
```

```
t = time vector for x_N
```

```
% Define FS coefficients for signal x(t)
D = @(n) 1/(2*pi*n)*((exp(-1j*n*A)-1)/(n*A) + 1j*exp(-1j*n*pi));
% Construct truncated FS approximation of x(t) using N harmonics
t = linspace(-pi/4,2*pi+pi/4,10000); % Time vector exceeds one period.
x_N = (2*pi-A)/(4*pi)*ones(size(t)); % Compute dc term
for n = 1:N, % Compute N remaining terms
x_N = x_N+real(D(n)*exp(1j*n*t) + conj(D(n))*exp(-1j*n*t));
end
```

Although theoretically not required, the real command ensures that small computer round-off errors do not cause a complex-valued result.

Using program CH6MP1 with  $A = \pi/2$  and N = 20, Fig. 6.29 compares x(t) and  $x_{20}(t)$ .

>> A = pi/2; [x\_20,t] = CH6MP1(A,20); >> plot(t,x\_20,'k',t,x(t,A),'k:'); axis([-pi/4,2\*pi+pi/4,-0.1,1.1]); >> xlabel('t'); ylabel('x\_{20}(t)');

As expected, the falling edge is accompanied by the overshoot that is characteristic of the Gibbs phenomenon.


Increasing N to 100, as shown in Fig. 6.30, improves the approximation but does not reduce the overshoot.

```
>> [x_100,t] = CH6MP1(A,100);
```


>> plot(t,x\_100,'k',t,x(t,A),'k:'); axis([-pi/4,2\*pi+pi/4,-0.1,1.1]);

```
>> xlabel('t'); ylabel('x_{100}(t)');
```


Reducing A to  $\pi/64$  produces a curious result. For N = 20, both the rising and falling edges are accompanied by roughly 9% of overshoot, as shown in Fig. 6.31. As the number of terms is increased, overshoot persists only in the vicinity of jump discontinuities. For  $x_N(t)$ , increasing N decreases the overshoot near the rising edge but not near the falling edge. Remember that it is a

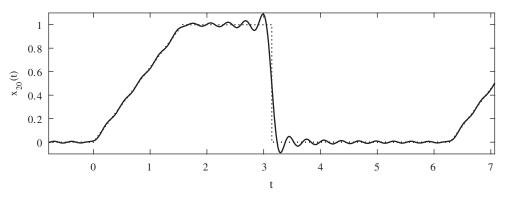


**Figure 6.29** Comparison of  $x_{20}(t)$  and x(t) when  $A = \pi/2$ .

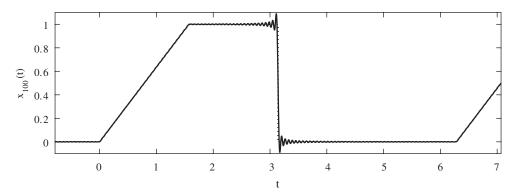

**Figure 6.30** Comparison of  $x_{100}(t)$  and x(t) when  $A = \pi/2$ .

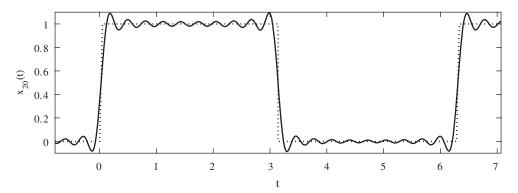

**Figure 6.31** Comparison of  $x_{20}(t)$  and x(t) when  $A = \pi/64$ .

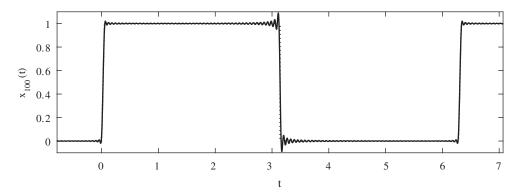

**Figure 6.32** Comparison of  $x_{100}(t)$  and x(t) when  $A = \pi/64$ .

true jump discontinuity that causes the Gibbs phenomenon. A continuous signal, no matter how sharply it rises, can always be represented by a Fourier series at every point within any small error by increasing N. This is not the case when a true jump discontinuity is present. Figure 6.32 illustrates this behavior using N = 100.

# 6.7-2 Optimization and Phase Spectra

Although magnitude spectra typically receive the most attention, phase spectra are critically important in some applications. Consider the problem of characterizing the frequency response of an unknown system. By applying sinusoids one at a time, the frequency response is empirically measured one point at a time. This process is tedious at best. Applying a superposition of many sinusoids, however, allows simultaneous measurement of many points of the frequency response. Such measurements can be taken by a spectrum analyzer equipped with a transfer function mode or by applying Fourier analysis techniques, which are discussed in later chapters.

A multitone test signal m(t) is constructed as a superposition of N real sinusoids

$$m(t) = \sum_{n=1}^{N} M_n \cos(\omega_n t + \theta_n)$$

where  $M_n$  and  $\theta_n$  establish the relative magnitude and phase of each sinusoidal component. It is sensible to constrain all gains to be equal,  $M_n = M$  for all *n*. This ensures equal treatment at each point of the measured frequency response. Although the value *M* is normally chosen to set the desired signal power, we set M = 1 for convenience.

While not required, it is also sensible to space the sinusoidal components uniformly in frequency.

$$m(t) = \sum_{n=1}^{N} \cos\left(n\omega_0 t + \theta_n\right) \tag{6.58}$$

Another sensible alternative, which spaces components logarithmically in frequency, is treated in Prob. 6.7-4.


Equation (6.58) is now a truncated compact-form Fourier series with a flat magnitude spectrum. Frequency resolution and range are set by  $\omega_0$  and N, respectively. For example, a 2 kHz range with a resolution of 100 Hz requires  $\omega_0 = 2\pi 100$  and N = 20. The only remaining unknowns are the  $\theta_n$ .

While it is tempting to set  $\theta_n = 0$  for all *n*, the results are quite unsatisfactory. MATLAB helps demonstrate the problem by using  $\omega_0 = 2\pi 100$  and N = 20 sinusoids, each with a peak-to-peak voltage of 1 volt.

```
>> m = @(theta,t,omega) sum(cos(omega*t+theta*ones(size(t))));
>> N = 20; omega = 2*pi*100*[1:N]'; theta = zeros(size(omega));
>> t = linspace(-0.01,0.01,10000);
>> plot(t,m(theta,t,omega),'k'); xlabel('t [sec]'); ylabel('m(t) [volts]');
```

As shown in Fig. 6.33,  $\theta_n = 0$  causes each sinusoid to constructively add. The resulting 20 volt peak can saturate system components, such as operational amplifiers operating with  $\pm 12$  volt rails. To improve signal performance, the maximum amplitude of m(t) over t needs to be reduced.

One way to reduce  $\max_t (|m(t)|)$  is to reduce M, the strength of each component. Unfortunately, this approach reduces the system's signal-to-noise ratio and ultimately degrades measurement quality. Therefore, reducing M is not a smart decision. The phases  $\theta_n$ , however, can be adjusted to reduce  $\max_t (|m(t)|)$  while preserving signal power. In fact, since  $\theta_n = 0$  maximizes  $\max_t (|m(t)|)$ , just about any other choice of  $\theta_n$  will improve the situation. Even a random choice should improve performance.

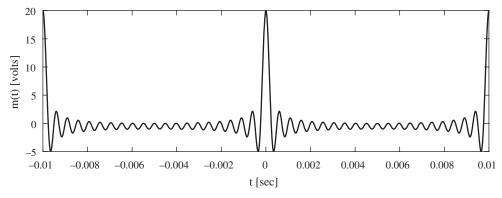

**Figure 6.33** Test signal m(t) with  $\theta_n = 0$ .

As with any computer, MATLAB cannot generate truly random numbers. Rather, it generates pseudo-random numbers. Pseudo-random numbers are deterministic sequences that appear to be random. The particular sequence of numbers that is realized depends entirely on the initial state of the pseudo-random number generator. Setting the generator's initial state to a known value allows a "random" experiment with reproducible results. The command rng(0) initializes the state of the pseudo-random number generator to a known condition of zero, and the MATLAB command rand(a,b) generates an a-by-b matrix of pseudo-random numbers that are uniformly distributed over the interval (0,1). Radian phases occupy the wider interval  $(0,2\pi)$ , so the results from rand need to be appropriately scaled.

>> rng(0); theta\_rand0 = 2\*pi\*rand(N,1);

Next, we recompute and plot m(t) using the randomly chosen  $\theta_n$ .

```
>> m_rand0 = m(theta_rand0,t,omega);
```

```
>> plot(t,m_rand0,'k'); axis([-0.01,0.01,-10,10]);
```

```
>> xlabel('t [sec]'); ylabel('m(t) [volts]');
```

>> set(gca,'ytick',[min(m\_rand0),max(m\_rand0)]); grid on;


For a vector input, the min and max commands return the minimum and maximum values of the vector. Using these values to set y axis tick marks makes it easy to identify the extreme values of the m(t). As seen from Fig. 6.34, the maximum amplitude is now 7.6307, which is significantly smaller than the maximum of 20 when  $\theta_n = 0$ .

Randomly chosen phases suffer a fatal fault: there is little guarantee of optimal performance. For example, repeating the experiment with rng(5) produces a maximum magnitude of 8.2399 volts, as shown in Fig. 6.35. This value is significantly higher than the previous maximum of 7.6307 volts. Clearly, it is better to replace a random solution with an optimal solution.


What constitutes "optimal"? Many choices exist, but desired signal criteria naturally suggest that optimal phases minimize the maximum magnitude of m(t) over all t. To find these optimal phases, MATLAB's fminsearch command is useful. First, the function to be minimized, called the objective function, is defined.

>> maxmagm = @(theta,t,omega) max(abs(sum(cos(omega\*t+theta\*ones(size(t))))));

666 CHAPTER 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

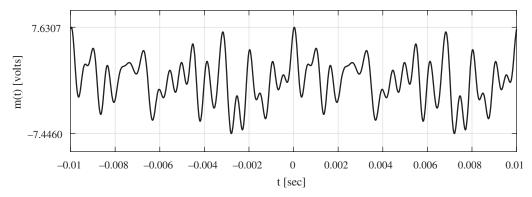

**Figure 6.34** Test signal m(t) with random  $\theta_n$  found by using rng(0).

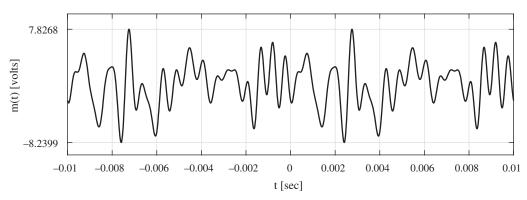

**Figure 6.35** Test signal m(t) with random  $\theta_n$  found by using rand('state', 1).

The anonymous function argument order is important; fminsearch uses the first input argument as the variable of minimization. To minimize over  $\theta$ , as desired,  $\theta$  must be the first argument of the objective function maxmagm.


Next, the time vector is shortened to include only one period of m(t).

>> t = linspace(0,0.01,401);

A full period ensures that all values of m(t) are considered; the short length of t helps ensure that functions execute quickly. An initial value of  $\theta$  is randomly chosen to begin the search.

```
>> rng(0); theta_init = 2*pi*rand(N,1);
>> theta_opt = fminsearch(maxmagm,theta_init,[],t,omega);
```

Notice that fminsearch finds the minimizer to maxmagm over  $\theta$  by using an initial value theta\_init. Most numerical minimization techniques are capable of finding only local minima, and fminsearch is no exception. As a result, fminsearch does not always produce a unique solution. The empty square brackets indicate no special options are requested, and the remaining ordered arguments are secondary inputs for the objective function. Full format details for fminsearch are available from MATLAB's help facilities.

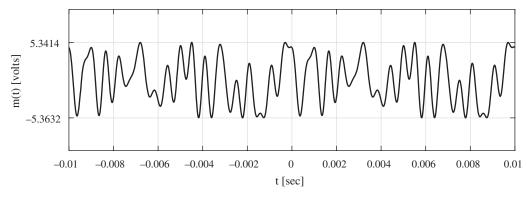

**Figure 6.36** Test signal m(t) with optimized phases.

Figure 6.36 shows the phase-optimized test signal. The maximum magnitude is reduced to a value of 5.3632 volts, which is a significant improvement over the original peak of 20 volts.

Although the signals shown in Figs. 6.33 through 6.36 look different, they all possess the same magnitude spectra. The signals differ only in phase spectra. It is interesting to investigate the similarities and differences of these signals in ways other than graphs and mathematics. For example, is there an audible difference between the signals? For computers equipped with sound capability, the MATLAB sound command can be used to find out.

```
>> Fs = 8000; t = [0:1/Fs:2];  % Two second records at a sampling rate of 8kHz
>> sound(m(theta,t,omega)/20,Fs); % Play (scaled) m(t) constructed using zero phases
```

Since the sound command clips magnitudes that exceed 1, the input vector is scaled by 1/20 to avoid clipping and the resulting sound distortion. The signals using other phase assignments are created and played in a similar fashion. How well does the human ear discern the differences in phase spectra? If you are like most people, you will not be able to discern any differences in how these waveforms sound.

# 6.8 SUMMARY

In this chapter we showed how a periodic signal can be represented as a sum of sinusoids or exponentials. If the frequency of a periodic signal is  $f_0$ , then it can be expressed as a weighted sum of a sinusoid of frequency  $f_0$  and its harmonics (the trigonometric Fourier series). We can reconstruct the periodic signal from a knowledge of the amplitudes and phases of these sinusoidal components (amplitude and phase spectra).

If a periodic signal x(t) has an even symmetry, its Fourier series contains only cosine terms (including dc). In contrast, if x(t) has an odd symmetry, its Fourier series contains only sine terms. If x(t) has neither type of symmetry, its Fourier series contains both sine and cosine terms.

At points of discontinuity, the Fourier series for x(t) converges to the mean of the values of x(t) on either side of the discontinuity. For signals with discontinuities, the Fourier series converges in the mean and exhibits Gibbs phenomenon at the points of discontinuity. The amplitude spectrum of the Fourier series for a periodic signal x(t) with jump discontinuities decays slowly (as 1/n) with frequency. We need a large number of terms in the Fourier series to approximate x(t) within

#### 668 CHAPTER 6 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER SERIES

a given error. In contrast, the amplitude spectrum of a smoother periodic signal decays faster with frequency and we require a smaller number of terms in the series to approximate x(t) within a given error.

A sinusoid can be expressed in terms of exponentials. Therefore, the Fourier series of a periodic signal can also be expressed as a sum of exponentials (the exponential Fourier series). The exponential form of the Fourier series and the expressions for the series coefficients are more compact than those of the trigonometric Fourier series. Also, the response of LTIC systems to an exponential input is much simpler than that for a sinusoidal input. Moreover, the exponential form of representation lends itself better to mathematical manipulations than does the trigonometric form. This includes the establishment of useful Fourier series properties that simplify work and help provide a more intuitive understanding of signals. For these reasons, the exponential form of the series is preferred in modern practice in the areas of signals and systems.

The plots of amplitudes and angles of various exponential components of the Fourier series as functions of the frequency are the exponential Fourier spectra (amplitude and angle spectra) of the signal. Because a sinusoid  $\cos \omega_0 t$  can be represented as a sum of two exponentials,  $e^{j\omega_0 t}$  and  $e^{-j\omega_0 t}$ , the frequencies in the exponential spectra range from  $\omega = -\infty$  to  $\infty$ . By definition, frequency of a signal is always a positive quantity. Presence of a spectral component of a negative frequency  $-n\omega_0$  merely indicates that the Fourier series contains terms of the form  $e^{-jn\omega_0 t}$ . The spectra of the trigonometric and exponential Fourier series are closely related, and one can be found by the inspection of the other.

In Sec. 6.5 we discuss a method of representing signals by the generalized Fourier series, of which the trigonometric and exponential Fourier series are special cases. Signals are vectors in every sense. Just as a vector can be represented as a sum of its components in a variety of ways, depending on the choice of the coordinate system, a signal can be represented as a sum of its components in a variety of ways, of which the trigonometric and exponential Fourier series are only two examples. Just as we have vector coordinate systems formed by mutually orthogonal vectors, we also have signal coordinate systems (basis signals) formed by mutually orthogonal signals. Any signal in this signal space can be represented as a sum of the basis signals. Each set of basis signals yields a particular Fourier series representation of the signal. The signal is equal to its Fourier series, not in the ordinary sense, but in the special sense that the energy of the difference between the signal and its Fourier series approaches zero. This allows for the signal to differ from its Fourier series at some isolated points.

#### REFERENCES

- 1. Bell, E. T. Men of Mathematics. Simon & Schuster, New York, 1937.
- 2. Durant, W., and Durant, A. *The Age of Napoleon*, Part XI in *The Story of Civilization Series*. Simon & Schuster, New York, 1975.
- 3. Calinger, R. Classics of Mathematics, 4th ed. Moore Publishing, Oak Park, IL, 1982.
- 4. Lanczos, C. Discourse on Fourier Series. Oliver Boyd, London, 1966.
- 5. Körner, T. W. Fourier Analysis. Cambridge University Press, Cambridge, UK, 1989.
- 6. Guillemin, E. A. Theory of Linear Physical Systems. Wiley, New York, 1963.
- 7. Gibbs, W. J. Nature, vol. 59, p. 606, April 1899.
- 8. Bôcher, M. Annals of Mathematics, vol. 7, no. 2, 1906.

- 9. Carslaw, H. S. Bulletin of the American Mathematical Society, vol. 31, pp. 420–424, October 1925.
- 10. Lathi, B. P. Signals, Systems, and Communication. Wiley, New York, 1965.
- 11. Walker P. L. The Theory of Fourier Series and Integrals. Wiley, New York, 1986.
- Churchill, R. V., and Brown, J. W. Fourier Series and Boundary Value Problems, 3rd ed. McGraw-Hill, New York, 1978.

# PROBLEMS

- **6.1-1** For each of the periodic signals shown in Fig. P6.1-1, find the compact trigonometric Fourier series and sketch the amplitude and phase spectra. If either the sine or cosine terms are absent in the Fourier series, explain why.
- **6.1-2** (a) Find the trigonometric Fourier series for y(t) shown in Fig. P6.1-2.
  - (b) The signal y(t) can be obtained by time reversal of x(t) shown in Fig. 6.2a. Use this fact to obtain the Fourier series for y(t) from the results in Ex. 6.1. Verify that the Fourier series thus obtained is identical to that found in part (a).
  - (c) Show that, in general, time reversal of a periodic signal does not affect the amplitude spectrum, and the phase spectrum is also unchanged except for the change of sign.
- **6.1-3** (a) Find the trigonometric Fourier series for the periodic signal *y*(*t*) depicted in Fig. P6.1-3.
  - (b) The signal y(t) can be obtained by time compression of x(t) shown in Fig. 6.2a by a factor 2. Use this fact to obtain the Fourier series for y(t) from the results in Ex. 6.1. Verify that the Fourier series thus obtained is identical to that found in part (a).
  - (c) Show that, in general, time compression of a periodic signal by a factor *a* expands the Fourier spectra along the  $\omega$  axis by the same factor *a*. In other words  $C_0, C_n$ , and  $\theta_n$  remain unchanged, but the fundamental frequency is increased by the factor *a*, thus expanding the spectrum. Similarly, time expansion of a periodic signal by a factor *a* compresses its Fourier spectra along the  $\omega$ axis by the factor *a*.
- **6.1-4** (a) Find the trigonometric Fourier series for the periodic signal g(t) in Fig. P6.1-4. Take advantage of the symmetry.

- (b) Observe that g(t) is identical to x(t) in Fig. 6.4a left-shifted by 0.5 second. Use this fact to obtain the Fourier series for g(t) from the results in Ex. 6.2. Verify that the Fourier series thus obtained is identical to that found in part (a).
- (c) Show that, in general, a time shift of *T* seconds of a periodic signal does not affect the amplitude spectrum. However, the phase of the *n*th harmonic is increased or decreased  $n\omega_0 T$  depending on whether the signal is advanced or delayed by *T* seconds.
- **6.1-5** Determine the trigonometric Fourier series coefficients  $a_n$  and  $b_n$  for the following signals. In each case, also determine the signals' fundamental radian frequency  $\omega_0$ . No integration is required to solve this problem.
  - (a)  $x_a(t) = \cos(3\pi t)$
  - (b)  $x_{b}(t) = \sin(7\pi t)$
  - (c)  $x_c(t) = 2 + 4\cos(3\pi t) 2j\sin(7\pi t)$
  - (d)  $x_d(t) = (1+j)\sin(3\pi t) + (2-j)\cos(7\pi t)$
  - (e)  $x_{\rm e}(t) = \sin(3\pi t + 1) + 2\cos(7\pi t 2)$
  - (f)  $x_f(t) = \sin(6\pi t) + 2\cos(14\pi t)$
- **6.1-6** If the two halves of one period of a periodic signal are identical in shape except that one is the negative of the other, the periodic signal is said to have a *half-wave symmetry*. If a periodic signal x(t) with a period  $T_0$  satisfies the half-wave symmetry condition, then

$$x\left(t-\frac{T_0}{2}\right) = -x(t)$$

In this case, show that all the even-numbered harmonics vanish and that the odd-numbered harmonic coefficients are given by

$$a_n = \frac{4}{T_0} \int_0^{T_0/2} x(t) \cos n\omega_0 t \, dt$$

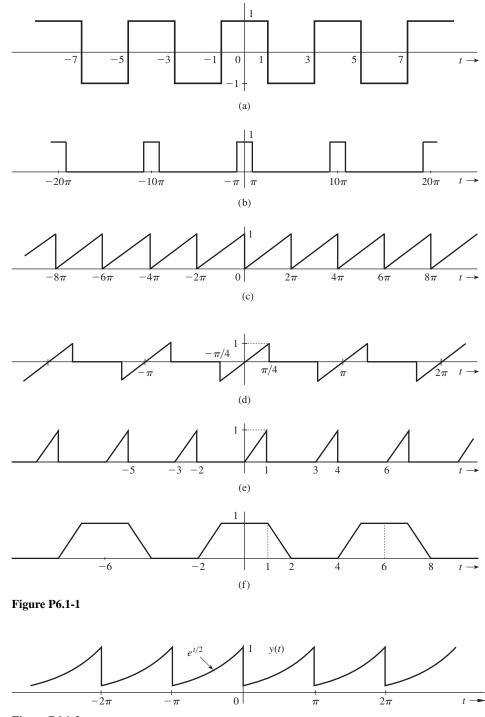


Figure P6.1-2

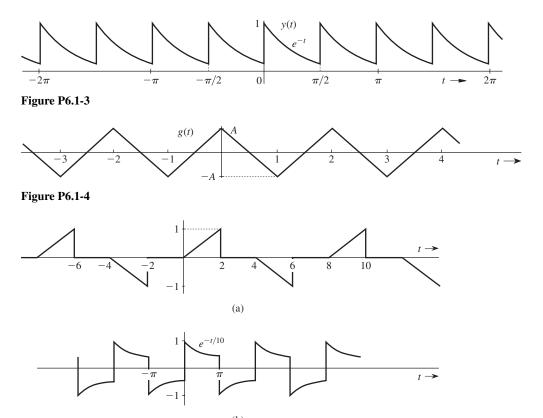


Figure P6.1-6

and

$$b_n = \frac{4}{T_0} \int_0^{T_0/2} x(t) \sin n\omega_0 t \, dt$$

Using these results, find the Fourier series for the periodic signals in Fig. P6.1-6.

**6.1-7** Over a finite interval, a signal can be represented by more than one trigonometric (or exponential) Fourier series. For instance, if we wish to represent x(t) = t over an interval 0 < t < 1 by a Fourier series with fundamental frequency  $\omega_0 = 2$ , we can draw a pulse x(t) = t over the interval 0 < t < 1 and repeat the pulse every  $\pi$  seconds so that  $T_0 = \pi$  and  $\omega_0 = 2$  (Fig. P6.1-7a). If we want the fundamental frequency  $\omega_0$  to be 4, we repeat the pulse every  $\pi/2$  seconds. If we want the series to contain only cosine terms with  $\omega_0 = 2$ , we construct a pulse x(t) = |t| over -1 < t < 1, and repeat it every  $\pi$  seconds (Fig. P6.1-7b). The

resulting signal is an even function with period  $\pi$ . Hence, its Fourier series will have only cosine terms with  $\omega_0 = 2$ . The resulting Fourier series represents x(t) = t over 0 < t < 1, as desired. We do not care what it represents outside this interval.

Sketch the periodic signal x(t) such that x(t) = t for 0 < t < 1 and the Fourier series for x(t) satisfies the following conditions.

- (a)  $\omega_0 = \pi/2$  and contains all harmonics, but cosine terms only
- (b)  $\omega_0 = 2$  and contains all harmonics, but sine terms only
- (c)  $\omega_0 = \pi/2$  and contains all harmonics, which are exclusively neither sine nor cosine
- (d)  $\omega_0 = 1$  and contains only odd harmonics and cosine terms
- (e)  $\omega_0 = \pi/2$  and contains only odd harmonics and sine terms

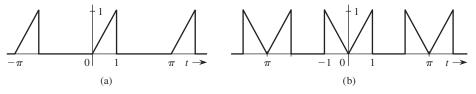


Figure P6.1-7

(f)  $\omega_0 = 1$  and contains only odd harmonics, which are exclusively neither sine nor cosine.

[*Hint:* For parts (d), (e), and (f), you need to use half-wave symmetry discussed in Prob. 6.1-6. Cosine terms imply a possible dc component.] You are asked only to sketch the periodic signal x(t) satisfying the given conditions. Do not find the values of the Fourier coefficients.

- **6.1-8** State with reasons whether the following signals are periodic or aperiodic. For periodic signals, find the period and state which harmonics are present in the series.
  - (a)  $3\sin t + 2\sin 3t$
  - (b)  $2 + 5\sin 4t + 4\cos 7t$
  - (c)  $2\sin 3t + 7\cos \pi t$
  - (d)  $7\cos \pi t + 5\sin 2\pi t$
  - (e)  $3\cos\sqrt{2t} + 5\cos 2t$
  - (f)  $\sin \frac{5t}{2} + 3\cos \frac{6t}{5} + 3\sin \left(\frac{t}{7} + 30^{\circ}\right)$ (g)  $\sin 3t + \cos^{-15} t$

(g) 
$$\sin 3t + \cos \frac{1}{4}$$

(h)  $(3\sin 2t + \sin 5t)^2$ 

(i) 
$$(5\sin 2t)^3$$

- **6.3-1** For each of the periodic signals in Fig. P6.1-1, find exponential Fourier series and sketch the corresponding spectra.
- **6.3-2** A  $2\pi$ -periodic signal x(t) is specified over one period as

$$x(t) = \begin{cases} \frac{1}{A}t & 0 \le t < A\\ 1 & A \le t < \pi\\ 0 & \pi \le t < 2\pi \end{cases}$$

Sketch x(t) over two periods from t = 0 to  $4\pi$ . Show that the exponential Fourier series coefficients  $D_n$  for this series are given by

$$D_n = \begin{cases} \frac{2\pi - A}{4\pi} & n = 0\\ \frac{1}{2\pi n} \left( \frac{e^{-jAn} - 1}{An} + je^{-jn\pi} \right) & n \neq 0 \end{cases}$$

**6.3-3** A periodic signal x(t) is expressed by the following Fourier series:

$$x(t) = 3\cos t + \sin\left(t - \frac{\pi}{6}\right) - 2\cos\left(t - \frac{\pi}{3}\right)$$

- (a) Sketch the amplitude and phase spectra for the trigonometric series.
- (b) By inspection of spectra in part (a), sketch the exponential Fourier series spectra.
- (c) By inspection of spectra in part (b), write the exponential Fourier series for *x*(*t*).
- (d) Show that the series found in part (c) is equivalent to the trigonometric series for *x*(*t*).
- **6.3-4** The trigonometric Fourier series of a certain periodic signal is given by

$$x(t) = 3 + \sqrt{3}\cos 2t + \sin 2t$$
$$+ \sin 3t - \frac{1}{2}\cos\left(5t + \frac{\pi}{3}\right)$$

- (a) Sketch the trigonometric Fourier spectra.
- (b) By inspection of spectra in part (a), sketch the exponential Fourier series spectra.
- (c) By inspection of spectra in part (b), write the exponential Fourier series for x(t).
- (d) Show that the series found in part (c) is equivalent to the trigonometric series for *x*(*t*).
- **6.3-5** The exponential Fourier series of a certain function is given as

$$x(t) = (2+j2)e^{-j3t} + j2e^{-jt} + 3 - j2e^{jt} + (2-j2)e^{j3t}$$

- (a) Sketch the exponential Fourier spectra.
- (b) By inspection of the spectra in part (a), sketch the trigonometric Fourier spectra for *x*(*t*). Find the compact trigonometric Fourier series from these spectra.
- (c) Show that the trigonometric series found in part (b) is equivalent to the exponential series for x(t).
- (d) Find the signal bandwidth.
- **6.3-6** Figure P6.3-6 shows the trigonometric Fourier spectra of a periodic signal x(t).
  - (a) By inspection of Fig. P6.3-6, find the trigonometric Fourier series representing x(t).
  - (b) By inspection of Fig. P6.3-6, sketch the exponential Fourier spectra of *x*(*t*).
  - (c) By inspection of the exponential Fourier spectra obtained in part (b), find the exponential Fourier series for x(t).
  - (d) Show that the series found in parts (a) and (c) are equivalent.
- **6.3-7** Figure P6.3-7 shows the exponential Fourier spectra of a periodic signal x(t).

- (a) By inspection of Fig. P6.3-7, find the exponential Fourier series representing *x*(*t*).
- (b) By inspection of Fig. P6.3-7, sketch the trigonometric Fourier spectra for *x*(*t*).
- (c) By inspection of the trigonometric Fourier spectra found in part (b), find the trigonometric Fourier series for x(t).
- (d) Show that the series found in parts (a) and(c) are equivalent.
- **6.3-8** Let periodic signal x(t) have exponential Fourier series spectrum  $D_n$ . Prove the following properties.
  - (a) If x(t) has even symmetry, then  $D_n$  also has even symmetry.
  - (b) If x(t) has odd symmetry, then  $D_n$  also has odd symmetry.
  - (c) If x(t) is real, then  $D_n$  is conjugate symmetric  $(D_n = D_{-n}^*)$ .
  - (d) If x(t) is imaginary, then  $D_n$  is conjugate antisymmetric  $(D_n = -D_{-n}^*)$ .
- **6.3-9** (a) Find the exponential Fourier series for the signal in Fig. P6.3-9a.
  - (b) Using the results in part (a), find the Fourier series for the signal  $\hat{x}(t)$  in Fig. P6.3-9b,


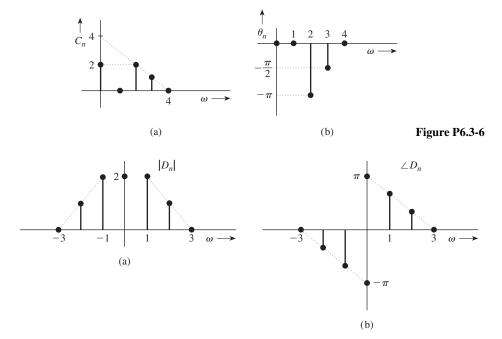


Figure P6.3-7

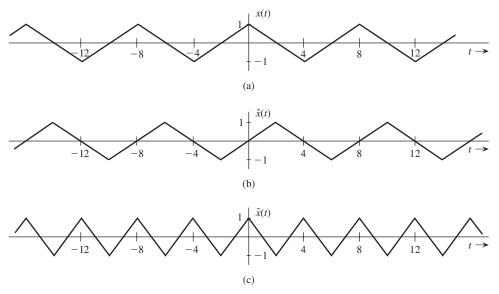

#### Figure P6.3-9

which is a time-shifted version of the signal x(t).

- (c) Using the results in part (a), find the Fourier series for the signal  $\tilde{x}(t)$  in Fig. P6.3-9c, which is a time-scaled version of the signal x(t).
- **6.3-10** A periodic signal *x*(*t*) is expressed as an exponential Fourier series

$$x(t) = \sum_{n = -\infty}^{\infty} D_n e^{jn\omega_0 t}$$

(a) Show that the exponential Fourier series for  $\hat{x}(t) = x(t - T)$  is given by

$$\hat{x}(t) = \sum_{n=-\infty}^{\infty} \hat{D}_n e^{jn\omega_0}$$

in which

$$|\hat{D}_n| = |D_n|$$
 and  $\angle \hat{D}_n = \angle D_n - n\omega_0 T$ 

This result shows that time shifting of a periodic signal by *T* seconds merely changes the phase spectrum by  $n\omega_0 T$ . The amplitude spectrum is unchanged.

(b) Show that the exponential Fourier series for  $\tilde{x}(t) = x(at)$  is given by

$$\tilde{x}(t) = \sum_{n=-\infty}^{\infty} D_n e^{jn(a\omega_0)t}$$

This result shows that time compression of a periodic signal by a factor *a* expands its Fourier spectra along the  $\omega$  axis by the same factor *a*. Similarly, time expansion of a periodic signal by a factor *a* compresses its Fourier spectra along the  $\omega$  axis by the factor *a*. Intuitively explain this result.

6.3-11 (a) The Fourier series for the periodic signal in Fig. 6.7a is given in Drill 6.1. Verify Parseval's theorem for this series, given that

$$\sum_{n=1}^{\infty} \frac{1}{n^4} = \frac{\pi^4}{90}$$

- (b) If x(t) is approximated by the first N terms in this series, find N so that the power of the error signal is less than 1% of P<sub>x</sub>.
- **6.3-12** (a) The Fourier series for the periodic signal in Fig. 6.7b is given in Drill 6.1. Verify

Problems 675

Parseval's theorem for this series, given that

$$\sum_{n=1}^{\infty} \frac{1}{n^2} = \frac{\pi^2}{6}$$

- (b) If x(t) is approximated by the first N terms in this series, find N so that the power of the error signal is less than 10% of P<sub>x</sub>.
- **6.3-13** The signal x(t) in Fig. 6.17 is approximated by the first 2N + 1 terms (from n = -N to N) in its exponential Fourier series given in Drill 6.5. Determine the value of N if this (2N + 1)-term Fourier series power is to be no less than 99.75% of the power of x(t).
- **6.3-14** (a) A 2 rad/s periodic signal  $x_1(t)$  has Fourier series spectrum  $D_1[n]$ . Determine the Fourier series spectrum  $X_2[n]$  of  $x_2(t) = \frac{1}{3}x_1(-t-5)$  in terms of  $X_1[n]$ .
  - (b) A 2 rad/s periodic signal  $x_1(t)$  has Fourier series spectrum  $D_1[n]$ . Determine the Fourier series spectrum  $X_2[n]$  of  $x_2(t) = \cos(10t)x_1(t)$  in terms of  $X_1[n]$ .
  - (c) A 3 rad/s periodic signal  $x_1(t)$  has Fourier series spectrum  $D_1[n]$ . Determine the Fourier series spectrum  $X_2[n]$  of  $x_2(t) = x_1(-t) - 3x_1(t+2)$  in terms of  $X_1[n]$ .
- **6.3-15** A 2-periodic signal x(t) is defined as

$$x(t) = \begin{cases} -t^2 - t + 0.25 & -1 \le t < 0\\ t^2 - t + 0.25 & 0 \le t < 1\\ x(t+2) & \forall t \end{cases}$$

- (a) Plot x(t) over  $-2 \le t \le 2$ .
- (b) Determine  $D_0$ , the dc content of x(t).
- (c) Similar to Ex. 6.11, use properties and not integration to determine  $D_n$  for  $n \neq 0$ .
- (d) Plot the magnitude spectrum  $|D_n|$  over a suitable range of *n*.
- (e) How does the magnitude spectrum |D<sub>n</sub>| compare to that of signal y(t) = cos(πt)? Note similarities as well as major differences.
- **6.3-16** A 3-periodic signal x(t) is defined as

$$x(t) = \begin{cases} |t| & -1 \le t \le 1\\ 0 & 1 < |t| \le 1.5\\ x(t+3) & \forall t \end{cases}$$

(a) Plot 
$$x(t)$$
 over  $-3 \le t \le 3$ .

- (b) Determine  $D_0$ , the dc content of x(t).
- (c) Similar to Ex. 6.11, use properties and not integration to determine  $D_n$  for  $n \neq 0$ .
- (d) Plot the magnitude spectrum  $|D_n|$  over a suitable range of *n*. What is the most dominant frequency component of this signal?
- **6.4-1** Find the response of an LTIC system with transfer function

$$H(s) = \frac{s}{s^2 + 2s + 3}$$

to the periodic input shown in Fig. 6.2a.

- **6.4-2** A periodic signal  $x(t) = 1 + 2\cos(5\pi t) + 3\sin(14\pi t)$  is applied to an LTIC system to produce output y(t).
  - (a) Determine  $\omega_0$ , the fundamental radian frequency of x(t).
  - (b) Determine  $D_n$ , the exponential Fourier series spectrum of x(t).
  - (c) If the system is an ideal lowpass filter with cutoff frequency  $f_c = 2$  Hz, what is the output y(t)?
  - (d) If the system is an ideal highpass filter with cutoff frequency  $f_c = 2$  Hz, what is the output y(t)?
  - (e) If the system is an ideal bandpass filter with a 4 Hz passband centered at 4 Hz, what is the output *y*(*t*)?
  - (f) If the system is an ideal bandstop filter with a 5 Hz stopband centered at 10 Hz, what is the output y(t)?
  - (g) Describe the frequency response of a filter that, in response to x(t), would produce the output  $y(t) = 4\cos(5\pi t) 9\sin(14\pi t)$ .
- **6.4-3** Consider a  $T_0 = 1$  periodic signal x(t) defined as

$$x(t) = \begin{cases} 1 - t^2 & 0 < t \le 1\\ x(t+1) & \forall t \end{cases}$$

- (a) Sketch x(t) for  $-2 \le t \le 2$ .
- (b) Determine  $D_n$ , the exponential Fourier series spectrum of x(t).
- (c) If x(t) is applied to an ideal bandpass filter with a 1 Hz passband centered at 3 Hz, determine the output y(t).
- **6.4-4** (a) Find the exponential Fourier series for a signal  $x(t) = \cos 5t \sin 3t$ . You can do this without evaluating any integrals.
  - (b) Sketch the Fourier spectra.

(c) The signal x(t) is applied at the input of an LTIC system with frequency response, as shown in Fig. P6.4-4. Find the output y(t).

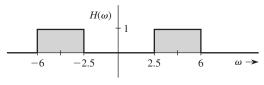


Figure P6.4-4

- **6.4-5** (a) Find the exponential Fourier series for a periodic signal x(t) shown in Fig. P6.4-5a.
  - (b) The signal x(t) is applied at the input of an LTIC system shown in Fig. P6.4-5b. Find the expression for the output y(t).
- **6.4-6** A *T*-periodic  $\tau/T$  duty-cycle square wave p(t) is defined as

$$p(t) = \begin{cases} 1 & |t| < \frac{\tau}{2} \\ 0 & \frac{\tau}{2} < |t| < \frac{T}{2} \\ p(t+T) & \forall t \end{cases}$$

where  $0 < \tau < T$ . Also consider the frequency response  $H(\omega)$  of a lowpass communications channel with 10 rad/s bandwidth (e.g.,  $|H(\omega)| \approx$ 0 for  $\omega > 10$ ). If T and  $\tau$  are properly chosen, we can estimate  $H(\omega)$  at points  $\omega = n\omega_0$  as  $\hat{H}(n\omega_0) = \frac{1}{P_0}Y_n$ , where  $Y_n$  is the exponential FS spectrum of the channel output y(t) in response to input p(t) and  $P_0$  is the dc component of p(t).

- (a) Using direct integration, determine the exponential Fourier series coefficients  $P_n$  of signal p(t).
- (b) Determine a suitable value T so that p(t) applied to system H(ω) has 21 component frequencies over the system bandwidth 0 ≤ ω ≤ 10.
- (c) Assuming *T* is properly chosen, determine a suitable duty cycle  $\tau/T$  so that  $H(n\omega_0) \approx Y_n$ . Carefully justify your result.
- (d) From the perspective of using p(t) to help measure the system frequency response H(ω), what happens if T is properly chosen but τ/T is chosen too small?
- (e) From the perspective of using p(t) to help measure the system frequency response H(ω), what happens if T is properly chosen but τ/T is chosen too large?
- **6.5-1** Derive Eq. (6.32) in an alternate way by observing that  $\mathbf{e} = (\mathbf{x} c\mathbf{y})$  and  $|\mathbf{e}|^2 = (\mathbf{x} c\mathbf{y}) \cdot (\mathbf{x} c\mathbf{y}) = |\mathbf{x}|^2 + c^2 |\mathbf{y}|^2 2c\mathbf{x} \cdot \mathbf{y}$ .
- **6.5-2** A signal x(t) is approximated in terms of a signal y(t) over an interval  $(t_1, t_2)$ :

$$x(t) \simeq c y(t) \qquad t_1 < t < t_2$$

where c is chosen to minimize the error energy.

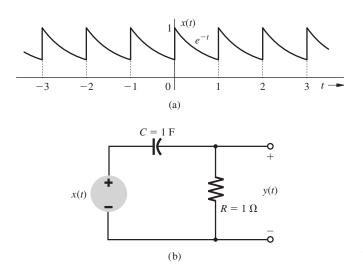


Figure P6.4-5

- (a) Show that y(t) and the error e(t) = x(t) cy(t) are orthogonal over the interval  $(t_1, t_2)$ .
- (b) If possible, explain the result in terms of a signal-vector analogy.
- (c) Verify this result for the square signal *x*(*t*) in Fig. 6.23 and its approximation in terms of signal sin *t*.
- **6.5-3** If x(t) and y(t) are orthogonal, then show that the energy of the signal x(t) + y(t) is identical to the energy of the signal x(t) y(t) and is given by  $E_x + E_y$ . Explain this result by using the vector analogy. In general, show that for orthogonal signals x(t) and y(t) and for any pair of arbitrary real constants  $c_1$  and  $c_2$ , the energies of  $c_1x(t) + c_2y(t)$  and  $c_1x(t) c_2y(t)$  are both given by  $c_1^2E_x + c_2^2E_y$ .
- **6.5-4** (a) For the signals x(t) and y(t) depicted in Fig. P6.5-4, find the component of the form y(t) contained in x(t). In other words, find the optimum value of *c* in the approximation  $x(t) \approx cy(t)$  so that the error signal energy is minimum.
  - (b) Find the error signal e(t) and its energy  $E_e$ . Show that the error signal is orthogonal to y(t), and that  $E_x = c^2 E_y + E_e$ . Explain this result in terms of vectors.

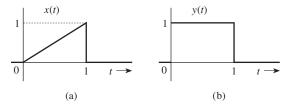



Figure P6.5-4

- **6.5-5** For the signals x(t) and y(t) shown in Fig. P6.5-4, find the component of the form x(t) contained in y(t). In other words, find the optimum value of *c* in the approximation  $y(t) \approx cx(t)$  so that the error signal energy is minimum. What is the error signal energy?
- **6.5-6** Represent the signal x(t) shown in Fig. P6.5-4a over the interval from 0 to 1 by a trigonometric Fourier series of fundamental frequency  $\omega_0 = 2\pi$ . Compute the error energy in the representation of x(t) by only the first *N* terms of this series for N = 1, 2, 3, and 4.

- **6.5-7** Represent x(t) = t over the interval (0, 1) by a trigonometric Fourier series that has (a)  $\omega_0 = 2\pi$  and only sine terms
  - (a)  $\omega_0 = 2\pi$  and only sine terms
  - (b) ω<sub>0</sub> = π and only sine terms
    (c) ω<sub>0</sub> = π and only cosine terms

You may use a dc term in these series if necessary.

- **6.5-8** In Ex. 6.15, we represented the function in Fig. 6.27 by Legendre polynomials.
  - (a) Use the results in Ex. 6.15 to represent the signal g(t) in Fig. P6.5-8 by Legendre polynomials.
  - (b) Compute the error energy for the approximations having one and two (nonzero) terms.

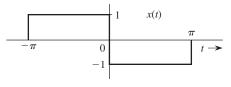

#### Figure P6.5-8

- 6.5-9 Walsh functions, which can take on only two amplitude values, form a complete set of orthonormal functions and are of great practical importance in digital applications because they can be easily generated by logic circuitry and because multiplication with these functions can be implemented by simply using a polarity-reversing switch. Figure P6.5-9 shows the first eight functions in this set. Represent x(t) in Fig. P6.5-4a over the interval (0, 1) by using a Walsh Fourier series with these eight basis functions. Compute the energy of e(t), the error in the approximation, using the first Nnonzero terms in the series for N = 1, 2, 3, and 4. In Prob. 6.5-6 we found the trigonometric Fourier series for x(t). How does the Walsh series compare with the trigonometric series in Prob. 6.5-6 from the viewpoint of the error energy for a given N?
- **6.5-10** For the four-dimensional real space  $\mathcal{R}^4$ , the so-called Walsh basis is given by:  $\phi_1 = [1,1,1,1], \phi_2 = [1,1,-1,-1], \phi_3 = [1,-1,-1,1], and \phi_4 = [1,-1,1,-1].$  Denoting elements  $x = [x_1, x_2, x_3, x_4]$  and  $y = [y_1, y_2, y_3, y_4]$  $(x, y \in \mathcal{R}^4)$ , we can define orthogonality as

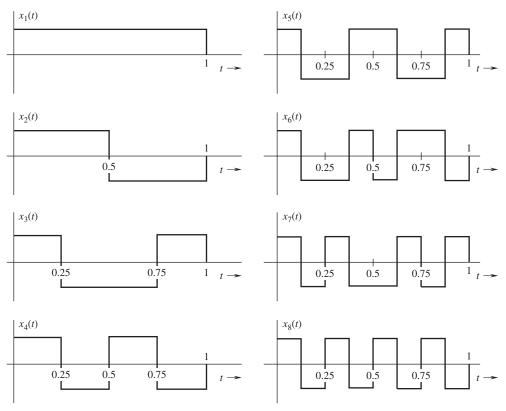


Figure P6.5-9

 $\sum_{k=1}^{4} x_k y_k^* = 0$ . In linear algebra terminology, orthogonality here means that the inner product of vectors *x* and *y* is zero. Lastly, define a vector z = [-4, 0, 1, -7].

- (a) Show that the Walsh basis functions are mutually orthogonal. This requires a total of six calculations.
- (b) Are the Walsh basis functions normal? That is, does the inner product of each Walsh basis function with itself evaluate to 1?
- (c) Determine the coefficients  $[c_1, c_2, c_3, c_4]$  to represent z using Walsh basis functions as  $\hat{z} = \sum_{k=1}^{4} c_k \phi_k$ .
- (d) Determine the best three-dimensional approximation  $\hat{z}_{3D}$  to *z* in terms of the Walsh basis functions. That is, your estimate can only be a linear combination of three functions from  $[\phi_1, \phi_2, \phi_3, \phi_4]$ . Evaluate the three-term sum to determine the four elements of vector  $\hat{z}_{3D}$ .
- **6.5-11** A function can be expanded in terms of many different types of basis functions, not just the complex exponentials of Fourier analysis. For example, Walsh functions are explored in Prob. 6.5-9. *Laguerre* polynomials  $L_k(t)$ , which have support on the interval  $[0, \infty)$ , are another possible set of basis functions. The Laguerre expansion using any number of terms we choose. For the Laguerre expansion, we define orthogonality a little differently, as

$$\int_0^\infty e^{-t} x(t) y(t) dt = 0.$$

Notice the presence of the  $e^{-t}$  term in the integral. Using this definition, Laguerre polynomials are orthonormal.

(a) Show that  $L_0(t)$  is normal. That is, show that

$$\int_0^\infty e^{-t} L_0(t) L_0^*(t) dt = 1$$

(b) Show that  $L_1(t)$  is normal. That is, show that

$$\int_0^\infty e^{-t} L_1(t) L_1^*(t) dt = 1$$

- (c) Show that  $L_0(t)$  is orthogonal to  $L_1(t)$ .
- (d) Compute the coefficient  $c_0$  that produces the best approximation  $\hat{x}_0(t) = c_0 L_0(t)$  of the function  $x(t) = e^{-t}u(t)$ .
- (e) For the best estimate x̂<sub>1</sub>(t) = c<sub>0</sub>L<sub>0</sub>(t) + c<sub>1</sub>L<sub>1</sub>(t) of the function x(t) = e<sup>-t</sup>u(t), the coefficient c<sub>0</sub> remains unchanged from part ()(d) and c<sub>1</sub> = 1/4. Confirm that c<sub>1</sub> = 1/4 and explain why the coefficient c<sub>0</sub> does not change.
- **6.7-1** A periodic signal has  $\omega_0 = \frac{2}{3}\pi$  and exponential Fourier series spectrum  $D_n = j\cos(\pi n/10) (u[n+10] u[n-11])$ . [*Hint*: Refer to Prob. 6.3-8 for some useful properties.]
  - (a) Determine the period  $T_0$  of the corresponding signal x(t).
  - (b) Is the time-domain signal real, imaginary, or neither? Justify your answer.
  - (c) Is the time-domain signal even, odd, or neither? Justify your answer.
  - (d) Use MATLAB to synthesize the timedomain signal x(t) and plot it over the interval  $[-T_0, T_0]$ .
- 6.7-2 Repeat Prob. 6.7-1 for a periodic signal with  $\omega_0 = \frac{3}{2}\pi$  and  $D_n = 2\sin(\pi n/10)(u[n+10] u[n-11])$ .
- **6.7-3** Consider the  $(T_0 = 1)$ -periodic signal x(t):

$$x(t) = \begin{cases} 2t - t^2 & 0 < t \le 1\\ x(t+1) & \forall t \end{cases}$$

•

- (a) Sketch x(t) for  $-2 \le t \le 2$ .
- (b) Using properties and minimal integration, determine D<sub>n</sub>, the exponential Fourier spectrum of x(t).

- (c) Verify the correctness of  $D_n$  by using MAT-LAB to synthesize x(t) with a suitable truncation of Eq. (6.19).
- (d) Suppose x(t) is applied to an ideal bandpass filter with passband between 2.5 and 3.5 Hz. Determine the filter output y(t). Simplify your answer.

[Hint: Refer to Ex. 6.11.]

**6.7-4** Section 6.7 discusses the construction of a phase-optimized multitone test signal with linearly spaced frequency components. This problem investigates a similar signal with logarithmically spaced frequency components.

A multitone test signal m(t) is constructed by using a superposition of N real sinusoids

$$m(t) = \sum_{n=1}^{N} \cos(\omega_n t + \theta_n)$$

where  $\theta_n$  establishes the relative phase of each sinusoidal component.

- (a) Determine a suitable set of N = 10 frequencies ω<sub>n</sub> that logarithmically spans [(2π) ≤ ω ≤ 100(2π)] yet still results in a periodic test signal m(t). Determine the period T<sub>0</sub> of your signal. Using θ<sub>n</sub> = 0, plot the resulting (T<sub>0</sub>)-periodic signal over −T<sub>0</sub>/2 ≤ t ≤ T<sub>0</sub>/2.
- (b) Determine a suitable set of phases  $\theta_n$  that minimize the maximum magnitude of m(t). Plot the resulting signal and identify the maximum magnitude that results.
- (c) Many systems suffer from what is called one-over-*f* noise. The power of this undesirable noise is proportional to 1/f. Thus, low-frequency noise is stronger than high-frequency noise. What modifications to m(t) are appropriate for use in environments with 1/f noise? Justify your answer.

# Continuous-Time Signal Analysis: The Fourier Transform

We can analyze linear systems in many different ways by taking advantage of the property of linearity, whereby the input is expressed as a sum of simpler components. The system response to any complex input can be found by summing the system's response to these simpler components of the input. In time-domain analysis, we separated the input into impulse components. In the frequency-domain analysis in Ch. 4, we separated the input into exponentials of the form  $e^{st}$  (the Laplace transform), where the complex frequency  $s = \sigma + j\omega$ . The Laplace transform, although very valuable for system analysis, proves somewhat awkward for signal analysis, where we prefer to represent signals in terms of exponentials  $e^{j\omega t}$  instead of  $e^{st}$ . This is accomplished by the Fourier transform. In a sense, the Fourier transform may be considered to be a special case of the Laplace transform with  $s = j\omega$ . Although this view is true most of the time, it does not always hold because of the nature of convergence of the Laplace and Fourier integrals.


In Ch. 6, we succeeded in representing periodic signals as a sum of (everlasting) sinusoids or exponentials of the form  $e^{j\omega t}$ . The Fourier integral developed in this chapter extends this spectral representation to aperiodic signals.

# 7.1 APERIODIC SIGNAL REPRESENTATION BY THE FOURIER INTEGRAL

Applying a limiting process, we now show that an aperiodic signal can be expressed as a continuous sum (integral) of everlasting exponentials. To represent an aperiodic signal x(t) such as the one depicted in Fig. 7.1a by everlasting exponentials, let us construct a new periodic signal  $x_{T_0}(t)$  formed by repeating the signal x(t) at intervals of  $T_0$  seconds, as illustrated in Fig. 7.1b. The period  $T_0$  is made long enough to avoid overlap between the repeating pulses. The periodic signal  $x_{T_0}(t)$  can be represented by an exponential Fourier series. If we let  $T_0 \to \infty$ , the pulses in the periodic signal repeat after an infinite interval and, therefore,

 $\lim_{T_0 \to \infty} x_{T_0}(t) = x(t)$ 

CHAPTER

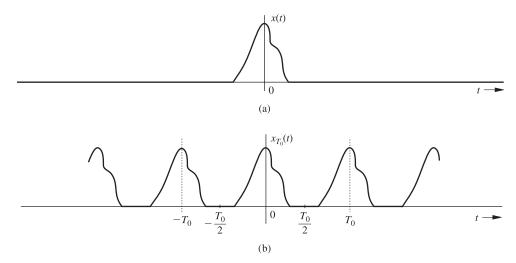

**Figure 7.1** Construction of a periodic signal: (a) signal x(t) and (b) periodic extension of x(t).

Thus, the Fourier series representing  $x_{T_0}(t)$  will also represent x(t) in the limit  $T_0 \to \infty$ . The exponential Fourier series for  $x_{T_0}(t)$  is given by

$$x_{T_0}(t) = \sum_{n=-\infty}^{\infty} D_n e^{jn\omega_0 t}$$
(7.1)

where  $\omega_0 = \frac{2\pi}{T_0}$  and

$$D_n = \frac{1}{T_0} \int_{-T_0/2}^{T_0/2} x_{T_0}(t) e^{-jn\omega_0 t} dt$$
(7.2)

Observe that integrating  $x_{T_0}(t)$  over  $(-T_0/2, T_0/2)$  is the same as integrating x(t) over  $(-\infty, \infty)$ . Therefore, Eq. (7.2) can be expressed as


$$D_n = \frac{1}{T_0} \int_{-\infty}^{\infty} x(t) e^{-jn\omega_0 t} dt$$
(7.3)

It is interesting to see how the nature of the spectrum changes as  $T_0$  increases. To understand this fascinating behavior, let us define  $X(\omega)$ , a continuous function of  $\omega$ , as

$$X(\omega) = \int_{-\infty}^{\infty} x(t)e^{-j\omega t}dt$$
(7.4)

A glance at Eqs. (7.3) and (7.4) shows that

$$D_n = \frac{1}{T_0} X(n\omega_0) \tag{7.5}$$

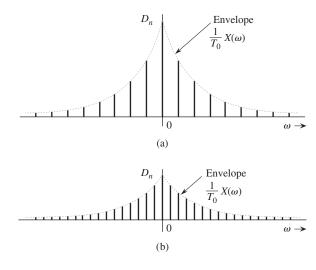

**Figure 7.2** Change in the Fourier spectrum when the period  $T_0$  in Fig. 7.1 is doubled.

This means that the Fourier coefficients  $D_n$  are  $1/T_0$  times the samples of  $X(\omega)$  uniformly spaced at intervals of  $\omega_0$ , as depicted in Fig. 7.2a.<sup>†</sup> Therefore,  $(1/T_0)X(\omega)$  is the envelope for the coefficients  $D_n$ . We now let  $T_0 \to \infty$  by doubling  $T_0$  repeatedly. Doubling  $T_0$  halves the fundamental frequency  $\omega_0$  so that there are now twice as many components (samples) in the spectrum. However, by doubling  $T_0$ , the envelope  $(1/T_0)X(\omega)$  is halved, as shown in Fig. 7.2b. If we continue this process of doubling  $T_0$  repeatedly, the spectrum progressively becomes denser while its magnitude becomes smaller. Note, however, that the relative shape of the envelope remains the same [proportional to  $X(\omega)$  in Eq. (7.4)]. In the limit as  $T_0 \to \infty$ ,  $\omega_0 \to 0$  and  $D_n \to 0$ . This result makes for a spectrum so dense that the spectral components are spaced at zero (infinitesimal) intervals. At the same time, the amplitude of each component is zero (infinitesimal). We have *nothing of everything, yet we have something!* This paradox sounds like *Alice in Wonderland*, but as we shall see, these are the classic characteristics of a very familiar phenomenon.<sup>‡</sup>

Substitution of Eq. (7.5) in Eq. (7.1) yields


$$x_{T_0}(t) = \sum_{n=-\infty}^{\infty} \frac{X(n\omega_0)}{T_0} e^{jn\omega_0 t}$$
(7.6)

As  $T_0 \to \infty$ ,  $\omega_0$  becomes infinitesimal ( $\omega_0 \to 0$ ). Hence, we shall replace  $\omega_0$  by a more appropriate notation,  $\Delta \omega$ . In terms of this new notation,  $\omega_0 = \frac{2\pi}{T_0}$  becomes

$$\Delta\omega = \frac{2\pi}{T_0}$$

<sup>&</sup>lt;sup>†</sup> For the sake of simplicity, we assume  $D_n$ , and therefore  $X(\omega)$ , in Fig. 7.2, to be real. The argument, however, is also valid for complex  $D_n$  [or  $X(\omega)$ ].

<sup>&</sup>lt;sup>‡</sup> If nothing else, the reader now has irrefutable proof of the proposition that 0% ownership of everything is better than 100% ownership of nothing.

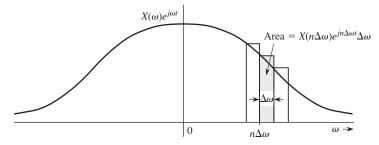

**Figure 7.3** The Fourier series becomes the Fourier integral in the limit as  $T_0 \rightarrow \infty$ .

and Eq. (7.6) becomes

$$x_{T_0}(t) = \sum_{n=-\infty}^{\infty} \left[ \frac{X(n\Delta\omega)\Delta\omega}{2\pi} \right] e^{(jn\Delta\omega)t}$$

This equation shows that  $x_{T_0}(t)$  can be expressed as a sum of everlasting exponentials of frequencies  $0, \pm \Delta \omega, \pm 2\Delta \omega, \pm 3\Delta \omega, \ldots$  (the Fourier series). The amount of the component of frequency  $n\Delta \omega$  is  $[X(n\Delta \omega)\Delta \omega]/2\pi$ . In the limit as  $T_0 \rightarrow \infty$ ,  $\Delta \omega \rightarrow 0$  and  $x_{T_0}(t) \rightarrow x(t)$ . Therefore,

$$x(t) = \lim_{T_0 \to \infty} x_{T_0}(t) = \lim_{\Delta \omega \to 0} \frac{1}{2\pi} \sum_{n = -\infty}^{\infty} X(n\Delta\omega) e^{(jn\Delta\omega)t} \Delta\omega$$
(7.7)

The sum on the right-hand side of Eq. (7.7) can be viewed as the area under the function  $X(\omega)e^{i\omega t}$ , as illustrated in Fig. 7.3. Therefore,

$$x(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) e^{j\omega t} d\omega$$
(7.8)

The integral on the right-hand side is called the *Fourier integral*. We have now succeeded in representing an aperiodic signal x(t) by a Fourier integral (rather than a Fourier series).<sup>†</sup> This integral is basically a Fourier series (in the limit) with fundamental frequency  $\Delta \omega \rightarrow 0$ , as seen from Eq. (7.7). The amount of the exponential  $e^{in\Delta\omega t}$  is  $X(n\Delta\omega)\Delta\omega/2\pi$ . Thus, the function  $X(\omega)$  given by Eq. (7.4) acts as a spectral function.

We call  $X(\omega)$  the *direct* Fourier transform of x(t), and x(t) the *inverse* Fourier transform of  $X(\omega)$ . The same information is conveyed by the statement that x(t) and  $X(\omega)$  are a Fourier transform pair. Symbolically, this statement is expressed as

$$X(\omega) = \mathcal{F}[x(t)]$$
 and  $x(t) = \mathcal{F}^{-1}[X(\omega)]$ 

<sup>&</sup>lt;sup>†</sup> This derivation should not be considered to be a rigorous proof of Eq. (7.8). The situation is not as simple as we have made it appear [1].

or

$$x(t) \iff X(\omega)$$

To recapitulate,

$$X(\omega) = \int_{-\infty}^{\infty} x(t)e^{-j\omega t}dt$$
(7.9)

and

$$x(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) e^{j\omega t} d\omega$$
(7.10)

It is helpful to keep in mind that the Fourier integral in Eq. (7.10) is of the nature of a Fourier series with fundamental frequency  $\Delta \omega$  approaching zero [Eq. (7.7)]. Therefore, most of the discussion and properties of Fourier series apply to the Fourier transform as well. *The transform*  $X(\omega)$  is the frequency-domain specification of x(t).

We can plot the spectrum  $X(\omega)$  as a function of  $\omega$ . Since  $X(\omega)$  is complex, we have both amplitude and angle (or phase) spectra

$$X(\omega) = |X(\omega)|e^{j \angle X(\omega)}$$

in which  $|X(\omega)|$  is the amplitude and  $\angle X(\omega)$  is the angle (or phase) of  $X(\omega)$ . According to Eq. (7.9),

$$X(-\omega) = \int_{-\infty}^{\infty} x(t) e^{j\omega t} dt$$

Taking the conjugates of both sides yields

$$x^*(t) \Longleftrightarrow X^*(-\omega) \tag{7.11}$$

This property is known as the *conjugation property*. Now, if x(t) is a real function of t, then  $x(t) = x^*(t)$ , and from the conjugation property, we find that

$$X(-\omega) = X^*(\omega)$$

This is the *conjugate symmetry* property of the Fourier transform, applicable to real x(t). Therefore, for real x(t),

$$|X(-\omega)| = |X(\omega)|$$
 and  $\angle X(-\omega) = -\angle X(\omega)$  (7.12)

Thus, for real x(t), the amplitude spectrum  $|X(\omega)|$  is an even function, and the phase spectrum  $\Delta X(\omega)$  is an odd function of  $\omega$ . These results were derived earlier for the Fourier spectrum of a periodic signal [Eq. (6.22)] and should come as no surprise.

684

# **EXAMPLE 7.1** Fourier Transform of a Causal Exponential

Find the Fourier transform of  $e^{-at}u(t)$ .

By definition [Eq. (7.9)],

$$X(\omega) = \int_{-\infty}^{\infty} e^{-at} u(t) e^{-j\omega t} dt = \int_{0}^{\infty} e^{-(a+j\omega)t} dt = \frac{-1}{a+j\omega} e^{-(a+j\omega)t} \Big|_{0}^{\infty}$$

But  $|e^{-j\omega t}| = 1$ . Therefore, as  $t \to \infty$ ,  $e^{-(a+j\omega)t} = e^{-at}e^{-j\omega t} = \infty$  if a < 0, but it is equal to 0 if a > 0. Therefore,

$$X(\omega) = \frac{1}{a+j\omega} \qquad a > 0$$


Expressing  $a + j\omega$  in the polar form as  $\sqrt{a^2 + \omega^2} e^{j \tan^{-1}(\omega/a)}$ , we obtain

$$X(\omega) = \frac{1}{\sqrt{a^2 + \omega^2}} e^{-j\tan^{-1}(\omega/a)}$$

Therefore,

$$|X(\omega)| = \frac{1}{\sqrt{a^2 + \omega^2}}$$
 and  $\angle X(\omega) = -\tan^{-1}\left(\frac{\omega}{a}\right)$ 

The amplitude spectrum  $|X(\omega)|$  and the phase spectrum  $\angle X(\omega)$  are depicted in Fig. 7.4b. Observe that  $|X(\omega)|$  is an even function of  $\omega$ , and  $\angle X(\omega)$  is an odd function of  $\omega$ , as expected.

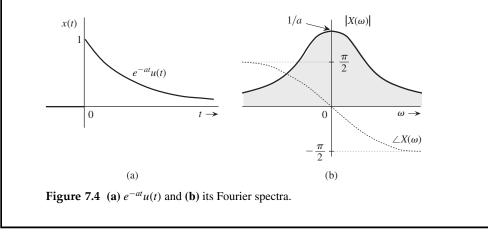

# **EXISTENCE OF THE FOURIER TRANSFORM**

In Ex. 7.1 we observed that when a < 0, the Fourier integral for  $e^{-at}u(t)$  does not converge. Hence, the Fourier transform for  $e^{-at}u(t)$  does not exist if a < 0 (growing exponential). Clearly, not all signals are Fourier transformable.

Because the Fourier transform is derived here as a limiting case of the Fourier series, it follows that the basic qualifications of the Fourier series, such as *equality in the mean* and convergence conditions in suitably modified form, apply to the Fourier transform as well. It can be shown that if x(t) has a finite energy, that is, if

$$\int_{-\infty}^{\infty} |x(t)|^2 \, dt < \infty$$

then the Fourier transform  $X(\omega)$  is finite and converges to x(t) in the mean. This means, if we let

$$\hat{x}(t) = \lim_{W \to \infty} \frac{1}{2\pi} \int_{-W}^{W} X(\omega) e^{j\omega t} d\omega$$

then Eq. (7.10) implies

686

$$\int_{-\infty}^{\infty} |x(t) - \hat{x}(t)|^2 dt = 0$$
(7.13)

In other words, x(t) and its Fourier integral [the right-hand side of Eq. (7.10)] can differ at some values of t without contradicting Eq. (7.13). We shall now discuss an alternate set of criteria due to Dirichlet for convergence of the Fourier transform.

As with the Fourier series, if x(t) satisfies certain conditions (*Dirichlet conditions*), its Fourier transform is guaranteed to converge pointwise at all points where x(t) is continuous. Moreover, at the points of discontinuity, x(t) converges to the value midway between the two values of x(t) on either side of the discontinuity. The Dirichlet conditions are as follows:

1. x(t) should be absolutely integrable, that is,

$$\int_{-\infty}^{\infty} |x(t)| \, dt < \infty \tag{7.14}$$

If this condition is satisfied, we see that the integral on the right-hand side of Eq. (7.9) is guaranteed to have a finite value.

- 2. x(t) must have only a finite number of finite discontinuities within any finite interval.
- 3. x(t) must contain only a finite number of maxima and minima within any finite interval.

We stress here that although the Dirichlet conditions are sufficient for the existence and pointwise convergence of the Fourier transform, they are not necessary. For example, we saw in Ex. 7.1 that a growing exponential, which violates Dirichlet's first condition in Eq. (7.14), does not have a Fourier transform. But the signal of the form  $(\sin at)/t$ , which *does* violate this condition, does have a Fourier transform.

Any signal that can be generated in practice satisfies the Dirichlet conditions and therefore has a Fourier transform. Thus, the physical existence of a signal is a sufficient condition for the existence of its transform.

#### LINEARITY OF THE FOURIER TRANSFORM

The Fourier transform is linear; that is, if

$$x_1(t) \iff X_1(\omega)$$
 and  $x_2(t) \iff X_2(\omega)$ 

then

$$a_1 x_1(t) + a_2 x_2(t) \Longleftrightarrow a_1 X_1(\omega) + a_2 X_2(\omega) \tag{7.15}$$

The proof is trivial and follows directly from Eq. (7.9). This result can be extended to any finite number of terms. It can be extended to an infinite number of terms only if the conditions required for interchangeability of the operations of summation and integration are satisfied.

### 7.1-1 Physical Appreciation of the Fourier Transform

In understanding any aspect of the Fourier transform, we should remember that Fourier representation is a way of expressing a signal in terms of everlasting sinusoids (or exponentials). The Fourier spectrum of a signal indicates the relative amplitudes and phases of sinusoids that are required to synthesize that signal. A periodic signal Fourier spectrum has finite amplitudes and exists at discrete frequencies ( $\omega_0$  and its multiples). Such a spectrum is easy to visualize, but the spectrum of an aperiodic signal is not easy to visualize because it has a continuous spectrum. The continuous spectrum concept can be appreciated by considering an analogous, more tangible phenomenon. One familiar example of a continuous distribution is the loading of a beam. Consider a beam loaded with weights  $D_1, D_2, D_3, \ldots, D_n$  units at the uniformly spaced points  $y_1, y_2, \ldots, y_n$ , as shown in Fig. 7.5a.

The total load  $W_T$  on the beam is given by the sum of these loads at each of the *n* points:

$$W_T = \sum_{i=1}^n D_i$$

Consider now the case of a continuously loaded beam, as depicted in Fig. 7.5b. In this case, although there appears to be a load at every point, the load at any one point is zero. This does not mean that there is no load on the beam. A meaningful measure of load in this situation is not the load at a point, but rather the loading density per unit length at that point. Let X(y) be the loading density per unit length of beam. It then follows that the load over a beam length  $\Delta y(\Delta y \rightarrow 0)$ , at some point y, is  $X(y)\Delta y$ . To find the total load on the beam, we divide the beam into segments of interval  $\Delta y(\Delta y \rightarrow 0)$ . The load over the *n*th such segment of length  $\Delta y$  is  $X(n\Delta y)\Delta y$ . The total load  $W_T$  is given by

$$W_T = \lim_{\Delta y \to 0} \sum_{y_1}^{y_n} X(n\Delta y) \,\Delta y = \int_{y_1}^{y_n} X(y) \,dy$$

The load now exists at every point, and y is now a continuous variable. In the case of discrete loading (Fig. 7.5a), the load exists only at n discrete points. At other points, there is no load. On the other hand, in the continuously loaded case, the load exists at every point, but at any specific

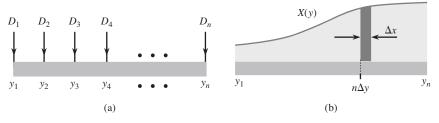


Figure 7.5 Weight-loading analogy for the Fourier transform.

point y, the load is zero. The load over a small interval  $\Delta y$ , however, is  $[X(n\Delta y)] \Delta y$  (Fig. 7.5b). Thus, even though the load at a point y is zero, the relative load at that point is X(y).

An exactly analogous situation exists in the case of a signal spectrum. When x(t) is periodic, the spectrum is discrete, and x(t) can be expressed as a sum of discrete exponentials with finite amplitudes:

$$x(t) = \sum_{n} D_n e^{jn\omega_0}$$


For an aperiodic signal, the spectrum becomes continuous; that is, the spectrum exists for every value of  $\omega$ , but the amplitude of each component in the spectrum is zero. The meaningful measure here is not the amplitude of a component of some frequency but the spectral density per unit bandwidth. From Eq. (7.7), it is clear that x(t) is synthesized by adding exponentials of the form  $e^{jn\Delta\omega t}$ , in which the contribution by any one exponential component is zero. But the contribution by exponentials in an infinitesimal band  $\Delta\omega$  located at  $\omega = n\Delta\omega$  is  $(1/2\pi)X(n\Delta\omega)\Delta\omega$ , and the addition of all these components yields x(t) in the integral form:


$$x(t) = \lim_{\Delta\omega\to 0} \frac{1}{2\pi} \sum_{n=-\infty}^{\infty} X(n\Delta\omega) e^{(jn\Delta\omega)t} \Delta\omega = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) e^{j\omega t} d\omega$$

Thus,  $n\Delta\omega$  approaches a continuous variable  $\omega$ . The spectrum now exists at every  $\omega$ . The contribution by components within a band  $d\omega$  is  $(1/2\pi)X(\omega)d\omega = X(\omega)df$ , where df is the bandwidth in hertz. Clearly,  $X(\omega)$  is the *spectral density* per unit bandwidth (in hertz).<sup>†</sup> It also follows that even if the amplitude of any one component is infinitesimal, the relative amount of a component of frequency  $\omega$  is  $X(\omega)$ . Although  $X(\omega)$  is a spectral density, in practice, it is customarily called the *spectrum* of x(t) rather than the spectral density of x(t). Deferring to this convention, we shall call  $X(\omega)$  the Fourier spectrum (or Fourier transform) of x(t).

#### A MARVELOUS BALANCING ACT

An important point to remember here is that x(t) is represented (or synthesized) by exponentials or sinusoids that are everlasting (not causal). Such conceptualization leads to a rather fascinating picture when we try to visualize the synthesis of a timelimited pulse signal x(t) [Fig. 7.6] by the sinusoidal components in its Fourier spectrum. The signal x(t) exists only over an interval (a,b)and is zero outside this interval. The spectrum of x(t) contains an infinite number of exponentials (or sinusoids), which start at  $t = -\infty$  and continue forever. The amplitudes and phases of these components add up exactly to x(t) over the finite interval (a,b) and to zero everywhere outside this interval. Juggling the amplitudes and phases of an infinite number of components to achieve

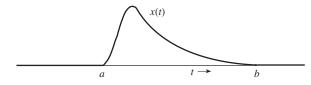

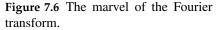

<sup>&</sup>lt;sup>†</sup>To stress that the signal spectrum is a *density* function, we shall shade the plot of  $|X(\omega)|$  (as in Fig. 7.4b). The representation of  $\angle X(\omega)$ , however, will be a line plot, primarily to avoid visual confusion.

such a perfect and delicate balance boggles the human imagination. Yet the Fourier transform accomplishes it routinely, without much thinking on our part. Indeed, we become so involved in mathematical manipulations that we fail to notice this marvel.

# 7.2 TRANSFORMS OF SOME USEFUL FUNCTIONS

For convenience, we now introduce a compact notation for the useful gate, triangle, and interpolation functions.

# UNIT GATE FUNCTION

We define a unit gate function rect (x) as a gate pulse of unit height and unit width, centered at the origin, as illustrated in Fig.  $7.7a^{\dagger}$ :

$$\operatorname{rect} (x) = \begin{cases} 0 & |x| > \frac{1}{2} \\ \frac{1}{2} & |x| = \frac{1}{2} \\ 1 & |x| < \frac{1}{2} \end{cases}$$
(7.16)

The gate pulse in Fig. 7.7b is the unit gate pulse rect (x) expanded by a factor  $\tau$  along the horizontal axis and therefore can be expressed as rect  $(x/\tau)$  (see Sec. 1.2-2). Observe that  $\tau$ , the denominator of the argument of rect  $(x/\tau)$ , indicates the width of the pulse.

#### **UNIT TRIANGLE FUNCTION**

We define a unit triangle function  $\Delta(x)$  as a triangular pulse of unit height and unit width, centered at the origin, as shown in Fig. 7.8a

$$\Delta(x) = \begin{cases} 0 & |x| \ge \frac{1}{2} \\ 1 - 2|x| & |x| < \frac{1}{2} \end{cases}$$
(7.17)

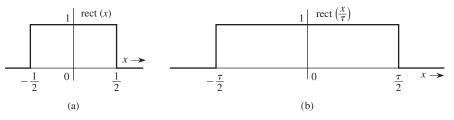


Figure 7.7 A gate pulse.

<sup>&</sup>lt;sup>†</sup>At |x| = 0.5, we require rect(x) = 0.5 because the inverse Fourier transform of a discontinuous signal converges to the mean of its two values at the discontinuity.

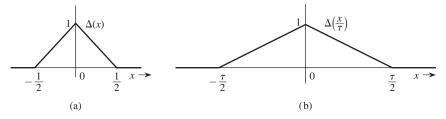


Figure 7.8 A triangle pulse.

The pulse in Fig. 7.8b is  $\Delta(x/\tau)$ . Observe that here, as for the gate pulse, the denominator  $\tau$  of the argument of  $\Delta(x/\tau)$  indicates the pulse width.

#### INTERPOLATION FUNCTION SINC (x)

The function  $\sin x/x$  is the "sine over argument" function denoted by  $\operatorname{sinc}(x)$ .<sup>†</sup> This function plays an important role in signal processing. It is also known as the *filtering or interpolating function*. We define

$$\operatorname{sinc}\left(x\right) = \frac{\sin x}{x} \tag{7.18}$$

Inspection of Eq. (7.18) shows the following:

- 1.  $\operatorname{sinc}(x)$  is an even function of x.
- 2.  $\operatorname{sinc}(x) = 0$  when  $\sin x = 0$  except at x = 0, where it appears to be indeterminate. This means that  $\operatorname{sinc} x = 0$  for  $x = \pm \pi, \pm 2\pi, \pm 3\pi, \ldots$
- 3. Using L'Hôpital's rule, we find sinc (0) = 1.
- 4.  $\operatorname{sinc}(x)$  is the product of an oscillating signal  $\sin x$  (of period  $2\pi$ ) and a monotonically decreasing function 1/x. Therefore,  $\operatorname{sinc}(x)$  exhibits damped oscillations of period  $2\pi$ , with amplitude decreasing continuously as 1/x.

Figure 7.9a shows sinc (x). Observe that sinc (x) = 0 for values of x that are positive and negative integer multiples of  $\pi$ . Figure 7.9b shows sinc ( $3\omega/7$ ). The argument  $3\omega/7 = \pi$  when  $\omega = 7\pi/3$ . Therefore, the first zero of this function occurs at  $\omega = 7\pi/3$ .

### **DRILL 7.1 Sketching Basic Functions**

Sketch: (a) rect (x/8), (b)  $\Delta(\omega/10)$ , (c) sinc  $(3\pi\omega/2)$ , and (d) sinc (t) rect  $(t/4\pi)$ .

$$\operatorname{sinc}\left(x\right) = \frac{\sin \pi x}{\pi x}$$

<sup>&</sup>lt;sup>†</sup> sinc(x) is also denoted by Sa (x) in the literature. Some authors define sinc (x) as

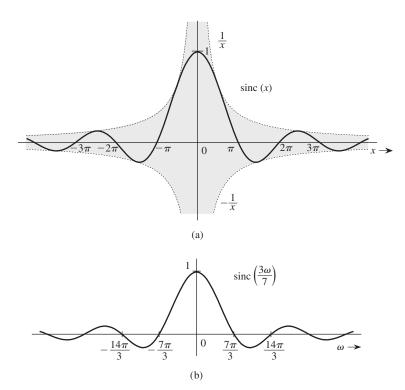


Figure 7.9 A sinc pulse.

# **EXAMPLE 7.2** Fourier Transform of a Rectangular Pulse

Find the Fourier transform of  $x(t) = \text{rect}(t/\tau)$  (Fig. 7.10a).

$$X(\omega) = \int_{-\infty}^{\infty} \operatorname{rect}\left(\frac{t}{\tau}\right) e^{-j\omega t} dt$$

Since rect  $(t/\tau) = 1$  for  $|t| < \tau/2$ , and since it is zero for  $|t| > \tau/2$ ,

$$X(\omega) = \int_{-\tau/2}^{\tau/2} e^{-j\omega t} dt$$
$$= -\frac{1}{j\omega} (e^{-j\omega \tau/2} - e^{j\omega \tau/2}) = \frac{2\sin\left(\frac{\omega \tau}{2}\right)}{\omega}$$
$$= \tau \frac{\sin\left(\frac{\omega \tau}{2}\right)}{\left(\frac{\omega \tau}{2}\right)} = \tau \operatorname{sinc}\left(\frac{\omega \tau}{2}\right)$$

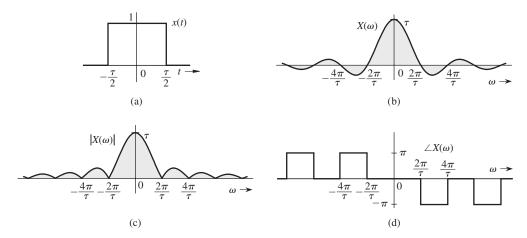


Figure 7.10 (a) A gate pulse x(t), (b) its Fourier spectrum  $X(\omega)$ , (c) its amplitude spectrum  $|X(\omega)|$ , and (d) its phase spectrum  $\angle X(\omega)$ .

Therefore,

$$\operatorname{rect}\left(\frac{t}{\tau}\right) \Longleftrightarrow \tau \operatorname{sinc}\left(\frac{\omega\tau}{2}\right)$$
 (7.19)


Recall that  $\operatorname{sinc}(x) = 0$  when  $x = \pm n\pi$ . Hence,  $\operatorname{sinc}(\omega\tau/2) = 0$  when  $\omega\tau/2 = \pm n\pi$ ; that is, when  $\omega = \pm 2n\pi/\tau$ , (n = 1, 2, 3, ...), as depicted in Fig. 7.10b. The Fourier transform  $X(\omega)$  shown in Fig. 7.10b exhibits positive and negative values. A negative amplitude can be considered to be a positive amplitude with a phase of  $-\pi$  or  $\pi$ . We use this observation to plot the amplitude spectrum  $|X(\omega)| = |\operatorname{sinc}(\omega\tau/2)|$  (Fig. 7.10c) and the phase spectrum  $\angle X(\omega)$ (Fig. 7.10d). The phase spectrum, which is required to be an odd function of  $\omega$ , may be drawn in several other ways because a negative sign can be accounted for by a phase of  $\pm n\pi$ , where *n* is any odd integer. All such representations are equivalent.

# BANDWIDTH OF RECT $\left(\frac{t}{\tau}\right)$

The spectrum  $X(\omega)$  in Fig. 7.10 peaks at  $\omega = 0$  and decays at higher frequencies. Therefore, rect $(t/\tau)$  is a lowpass signal with most of the signal energy in lower-frequency components. Strictly speaking, because the spectrum extends from 0 to  $\infty$ , the bandwidth is  $\infty$ . However, much of the spectrum is concentrated within the first lobe (from  $\omega = 0$  to  $\omega = 2\pi/\tau$ ). Therefore, a rough estimate of the bandwidth of a rectangular pulse of width  $\tau$  seconds is  $2\pi/\tau$  rad/s, or  $1/\tau$  Hz.<sup>†</sup> Note the reciprocal relationship of the pulse width with its bandwidth. We shall observe later that this result is true, in general.

692

<sup>&</sup>lt;sup>†</sup> To compute bandwidth, we must consider the spectrum for positive values of  $\omega$  only. See the discussion in Sec. 6.3.

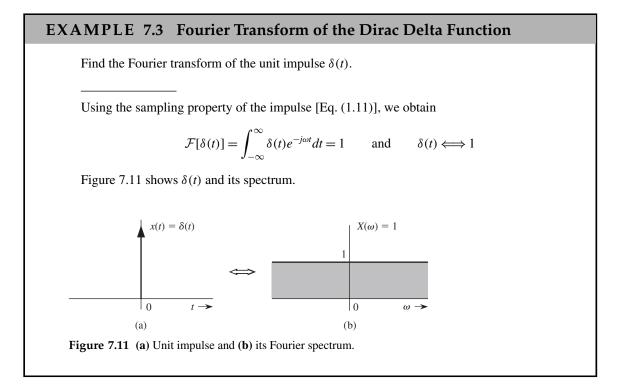

#### **EXAMPLE 7.4** Inverse Fourier Transform of the Dirac Delta Function

Find the inverse Fourier transform of  $\delta(\omega)$ .

On the basis of Eq. (7.10) and the sampling property of the impulse function,

$$\mathcal{F}^{-1}[\delta(\omega)] = \frac{1}{2\pi} \int_{-\infty}^{\infty} \delta(\omega) e^{i\omega t} d\omega = \frac{1}{2\pi}$$

Therefore,

$$\frac{1}{2\pi} \iff \delta(\omega) \quad \text{and} \quad 1 \iff 2\pi\delta(\omega)$$
 (7.20)

This result shows that the spectrum of a constant signal x(t) = 1 is an impulse  $2\pi\delta(\omega)$ , as illustrated in Fig. 7.12.

The result [Eq. (7.20)] could have been anticipated on qualitative grounds. Recall that the Fourier transform of x(t) is a spectral representation of x(t) in terms of everlasting exponential components of the form  $e^{j\omega t}$ . Now, to represent a constant signal x(t) = 1, we need a single

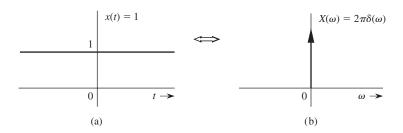


Figure 7.12 (a) A constant (dc) signal and (b) its Fourier spectrum.

everlasting exponential  $e^{j\omega t}$  with  $\omega = 0$ .<sup>†</sup> This results in a spectrum at a single frequency  $\omega = 0$ . Another way of looking at the situation is that x(t) = 1 is a dc signal that has a single frequency  $\omega = 0$  (dc).

If an impulse at  $\omega = 0$  is a spectrum of a dc signal, what does an impulse at  $\omega = \omega_0$  represent? We shall answer this question in the next example.

# **EXAMPLE 7.5** Inverse Fourier Transform of a Shifted Dirac Delta Function

Find the inverse Fourier transform of  $\delta(\omega - \omega_0)$ .

Using the sampling property of the impulse function, we obtain

$$\mathcal{F}^{-1}[\delta(\omega-\omega_0)] = \frac{1}{2\pi} \int_{-\infty}^{\infty} \delta(\omega-\omega_0) e^{j\omega t} d\omega = \frac{1}{2\pi} e^{j\omega_0 t}$$

Therefore,

$$\frac{1}{2\pi}e^{j\omega_0 t} \Longleftrightarrow \delta(\omega - \omega_0) \quad \text{and} \quad e^{j\omega_0 t} \Longleftrightarrow 2\pi\delta(\omega - \omega_0)$$
(7.21)

This result shows that the spectrum of an everlasting exponential  $e^{j\omega_0 t}$  is a single impulse at  $\omega = \omega_0$ . We reach the same conclusion by qualitative reasoning. To represent the everlasting

<sup>&</sup>lt;sup>†</sup> The constant multiplier  $2\pi$  in the spectrum  $[X(\omega) = 2\pi\delta(\omega)]$  may be a bit puzzling. Since  $1 = e^{j\omega t}$  with  $\omega = 0$ , it appears that the Fourier transform of x(t) = 1 should be an impulse of strength unity rather than  $2\pi$ . Recall, however, that in the Fourier transform x(t) is synthesized by exponentials not of amplitude  $X(n\Delta\omega)\Delta\omega$  but of amplitude  $1/2\pi$  times  $X(n\Delta\omega)\Delta\omega$ , as seen from Eq. (7.7). Had we used variable f (hertz) instead of  $\omega$ , the spectrum would have been the unit impulse.

exponential  $e^{j\omega_0 t}$ , we need a single everlasting exponential  $e^{j\omega t}$  with  $\omega = \omega_0$ . Therefore, the spectrum consists of a single component at frequency  $\omega = \omega_0$ . From Eq. (7.21) it follows that

$$e^{-j\omega_0 t} \iff 2\pi \delta(\omega + \omega_0)$$

#### **EXAMPLE 7.6** Fourier Transform of a Sinusoid

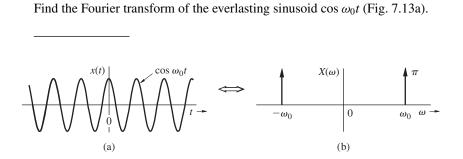


Figure 7.13 (a) A cosine signal and (b) its Fourier spectrum.

Recall Euler's formula

$$\cos \omega_0 t = \frac{1}{2} (e^{j\omega_0 t} + e^{-j\omega_0 t})$$

Applying Eq. (7.21), we obtain

$$\cos \omega_0 t \Longleftrightarrow \pi [\delta(\omega + \omega_0) + \delta(\omega - \omega_0)]$$

The spectrum of  $\cos \omega_0 t$  consists of two impulses at  $\omega_0$  and  $-\omega_0$ , as shown in Fig. 7.13b. The result also follows from qualitative reasoning. An everlasting sinusoid  $\cos \omega_0 t$  can be synthesized by two everlasting exponentials,  $e^{j\omega_0 t}$  and  $e^{-j\omega_0 t}$ . Therefore, the Fourier spectrum consists of only two components of frequencies  $\omega_0$  and  $-\omega_0$ .

# **EXAMPLE 7.7** Fourier Transform of a Periodic Signal

Determine the Fourier transform of a periodic signal x(t) using its Fourier series representation.

We can use a Fourier series to express a periodic signal as a sum of exponentials of the form  $e^{in\omega_0 t}$ , whose Fourier transform is found in Eq. (7.21). Hence, we can readily find the Fourier transform of a periodic signal by using the linearity property in Eq. (7.15).

#### 696 CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

The Fourier series of a periodic signal x(t) with period  $T_0$  is given by

$$x(t) = \sum_{n = -\infty}^{\infty} D_n e^{jn\omega_0 t} \qquad \omega_0 = \frac{2\pi}{T_0}$$

Taking the Fourier transform of both sides, we obtain<sup> $\dagger$ </sup>

$$X(\omega) = 2\pi \sum_{n=-\infty}^{\infty} D_n \delta(\omega - n\omega_0)$$
(7.22)

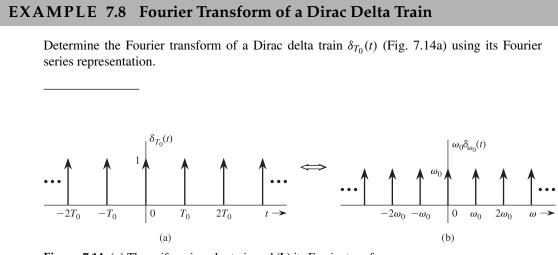


Figure 7.14 (a) The uniform impulse train and (b) its Fourier transform.

As shown in Eq. (6.24) from Ex. 6.9, the Fourier coefficients  $D_n$  for  $\delta_{T_0}(t)$  are constant  $D_n = 1/T_0$ . From Eq. (7.22), the Fourier transform of  $\delta_{T_0}(t)$  is therefore

$$X(\omega) = \frac{2\pi}{T_0} \sum_{n=-\infty}^{\infty} \delta(\omega - n\omega_0) = \omega_0 \delta_{\omega_0}(\omega), \quad \text{where } \omega_0 = \frac{2\pi}{T_0}$$

The corresponding spectrum is shown in Fig. 7.14b.

<sup>&</sup>lt;sup>†</sup> We assume here that the linearity property can be extended to an infinite sum.

# **EXAMPLE 7.9** Fourier Transform of the Unit Step Function

Find the Fourier transform of the unit step function u(t).

Trying to find the Fourier transform of u(t) by direct integration leads to an indeterminate result because

$$U(\omega) = \int_{-\infty}^{\infty} u(t)e^{-j\omega t}dt = \int_{0}^{\infty} e^{-j\omega t}dt = \frac{-1}{j\omega}e^{-j\omega t}\Big|_{0}^{\infty}$$

The upper limit of  $e^{-j\omega t}$  as  $t \to \infty$  yields an indeterminate answer. So we approach this problem by considering u(t) to be a decaying exponential  $e^{-at}u(t)$  in the limit as  $a \to 0$  (Fig. 7.15a). Thus,

$$u(t) = \lim_{a \to 0} e^{-at} u(t)$$

and

$$U(\omega) = \lim_{a \to 0} \mathcal{F}\{e^{-at}u(t)\} = \lim_{a \to 0} \frac{1}{a+j\omega}$$

Expressing the right-hand side in terms of its real and imaginary parts yields

$$U(\omega) = \lim_{a \to 0} \left[ \frac{a}{a^2 + \omega^2} - j\frac{\omega}{a^2 + \omega^2} \right] = \lim_{a \to 0} \left[ \frac{a}{a^2 + \omega^2} \right] + \frac{1}{j\omega}$$

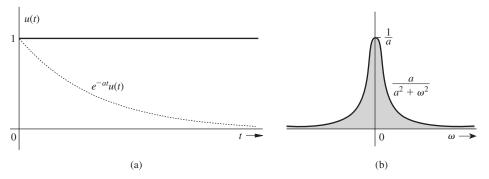


Figure 7.15 Derivation of the Fourier transform of the step function.

The function  $a/(a^2 + \omega^2)$  has interesting properties. First, the area under this function (Fig. 7.15b) is  $\pi$  regardless of the value of a:

$$\int_{-\infty}^{\infty} \frac{a}{a^2 + \omega^2} d\omega = \tan^{-1} \frac{\omega}{a} \Big|_{-\infty}^{\infty} = \pi$$

#### 698 CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

Second, when  $a \to 0$ , this function approaches zero for all  $\omega \neq 0$ , and all its area  $(\pi)$  is concentrated at a single point  $\omega = 0$ . Clearly, as  $a \to 0$ , this function approaches an impulse of strength  $\pi$ . Thus,

$$U(\omega) = \pi \delta(\omega) + \frac{1}{j\omega}$$
(7.23)

Note that u(t) is not a "true" dc signal because it is not constant over the interval  $-\infty$  to  $\infty$ . To synthesize "true" dc, we require only one everlasting exponential with  $\omega = 0$  (impulse at  $\omega = 0$ ). The signal u(t) has a jump discontinuity at t = 0. It is impossible to synthesize such a signal with a single everlasting exponential  $e^{j\omega t}$ . To synthesize this signal from everlasting exponentials, we need, in addition to an impulse at  $\omega = 0$ , all the frequency components, as indicated by the term  $1/j\omega$  in Eq. (7.23).

# **EXAMPLE 7.10** Fourier Transform of the Sign Function

Find the Fourier transform of the sign function sgn(t) [pronounced *signum* (*t*)], depicted in Fig. 7.16.

 $\frac{1}{0} + \frac{1}{1} + \frac{1}$ 


Table 7.1 provides many common Fourier transform pairs.

No.	x(t)	$X(\omega)$	
1	$e^{-at}u(t)$	$\frac{1}{a+j\omega}$	<i>a</i> > 0
2	$e^{at}u(-t)$	$\frac{1}{a-j\omega}$	<i>a</i> > 0
3	$e^{-a t }$	$\frac{2a}{a^2 + \omega^2}$	<i>a</i> > 0
4	$te^{-at}u(t)$	$\frac{1}{(a+j\omega)^2}$	<i>a</i> > 0
5	$t^n e^{-at} u(t)$	$\frac{n!}{(a+j\omega)^{n+1}}$	<i>a</i> > 0
6	$\delta(t)$	1	
7	1	$2\pi\delta(\omega)$	
8	$e^{j\omega_0 t}$	$2\pi\delta(\omega-\omega_0)$	
9	$\cos \omega_0 t$	$\pi[\delta(\omega-\omega_0)+\delta(\omega+\omega_0)]$	
10	$\sin \omega_0 t$	$j\pi[\delta(\omega+\omega_0)-\delta(\omega-\omega_0)]$	
11	u(t)	$\pi \delta(\omega) + \frac{1}{j\omega}$	
12	sgn t	$\frac{2}{j\omega}$	
13	$\cos \omega_0 t u(t)$	$\frac{\pi}{2} \left[ \delta(\omega - \omega_0) + \delta(\omega + \omega_0) \right] + \frac{j\omega}{\omega_0^2 - \omega^2}$	
14	$\sin \omega_0 t u(t)$	$\frac{\pi}{2j}[\delta(\omega-\omega_0)-\delta(\omega+\omega_0)]+\frac{\omega_0}{\omega_0^2-\omega^2}$	
15	$e^{-at}\sin\omega_0 t u(t)$	$\frac{\omega_0}{(a+j\omega)^2+\omega_0^2}$	<i>a</i> > 0
16	$e^{-at}\cos\omega_0 t u(t)$	$\frac{a+j\omega}{(a+j\omega)^2+\omega_0^2}$	<i>a</i> > 0
17	$\operatorname{rect}\left(\frac{t}{\tau}\right)$	$\tau \operatorname{sinc}\left(\frac{\omega\tau}{2}\right)$	
18	$\frac{W}{\pi}\operatorname{sinc}(Wt)$	$\operatorname{rect}\left(\frac{\omega}{2W}\right)$	
19	$\Delta\left(\frac{t}{\tau}\right)$	$\frac{\tau}{2}\operatorname{sinc}^2\left(\frac{\omega\tau}{4}\right)$	
20	$\frac{W}{2\pi}\operatorname{sinc}^2\left(\frac{Wt}{2}\right)$	$\Delta\left(\frac{\omega}{2W}\right)$	
21	$\sum_{\substack{n=-\infty\\e^{-t^2/2\sigma^2}}}^{\infty} \delta(t-nT)$	$\omega_0 \sum_{\substack{n=-\infty\\\sigma\sqrt{2\pi}e^{-\sigma^2\omega^2/2}}}^{\infty} \delta(\omega - n\omega_0)$	$\omega_0 = \frac{2\pi}{T}$
22	$e^{-t^2/2\sigma^2}$	$\sigma \sqrt{2\pi} e^{-\sigma^2 \omega^2/2}$	

**TABLE 7.1** Select Fourier Transform Pairs

#### DRILL 7.2 Inverse Fourier Transform of a Rectangular Pulse

Show that the inverse Fourier transform of  $X(\omega)$  illustrated in Fig. 7.17 is  $x(t) = (\omega_0/\pi) \operatorname{sinc}(\omega_0 t)$ . Sketch x(t).

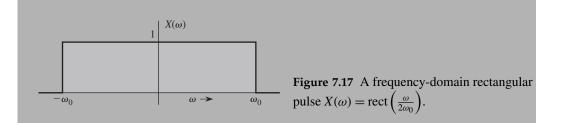

#### DRILL 7.3 Fourier Transform of a General Sinusoid

Show that  $\cos(\omega_0 t + \theta) \iff \pi [\delta(\omega + \omega_0)e^{-j\theta} + \delta(\omega - \omega_0)e^{j\theta}].$ 

### 7.2-1 Connection Between the Fourier and Laplace Transforms

The general (bilateral) Laplace transform of a signal x(t), according to Eq. (4.1), is

$$X(s) = \int_{-\infty}^{\infty} x(t)e^{-st} dt$$
(7.24)

Setting  $s = j\omega$  in this equation yields

$$X(j\omega) = \int_{-\infty}^{\infty} x(t) e^{-j\omega t} dt$$

where  $X(j\omega) = X(s)|_{s=j\omega}$ . But, the right-hand-side integral defines  $X(\omega)$ , the Fourier transform of x(t). Does this mean that the Fourier transform can be obtained from the corresponding Laplace transform by setting  $s = j\omega$ ? In other words, is it true that  $X(j\omega) = X(\omega)$ ? Yes and no. Yes, it is true in most cases. For example, when  $x(t) = e^{-at}u(t)$ , its Laplace transform is 1/(s+a), and  $X(j\omega) = 1/(j\omega + a)$ , which is equal to  $X(\omega)$  (assuming a < 0). However, for the unit step function u(t), the Laplace transform is

$$u(t) \Longleftrightarrow \frac{1}{s}$$
 Res > 0

#### 7.3 Some Properties of the Fourier Transform 701

The Fourier transform is given by

$$u(t) \Longleftrightarrow \frac{1}{j\omega} + \pi \delta(\omega)$$

Clearly,  $X(j\omega) \neq X(\omega)$  in this case.

To understand this puzzle, consider the fact that we obtain  $X(j\omega)$  by setting  $s = j\omega$  in Eq. (7.24). This implies that the integral on the right-hand side of Eq. (7.24) converges for  $s = j\omega$ , meaning that  $s = j\omega$  (the imaginary axis) lies in the ROC for X(s). The general rule is that only when the ROC for X(s) includes the  $\omega$  axis, does setting  $s = j\omega$  in X(s) yield the Fourier transform  $X(\omega)$ , that is,  $X(j\omega) = X(\omega)$ . This is the case of absolutely integrable x(t). If the ROC of X(s) excludes the  $\omega$  axis,  $X(j\omega) \neq X(\omega)$ . This is the case for exponentially growing x(t) and also x(t) that is constant or is oscillating with constant amplitude.

The reason for this peculiar behavior has something to do with the nature of convergence of the Laplace and the Fourier integrals when x(t) is not absolutely integrable.<sup>†</sup>

This discussion shows that although the Fourier transform may be considered as a special case of the Laplace transform, we need to circumscribe such a view. This fact can also be confirmed by noting that a periodic signal has the Fourier transform, but the Laplace transform does not exist.

# 7.3 Some Properties of the Fourier Transform

We now study some of the important properties of the Fourier transform and their implications as well as applications. We have already encountered two important properties, linearity [Eq. (7.15)] and the conjugation property [Eq. (7.11)].

Before embarking on this study, we shall explain an important and pervasive aspect of the Fourier transform: the time-frequency duality.

<sup>&</sup>lt;sup>†</sup> To explain this point, consider the unit step function and its transforms. Both the Laplace and the Fourier transform synthesize x(t), using everlasting exponentials of the form  $e^{st}$ . The frequency *s* can be anywhere in the complex plane for the Laplace transform, but it must be restricted to the  $\omega$  axis in the case of the Fourier transform. The unit step function is readily synthesized in the Laplace transform by a relatively simple spectrum X(s) = 1/s, in which the frequencies *s* are chosen in the RHP [the region of convergence for u(t) is Re s > 0]. In the Fourier transform, however, we are restricted to values of *s* on the  $\omega$  axis only. The function u(t) can still be synthesized by frequencies along the  $\omega$  axis, but the spectrum is more complicated than it is when we are free to choose the frequencies in the RHP. In contrast, when x(t) is absolutely integrable, the region of convergence for the Laplace transform includes the  $\omega$  axis, and we can synthesize x(t) by using frequencies along the  $\omega$  axis. This leads to  $X(j\omega) = X(\omega)$ .

We may explain this concept by an example of two countries, X and Y. Suppose these countries want to construct similar dams in their respective territories. Country X has financial resources but not much manpower. In contrast, Y has considerable manpower but few financial resources. The dams will still be constructed in both countries, although the methods used will be different. Country X will use expensive but efficient equipment to compensate for its lack of manpower, whereas Y will use the cheapest possible equipment in a labor-intensive approach to the project. Similarly, both Fourier and Laplace integrals converge for u(t), but the makeup of the components used to synthesize u(t) will be very different for two cases because of the constraints of the Fourier transform, which are not present for the Laplace transform.

## TIME-FREQUENCY DUALITY IN THE TRANSFORM OPERATIONS

Equations (7.9) and (7.10) show an interesting fact: the direct and the inverse transform operations are remarkably similar. These operations, required to go from x(t) to  $X(\omega)$  and then from  $X(\omega)$  to x(t), are depicted graphically in Fig. 7.18. The inverse transform equation can be obtained from the direct transform equation by replacing x(t) with  $X(\omega)$ , t with  $\omega$ , and  $\omega$  with t. In a similar way, we can obtain the direct from the inverse. There are only two minor differences in these operations: the factor  $2\pi$  appears only in the inverse operator, and the exponential indices in the two operations have opposite signs. Otherwise the two equations are duals of each other.<sup>†</sup>

This observation has far-reaching consequences in the study of the Fourier transform. It is the basis of the so-called duality of time and frequency. *The duality principle may be compared with a photograph and its negative. A photograph can be obtained from its negative, and by using an identical procedure, a negative can be obtained from the photograph.* For any result or relationship between x(t) and  $X(\omega)$ , there exists a dual result or relationship, obtained by interchanging the roles of x(t) and  $X(\omega)$  in the original result (along with some minor modifications arising because of the factor  $2\pi$  and a sign change). For example, the time-shifting property, to be proved later, states that if  $x(t) \iff X(\omega)$ , then

$$x(t-t_0) \iff X(\omega)e^{-j\omega t_0}$$

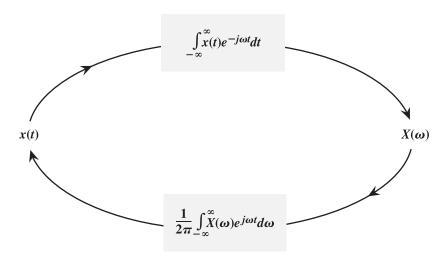


Figure 7.18 A near symmetry between the direct and the inverse Fourier transforms.

$$X(2\pi f) = \int_{-\infty}^{\infty} x(t)e^{-j2\pi ft} dt \quad \text{and} \quad x(t) = \int_{-\infty}^{\infty} X(2\pi f)e^{j2\pi ft} df$$

This leaves only one significant difference, that of sign change in the exponential index.

<sup>&</sup>lt;sup>†</sup> Of the two differences, the former can be eliminated by change of variable from  $\omega$  to f (in hertz). In this case  $\omega = 2\pi f$  and  $d\omega = 2\pi df$ .

Therefore, the direct and the inverse transforms are given by

The dual of this property (the frequency-shifting property) states that

$$x(t)e^{j\omega_0 t} \iff X(\omega - \omega_0)$$

Observe the role reversal of time and frequency in these two equations (with the minor difference of the sign change in the exponential index). The value of this principle lies in the fact that *whenever we derive any result, we can be sure that it has a dual.* This possibility can give valuable insights about many unsuspected properties or results in signal processing.

The properties of the Fourier transform are useful not only in deriving the direct and inverse transforms of many functions, but also in obtaining several valuable results in signal processing. The reader should not fail to observe the ever-present duality in this discussion.

### LINEARITY

The linearity property, already introduced as Eq. (7.15), states that if  $x_1(t) \iff X_1(\omega)$  and  $x_2(t) \iff X_2(\omega)$ , then  $a_1x_1(t) + a_2x_2(t) \iff a_1X_1(\omega) + a_2X_2(\omega)$ .

## CONJUGATION AND CONJUGATE SYMMETRY

The conjugation property, which has already been introduced, states that if  $x(t) \iff X(\omega)$ , then

$$x^*(t) \iff X^*(-\omega)$$

From this property follows the conjugate symmetry property, also introduced earlier, which states that if x(t) is real, then

$$X(-\omega) = X^*(\omega)$$

### DUALITY

The duality property states that if

$$x(t) \iff X(\omega)$$

then

$$X(t) \Longleftrightarrow 2\pi x(-\omega) \tag{7.25}$$


**Proof.** From Eq. (7.10) we can write


$$x(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(u) e^{jut} \, du$$

Hence,

$$2\pi x(-t) = \int_{-\infty}^{\infty} X(u) e^{-jut} \, du$$

Changing t to  $\omega$  yields Eq. (7.25).

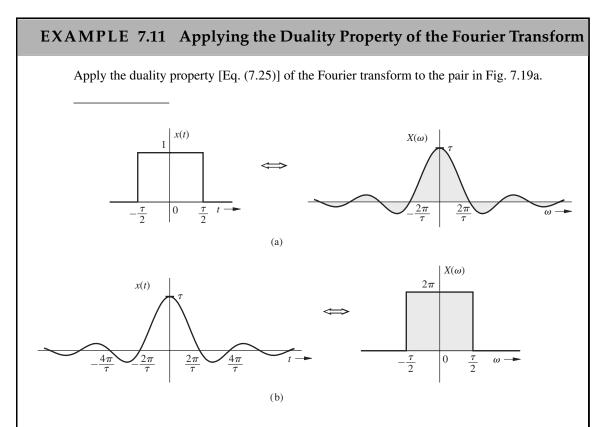

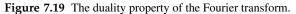

From Eq. (7.19) we have

$$\underbrace{\operatorname{rect}\left(\frac{t}{\tau}\right)}_{x(t)} \longleftrightarrow \underbrace{\tau \operatorname{sinc}\left(\frac{\omega\tau}{2}\right)}_{X(\omega)}$$

Also, X(t) is the same as  $X(\omega)$  with  $\omega$  replaced by t, and  $x(-\omega)$  is the same as x(t) with t replaced by  $-\omega$ . Therefore, the duality property of Eq. (7.25) yields

$$\underbrace{\tau \operatorname{sinc}\left(\frac{\tau t}{2}\right)}_{X(t)} \longleftrightarrow \underbrace{2\pi \operatorname{rect}\left(\frac{-\omega}{\tau}\right)}_{2\pi x(-\omega)} = 2\pi \operatorname{rect}\left(\frac{\omega}{\tau}\right)$$

In this result, we used the fact that rect(-x) = rect(x) because rect is an even function. Figure 7.19b shows this pair graphically. Observe the interchange of the roles of t and  $\omega$  (with the minor adjustment of the factor  $2\pi$ ). This result appears as pair 18 in Table 7.1 (with  $\tau/2 = W$ ).

As an interesting exercise, the reader should generate the dual of every pair in Table 7.1 by applying the duality property.

# **DRILL 7.4** Applying the Duality Property of the Fourier Transform

Apply the duality property to pairs 1, 3, and 9 (Table 7.1) to show that

- (a)  $1/(jt+a) \iff 2\pi e^{a\omega}u(-\omega)$
- **(b)**  $2a/(t^2+a^2) \iff 2\pi e^{-a|\omega|}$
- (c)  $\delta(t+t_0) + \delta(t-t_0) \iff 2\cos t_0 \omega$

# THE SCALING PROPERTY

$$x(t) \Longleftrightarrow X(\omega)$$

then, for any real constant *a*,

$$x(at) \iff \frac{1}{|a|} X\left(\frac{\omega}{a}\right)$$
 (7.26)

**Proof.** For a positive real constant *a*,

$$\mathcal{F}[x(at)] = \int_{-\infty}^{\infty} x(at)e^{-j\omega t}dt = \frac{1}{a}\int_{-\infty}^{\infty} x(u)e^{(-j\omega/a)u}du = \frac{1}{a}X\left(\frac{\omega}{a}\right)$$

Similarly, we can demonstrate that if a < 0,

$$x(at) \Longleftrightarrow \frac{-1}{a} X\left(\frac{\omega}{a}\right)$$

Hence follows Eq. (7.26).

## SIGNIFICANCE OF THE SCALING PROPERTY

The function x(at) represents the function x(t) compressed in time by a factor *a* (see Sec. 1.2-2). Similarly, a function  $X(\omega/a)$  represents the function  $X(\omega)$  expanded in frequency by the same factor *a*. The scaling property states that time compression of a signal results in its spectral expansion, and time expansion of the signal results in its spectral compression. Intuitively, compression in time by factor *a* means that the signal is varying faster by factor *a*.<sup>†</sup> To synthesize such a signal, the frequencies of its sinusoidal components must be increased by the factor *a*, implying that its frequency spectrum is expanded by the factor *a*. Similarly, a signal expanded in time varies more slowly; hence the frequencies of its components are lowered, implying that its frequency spectrum is compressed. For instance, the signal  $\cos 2\omega_0 t$  is the same as the signal  $\cos \omega_0 t$  time-compressed by a factor of 2. Clearly, the spectrum of the former (impulse at  $\pm 2\omega_0$ ) is an expanded version of the spectrum of the latter (impulse at  $\pm \omega_0$ ). The effect of this scaling is demonstrated in Fig. 7.20.

<sup>&</sup>lt;sup>†</sup> We are assuming a > 1, although the argument still holds if a < 1. In the latter case, compression becomes expansion by factor 1/a, and vice versa.

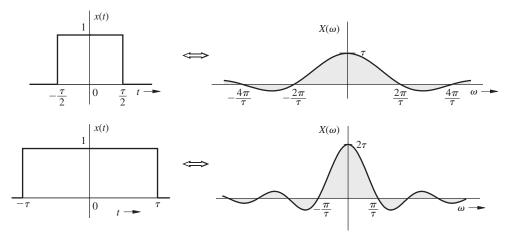


Figure 7.20 The scaling property of the Fourier transform.

## **RECIPROCITY OF SIGNAL DURATION AND ITS BANDWIDTH**

The scaling property implies that if x(t) is wider, its spectrum is narrower, and vice versa. Doubling the signal duration halves its bandwidth, and vice versa. This suggests that the bandwidth of a signal is inversely proportional to the signal duration or width (in seconds).<sup>†</sup> We have already verified this fact for the gate pulse, where we found that the bandwidth of a gate pulse of width  $\tau$ seconds is  $1/\tau$  Hz. More discussion of this interesting topic can be found in the literature [2].

By letting a = -1 in Eq. (7.26), we obtain the *inversion* (or reflection) property of time and frequency:

$$x(-t) \Longleftrightarrow X(-\omega) \tag{7.27}$$

# **EXAMPLE 7.12** Fourier Transform Reflection Property

Using the reflection property of the Fourier transform and Table 7.1, find the Fourier transforms of  $e^{at}u(-t)$  and  $e^{-a|t|}$ .

Application of Eq. (7.27) to pair 1 of Table 7.1 yields

$$e^{at}u(-t) \Longleftrightarrow \frac{1}{a-j\omega} \qquad a>0$$

Also,


$$e^{-a|t|} = e^{-at}u(t) + e^{at}u(-t)$$

<sup>&</sup>lt;sup>†</sup>When a signal has infinite duration, we must consider its effective or equivalent duration. There is no unique definition of effective signal duration. One possible definition is given in Eq. (2.47).

Therefore,

$$e^{-a|t|} \longleftrightarrow \frac{1}{a+j\omega} + \frac{1}{a-j\omega} = \frac{2a}{a^2+\omega^2} \qquad a > 0$$
 (7.28)

The signal  $e^{-a|t|}$  and its spectrum are illustrated in Fig. 7.21.

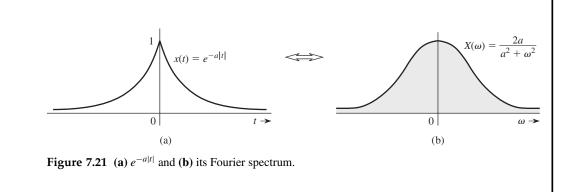

# THE TIME-SHIFTING PROPERTY IF

$$x(t) \iff X(\omega)$$

then

$$x(t-t_0) \Longleftrightarrow X(\omega)e^{-j\omega t_0} \tag{7.29}$$

Proof. By definition,

$$\mathcal{F}[x(t-t_0)] = \int_{-\infty}^{\infty} x(t-t_0)e^{-j\omega t} dt$$

Letting  $t - t_0 = u$ , we have

$$\mathcal{F}[x(t-t_0)] = \int_{-\infty}^{\infty} x(u)e^{-j\omega(u+t_0)} du = e^{-j\omega t_0} \int_{-\infty}^{\infty} x(u)e^{-j\omega u} du = X(\omega)e^{-j\omega t_0}$$

This result shows that delaying a signal by  $t_0$  seconds does not change its amplitude spectrum. The phase spectrum, however, is changed by  $-\omega t_0$ .

## PHYSICAL EXPLANATION OF THE LINEAR PHASE

Time delay in a signal causes a linear phase shift in its spectrum. This result can also be derived by heuristic reasoning. Imagine x(t) being synthesized by its Fourier components, which are sinusoids of certain amplitudes and phases. The delayed signal  $x(t - t_0)$  can be synthesized by the same sinusoidal components, each delayed by  $t_0$  seconds. The amplitudes of the components remain unchanged. Therefore, the amplitude spectrum of  $x(t - t_0)$  is identical to that of x(t). The time delay of  $t_0$  in each sinusoid, however, does change the phase of each component. Now, a sinusoid

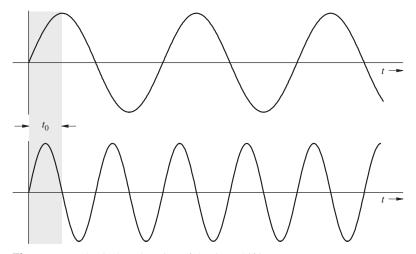


Figure 7.22 Physical explanation of the time-shifting property.

 $\cos \omega t$  delayed by  $t_0$  is given by

 $\cos\omega \left(t - t_0\right) = \cos\left(\omega t - \omega t_0\right)$ 

Therefore a time delay  $t_0$  in a sinusoid of frequency  $\omega$  manifests as a phase delay of  $\omega t_0$ . This is a linear function of  $\omega$ , meaning that higher-frequency components must undergo proportionately higher phase shifts to achieve the same time delay. This effect is depicted in Fig. 7.22 with two sinusoids, the frequency of the lower sinusoid being twice that of the upper. The same time delay  $t_0$ amounts to a phase shift of  $\pi/2$  in the upper sinusoid and a phase shift of  $\pi$  in the lower sinusoid. This verifies the fact that to achieve the same time delay, higher-frequency sinusoids must undergo proportionately higher phase shifts. The principle of linear phase shift is very important, and we shall encounter it again in distortionless signal transmission and filtering applications.


## **EXAMPLE 7.13** Fourier Transform Time-Shifting Property

Use the time-shifting property to find the Fourier transform of  $e^{-a|t-t_0|}$ .

This function, shown in Fig. 7.23a, is a time-shifted version of  $e^{-a|t|}$  (depicted in Fig. 7.21a). From Eqs. (7.28) and (7.29), we have

$$e^{-a|t-t_0|} \Longleftrightarrow \frac{2a}{a^2+\omega^2}e^{-j\omega t_0}$$

The spectrum of  $e^{-a|t-t_0|}$  (Fig. 7.23b) is the same as that of  $e^{-a|t|}$  (Fig. 7.21b), except for an added phase shift of  $-\omega t_0$ .

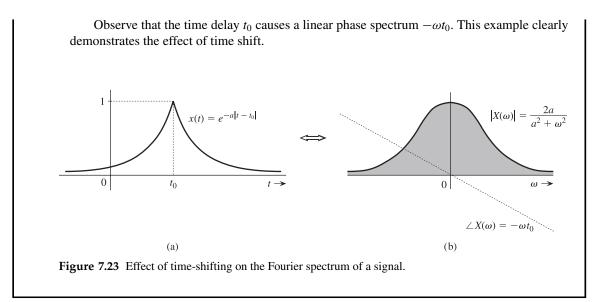

## **EXAMPLE 7.14** Fourier Transform of a Time-Shifted Rectangular Pulse

Find the Fourier transform of the time-shifted rectangular pulse x(t) illustrated in Fig. 7.24a.

The pulse x(t) is the gate pulse rect $(t/\tau)$  in Fig. 7.10a delayed by  $3\tau/4$  seconds. Hence, according to Eq. (7.29), its Fourier transform is the Fourier transform of rect $(t/\tau)$  multiplied by  $e^{-j\omega(3\tau/4)}$ . Therefore,

$$X(\omega) = \tau \operatorname{sinc}\left(\frac{\omega\tau}{2}\right) e^{-j\omega(3\tau/4)}$$

The amplitude spectrum  $|X(\omega)|$  (depicted in Fig. 7.24b) of this pulse is the same as that indicated in Fig. 7.10c. But the phase spectrum has an added linear term  $-3\omega\tau/4$ . Hence, the phase spectrum of x(t) (Fig. 7.24a) is identical to that in Fig. 7.10d plus a linear term  $-3\omega\tau/4$ , as shown in Fig. 7.24c.


## PHASE SPECTRUM USING PRINCIPAL VALUES

There is an alternate way of spectral representation of  $\angle X(\omega)$ . The phase angle computed on a calculator or by using a computer subroutine is generally the principal value (modulo  $2\pi$  value) of the phase angle, which always lies in the range  $-\pi$  to  $\pi$ . For instance, the principal value of angle  $3\pi/2$  is  $-\pi/2$ , and so on. The principal value differs from the actual value by  $\pm 2\pi$  radians (and its integer multiples) in a way that ensures that the principal value remains within  $-\pi$  to  $\pi$ . Thus, the principal value will show jump discontinuities of  $\pm 2\pi$  whenever the actual

#### CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

710

phase crosses  $\pm \pi$ . The phase plot in Fig. 7.24c is redrawn in Fig. 7.24d using the principal value for the phase. This phase pattern, which contains phase discontinuities of magnitudes  $2\pi$  and  $\pi$ , becomes repetitive at intervals of  $\omega = 8\pi/\tau$ .

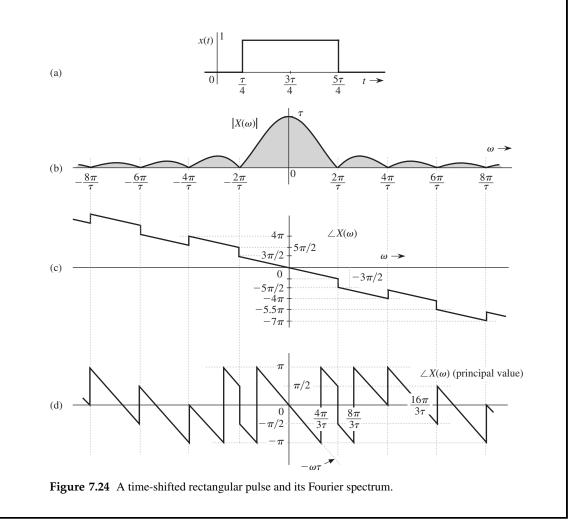

## **DRILL 7.5 Fourier Transform Time-Shifting Property**

Use pair 18 of Table 7.1 and the time-shifting property to show that the Fourier transform of  $\operatorname{sinc}[\omega_0(t-T)]$  is  $(\pi/\omega_0)\operatorname{rect}(\omega/2\omega_0)e^{-j\omega T}$ . Sketch the amplitude and phase spectra of the Fourier transform.

# THE FREQUENCY-SHIFTING PROPERTY If

$$x(t) \Longleftrightarrow X(\omega)$$

then

$$x(t)e^{j\omega_0 t} \Longleftrightarrow X(\omega - \omega_0) \tag{7.30}$$

Proof. By definition,

$$\mathcal{F}[x(t)e^{j\omega_0 t}] = \int_{-\infty}^{\infty} x(t)e^{j\omega_0 t}e^{-j\omega t} dt = \int_{-\infty}^{\infty} x(t)e^{-j(\omega-\omega_0)t} dt = X(\omega-\omega_0)$$

According to this property, the multiplication of a signal by a factor  $e^{j\omega_0 t}$  shifts the spectrum of that signal by  $\omega = \omega_0$ . Note the duality between the time-shifting and the frequency-shifting properties.

Changing  $\omega_0$  to  $-\omega_0$  in Eq. (7.30) yields

$$x(t)e^{-j\omega_0 t} \Longleftrightarrow X(\omega + \omega_0) \tag{7.31}$$

Because  $e^{j\omega_0 t}$  is not a real function that can be generated, frequency shifting in practice is achieved by multiplying x(t) by a sinusoid. Observe that

$$x(t)\cos\omega_0 t = \frac{1}{2}[x(t)e^{j\omega_0 t} + x(t)e^{-j\omega_0 t}]$$

From Eqs. (7.30) and (7.31), it follows that

$$x(t)\cos\omega_0 t \Longleftrightarrow \frac{1}{2}[X(\omega - \omega_0) + X(\omega + \omega_0)]$$
(7.32)

This result shows that the multiplication of a signal x(t) by a sinusoid of frequency  $\omega_0$  shifts the spectrum  $X(\omega)$  by  $\pm \omega_0$ , as depicted in Fig. 7.25.


Multiplication of a sinusoid  $\cos \omega_0 t$  by x(t) amounts to modulating the sinusoid amplitude. This type of modulation is known as *amplitude modulation*. The sinusoid  $\cos \omega_0 t$  is called the *carrier*, the signal x(t) is the *modulating signal*, and the signal  $x(t) \cos \omega_0 t$  is the *modulated signal*. Further discussion of modulation and demodulation appears in Sec. 7.7.

To sketch a signal  $x(t) \cos \omega_0 t$ , we observe that

$$x(t)\cos\omega_0 t = \begin{cases} x(t) & \text{when } \cos\omega_0 t = 1\\ -x(t) & \text{when } \cos\omega_0 t = -1 \end{cases}$$

Therefore,  $x(t) \cos \omega_0 t$  touches x(t) when the sinusoid  $\cos \omega_0 t$  is at its positive peaks and touches -x(t) when  $\cos \omega_0 t$  is at its negative peaks. This means that x(t) and -x(t) act as envelopes for the signal  $x(t) \cos \omega_0 t$  (see Fig. 7.25). The signal -x(t) is a mirror image of x(t) about the horizontal axis. Figure 7.25 shows the signals x(t) and  $x(t) \cos \omega_0 t$  and their spectra.

712

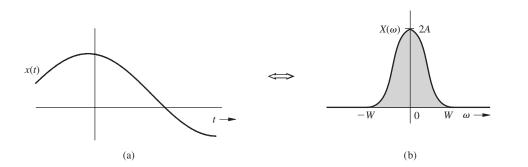

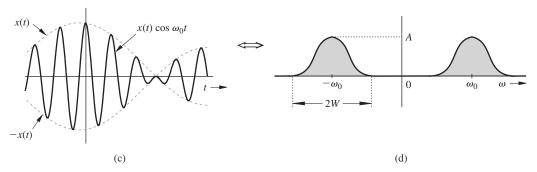


Figure 7.25 Amplitude modulation of a signal causes spectral shifting.

## **EXAMPLE 7.15** Spectral Shifting by Amplitude Modulation

Find and sketch the Fourier transform of the modulated signal  $x(t) \cos 10t$  in which x(t) is a gate pulse rect (t/4), as illustrated in Fig. 7.26a.


From pair 17 of Table 7.1, we find rect  $(t/4) \iff 4 \operatorname{sinc} (2\omega)$ , which is depicted in Fig. 7.26b. From Eq. (7.32) it follows that

$$x(t)\cos 10t \iff \frac{1}{2}[X(\omega+10) + X(\omega-10)]$$

In this case,  $X(\omega) = 4 \operatorname{sinc} (2\omega)$ . Therefore,

 $x(t) \cos 10t \iff 2 \operatorname{sinc} [2(\omega + 10)] + 2 \operatorname{sinc} [2(\omega - 10)]$ 

The spectrum (Fig. 7.26c) of  $x(t) \cos 10t$  is obtained by shifting  $X(\omega)$  in Fig. 7.26b to the left by 10 and also to the right by 10, and then multiplying it by 0.5, as depicted in Fig. 7.26d.

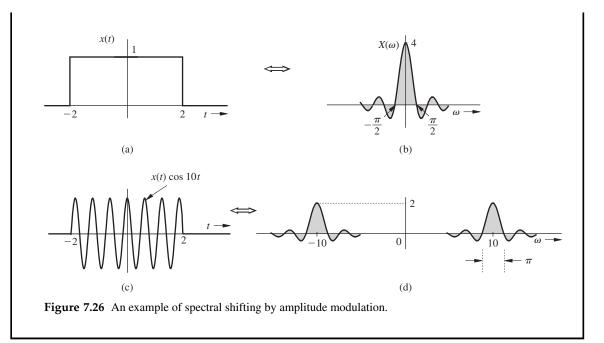

## DRILL 7.6 Fourier Transform of an Amplitude-Modulated Signal

Sketch signal  $e^{-|t|} \cos 10t$ . Find the Fourier transform of this signal and sketch its spectrum. **Answer:**  $X(\omega) = \frac{1}{(\omega-10)^2+1} + \frac{1}{(\omega+10)^2+1}$ . See Fig. 7.21b for the spectrum of  $e^{-a|t|}$ .

## DRILL 7.7 Amplitude Modulation Using a Phase-Shifted Carrier


Show that

```
x(t)\cos(\omega_0 t + \theta) \iff \frac{1}{2} \left[ X(\omega - \omega_0)e^{i\theta} + X(\omega + \omega_0)e^{-i\theta} \right]
```

## APPLICATIONS OF MODULATION

Modulation is used to shift signal spectra. Some of the situations that call for spectrum shifting are presented next.

1. If several signals, all occupying the same frequency band, are transmitted simultaneously over the same transmission medium, they will all interfere; it will be impossible to separate or retrieve them at a receiver. For example, if all radio stations decide to broadcast audio signals simultaneously, a receiver will not be able to separate them. This problem is solved

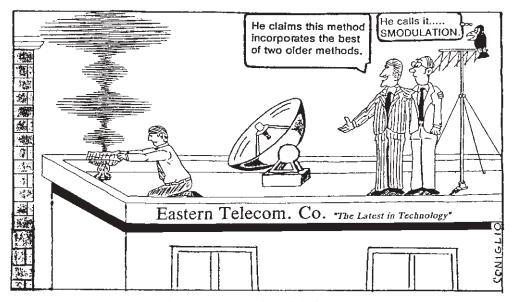

Old is gold, but sometimes it is fool's gold.

by using modulation, whereby each radio station is assigned a distinct carrier frequency. Each station transmits a modulated signal. This procedure shifts the signal spectrum to its allocated band, which is not occupied by any other station. A radio receiver can pick up any station by tuning to the band of the desired station. The receiver must now demodulate the received signal (undo the effect of modulation). Demodulation therefore consists of another spectral shift required to restore the signal to its original band. Note that both modulation and demodulation implement spectral shifting; consequently, demodulation operation is similar to modulation (see Sec. 7.7).

This method of transmitting several signals simultaneously over a channel by sharing its frequency band is known as *frequency-division multiplexing (FDM)*.

2. For effective radiation of power over a radio link, the antenna size must be of the order of the wavelength of the signal to be radiated. Audio signal frequencies are so low (wavelengths are so large) that impracticably large antennas would be required for radiation. Here, shifting the spectrum to a higher frequency (a smaller wavelength) by modulation solves the problem.

## CONVOLUTION

The time-convolution property and its dual, the frequency-convolution property, state that if

$$x_1(t) \iff X_1(\omega)$$
 and  $x_2(t) \iff X_2(\omega)$ 

then

$$x_1(t) * x_2(t) \iff X_1(\omega)X_2(\omega)$$
 (time convolution) (7.33)

#### 7.3 Some Properties of the Fourier Transform 715

and

$$x_1(t)x_2(t) \iff \frac{1}{2\pi}X_1(\omega) * X_2(\omega)$$
 (frequency convolution) (7.34)

Proof. By definition,

$$\mathcal{F}|x_1(t) * x_2(t)| = \int_{-\infty}^{\infty} e^{-j\omega t} \left[ \int_{-\infty}^{\infty} x_1(\tau) x_2(t-\tau) d\tau \right] dt$$
$$= \int_{-\infty}^{\infty} x_1(\tau) \left[ \int_{-\infty}^{\infty} e^{-j\omega t} x_2(t-\tau) dt \right] d\tau$$

The inner integral is the Fourier transform of  $x_2(t - \tau)$ , given by [time-shifting property in Eq. (7.29)]  $X_2(\omega)e^{-j\omega\tau}$ . Hence,

$$\mathcal{F}[x_1(t) * x_2(t)] = \int_{-\infty}^{\infty} x_1(\tau) e^{-j\omega\tau} X_2(\omega) d\tau = X_2(\omega) \int_{-\infty}^{\infty} x_1(\tau) e^{-j\omega\tau} d\tau = X_1(\omega) X_2(\omega)$$

Let  $H(\omega)$  be the Fourier transform of the unit impulse response h(t), that is,

 $h(t) \Longleftrightarrow H(\omega)$ 

Application of the time-convolution property to y(t) = x(t) \* h(t) yields [assuming that both x(t) and h(t) are Fourier transformable]

$$Y(\omega) = X(\omega)H(\omega) \tag{7.35}$$

The frequency-convolution property of Eq. (7.34) can be proved in exactly the same way by reversing the roles of x(t) and  $X(\omega)$ .

# **EXAMPLE 7.16** Time-Convolution Property to Show the Time-Integration Property

Use the time-convolution property to show that if

$$x(t) \iff X(\omega)$$

then

$$\int_{-\infty}^{t} x(\tau) \, d\tau \Longleftrightarrow \frac{X(\omega)}{j\omega} + \pi X(0) \delta(\omega)$$

Because

$$u(t-\tau) = \begin{cases} 1 & \tau \le t \\ 0 & \tau > t \end{cases}$$

it follows that

$$x(t) * u(t) = \int_{-\infty}^{\infty} x(\tau)u(t-\tau) d\tau = \int_{-\infty}^{t} x(\tau) d\tau$$

## 716 CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

Now, from the time-convolution property [Eq. (7.33)], it follows that

$$\begin{aligned} x(t) * u(t) &= \int_{-\infty}^{t} x(\tau) \, d\tau \Longleftrightarrow X(\omega) \left[ \frac{1}{j\omega} + \pi \, \delta(\omega) \right] \\ &= \frac{X(\omega)}{j\omega} + \pi X(0) \delta(\omega) \end{aligned}$$

In deriving the last result, we used Eq. (1.10).

## DRILL 7.8 Fourier Transform Time-Convolution Property

Use the time-convolution property to show that:

(a) 
$$x(t) * \delta(t) = x(t)$$

**(b)** 
$$e^{-at}u(t) * e^{-bt}u(t) = \frac{1}{b-a}[e^{-at} - e^{-bt}]u(t)$$

# TIME DIFFERENTIATION AND TIME INTEGRATION If

$$x(t) \iff X(\omega)$$

then<sup>†</sup>

$$\frac{dx(t)}{dt} \longleftrightarrow j\omega X(\omega) \quad \text{(time differentiation)}$$
(7.36)

and

$$\int_{-\infty}^{t} x(\tau) d\tau \iff \frac{X(\omega)}{j\omega} + \pi X(0)\delta(\omega) \quad \text{(time integration)}$$
(7.37)

**Proof.** Differentiation of both sides of Eq. (7.10) yields

$$\frac{dx(t)}{dt} = \frac{1}{2\pi} \int_{-\infty}^{\infty} j\omega X(\omega) e^{j\omega t} d\omega$$

$$\int_{-\infty}^{\infty} \left| \frac{dx(t)}{dt} \right| \, dt < \infty$$

<sup>&</sup>lt;sup>†</sup> Valid only if the transform of dx/dt exists. In other words, dx/dt must satisfy the Dirichlet conditions. The first Dirichlet condition implies

We also require that  $x(t) \to 0$  as  $t \to \pm \infty$ . Otherwise, x(t) has a dc component, which gets lost in differentiation, and there is no one-to-one relationship between x(t) and dx/dt.

Operation	$\boldsymbol{x}(t)$	$X(\omega)$
Scalar multiplication	kx(t)	$kX(\omega)$
Addition	$x_1(t) + x_2(t)$	$X_1(\omega) + X_2(\omega)$
Conjugation	$x^*(t)$	$X^*(-\omega)$
Duality	X(t)	$2\pi x(-\omega)$
Scaling ( <i>a</i> real)	x(at)	$\frac{1}{ a }X\left(\frac{\omega}{a}\right)$
Time shifting	$x(t-t_0)$	$X(\omega)e^{-j\omega t_0}$
Frequency shifting ( $\omega_0$ real)	$x(t)e^{j\omega_0 t}$	$X(\omega - \omega_0)$
Time convolution	$x_1(t) * x_2(t)$	$X_1(\omega)X_2(\omega)$
Frequency convolution	$x_1(t)x_2(t)$	$\frac{1}{2\pi}X_1(\omega)*X_2(\omega)$
Time differentiation	$\frac{d^n x(t)}{dt^n}$	$(j\omega)^n X(\omega)$
Time integration	$\int_{-\infty}^t x(u)du$	$\frac{X(\omega)}{j\omega} + \pi X(0)\delta(\omega)$

**TABLE 7.2** Fourier Transform Properties

This result shows that

$$\frac{dx(t)}{dt} \Longleftrightarrow j\omega X(\omega)$$


Repeated application of this property yields

$$\frac{d^n x(t)}{dt^n} \longleftrightarrow (j\omega)^n X(\omega)$$

The time-integration property [Eq. (7.37)] has already been proved in Ex. 7.16. Table 7.2 summarizes the most important properties of the Fourier transform.

# EXAMPLE 7.17 Fourier Transform Time-Differentiation Property

Use the time-differentiation property to find the Fourier transform of the triangle pulse  $\Delta(t/\tau)$  illustrated in Fig. 7.27a. Verify the correctness of the spectrum by using it to synthesize a periodic replication of the original time-domain signal with  $\tau = 1$ .

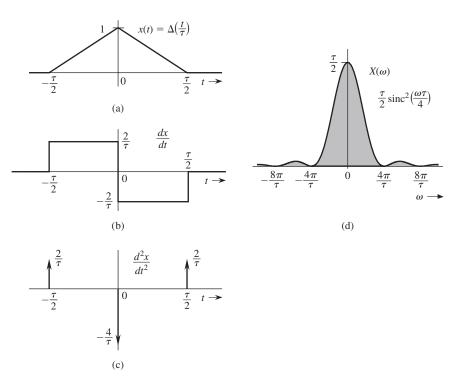

**Figure 7.27** Finding the Fourier transform of a piecewise-linear signal using the time-differentiation property.

To find the Fourier transform of this pulse, we differentiate the pulse successively, as illustrated in Fig. 7.27b and 7.27c. Because dx/dt is constant everywhere, its derivative,  $d^2x/dt^2$ , is zero everywhere. But dx/dt has jump discontinuities with a positive jump of  $2/\tau$  at  $t = \pm \tau/2$ , and a negative jump of  $4/\tau$  at t = 0. Recall that the derivative of a signal at a jump discontinuity is an impulse at that point of strength equal to the amount of jump. Hence,  $d^2x/dt^2$ , the derivative of dx/dt, consists of a sequence of impulses, as depicted in Fig. 7.27c; that is,

$$\frac{d^2x(t)}{dt^2} = \frac{2}{\tau} \left[ \delta\left(t + \frac{\tau}{2}\right) - 2\delta(t) + \delta\left(t - \frac{\tau}{2}\right) \right]$$

From the time-differentiation property [Eq. (7.36)],

$$\frac{d^2 x(t)}{dt^2} \longleftrightarrow (j\omega)^2 X(\omega) = -\omega^2 X(\omega)$$

Also, from the time-shifting property [Eq. (7.29)],

$$\delta(t-t_0) \iff e^{-j\omega t_0}$$

Combining these results, we obtain

$$-\omega^2 X(\omega) = \frac{2}{\tau} \left[ e^{j(\omega\tau/2)} - 2 + e^{-j(\omega\tau/2)} \right] = \frac{4}{\tau} \left( \cos\frac{\omega\tau}{2} - 1 \right) = -\frac{8}{\tau} \sin^2\left(\frac{\omega\tau}{4}\right)$$

and

$$X(\omega) = \frac{8}{\omega^2 \tau} \sin^2\left(\frac{\omega\tau}{4}\right) = \frac{\tau}{2} \left[\frac{\sin\left(\frac{\omega\tau}{4}\right)}{\frac{\omega\tau}{4}}\right]^2 = \frac{\tau}{2} \operatorname{sinc}^2\left(\frac{\omega\tau}{4}\right)$$

The spectrum  $X(\omega)$  is depicted in Fig. 7.27d. This procedure of finding the Fourier transform can be applied to any function x(t) made up of straight-line segments with  $x(t) \rightarrow 0$  as  $|t| \rightarrow \infty$ . The second derivative of such a signal yields a sequence of impulses whose Fourier transform can be found by inspection. This example suggests a numerical method of finding the Fourier transform of an arbitrary signal x(t) by approximating the signal by straight-line segments.

# SYNTHESIZING A PERIODIC REPLICATION TO VERIFY SPECTRUM CORRECTNESS

While a signal's spectrum  $X(\omega)$  provides useful insight into signal character, it can be difficult to look at  $X(\omega)$  and know that it is correct for a particular signal x(t). Is it obvious, for example, that  $X(\omega) = \frac{\tau}{2} \operatorname{sinc}^2(\omega \tau/4)$  is really the spectrum of a  $\tau$ -duration rectangle function? Or is it possible that a mathematical error was made in the determination of  $X(\omega)$ ? It is difficult to be certain by simple inspection of the spectrum.

The same uncertainties exist when we are looking at a periodic signal's Fourier series spectrum. In the Fourier series case, we can verify the correctness of a signal's spectrum by synthesizing x(t) with a truncated Fourier series; the synthesized signal will match the original only if the computed spectrum is correct. This is exactly the approach that was taken in Ex. 6.11. And since a truncated Fourier series involves a simple sum, tools like MATLAB make waveform synthesis relatively simple, at least in the case of the Fourier series.

In the case of the Fourier transform, however, synthesis of x(t) using Eq. (7.10) requires integration, a task not well suited to numerical packages such as MATLAB. All is not lost, however. Consider Eq. (7.5). By scaling and sampling the spectrum  $X(\omega)$  of an aperiodic signal x(t), we obtain the Fourier series coefficient of a signal that is the periodic replication of x(t). Similar to Ex. 6.11, we can then synthesize a periodic replication of x(t) with a truncated Fourier series to verify spectrum correctness. Let us demonstrate the idea for the current example with  $\tau = 1$ .

To begin, we represent  $X(\omega) = \frac{\tau}{2} \operatorname{sinc}^2(\omega \tau/4)$  using an anonymous function in MATLAB. Since MATLAB computes sinc(x) as  $(\sin(\pi x))/\pi x$ , we must scale the input by  $1/\pi$  to match the notation of sinc in this book.

>> tau = 1; X = @(omega) tau/2\*(sinc(omega\*tau/(4\*pi))).^2;

For our periodic replication, let us pick  $T_0 = 2$ , which is comfortably wide enough to accommodate our ( $\tau = 1$ )-width function without overlap. We use Eq. (7.5) to define the needed Fourier series coefficients  $D_n$ .

Let us use 25 harmonics to synthesize the periodic replication  $x_{25}(t)$  of our triangular signal x(t). To begin waveform synthesis, we set the dc portion of the signal.

>> t = (-T0:.001:T0); x25 = D(0)\*ones(size(t));

To add the desired 25 harmonics, we enter a loop for  $1 \le n \le 25$  and add in the  $D_n$  and  $D_{-n}$  terms. Although the result should be real, small round-off errors cause the reconstruction to be complex. These small imaginary parts are removed by using the real command.

>> for n = 1:25, >> x25 = x25+real(D(n)\*exp(1j\*omega0\*n\*t)+D(-n)\*exp(-1j\*omega0\*n\*t)); >> end

Lastly, we plot the resulting truncated Fourier series synthesis of x(t).

>> plot(t,x25,'k'); xlabel('t'); ylabel('x\_{25}(t)');

Since the synthesized waveform shown in Fig. 7.28 closely matches a 2-periodic replication of the triangle wave in Fig. 7.27a, we have high confidence that both the computed  $D_n$  and, by extension, the Fourier spectrum  $X(\omega)$  are correct.

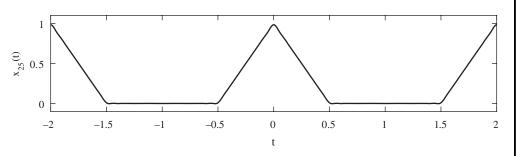


Figure 7.28 Synthesizing a 2-periodic replication of x(t) using a truncated Fourier series.

## **DRILL 7.9 Fourier Transform Time-Differentiation Property**

Use the time-differentiation property to find the Fourier transform of rect  $(t/\tau)$ .

# 7.4 SIGNAL TRANSMISSION THROUGH LTIC SYSTEMS

If x(t) and y(t) are the input and output of an LTIC system with impulse response h(t), then, as demonstrated in Eq. (7.35),

$$Y(\omega) = H(\omega)X(\omega)$$

This equation does not apply to (asymptotically) unstable systems because h(t) for such systems is not Fourier transformable. It applies to BIBO-stable as well as most of the marginally stable systems.<sup>†</sup> Similarly, this equation does not apply if x(t) is not Fourier transformable.

In Ch. 4, we saw that the Laplace transform is more versatile and capable of analyzing all kinds of LTIC systems whether stable, unstable, or marginally stable. Laplace transform can also handle exponentially growing inputs. In comparison to the Laplace transform, the Fourier transform in system analysis is not just clumsier, but also very restrictive. Hence, the Laplace transform is preferable to the Fourier transform in LTIC system analysis. We shall not belabor the application of the Fourier transform to LTIC system analysis. We consider just one example here.

# **EXAMPLE 7.18** Fourier Transform to Determine the Zero-State Response

Use the Fourier transform to find the zero-state response of a stable LTIC system with frequency response

$$H(s) = \frac{1}{s+2}$$

and the input is  $x(t) = e^{-t}u(t)$ . Stability implies that the region of convergence of H(s) includes the  $\omega$  axis.

In this case,

$$X(\omega) = \frac{1}{j\omega + 1}$$

<sup>&</sup>lt;sup>†</sup> For marginally stable systems, if the input x(t) contains a finite-amplitude sinusoid of the system's natural frequency, which leads to resonance, the output is not Fourier transformable. It does, however, apply to marginally stable systems if the input does not contain a finite-amplitude sinusoid of the system's natural frequency.

#### CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

Moreover, because the system is stable, the frequency response  $H(j\omega) = H(\omega)$ . Hence,

$$H(\omega) = H(s)|_{s=j\omega} = \frac{1}{j\omega + 2}$$

Therefore,

722

$$Y(\omega) = H(\omega)X(\omega) = \frac{1}{(j\omega+2)(j\omega+1)}$$

Expanding the right-hand side in partial fractions yields

$$Y(\omega) = \frac{1}{j\omega + 1} - \frac{1}{j\omega + 2}$$

and

$$y(t) = (e^{-t} - e^{-2t})u(t)$$

# **DRILL 7.10** Fourier Transform to Determine the Zero-State Response

For the system in Ex. 7.18, show that the zero-input response to the input  $e^t u(-t)$  is  $y(t) = \frac{1}{3}[e^t u(-t) + e^{-2t}u(t)]$ . [*Hint:* Use pair 2 (Table 7.1) to find the Fourier transform of  $e^t u(-t)$ .]

## HEURISTIC UNDERSTANDING OF LINEAR SYSTEM RESPONSE

In finding the linear system response to arbitrary input, the time-domain method uses convolution integral and the frequency-domain method uses the Fourier integral. Despite the apparent dissimilarities of the two methods, their philosophies are amazingly similar. In the time-domain case, we express the input x(t) as a sum of its impulse components; in the frequency-domain case, the input is expressed as a sum of everlasting exponentials (or sinusoids). In the former case, the response y(t) obtained by summing the system's responses to impulse components results in the convolution integral; in the latter case, the response obtained by summing the system's response to everlasting exponential components results in the Fourier integral. These ideas can be expressed mathematically as follows:

1. For the time-domain case,

$\delta(t) \Longrightarrow h(t)$	shows the system response to $\delta(t)$ is the impulse response $h(t)$
$x(t) = \int_{-\infty}^{\infty} x(\tau) \delta(t-\tau) d\tau$	expresses $x(t)$ as a sum of impulse components
$y(t) = \int_{-\infty}^{\infty} x(\tau) h(t-\tau) d\tau$	expresses $y(t)$ as a sum of responses to the impulse components of input $x(t)$

2. For the frequency-domain case,

$e^{j\omega t} \Longrightarrow H(\omega)e^{j\omega t}$	shows the system response to $e^{j\omega t}$ is $H(\omega)e^{j\omega t}$
$x(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) e^{j\omega t} d\omega$	expresses $x(t)$ as a sum of everlasting exponential components
$y(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) H(\omega) e^{j\omega t} d\omega$	expresses $y(t)$ as a sum of responses to the exponential components of input $x(t)$

The frequency-domain view sees a system in terms of its frequency response (system response to various sinusoidal components). It views a signal as a sum of various sinusoidal components. Transmission of an input signal through a (linear) system is viewed as transmission of various sinusoidal components of the input through the system.

It was not by coincidence that we used the impulse function in time-domain analysis and the exponential  $e^{j\omega t}$  in studying the frequency domain. The two functions happen to be duals of each other. Thus, the Fourier transform of an impulse  $\delta(t-\tau)$  is  $e^{-j\omega\tau}$ , and the Fourier transform of  $e^{j\omega_0 t}$  is an impulse  $2\pi\delta(\omega-\omega_0)$ . This *time-frequency duality* is a constant theme in the Fourier transform and linear systems.

## 7.4-1 Signal Distortion During Transmission

For a system with frequency response  $H(\omega)$ , if  $X(\omega)$  and  $Y(\omega)$  are the spectra of the input and the output signals, respectively, then

$$Y(\omega) = X(\omega)H(\omega) \tag{7.38}$$

The transmission of the input signal x(t) through the system changes it into the output signal y(t). Equation (7.38) shows the nature of this change or modification. Here,  $X(\omega)$  and  $Y(\omega)$  are the spectra of the input and the output, respectively. Therefore,  $H(\omega)$  is the spectral response of the system. The output spectrum is obtained by the input spectrum multiplied by the spectral response of the system. Equation (7.38), which clearly brings out the spectral shaping (or modification) of the signal by the system, can be expressed in polar form as

$$|Y(\omega)|e^{j\angle Y(\omega)} = |X(\omega)||H(\omega)|e^{j[\angle X(\omega) + \angle H(j\omega)]}$$

Therefore,

$$|Y(\omega)| = |X(\omega)| |H(\omega)|$$
 and  $\angle Y(\omega) = \angle X(\omega) + \angle H(\omega)$ 

During transmission, the input signal amplitude spectrum  $|X(\omega)|$  is changed to  $|X(\omega)||H(\omega)|$ . Similarly, the input signal phase spectrum  $\angle X(\omega)$  is changed to  $\angle X(\omega) + \angle H(\omega)$ . An input signal spectral component of frequency  $\omega$  is modified in amplitude by a factor  $|H(\omega)|$  and is shifted in phase by an angle  $\angle H(\omega)$ . Clearly,  $|H(\omega)|$  is the amplitude response, and  $\angle H(\omega)$  is the phase response of the system. The plots of  $|H(\omega)|$  and  $\angle H(\omega)$  as functions of  $\omega$  show at a glance how the system modifies the amplitudes and phases of various sinusoidal inputs. This is the reason why  $H(\omega)$  is also called the *frequency response* of the system. During transmission through the system, some frequency components may be boosted in amplitude, while others may be attenuated. The

### 724 CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

relative phases of the various components also change. In general, the output waveform will be different from the input waveform.

### DISTORTIONLESS TRANSMISSION

In several applications, such as signal amplification or message signal transmission over a communication channel, we require that the output waveform be a replica of the input waveform. In such cases we need to minimize the distortion caused by the amplifier or the communication channel. It is, therefore, of practical interest to determine the characteristics of a system that allows a signal to pass without distortion (*distortionless transmission*).

Transmission is said to be distortionless if the input and the output have identical waveshapes within a multiplicative constant. A delayed output that retains the input waveform is also considered to be distortionless. Thus, in distortionless transmission, the input x(t) and the output y(t) satisfy the condition

$$y(t) = G_0 x(t - t_d)$$

The Fourier transform of this equation yields

$$Y(\omega) = G_0 X(\omega) e^{-j\omega t_d}$$

But

$$Y(\omega) = X(\omega)H(\omega)$$

Therefore,

$$H(\omega) = G_0 e^{-j\omega t_d}$$


This is the frequency response required of a system for distortionless transmission. From this equation, it follows that

$$|H(\omega)| = G_0 \quad \text{and} \quad \angle H(\omega) = -\omega t_d \tag{7.39}$$

This result shows that for distortionless transmission, the amplitude response  $|H(\omega)|$  must be a constant, and the phase response  $\angle H(\omega)$  must be a linear function of  $\omega$  with slope  $-t_d$ , where  $t_d$  is the delay of the output with respect to input (Fig. 7.29).

### MEASURE OF TIME-DELAY VARIATION WITH FREQUENCY

The gain  $|H(\omega)| = G_0$  means that every spectral component is multiplied by a constant  $G_0$ . Also, as seen in connection with Fig. 7.22, a linear phase  $\angle H(\omega) = -\omega t_d$  means that every spectral

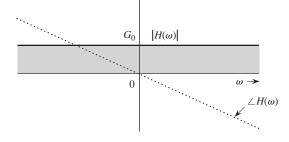

**Figure 7.29** LTIC system frequency response for distortionless transmission.

component is delayed by  $t_d$  seconds. This results in the output equal to  $G_0$  times the input delayed by  $t_d$  seconds. Because each spectral component is attenuated by the same factor ( $G_0$ ) and delayed by exactly the same amount ( $t_d$ ), the output signal is an exact replica of the input (except for attenuating factor  $G_0$  and delay  $t_d$ ).

For distortionless transmission, we require a *linear phase* characteristic. The phase is not only a linear function of  $\omega$ , it should also pass through the origin  $\omega = 0$ . In practice, many systems have a phase characteristic that may be only approximately linear. A convenient way of judging phase linearity is to plot the slope of  $\angle H(\omega)$  as a function of frequency. This slope, which is constant for an ideal linear phase (ILP) system, is a function of  $\omega$  in the general case and can be expressed as

$$t_g(\omega) = -\frac{d}{d\omega} \angle H(\omega) \tag{7.40}$$

If  $t_g(\omega)$  is constant, all the components are delayed by the same time interval  $t_g$ . But if the slope is not constant, the time delay  $t_g$  varies with frequency. This variation means that different frequency components undergo different amounts of time delay, and consequently, the output waveform will not be a replica of the input waveform. As we shall see,  $t_g(\omega)$  plays an important role in bandpass systems and is called the *group delay* or *envelope* delay. Observe that constant  $t_d$  [Eq. (7.39)] implies constant  $t_g$ . Note that  $\angle H(\omega) = \phi_0 - \omega t_g$  also has a constant  $t_g$ . Thus, constant group delay is a more relaxed condition.

It is often thought (erroneously) that flatness of amplitude response  $|H(\omega)|$  alone can guarantee signal quality. However, a system that has a flat amplitude response may yet distort a signal beyond recognition if the phase response is not linear ( $t_d$  not constant).

## THE NATURE OF DISTORTION IN AUDIO AND VIDEO SIGNALS

Generally speaking, the human ear can readily perceive amplitude distortion but is relatively insensitive to phase distortion. For the phase distortion to become noticeable, the variation in delay [variation in the slope of  $\angle H(\omega)$ ] should be comparable to the signal duration (or the physically perceptible duration, in case the signal itself is long). In the case of audio signals, each spoken syllable can be considered to be an individual signal. The average duration of a spoken syllable is of a magnitude of the order of 0.01 to 0.1 second. Audio systems may have nonlinear phases, yet no noticeable signal distortion results because in practical audio systems, maximum variation in the slope of  $\angle H(\omega)$  is only a small fraction of a millisecond. This is the real truth underlying the statement that "the human ear is relatively insensitive to phase distortion" [3]. As a result, the manufacturers of audio equipment make available only  $|H(\omega)|$ , the amplitude response characteristic of their systems.

For video signals, in contrast, the situation is exactly the opposite. The human eye is sensitive to phase distortion but is relatively insensitive to amplitude distortion. Amplitude distortion in television signals manifests itself as a partial destruction of the relative half-tone values of the resulting picture, but this effect is not readily apparent to the human eye. Phase distortion (nonlinear phase), on the other hand, causes different time delays in different picture elements. The result is a smeared picture, and this effect is readily perceived by the human eye. Phase distortion is also very important in digital communication systems because the nonlinear phase characteristic of a channel causes pulse dispersion (spreading out), which in turn causes pulses to interfere with neighboring pulses. Such interference between pulses can cause an error in the pulse amplitude at the receiver: a binary 1 may read as 0, and vice versa.

## 7.4-2 Bandpass Systems and Group Delay

The distortionless transmission conditions [Eq. (7.39)] can be relaxed slightly for bandpass systems. For lowpass systems, the phase characteristics not only should be linear over the band of interest but also should pass through the origin. For bandpass systems, the phase characteristics must be linear over the band of interest but need not pass through the origin.

Consider an LTI system with amplitude and phase characteristics as shown in Fig. 7.30, where the amplitude spectrum is a constant  $G_0$  and the phase is  $\phi_0 - \omega t_g$  over a band 2W centered at frequency  $\omega_c$ . Over this band, we can describe  $H(\omega)$  as<sup>†</sup>

$$H(\omega) = G_0 e^{j(\phi_0 - \omega t_g)} \qquad \omega \ge 0 \tag{7.41}$$

The phase of  $H(\omega)$  in Eq. (7.41), shown dotted in Fig. 7.30b, is linear but does not pass through the origin.

Consider a modulated input signal  $z(t) = x(t) \cos \omega_c t$ . This is a bandpass signal, whose spectrum is centered at  $\omega = \omega_c$ . The signal  $\cos \omega_c t$  is the carrier, and the signal x(t), which is a lowpass signal of bandwidth W (see Fig. 7.25), is the *envelope* of z(t).<sup>‡</sup> We shall now show that the transmission of z(t) through  $H(\omega)$  results in distortionless transmission of the envelope x(t). However, the carrier phase changes by  $\phi_0$ . To show this, consider an input  $\hat{z}(t) = x(t)e^{j\omega_c t}$  and the corresponding output  $\hat{y}(t)$ . From Eq. (7.30),  $\hat{Z}(\omega) = X(\omega - \omega_c)$ , and the corresponding output

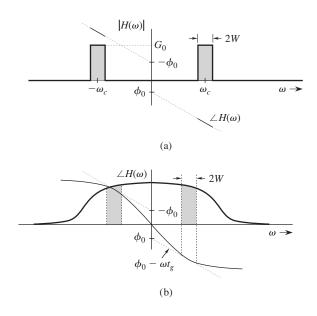


Figure 7.30 Generalized linear phase characteristics.

<sup>&</sup>lt;sup>†</sup> Because the phase function is an odd function of  $\omega$ , if  $\angle H(\omega) = \phi_0 - \omega t_g$  for  $\omega \ge 0$ , over the band 2W (centered at  $\omega_c$ ), then  $\angle H(\omega) = -\phi_0 - \omega t_g$  for  $\omega < 0$  over the band 2W (centered at  $-\omega_c$ ), as shown in Fig. 7.30a.

<sup>&</sup>lt;sup>‡</sup> The envelope of a bandpass signal is well defined only when the bandwidth of the envelope is well below the carrier  $\omega_c$  ( $W \ll \omega_c$ ).

spectrum  $\hat{Y}(\omega)$  is given by

$$\hat{Y}(\omega) = H(\omega)\hat{Z}(\omega) = H(\omega)X(\omega - \omega_c)$$

Recall that the bandwidth of  $X(\omega)$  is W so that the bandwidth of  $X(\omega - \omega_c)$  is 2W, centered at  $\omega_c$ . Over this range,  $H(\omega)$  is given by Eq. (7.41). Hence,

$$\hat{Y}(\omega) = G_0 X(\omega - \omega_c) e^{j(\phi_0 - \omega t_g)} = G_0 e^{j\phi_0} X(\omega - \omega_c) e^{-\omega t_g}$$

Use of Eqs. (7.29) and (7.30) yields  $\hat{y}(t)$  as

$$\hat{y}(t) = G_0 e^{j\phi_0} x(t - t_g) e^{j\omega_c(t - t_g)} = G_0 x(t - t_g) e^{j[\omega_c(t - t_g) + \phi_0]}$$

This is the system response to input  $\hat{z}(t) = x(t)e^{j\omega_c t}$ , which is a complex signal. We are really interested in finding the response to the input  $z(t) = x(t)\cos\omega_c t$ , which is the real part of  $\hat{z}(t) = x(t)e^{j\omega_c t}$ . Hence, we use Eq. (2.31) to obtain y(t), the system response to the input  $z(t) = x(t)\cos\omega_c t$ , as

$$y(t) = G_0 x(t - t_g) \cos[\omega_c (t - t_g) + \phi_0)]$$
(7.42)

where  $t_g$ , the group (or envelope) delay, is the negative slope of  $\angle H(\omega)$  at  $\omega_c$ .<sup>†</sup> The output y(t) is basically the delayed input  $z(t - t_g)$ , except that the output carrier acquires an extra phase  $\phi_0$ . The output envelope  $x(t - t_g)$  is the delayed version of the input envelope x(t) and is not affected by extra phase  $\phi_0$  of the carrier. In a modulated signal, such as  $x(t) \cos \omega_c t$ , the information generally resides in the envelope x(t). Hence, the transmission is considered to be distortionless if the envelope x(t) remains undistorted.

Most practical systems satisfy Eq. (7.41), at least over a very small band. Figure 7.30b shows a typical case in which this condition is satisfied for a small band W centered at frequency  $\omega_c$ .

A system in Eq. (7.41) is said to have a *generalized linear phase* (GLP), as illustrated in Fig. 7.30. The ideal linear phase (ILP) characteristics is shown in Fig. 7.29. For distortionless transmission of bandpass signals, the system need satisfy Eq. (7.41) only over the bandwidth of the bandpass signal.

**Caution.** Recall that the phase response associated with the amplitude response may have jump discontinuities when the amplitude response goes negative. Jump discontinuities also arise because of the use of the principal value for phase. Under such conditions, to compute the group delay [Eq. (7.40)], we should ignore the jump discontinuities.

$$y(t) = G_o x(t - t_g) \cos \omega_c (t - t_{\rm ph})$$

where  $t_{\rm ph}$ , called the *phase delay* at  $\omega_c$ , is given by  $t_{\rm ph}(\omega_c) = (\omega_c t_g - \phi_0)/\omega_c$ . Generally,  $t_{\rm ph}$  varies with  $\omega$ , and we can write

$$t_{\rm ph}(\omega) = \frac{\omega t_g - \phi_0}{\omega}$$

Recall also that  $t_g$  itself may vary with  $\omega$ .

<sup>&</sup>lt;sup>†</sup> Equation (7.42) can also be expressed as

### **EXAMPLE 7.19** Distortionless Bandpass Transmission

(a) A signal z(t), shown in Fig. 7.31b, is given by

$$z(t) = x(t) \cos \omega_c t$$

where  $\omega_c = 2000\pi$ . The pulse x(t) (Fig. 7.31a) is a lowpass pulse of duration 0.1 second and has a bandwidth of about 10 Hz. This signal is passed through a filter whose frequency response is shown in Fig. 7.31c (shown only for positive  $\omega$ ). Find and sketch the filter output y(t).

(**b**) Find the filter response if  $\omega_c = 4000\pi$ .

(a) The spectrum  $Z(\omega)$  is a narrow band of width 20 Hz, centered at frequency  $f_0 = 1$  kHz. The gain at the center frequency (1 kHz) is 2. The group delay, which is the negative of the slope of the phase plot, can be found by drawing tangents at  $\omega_c$ , as shown in Fig. 7.31c. The negative of the slope of the tangent represents  $t_g$ , and the intercept along the vertical axis by the tangent represents  $\phi_0$  at that frequency. From the tangents at  $\omega_c$ , we find  $t_g$ , the group delay, as

$$t_g = \frac{2.4\pi - 0.4\pi}{2000\pi} = 10^{-3}$$

The vertical axis intercept is  $\phi_0 = -0.4\pi$ . Hence, by using Eq. (7.42) with gain  $G_0 = 2$ , we obtain


$$y(t) = 2x(t - t_g) \cos[\omega_c(t - t_g) - 0.4\pi]$$
  $\omega_c = 2000\pi$   $t_g = 10^{-3}$ 

Figure 7.31d shows the output y(t), which consists of the modulated pulse envelope x(t) delayed by 1 ms and the phase of the carrier changed by  $-0.4\pi$ . The output shows no distortion of the envelope x(t), only the delay. The carrier phase change does not affect the shape of envelope. Hence, the transmission is considered distortionless.

(b) Figure 7.31c shows that when  $\omega_c = 4000\pi$ , the slope of  $\angle H(\omega)$  is zero so that  $t_g = 0$ . Also, the gain  $G_0 = 1.5$ , and the intercept of the tangent with the vertical axis is  $\phi_0 = -3.1\pi$ . Hence,

$$y(t) = 1.5x(t)\cos(\omega_c t - 3.1\pi)$$

This, too, is a distortionless transmission for the same reasons as for case (a).

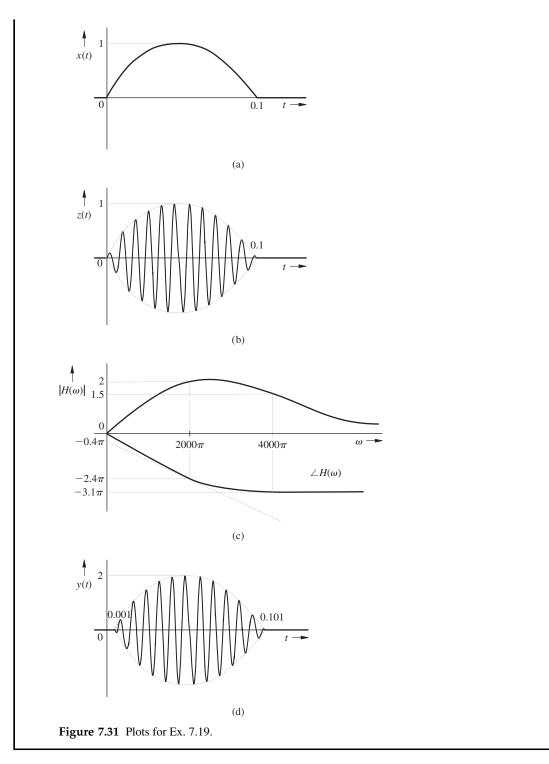

# 7.5 IDEAL AND PRACTICAL FILTERS

Ideal filters allow distortionless transmission of a certain band of frequencies and completely suppress the remaining frequencies. The ideal lowpass filter (Fig. 7.32), for example, allows all components below  $\omega = W$  rad/s to pass without distortion and suppresses all components above  $\omega = W$ . Figure 7.33 illustrates ideal highpass and bandpass filter characteristics.

The ideal lowpass filter in Fig. 7.32a has a linear phase of slope  $-t_d$ , which results in a time delay of  $t_d$  seconds for all its input components of frequencies below W rad/s. Therefore, if the input is a signal x(t) bandlimited to W rad/s, the output y(t) is x(t) delayed by  $t_d$ : that is,

$$y(t) = x(t - t_d)$$

The signal x(t) is transmitted by this system without distortion, but with time delay  $t_d$ . For this filter,  $|H(\omega)| = \text{rect}(\omega/2W)$  and  $\angle H(\omega) = e^{-j\omega t_d}$  so that

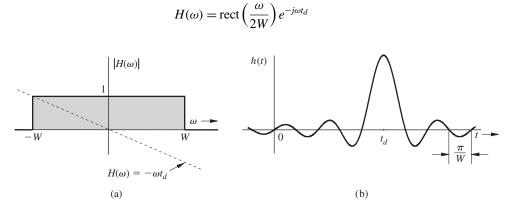


Figure 7.32 Ideal lowpass filter: (a) frequency response and (b) impulse response.

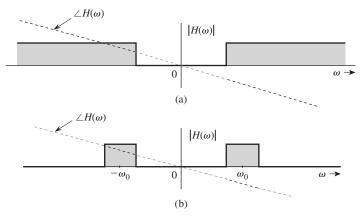


Figure 7.33 Ideal (a) highpass and (b) bandpass filter frequency responses.

The unit impulse response h(t) of this filter is obtained from pair 18 (Table 7.1) and the time-shifting property

$$h(t) = \mathcal{F}^{-1}\left[\operatorname{rect}\left(\frac{\omega}{2W}\right)e^{-j\omega t_d}\right] = \frac{W}{\pi}\operatorname{sinc}\left[W(t-t_d)\right]$$

Recall that h(t) is the system response to impulse input  $\delta(t)$ , which is applied at t = 0. Figure 7.32b shows a curious fact: the response h(t) begins even before the input is applied (at t = 0). Clearly, the filter is noncausal and therefore physically unrealizable. Similarly, one can show that other ideal filters (such as the ideal highpass or ideal bandpass filters depicted in Fig. 7.33) are also physically unrealizable.

For a physically realizable system, h(t) must be causal; that is,

ļ

$$h(t) = 0 \qquad \text{for } t < 0$$

In the frequency domain, this condition is equivalent to the well-known *Paley–Wiener criterion*, which states that the necessary and sufficient condition for the amplitude response  $|H(\omega)|$  to be realizable is<sup>†</sup>

$$\int_{-\infty}^{\infty} \frac{|\ln|H(\omega)||}{1+\omega^2} \, d\omega < \infty \tag{7.43}$$

If  $H(\omega)$  does not satisfy this condition, it is unrealizable. Note that if  $|H(\omega)| = 0$  over any finite band,  $|\ln|H(\omega)|| = \infty$  over that band, and Eq. (7.43) is violated. If, however,  $H(\omega) = 0$  at a single frequency (or a set of discrete frequencies), the integral in Eq. (7.43) may still be finite even though the integrand is infinite at those discrete frequencies. Therefore, for a physically realizable system,  $H(\omega)$  may be zero at some discrete frequencies, but it cannot be zero over any finite band. In addition, if  $|H(\omega)|$  decays exponentially (or at a higher rate) with  $\omega$ , the integral in Eq. (7.43) goes to infinity, and  $|H(\omega)|$  cannot be realized. Clearly,  $|H(\omega)|$  cannot decay too fast with  $\omega$ . According to this criterion, ideal filter characteristics (Figs. 7.32 and 7.33) are unrealizable.

The impulse response h(t) in Fig. 7.32 is not realizable. One practical approach to filter design is to cut off the tail of h(t) for t < 0. The resulting causal impulse response  $\hat{h}(t)$ , given by


$$h(t) = h(t)u(t)$$

is physically realizable because it is causal (Fig. 7.34). If  $t_d$  is sufficiently large,  $\hat{h}(t)$  will be a close approximation of h(t), and the resulting filter  $\hat{H}(\omega)$  will be a good approximation of an ideal filter. This close realization of the ideal filter is achieved because of the increased value of time delay  $t_d$ . This observation means that the price of close realization is higher delay in the output; this situation is common in noncausal systems. Of course, theoretically, a delay  $t_d = \infty$  is needed to realize the ideal characteristics. But a glance at Fig. 7.32b shows that a delay  $t_d$  of three or four times  $\frac{\pi}{W}$  will make  $\hat{h}(t)$  a reasonably close version of  $h(t - t_d)$ . For instance, an audio filter is required to handle frequencies of up to 20 kHz ( $W = 40,000\pi$ ). In this case, a  $t_d$  of about 10<sup>-4</sup>

$$\int_{-\infty}^{\infty} |H(\omega)|^2 d\omega < \infty$$

Note that the Paley–Wiener criterion is a criterion for the realizability of the amplitude response  $|H(\omega)|$ .

<sup>&</sup>lt;sup>†</sup> We are assuming that  $|H(\omega)|$  is square integrable, that is,

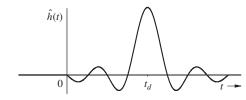

**Figure 7.34** Approximate realization of an ideal lowpass filter by truncation of its impulse response.

(0.1 ms) would be a reasonable choice. The truncation operation [cutting the tail of h(t) to make it causal], however, creates some unsuspected problems. We discuss these problems and their cure in Sec. 7.8.

In practice, we can realize a variety of filter characteristics that approach the ideal. Practical (realizable) filter characteristics are gradual, without jump discontinuities in amplitude response.

## DRILL 7.11 The Unrealizable Gaussian Response

Show that a filter with Gaussian frequency response  $H(\omega) = e^{-\alpha\omega^2}$  is unrealizable. Demonstrate this fact in two ways: first by showing that its impulse response is noncausal, and then by showing that  $|H(\omega)|$  violates the Paley–Wiener criterion. [*Hint:* Use pair 22 in Table 7.1.]

# THINKING IN THE TIME AND FREQUENCY DOMAINS: A TWO-DIMENSIONAL VIEW OF SIGNALS AND SYSTEMS

Both signals and systems have dual personalities, the time domain and the frequency domain. For a deeper perspective, we should examine and understand both these identities because they offer complementary insights. An exponential signal, for instance, can be specified by its time-domain description such as  $e^{-2t}u(t)$  or by its Fourier transform (its frequency-domain description)  $1/(j\omega + 2)$ . The time-domain description depicts the waveform of a signal. The frequency-domain description portrays its spectral composition [relative amplitudes of its sinusoidal (or exponential) components and their phases]. For the signal  $e^{-2t}$ , for instance, the time-domain description portrays the exponentially decaying signal with a time constant 0.5. The frequency-domain description characterizes it as a lowpass signal, which can be synthesized by sinusoids with amplitudes decaying with frequency roughly as  $1/\omega$ .

An LTIC system can also be described or specified in the time domain by its impulse response h(t) or in the frequency domain by its frequency response  $H(\omega)$ . In Sec. 2.6, we studied intuitive insights in the system behavior offered by the impulse response, which consists of characteristic modes of the system. By purely qualitative reasoning, we saw that the system responds well to signals that are similar to the characteristic modes and responds poorly to signals that are very different from those modes. We also saw that the shape of the impulse response h(t) determines the system time constant (speed of response), and pulse dispersion (spreading), which, in turn, determines the rate of pulse transmission.

The frequency response  $H(\omega)$  specifies the system response to exponential or sinusoidal input of various frequencies. This is precisely the filtering characteristic of the system.

Experienced electrical engineers instinctively think in both domains (time and frequency) whenever possible. When they look at a signal, they consider its waveform, the signal width (duration), and the rate at which the waveform decays. This is basically a time-domain perspective. They also think of the signal in terms of its frequency spectrum, that is, in terms of its sinusoidal components and their relative amplitudes and phases, whether the spectrum is lowpass, bandpass, highpass, and so on. This is a frequency-domain perspective. Experienced electrical engineers think of a system in terms of its impulse response h(t). The width of h(t) indicates the time constant (response time): that is, how quickly the system is capable of responding to an input, and how much dispersion (spreading) it will cause. This is a time-domain perspective. From the frequency-domain perspective, these engineers view a system as a filter, which selectively transmits certain frequency components and suppresses the others [frequency response  $H(\omega)$ ]. Knowing the input signal spectrum and the frequency response of the system, they create a mental image of the output signal spectrum. This concept is precisely expressed by  $Y(\omega) = X(\omega)H(\omega)$ .

We can analyze LTI systems by time-domain techniques or by frequency-domain techniques. Then why learn both? The reason is that the two domains offer complementary insights into system behavior. Some aspects are easily grasped in one domain; other aspects may be easier to see in the other domain. Both time-domain and frequency-domain methods are as essential for the study of signals and systems as two eyes are essential to a human being for correct visual perception of reality. A person can see with either eye, but for proper perception of three-dimensional reality, both eyes are essential.

It is important to keep the two domains separate, and not to mix the entities in the two domains. If we are using the frequency domain to determine the system response, we must deal with all signals in terms of their spectra (Fourier transforms) and all systems in terms of their frequency responses. For example, to determine the system response y(t) to an input x(t), we must first convert the input signal into its frequency-domain description  $X(\omega)$ . The system description also must be in the frequency domain, that is, the frequency response  $H(\omega)$ . The output signal spectrum  $Y(\omega) = X(\omega)H(\omega)$ . Thus, the result (output) is also in the frequency domain. To determine the final answer y(t), we must take the inverse transform of  $Y(\omega)$ .

## 7.6 SIGNAL ENERGY

The signal energy  $E_x$  of a signal x(t) was defined in Ch. 1 as

$$E_x = \int_{-\infty}^{\infty} |x(t)|^2 dt \tag{7.44}$$

Signal energy can be related to the signal spectrum  $X(\omega)$  by substituting Eq. (7.10) in Eq. (7.44):

$$E_x = \int_{-\infty}^{\infty} x(t) x^*(t) dt = \int_{-\infty}^{\infty} x(t) \left[ \frac{1}{2\pi} \int_{-\infty}^{\infty} X^*(\omega) e^{-j\omega t} d\omega \right] dt$$

### 734 CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

Here, we used the fact that  $x^*(t)$ , being the conjugate of x(t), can be expressed as the conjugate of the right-hand side of Eq. (7.10). Now, interchanging the order of integration yields

$$E_x = \frac{1}{2\pi} \int_{-\infty}^{\infty} X^*(\omega) \left[ \int_{-\infty}^{\infty} x(t) e^{-j\omega t} dt \right] d\omega$$
$$= \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) X^*(\omega) d\omega = \frac{1}{2\pi} \int_{-\infty}^{\infty} |X(\omega)|^2 d\omega$$

Consequently,

$$E_{x} = \int_{-\infty}^{\infty} |x(t)|^{2} dt = \frac{1}{2\pi} \int_{-\infty}^{\infty} |X(\omega)|^{2} d\omega$$
 (7.45)

This is *Parseval's theorem* (for the Fourier transform). A similar result was obtained in Eqs. (6.26) and (6.27) for a periodic signal and its Fourier series. This result allows us to determine the signal energy from either the time-domain specification x(t) or the corresponding frequency-domain specification  $X(\omega)$ .

The right-hand side of Eq. (7.45) can be interpreted to mean that the energy of a signal x(t) results from energies contributed by all the spectral components of the signal x(t). The total signal energy is the area under  $|X(\omega)^2|$  (divided by  $2\pi$ ). If we consider a small band  $\Delta\omega$  ( $\Delta\omega \rightarrow 0$ ), as illustrated in Fig. 7.35, the energy  $\Delta E_x$  of the spectral components in this band is the area of  $|X(\omega)|^2$  under this band (divided by  $2\pi$ ):

$$\Delta E_x = \frac{1}{2\pi} |X(\omega)|^2 \Delta \omega = |X(\omega)|^2 \Delta f \qquad \frac{\Delta \omega}{2\pi} = \Delta f \text{ Hz}$$

Therefore, the energy contributed by the components in this band of  $\Delta f$  (in hertz) is  $|X(\omega)|^2 \Delta f$ . The total signal energy is the sum of energies of all such bands and is indicated by the area under  $|X(\omega)|^2$  as in Eq. (7.45). Therefore,  $|X(\omega)|^2$  is the *energy spectral density* (per unit bandwidth in hertz).

For real signals,  $X(\omega)$  and  $X(-\omega)$  are conjugates, and  $|X(\omega)|^2$  is an even function of  $\omega$  because

$$|X(\omega)|^2 = X(\omega)X^*(\omega) = X(\omega)X(-\omega)$$

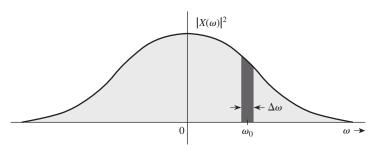


Figure 7.35 Interpretation of energy spectral density of a signal.

Therefore, the energy of real signal x(t) can be expressed as<sup>†</sup>

$$E_x = \frac{1}{\pi} \int_0^\infty |X(\omega)|^2 d\omega$$
(7.46)

The signal energy  $E_x$ , which results from contributions from all the frequency components from  $\omega = 0$  to  $\infty$ , is given by  $(1/\pi \text{ times})$  the area under  $|X(\omega)|^2$  from  $\omega = 0$  to  $\infty$ . It follows that the energy contributed by spectral components of frequencies between  $\omega_1$  and  $\omega_2$  is

$$\Delta E_x = \frac{1}{\pi} \int_{\omega_1}^{\omega_2} |X(\omega)|^2 d\omega$$
(7.47)

# EXAMPLE 7.20 Signal Energy and Parseval's Theorem

Find the energy of signal  $x(t) = e^{-at}u(t)$ . Determine the frequency W (rad/s) so that the energy contributed by the spectral components of all the frequencies below W is 95% of the signal energy  $E_x$ .

We have

$$E_x = \int_{-\infty}^{\infty} x^2(t) \, dt = \int_0^{\infty} e^{-2at} \, dt = \frac{1}{2a}$$

We can verify this result by Parseval's theorem. For this signal,

$$X(\omega) = \frac{1}{j\omega + a}$$

and

$$E_x = \frac{1}{\pi} \int_0^\infty |X(\omega)|^2 d\omega = \frac{1}{\pi} \int_0^\infty \frac{1}{\omega^2 + a^2} d\omega = \frac{1}{\pi a} \tan^{-1} \frac{\omega}{a} \Big|_0^\infty = \frac{1}{2a}$$

The band  $\omega = 0$  to  $\omega = W$  contains 95% of the signal energy, that is, 0.95/2*a*. Therefore, from Eq. (7.47) with  $\omega_1 = 0$  and  $\omega_2 = W$ , we obtain

$$\frac{0.95}{2a} = \frac{1}{\pi} \int_0^W \frac{d\omega}{\omega^2 + a^2} = \frac{1}{\pi a} \tan^{-1} \frac{\omega}{a} \Big|_0^W = \frac{1}{\pi a} \tan^{-1} \frac{W}{a}$$

or

$$\frac{0.95\pi}{2} = \tan^{-1}\frac{W}{a} \implies W = 12.706a \text{ rad/s}$$

<sup>&</sup>lt;sup>†</sup> In Eq. (7.46), it is assumed that  $X(\omega)$  does not contain an impulse at  $\omega = 0$ . If such an impulse exists, it should be integrated separately with a multiplying factor of  $1/2\pi$  rather than  $1/\pi$ .

### 736 CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

This result indicates that the spectral components of x(t) in the band from 0 (dc) to 12.706*a* rad/s (2.02*a* Hz) contribute 95% of the total signal energy; all the remaining spectral components (in the band from 12.706*a* rad/s to  $\infty$ ) contribute only 5% of the signal energy.

## DRILL 7.12 Signal Energy and Parseval's Theorem

Use Parseval's theorem to show that the energy of the signal  $x(t) = 2a/(t^2 + a^2)$  is  $2\pi/a$ . [*Hint:* Find  $X(\omega)$  using pair 3 of Table 7.1 and the duality property.]

## THE ESSENTIAL BANDWIDTH OF A SIGNAL

The spectra of all practical signals extend to infinity. However, because the energy of any practical signal is finite, the signal spectrum must approach 0 as  $\omega \to \infty$ . Most of the signal energy is contained within a certain band of *B* Hz, and the energy contributed by the components beyond *B* Hz is negligible. We can therefore suppress the signal spectrum beyond *B* Hz with little effect on the signal shape and energy. The bandwidth *B* is called the *essential bandwidth* of the signal. The criterion for selecting *B* depends on the error tolerance in a particular application. We may, for example, select *B* to be that band which contains 95% of the signal energy.<sup>†</sup> This figure may be higher or lower than 95%, depending on the precision needed. Using such a criterion, we can determine the essential bandwidth of a signal. The essential bandwidth *B* for the signal  $e^{-at}u(t)$ , using 95% energy criterion, was determined in Ex. 7.20 to be 2.02*a* Hz.

Suppression of all the spectral components of x(t) beyond the essential bandwidth results in a signal  $\hat{x}(t)$ , which is a close approximation of x(t). If we use the 95% criterion for the essential bandwidth, the energy of the error (the difference)  $x(t) - \hat{x}(t)$  is 5% of  $E_x$ .

# 7.7 APPLICATION TO COMMUNICATIONS: AMPLITUDE MODULATION

*Modulation* causes a spectral shift in a signal and is used to gain certain advantages mentioned in our discussion of the frequency-shifting property. Broadly speaking, there are two classes of modulation: amplitude (linear) modulation and angle (nonlinear) modulation. In this section, we shall discuss some practical forms of amplitude modulation.

<sup>&</sup>lt;sup>†</sup> For lowpass signals, the essential bandwidth may also be defined as a frequency at which the value of the amplitude spectrum is a small fraction (about 1%) of its peak value. In Ex. 7.20, for instance, the peak value, which occurs at  $\omega = 0$ , is 1/a.

# 7.7-1 Double-Sideband, Suppressed-Carrier (DSB-SC) Modulation

In amplitude modulation, the amplitude A of the carrier  $A \cos(\omega_c t + \theta_c)$  is varied in some manner with the *baseband* (message)<sup>†</sup> signal m(t) (known as the *modulating signal*). The frequency  $\omega_c$ and the phase  $\theta_c$  are constant. We can assume  $\theta_c = 0$  without loss of generality. If the carrier amplitude A is made directly proportional to the modulating signal m(t), the modulated signal is  $m(t) \cos \omega_c t$  (Fig. 7.36). As was indicated earlier [Eq. (7.32)], this type of modulation simply shifts the spectrum of m(t) to the carrier frequency (Fig. 7.36c). Thus, if

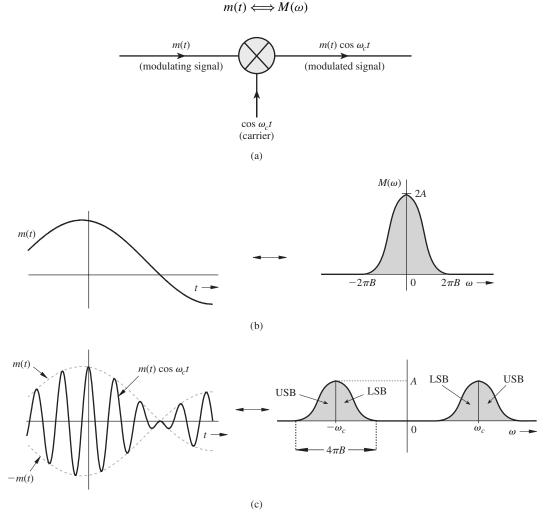


Figure 7.36 DSB-SC modulation.

<sup>&</sup>lt;sup>†</sup> The term *baseband* is used to designate the band of frequencies of the signal delivered by the source or the input transducer.

then

$$m(t)\cos\omega_c t \Longleftrightarrow \frac{1}{2}[M(\omega + \omega_c) + M(\omega - \omega_c)]$$
(7.48)

Recall that  $M(\omega - \omega_c)$  is  $M(\omega)$ -shifted to the right by  $\omega_c$  and  $M(\omega + \omega_c)$  is  $M(\omega)$ -shifted to the left by  $\omega_c$ . Thus, the process of modulation shifts the spectrum of the modulating signal to the left and the right by  $\omega_c$ . Note also that if the bandwidth of m(t) is *B* Hz, then, as indicated in Fig. 7.36c, the bandwidth of the modulated signal is 2*B* Hz. We also observe that the modulated signal spectrum centered at  $\omega_c$  is composed of two parts: a portion that lies above  $\omega_c$ , known as the *upper sideband* (*USB*), and a portion that lies below  $\omega_c$ , known as the *lower sideband* (*LSB*). Similarly, the spectrum centered at  $-\omega_c$  has upper and lower sidebands. This form of modulation is called *double sideband* (*DSB*) modulation for the obvious reason.

The relationship of *B* to  $\omega_c$  is of interest. Figure 7.36c shows that  $\omega_c \ge 2\pi B$  to avoid the overlap of the spectra centered at  $\pm \omega_c$ . If  $\omega_c < 2\pi B$ , the spectra overlap and the information of m(t) are lost in the process of modulation, a loss that makes it impossible to get back m(t) from the modulated signal  $m(t) \cos \omega_c t$ .<sup>†</sup>

#### **EXAMPLE 7.21** Double-Sideband Suppressed-Carrier Modulation

For a baseband signal  $m(t) = \cos \omega_m t$ , find the DSB-SC signal and sketch its spectrum. Identify the upper and lower sidebands.

We shall work this problem in the frequency domain as well as the time domain to clarify the basic concepts of DSB-SC modulation. In the frequency-domain approach, we work with the signal spectra. The spectrum of the baseband signal  $m(t) = \cos \omega_m t$  is given by

$$M(\omega) = \pi \left[ \delta(\omega - \omega_m) + \delta(\omega + \omega_m) \right]$$

The spectrum consists of two impulses located at  $\pm \omega_m$ , as depicted in Fig. 7.37a.

The DSB-SC (modulated) spectrum, as indicated by Eq. (7.48), is the baseband spectrum in Fig. 7.37a shifted to the right and the left by  $\omega_c$  (times 0.5), as depicted in Fig. 7.37b. This spectrum consists of impulses at  $\pm(\omega_c - \omega_m)$  and  $\pm(\omega_c + \omega_m)$ . The spectrum beyond  $\omega_c$  is the upper sideband (USB), and the one below  $\omega_c$  is the lower sideband (LSB). Observe that the DSB-SC spectrum does not have as a component the carrier frequency  $\omega_c$ . This is why the term *double-sideband, suppressed carrier* (DSB-SC) is used for this type of modulation.

<sup>&</sup>lt;sup>†</sup> Practical factors may impose additional restrictions on  $\omega_c$ . For instance, in broadcast applications, a radiating antenna can radiate only a narrow band without distortion. This restriction implies that avoiding distortion caused by the radiating antenna calls for  $\omega_c/2\pi B \gg 1$ . The broadcast band AM radio, for instance, with B = 5 kHz and the band of 550–1600 kHz for carrier frequency gives a ratio of  $\omega_c/2\pi B$  roughly in the range of 100–300.

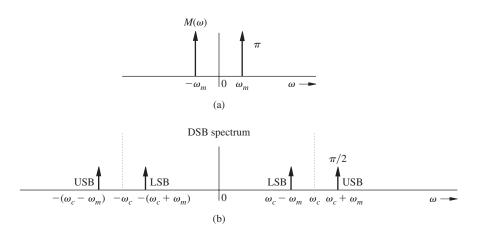


Figure 7.37 An example of DSB-SC modulation.

ç

In the time-domain approach, we work directly with signals in the time domain. For the baseband signal  $m(t) = \cos \omega_m t$ , the DSB-SC signal  $\varphi_{\text{DSB-SC}}(t)$  is

This result shows that when the baseband (message) signal is a single sinusoid of frequency  $\omega_m$ , the modulated signal consists of two sinusoids: the component of frequency  $\omega_c + \omega_m$  (the upper sideband), and the component of frequency  $\omega_c - \omega_m$  (the lower sideband). Figure 7.37b illustrates precisely the spectrum of  $\varphi_{\text{DSB-SC}}(t)$ . Thus, each component of frequency  $\omega_m$  in the modulating signal results in two components of frequencies  $\omega_c + \omega_m$  and  $\omega_c - \omega_m$  in the modulated signal. This being a DSB-SC (suppressed-carrier) modulation, there is no component of the carrier frequency  $\omega_c$  on the right-hand side of Eq. (7.49).<sup>†</sup>

# DEMODULATION OF DSB-SC SIGNALS

The DSB-SC modulation translates or shifts the frequency spectrum to the left and the right by  $\omega_c$  (i.e., at  $+\omega_c$  and  $-\omega_c$ ), as seen from Eq. (7.48). To recover the original signal m(t) from

<sup>&</sup>lt;sup>†</sup> The term *suppressed carrier* does not necessarily mean absence of the spectrum at the carrier frequency. "Suppressed carrier" merely implies that there is no discrete component of the carrier frequency. Since no discrete component exists, the DSB-SC spectrum does not have impulses at  $\pm \omega_c$ , which further implies that the modulated signal  $m(t) \cos \omega_c t$  does not contain a term of the form  $k \cos \omega_c t$  [assuming that m(t) has a zero mean value].

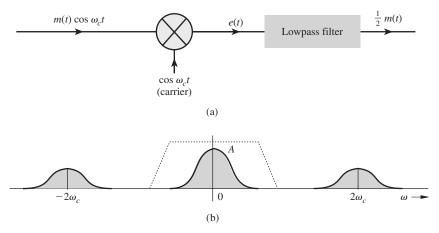


Figure 7.38 Demodulation of DSB-SC: (a) demodulator and (b) spectrum of e(t).

the modulated signal, we must retranslate the spectrum to its original position. The process of recovering the signal from the modulated signal (retranslating the spectrum to its original position) is referred to as *demodulation*, or *detection*. Observe that if the modulated signal spectrum in Fig. 7.36c is shifted to the left and to the right by  $\omega_c$  (and halved), we obtain the spectrum illustrated in Fig. 7.38b, which contains the desired baseband spectrum in addition to an unwanted spectrum at  $\pm 2\omega_c$ . The latter can be suppressed by a lowpass filter. Thus, demodulated signal  $m(t) \cos \omega_c t$  by a carrier  $\cos \omega_c t$  followed by a lowpass filter, as depicted in Fig. 7.38a. We can verify this conclusion directly in the time domain by observing that the signal e(t) in Fig. 7.38a is

$$e(t) = m(t)\cos^2\omega_c t = \frac{1}{2}[m(t) + m(t)\cos 2\omega_c t]$$

Therefore, the Fourier transform of the signal e(t) is

$$E(\omega) = \frac{1}{2}M(\omega) + \frac{1}{4}[M(\omega + 2\omega_c) + M(\omega - 2\omega_c)]$$

Hence, e(t) consists of two components (1/2)m(t) and  $(1/2)m(t)\cos 2\omega_c t$ , with their spectra, as illustrated in Fig. 7.38b. The spectrum of the second component, being a modulated signal with carrier frequency  $2\omega_c$ , is centered at  $\pm 2\omega_c$ . Hence, this component is suppressed by the lowpass filter in Fig. 7.38a. The desired component  $(1/2)M(\omega)$ , being a lowpass spectrum (centered at  $\omega = 0$ ), passes through the filter unharmed, resulting in the output (1/2)m(t).

A possible form of lowpass filter characteristics is depicted (dotted) in Fig. 7.38b. In this method of recovering the baseband signal, called *synchronous detection*, or *coherent detection*, we use a carrier of exactly the same frequency (and phase) as the carrier used for modulation. Thus, for demodulation, we need to generate a local carrier at the receiver in frequency and phase coherence (synchronism) with the carrier used at the modulator. We shall demonstrate in Ex. 7.22 that both phase and frequency synchronism are extremely critical.

## EXAMPLE 7.22 Frequency and Phase Incoherence in DSB-SC

Discuss the effect of lack of frequency and phase coherence (synchronism) between the carriers at the modulator (transmitter) and the demodulator (receiver) in DSB-SC.

Let the modulator carrier be  $\cos \omega_c t$  (Fig. 7.36a). For the demodulator in Fig. 7.38a, we shall consider two cases: with carrier  $\cos (\omega_c t + \theta)$  (phase error of  $\theta$ ) and with carrier  $\cos (\omega_c + \Delta \omega) t$  (frequency error  $\Delta \omega$ ).

(a) With the demodulator carrier  $\cos(\omega_c t + \theta)$  (instead of  $\cos \omega_c t$ ) in Fig. 7.38a, the multiplier output is  $e(t) = m(t) \cos \omega_c t \cos(\omega_c t + \theta)$  instead of  $m(t) \cos^2 \omega_c t$ . From the trigonometric identity, we obtain

$$e(t) = m(t) \cos \omega_c t \cos (\omega_c t + \theta)$$
$$= \frac{1}{2}m(t) [\cos \theta + \cos (2\omega_c t + \theta)]$$

The spectrum of the component  $(1/2)m(t)\cos(2\omega_c t + \theta)$  is centered at  $\pm 2\omega_c$ . Consequently, it will be filtered out by the lowpass filter at the output. The component  $(1/2)m(t)\cos\theta$  is the signal m(t) multiplied by a constant  $(1/2)\cos\theta$ . The spectrum of this component is centered at  $\omega = 0$  (lowpass spectrum) and will pass through the lowpass filter at the output, yielding the output  $(1/2)m(t)\cos\theta$ .

If  $\theta$  is constant, the phase asynchronism merely yields an output that is attenuated (by a factor  $\cos \theta$ ). Unfortunately, in practice,  $\theta$  is often the phase difference between the carriers generated by two distant generators and varies randomly with time. This variation would result in an output whose gain varies randomly with time.

(b) In the case of frequency error, the demodulator carrier is  $\cos(\omega_c + \Delta\omega)t$ . This situation is very similar to the phase error case in part (a) with  $\theta$  replaced by  $(\Delta\omega)t$ . Following the analysis in part (a), we can express the demodulator product e(t) as

$$e(t) = m(t)\cos\omega_c t\cos(\omega_c + \Delta\omega)t$$
$$= \frac{1}{2}m(t)[\cos(\Delta\omega)t + \cos(2\omega_c + \Delta\omega)t]$$

The spectrum of the component  $(1/2)m(t)\cos(2\omega_c + \Delta\omega)t$  is centered at  $\pm(2\omega_c + \Delta\omega)$ . Consequently, this component will be filtered out by the lowpass filter at the output. The component  $(1/2)m(t)\cos(\Delta\omega)t$  is the signal m(t) multiplied by a low-frequency carrier of frequency  $\Delta\omega$ . The spectrum of this component is centered at  $\pm\Delta\omega$ . In practice, the frequency error  $(\Delta\omega)$  is usually very small. Hence, the signal  $(1/2)m(t)\cos(\Delta\omega)t$  (whose spectrum is centered at  $\pm\Delta\omega$ ) is a lowpass signal and passes through the lowpass filter at the output, resulting in the output  $(1/2)m(t)\cos(\Delta\omega)t$ . The output is the desired signal m(t) multiplied by a very-low-frequency sinusoid  $\cos(\Delta\omega)t$ . The output in this case is not merely an attenuated replica of the desired signal m(t), but represents m(t) multiplied by a time-varying gain  $\cos(\Delta\omega)t$ . If, for instance, the transmitter and the receiver carrier frequencies differ just by 1 Hz, the output will be the desired signal m(t) multiplied by a time-varying signal whose gain goes from the maximum to 0 every half-second. This is like a restless child fiddling with the volume control knob of a receiver, going from maximum volume to zero volume every half-second. This kind of distortion (called the *beat effect*) is beyond repair.

## 7.7-2 Amplitude Modulation (AM)

For the suppressed-carrier scheme just discussed, a receiver must generate a carrier in frequency and phase synchronism with the carrier at a transmitter that may be located hundreds or thousands of miles away. This situation calls for a sophisticated receiver, which could be quite costly. The other alternative is for the transmitter to transmit a carrier  $A \cos \omega_c t$  [along with the modulated signal  $m(t) \cos \omega_c t$ ] so that there is no need to generate a carrier at the receiver. In this case, the transmitter needs to transmit much larger power, a rather expensive procedure. In point-to-point communications, where there is one transmitter for each receiver, substantial complexity in the receiver system can be justified, provided there is a large enough saving in expensive high-power transmitting equipment. On the other hand, for a broadcast system with a multitude of receivers for each transmitter, it is more economical to have one expensive high-power transmitter and simpler, less expensive receivers. The second option (transmitting a carrier along with the modulated signal) is the obvious choice in this case. This is amplitude modulation (AM), in which the transmitted signal  $\varphi_{AM}(t)$  is given by

$$\varphi_{\rm AM}(t) = A\cos\omega_c t + m(t)\cos\omega_c t = [A + m(t)]\cos\omega_c t \tag{7.50}$$

Recall that the DSB-SC signal is  $m(t) \cos \omega_c t$ . From Eq. (7.50) it follows that the AM signal is identical to the DSB-SC signal with A + m(t) as the modulating signal [instead of m(t)]. Therefore, to sketch  $\varphi_{AM}(t)$ , we sketch A + m(t) and -[A + m(t)] as the envelopes and fill in between with the sinusoid of the carrier frequency. Two cases are considered in Fig. 7.39. In the first case, A is large enough so that  $A + m(t) \ge 0$  (is nonnegative) for all values of t. In the second case, A is not large enough to satisfy this condition. In the first case, the envelope (Fig. 7.39d) has the same shape as m(t) (although riding on a dc of magnitude A). In the second case, the envelope shape is not m(t), for some parts get rectified (Fig. 7.39e). Thus, we can detect the desired signal m(t) by detecting the envelope in the first case. In the second case, such a detection is not possible. We shall see that envelope detection is an extremely simple and inexpensive operation, which does not require generation of a local carrier for the demodulation. But as just noted, the envelope of AM has the information about m(t) only if the AM signal  $[A + m(t)] \cos \omega_c t$  satisfies the condition A + m(t) > 0 for all t. Thus, the condition for envelope detection of an AM signal is

$$A + m(t) \ge 0 \qquad \text{for all } t \tag{7.51}$$

If  $m_p$  is the peak amplitude (positive or negative) of m(t), then Eq. (7.51) is equivalent to

$$A \ge m_p$$

Thus, the minimum carrier amplitude required for the viability of envelope detection is  $m_p$ . This point is clearly illustrated in Fig. 7.39.

We define the *modulation index*  $\mu$  as

$$\mu = \frac{m_p}{A} \tag{7.52}$$

where A is the carrier amplitude. Note that  $m_p$  is a constant of the signal m(t). Because  $A \ge m_p$  and because there is no upper bound on A, it follows that

 $0 \leq \mu \leq 1$ 

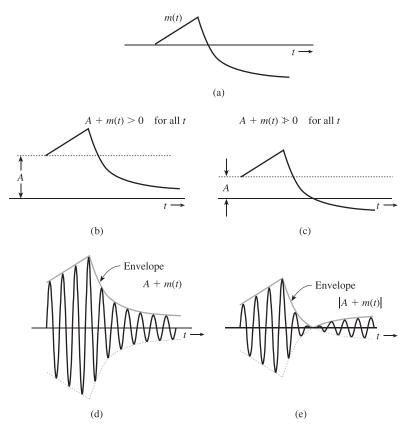


Figure 7.39 An AM signal (a) for two values of A (b, c) and the respective envelopes (d, e).

as the required condition for the viability of demodulation of AM by an envelope detector.

When  $A < m_p$ , Eq. (7.52) shows that  $\mu > 1$  (overmodulation, shown in Fig. 7.39e). In this case, the option of envelope detection is no longer viable. We then need to use synchronous demodulation. Note that synchronous demodulation can be used for any value of  $\mu$  (see Prob. 7.7-7). The envelope detector, which is considerably simpler and less expensive than the synchronous detector, can be used only when  $\mu \leq 1$ .

# **EXAMPLE 7.23** Amplitude Modulation

Sketch  $\varphi_{AM}(t)$  for modulation indices of  $\mu = 0.5$  (50% modulation) and  $\mu = 1$  (100% modulation), when  $m(t) = B \cos \omega_m t$ . This case is referred to as *tone modulation* because the modulating signal is a pure sinusoid (or tone).

#### 744 CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

In this case,  $m_p = B$  and the modulation index according to Eq. (7.52) is

$$\mu = \frac{B}{A}$$


Hence,  $B = \mu A$  and

$$m(t) = B\cos\omega_m t = \mu A\cos\omega_m t$$

Therefore,

$$\varphi_{AM}(t) = [A + m(t)] \cos \omega_c t = A[1 + \mu \cos \omega_m t] \cos \omega_c t$$

The modulated signals corresponding to  $\mu = 0.5$  and  $\mu = 1$  appear in Figs. 7.40a and 7.40b, respectively.

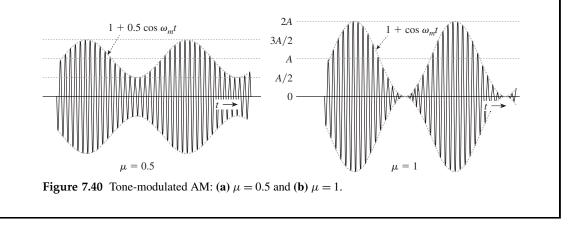

## DEMODULATION OF AM: THE ENVELOPE DETECTOR

The AM signal can be demodulated coherently by a locally generated carrier (see Prob. 7.7-7). Since, however, coherent, or synchronous, demodulation of AM (with  $\mu \le 1$ ) will defeat the very purpose of AM, it is rarely used in practice. We shall consider here one of the noncoherent methods of AM demodulation, *envelope detection*.<sup>†</sup>

In an envelope detector, the output of the detector follows the envelope of the (modulated) input signal. The circuit illustrated in Fig. 7.41a functions as an envelope detector. During the positive cycle of the input signal, the diode conducts and the capacitor C charges up to the peak voltage of the input signal (Fig. 7.41b). As the input signal falls below this peak value, the diode is cut off, because the capacitor voltage (which is very nearly the peak voltage) is greater than the input signal voltage, a circumstance causing the diode to open. The capacitor now discharges through the resistor R at a slow rate (with a time constant RC). During the next positive cycle,

<sup>&</sup>lt;sup>†</sup> There are also other methods of noncoherent detection. The rectifier detector consists of a rectifier followed by a lowpass filter. This method is also simple and almost as inexpensive as the envelope detector [4]. The nonlinear detector, although simple and inexpensive, results in a distorted output.

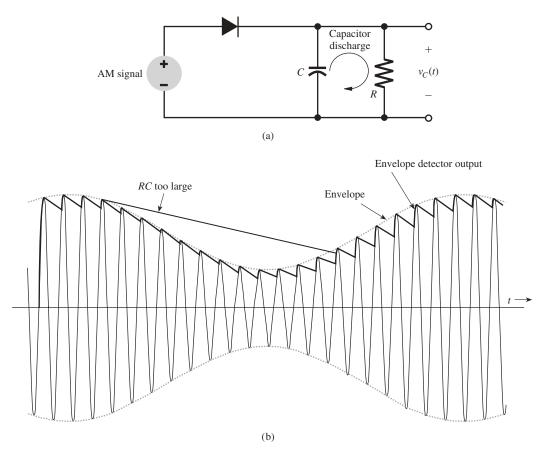


Figure 7.41 Demodulation by means of envelope detector.

the same drama repeats. When the input signal becomes greater than the capacitor voltage, the diode conducts again. The capacitor again charges to the peak value of this (new) cycle. As the input voltage falls below the new peak value, the diode cuts off again and the capacitor discharges slowly during the cutoff period, a process that changes the capacitor voltage very slightly.

In this manner, during each positive cycle, the capacitor charges up to the peak voltage of the input signal and then decays slowly until the next positive cycle. Thus, the output voltage  $v_C(t)$  follows closely the envelope of the input. The capacitor discharge between positive peaks, however, causes a ripple signal of frequency  $\omega_c$  in the output. This ripple can be reduced by increasing the time constant *RC* so that the capacitor discharges very little between the positive peaks ( $RC \gg 1/\omega_c$ ). Making *RC* too large, however, would make it impossible for the capacitor voltage to follow the envelope (see Fig. 7.41b). Thus, *RC* should be large in comparison to  $1/\omega_c$  but small in comparison to  $1/2\pi B$ , where *B* is the highest frequency in m(t). Incidentally, these two conditions also require that  $\omega_c \gg 2\pi B$ , a condition necessary for a well-defined envelope.

The envelope-detector output  $v_C(t)$  is A + m(t) plus a ripple of frequency  $\omega_c$ . The dc term A can be blocked out by a capacitor or a simple RC highpass filter. The ripple is reduced further by

#### 746 CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

another (lowpass) *RC* filter. In the case of audio signals, the speakers also act as lowpass filters, which further enhances suppression of the high-frequency ripple.

# 7.7-3 Single-Sideband Modulation (SSB)

Now consider the baseband spectrum  $M(\omega)$  (Fig. 7.42a) and the spectrum of the DSB-SC modulated signal  $m(t) \cos \omega_c t$  (Fig. 7.42b). The DSB spectrum in Fig. 7.42b has two sidebands: the upper and the lower (USB and LSB), both containing complete information on  $M(\omega)$  [see Eq. (7.12)]. Clearly, it is redundant to transmit both sidebands, a process that requires twice the bandwidth of the baseband signal. A scheme in which only one sideband is transmitted is known

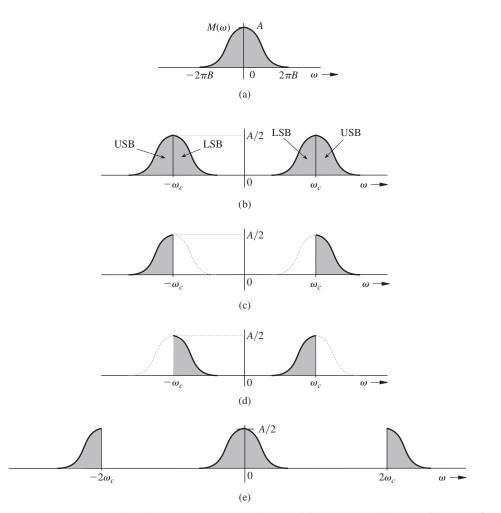


Figure 7.42 Spectra for single-sideband transmission: (a) baseband, (b) DSB, (c) USB, (d) LSB, and (e) synchronously demodulated signal.

as *single-sideband (SSB) transmission*, which requires only half the bandwidth of the DSB signal. Thus, we transmit only the upper sidebands (Fig. 7.42c) or only the lower sidebands (Fig. 7.42d).

An SSB signal can be coherently (synchronously) demodulated. For example, multiplication of a USB signal (Fig. 7.42c) by  $2\cos \omega_c t$  shifts its spectrum to the left and to the right by  $\omega_c$ , yielding the spectrum in Fig. 7.42e. Lowpass filtering of this signal yields the desired baseband signal. The case is similar with an LSB signal. Hence, demodulation of SSB signals is identical to that of DSB-SC signals, and the synchronous demodulator in Fig. 7.38a can demodulate SSB signals. Note that we are talking of SSB signals without an additional carrier. Hence, they are suppressed-carrier signals (SSB-SC).

#### **EXAMPLE 7.24** Single-Sideband Modulation

Find the USB (upper sideband) and LSB (lower sideband) signals when  $m(t) = \cos \omega_m t$ . Sketch their spectra, and show that these SSB signals can be demodulated using the synchronous demodulator in Fig. 7.38a.

The DSB-SC signal for this case is

$$\varphi_{\text{DSB-SC}}(t) = m(t)\cos\omega_c t = \cos\omega_m t\cos\omega_c t \qquad = \frac{1}{2}[\cos(\omega_c - \omega_m)t + \cos(\omega_c + \omega_m)t]$$


As pointed out in Ex. 7.21, the terms  $(1/2)\cos(\omega_c + \omega_m)t$  and  $(1/2)\cos(\omega_c - \omega_m)t$ represent the upper and lower sidebands, respectively. The spectra of the upper and lower sidebands are given in Figs. 7.43a and 7.43b. Observe that these spectra can be obtained from the DSB-SC spectrum in Fig. 7.37b by using a proper filter to suppress the undesired sidebands. For instance, the USB signal in Fig. 7.43a can be obtained by passing the DSB-SC signal (Fig. 7.37b) through a highpass filter of cutoff frequency  $\omega_c$ . Similarly, the LSB signal in Fig. 7.43b can be obtained by passing the DSB-SC signal through a lowpass filter of cutoff frequency  $\omega_c$ .

If we apply the LSB signal  $(1/2)\cos(\omega_c - \omega_m)t$  to the synchronous demodulator in Fig. 7.38a, the multiplier output is

$$e(t) = \frac{1}{2}\cos(\omega_c - \omega_m)t\cos\omega_c t = \frac{1}{4}[\cos\omega_m t + \cos(2\omega_c - \omega_m)t]$$

The term  $(1/4) \cos (2\omega_c - \omega_m)t$  is suppressed by the lowpass filter, producing the desired output  $(1/4) \cos \omega_m t$  [which is m(t)/4]. The spectrum of this term is  $\pi [\delta(\omega + \omega_m) + \delta(\omega - \omega_m)]/4$ , as depicted in Fig. 7.43c. In the same way, we can show that the USB signal can be demodulated by the synchronous demodulator.

In the frequency domain, demodulation (multiplication by  $\cos \omega_c t$ ) amounts to shifting the LSB spectrum (Fig. 7.43b) to the left and the right by  $\omega_c$  (times 0.5) and then suppressing the high frequency, as illustrated in Fig. 7.43c. The resulting spectrum represents the desired signal (1/4)m(t).

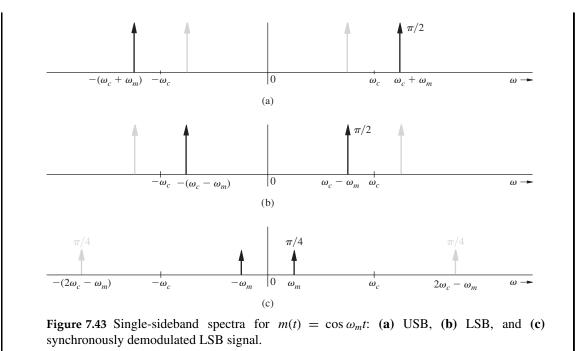

## **GENERATION OF SSB SIGNALS**

748


Two methods are commonly used to generate SSB signals. The *selective-filtering method* uses sharp cutoff filters to eliminate the undesired sideband, and the second method uses phase-shifting networks to achieve the same goal [4].<sup>†</sup> We shall consider here only the first method.

Selective filtering is the most commonly used method of generating SSB signals. In this method, a DSB-SC signal is passed through a sharp cutoff filter to eliminate the undesired sideband.

To obtain the USB, the filter should pass all components above  $\omega_c$  unattenuated and completely suppress all components below  $\omega_c$ . Such an operation requires an ideal filter, which is unrealizable. It can, however, be realized closely if there is some separation between the passband and the stopband. Fortunately, the voice signal provides this condition, because its spectrum shows little power content at the origin (Fig. 7.44). Moreover, articulation tests show that for speech signals, frequency components below 300 Hz are not important. In other words, we may suppress all speech components below 300 Hz without appreciably affecting intelligibility.<sup>‡</sup> Thus, filtering of the unwanted sideband becomes relatively easy for speech signals because we have a 600 Hz transition region around the cutoff frequency  $\omega_c$ . For some signals, which have considerable power

<sup>&</sup>lt;sup>†</sup> Yet another method, known as Weaver's method, is also used to generate SSB signals.

<sup>&</sup>lt;sup>‡</sup> Similarly, suppression of components of a speech signal above 3500 Hz causes no appreciable change in intelligibility.

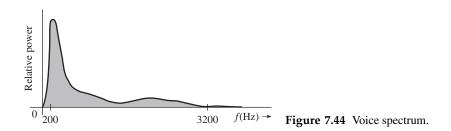

at low frequencies (around  $\omega = 0$ ), SSB techniques cause considerable distortion. Such is the case with video signals. Consequently, for video signals, instead of SSB, we use another technique, the *vestigial sideband (VSB)*, which is a compromise between SSB and DSB. It inherits the advantages of SSB and DSB but avoids their disadvantages at a cost of slightly increased bandwidth. VSB signals are relatively easy to generate, and their bandwidth is only slightly (typically 25%) greater than that of SSB signals. In VSB signals, instead of rejecting one sideband completely (as in SSB), we accept a gradual cutoff from one sideband [4].

## 7.7-4 Frequency-Division Multiplexing

Signal multiplexing allows transmission of several signals on the same channel. Later, in Ch. 8 (Sec. 8.2-2), we shall discuss time-division multiplexing (TDM), where several signals time-share the same channel, such as a cable or an optical fiber. In frequency-division multiplexing (FDM), the use of modulation, as illustrated in Fig. 7.45, makes several signals share the band of the same channel. Each signal is modulated by a different carrier frequency. The various carriers are adequately separated to avoid overlap (or interference) between the spectra of various modulated signals. These carriers are referred to as *subcarriers*. Each signal may use a different kind of modulation, for example, DSB-SC, AM, SSB-SC, VSB-SC, or even other forms of modulation, not discussed here [such as FM (frequency modulation) or PM (phase modulation)]. The modulated-signal spectra may be separated by a small guard band to avoid interference and to facilitate signal separation at the receiver.

When all the modulated spectra are added, we have a composite signal that may be considered to be a new baseband signal. Sometimes, this composite baseband signal may be used to further modulate a high-frequency (radio frequency, or RF) carrier for the purpose of transmission.

At the receiver, the incoming signal is first demodulated by the RF carrier to retrieve the composite baseband, which is then bandpass-filtered to separate the modulated signals. Then each modulated signal is individually demodulated by an appropriate subcarrier to obtain all the basic baseband signals.

# 7.8 DATA TRUNCATION: WINDOW FUNCTIONS

We often need to truncate data in diverse situations from numerical computations to filter design. For example, if we need to compute numerically the Fourier transform of some signal, say,  $e^{-t}u(t)$ , we will have to truncate the signal  $e^{-t}u(t)$  beyond a sufficiently large value of t (typically five time constants and above). The reason is that in numerical computations, we have to deal with

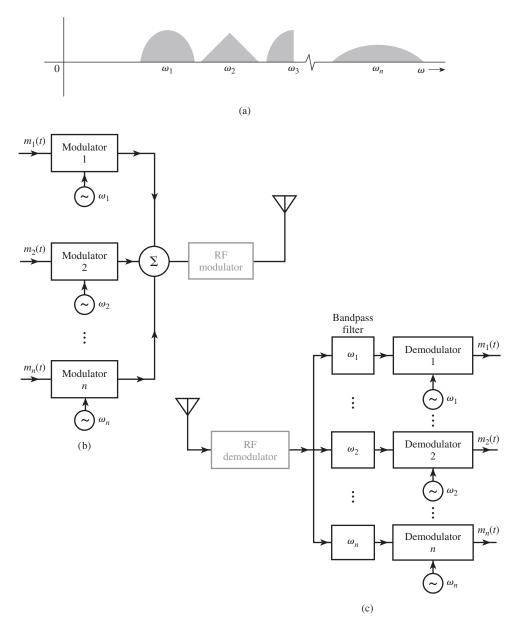


Figure 7.45 Frequency-division multiplexing: (a) FDM spectrum (b) transmitter, and (c) receiver.

data of finite duration. Similarly, the impulse response h(t) of an ideal lowpass filter is noncausal and approaches zero asymptotically as  $|t| \rightarrow \infty$ . For a practical design, we may want to truncate h(t) beyond a sufficiently large value of |t| to make h(t) causal and of finite duration. In signal sampling, to eliminate aliasing, we must use an antialiasing filter to truncate the signal spectrum beyond the half-sampling frequency  $\omega_s/2$ . Again, we may want to synthesize a periodic signal by adding the first n harmonics and truncating all the higher harmonics. These examples show that data truncation can occur in both time and frequency domains. On the surface, truncation appears to be a simple problem of cutting off the data at a point at which values are deemed to be sufficiently small. Unfortunately, this is not the case. Simple truncation can cause some unsuspected problems.

#### WINDOW FUNCTIONS

Truncation operation may be regarded as multiplying a signal of a large width by a window function of a smaller (finite) width. Simple truncation amounts to using a *rectangular window*  $w_R(t)$  (shown later in Fig. 7.48a) in which we assign unit weight to all the data within the window width (|t| < T/2), and assign zero weight to all the data lying outside the window (|t| > T/2). It is also possible to use a window in which the weight assigned to the data within the window may not be constant. In a *triangular window*  $w_T(t)$ , for example, the weight assigned to data decreases linearly over the window width (shown later in Fig. 7.48b).

Consider a signal x(t) and a window function w(t). If  $x(t) \iff X(\omega)$  and  $w(t) \iff W(\omega)$ , and if the windowed function  $x_w(t) \iff X_w(\omega)$ , then

$$x_w(t) = x(t)w(t)$$
 and  $X_w(\omega) = \frac{1}{2\pi}X(\omega) * W(\omega)$ 

According to the width property of convolution, it follows that the width of  $X_w(\omega)$  equals the sum of the widths of  $X(\omega)$  and  $W(\omega)$ . Thus, truncation of a signal increases its bandwidth by the amount of bandwidth of w(t). Clearly, the truncation of a signal causes its spectrum to spread (or smear) by the amount of the bandwidth of w(t). Recall that the signal bandwidth is inversely proportional to the signal duration (width). Hence, the wider the window, the smaller its bandwidth, and the smaller the *spectral spreading*. This result is predictable because a wider window means that we are accepting more data (closer approximation), which should cause smaller distortion (smaller spectral spreading). Smaller window width (poorer approximation) causes more spectral spreading (more distortion). In addition, since  $W(\omega)$  is really not strictly bandlimited and its spectrum  $\rightarrow 0$ only asymptotically, the spectrum of  $X_w(\omega) \rightarrow 0$  asymptotically also at the same rate as that of  $W(\omega)$ , even if  $X(\omega)$  is, in fact, strictly bandlimited. Thus, windowing causes the spectrum of  $X(\omega)$ to spread into the band where it is supposed to be zero. This effect is called *leakage*. The following example clarifies these twin effects of spectral spreading and leakage.

Let us consider  $x(t) = \cos \omega_0 t$  and a rectangular window  $w_R(t) = \operatorname{rect}(t/T)$ , illustrated in Fig. 7.46b. The reason for selecting a sinusoid for x(t) is that its spectrum consists of spectral lines of zero width (Fig. 7.46a). Hence, this choice will make the effect of spectral spreading and leakage easily discernible. The spectrum of the truncated signal  $x_w(t)$  is the convolution of the two impulses of  $X(\omega)$  with the sinc spectrum of the window function. Because the convolution of any function with an impulse is the function itself (shifted at the location of the impulse), the resulting spectrum of the truncated signal is  $1/2\pi$  times the two sinc pulses at  $\pm \omega_0$ , as depicted in Fig. 7.46c (also see Fig. 7.26). Comparison of spectra  $X(\omega)$  and  $X_w(\omega)$  reveals the effects of truncation. These are:

1. The spectral lines of  $X(\omega)$  have zero width. But the truncated signal is spread out by  $2\pi/T$  about each spectral line. The amount of spread is equal to the width of the mainlobe of the window spectrum. One effect of this *spectral spreading* (or smearing) is that if x(t) has two spectral components of frequencies differing by less than  $4\pi/T$  rad/s (2/T Hz), they

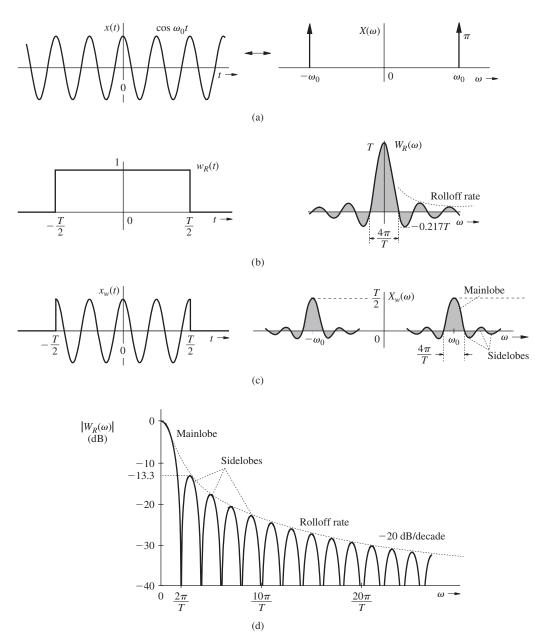


Figure 7.46 Windowing and its effects.

will be indistinguishable in the truncated signal. The result is loss of spectral resolution. We would like the spectral spreading [mainlobe width of  $W(\omega)$ ] to be as small as possible.

2. In addition to the mainlobe spreading, the truncated signal has sidelobes, which decay slowly with frequency. The spectrum of x(t) is zero everywhere except at  $\pm \omega_0$ . On the

other hand, the truncated signal spectrum  $X_w(\omega)$  is zero nowhere because of the sidelobes. These sidelobes decay asymptotically as  $1/\omega$ . Thus, the truncation causes spectral *leakage* in the band where the spectrum of the signal x(t) is zero. The peak *sidelobe* magnitude is 0.217 times the mainlobe magnitude (13.3 dB below the peak mainlobe magnitude). Also, the sidelobes decay at a rate  $1/\omega$ , which is -6 dB/octave (or -20 dB/decade). This is the sidelobe's *rolloff rate*. We want smaller sidelobes with a faster rate of decay (high rolloff rate). Figure 7.46d, which plots  $|W_R(\omega)|$  as a function of  $\omega$ , clearly shows the mainlobe and sidelobe features, with the first sidelobe amplitude -13.3 dB below the mainlobe amplitude and the sidelobes decaying at a rate of -6 dB/octave (or -20 dB/decade).

So far, we have discussed the effect on the signal spectrum of signal truncation (truncation in the time domain). Because of the time-frequency duality, the effect of spectral truncation (truncation in frequency domain) on the signal shape is similar.

#### **Remedies for Side Effects of Truncation**

For better results, we must try to minimize the twin side effects of truncations: spectral spreading (mainlobe width) and leakage (sidelobe). Let us consider each of these ills.

- 1. The spectral spread (mainlobe width) of the truncated signal is equal to the bandwidth of the window function w(t). We know that the signal bandwidth is inversely proportional to the signal width (duration). Hence, to reduce the spectral spread (mainlobe width), we need to increase the window width.
- 2. To improve the leakage behavior, we must search for the cause of the slow decay of sidelobes. In Ch. 6, we saw that the Fourier spectrum decays as  $1/\omega$  for a signal with jump discontinuity, decays as  $1/\omega^2$  for a continuous signal whose first derivative is discontinuous, and so on.<sup>†</sup> Smoothness of a signal is measured by the number of continuous derivatives it possesses. The smoother the signal, the faster the decay of its spectrum. Thus, we can achieve a given leakage behavior by selecting a suitably smooth (tapered) window.
- 3. For a given window width, the remedies for the two effects are incompatible. If we try to improve one, the other deteriorates. For instance, among all the windows of a given width, the rectangular window has the smallest spectral spread (mainlobe width), but its sidelobes have high level and they decay slowly. A tapered (smooth) window of the same width has smaller and faster decaying sidelobes, but it has a wider mainlobe.<sup>‡</sup> But we can compensate for the increased mainlobe width by widening the window. Thus, we can remedy both the side effects of truncation by selecting a suitably smooth window of sufficient width.

There are several well-known tapered-window functions, such as Bartlett (triangular), Hanning (von Hann), Hamming, Blackman, and Kaiser, which truncate the data gradually. These

<sup>&</sup>lt;sup>†</sup> This result was demonstrated for periodic signals. However, it applies to aperiodic signals also. This is because we showed in the beginning of this chapter that if  $x_{T_0}(t)$  is a periodic signal formed by periodic extension of an aperiodic signal x(t), then the spectrum of  $x_{T_0}(t)$  is  $(1/T_0 \text{ times})$  the samples of  $X(\omega)$ . Thus, what is true of the decay rate of the spectrum of  $x_{T_0}(t)$  is also true of the rate of decay of  $X(\omega)$ .

<sup>&</sup>lt;sup>‡</sup> A tapered window yields a higher mainlobe width because the effective width of a tapered window is smaller than that of the rectangular window; see Sec. 2.6-2 [Eq. (2.47)] for the definition of effective width. Therefore, from the reciprocity of the signal width and its bandwidth, it follows that the rectangular window mainlobe is narrower than a tapered window.

No.	Window w(t)	Mainlobe Width	Rolloff Rate Level (dB)	Peak Sidelobe
1	Rectangular: rect $\left(\frac{t}{T}\right)$	$\frac{4\pi}{T}$	-6	-13.3
2	Bartlett: $\Delta\left(\frac{t}{2T}\right)$	$\frac{8\pi}{T}$	-12	-26.5
3	Hanning: $0.5\left[1+\cos\left(\frac{2\pi t}{T}\right)\right]$	$\frac{8\pi}{T}$	-18	-31.5
4	Hamming: $0.54 + 0.46 \cos\left(\frac{2\pi t}{T}\right)$	$\frac{8\pi}{T}$	-6	-42.7
5	Blackman: $0.42 + 0.5 \cos\left(\frac{2\pi t}{T}\right) + 0.08 \cos\left(\frac{4\pi t}{T}\right)$	$\frac{12\pi}{T}$	-18	-58.1
6	Kaiser: $\frac{I_0 \left[ \alpha \sqrt{1 - 4\left(\frac{t}{T}\right)^2} \right]}{I_0(\alpha)}  0 \le \alpha \le 10$	$\frac{11.2\pi}{T}$	-6	-59.9
			$(\alpha = 8.168)$	

**TABLE 7.3** Some Window Functions and Their Characteristics

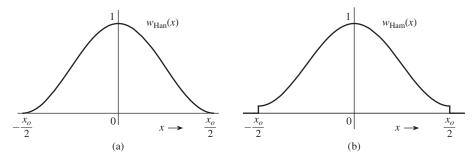


Figure 7.47 (a) Hanning and (b) Hamming windows.

windows offer different trade-offs with respect to spectral spread (mainlobe width), the peak sidelobe magnitude, and the leakage rolloff rate, as indicated in Table 7.3 [5, 6]. Observe that all windows are symmetrical about the origin (i.e., are even functions of *t*). Because of this feature,  $W(\omega)$  is a real function of  $\omega$ ; that is,  $\angle W(\omega)$  is either 0 or  $\pi$ . Hence, the phase function of the truncated signal has a minimal amount of distortion.

Figure 7.47 shows two well-known tapered-window functions, the von Hann (or Hanning) window  $w_{\text{Han}}(x)$  and the Hamming window  $w_{\text{Ham}}(x)$ . We have intentionally used the independent variable x because windowing can be performed in the time domain as well as in the frequency domain, so x could be t or  $\omega$ , depending on the application.

There are hundreds of windows, all with different characteristics. But the choice depends on a particular application. The rectangular window has the narrowest mainlobe. The Bartlett

#### 7.9 MATLAB: Fourier Transform Topics 755

(triangle) window (also called the Fejer or Cesaro) is inferior in all respects to the Hanning window. For this reason, it is rarely used in practice. Hanning is preferred over Hamming in spectral analysis because it has faster sidelobe decay. For filtering applications, on the other hand, the Hamming window is chosen because it has the smallest sidelobe magnitude for a given mainlobe width. The Hamming window is the most widely used general-purpose window. The Kaiser window, which uses  $I_0(\alpha)$ , the modified zero-order Bessel function, is more versatile and adjustable. Selecting a proper value of  $\alpha$  ( $0 \le \alpha \le 10$ ) allows the designer to tailor the window to suit a particular application. The parameter  $\alpha$  controls the mainlobe-sidelobe trade-off. When  $\alpha = 0$ , the Kaiser window is the rectangular window. For  $\alpha = 5.4414$ , it is the Hamming window, and when  $\alpha = 8.885$ , it is the Blackman window. As  $\alpha$  increases, the mainlobe width increases and the sidelobe level decreases.

# 7.8-1 Using Windows in Filter Design

We shall design an ideal lowpass filter of bandwidth W rad/s, with frequency response  $H(\omega)$ , as shown in Fig. 7.48e or Fig. 7.48f. For this filter, the impulse response  $h(t) = (W/\pi) \operatorname{sinc}(Wt)$ (Fig. 7.48c) is noncausal and, therefore, unrealizable. Truncation of h(t) by a suitable window (Fig. 7.48a) makes it realizable, although the resulting filter is now an approximation to the desired ideal filter.<sup>†</sup> We shall use a rectangular window  $w_R(t)$  and a triangular (Bartlett) window  $w_T(t)$  to truncate h(t), and then examine the resulting filters. The truncated impulse responses  $h_R(t) = h(t)w_R(t)$  and  $h_T(t) = h(t)w_T(t)$  are depicted in Fig. 7.48d. Hence, the windowed filter frequency response is the convolution of  $H(\omega)$  with the Fourier transform of the window, as illustrated in Figs. 7.48e and 7.48f. We make the following observations.

- 1. The windowed filter spectra show *spectral spreading* at the edges, and instead of a sudden switch there is a gradual transition from the passband to the stopband of the filter. The transition band is smaller  $(2\pi/T \text{ rad/s})$  for the rectangular case than for the triangular case  $(4\pi/T \text{ rad/s})$ .
- 2. Although  $H(\omega)$  is bandlimited, the windowed filters are not. But the stopband behavior of the triangular case is superior to that of the rectangular case. For the rectangular window, the leakage in the stopband decreases slowly (as  $1/\omega$ ) in comparison to that of the triangular window (as  $1/\omega^2$ ). Moreover, the rectangular case has a higher peak sidelobe amplitude than that of the triangular window.

# 7.9 MATLAB: FOURIER TRANSFORM TOPICS

MATLAB is useful for investigating a variety of Fourier transform topics. In this section, a rectangular pulse is used to investigate the scaling property, Parseval's theorem, essential bandwidth, and spectral sampling. Kaiser window functions are also investigated.

<sup>&</sup>lt;sup>†</sup> In addition to truncation, we need to delay the truncated function by T/2 to render it causal. However, the time delay only adds a linear phase to the spectrum without changing the amplitude spectrum. Thus, to simplify our discussion, we shall ignore the delay.

CHAPTER 7 CONTINUOUS-TIME SIGNAL ANALYSIS: THE FOURIER TRANSFORM

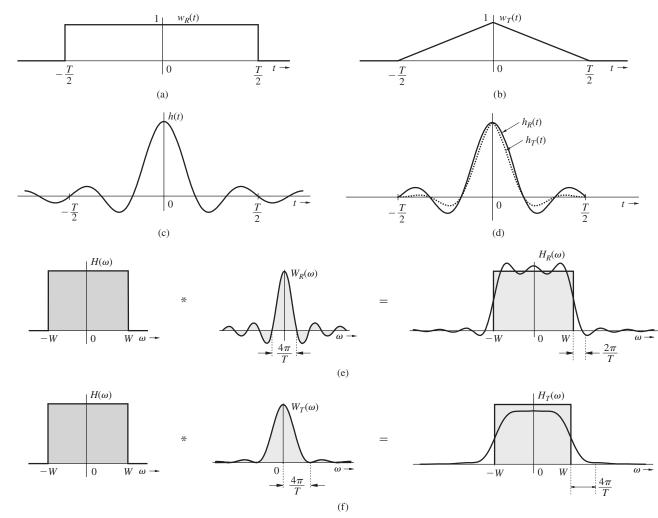


Figure 7.48 Window-based filter design.

## 7.9-1 The Sinc Function and the Scaling Property

As shown in Ex. 7.2, the Fourier transform of  $x(t) = \operatorname{rect}(t/\tau)$  is  $X(\omega) = \tau \operatorname{sinc}(\omega\tau/2)$ . To represent  $X(\omega)$  in MATLAB, a sinc function is first required. As an alternative to the signal processing toolbox function sinc, which computes  $\operatorname{sinc}(x)$  as  $\operatorname{sin}(\pi x)/\pi x$ , we create our own function that follows the conventions of this book and defines  $\operatorname{sinc}(x) = \frac{\sin(x)}{x}$ .

function [y] = CH7MP1(x)
% CH7MP1.m : Chapter 7, MATLAB Program 1
% Function M-file computes the sinc function, y = sin(x)/x.

y(x==0) = 1; y(x~=0) = sin(x(x~=0))./x(x~=0);

The computational simplicity of  $\operatorname{sinc}(x) = \sin(x)/x$  is somewhat deceptive:  $\sin(0)/0$  results in a divide-by-zero error. Thus, program CH7MP1 assigns  $\operatorname{sinc}(0) = 1$  and computes the remaining values according to the definition. Notice that CH7MP1 cannot be directly replaced by an anonymous function. Anonymous functions cannot have multiple lines or contain certain commands such as =, if, or for. M-files, however, can be used to define an anonymous function. For example, we can represent  $X(\omega)$  as an anonymous function that is defined in terms of CH7MP1.

```
>> X = @(omega,tau) tau*CH7MP1(omega*tau/2);
```

Once we have defined  $X(\omega)$ , it is simple to investigate the effects of scaling the pulse width  $\tau$ . Consider the three cases  $\tau = 1.0$ ,  $\tau = 0.5$ , and  $\tau = 2.0$ .

```
>> omega = linspace(-4*pi,4*pi,200);
>> plot(omega,X(omega,1),'k-',omega,X(omega,0.5),'k-.',omega,X(omega,2),'k--');
>> grid; axis tight; xlabel('\omega'); ylabel('X(\omega)');
>> legend('Baseline (\tau = 1)','Compressed (\tau = 0.5)',...
>> 'Expanded (\tau = 2.0)');
```

Figure 7.49 confirms the reciprocal relationship between signal duration and spectral bandwidth: time compression causes spectral expansion, and time expansion causes spectral compression. Additionally, spectral amplitudes are directly related to signal energy. As a signal is compressed, signal energy and thus spectral magnitude decrease. The opposite effect occurs when the signal is expanded.

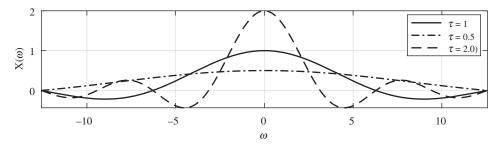


Figure 7.49 Spectra  $X(\omega) = \tau \operatorname{sinc} (\omega \tau/2)$  for  $\tau = 1.0, \tau = 0.5$ , and  $\tau = 2.0$ .

# 7.9-2 Parseval's Theorem and Essential Bandwidth

Parseval's theorem concisely relates energy between the time domain and the frequency domain:

$$\int_{-\infty}^{\infty} |x(t)|^2 dt = \frac{1}{2\pi} \int_{-\infty}^{\infty} |X(\omega)|^2 d\omega$$

This too is easily verified with MATLAB. For example, a unit amplitude pulse x(t) with duration  $\tau$  has energy  $E_x = \tau$ . Thus,

$$\int_{-\infty}^{\infty} |X(\omega)|^2 d\omega = 2\pi\tau$$

Letting  $\tau = 1$ , the energy of  $X(\omega)$  is computed by using the quad function.

```
>> X_squared = @(omega, tau) (tau*CH7MP1(omega*tau/2)).^2;
>> quad(X_squared,-1e6,1e6,[],[],1)
ans = 6.2817
```

Although not perfect, the result of the numerical integration is consistent with the expected value of  $2\pi \approx 6.2832$ . For quad, the first argument is the function to be integrated, the next two arguments are the limits of integration, the empty square brackets indicate default values for special options, and the last argument is the secondary input  $\tau$  for the anonymous function X\_squared. Full format details for quad are available from MATLAB's help facilities.

A more interesting problem involves computing a signal's essential bandwidth. Consider, for example, finding the essential bandwidth W, in radians per second, that contains fraction  $\beta$  of the energy of the square pulse x(t). That is, we want to find W such that

$$\frac{1}{2\pi} \int_{-W}^{W} |X(\omega)|^2 d\omega = \beta \tau$$

Program CH7MP2 uses a guess-and-check method to find W.

```
function [W,E_W] = CH7MP2(tau,beta,tol)
% CH7MP2.m : Chapter 7, MATLAB Program 2
% Function M-file computes essential bandwidth W for square pulse.
% INPUTS: tau = pulse width
%
           beta = fraction of signal energy desired in W
           tol = tolerance of relative energy error
%
% OUTPUTS: W = essential bandwidth [rad/s]
            E_W = Energy contained in bandwidth W
%
W = 0; step = 2*pi/tau;
                            % Initial guess and step values
X_squared = @(omega,tau) (tau*CH7MP1(omega*tau/2)).^2;
E = beta * tau;
                            % Desired energy in W
relerr = (E-0)/E;
                            % Initial relative error is 100 percent
while(abs(relerr) > tol),
                            % W too small, so...
    if (relerr>0),
        W=W+step;
                           % ... increase W by step
   elseif (relerr<0), % W too large, so...
step = step/2; % ... decrease step and then W
```

```
W = W-step;
end
E_W = 1/(2*pi)*quad(X_squared,-W,W,[],[],tau);
relerr = (E - E_W)/E;
end
```

Although this guess-and-check method is not the most efficient, it is relatively simple to understand: CH7MP2 sensibly adjusts W until the relative error is within tolerance. The number of iterations needed to converge to a solution depends on a variety of factors and is not known beforehand. The while command is ideal for such situations:

```
while expression,
```

statements;

end

While the *expression* is true, the *statements* are continually repeated.

To demonstrate CH7MP2, consider the 90% essential bandwidth W for a pulse of 1 second duration. Typing  $[W, E_W]$ =CH7MP2(1,0.9,0.001) returns an essential bandwidth W = 5.3014 that contains 89.97% of the energy. Reducing the error tolerance improves the estimate. CH7MP2(1,0.9,0.00005) returns an essential bandwidth W = 5.3321 that contains 90.00% of the energy. These essential bandwidth calculations are consistent with estimates presented after Ex. 7.2.

# 7.9-3 Spectral Sampling

Consider a signal with finite duration  $\tau$ . A periodic signal  $x_{T_0}(t)$  is constructed by repeating x(t) every  $T_0$  seconds, where  $T_0 \ge \tau$ . From Eq. (7.5), we can write the Fourier series coefficients of  $x_{T_0}(t)$  as  $D_n = (1/T_0)X(n2\pi/T_0)$ . Put another way, the Fourier series coefficients are obtained by sampling the spectrum  $X(\omega)$ .

By using spectral sampling, it is simple to determine the Fourier series coefficients for an arbitrary duty-cycle, square-pulse periodic signal. The square pulse  $x(t) = \text{rect}(t/\tau)$  has spectrum  $X(\omega) = \tau \operatorname{sinc}(\omega \tau/2)$ . Thus, the *n*th Fourier coefficient of the periodic extension  $x_{T_0}(t)$  is  $D_n = (\tau/T_0)\operatorname{sinc}(n\pi \tau/T_0)$ . As in Ex. 6.4,  $\tau = \pi$  and  $T_0 = 2\pi$  provide a square-pulse periodic signal. The Fourier coefficients are determined by

```
>> tau = pi; T_0 = 2*pi; n = [0:10];
```

```
>> D_n = tau/T_0*MS7P1(n*pi*tau/T_0);
```


>> stem(n,D\_n); xlabel('n'); ylabel('D\_n');

>> axis([-0.5 10.5 -0.2 0.55]);


The results, shown in Fig. 7.50, agree with Fig. 6.6b. Doubling the period to  $T_0 = 4\pi$  effectively doubles the density of spectral samples and halves the spectral amplitude, as shown in Fig. 7.51.

As  $T_0$  increases, the spectral sampling becomes progressively finer while the amplitude becomes infinitesimal. An evolution of the Fourier series toward the Fourier integral is seen by allowing the period  $T_0$  to become large. Figure 7.52 shows the result for  $T_0 = 40\pi$ .


If  $T_0 = \tau$ , the signal  $x_{T_0}$  is a constant and the spectrum should concentrate energy at dc. In this case, the sinc function is sampled at the zero crossings and  $D_n = 0$  for all *n* not equal to 0. Only the sample corresponding to n = 0 is nonzero, indicating a dc signal, as expected. It is a simple matter to modify the previous code to verify this case.

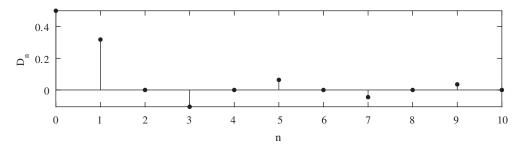

**Figure 7.50** Fourier spectra for  $\tau = \pi$  and  $T_0 = 2\pi$ .

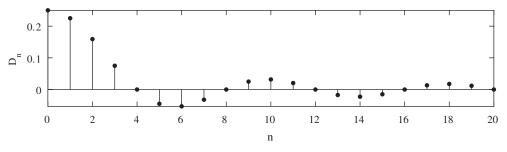

**Figure 7.51** Fourier spectra for  $\tau = \pi$  and  $T_0 = 4\pi$ .

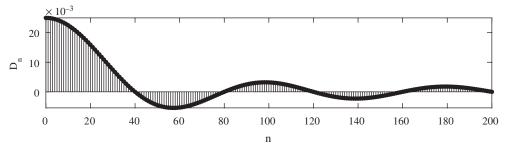

**Figure 7.52** Fourier spectra for  $\tau = \pi$  and  $T_0 = 40\pi$ .

# 7.9-4 Kaiser Window Functions

A window function is useful only if it can be easily computed and applied to a signal. The Kaiser window, for example, is flexible but appears rather intimidating:

$$w_K(t) = \begin{cases} \frac{I_0(\alpha \sqrt{1 - 4(t/T)^2})}{I_0(\alpha)} & |t| < T/2\\ 0 & \text{otherwise} \end{cases}$$

Fortunately, the bark of a Kaiser window is worse than its bite! The function  $I_0(x)$ , a zero-order modified Bessel function of the first kind, can be computed according to

$$I_0(x) = \sum_{k=0}^{\infty} \left(\frac{x^k}{2^k k!}\right)^2$$

or, more simply, by using the MATLAB function besseli(0,x). In fact, MATLAB supports a wide range of Bessel functions, including Bessel functions of the first and second kinds (besselj and bessely), modified Bessel functions of the first and second kinds (besseli and besselk), Hankel functions (besselh), and Airy functions (airy).

Program CH7MP3 computes Kaiser windows at times t by using parameters T and  $\alpha$ .

```
function [w_K] = CH7MP3(t,T,alpha)
% CH7MP3.m : Chapter 7, MATLAB Program 3
% Function M-file computes a width-T Kaiser window using parameter alpha.
% Alpha can also be a string identifier: 'rectangular', 'Hamming', or
% 'Blackman'.
% INPUTS:
            t = independent variable of the window function
%
            T = window width
%
            alpha = Kaiser parameter or string identifier
% OUTPUTS: w_K = Kaiser window function
if strncmpi(alpha,'rectangular',1),
    alpha = 0;
elseif strncmpi(alpha,'Hamming',3),
    alpha = 5.4414;
elseif strncmpi(alpha,'Blackman',1),
    alpha = 8.885;
elseif isa(alpha,'char')
    disp('Unrecognized string identifier.'); return
end
w_K = zeros(size(t)); i = find(abs(t)<T/2);</pre>
w_K(i) = besseli(0,alpha*sqrt(1-4*t(i).^2/(T^2)))/besseli(0,alpha);
```

Recall that  $\alpha = 0$ ,  $\alpha = 5.4414$ , and  $\alpha = 8.885$  correspond to rectangular, Hamming, and Blackman windows, respectively. CH7MP3 is written to allow these special-case Kaiser windows to be identified by name rather than by  $\alpha$  value. While unnecessary, this convenient feature is achieved with the help of the strncmpi command.

The strncmpi(S1,S2,N) command compares the first N characters of strings S1 and S2, ignoring case. More completely, MATLAB has four variants of string comparison: strcmp, strcmpi, strncmp, and strncmpi. Comparisons are restricted to the first N characters when n is present; case is ignored when i is present. Thus, CH7MP3 identifies any string alpha that starts with the letter r or R as a rectangular window. To prevent confusion with a Hanning window, the first three characters must match to identify a Hamming window. The isa(alpha,'char') command determines whether alpha is a character string. MATLAB help documents the many other classes that isa can identify. In CH7MP3, isa is used to terminate execution if a string identifier alpha has not been recognized as one of the three special cases.

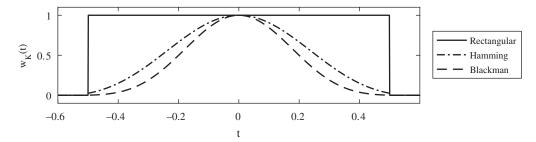


Figure 7.53 Special-case, unit-duration Kaiser windows.

Figure 7.53 shows the three special-case, unit-duration Kaiser windows generated by

```
>> t = [-0.6:.001:0.6]; T = 1;
```

```
>> plot(t,CH7MP3(t,T,'r'),'k-',t,CH7MP3(t,T,'ham'),'k-.',t,CH7MP3(t,T,'b'),'k--');
```

```
>> axis([-0.6 0.6 -.1 1.1]); xlabel('t'); ylabel('w_K(t)');
```

```
>> legend('Rectangular', 'Hamming', 'Blackman', 'Location', 'EastOutside');
```

# 7.10 SUMMARY

In Ch. 6, we represented periodic signals as a sum of (everlasting) sinusoids or exponentials (Fourier series). In this chapter we extended this result to aperiodic signals, which are represented by the Fourier integral (instead of the Fourier series). An aperiodic signal x(t) may be regarded as a periodic signal with period  $T_0 \rightarrow \infty$  so that the Fourier integral is basically a Fourier series with a fundamental frequency approaching zero. Therefore, for aperiodic signals, the Fourier spectra are continuous. This continuity means that a signal is represented as a sum of sinusoids (or exponentials) of all frequencies over a continuous frequency interval. The Fourier transform  $X(\omega)$ , therefore, is the spectral density (per unit bandwidth in hertz).

An ever-present aspect of the Fourier transform is the duality between time and frequency, which also implies duality between the signal x(t) and its transform  $X(\omega)$ . This duality arises because of near-symmetrical equations for direct and inverse Fourier transforms. The duality principle has far-reaching consequences and yields many valuable insights into signal analysis.

The scaling property of the Fourier transform leads to the conclusion that the signal bandwidth is inversely proportional to signal duration (signal width). Time shifting of a signal does not change its amplitude spectrum, but it does add a linear phase component to its spectrum. Multiplication of a signal by an exponential  $e^{j\omega_0 t}$  shifts the spectrum to the right by  $\omega_0$ . In practice, spectral shifting is achieved by multiplying a signal by a sinusoid such as  $\cos \omega_0 t$  (rather than the exponential  $e^{j\omega_0 t}$ ). This process is known as amplitude modulation. Multiplication of two signals results in convolution of their spectra, whereas convolution of two signals results in multiplication of their spectra.

For an LTIC system with the frequency response  $H(\omega)$ , the input and output spectra  $X(\omega)$  and  $Y(\omega)$  are related by the equation  $Y(\omega) = X(\omega)H(\omega)$ . This is valid only for asymptotically stable systems. It also applies to marginally stable systems if the input does not contain a finite-amplitude

sinusoid of the natural frequency of the system. For asymptotically unstable systems, the frequency response  $H(\omega)$  does not exist. For distortionless transmission of a signal through an LTIC system, the amplitude response  $|H(\omega)|$  of the system must be constant, and the phase response  $\angle H(\omega)$  should be a linear function of  $\omega$  over a band of interest. Ideal filters, which allow distortionless transmission of a certain band of frequencies and suppress all the remaining frequencies, are physically unrealizable (noncausal). In fact, it is impossible to build a physical system with zero gain  $[H(\omega) = 0]$  over a finite band of frequencies. Such systems (which include ideal filters) can be realized only with infinite time delay in the response.

The energy of a signal x(t) is equal to  $1/2\pi$  times the area under  $|X(\omega)^2|$  (Parseval's theorem). The energy contributed by spectral components within a band  $\Delta f$  (in hertz) is given by  $|X(\omega)|^2 \Delta f$ . Therefore,  $|X(\omega)|^2$  is the energy spectral density per unit bandwidth (in hertz).

The process of modulation shifts the signal spectrum to different frequencies. Modulation is used for many reasons: to transmit several messages simultaneously over the same channel for the sake of utilizing channel's high bandwidth, to effectively radiate power over a radio link, to shift a signal spectrum at higher frequencies to overcome the difficulties associated with signal processing at lower frequencies, and to effect the exchange of transmission bandwidth and transmission power required to transmit data at a certain rate. Broadly speaking, there are two types of modulation, amplitude and angle modulation. Each class has several subclasses.

In practice, we often need to truncate data. Truncating is like viewing data through a window, which permits only certain portions of the data to be seen and hides (suppresses) the remainder. Abrupt truncation of data amounts to a rectangular window, which assigns a unit weight to data seen from the window and zero weight to the remaining data. Tapered windows, on the other hand, reduce the weight gradually from 1 to 0. Data truncation can cause some unsuspected problems. For example, in computation of the Fourier transform, windowing (data truncation) causes spectral spreading (spectral smearing) that is characteristic of the window function used. A rectangular window results in the least spreading, but it does so at the cost of a high and oscillatory spectral leakage outside the signal band, which decays slowly as  $1/\omega$ . In comparison to a rectangular window, tapered windows, in general, have larger spectral spreading (smearing), but the spectral leakage is smaller and decays faster with frequency. If we try to reduce spectral leakage by using a smoother window width. Therefore, we can achieve a given combination of spectral spread (transition bandwidth) and leakage characteristics by choosing a suitable tapered window function of a sufficiently long width *T*.

#### REFERENCES

- 1. Churchill, R. V., and Brown, J. W. Fourier Series and Boundary Value Problems, 3rd ed. McGraw-Hill, New York, 1978.
- 2. Bracewell, R. N. Fourier Transform and Its Applications, rev. 2nd ed. McGraw-Hill, New York, 1986.
- 3. Guillemin, E. A. Theory of Linear Physical Systems. Wiley, New York, 1963.
- 4. Lathi, B. P. *Modern Digital and Analog Communication Systems*, 3rd ed. Oxford University Press, New York, 1998.
- 5. Hamming, R. W. Digital Filters, 2nd ed. Prentice-Hall, Englewood Cliffs, NJ, 1983.
- 6. Harris, F. J. On the use of windows for harmonic analysis with the discrete Fourier transform. *Proceedings of the IEEE*, vol. 66, no. 1, pp. 51–83, January 1978.

# PROBLEMS

- 7.1-1 Suppose signal  $x(t) = t^2 [u(t) u(t-2)]$  has Fourier transform  $X(\omega)$ . Define a 3-periodic replication of x(t) as  $y(t) = \sum_{n=-\infty}^{\infty} 2x(t-1-3n)$ . Determine  $Y_k$ , the Fourier series of y(t), in terms of the Fourier transform  $X(\cdot)$ .
- **7.1-2** Show that for a real x(t), Eq. (7.10) can be expressed as

$$x(t) = \frac{1}{\pi} \int_0^\infty |X(\omega)| \cos[\omega t + \Delta X(\omega)] d\omega$$

This is the trigonometric form of the Fourier integral. Compare this with the compact trigonometric Fourier series.

**7.1-3** Show that if x(t) is an even function of *t*, then

$$X(\omega) = 2\int_0^\infty x(t)\cos\omega t\,dt$$

and if x(t) is an odd function of t, then

$$X(\omega) = -2j \int_0^\infty x(t) \sin \omega t \, dt$$

Hence, prove that if x(t) is a real and even function of t, then  $X(\omega)$  is a real and even

function of  $\omega$ . In addition, if x(t) is a real and odd function of t, then  $X(\omega)$  is an imaginary and odd function of  $\omega$ .

**7.1-4** A signal x(t) can be expressed as the sum of even and odd components (see Sec. 1.5-2):

 $x(t) = x_e(t) + x_o(t)$ 


(a) If  $x(t) \iff X(\omega)$ , show that for real x(t),

 $x_e(t) \iff \operatorname{Re}[X(\omega)]$ 

and

$$x_o(t) \iff j \operatorname{Im}[X(\omega)]$$

- (b) Verify these results by finding the Fourier transforms of the even and odd components of the following signals: (i) u(t) and (ii) e<sup>-at</sup>u(t).
- **7.1-5** Using Eq. (7.9), find the Fourier transforms of the signals x(t) in Fig. P7.1-5.
- **7.1-6** Using Eq. (7.9), find the Fourier transforms of the signals depicted in Fig. P7.1-6.
- **7.1-7** Use Eq. (7.10) to find the inverse Fourier transforms of the spectra in Fig. P7.1-7.

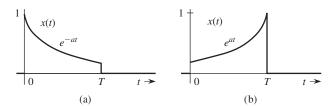



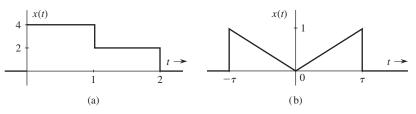


Figure P7.1-6

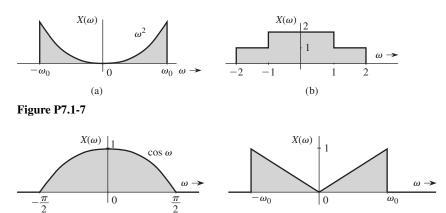


Figure P7.1-8

2

7.1-8 Use Eq. (7.10) to find the inverse Fourier transforms of the spectra in Fig. P7.1-8.

(a)

7.1-9 If  $x(t) \iff X(\omega)$ , then show that

$$X(0) = \int_{-\infty}^{\infty} x(t) \, dt$$

and

$$x(0) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) \, d\omega$$

Also show that

$$\int_{-\infty}^{\infty} \operatorname{sinc}(x) \, dx = \int_{-\infty}^{\infty} \operatorname{sinc}^2(x) \, dx = \pi$$


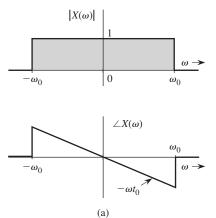


Figure P7.2-4

- 7.2-1 Sketch the following functions: (a) rect (t/2)
  - (b)  $\Delta(3\omega/100)$

(b)

- (c) rect ((t-10)/8)
- (d) sinc  $(\pi \omega/5)$
- (e) sinc  $((\omega/5) 2\pi)$
- (f) sinc (t/5) rect  $(t/10\pi)$
- 7.2-2 Using Eq. (7.9), show that the Fourier transform of rect (t-5) is sinc  $(\omega/2)e^{-j5\omega}$ . Sketch the resulting amplitude and phase spectra.
- 7.2-3 Using Eq. (7.10), show that the inverse Fourier transform of rect  $((\omega - 10)/2\pi)$  is sinc  $(\pi t) e^{j10t}$ .
- 7.2-4 Find the inverse Fourier transform of  $X(\omega)$  for the spectra illustrated in Fig. P7.2-4. [Hint:

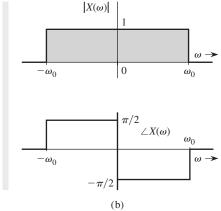

 $X(\omega) = |X(\omega)|e^{j \angle X(\omega)}$ . This problem illustrates how different phase spectra (both with the same amplitude spectrum) represent entirely different signals.]

- **7.2-5** (a) Can you find the Fourier transform of  $e^{at}u(t)$  when a > 1 by setting  $s = j\omega$  in the Laplace transform of  $e^{at}u(t)$ ? Explain.
  - (b) Find the Laplace transform of x(t) shown in Fig. P7.2-5. Can you find the Fourier transform of x(t) by setting  $s = j\omega$  in its Laplace transform? Explain. Verify your answer by finding the Fourier and the Laplace transforms of x(t).

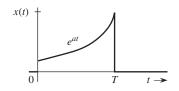


Figure P7.2-5

- **7.3-1** Apply the duality property to the appropriate pair in Table 7.1 to show that
  - (a)  $\frac{1}{2}[\delta(t) + j/\pi t] \iff u(\omega)$
  - (b)  $\tilde{\delta}(t+T) + \delta(t-T) \iff 2\cos T\omega$
  - (c)  $\delta(t+T) \delta(t-T) \iff 2j \sin T\omega$

- **7.3-2** A signal x(t) has Fourier transform  $X(\omega)$ . Determine the Fourier transform  $Y(\omega)$  in terms of  $X(\omega)$  for each of the following signals y(t): (a)  $y(t) = \frac{1}{5}x(-2t+3)$ (b)  $y(t) = e^{j2t}x^*(-3t-6)$
- **7.3-3** A signal x(t) has Fourier transform  $X(\omega)$ . Determine the inverse Fourier transform y(t) in terms of x(t) for each of the following spectra  $Y(\omega)$ , (a)  $Y(\omega) = \frac{4}{2}e^{-j2\omega/3}X(-\omega/3)$

(a) 
$$I(\omega) = \frac{1}{3}e^{-\omega} + A(-\omega/3)$$

(b) 
$$Y(\omega) = \frac{1}{3}e^{j2(\omega-2)}X^*\left(\frac{\omega-2}{3}\right)$$

**7.3-4** The Fourier transform of the triangular pulse x(t) in Fig. P7.3-4 is expressed as

$$X(\omega) = \frac{1}{\omega^2} (e^{j\omega} - j\omega e^{j\omega} - 1)$$

Use this information, and the time-shifting and time-scaling properties, to find the Fourier transforms of the signals  $x_i(t)$  (i = 1, 2, 3, 4, 5) shown in Fig. P7.3-4.

- **7.3-5** Using only the time-shifting property and Table 7.1, find the Fourier transforms of the signals depicted in Fig. P7.3-5.
- **7.3-6** Consider the fact that the  $\tau$ -duration triangle function  $\Lambda\left(\frac{\omega}{\tau}\right)$  has inverse Fourier transform



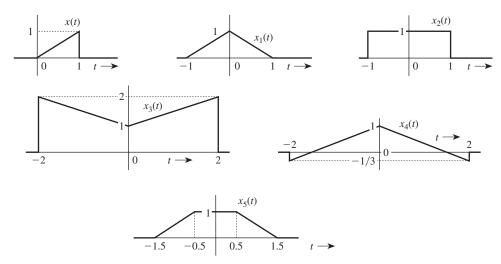


Figure P7.3-4

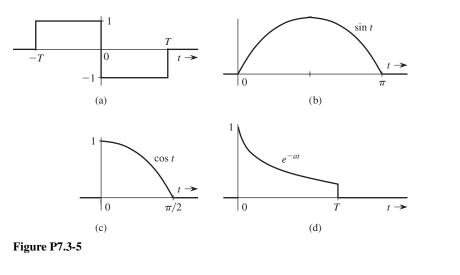

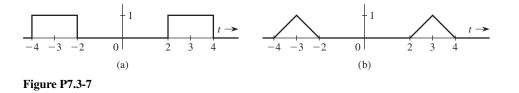

 $\frac{\tau}{4\pi} \operatorname{sinc}^2\left(\frac{t\tau}{4}\right)$ . Use the duality property to determine the Fourier transform  $Y(\omega)$  of signal  $y(t) = \Lambda(t)$ .

**7.3-7** Use the time-shifting property to show that if  $x(t) \iff X(\omega)$ , then


$$x(t+T) + x(t-T) \iff 2X(\omega)\cos T\omega$$

This is the dual of Eq. (7.32). Use this result and Table 7.1 to find the Fourier transforms of the signals shown in Fig. P7.3-7.

**7.3-8** Prove the following results, which are duals of each other:


$$\begin{aligned} x(t)\sin\omega_0t &\Longleftrightarrow \frac{1}{2j}[X(\omega-\omega_0)-X(\omega+\omega_0)]\\ \frac{1}{2j}[x(t+T)-x(t-T)] &\Longleftrightarrow X(\omega)\sin T\omega \end{aligned}$$

Use the latter result and Table 7.1 to find the Fourier transform of the signal in Fig. P7.3-8.

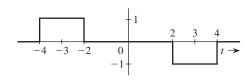



- **7.3-9** The signals in Fig. P7.3-9 are modulated signals with carrier cos 10*t*. Find the Fourier transforms of these signals by using the appropriate properties of the Fourier transform and Table 7.1. Sketch the amplitude and phase spectra for Figs. P7.3-9a and P7.3-9b.
- **7.3-10** Use the frequency-shifting property and Table 7.1 to find the inverse Fourier transform of the spectra depicted in Fig. P7.3-10.
- **7.3-11** Let  $X(\omega) = \operatorname{rect}(\omega)$  be the Fourier transform of a signal x(t).
  - (a) For  $y_a(t) = x(t) * x(t)$ , sketch  $Y_a(\omega)$ .
  - (b) For  $y_b(t) = x(t) * x(t/2)$ , sketch  $Y_b(\omega)$ .

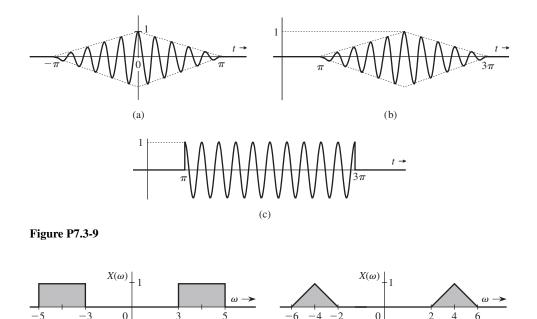



(c) For  $y_c(t) = 2x(t)$ , sketch  $Y_c(\omega)$ .

(a)

- (d) For  $y_d(t) = x^2(t)$ , sketch  $Y_d(\omega)$ .
- (e) For  $y_e(t) = 1 x^2(t)$ , sketch  $Y_e(\omega)$ .
- **7.3-12** Use the time-convolution property to prove pairs 2, 4, 13, and 14 in Table 2.1 (assume  $\lambda < 0$  in pair 2,  $\lambda_1$  and  $\lambda_2 < 0$  in pair 4,  $\lambda_1 < 0$  and  $\lambda_2 > 0$  in pair 13, and  $\lambda_1$  and  $\lambda_2 > 0$  in pair 14). These restrictions are placed because of the Fourier transformability issue for the signals concerned. For pair 2, you need to apply the result in Eq. (1.10).
- **7.3-13** A signal x(t) is bandlimited to *B* Hz. Show that the signal  $x^n(t)$  is bandlimited to *nB* Hz.
- **7.3-14** Find the Fourier transform of the signal in Fig. P7.3-5a by three different methods:
  - (a) By direct integration using Eq. (7.9).
  - (b) Using only pair 17 (Table 7.1) and the time-shifting property.
  - (c) Using the time-differentiation and time-shifting properties, along with the fact that δ(t) ⇐⇒ 1.

**7.3-15** (a) Prove the frequency-differentiation property (dual of the time-differentiation property):

(b)

$$-jtx(t) \Longleftrightarrow \frac{d}{d\omega}X(\omega)$$

- (b) Use this property and pair 1 (Table 7.1) to determine the Fourier transform of  $te^{-at}u(t)$ .
- **7.3-16** Adapt the method of Ex. 7.17 and use the frequency-differentiation (see Prob. 7.3-15) and other properties to find the inverse Fourier transform x(t) of the triangular spectrum  $X(\omega) = \Delta(\omega/2)$ .
- **7.3-17** Adapt the method of Ex. 7.17 and use the frequency-differentiation (see Prob. 7.3-15) and other properties to find the inverse Fourier transform x(t) of the spectrum  $X(\omega) = \pi \left| \frac{\omega}{2} \right| \operatorname{rect} \left( \frac{\omega}{4} \right)$ .
- 7.4-1 For a stable LTIC system with transfer function

$$H(s) = \frac{1}{s+1}$$

find the (zero-state) response if the input x(t) is


- (a)  $e^{-2t}u(t)$
- (b)  $e^{-t}u(t)$
- (c)  $e^t u(-t)$
- (d) u(t)
- **7.4-2** A stable LTIC system is specified by the frequency response

$$H(\omega) = \frac{-1}{j\omega - 2}$$

Find the impulse response of this system and show that this is a noncausal system. Find the (zero-state) response of this system if the input x(t) is

- (a)  $e^{-t}u(t)$
- (b)  $e^t u(-t)$
- **7.4-3** A periodic signal  $x(t) = 1 + 2\cos(5\pi t) + 3\sin(8\pi t)$  is applied to an LTIC system with impulse response  $h(t) = 8\sin(4t)\cos(2\pi t)$  to produce output y(t) = x(t) \* h(t).
  - (a) Determine  $\omega_0$ , the fundamental radian frequency of x(t).
  - (b) Determine X(ω), the Fourier transform of x(t).
  - (c) Sketch the system's magnitude response  $|H(\omega)|$  over  $-10\pi \le \omega \le 10\pi$ .
  - (d) Is the system h(t) distortionless? Explain.
  - (e) Determine y(t).
- 7.4-4 A periodic delta train  $x(t) = \sum_{n=-\infty}^{\infty} \delta(t \pi n)$ is applied to an LTIC system with impulse response  $h(t) = \sin(3t)\operatorname{sinc}^2\left(\frac{t}{\pi}\right)$  to produce zero-state output y(t) = x(t) \* h(t).
  - (a) Determine  $\omega_0$ , the fundamental radian frequency of x(t).
  - (b) Determine  $X(\omega)$ , the Fourier transform of x(t).
  - (c) Sketch the system's magnitude response  $|H(\omega)|$  over  $-10\pi \le \omega \le 10\pi$ .
  - (d) Is the system h(t) distortionless? Explain.
  - (e) Determine y(t).
- 7.4-5 Signals  $x_1(t) = 10^4 \operatorname{rect} (10^4 t)$  and  $x_2(t) = \delta(t)$ are applied at the inputs of the ideal lowpass filters  $H_1(\omega) = \operatorname{rect} (\omega/40,000\pi)$  and  $H_2(\omega) =$  $\operatorname{rect} (\omega/20,000\pi)$  (Fig. P7.4-5). The outputs  $y_1(t)$  and  $y_2(t)$  of these filters are multiplied to obtain the signal  $y(t) = y_1(t)y_2(t)$ . (a) Sketch  $X_1(\omega)$  and  $X_2(\omega)$ .

- (b) Sketch  $H_1(\omega)$  and  $H_2(\omega)$ .
- (c) Sketch  $Y_1(\omega)$  and  $Y_2(\omega)$ .
- (d) Find the bandwidths of  $y_1(t)$ ,  $y_2(t)$ , and y(t).

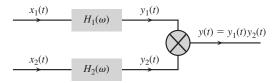



- **7.4-6** A lowpass system time constant is often defined as the width of its unit impulse response h(t) (see Sec. 2.6-2). An input pulse p(t) to this system acts like an impulse of strength equal to the area of p(t) if the width of p(t) is much smaller than the system time constant, and provided p(t)is a lowpass pulse, implying that its spectrum is concentrated at low frequencies. Verify this behavior by considering a system whose unit impulse response is  $h(t) = \text{rect}(t/10^{-3})$ . The input pulse is a triangle pulse  $p(t) = \Delta(t/10^{-6})$ . Show that the system response to this pulse is very nearly the system response to the input  $A\delta(t)$ , where A is the area under the pulse p(t).
- 7.4-7 A lowpass system time constant is often defined as the width of its unit impulse response h(t) (see Sec. 2.6-2). An input pulse p(t) to this system passes practically without distortion if the width of p(t) is much greater than the system time constant, and provided p(t) is a lowpass pulse, implying that its spectrum is concentrated at low frequencies. Verify this behavior by considering a system whose unit impulse response is h(t) =rect  $(t/10^{-3})$ . The input pulse is a triangle pulse  $p(t) = \Delta(t)$ . Show that the system output to this pulse is very nearly kp(t), where k is the system gain to a dc signal, that is, k = H(0).
- **7.4-8** A causal signal h(t) has a Fourier transform  $H(\omega)$ . If  $R(\omega)$  and  $X(\omega)$  are the real and the imaginary parts of  $H(\omega)$ , that is,  $H(\omega) = R(\omega) + jX(\omega)$ , then show that

$$R(\omega) = \frac{1}{\pi} \int_{-\infty}^{\infty} \frac{X(\omega)}{\omega - y} d\omega$$

and

$$X(\omega) = -\frac{1}{\pi} \int_{-\infty}^{\infty} \frac{R(\omega)}{\omega - y} d\omega$$

assuming that h(t) has no impulse at the origin. This pair of integrals defines the *Hilbert* transform. [*Hint:* Let  $h_e(t)$  and  $h_o(t)$  be the even and odd components of h(t). Use the results in Prob. 7.1-4. See Fig. 1.24 for the relationship between  $h_e(t)$  and  $h_o(t)$ .]

This problem states one of the important properties of causal systems: that the real and imaginary parts of the frequency response of a causal system are related. If one specifies the real part, the imaginary part cannot be specified independently. The imaginary part is predetermined by the real part, and vice versa. This result also leads to the conclusion that the magnitude and angle of  $H(\omega)$  are related, provided all the poles and zeros of  $H(\omega)$  lie in the LHP.

**7.5-1** Consider a filter with the frequency response

$$H(\omega) = e^{-(k\omega^2 + j\omega t_0)}$$

Show that this filter is physically unrealizable by using the time-domain criterion [noncausal h(t)] and the frequency-domain (Paley–Wiener) criterion. Can this filter be made approximately realizable by choosing  $t_0$  sufficiently large? Use your own (reasonable) criterion of approximate realizability to determine  $t_0$ . [*Hint:* Use pair 22 in Table 7.1.]

7.5-2 Show that a filter with frequency response

$$H(\omega) = \frac{2(10^5)}{\omega^2 + 10^{10}} e^{-j\omega t_0}$$

is unrealizable. Can this filter be made approximately realizable by choosing a sufficiently large  $t_0$ ? Use your own (reasonable) criterion of approximate realizability to determine  $t_0$ .

- **7.5-3** Determine whether the filters with the following frequency response  $H(\omega)$  are physically realizable. If they are not realizable, can they be realized approximately by allowing a finite time delay in the response?
  - (a)  $10^{-6} \operatorname{sinc} (10^{-6} \omega)$
  - (b)  $10^{-4} \Delta (\omega/40,000\pi)$
  - (c)  $2\pi \,\delta(\omega)$

- **7.5-4** Consider signal  $x_1(t)$ , its Fourier transform  $X_1(f)$ , and several other signals, as shown in Fig. P7.5-4. Notice, spectra are drawn as a function of hertzian frequency f rather than radian frequency  $\omega$ .
  - (a) Accurately sketch  $X_2(f)$ , the Fourier transform of  $x_2(t)$ .
  - (b) Accurately sketch x<sub>3</sub>(t), the inverse Fourier transform of X<sub>3</sub>(f).
  - (c) The signal  $x_4(t) = x_1(t) + x_2(t)$  is passed through an ideal lowpass filter with 3 Hz cutoff to produce output  $y_4(t)$ . Accurately sketch  $y_4(t)$ .

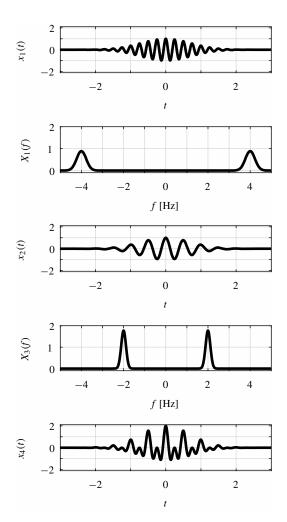


Figure P7.5-4

770

- **7.6-1** Define  $x(t) = \frac{1}{2\pi} \operatorname{sinc}(t/2)$  with Fourier transform  $X(\omega) = \operatorname{rect}(\omega)$ . Use Parseval's theorem to determine  $\int_{-\infty}^{\infty} \operatorname{sinc}^2(t-2) dt$ .
- 7.6-2 Show that the energy of a Gaussian pulse

$$x(t) = \frac{1}{\sigma\sqrt{2\pi}} e^{-t^2/2\sigma^2}$$

is  $1/(2\sigma\sqrt{\pi})$ . Verify this result by using Parseval's theorem to derive the energy  $E_x$  from  $X(\omega)$ . [*Hint:* See pair 22 in Table 7.1. Use the fact that  $\int_{-\infty}^{\infty} e^{-x^2/2} dx = \sqrt{2\pi}$ .]

**7.6-3** Use Parseval's theorem of Eq. (7.45) to show that

$$\int_{-\infty}^{\infty} \operatorname{sinc}^2(kx) \, dx = \frac{\pi}{k}$$

- **7.6-4** A lowpass signal x(t) is applied to a squaring device. The squarer output  $x^2(t)$  is applied to a lowpass filter of bandwidth  $\Delta f$  (in hertz) (Fig. P7.6-4). Show that if  $\Delta f$  is very small  $(\Delta f \rightarrow 0)$ , then the filter output is a dc signal  $y(t) \approx 2E_x\Delta f$ . [*Hint:* If  $x^2(t) \iff A(\omega)$ , then show that  $Y(\omega) \approx [4\pi A(0)\Delta f]\delta(\omega)$  if  $\Delta f \rightarrow 0$ . Now, show that  $A(0) = E_x$ .]
- **7.6-5** Generalize Parseval's theorem to show that for real, Fourier-transformable signals  $x_1(t)$  and  $x_2(t)$

$$\int_{-\infty}^{\infty} x_1(t) x_2(t) dt$$
  
=  $\frac{1}{2\pi} \int_{-\infty}^{\infty} X_1(-\omega) X_2(\omega) d\omega$   
=  $\frac{1}{2\pi} \int_{-\infty}^{\infty} X_1(\omega) X_2(-\omega) d\omega$ 

7.6-6 Show that

$$\int_{-\infty}^{\infty} \operatorname{sinc} (Wt - m\pi) \operatorname{sinc} (Wt - n\pi) dt$$
$$= \begin{cases} 0 & m \neq n \\ \frac{\pi}{W} & m = n \end{cases}$$

x(t) ()<sup>2</sup>  $x^2(t)$  Lowpass  $y(t) \approx 2E_x \Delta f$ filter

Figure P7.6-4

[Hint: Recognize that

sinc 
$$(Wt - k\pi) = \operatorname{sinc} \left[ W \left( t - \frac{k\pi}{W} \right) \right]$$
  
 $\iff \frac{\pi}{W} \operatorname{rect} \left( \frac{\omega}{2W} \right) e^{-jk\pi\omega/W}$ 

Use this fact and the result in Prob. 7.6-5.]

- **7.6-7** (a) What does it mean to compute the 95% essential bandwidth *B* of a signal x(t) with Fourier transform  $X(\omega)$ ?
  - (b) Determine the 95% essential bandwidth *B* of a signal with spectrum  $X(\omega) = \text{rect}(\omega)$ .
  - (c) Determine the 95% essential bandwidth *B* of a signal with spectrum  $X(\omega) = \Delta(\omega)$ .
- **7.6-8** Using a 95% energy criterion, determine the essential bandwidth *B* of a signal that has a Fourier transform given by  $X(\omega) = e^{-|\omega|}$ .
- 7.6-9 For the signal


$$x(t) = \frac{2a}{t^2 + a^2}$$

determine the essential bandwidth *B* (in hertz) of x(t) such that the energy contained in the spectral components of x(t) of frequencies below *B* Hz is 99% of the signal energy  $E_x$ .


- 7.7-1 For each of the following baseband signals (i)  $m(t) = \cos 1000t$ , (ii)  $m(t) = 2\cos 1000t + \cos 2000t$ , and (iii)  $m(t) = \cos 1000t \cos 3000t$ :
  - (a) Sketch the spectrum of m(t).
  - (b) Sketch the spectrum of the DSB-SC signal *m*(*t*) cos 10,000*t*.
  - (c) Identify the upper sideband (USB) and the lower sideband (LSB) spectra.
  - (d) Identify the frequencies in the baseband, and the corresponding frequencies in the DSB-SC, USB, and LSB spectra. Explain the nature of frequency shifting in each case.
- 7.7-2 A message signal m(t) with spectrum  $M(\omega) = \frac{1}{1000} \Delta \left(\frac{\omega}{2\pi 6000}\right)$  is to be transmitted using a communication system. Assume all single-sideband systems have suppressed carriers.
  - (a) What is the hertzian bandwidth of m(t)?

- (b) Sketch the spectrum of the transmitted signal if the communication system is DSB-SC with  $\omega_c = 2\pi \ 100,000$ .
- (c) Sketch the spectrum of the transmitted signal if the communication system is AM with ω<sub>c</sub> = 2π 100,000 and a modulation index of μ = 1. What is the corresponding carrier amplitude *A*?
- (d) Sketch the spectrum of the transmitted signal if the communication system is USB with  $\omega_c = 2\pi \ 100,000$ .
- (e) Sketch the spectrum of the transmitted signal if the communication system is LSB with  $\omega_c = 2\pi \ 100,000$ .
- (f) Suppose we want to transmit m(t) on each of an FDM system's four channels: DSB-SC at carrier  $\omega_1$ , AM ( $\mu = 1$ ) at carrier  $\omega_2$ , USB at carrier  $\omega_3$ , and LSB at carrier  $\omega_4$ . Determine carrier frequencies  $\omega_1 < \omega_2$  $< \omega_3 < \omega_4$  so that the FDM spectrum begins at a frequency of 100,000 Hz with 5,000 Hz deadbands separating adjacent messages. What is the end hertzian frequency of the FDM signal?
- **7.7-3** You are asked to design a DSB-SC modulator to generate a modulated signal  $km(t) \cos \omega_c t$ , where m(t) is a signal bandlimited to *B* Hz (Fig. P7.7-3a). Figure P7.7-3b shows a DSB-SC modulator available in the stockroom. The bandpass filter is tuned to  $\omega_c$  and has a bandwidth of 2*B* Hz. The carrier generator available generates not  $\cos \omega_c t$ , but  $\cos^3 \omega_c t$ .
  - (a) Explain whether you would be able to generate the desired signal using only this equipment. If so, what is the value of k?

- (b) Determine the signal spectra at points b and c, and indicate the frequency bands occupied by these spectra.
- (c) What is the minimum usable value of  $\omega_c$ ?
- (d) Would this scheme work if the carrier generator output were  $\cos^2 \omega_c t$ ? Explain.
- (e) Would this scheme work if the carrier generator output were  $\cos^n \omega_c t$  for any integer  $n \ge 2$ ?
- 7.7-4 In practice, the analog multiplication operation is difficult and expensive. For this reason, in amplitude modulators, it is necessary to find some alternative to multiplication of m(t) with  $\cos \omega_c t$ . Fortunately, for this purpose, we can replace multiplication with a switching operation. A similar observation applies to demodulators. In the scheme depicted in Fig. P7.7-4a, the period of the rectangular periodic pulse x(t)

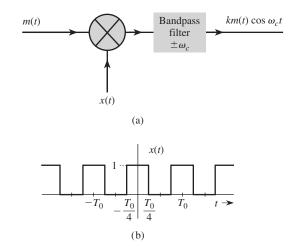



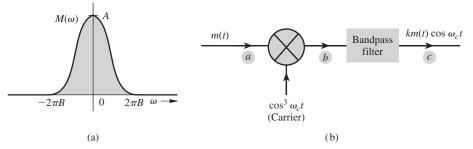



shown in Fig. P7.7-4b is  $T_0 = 2\pi/\omega_c$ . The bandpass filter is centered at  $\pm \omega_c$  and has a bandwidth of 2*B* Hz. Note that multiplication by a square periodic pulse x(t) in Fig. P7.7-4b amounts to periodic on-off switching of m(t), which is bandlimited to *B* Hz. Such a switching operation is relatively simple and inexpensive. Show that this scheme can generate an amplitude-modulated signal  $k \cos \omega_c t$ . Determine the value of *k*. Show that the same scheme can also be used for demodulation, provided the bandpass filter in Fig. P7.7-4a is replaced by a lowpass (or baseband) filter.

**7.7-5** Figure P7.7-5a shows a scheme to transmit two signals  $m_1(t)$  and  $m_2(t)$  simultaneously on the same channel (without causing spectral interference). Such a scheme, which transmits

more than one signal, is known as signal *multiplexing*. In this case, we transmit multiple signals by sharing an available spectral band on the channel; hence, this is an example of the *frequency-division* multiplexing. The signal at point b is the multiplexed signal, which now modulates a carrier of frequency 20,000 rad/s. The modulated signal at point c is now transmitted over the channel.

- (a) Sketch the spectra at points *a*, *b*, and *c*.
- (b) What must be the minimum bandwidth of the channel?
- (c) Design a receiver to recover signals m<sub>1</sub>(t) and m<sub>2</sub>(t) from the modulated signal at point c.
- **7.7-6** The system shown in Fig. P7.7-6 is used for scrambling audio signals. The output y(t) is the scrambled version of the input m(t).


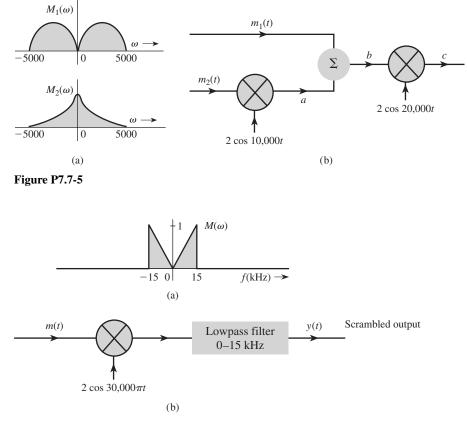


Figure P7.7-6

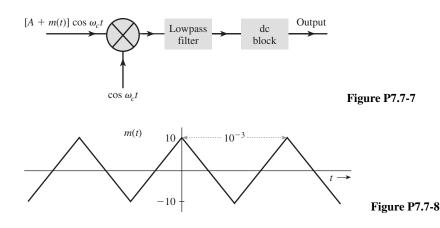

- (a) Find the spectrum of the scrambled signal y(t).
- (b) Suggest a method of descrambling y(t) to obtain m(t).

A slightly modified version of this scrambler was first used commercially on the 25-mile radio-telephone circuit connecting Los Angeles and Santa Catalina Island.

- **7.7-7** Figure P7.7-7 presents a scheme for coherent (synchronous) demodulation. Show that this scheme can demodulate the AM signal  $[A + m(t)]\cos \omega_c t$  regardless of the value of A.
- **7.7-8** Sketch the AM signal  $[A + m(t)]\cos \omega_c t$  for the periodic triangle signal m(t) illustrated in Fig. P7.7-8 corresponding to the following modulation indices:
  - (a)  $\mu = 0.5$
  - (b)  $\mu = 1$
  - (c)  $\mu = 2$
  - (d)  $\mu = \infty$

How do you interpret the case  $\mu = \infty$ ?

**7.9-1** Consider the signal x(t) defined as

$$x(t) = \begin{cases} 1 - |t| & -\frac{1}{2} \le t \le \frac{1}{2} \\ 0 & \text{otherwise} \end{cases}$$

- (a) Sketch the signal x(t) over  $-2 \le t \le 2$ .
- (b) Use time-differentiation and other Fourier transform properties to determine X(ω). The only integration you should use is to determine the dc component X(0).

(c) Using MATLAB, verify the correctness of X(ω) by synthesizing a 3-periodic replication of the original time-domain signal x(t).

[Hint: Follow the approach taken in Ex. 7.17.]

- **7.9-2** Consider the signal  $x(t) = |t| \operatorname{rect}\left(\frac{t-1}{3}\right)$ .
  - (a) Sketch the signal x(t) over  $-5 \le t \le 5$ .
  - (b) Use time-differentiation and other Fourier transform properties to determine X(ω). The only integration you should use is to determine the dc component X(0).
  - (c) Use MATLAB to plot the magnitude spectrum |X(ω)| and the phase spectrum ∠X(ω) over suitable ranges of ω.
  - (d) Using MATLAB, verify the correctness of  $X(\omega)$  by synthesizing a 10-periodic replication of the original time-domain signal x(t).

[*Hint:* Follow the approach taken in Ex. 7.17.]

- **7.9-3** Consider the continuous-time aperiodic signal x(t) = rect(t) with Fourier transform  $X(\omega) = \text{sinc}(\omega/2)$ . Furthermore, let y(t) = (1 |t 1|)(u(t) u(t 2)) with Fourier transform  $Y(\omega)$ .
  - (a) Express the Fourier transform  $Y(\omega)$  in terms of  $X(\omega)$ .
  - (b) Suppose we create Fourier series coefficients  $V_k$  by sampling  $Y(\omega)$  according to  $V_k = Y(2\pi k/3)$ . Sketch the corresponding time-domain signal v(t) over a suitable range of time *t*.
  - (c) Use MATLAB to synthesize and plot v(t) using the Fourier series coefficients  $V_k =$

 $Y(2\pi k/3)$ . Verify that the synthesized waveform matches the result of part (b).

- (d) Suppose we again create Fourier series coefficients  $V_k$  according to  $V_k = Y(2\pi k/3)$ . Next, we upsample  $V_k$  by factor 2 to create  $W_k$ . Sketch the time domain signal p(t) that has Fourier series coefficients  $P_k = V_k + W_k$ .
- (e) Use MATLAB to synthesize and plot p(t) using the Fourier series coefficients  $P_k = V_k + W_k$  defined in part (d). Verify that the synthesized waveform matches the result of part (d).
- **7.9-4** Consider the signal  $x(t) = e^{-at}u(t)$ . Modify CH7MP2 to compute the following essential bandwidths.
  - (a) Setting a = 1, determine the essential bandwidth  $W_1$  that contains 95% of the signal energy. Compare this value with the theoretical value presented in Ex. 7.20.
  - (b) Setting a=2, determine the essential bandwidth  $W_2$  that contains 90% of the signal energy.
  - (c) Setting a=3, determine the essential bandwidth  $W_3$  that contains 75% of the signal energy.
- **7.9-5** A unit amplitude pulse with duration  $\tau$  is defined as

$$x(t) = \begin{cases} 1 & |t| \le \tau/2 \\ 0 & \text{otherwise} \end{cases}$$

- (a) Determine the duration  $\tau_1$  that results in a 95% essential bandwidth of 5 Hz.
- (b) Determine the duration  $\tau_2$  that results in a 90% essential bandwidth of 10 Hz.
- (c) Determine the duration  $\tau_3$  that results in a 75% essential bandwidth 20 Hz.
- **7.9-6** Consider the signal  $x(t) = e^{-at}u(t)$ .

- (a) Determine the decay parameter  $a_1$  that results in a 95% essential bandwidth of 5 Hz.
- (b) Determine the decay parameter  $a_2$  that results in a 90% essential bandwidth of 10 Hz.
- (c) Determine the decay parameter  $a_3$  that results in a 75% essential bandwidth 20 Hz.
- **7.9-7** Use MATLAB to determine the 95, 90, and 75% essential bandwidths of a one-second triangle function with a peak amplitude of 1. Recall that a triangle function can be constructed by the convolution of two rectangular pulses.
- **7.9-8** A 1/3 duty-cycle square-pulse  $T_0$ -periodic signal x(t) is described as

$$x(t) = \begin{cases} 1 & -T_0/6 \le t \le T_0/6 \\ 0 & T_0/t \le |t| \le T_0/2 \\ x(t+T_0) & \forall t \end{cases}$$

- (a) Use spectral sampling to determine the Fourier series coefficients  $D_n$  of x(t) for  $T_0 = 2\pi$ . Evaluate and plot  $D_n$  for  $(0 \le n \le 10)$ .
- (b) Use spectral sampling to determine the Fourier series coefficients  $D_n$  of x(t) for  $T_0 = \pi$ . Evaluate and plot  $D_n$  for  $(0 \le n \le 10)$ . How does this result compare with your answer to part (a)? What can be said about the relation of  $T_0$  to  $D_n$  for signal x(t), which has fixed duty cycle of 1/3?
- **7.9-9** Determine the Fourier transform of a Gaussian pulse defined as  $x(t) = e^{-t^2}$ . Plot both x(t) and  $X(\omega)$ . How do the two curves compare? [*Hint*:

$$\frac{1}{\sqrt{2\pi}} \int_{-\infty}^{\infty} e^{-(t-a)^2/2} dt = 1$$

for any real or imaginary a.]

CHAPTER **8** 

# SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

A continuous-time signal can be processed by applying its samples through a discrete-time system. For this purpose, it is important to maintain the signal sampling rate high enough to permit the reconstruction of the original signal from these samples without error (or with an error within a given tolerance). The necessary quantitative framework for this purpose is provided by the sampling theorem derived in Sec. 8.1.

Sampling theory is the bridge between the continuous-time and discrete-time worlds. The information inherent in a sampled continuous-time signal is equivalent to that of a discrete-time signal. A sampled continuous-time signal is a sequence of impulses, while a discrete-time signal presents the same information as a sequence of numbers. These are basically two different ways of presenting the same data. Clearly, all the concepts in the analysis of sampled signals apply to discrete-time signals. We should not be surprised to see that the Fourier spectra of the two kinds of signal are also the same (within a multiplicative constant).

# 8.1 THE SAMPLING THEOREM

We now show that a real signal whose spectrum is bandlimited to B Hz [ $X(\omega) = 0$  for  $|\omega| > 2\pi B$ ] can be reconstructed exactly (without any error) from its samples taken uniformly at a rate  $f_s > 2B$  samples per second. In other words, the minimum sampling frequency is  $f_s = 2B$  Hz.<sup>†</sup>

To prove the sampling theorem, consider a signal x(t) (Fig. 8.1a) whose spectrum is bandlimited to *B* Hz (Fig. 8.1b).<sup>‡</sup> For convenience, spectra are shown as functions of  $\omega$  as well as of *f* (hertz). Sampling x(t) at a rate of  $f_s$  Hz ( $f_s$  samples per second) can be accomplished by multiplying x(t) by an impulse train  $\delta_T(t)$  (Fig. 8.1c), consisting of unit impulses repeating periodically every *T* seconds, where  $T = 1/f_s$ . The schematic of a sampler is shown in Fig. 8.1d. The resulting sampled signal  $\overline{x}(t)$  is shown in Fig. 8.1e. The sampled signal consists of impulses

<sup>&</sup>lt;sup>†</sup> The theorem stated here (and proved subsequently) applies to lowpass signals. A bandpass signal whose spectrum exists over a frequency band  $f_c - (B/2) < |f| < f_c + (B/2)$  has a bandwidth of *B* Hz. Such a signal is uniquely determined by 2*B* samples per second. In general, the sampling scheme is a bit more complex in this case. It uses two interlaced sampling trains, each at a rate of *B* samples per second. See, for example, [1]. <sup>‡</sup> The spectrum  $X(\omega)$  in Fig. 8.1b is shown as real, for convenience. However, our arguments are valid for complex  $X(\omega)$  as well.

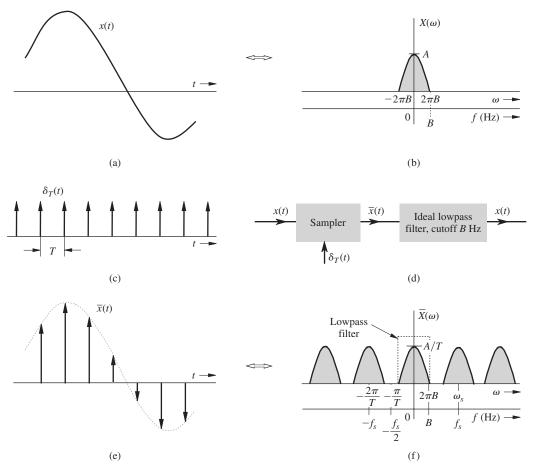


Figure 8.1 Sampled signal and its Fourier spectrum.

spaced every *T* seconds (the sampling interval). The *n*th impulse, located at t = nT, has a strength x(nT), the value of x(t) at t = nT.

$$\bar{x}(t) = x(t)\delta_T(t) = \sum_n x(nT)\delta(t - nT)$$

Because the impulse train  $\delta_T(t)$  is a periodic signal of period *T*, it can be expressed as a trigonometric Fourier series like that already obtained in Ex. 6.9 [Eq. (6.25)],

$$\delta_T(t) = \frac{1}{T} [1 + 2\cos\omega_s t + 2\cos 2\omega_s t + 2\cos 3\omega_s t + \cdots] \qquad \omega_s = \frac{2\pi}{T} = 2\pi f_s$$

Therefore,

$$\bar{x}(t) = x(t)\delta_T(t) = \frac{1}{T}[x(t) + 2x(t)\cos\omega_s t + 2x(t)\cos 2\omega_s t + 2x(t)\cos 3\omega_s t + \cdots]$$
(8.1)

To find  $\overline{X}(\omega)$ , the Fourier transform of  $\overline{x}(t)$ , we take the Fourier transform of the right-hand side of Eq. (8.1), term by term. The transform of the first term in the brackets is  $X(\omega)$ . The transform

#### 778 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

of the second term  $2x(t) \cos \omega_s t$  is  $X(\omega - \omega_s) + X(\omega + \omega_s)$  [see Eq. (7.32)]. This represents spectrum  $X(\omega)$  shifted to  $\omega_s$  and  $-\omega_s$ . Similarly, the transform of the third term  $2x(t) \cos 2\omega_s t$ is  $X(\omega - 2\omega_s) + X(\omega + 2\omega_s)$ , which represents the spectrum  $X(\omega)$  shifted to  $2\omega_s$  and  $-2\omega_s$ , and so on to infinity. This result means that the spectrum  $\overline{X}(\omega)$  consists of  $X(\omega)$  repeating periodically with period  $\omega_s = 2\pi/T$  rad/s, or  $f_s = 1/T$  Hz, as depicted in Fig. 8.1f. There is also a constant multiplier 1/T in Eq. (8.1). Therefore,

$$\overline{X}(\omega) = \frac{1}{T} \sum_{n=-\infty}^{\infty} X(\omega - n\omega_s)$$
(8.2)

If we are to reconstruct x(t) from  $\overline{x}(t)$ , we should be able to recover  $X(\omega)$  from  $\overline{X}(\omega)$ . This recovery is possible if there is no overlap between successive cycles of  $\overline{X}(\omega)$ . Figure 8.1f indicates that this requires

$$f_s > 2B \tag{8.3}$$

Also, the sampling interval  $T = 1/f_s$ . Therefore,

$$T < \frac{1}{2B}$$

Thus, as long as the sampling frequency  $f_s$  is greater than twice the signal bandwidth B (in hertz),  $\overline{X}(\omega)$  consists of nonoverlapping repetitions of  $X(\omega)$ . Figure 8.1f shows that the gap between the two adjacent spectral repetitions is  $f_s - 2B$  Hz, and x(t) can be recovered from its samples  $\overline{x}(t)$  by passing the sampled signal  $\overline{x}(t)$  through an ideal lowpass filter having a bandwidth of any value between B and  $f_s - B$  Hz. The minimum sampling rate  $f_s = 2B$  required to recover x(t) from its samples  $\overline{x}(t)$  is called the *Nyquist rate* for x(t), and the corresponding sampling interval T = 1/2B is called the *Nyquist interval* for x(t). Samples of a signal taken at its Nyquist rate are the *Nyquist samples* of that signal.

We are saying that the Nyquist rate 2*B* Hz is the minimum sampling rate required to preserve the information of x(t). This contradicts Eq. (8.3), where we showed that to preserve the information of x(t), the sampling rate  $f_s$  needs to be greater than 2*B* Hz. Strictly speaking, Eq. (8.3) is the correct statement. However, if the spectrum  $X(\omega)$  contains no impulse or its derivatives at the highest frequency *B* Hz, then the minimum sampling rate 2*B* Hz is adequate. In practice, it is rare to observe  $X(\omega)$  with an impulse or its derivatives at the highest frequency. If the contrary situation were to occur, we should use Eq. (8.3).<sup>†</sup>

<sup>&</sup>lt;sup>†</sup> An interesting observation is that if the impulse is because of a cosine term, the sampling rate of 2B Hz is adequate. However, if the impulse is because of a sine term, then the rate must be greater than 2B Hz. This may be seen from the fact that samples of  $\sin 2\pi Bt$  using T = 1/2B are all zero because  $\sin 2\pi BnT = \sin \pi n = 0$ . But, samples of  $\cos 2\pi Bt$  are  $\cos 2\pi BnT = \cos \pi n = (-1)^n$ . We can reconstruct  $\cos 2\pi Bt$  from these samples. This peculiar behavior occurs because in the sampled signal spectrum corresponding to the signal  $\cos 2\pi Bt$ , the impulses, which occur at frequencies  $(2n \pm 1)B$  Hz  $(n = 0, \pm 1, \pm 2, ...)$ , interact constructively, whereas in the case of  $\sin 2\pi Bt$ , the impulses, because of their opposite phases  $(e^{\pm j\pi/2})$ , interact destructively and cancel out in the sampled signal spectrum. Hence,  $\sin 2\pi Bt$  cannot be reconstructed from its samples at a rate 2B Hz. A similar situation exists for signal  $\cos(2\pi Bt + \theta)$ , which contains a component of the form  $\sin 2\pi Bt$ . For this reason, it is advisable to maintain sampling rate above 2B Hz if a finite-amplitude component of a sinusoid of frequency B Hz is present in the signal.

The sampling theorem proved here uses samples taken at uniform intervals. This condition is not necessary. Samples can be taken arbitrarily at any instants as long as the sampling instants are recorded and there are, on average, 2*B* samples per second [2]. The essence of the sampling theorem was known to mathematicians for a long time in the form of the *interpolation formula* [see later, Eq. (8.6)]. The origin of the sampling theorem was attributed by H. S. Black to Cauchy in 1841. The essential idea of the sampling theorem was rediscovered in the 1920s by Carson, Nyquist, and Hartley.

# EXAMPLE 8.1 Sampling at, Below, and Above the Nyquist Rate

In this example, we examine the effects of sampling a signal at the Nyquist rate, below the Nyquist rate (undersampling), and above the Nyquist rate (oversampling). Consider a signal  $x(t) = \operatorname{sinc}^2(5\pi t)$  (Fig. 8.2a) whose spectrum is  $X(\omega) = 0.2 \Delta(\omega/20\pi)$  (Fig. 8.2b). The bandwidth of this signal is 5 Hz ( $10\pi$  rad/s). Consequently, the Nyquist rate is 10 Hz; that is, we must sample the signal at a rate no less than 10 samples/s. The Nyquist interval is T = 1/2B = 0.1 second.

Recall that the sampled signal spectrum consists of  $(1/T)X(\omega) = (0.2/T) \Delta(\omega/20\pi)$  repeating periodically with a period equal to the sampling frequency  $f_s$  Hz. For the three sampling rates  $f_s = 5$  Hz (undersampling), 10 Hz (Nyquist rate), and 20 Hz (oversampling), we see that

$f_s$ (Hz)	$T=\frac{1}{f_s}$ (s)	$\frac{1}{T}X(\omega)$	Comments
5	0.2	$\Delta\left(\frac{\omega}{20\pi}\right)$	Undersampling
10	0.1	$2\Delta\left(\frac{\omega}{20\pi}\right)$	Nyquist rate
20	0.05	$4\Delta\left(\frac{\omega}{20\pi}\right)$	Oversampling

In the first case (undersampling), the sampling rate is 5 Hz (5 samples/s), and the spectrum  $(1/T)X(\omega)$  repeats every 5 Hz  $(10\pi \text{ rad/s})$ . The successive spectra overlap, as depicted in Fig. 8.2d, and the spectrum  $X(\omega)$  are not recoverable from  $\overline{X}(\omega)$ ; that is, x(t) cannot be reconstructed from its samples  $\overline{x}(t)$  in Fig. 8.2c. In the second case, we use the Nyquist sampling rate of 10 Hz (Fig. 8.2e). The spectrum  $\overline{X}(\omega)$  consists of back-to-back, nonoverlapping repetitions of  $(1/T)X(\omega)$  repeating every 10 Hz. Hence,  $X(\omega)$  can be recovered

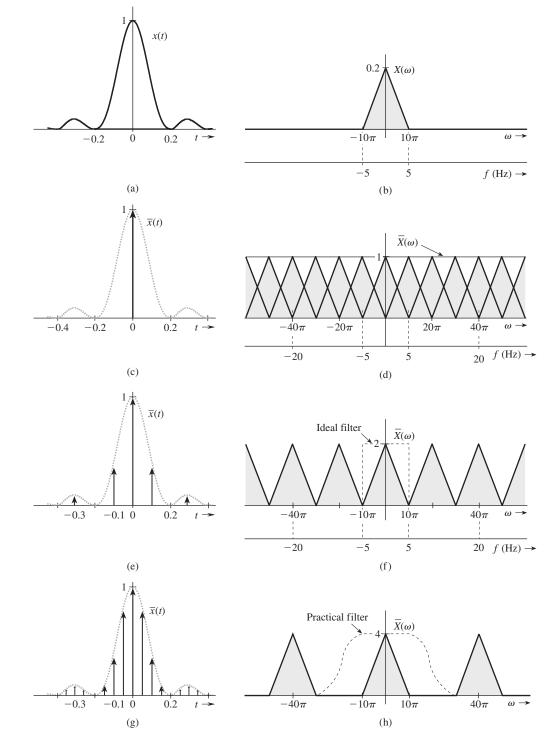


Figure 8.2 Effects of undersampling and oversampling.

from  $\overline{X}(\omega)$  using an ideal lowpass filter of bandwidth 5 Hz (Fig. 8.2f). Finally, in the last case of oversampling (sampling rate 20 Hz), the spectrum  $\overline{X}(\omega)$  consists of nonoverlapping repetitions of  $(1/T)X(\omega)$  (repeating every 20 Hz) with empty bands between successive cycles (Fig. 8.2h). Hence,  $X(\omega)$  can be recovered from  $\overline{X}(\omega)$  by using an ideal lowpass filter or even a practical lowpass filter (shown dashed in Fig. 8.2h).<sup>†</sup>

# **DRILL 8.1** Nyquist Sampling

Find the Nyquist rate and the Nyquist sampling interval for the signals  $sinc(100\pi t)$  and  $sinc(100\pi t) + sinc(50\pi t)$ .

## ANSWERS

The Nyquist sampling interval is 0.01 s and the Nyquist sampling rate is 100 Hz for both signals.

# FOR SKEPTICS ONLY

Rare is the reader who, at first encounter, is not skeptical of the sampling theorem. It seems impossible that Nyquist samples can define the one and the only signal that passes through those sample values. We can easily picture infinite number of signals passing through a given set of samples. However, among all these (infinite number of) signals, only one has the minimum bandwidth  $B \le 1/2T$  Hz, where T is the sampling interval. See Prob. 8.2-15.

To summarize, for a given set of samples taken at a rate  $f_s$  Hz, there is only one signal of bandwidth  $B \le f_s/2$  that passes through those samples. All other signals that pass through those samples have bandwidth higher than  $f_s/2$ , and the samples are sub-Nyquist rate samples for those signals.

# 8.1-1 Practical Sampling

In proving the sampling theorem, we assumed ideal samples obtained by multiplying a signal x(t) by an impulse train that is physically unrealizable. In practice, we multiply a signal x(t) by a train of pulses of finite width, depicted in Fig. 8.3c. The sampler is shown in Fig. 8.3d. The sampled signal  $\overline{x}(t)$  is illustrated in Fig. 8.3e. We wonder whether it is possible to recover or reconstruct x(t) from this  $\overline{x}(t)$ . Surprisingly, the answer is affirmative, provided the sampling rate is not below the Nyquist rate. The signal x(t) can be recovered by lowpass filtering  $\overline{x}(t)$  as if it were sampled by impulse train.

<sup>&</sup>lt;sup>†</sup> The filter should have a constant gain between 0 and 5 Hz and zero gain beyond 10 Hz. In practice, the gain beyond 10 Hz can be made negligibly small, but not zero.

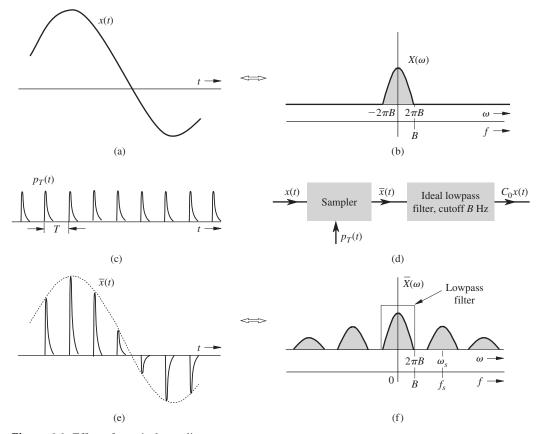


Figure 8.3 Effect of practical sampling.

The plausibility of this result becomes apparent when we consider the fact that reconstruction of x(t) requires the knowledge of the Nyquist sample values. This information is available or built into the sampled signal  $\bar{x}(t)$  in Fig. 8.3e because the *n*th sampled pulse strength is x(nT). To prove the result analytically, we observe that the sampling pulse train  $p_T(t)$  depicted in Fig. 8.3c, being a periodic signal, can be expressed as a trigonometric Fourier series

$$p_T(t) = C_0 + \sum_{n=1}^{\infty} C_n \cos(n\omega_s t + \theta_n) \qquad \omega_s = \frac{2\pi}{T}$$

Thus,

$$\bar{x}(t) = x(t)p_T(t) = x(t) \left[ C_0 + \sum_{n=1}^{\infty} C_n \cos(n\omega_s t + \theta_n) \right]$$
$$= C_0 x(t) + \sum_{n=1}^{\infty} C_n x(t) \cos(n\omega_s t + \theta_n)$$

782

The sampled signal  $\bar{x}(t)$  consists of  $C_0x(t)$ ,  $C_1x(t)\cos(\omega_s t + \theta_1)$ ,  $C_2x(t)\cos(2\omega_s t + \theta_2)$ ,.... Note that the first term  $C_0x(t)$  is the desired signal and all the other terms are modulated signals with spectra centered at  $\pm \omega_s, \pm 2\omega_s, \pm 3\omega_s, \ldots$ , as illustrated in Fig. 8.3f. Clearly the signal x(t) can be recovered by lowpass filtering of  $\bar{x}(t)$ , as shown in Fig. 8.3d. As before, it is necessary that  $\omega_s > 4\pi B$  (or  $f_s > 2B$ ).

# **EXAMPLE 8.2** Practical Sampling

Demonstrate practical sampling by sampling signal  $x(t) = \operatorname{sinc}^2(5\pi t)$  with the rectangular pulse sequence  $p_T(t)$  illustrated in Fig. 8.4c. Sketch the original and sampled signals and their spectra, and discuss recovery of x(t) from its samples.

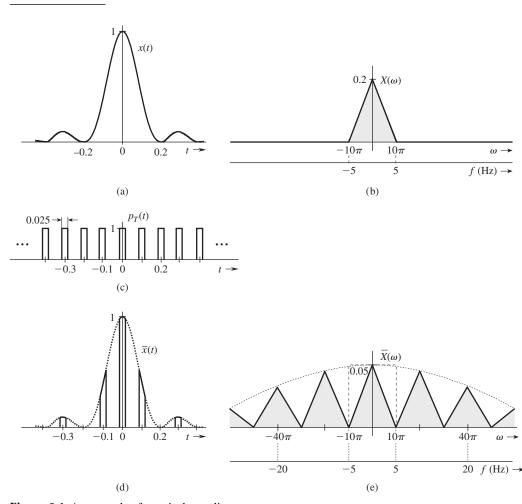


Figure 8.4 An example of practical sampling.

#### CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

The signal x(t) and its spectrum are shown in Figs. 8.4a and 8.4b, respectively.

The period of  $p_T(t)$  is 0.1 second so that the fundamental frequency (which is the sampling frequency) is 10 Hz. Hence,  $\omega_s = 20\pi$ . The Fourier series for  $p_T(t)$  can be expressed as

$$p_T(t) = C_0 + \sum_{n=1}^{\infty} C_n \cos n\omega_s t$$

Hence,

$$\overline{x}(t) = x(t)p_T(t)$$
  
=  $C_1 x(t) + C_1 x(t) \cos 20\pi t + C_2 x(t) \cos 40\pi t + C_3 x(t) \cos 60\pi t + \cdots$ 

Use of Eq. (6.14) yields  $C_0 = \frac{1}{4}$  and  $C_n = \frac{2}{n\pi} \sin\left(\frac{n\pi}{4}\right)$ . Consequently, we have

$$\overline{x}(t) = x(t)p_T(t)$$
  
=  $\frac{1}{4}x(t) + C_1x(t)\cos 20\pi t + C_2x(t)\cos 40\pi t + C_3x(t)\cos 60\pi t + \cdots$ 

and

$$\overline{X}(\omega) = \frac{1}{4}X(\omega) + \frac{C_1}{2}[X(\omega - 20\pi) + X(\omega + 20\pi)] + \frac{C_2}{2}[X(\omega - 40\pi) + X(\omega + 40\pi)] + \frac{C_3}{2}[X(\omega - 60\pi) + X(\omega + 60\pi)] + \cdots$$

where  $C_n = (2/n\pi) \sin(n\pi/4)$ . The sampled signal and its spectrum are shown in Figs. 8.4d and 8.4e, respectively.

The spectrum  $\overline{X}(\omega)$  consists of  $X(\omega)$  repeating periodically at the interval of  $20\pi$  rad/s (10 Hz). Hence, there is no overlap between cycles, and  $X(\omega)$  can be recovered by using an ideal lowpass filter of bandwidth 5 Hz. An ideal lowpass filter of unit gain (and bandwidth 5 Hz) will allow the first term on the right-hand side of the foregoing equation to pass fully and suppress all the other terms. Hence, the output y(t) is

 $y(t) = \frac{1}{4}x(t)$ 

# DRILL 8.2 The Role of Sampling Pulse Area

Show that the basic pulse p(t) used in the sampling pulse train in Fig. 8.4c cannot have zero area if we wish to reconstruct x(t) by lowpass-filtering the sampled signal.

# **8.2 SIGNAL RECONSTRUCTION**

The process of reconstructing a continuous-time signal x(t) from its samples is also known as *interpolation*. In Sec. 8.1, we saw that a signal x(t) bandlimited to *B* Hz can be reconstructed (interpolated) exactly from its samples if the sampling frequency  $f_s$  exceeds 2*B* Hz or the sampling interval *T* is less than 1/2*B*. This reconstruction is accomplished by passing the sampled signal through an ideal lowpass filter of gain *T* and having a bandwidth of any value between *B* and  $f_s - B$  Hz. From a practical viewpoint, a good choice is the middle value  $f_s/2 = 1/2T$  Hz or  $\pi/T$  rad/s. This value allows for small deviations in the ideal filter characteristics on either side of the cutoff frequency. With this choice of cutoff frequency and gain *T*, the ideal lowpass filter required for signal reconstruction (or interpolation) is

$$H(\omega) = T \operatorname{rect}\left(\frac{\omega}{2\pi f_s}\right) = T \operatorname{rect}\left(\frac{\omega T}{2\pi}\right)$$
(8.4)

The interpolation process here is expressed in the frequency domain as a filtering operation. Now we shall examine this process from the time-domain viewpoint.

# TIME-DOMAIN VIEW: A SIMPLE INTERPOLATION

Consider the interpolation system shown in Fig. 8.5a. We start with a very simple interpolating filter, whose impulse response is rect (t/T), depicted in Fig. 8.5b. This is a gate pulse centered at the origin, having unit height, and width *T* (the sampling interval). We shall find the output of this filter when the input is the sampled signal  $\overline{x}(t)$  consisting of an impulse train with the *n*th impulse at t = nT with strength x(nT). Each sample in  $\overline{x}(t)$ , being an impulse, produces at the output a gate pulse of height equal to the strength of the sample. For instance, the *n*th sample is an impulse passes through the filter, it produces at the output a gate pulse of height x(nT) located at t = nT and can be expressed as  $x(nT)\delta(t-nT)$ . When this impulse passes through the filter, it produces at the output a gate pulse of height x(nT), centered at t = nT (shaded in Fig. 8.5c). Each sample in  $\overline{x}(t)$  will generate a corresponding gate pulse, resulting in the filter output that is a staircase approximation of x(t), shown dotted in Fig. 8.5c. This filter thus gives a crude form of interpolation.


The frequency response of this filter  $H(\omega)$  is the Fourier transform of the impulse response rect (t/T). Thus,

$$h(t) = \operatorname{rect}\left(\frac{t}{T}\right)$$
 and  $H(\omega) = T\operatorname{sinc}\left(\frac{\omega T}{2}\right)$  (8.5)

The amplitude response  $|H(\omega)|$  for this filter, illustrated in Fig. 8.5d, explains the reason for the crudeness of this interpolation. This filter, also known as the *zero-order hold* (ZOH) filter, is a poor form of the ideal lowpass filter (shaded in Fig. 8.5d) required for exact interpolation.<sup>†</sup>

We can improve on the ZOH filter by using a *first-order hold* filter, which results in a linear interpolation instead of a staircase interpolation. A linear interpolator, whose impulse response is a triangle pulse  $\Delta(t/2T)$ , results in an interpolation in which successive sample tops are connected by straight-line segments (see Prob. 8.2-3).

<sup>&</sup>lt;sup>†</sup> Figure 8.5b shows that the impulse response of this filter is noncausal, and this filter is not realizable. In practice, we make it realizable by delaying the impulse response by T/2. This merely delays the output of the filter by T/2.

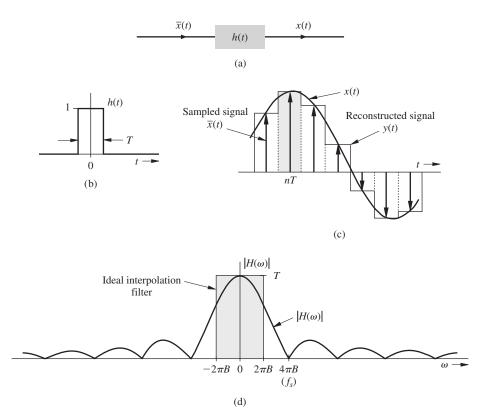

**Figure 8.5** Simple interpolation by means of a zero-order hold (ZOH) circuit. (a) ZOH interpolator. (b) Impulse response of a ZOH circuit. (c) Signal reconstruction by ZOH, as viewed in the time domain. (d) Frequency response of a ZOH.

# TIME-DOMAIN VIEW: AN IDEAL INTERPOLATION

The ideal interpolation filter frequency response obtained in Eq. (8.4) is illustrated in Fig. 8.6a. The impulse response of this filter, the inverse Fourier transform of  $H(\omega)$  is

$$h(t) = \operatorname{sinc}\left(\frac{\pi t}{T}\right)$$

For the Nyquist sampling rate, T = 1/2B, and

$$h(t) = \operatorname{sinc} (2\pi Bt)$$

This h(t) is depicted in Fig. 8.6b. Observe the interesting fact that h(t) = 0 at all Nyquist sampling instants  $(t = \pm n/2B)$  except at t = 0. When the sampled signal  $\bar{x}(t)$  is applied at the input of this filter, the output is x(t). Each sample in  $\bar{x}(t)$ , being an impulse, generates a sinc pulse of height equal to the strength of the sample, as illustrated in Fig. 8.6c. The process is identical to that depicted in Fig. 8.5c, except that h(t) is a sinc pulse instead of a gate pulse. Addition of the since

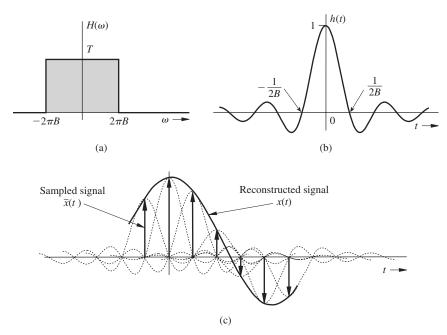


Figure 8.6 Ideal interpolation for Nyquist sampling rate.

pulses generated by all the samples results in x(t). The *n*th sample of the input  $\overline{x}(t)$  is the impulse  $x(nT)\delta(t-nT)$ ; the filter output of this impulse is x(nT)h(t-nT). Hence, the filter output to  $\overline{x}(t)$ , which is x(t), can now be expressed as a sum

$$x(t) = \sum_{n} x(nT)h(t - nT) = \sum_{n} x(nT)\operatorname{sinc}\left[\frac{\pi}{T}(t - nT)\right]$$

For the case of Nyquist sampling rate, T = 1/2B, this expression simplifies to

$$x(t) = \sum_{n} x(nT)\operatorname{sinc}(2\pi Bt - n\pi)$$
(8.6)

Equation (8.6) is the *interpolation formula*, which yields values of x(t) between samples as a weighted sum of all the sample values.

# **EXAMPLE 8.3 Bandlimited Interpolation of the Kronecker Delta** Function

Find a signal x(t) that is bandlimited to B Hz, and whose samples are

$$x(0) = 1$$
 and  $x(\pm T) = x(\pm 2T) = x(\pm 3T) = \cdots = 0$ 

#### 788 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

where the sampling interval *T* is the Nyquist interval for x(t), that is, T = 1/2B.

Because we are given the Nyquist sample values, we use the interpolation formula of Eq. (8.6) to construct x(t) from its samples. Since all but one of the Nyquist samples are zero, only one term (corresponding to n = 0) in the summation on the right-hand side of Eq. (8.6) survives. Thus,

$$x(t) = \operatorname{sinc}\left(2\pi Bt\right)$$

This signal is illustrated in Fig. 8.6b. Observe that this is the only signal that has a bandwidth *B* Hz and the sample values x(0) = 1 and x(nT) = 0 ( $n \neq 0$ ). No other signal satisfies these conditions.

# 8.2-1 Practical Difficulties in Signal Reconstruction

Consider the signal reconstruction procedure illustrated in Fig. 8.7a. If x(t) is sampled at the Nyquist rate  $f_s = 2B$  Hz, the spectrum  $\overline{X}(\omega)$  consists of repetitions of  $X(\omega)$  without any gap between successive cycles, as depicted in Fig. 8.7b. To recover x(t) from  $\overline{x}(t)$ , we need to pass the sampled signal  $\overline{x}(t)$  through an ideal lowpass filter, shown dotted in Fig. 8.7b. As seen in Sec. 7.5, such a filter is unrealizable; it can be closely approximated only with infinite time delay in the response. In other words, we can recover the signal x(t) from its samples with infinite time delay. A practical solution to this problem is to sample the signal at a rate higher than the Nyquist rate  $(f_s > 2B \text{ or } \omega_s > 4\pi B)$ . The result is  $\overline{X}(\omega)$ , consisting of repetitions of  $X(\omega)$  with a finite bandgap between successive cycles, as illustrated in Fig. 8.7c. Now, we can recover  $X(\omega)$ from  $\overline{X}(\omega)$  using a lowpass filter with a gradual cutoff characteristic, shown dotted in Fig. 8.7c. But even in this case, if the unwanted spectrum is to be suppressed, the filter gain must be zero beyond some frequency (see Fig. 8.7c). According to the Paley–Wiener criterion [Eq. (7.43)], it is impossible to realize even this filter. The only advantage in this case is that the required filter can be closely approximated with a smaller time delay. All this means that it is impossible in practice to recover a bandlimited signal x(t) exactly from its samples, even if the sampling rate is higher than the Nyquist rate. However, as the sampling rate increases, the recovered signal approaches the desired signal more closely.

## THE TREACHERY OF ALIASING

There is another fundamental practical difficulty in reconstructing a signal from its samples. The sampling theorem was proved on the assumption that the signal x(t) is bandlimited. All practical signals are timelimited; that is, they are of finite duration or width. We can demonstrate (see Prob. 8.2-20) that a signal cannot be timelimited and bandlimited simultaneously. If a signal is timelimited, it cannot be bandlimited, and vice versa (but it can be simultaneously nontimelimited and nonbandlimited). Clearly, all practical signals, which are necessarily timelimited, are nonbandlimited, as shown in Fig. 8.8a; they have infinite bandwidth, and the spectrum  $\overline{X}(\omega)$  consists of overlapping cycles of  $X(\omega)$  repeating every  $f_s$  Hz (the sampling frequency), as


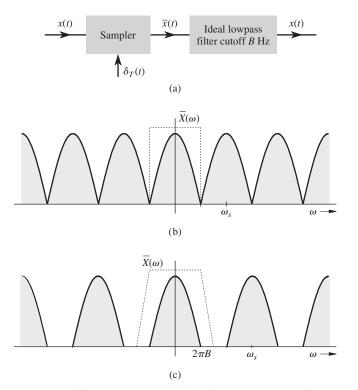


Figure 8.7 (a) Signal reconstruction from its samples. (b) Spectrum of a signal sampled at the Nyquist rate. (c) Spectrum of a signal sampled above the Nyquist rate.

illustrated in Fig. 8.8b.<sup>†</sup> Because of infinite bandwidth in this case, the spectral overlap is unavoidable, regardless of the sampling rate. Sampling at a higher rate reduces but does not eliminate overlapping between repeating spectral cycles. Because of the overlapping tails,  $\overline{X}(\omega)$ no longer has complete information about  $X(\omega)$ , and it is no longer possible, even theoretically, to recover x(t) exactly from the sampled signal  $\overline{x}(t)$ . If the sampled signal is passed through an ideal lowpass filter of cutoff frequency  $f_s/2$  Hz, the output is not  $X(\omega)$  but  $X_a(\omega)$  (Fig. 8.8c), which is a version of  $X(\omega)$  distorted as a result of two separate causes:

- 1. The loss of the tail of  $X(\omega)$  beyond  $|f| > f_s/2$  Hz.
- 2. The reappearance of this tail inverted or folded onto the spectrum. Note that the spectra cross at frequency  $f_s/2 = 1/2T$  Hz. This frequency is called the *folding* frequency.

<sup>&</sup>lt;sup>†</sup> Figure 8.8b shows that from the infinite number of repeating cycles, only the neighboring spectral cycles overlap. This is a somewhat simplified picture. In reality, all the cycles overlap and interact with every other cycle because of the infinite width of all practical signal spectra. Fortunately, all practical spectra also must decay at higher frequencies. This results in insignificant amount of interference from cycles other than the immediate neighbors. When such an assumption is not justified, aliasing computations become little more involved.

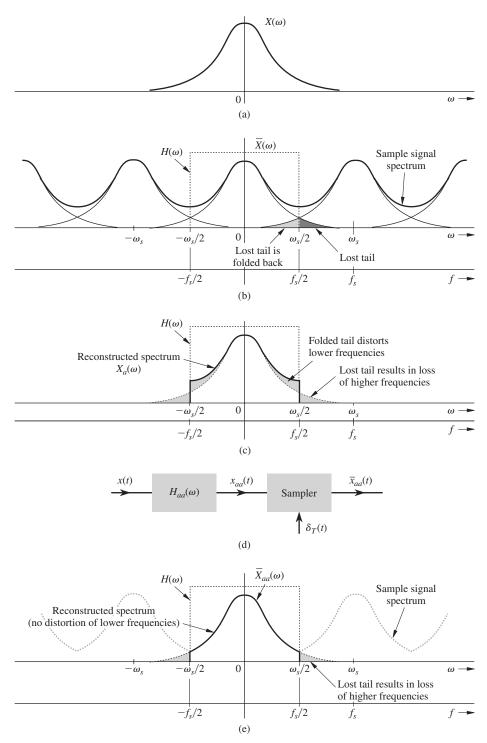

**Figure 8.8** Aliasing effect. (a) Spectrum of a practical signal x(t). (b) Spectrum of sampled x(t). (c) Reconstructed signal spectrum. (d) Sampling scheme using anti-aliasing filter. (e) Sampled signal spectrum (dotted) and the reconstructed signal spectrum (solid) when anti-aliasing filter is used.

The spectrum may be viewed as if the lost tail is folding back onto itself at the folding frequency. For instance, a component of frequency  $(f_s/2) + f_z$  shows up as or "impersonates" a component of lower frequency  $(f_s/2) - f_z$  in the reconstructed signal. Thus, the components of frequencies above  $f_s/2$  reappear as components of frequencies below  $f_s/2$ . This tail inversion, known as *spectral folding* or *aliasing*, is shown shaded in Fig. 8.8b and also in Fig. 8.8c. In the process of aliasing, not only are we losing all the components of frequencies above the folding frequency  $f_s/2$  Hz, but these very components reappear (aliased) as lower-frequency components, as shown in Figs. 8.8b and 8.8c. Such aliasing destroys the integrity of the frequency components below the folding frequency  $f_s/2$ , as depicted in Fig. 8.8c.

The aliasing problem is analogous to that of an army with a platoon that has secretly defected to the enemy side. The platoon is, however, ostensibly loyal to the army. The army is in double jeopardy. First, the army has lost this platoon as a fighting force. In addition, during actual fighting, the army will have to contend with sabotage by the defectors and will have to find another loyal platoon to neutralize the defectors. Thus, the army has lost two platoons in nonproductive activity.

# DEFECTORS ELIMINATED: THE ANTI-ALIASING FILTER

If you were the commander of the betrayed army, the solution to the problem would be obvious. As soon as the commander got wind of the defection, he would incapacitate, by whatever means, the defecting platoon *before the fighting begins*. This way he loses only one (the defecting) platoon. This is a partial solution to the double jeopardy of betrayal and sabotage, a solution that partly rectifies the problem and cuts the losses to half.

We follow exactly the same procedure. The potential defectors are all the frequency components beyond the folding frequency  $f_s/2 = 1/2T$  Hz. We should eliminate (suppress) these components from x(t) before sampling x(t). Such suppression of higher frequencies can be accomplished by an ideal lowpass filter of cutoff  $f_s/2$  Hz, as shown in Fig. 8.8d. This is called the *anti-aliasing filter*. Figure 8.8d also shows that anti-aliasing filtering is performed before sampling. Figure 8.8e shows the sampled signal spectrum (dotted) and the reconstructed signal  $X_{aa}(\omega)$  when an anti-aliasing scheme is used. An anti-aliasing filter essentially bandlimits the signal x(t) to  $f_s/2$  Hz. This way, we lose only the components beyond the folding frequency  $f_s/2$  Hz. These suppressed components now cannot reappear to corrupt the components of frequencies below the folding frequency. Clearly, use of an anti-aliasing filter results in the reconstructed signal spectrum  $X_{aa}(\omega) = X(\omega)$  for  $|f| < f_s/2$ . Thus, although we lost the spectrum beyond  $f_s/2$  Hz, the spectrum for all the frequencies below  $f_s/2$  remains intact. The effective aliasing distortion is cut in half owing to elimination of folding. We stress again that the anti-aliasing operation must be performed *before the signal is sampled*.

An anti-aliasing filter also helps to reduce noise. Noise, generally, has a wideband spectrum, and without anti-aliasing, the aliasing phenomenon itself will cause the noise lying outside the desired band to appear in the signal band. Anti-aliasing suppresses the entire noise spectrum beyond frequency  $f_s/2$ .

The anti-aliasing filter, being an ideal filter, is unrealizable. In practice, we use a steep cutoff filter, which leaves a sharply attenuated spectrum beyond the folding frequency  $f_s/2$ .

# SAMPLING FORCES NONBANDLIMITED SIGNALS TO APPEAR BANDLIMITED

Figure 8.8b shows that the spectrum of a signal x(t) consists of overlapping cycles of  $X(\omega)$ . This means that  $\bar{x}(t)$  are sub-Nyquist samples of x(t). However, we may also view the spectrum in Fig. 8.8b as the spectrum  $X_a(\omega)$  (Fig. 8.8c), repeating periodically every  $f_s$  Hz without overlap. The spectrum  $X_a(\omega)$  is bandlimited to  $f_s/2$  Hz. Hence, these (sub-Nyquist) samples of x(t) are actually the Nyquist samples for signal  $x_a(t)$ . In conclusion, sampling a nonbandlimited signal x(t) at a rate  $f_s$  Hz makes the samples appear to be the Nyquist samples of some signal  $x_a(t)$ , bandlimited to  $f_s/2$  Hz. In other words, sampling makes a nonbandlimited signal appear to be a bandlimited signal  $x_a(t)$  with bandwidth  $f_s/2$  Hz. A similar conclusion applies if x(t) is bandlimited but sampled at a sub-Nyquist rate.

## VERIFICATION OF ALIASING IN SINUSOIDS

We showed in Fig. 8.8b how sampling a signal below the Nyquist rate causes aliasing, which makes a signal of higher frequency  $(f_s/2) + f_z$  Hz masquerade as a signal of lower frequency  $(f_s/2) - f_z$  Hz. Figure 8.8b demonstrates this result in the frequency domain. Let us now verify it in the time domain to gain a deeper appreciation of aliasing.

We can prove our proposition by showing that samples of sinusoids of frequencies  $(\omega_s/2) + \omega_z$ and  $(\omega_s/2) - \omega_z$  are identical when the sampling frequency is  $f_s = \omega_s/2\pi$  Hz.

For a sinusoid  $x(t) = \cos \omega t$ , sampled at intervals of T seconds, x(nT), its nth sample (at t = nT) is

$$x(nT) = \cos \omega nT$$
 *n* integer

Hence, samples of sinusoids of frequency  $\omega = (\omega_s/2) \pm \omega_z$  are<sup>†</sup>

$$x(nT) = \cos\left(\frac{\omega_s}{2} \pm \omega_z\right) nT = \cos\left(\frac{\omega_s}{2}\right) nT \cos\omega_z nT \mp \sin\left(\frac{\omega_s}{2}\right) nT \sin\omega_z nT$$

Recognizing that  $\omega_s T = 2\pi f_s T = 2\pi$ , and  $\sin(\omega_s/2)nT = \sin \pi n = 0$  for all integer *n*, we obtain

$$x(nT) = \cos\left(\frac{\omega_s}{2}\right) nT \cos \omega_z nT$$

Clearly, the samples of a sinusoid of frequency  $(f_s/2) + f_z$  are identical to the samples of a sinusoid  $(f_s/2) - f_z$ .<sup>‡</sup> For instance, when a sinusoid of frequency 100 Hz is sampled at a rate of 120 Hz, the apparent frequency of the sinusoid that results from reconstruction of the samples is 20 Hz. This follows from the fact that here,  $100 = (f_s/2) + f_z = 60 + f_z$  so that  $f_z = 40$ . Hence,  $(f_s/2) - f_z = 20$ . Such would precisely be the conclusion arrived at from Fig. 8.8b.

<sup>&</sup>lt;sup>†</sup> Here we have ignored the phase aspect of the sinusoid. Sampled versions of a sinusoid  $x(t) = \cos(\omega t + \theta)$  with two different frequencies  $(\omega_s/2) \pm \omega_z$  have identical frequency, but the phase signs may be reversed depending on the value of  $\omega_z$ .

<sup>&</sup>lt;sup>‡</sup> The reader is encouraged to verify this result graphically by plotting the spectrum of a sinusoid of frequency  $(\omega_s/2) + \omega_z$  (impulses at  $\pm [(\omega_s/2) + \omega_z]$ ) and its periodic repetition at intervals  $\omega_s$ . Although the result is valid for all values of  $\omega_z$ , consider the case of  $\omega_z < \omega_s/2$  to simplify the graphics.

This discussion again shows that sampling a sinusoid of frequency f aliasing can be avoided if the sampling rate  $f_s > 2f$  Hz.

$$0 \le f < \frac{f_s}{2}$$
 or  $0 \le \omega < \frac{\pi}{T}$ 

Violating this condition leads to aliasing, implying that the samples appear to be those of a lower-frequency signal. Because of this loss of identity, it is impossible to reconstruct the signal faithfully from its samples.

# GENERAL CONDITION FOR ALIASING IN SINUSOIDS

We can generalize the foregoing result by showing that samples of a sinusoid of frequency  $f_0$  are identical to those of a sinusoid of frequency  $f_0 + mf_s$  Hz (integer m), where  $f_s$  is the sampling frequency. The samples of  $\cos 2\pi (f_0 + mf_s)t$  are

$$\cos 2\pi (f_0 + mf_s)nT = \cos \left(2\pi f_0 nT + 2\pi mn\right) = \cos 2\pi f_0 nT$$

The result follows because *mn* is an integer and  $f_sT = 1$ . This result shows that sinusoids of frequencies that differ by an integer multiple of  $f_s$  result in identical set of samples. In other words, samples of sinusoids separated by frequency  $f_s$  Hz are identical. This implies that samples of sinusoids in any frequency band of  $f_s$  Hz are unique; that is, no two sinusoids in that band have the same samples (when sampled at a rate  $f_s$  Hz). For instance, frequencies in the band from  $-f_s/2$  to  $f_s/2$  have unique samples (at the sampling rate  $f_s$ ). This band is called the *fundamental band*. Recall also that  $f_s/2$  is the folding frequency.

From the discussion thus far, we conclude that if a continuous-time sinusoid of frequency f Hz is sampled at a rate of  $f_s$  Hz (samples/s), the resulting samples would appear as samples of a continuous-time sinusoid of frequency  $f_a$  in the fundamental band, where

$$f_a = f - mf_s$$
  $-\frac{f_s}{2} \le f_a < \frac{f_s}{2}$  *m* an integer (8.7)


The frequency  $f_a$  lies in the fundamental band from  $-f_s/2$  to  $f_s/2$ . Figure 8.9a shows the plot of  $f_a$  versus f, where f is the actual frequency and  $f_a$  is the corresponding fundamental band frequency, whose samples are identical to those of the sinusoid of frequency f, when the sampling rate is  $f_s$  Hz.

Recall, however, that the sign change of a frequency does not alter the actual frequency of the waveform. This is because

$$\cos(-\omega_a t + \theta) = \cos(\omega_a t - \theta)$$

Clearly the apparent frequency of a sinusoid of frequency  $-f_a$  is also  $f_a$ . However, its phase undergoes a sign change. This means the apparent frequency of any sampled sinusoid lies in the range from 0 to  $f_s/2$  Hz. To summarize, if a continuous-time sinusoid of frequency f Hz is sampled at a rate of  $f_s$  Hz (samples/second), the resulting samples would appear as samples of a continuous-time sinusoid of frequency  $|f_a|$  that lies in the band from 0 to  $f_s/2$ . According to Eq. (8.7),

$$|f_a| = |f - mf_s|$$
  $|f_a| \le \frac{f_s}{2}$  *m* an integer

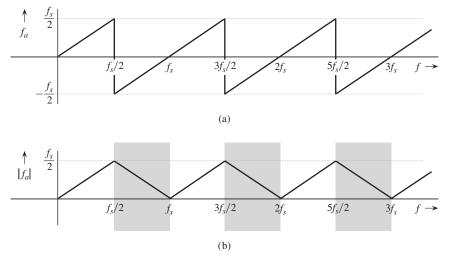

**Figure 8.9** Apparent frequencies of a sampled sinusoid: (a)  $f_a$  versus f and (b)  $|f_a|$  versus f.

The plot of the apparent frequency  $|f_a|$  versus f is shown in Fig. 8.9b.<sup>†</sup> As expected, the apparent frequency  $|f_a|$  of any sampled sinusoid, regardless of its frequency, is always in the range of 0 to  $f_s/2$  Hz. However, when  $f_a$  is negative, the phase of the apparent sinusoid undergoes a sign change. The frequency belts in which such phase changes occur are shown shaded in Fig. 8.9b.

Consider, for example, a sinusoid  $\cos(2\pi ft + \theta)$  with f = 8000 Hz sampled at a rate  $f_s = 3000$  Hz. Using Eq. (8.7), we obtain  $f_a = 8000 - 3 \times 3000 = -1000$ . Hence,  $|f_a| = 1000$ . The samples would appear to have come from a sinusoid  $\cos(2000\pi t - \theta)$ . Observe the sign change of the phase because  $f_a$  is negative.<sup>‡</sup>

In the light of the foregoing development, let us consider a sinusoid of frequency  $f = (f_s/2) + f_z$ , sampled at a rate of  $f_s$  Hz. According to Eq. (8.7),

$$f_a = \frac{f_s}{2} + f_z - (1 \times f_s) = -\frac{f_s}{2} + f_z$$

Hence, the apparent frequency is  $|f_a| = (f_s/2) - f_z$ , confirming our earlier result. However, the phase of the sinusoid will suffer a sign change because  $f_a$  is negative.

Figure 8.10 shows how samples of sinusoids of two different frequencies (sampled at the same rate) generate identical sets of samples. Both the sinusoids are sampled at a rate  $f_s = 5$  Hz (T = 0.2 second). The frequencies of the two sinusoids, 1 Hz (period 1) and 6 Hz (period 1/6), differ by  $f_s = 5$  Hz.

<sup>&</sup>lt;sup>†</sup> The plots in Figs. 8.9 and 5.17 are identical. This is because a sampled sinusoid is basically a discrete-time sinusoid.

<sup>&</sup>lt;sup>‡</sup> For phase sign change, we are assuming that the signal has the form  $\cos(2\pi ft + \theta)$ . If the form is  $\sin(2\pi ft + \theta)$ , the rule changes slightly. It is left as an exercise for the reader to show that when  $f_a < 0$ , this sinusoid appears as  $-\sin(2\pi |f_a|t - \theta)$ . Thus, in addition to phase change, the amplitude also changes sign.

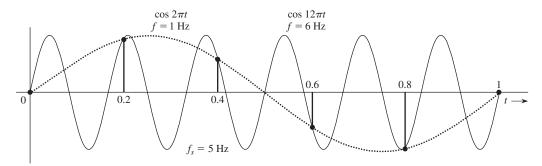


Figure 8.10 Demonstration of aliasing.

The reason for aliasing can be clearly seen in Fig. 8.10. The root of the problem is the sampling rate, which may be adequate for the lower-frequency sinusoid but is clearly inadequate for the higher-frequency sinusoid. The figure clearly shows that between the successive samples of the higher-frequency sinusoid, there are wiggles, which are bypassed or ignored, and are unrepresented in the samples, indicating a sub-Nyquist rate of sampling. The frequency of the apparent signal  $x_a(t)$  is always the lowest possible frequency that lies within the band  $|f| \le f_s/2$ . Thus, the apparent frequency of the samples in this example is 1 Hz. If these samples are chosen to reconstruct a signal using a lowpass filter of bandwidth  $f_s/2$ , we shall obtain a sinusoid of frequency 1 Hz.

## **EXAMPLE 8.4** Apparent Frequency of Sampled Sinusoids

A continuous-time sinusoid  $\cos(2\pi ft + \theta)$  is sampled at a rate  $f_s = 1000$  Hz. Determine the apparent (aliased) sinusoid of the resulting samples if the input signal frequency f is (a) 400 Hz, (b) 600 Hz, (c) 1000 Hz, and (d) 2400 Hz.

The folding frequency is  $f_s/2 = 500$ . Hence, sinusoids below 500 Hz (frequency within the fundamental band) will not be aliased and sinusoids of frequency above 500 Hz will be aliased.

(c) Since f = 1000 Hz can be expressed as 1000 = 0 + 1000, we see that  $f_a = 0$ . Hence, the aliased frequency is 0 Hz (dc), and there is no phase sign change. The apparent sinusoid is  $y(t) = \cos(0\pi t \pm \theta) = \cos(\theta)$ . This is a dc signal with constant sample values for all n.

<sup>(</sup>a) Since f = 400 Hz is less than 500 Hz, there is no aliasing. The apparent sinusoid is  $\cos(2\pi ft + \theta)$  with f = 400.

<sup>(</sup>b) Since f = 600 Hz can be expressed as 600 = -400 + 1000, we see that  $f_a = -400$ . Hence, the aliased frequency is 400 Hz and the phase changes sign. The apparent (aliased) sinusoid is  $\cos(2\pi ft - \theta)$  with f = 400.

#### 796 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

(d) Here, f = 2400 Hz can be expressed as  $2400 = 400 + (2 \times 1000)$  so that  $f_a = 400$ . Hence, the aliased frequency is 400 Hz and there is no sign change for the phase. The apparent sinusoid is  $\cos(2\pi ft + \theta)$  with f = 400.

We could have found these answers directly from Fig. 8.9b. For example, for case (b), we read  $|f_a| = 400$  corresponding to f = 600. Moreover, f = 600 lies in the shaded belt. Hence, there is a phase sign change.

# DRILL 8.3 A Case of Identical Sampled Sinusoids

Show that samples of 90 Hz and 110 Hz sinusoids of the form  $\cos \omega t$  are identical when sampled at a rate 200 Hz.

# DRILL 8.4 Apparent Frequency of Sampled Sinusoids

A sinusoid of frequency  $f_0$  Hz is sampled at a rate of 100 Hz. Determine the apparent frequency of the samples if  $f_0$  is (**a**) 40 Hz, (**b**) 60 Hz, (**c**) 140 Hz, and (**d**) 160 Hz.

# ANSWERS

All four cases have an apparent frequency of 40 Hz.

# 8.2-2 Some Applications of the Sampling Theorem

The sampling theorem is very important in signal analysis, processing, and transmission because it allows us to replace a continuous-time signal with a discrete sequence of numbers. Processing a continuous-time signal is therefore equivalent to processing a discrete sequence of numbers. Such processing leads us directly into the area of digital filtering. In the field of communication, the transmission of a continuous-time message reduces to the transmission of a sequence of numbers by means of pulse trains. The continuous-time signal x(t) is sampled, and sample values are used to modify certain parameters of a periodic pulse train. We may vary the amplitudes (Fig. 8.11b), widths (Fig. 8.11c), or positions (Fig. 8.11d) of the pulses in proportion to the sample values of the signal x(t). Accordingly, we may have *pulse-amplitude modulation* (PAM), *pulse-width modulation* (PWM), or *pulse-position modulation* (PPM). The most important form of pulse modulation today is *pulse-code modulation* (PCM), discussed in Sec. 8.3 in connection with Fig. 8.14b. In all these cases, instead of transmitting x(t), we transmit the corresponding pulse-modulated signal. At the receiver, we read the information of the pulse-modulated signal and reconstruct the analog signal x(t).

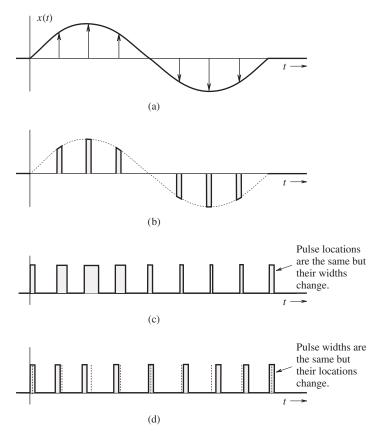


Figure 8.11 Pulse-modulated signals. (a) The signal. (b) The PAM signal. (c) The PWM (PDM) signal. (d) The PAM signal.

One advantage of using pulse modulation is that it permits the simultaneous transmission of several signals on a time-sharing basis—*time-division multiplexing* (TDM). Because a pulse-modulated signal occupies only a part of the channel time, we can transmit several pulse-modulated signals on the same channel by interweaving them. Figure 8.12 shows the TDM of two PAM signals. In this manner, we can multiplex several signals on the same channel by reducing pulse widths.<sup>†</sup>

Digital signals also offer an advantage in the area of communications, where signals must travel over distances. Transmission of digital signals is more rugged than that of analog signals because digital signals can withstand channel noise and distortion much better as long as the noise

<sup>&</sup>lt;sup>†</sup> Another method of transmitting several baseband signals simultaneously is frequency-division multiplexing (FDM) discussed in Sec. 7.7-4. In FDM, various signals are multiplexed by sharing the channel bandwidth. The spectrum of each message is shifted to a specific band not occupied by any other signal. The information of various signals is located in nonoverlapping frequency bands of the channel (Fig. 7.45). In a way, TDM and FDM are duals of each other.

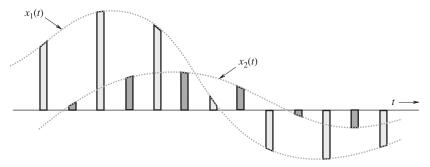


Figure 8.12 Time-division multiplexing of two signals.

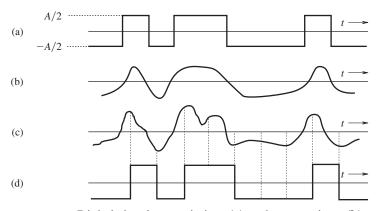


Figure 8.13 Digital signal transmission: (a) at the transmitter, (b) received distorted signal (without noise), (c) received distorted signal (with noise), and (d) regenerated signal at the receiver.

and the distortion are within limits. An analog signal can be converted to digital binary form through sampling and quantization (rounding off), as explained in the next section. The digital (binary) message in Fig. 8.13a is distorted by the channel, as illustrated in Fig. 8.13b. Yet if the distortion remains within a limit, we can recover the data without error because we need only make a simple binary decision: Is the received pulse positive or negative? Figure 8.13c shows the same data with channel distortion and noise. Here again, the data can be recovered correctly as long as the distortion and the noise are within limits. Such is not the case with analog messages. Any distortion or noise, no matter how small, will distort the received signal.

The greatest advantage of digital communication over the analog counterpart, however, is the viability of regenerative repeaters in the former. In an analog transmission system, a message signal grows progressively weaker as it travels along the channel (transmission path), whereas the channel noise and the signal distortion, being cumulative, become progressively stronger. Ultimately, the signal, overwhelmed by noise and distortion, is mutilated. Amplification is of little help because it enhances the signal and the noise in the same proportion. Consequently, the distance over which an analog message can be transmitted is limited by the transmitted power. If a transmission path is long enough, the channel distortion and noise will accumulate sufficiently to overwhelm even a

digital signal. The trick is to set up repeaters along the transmission path at distances short enough to permit detection of signal pulses before the noise and distortion have a chance to accumulate sufficiently. At each repeater, the pulses are detected, and new, clean pulses are transmitted to the next repeater, which, in turn, duplicates the same process. If the noise and distortion remain within limits (which is possible because of the closely spaced repeaters), pulses can be detected correctly.<sup>†</sup> This way the digital messages can be transmitted over longer distances with greater reliability. In contrast, analog messages cannot be cleaned up periodically, and their transmission is therefore less reliable. The most significant error in digitized signals comes from quantizing (rounding off). This error, discussed in Sec. 8.3, can be reduced as much as desired by increasing the number of quantization levels, at the cost of an increased bandwidth of the transmission medium (channel).


# 8.3 ANALOG-TO-DIGITAL (A/D) CONVERSION

The amplitude of an *analog* signal can take on any value over a continuous range. Hence, analog signal amplitude can take on an infinite number of values. In contrast, a *digital* signal amplitude can take on only a finite number of values. An analog signal can be converted into a digital signal by means of sampling and *quantizing* (rounding off). Sampling an analog signal alone will not yield a digital signal because a sample of analog signal can still take on any value in a continuous range. It is digitized by rounding off its value to one of the closest permissible numbers (or *quantized levels*), as illustrated in Fig. 8.14a, which represents one possible quantizing scheme. The amplitudes of the analog signal x(t) lie in the range (-V, V). This range is partitioned into *L* subintervals, each of magnitude  $\Delta = 2V/L$ . Next, each sample amplitude is approximated by the midpoint value of the subinterval in which the sample falls (see Fig. 8.14a for L = 16). It is clear that each sample is approximated to one of the *L* numbers. Thus, the signal is digitized with quantized samples taking on any one of the *L* values. This is an *L*-ary digital signal (see Sec. 1.3-2). Each sample can now be represented by one of *L* distinct pulses.

From a practical viewpoint, dealing with a large number of distinct pulses is difficult. We prefer to use the smallest possible number of distinct pulses, the very smallest number being 2. A digital signal using only two symbols or values is the binary signal. A binary digital signal (a signal that can take on only two values) is very desirable because of its simplicity, economy, and ease of engineering. We can convert an *L*-ary signal into a binary signal by using pulse coding. Figure 8.14b shows one such code for the case of L = 16. This code, formed by binary representation of the 16 decimal digits from 0 to 15, is known as the *natural binary code* (*NBC*). For *L* quantization levels, we need a minimum of *b* binary code digits, where  $2^b = L$  or  $b = \log_2 L$ .

Each of the 16 levels is assigned one binary code word of four digits. Thus, each sample in this example is encoded by four binary digits. To transmit or digitally process the binary data, we need to assign a distinct electrical pulse to each of the two binary states. One possible way is to assign a negative pulse to a binary  $\mathbf{0}$  and a positive pulse to a binary  $\mathbf{1}$  so that each sample is now represented by a group of four binary pulses (pulse code), as depicted in Fig. 8.14b. The resulting binary signal is a digital signal obtained from the analog signal x(t) through A/D conversion. In communications jargon, such a signal is known as a pulse-code-modulated (PCM) signal.

<sup>&</sup>lt;sup>†</sup> The error in pulse detection can be made negligible.

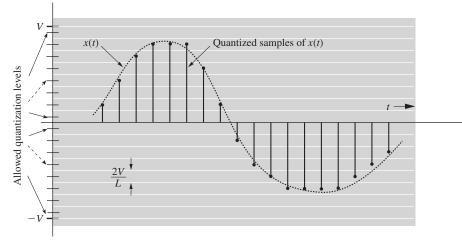

Digit	Binary equivalent	Pulse code waveform
0	0000	
1	0001	
2	0010	
3	0011	
4	0100	
5	0101	
6	0110	
7	0111	
8	1000	
9	1001	
10	1010	
11	1011	
12	1100	
13	1101	
14	1110	
15	1111	

(b)

Figure 8.14 Analog-to-digital (A/D) conversion of a signal: (a) quantizing and (b) pulse coding.

The convenient contraction of "binary digit" to bit has become an industry standard abbreviation.

The audio signal bandwidth is about 15 kHz, but subjective tests show that signal articulation (intelligibility) is not affected if all the components above 3400 Hz are suppressed [3]. Since the objective in telephone communication is intelligibility rather than high fidelity, the components above 3400 Hz are eliminated by a lowpass filter.<sup>†</sup> The resulting signal is then sampled at a rate of 8000 samples/s (8 kHz). This rate is intentionally kept higher than the Nyquist sampling rate of 6.8 kHz to avoid unrealizable filters required for signal reconstruction. Each sample is finally quantized into 256 levels (L = 256), which requires a group of eight binary pulses to encode each sample ( $2^8 = 256$ ). Thus, a digitized telephone signal consists of data amounting to  $8 \times 8000 = 64,000$  or 64 kbit/s, requiring 64,000 binary pulses per second for its transmission.

The compact disc (CD), a high-fidelity application of A/D conversion, requires the audio signal bandwidth of 20 kHz. Although the Nyquist sampling rate is only 40 kHz, an actual sampling rate of 44.1 kHz is used for the reason mentioned earlier. The signal is quantized into a rather large number of levels (L = 65,536) to reduce quantizing error. The binary-coded samples are now recorded on the CD.

## A HISTORICAL NOTE

The binary system of representing any number by using 1s and 0s was invented in India by Pingala (ca. 200 BCE). It was again worked out independently in the West by Gottfried Wilhelm Leibniz (1646–1716). He felt a spiritual significance in this discovery, reasoning that 1 representing unity was clearly a symbol for God, while 0 represented the nothingness. He reasoned that if all numbers can be represented merely by the use of 1 and 0, this surely proves that God created the universe out of nothing!

## EXAMPLE 8.5 ADC Bit Number and Bit Rate

A signal x(t) bandlimited to 3kHz is sampled at a rate  $33\frac{1}{3}\%$  higher than the Nyquist rate. The maximum acceptable error in the sample amplitude (the maximum error due to quantization) is 0.5% of the peak amplitude V. The quantized samples are binary-coded. Find the required sampling rate, the number of bits required to encode each sample, and the bit rate of the resulting PCM signal.

The Nyquist sampling rate is  $f_{Nyq} = 2 \times 3000 = 6000$  Hz (samples/s). The actual sampling rate is  $f_A = 6000 \times (1\frac{1}{3}) = 8000$  Hz.

The quantization step is  $\Delta$ , and the maximum quantization error is  $\pm \Delta/2$ , where  $\Delta = 2V/L$ . The maximum error due to quantization,  $\Delta/2$ , should be no greater than 0.5% of the

<sup>&</sup>lt;sup>†</sup> Components below 300 Hz may also be suppressed without affecting the articulation.

#### 802 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

signal peak amplitude V. Therefore,

$$\frac{\Delta}{2} = \frac{V}{L} = \frac{0.5}{100}V \implies L = 200$$

For binary coding, L must be a power of 2. Hence, the next higher value of L that is a power of 2 is L = 256. Because  $\log_2 256 = 8$ , we need 8 bits to encode each sample. Therefore the bit rate of the PCM signal is

 $8000 \times 8 = 64,000$  bits/s

## DRILL 8.5 Bit Number and Bit Rate for ASCII

The American Standard Code for Information Interchange (ASCII) has 128 characters, which are binary-coded. A certain computer generates 100,000 characters per second. Show that

- (a) 7 bits (binary digits) are required to encode each character
- (b) 700,000 bits/s are required to transmit the computer output.

# 8.4 DUAL OF TIME SAMPLING: SPECTRAL SAMPLING

As in other cases, the sampling theorem has its dual. In Sec. 8.1, we discussed the time-sampling theorem and showed that a signal bandlimited to *B* Hz can be reconstructed from the signal samples taken at a rate of  $f_s > 2B$  samples/s. Note that the signal spectrum exists over the frequency range (in hertz) of -B to *B*. Therefore, 2*B* is the spectral width (not the bandwidth, which is *B*) of the signal. This fact means that a signal x(t) can be reconstructed from samples taken at a rate  $f_s >$  the spectral width of  $X(\omega)$  in hertz ( $f_s > 2B$ ).

We now prove the dual of the time-sampling theorem. This is the *spectral sampling theorem*, which applies to timelimited signals (the dual of bandlimited signals). A timelimited signal x(t) exists only over a finite interval of  $\tau$  seconds, as shown in Fig. 8.15a. Generally, a timelimited signal is characterized by x(t) = 0 for  $t < T_1$  and  $t > T_2$  (assuming  $T_2 > T_1$ ). The signal width or duration is  $\tau = T_2 - T_1$  seconds.

The spectral sampling theorem states that the spectrum  $X(\omega)$  of a signal x(t) timelimited to a duration of  $\tau$  seconds can be reconstructed from the samples of  $X(\omega)$  taken at a rate *R* samples/Hz, where  $R > \tau$  (the signal width or duration) in seconds.

Figure 8.15a shows a timelimited signal x(t) and its Fourier transform  $X(\omega)$ . Although  $X(\omega)$  is complex in general, it is adequate for our line of reasoning to show  $X(\omega)$  as a real function.

$$X(\omega) = \int_{-\infty}^{\infty} x(t)e^{-j\omega t}dt = \int_{0}^{\tau} x(t)e^{-j\omega t}dt$$
(8.8)

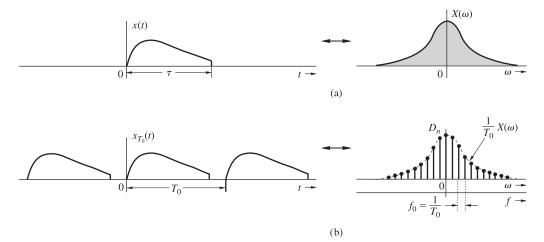


Figure 8.15 Periodic repetition of a signal amounts to sampling its spectrum.

We now construct  $x_{T_0}(t)$ , a periodic signal formed by repeating x(t) every  $T_0$  seconds  $(T_0 > \tau)$ , as depicted in Fig. 8.15b. This periodic signal can be expressed by the exponential Fourier series

$$x_{T_0}(t) = \sum_{n=-\infty}^{\infty} D_n e^{jn\omega_0 t} \qquad \omega_0 = \frac{2\pi}{T_0}$$

where (assuming  $T_0 > \tau$ )

$$D_n = \frac{1}{T_0} \int_0^{T_0} x(t) e^{-jn\omega_0 t} dt = \frac{1}{T_0} \int_0^{\tau} x(t) e^{-jn\omega_0 t} dt$$

From Eq. (8.8), it follows that

$$D_n = \frac{1}{T_0} X(n\omega_0)$$

This result indicates that the coefficients of the Fourier series for  $x_{T_0}(t)$  are  $(1/T_0)$  times the sample values of the spectrum  $X(\omega)$  taken at intervals of  $\omega_0$ . This means that the spectrum of the periodic signal  $x_{T_0}(t)$  is the sampled spectrum  $X(\omega)$ , as illustrated in Fig. 8.15b. Now as long as  $T_0 > \tau$ , the successive cycles of x(t) appearing in  $x_{T_0}(t)$  do not overlap, and x(t) can be recovered from  $x_{T_0}(t)$ . Such recovery implies indirectly that  $X(\omega)$  can be reconstructed from its samples. These samples are separated by the fundamental frequency  $f_0 = 1/T_0$  Hz of the periodic signal  $x_{T_0}(t)$ . Hence, the condition for recovery is  $T_0 > \tau$ ; that is,

$$f_0 < \frac{1}{\tau} \operatorname{Hz}$$

Therefore, to be able to reconstruct the spectrum  $X(\omega)$  from the samples of  $X(\omega)$ , the samples should be taken at frequency intervals  $f_0 < 1/\tau$  Hz. If *R* is the sampling rate (samples/Hz), then

$$R = \frac{1}{f_0} > \tau$$
 samples/Hz

#### 804 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

## SPECTRAL INTERPOLATION

Consider a signal timelimited to  $\tau$  seconds and centered at  $T_c$ . We now show that the spectrum  $X(\omega)$  of x(t) can be reconstructed from the samples of  $X(\omega)$ . For this case, using the dual of the approach employed to derive the signal interpolation formula in Eq. (8.6), we obtain the spectral interpolation formula<sup>†</sup>

$$X(\omega) = \sum_{n=-\infty}^{\infty} X(n\omega_0) \operatorname{sinc}\left(\frac{\omega T_0}{2} - n\pi\right) e^{-j(\omega - n\omega_0)T_c} \qquad \omega_0 = \frac{2\pi}{T_0} \qquad T_0 > \tau$$
(8.9)

For the case in Fig. 8.15,  $T_c = T_0/2$ . If the pulse x(t) were to be centered at the origin, then  $T_c = 0$ , and the exponential term at the extreme right in Eq. (8.9) would vanish. In such a case, Eq. (8.9) would be the exact dual of Eq. (8.6).

# **EXAMPLE 8.6 Spectral Sampling and Interpolation**

The spectrum  $X(\omega)$  of a unit-duration signal x(t), centered at the origin, is sampled at the intervals of 1 Hz or  $2\pi$  rad/s (the Nyquist rate). The samples are

$$X(0) = 1$$
 and  $X(\pm 2\pi n) = 0$   $n = 1, 2, 3, ...$ 

Find x(t).

We use the interpolation formula Eq. (8.9) (with  $T_c = 0$ ) to construct  $X(\omega)$  from its samples. Since all but one of the Nyquist samples are zero, only one term (corresponding to n = 0) in the summation on the right-hand side of Eq. (8.9) survives. Thus, with X(0) = 1 and  $\tau = T_0 = 1$ , we obtain

$$X(\omega) = \operatorname{sinc}\left(\frac{\omega}{2}\right)$$
 and  $x(t) = \operatorname{rect}(t)$ 

For a signal of unit duration, this is the only spectrum with the sample values X(0) = 1 and  $X(2\pi n) = 0$  ( $n \neq 0$ ). No other spectrum satisfies these conditions.

<sup>&</sup>lt;sup>†</sup> This can be obtained by observing that the Fourier transform of  $x_{T_0}(t)$  is  $2\pi \sum_n D_n \delta(\omega - n\omega_0)$  [see Eq. (7.22)]. We can recover x(t) from  $x_{T_0}(t)$  by multiplying the latter with rect $(t - T_c)/T_0$ , whose Fourier transform is  $T_0 \operatorname{sinc}(\omega T_0/2)e^{-j\omega T_c}$ . Hence,  $X(\omega)$  is  $1/2\pi$  times the convolution of these two Fourier transforms, which yields Eq. (8.9).

# 8.5 NUMERICAL COMPUTATION OF THE FOURIER TRANSFORM: THE DISCRETE FOURIER TRANSFORM

Numerical computation of the Fourier transform of x(t) requires sample values of x(t) because a digital computer can work only with discrete data (sequence of numbers). Moreover, a computer can compute  $X(\omega)$  only at some discrete values of  $\omega$  [samples of  $X(\omega)$ ]. We therefore need to relate the samples of  $X(\omega)$  to samples of x(t). This task can be accomplished by using the results of the two sampling theorems developed in Secs. 8.1 and 8.4.

We begin with a timelimited signal x(t) (Fig. 8.16a) and its spectrum  $X(\omega)$  (Fig. 8.16b). Since x(t) is timelimited,  $X(\omega)$  is nonbandlimited. For convenience, we shall show all spectra as functions of the frequency variable f (in hertz) rather than  $\omega$ . According to the sampling theorem, the spectrum  $\overline{X}(\omega)$  of the sampled signal  $\overline{x}(t)$  consists of  $X(\omega)$  repeating every  $f_s$  Hz, where  $f_s = 1/T$ , as depicted in Fig. 8.16d.<sup>†</sup> In the next step, the sampled signal in Fig. 8.16c is repeated periodically every  $T_0$  seconds, as illustrated in Fig. 8.16e. According to the spectral sampling theorem, such an operation results in sampling the spectrum at a rate of  $T_0$  samples/Hz. This sampling rate means that the samples are spaced at  $f_0 = 1/T_0$  Hz, as depicted in Fig. 8.16f.

The foregoing discussion shows that when a signal x(t) is sampled and then periodically repeated, the corresponding spectrum is also sampled and periodically repeated. Our goal is to relate the samples of x(t) to the samples of  $X(\omega)$ .

## NUMBER OF SAMPLES

One interesting observation from Figs. 8.16e and 8.16f is that  $N_0$ , the number of samples of the signal in Fig. 8.16e in one period  $T_0$ , is identical to  $N'_0$ , the number of samples of the spectrum in Fig. 8.16f in one period  $f_s$ . To see this, we notice that

$$N_0 = \frac{T_0}{T} \quad N'_0 = \frac{f_s}{f_0} \quad f_s = \frac{1}{T} \quad \text{and} \quad f_0 = \frac{1}{T_0}$$
 (8.10)


Using these relations, we see that


$$N_0 = \frac{T_0}{T} = \frac{f_s}{f_0} = N'_0$$

# ALIASING AND LEAKAGE IN NUMERICAL COMPUTATION

Figure 8.16f shows the presence of aliasing in the samples of the spectrum  $X(\omega)$ . This aliasing error can be reduced as much as desired by increasing the sampling frequency  $f_s$  (decreasing the sampling interval  $T = 1/f_s$ ). The aliasing can never be eliminated for timelimited x(t), however, because its spectrum  $X(\omega)$  is nonbandlimited. Had we started with a signal having a bandlimited spectrum  $X(\omega)$ , there would be no aliasing in the spectrum in Fig. 8.16f. Unfortunately, such a signal is nontimelimited, and its repetition (in Fig. 8.16e) would result in signal overlapping (aliasing in the time domain). In this case, we shall have to contend with errors in signal

<sup>&</sup>lt;sup>†</sup> There is a multiplying constant 1/T for the spectrum in Fig. 8.16d [see Eq. (8.2)], but this is irrelevant to our discussion here.

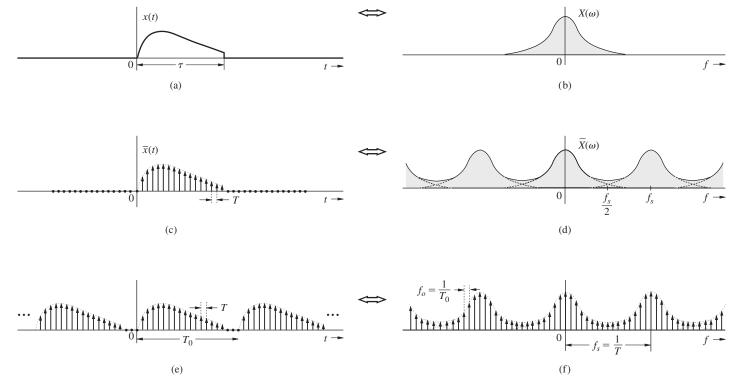

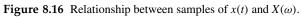

806

samples. In other words, in computing the direct or inverse Fourier transform numerically, we can reduce the error as much as we wish, but the error can never be eliminated. This is true of numerical computation of the direct and inverse Fourier transforms, regardless of the method used. For example, if we determine the Fourier transform by direct integration numerically, by using Eq. (7.9), there will be an error because the interval of integration  $\Delta t$  can never be made zero. Similar remarks apply to numerical computation of the inverse transform. Therefore, we should always keep in mind the nature of this error in our results. In our discussion (Fig. 8.16), we assumed x(t) to be a timelimited signal. If x(t) were not timelimited, we would need to timelimit it because numerical computations can work only with finite data. Furthermore, this data truncation causes error because of spectral spreading (smearing) and leakage, as discussed in Sec. 7.8. The leakage also causes aliasing. Leakage can be reduced by using a tapered window for signal truncation. But this choice increases spectral spreading or smearing. Spectral spreading can be reduced by increasing the window width (i.e., more data), which increases  $T_0$ , and reduces  $f_0$  (increases *spectral* or *frequency resolution*).

# PICKET FENCE EFFECT

The numerical computation method yields only the uniform sample values of  $X(\omega)$ . The major peaks or valleys of  $X(\omega)$  can lie between two samples and may remain hidden, giving a false picture of reality. Viewing samples is like viewing the signal and its spectrum through a "picket fence" with upright posts that are very wide and placed close together. What is hidden behind the pickets is much more than what we can see. Such misleading results can be avoided by using a sufficiently large  $N_0$ , the number of samples, to increase resolution. We can also use zero padding (discussed later) or the spectral interpolation formula [Eq. (8.9)] to determine the values of  $X(\omega)$ between samples.

# POINTS OF DISCONTINUITY

If x(t) or  $X(\omega)$  has a jump discontinuity at a sampling point, the sample value should be taken as the average of the values on the two sides of the discontinuity because the Fourier representation at a point of discontinuity converges to the average value.

#### DERIVATION OF THE DISCRETE FOURIER TRANSFORM (DFT)

If x(nT) and  $X(r\omega_0)$  are the *n*th and *r*th samples of x(t) and  $X(\omega)$ , respectively, then we define new variables  $x_n$  and  $X_r$  as

$$x_n = Tx(nT) = \frac{T_0}{N_0} x(nT)$$
(8.11)

and

$$X_r = X(r\omega_0)$$

where

$$\omega_0 = 2\pi f_0 = \frac{2\pi}{T_0}$$

We shall now show that  $x_n$  and  $X_r$  are related by the following equations<sup>†</sup>:

$$X_r = \sum_{n=0}^{N_0 - 1} x_n e^{-jr\Omega_0 n}$$
(8.12)

and

808

$$x_n = \frac{1}{N_0} \sum_{r=0}^{N_0 - 1} X_r e^{jr\Omega_0 n}$$
(8.13)

where

$$\Omega_0 = \omega_0 T = \frac{2\pi}{N_0}$$

These equations define the direct and the inverse *discrete Fourier transforms*, with  $X_r$  the direct discrete Fourier transform (DFT) of  $x_n$ , and  $x_n$  the inverse discrete Fourier transform (IDFT) of  $X_r$ . The notation

$$x_n \iff X_r$$

is also used to indicate that  $x_n$  and  $X_r$  are a DFT pair. Remember that  $x_n$  is  $T_0/N_0$  times the *n*th sample of x(t) and  $X_r$  is the *r*th sample of  $X(\omega)$ . Knowing the sample values of x(t), we can use the DFT to compute the sample values of  $X(\omega)$ —and vice versa. Note, however, that  $x_n$  is a function of n ( $n = 0, 1, 2, ..., N_0 - 1$ ) rather than of t and that  $X_r$  is a function of r ( $r = 0, 1, 2, ..., N_0 - 1$ ) rather than of t and that  $X_r$  is a function of r ( $r = 0, 1, 2, ..., N_0 - 1$ ) rather than of  $x_n$  and  $X_r$  are periodic sequences of period  $N_0$  (Figs. 8.16e, 8.16f). Such sequences are called  $N_0$ -periodic sequences. The proof of the DFT relationships in Eqs. (8.12) and (8.13) follows directly from the results of the sampling theorem. The sampled signal  $\overline{x}(t)$  (Fig. 8.16c) can be expressed as

$$\overline{x}(t) = \sum_{n=0}^{N_0 - 1} x(nT)\delta\left(t - nT\right)$$

Since  $\delta(t - nT) \iff e^{-jn\omega T}$ , applying the Fourier transform yields

$$\overline{X}(\omega) = \sum_{n=0}^{N_0 - 1} x(nT) e^{-jn\omega T}$$

But from Fig. 8.1f [or Eq. (8.2)], it is clear that over the interval  $|\omega| \le \omega_s/2$ ,  $\overline{X}(\omega)$ , the Fourier transform of  $\overline{x}(t)$  is  $X(\omega)/T$ , assuming negligible aliasing. Hence,

$$X(\omega) = T\overline{X}(\omega) = T\sum_{n=0}^{N_0-1} x(nT)e^{-jn\omega T} \qquad |\omega| \le \frac{\omega_s}{2}$$

<sup>&</sup>lt;sup>†</sup> In Eqs. (8.12) and (8.13), the summation is performed from 0 to  $N_0 - 1$ . It is shown in Sec. 9.1-2 [Eqs. (9.6) and (9.7)] that the summation may be performed over any successive  $N_0$  values of *n* or *r*.

and

$$X_r = X(r\omega_0) = T \sum_{n=0}^{N_0 - 1} x(nT) e^{-nkr\omega_0 T}$$
(8.14)

If we let  $\omega_0 T = \Omega_0$ , then from Eq. (8.10),

$$\Omega_0 = \omega_0 T = 2\pi f_0 T = \frac{2\pi}{N_0}$$

Also, from Eq. (8.11),

$$Tx(nT) = x_n$$

Therefore, Eq. (8.14) becomes

$$X_r = \sum_{n=0}^{N_0 - 1} x_n e^{-jr\Omega_0 n}$$
  $\Omega_0 = \frac{2\pi}{N_0}$ 

This is Eq. (8.12), which we set to prove.

The inverse transform relationship of Eq. (8.13) can be derived by using a similar procedure with the roles of t and  $\omega$  reversed, but here we shall use a more direct proof. To prove Eq. (8.13), we multiply both sides of Eq. (8.12) by  $e^{jm\Omega_0 r}$  and sum over r as

$$\sum_{r=0}^{N_0-1} X_r e^{jm\Omega_0 r} = \sum_{r=0}^{N_0-1} \left[ \sum_{n=0}^{N_0-1} x_n e^{-jr\Omega_0 n} \right] e^{jm\Omega_0 r}$$

By interchanging the order of summation on the right-hand side, we have

$$\sum_{r=0}^{N_0-1} X_r e^{jm\Omega_0 r} = \sum_{n=0}^{N_0-1} x_n \left[ \sum_{r=0}^{N_0-1} e^{j(m-n)\Omega_0 r} \right]$$

As the footnote below readily shows, the inner sum on the right-hand side is zero for  $n \neq m$  and is  $N_0$  when n = m.<sup>†</sup> Thus, the outer sum will have only one nonzero term when n = m, and it is

<sup>†</sup>We show that

$$\sum_{n=0}^{N_0-1} e^{jk\Omega_0 n} = \begin{cases} N_0 & k = 0, \pm N_0, \pm 2N_0, \dots \\ 0 & \text{otherwise} \end{cases}$$
(8.15)

Recall that  $\Omega_0 N_0 = 2\pi$ . So  $e^{jk\Omega_0 n} = 1$  when  $k = 0, \pm N_0, \pm 2N_0, \ldots$ . Hence, the sum on the left-hand side of Eq. (8.15) is  $N_0$ . To compute the sum for other values of k, we note that the sum on the left-hand side of Eq. (8.15) is a geometric progression with common ratio  $\alpha = e^{jk\Omega_0}$ . Therefore, (see Sec. B.8-3)

$$\sum_{n=0}^{N_0-1} e^{jk\Omega_0 n} = \frac{e^{jk\Omega_0 N_0} - 1}{e^{jk\Omega_0} - 1} = 0 \qquad (e^{jk\Omega_0 N_0} = e^{j2\pi m} = 1)$$

#### 810 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

 $N_0 x_n = N_0 x_m$ . Therefore,

$$x_m = \frac{1}{N_0} \sum_{r=0}^{N_0 - 1} X_r e^{jm\Omega_0 r}$$
  $\Omega_0 = \frac{2\pi}{N_0}$ 

Because  $X_r$  is  $N_0$  periodic, we need to determine the values of  $X_r$  over any one period. It is customary to determine  $X_r$  over the range  $(0, N_0 - 1)$ , rather than over the range  $(-N_0/2, (N_0/2) - 1)$ .<sup>†</sup>

## CHOICE OF T AND $T_0$

In DFT computation, we first need to select suitable values for  $N_0$  and T or  $T_0$ . For this purpose, we begin by deciding on B, the essential bandwidth (in hertz) of the signal. The sampling frequency  $f_s$  must be at least 2B, that is,

$$\frac{f_s}{2} \ge B$$

Moreover, the sampling interval  $T = 1/f_s$  [Eq. (8.10)], and

$$T \le \frac{1}{2B} \tag{8.16}$$

Once we pick B, we can choose T according to Eq. (8.16). Also,

$$f_0 = \frac{1}{T_0}$$
(8.17)

where  $f_0$  is the *frequency resolution* [separation between samples of  $X(\omega)$ ]. Hence, if  $f_0$  is given, we can pick  $T_0$  according to Eq. (8.17). Knowing  $T_0$  and T, we determine  $N_0$  from

$$N_0 = \frac{T_0}{T}$$

# ZERO PADDING

Recall that observing  $X_r$  is like observing the spectrum  $X(\omega)$  through a picket fence. If the frequency sampling interval  $f_0$  is not sufficiently small, we could miss out on some significant details and obtain a misleading picture. To obtain a higher number of samples, we need to reduce  $f_0$ . Because  $f_0 = 1/T_0$ , a higher number of samples requires us to increase the value of  $T_0$ , the period of repetition for x(t). This option increases  $N_0$ , the number of samples of x(t), by adding dummy samples of 0 value. This addition of dummy samples is known as *zero padding*. Thus, zero padding increases the number of samples and may help in getting a better idea of the spectrum  $X(\omega)$  from its samples  $X_r$ . To continue with our picket fence analogy, zero padding is like using more, and narrower, pickets.

<sup>&</sup>lt;sup>†</sup> The DFT of Eq. (8.12) and the IDFT of Eq. (8.13) represent a transform in their own right, and they are exact. There is no approximation. However,  $x_n$  and  $X_r$ , thus obtained, are only approximations to the actual samples of a signal x(t) and of its Fourier transform  $X(\omega)$ .

## ZERO PADDING DOES NOT IMPROVE ACCURACY OR RESOLUTION

Actually, we are not observing  $X(\omega)$  through a picket fence. We are observing a distorted version of  $X(\omega)$  resulting from the truncation of x(t). Hence, we should keep in mind that even if the fence were transparent, we would see a reality distorted by aliasing. Seeing through the picket fence just gives us an imperfect view of the imperfectly represented reality. Zero padding only allows us to look at more samples of that imperfect reality. It can never reduce the imperfection in what is behind the fence. The imperfection, which is caused by aliasing, can be lessened only by reducing the sampling interval T. Observe that reducing T also increases  $N_0$ , the number of samples, and is like increasing the number of pickets while reducing their width. But in this case, the reality behind the fence is also better dressed and we see more of it.

## **EXAMPLE 8.7** Number of Samples and Frequency Resolution

A signal x(t) has a duration of 2 ms and an essential bandwidth of 10 kHz. It is desirable to have a frequency resolution of 100 Hz in the DFT ( $f_0 = 100$ ). Determine  $N_0$ .

To have  $f_0 = 100$  Hz, the effective signal duration  $T_0$  must be

$$T_0 = \frac{1}{f_0} = \frac{1}{100} = 10 \text{ ms}$$

Since the signal duration is only 2 ms, we need zero padding over 8 ms. Also, B = 10,000. Hence,  $f_s = 2B = 20,000$  and  $T = 1/f_s = 50 \ \mu$ s. Furthermore,

$$N_0 = \frac{f_s}{f_0} = \frac{20,000}{100} = 200$$

The fast Fourier transform (FFT) algorithm (discussed later; see Sec. 8.6) is used to compute DFT, where it proves convenient (although not necessary) to select  $N_0$  as a power of 2; that is,  $N_0 = 2^n$  (*n*, integer). Let us choose  $N_0 = 256$ . Increasing  $N_0$  from 200 to 256 can be used to reduce aliasing error (by reducing *T*), to improve resolution (by increasing  $T_0$  using zero padding), or a combination of both.

**Reducing Aliasing Error.** We maintain the same  $T_0$  so that  $f_0 = 100$ . Hence,

$$f_s = N_0 f_0 = 256 \times 100 = 25,600$$
 and  $T = \frac{1}{f_s} = 39 \,\mu s$ 

Thus, increasing  $N_0$  from 200 to 256 permits us to reduce the sampling interval T from 50 µs to 39 µs while maintaining the same frequency resolution ( $f_0 = 100$ ).

**Improving Resolution.** Here, we maintain the same  $T = 50 \,\mu$ s, which yields

$$T_0 = N_0 T = 256(50 \times 10^{-6}) = 12.8 \text{ ms}$$
 and  $f_0 = \frac{1}{T_0} = 78.125 \text{ Hz}$ 

#### 812 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

Thus, increasing  $N_0$  from 200 to 256 can improve the frequency resolution from 100 to 78.125 Hz while maintaining the same aliasing error ( $T = 50 \ \mu s$ ).

**Combination of Reducing Aliasing Error and Improving Resolution.** To simultaneously reduce alias error and improve resolution, we could choose  $T = 45 \ \mu s$  and  $T_0 = 11.5 \ ms$  so that  $f_0 = 86.96 \ Hz$ . Many other combinations exist as well.

## **EXAMPLE 8.8 DFT to Compute the Fourier Transform of an Exponential**

Use the DFT to compute (samples of) the Fourier transform of  $e^{-2t}u(t)$ . Plot the resulting Fourier spectra.

We first determine T and  $T_0$ . The Fourier transform of  $e^{-2t}u(t)$  is  $1/(j\omega + 2)$ . This lowpass signal is not bandlimited. In Sec. 7.6, we used the energy criterion to compute the essential bandwidth of a signal. Here, we shall present a simpler, but workable alternative to the energy criterion. The essential bandwidth of a signal will be taken as the frequency at which  $|X(\omega)|$ drops to 1% of its peak value (see the footnote on page 736). In this case, the peak value occurs at  $\omega = 0$ , where |X(0)| = 0.5. Observe that

$$|X(\omega)| = \frac{1}{\sqrt{\omega^2 + 4}} \approx \frac{1}{\omega} \qquad \omega \gg 2$$

Also, 1% of the peak value is  $0.01 \times 0.5 = 0.005$ . Hence, the essential bandwidth *B* is at  $\omega = 2\pi B$ , where

$$|X(\omega)| \approx \frac{1}{2\pi B} = 0.005 \quad \Rightarrow \quad B = \frac{100}{\pi} \text{ Hz}$$

and from Eq. (8.16),

$$T \le \frac{1}{2B} = \frac{\pi}{200} = 0.015708$$

Had we used 1% energy criterion to determine the essential bandwidth, following the procedure in Ex. 7.20, we would have obtained B = 20.26 Hz, which is somewhat smaller than the value just obtained by using the 1% amplitude criterion.


The second issue is to determine  $T_0$ . Because the signal is not timelimited, we have to truncate it at  $T_0$  such that  $x(T_0) \ll 1$ . A reasonable choice would be  $T_0 = 4$  because  $x(4) = e^{-8} = 0.000335 \ll 1$ . The result is  $N_0 = T_0/T = 254.6$ , which is not a power of 2. Hence, we choose  $T_0 = 4$ , and T = 0.015625 = 1/64, yielding  $N_0 = 256$ , which is a power of 2.

Note that there is a great deal of flexibility in determining T and  $T_0$ , depending on the accuracy desired and the computational capacity available. We could just as well have chosen T = 0.03125, yielding  $N_0 = 128$ , although this choice would have given a slightly higher aliasing error.

Because the signal has a jump discontinuity at t = 0, the first sample (at t = 0) is 0.5, the averages of the values on the two sides of the discontinuity. We compute  $X_r$  (the DFT) from the samples of  $e^{-2t}u(t)$  according to Eq. (8.12). Note that  $X_r$  is the *r*th sample of  $X(\omega)$ , and these samples are spaced at  $f_0 = 1/T_0 = 0.25$  Hz ( $\omega_0 = \pi/2$  rad/s).

Because  $X_r$  is  $N_0$  periodic,  $X_r = X_{(r+256)}$  so that  $X_{256} = X_0$ . Hence, we need to plot  $X_r$  over the range r = 0 to 255 (not 256). Moreover, because of this periodicity,  $X_{-r} = X_{(-r+256)}$ , and the values of  $X_r$  over the range r = -127 to -1 are identical to those over the range r = 129 to 255. Thus,  $X_{-127} = X_{129}, X_{-126} = X_{130}, \ldots, X_{-1} = X_{255}$ . In addition, because of the property of conjugate symmetry of the Fourier transform,  $X_{-r} = X_r^*$ , it follows that  $X_{-1} = X_1^*, X_{-2} = X_2^*, \ldots, X_{-128} = X_{128}^*$ . Thus, we need  $X_r$  only over the range r = 0 to  $N_0/2$  (128 in this case).

Figure 8.17 shows the computed plots of  $|X_r|$  and  $\angle X_r$ . The exact spectra are depicted by continuous curves for comparison. Note the nearly perfect agreement between the two sets of spectra. We have depicted the plot of only the first 28 points rather than all 128 points, which would have made the figure very crowded, resulting in loss of clarity. The points are at the intervals of  $1/T_0 = 1/4$  Hz or  $\omega_0 = 1.5708$  rad/s. The 28 samples, therefore, exhibit the plots over the range  $\omega = 0$  to  $\omega = 28(1.5708) \approx 44$  rad/s or 7 Hz.

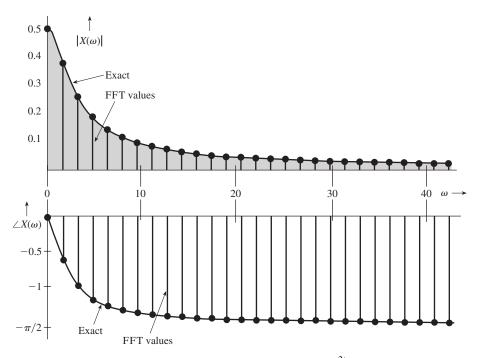

**Figure 8.17** Discrete Fourier transform of an exponential signal  $e^{-2t}u(t)$ .

#### 814 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

In this example, we knew  $X(\omega)$  beforehand; hence we could make intelligent choices for *B* (or the sampling frequency  $f_s$ ). In practice, we generally do not know  $X(\omega)$  beforehand. In fact, that is the very thing we are trying to determine. In such a case, we must make an intelligent guess for *B* or  $f_s$  from circumstantial evidence. We should then continue reducing the value of *T* and recomputing the transform until the result stabilizes within the desired number of significant digits.

# USING MATLAB TO COMPUTE AND PLOT THE RESULTS

Let us now use MATLAB to confirm the results of this example. First, parameters are defined and MATLAB's fft command is used to compute the DFT.

```
>> T_0 = 4; N_0 = 256; T = T_0/N_0; t = (0:T:T*(N_0-1))';
>> x = T*exp(-2*t); x(1) = x(1)/2;
>> X_r = fft(x); r = [-N_0/2:N_0/2-1]'; omega_r = r*2*pi/T_0;
```

The true Fourier transform is also computed for comparison.

>> omega = linspace(-pi/T,pi/T,5001); X = 1./(j\*omega+2);


For clarity, we display spectrum over a restricted frequency range.

```
>> subplot(1,2,1); stem(omega_r,fftshift(abs(X_r)),'k.');
```

```
>> line(omega,abs(X),'color',[0 0 0]); axis([-0.01 44 -0.01 0.51]);
```

- >> xlabel('\omega'); ylabel('|X(\omega)|');
- >> subplot(1,2,2); stem(omega\_r,fftshift(angle(X\_r)),'k.');
- >> line(omega,angle(X),'color',[0 0 0]); axis([-0.01 44 -pi/2-0.01 0.01]);
- >> xlabel('\omega'); ylabel('\angle X(\omega)');

The results, shown in Fig. 8.18, match the earlier results shown in Fig. 8.17.

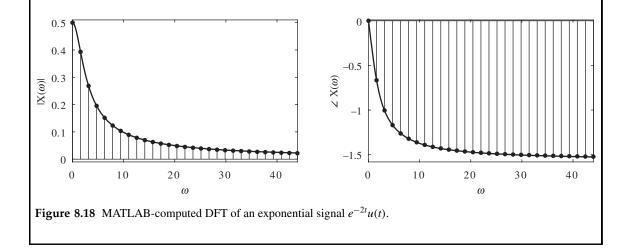

# **EXAMPLE 8.9 DFT to Compute the Fourier Transform of a Rectangular Pulse**

Use the DFT to compute the Fourier transform of  $8 \operatorname{rect}(t)$ .

This gate function and its Fourier transform are illustrated in Figs. 8.19a and 8.19b. To determine the value of the sampling interval *T*, we must first decide on the essential bandwidth *B*. In Fig. 8.19b, we see that  $X(\omega)$  decays rather slowly with  $\omega$ . Hence, the essential bandwidth *B* is rather large. For instance, at B = 15.5 Hz (97.39 rad/s),  $X(\omega) = -0.1643$ , which is about 2% of the peak at X(0). Hence, the essential bandwidth is well above 16 Hz if we use the 1% of the peak amplitude criterion for computing the essential bandwidth. However, we shall deliberately take B = 4 for two reasons: to show the effect of aliasing and because the use of B > 4 would give an enormous number of samples, which could not be conveniently displayed on the page without losing sight of the essentials. Thus, we shall intentionally accept approximation to graphically clarify the concepts of the DFT.

The choice of B = 4 results in the sampling interval T = 1/2B = 1/8. Looking again at the spectrum in Fig. 8.19b, we see that the choice of the frequency resolution  $f_0 = 1/4$  Hz is reasonable. Such a choice gives us four samples in each lobe of  $X(\omega)$ . In this case  $T_0 = 1/f_0 = 4$  seconds and  $N_0 = T_0/T = 32$ . The duration of x(t) is only 1 second. We must repeat it every 4 seconds ( $T_0 = 4$ ), as depicted in Fig. 8.19c, and take samples every 1/8 second. This choice yields 32 samples ( $N_0 = 32$ ). Also,

$$x_n = Tx(nT) = \frac{1}{9}x(nT)$$

Since  $x(t) = 8 \operatorname{rect}(t)$ , the values of  $x_n$  are 1, 0, or 0.5 (at the points of discontinuity), as illustrated in Fig. 8.19c, where  $x_n$  is depicted as a function of t as well as n, for convenience.

In the derivation of the DFT, we assumed that x(t) begins at t = 0 (Fig. 8.16a), and then took  $N_0$  samples over the interval  $(0, T_0)$ . In the present case, however, x(t) begins at -1/2. This difficulty is easily resolved when we realize that the DFT obtained by this procedure is actually the DFT of  $x_n$  repeating periodically every  $T_0$  seconds. Figure 8.19c clearly indicates that periodic repeating the segment of  $x_n$  over the interval from -2 to 2 seconds yields the same signal as the periodic repeating the segment of  $x_n$  over the interval from 0 to 4 seconds. Hence, the DFT of the samples taken from -2 to 2 seconds is the same as that of the samples taken from 0 to 4 seconds. Therefore, regardless of where x(t) starts, we can always take the samples of x(t) and its periodic extension over the interval from 0 to  $T_0$ . In the present example, the 32 sample values are

$$x_n = \begin{cases} 1 & 0 \le n \le 3 \text{ and } 29 \le n \le 31 \\ 0 & 5 \le n \le 27 \\ 0.5 & n = 4, 28 \end{cases}$$

CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

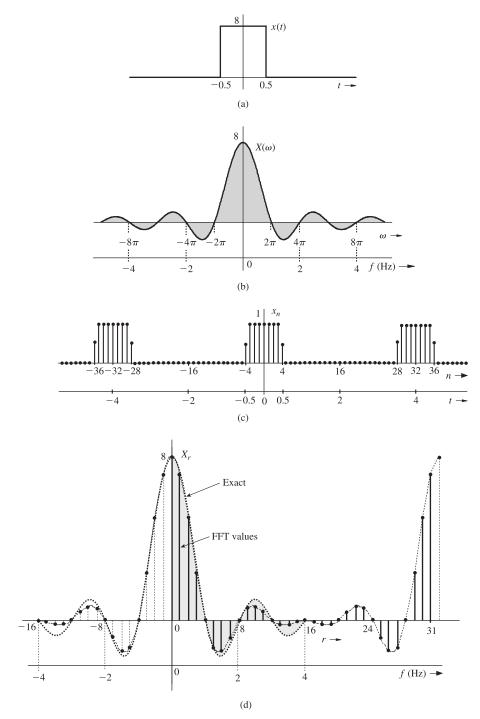


Figure 8.19 Discrete Fourier transform of a gate pulse.

816

Observe that the last sample is at t = 31/8, not at 4, because the signal repetition starts at t = 4, and the sample at t = 4 is the same as the sample at t = 0. Now,  $N_0 = 32$  and  $\Omega_0 = 2\pi/32 = \pi/16$ . Therefore [see Eq. (8.12)],

$$X_r = \sum_{n=0}^{31} x_n e^{-jr(\pi/16)n}$$

Values of  $X_r$  are computed according to this equation and plotted in Fig. 8.19d.

The samples  $X_r$  are separated by  $f_0 = 1/T_0$  Hz. In this case  $T_0 = 4$ , so the frequency resolution  $f_0$  is 1/4 Hz, as desired. The folding frequency  $f_s/2 = B = 4$  Hz corresponds to  $r = N_0/2 = 16$ . Because  $X_r$  is  $N_0$  periodic ( $N_0 = 32$ ), the values of  $X_r$  for r = -16 to n = -1 are the same as those for r = 16 to n = 31. For instance,  $X_{17} = X_{-15}$ ,  $X_{18} = X_{-14}$ , and so on. The DFT gives us the samples of the spectrum  $X(\omega)$ .

For the sake of comparison, Fig. 8.19d also shows the shaded curve  $8 \operatorname{sinc}(\omega/2)$ , which is the Fourier transform of  $8 \operatorname{rect}(t)$ . The values of  $X_r$  computed from the DFT equation show aliasing error, which is clearly seen by comparing the two superimposed plots. The error in  $X_2$  is just about 1.3%. However, the aliasing error increases rapidly with r. For instance, the error in  $X_6$  is about 12%, and the error in  $X_{10}$  is 33%. The error in  $X_{14}$  is a whopping 72%. The percent error increases rapidly near the folding frequency (r = 16) because x(t)has a jump discontinuity, which makes  $X(\omega)$  decay slowly as  $1/\omega$ . Hence, near the folding frequency, the inverted tail (due to aliasing) is very nearly equal to  $X(\omega)$  itself. Moreover, the final values are the difference between the exact and the folded values (which are very close to the exact values). Hence, the percent error near the folding frequency (r = 16 in this case) is very high, although the absolute error is very small. Clearly, for signals with jump discontinuities, the aliasing error near the folding frequency will always be high (in percentage terms), regardless of the choice of  $N_0$ . To ensure a negligible aliasing error at any value r, we must make sure that  $N_0 \gg r$ . This observation is valid for all signals with jump discontinuities.

#### USING MATLAB TO COMPUTE AND PLOT THE RESULTS

Once again, MATLAB lets us easily confirm the results of this example. First, parameters are defined and MATLAB's fft command is used to compute the DFT.

>> T\_0 = 4; N\_0 = 32; T = T\_0/N\_0; >> x\_n = [ones(1,4) 0.5 zeros(1,23) 0.5 ones(1,3)]'; >> X\_r = fft(x\_n); r = [-N\_0/2:N\_0/2-1]'; omega\_r = r\*2\*pi/T\_0;

The true Fourier transform is also computed for comparison.

>> omega = linspace(-pi/T,pi/T,5001); X = 8\*sinc(omega/(2\*pi));

Since it is real, we can display the resulting spectrum using a single plot.


>> clf; stem(omega\_r,fftshift(real(X\_r)),'k.');
>> line(omega,X,'color',[0 0 0]);

817

## 818 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

>> xlabel('\omega'); ylabel('X(\omega)'); axis tight

The result, shown in Fig. 8.20, matches the earlier result shown in Fig. 8.19d. The DFT approximation does not perfectly follow the true Fourier transform, especially at high frequencies, because the parameter B is deliberately set too small.

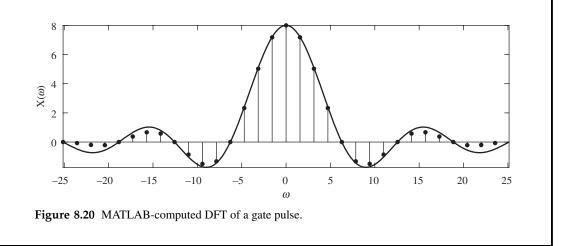

# 8.5-1 Some Properties of the DFT

The discrete Fourier transform is basically the Fourier transform of a sampled signal repeated periodically. Hence, the properties derived earlier for the Fourier transform apply to the DFT as well.

LINEARITY If  $x_n \iff X_r$  and  $g_n \iff G_r$ , then

$$a_1x_n + a_2g_n \iff a_1X_r + a_2G_r$$

The proof is trivial.

# CONJUGATE SYMMETRY

From the conjugation property  $x^*(t) \iff X^*(-\omega)$ , we have

 $x_n^* \longleftrightarrow X_{-r}^*$ 

From this equation and the time-reversal property, we obtain

 $x_{-n}^* \longleftrightarrow X_r^*$ 

When x(t) is real, then the conjugate-symmetry property states that  $X^*(\omega) = X(-\omega)$ . Hence, for real  $x_n$ ,

$$X_r^* = X_{-r}$$

Moreover,  $X_r$  is  $N_0$  periodic. Hence,

$$X_r^* = X_{N_0-r}$$

Because of this property, we need compute only half the DFTs for real  $x_n$ . The other half are the conjugates.

### TIME SHIFTING

The time-shifting (circular shifting) property states<sup>†</sup>

$$x_{n-k} \iff X_r e^{-jr\Omega_0 k}$$

**Proof.** We use Eq. (8.13) to find the inverse DFT of  $X_r e^{-jr\Omega_0 k}$  as

$$\frac{1}{N_0} \sum_{r=0}^{N_0-1} X_r e^{-jr\Omega_0 k} e^{jr\omega_0 n} = \frac{1}{N_0} \sum_{r=0}^{N_0-1} X_r e^{jr\Omega_0 (n-k)} = x_{n-k}$$

# FREQUENCY SHIFTING

A dual of the time-shifting property, the frequency-shifting property states

$$x_n e^{jn\Omega_0 m} \iff X_{r-m}$$

**Proof.** This proof is identical to that of the time-shifting property except that we start with Eq. (8.12).

### CIRCULAR CONVOLUTION

The circular (or periodic) convolution property states

$$x_n \circledast g_n \Longleftrightarrow X_r G_r \tag{8.18}$$

and

$$x_n g_n \longleftrightarrow \frac{1}{N_0} X_r \circledast G_r \tag{8.19}$$

For two  $N_0$ -periodic sequences  $x_n$  and  $g_n$ , circular (or periodic) convolution is defined by

$$x_n \circledast g_n = \sum_{k=0}^{N_0 - 1} x_k g_{n-k} = \sum_{k=0}^{N_0 - 1} g_k x_{n-k}$$
(8.20)

<sup>&</sup>lt;sup>†</sup> Time shifting is also known as *circular shifting* because such a shift can be interpreted as a circular shift of the  $N_0$  samples in the first cycle  $0 \le n \le N_0 - 1$ .

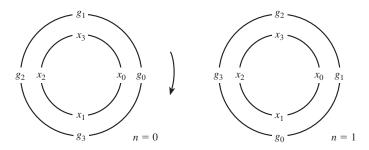


Figure 8.21 Graphical depictions of circular convolution.

To prove Eq. (8.18), we find the DFT of the circular convolution  $x_n \circledast g_n$  as

$$\sum_{n=0}^{N_0-1} \left( \sum_{k=0}^{N_0-1} x_k g_{n-k} \right) e^{-jr\omega_0 n} = \sum_{k=0}^{N_0-1} x_k \left( \sum_{n=0}^{N_0-1} g_{n-k} e^{-jr\omega_0 n} \right)$$
$$= \sum_{k=0}^{N_0-1} x_k (G_r e^{-jr\Omega_0 k}) = X_r G_r$$

Equation (8.19) can be proved in the same way.

For periodic sequences, the convolution can be visualized in terms of two sequences, with one sequence fixed and the other inverted and moved past the fixed sequence, one digit at a time. If the two sequences are  $N_0$  periodic, the same configuration will repeat after  $N_0$  shifts of the sequence. Clearly the convolution  $x_n \circledast g_n$  becomes  $N_0$  periodic. Such convolution can be conveniently visualized in terms of  $N_0$  sequences, as illustrated in Fig. 8.21, for the case of  $N_0 = 4$ . The inner  $N_0$ -point sequence  $x_n$  is clockwise and fixed. The outer  $N_0$ -point sequence  $g_n$  is inverted so that it becomes counterclockwise. This sequence is now rotated clockwise 1 unit at a time. We multiply the overlapping numbers and add. For example, the value of  $x_n \circledast g_n$  at n = 0 (Fig. 8.21) is

$$x_0g_0 + x_1g_3 + x_2g_2 + x_3g_1$$

and the value of  $x_n \circledast g_n$  at n = 1 is (Fig. 8.21)

$$x_0g_1 + x_1g_0 + x_2g_3 + x_3g_2$$

and so on.

## 8.5-2 Some Applications of the DFT

The DFT is useful not only in the computation of direct and inverse Fourier transforms, but also in other applications such as convolution, correlation, and filtering. Use of the efficient FFT algorithm, discussed shortly (Sec. 8.6), makes it particularly appealing.

#### LINEAR CONVOLUTION

Let x(t) and g(t) be the two signals to be convolved. In general, these signals may have different time durations. To convolve them by using their samples, they must be sampled at the same rate (not below the Nyquist rate of either signal). Let  $x_n$  ( $0 \le n \le N_1 - 1$ ) and  $g_n$  ( $0 \le n \le N_2 - 1$ ) be the corresponding discrete sequences representing these samples. Now,

$$c(t) = x(t) * g(t)$$

and if we define three sequences as  $x_n = Tx(nT)$ ,  $g_n = Tg(nT)$ , and  $c_n = Tc(nT)$ , then<sup>†</sup>

$$c_n = x_n * g_n$$

where we define the linear convolution sum of two discrete sequences  $x_n$  and  $g_n$  as

$$c_n = x_n * g_n = \sum_{k=-\infty}^{\infty} x_k g_{n-k}$$


Because of the width property of the convolution,  $c_n$  exists for  $0 \le n \le N_1 + N_2 - 1$ . To be able to use the DFT circular convolution technique, we must make sure that the circular convolution will yield the same result as does linear convolution. In other words, the signal resulting from the circular convolution must have the same length  $(N_1 + N_2 - 1)$  as that of the signal resulting from linear convolution. This step can be accomplished by adding  $N_2 - 1$  dummy samples of zero value to  $x_n$ and  $N_1 - 1$  dummy samples of zero value to  $g_n$  (zero padding). This procedure changes the length of both  $x_n$  and  $g_n$  to  $N_1 + N_2 - 1$ . The circular convolution now is identical to the linear convolution except that it repeats periodically with period  $N_1 + N_2 - 1$ . A little reflection will show that in such a case the circular convolution procedure in Fig. 8.21 over one cycle ( $0 \le n \le N_1 + N_2 - 1$ ) is identical to the linear convolution of the two sequences  $x_n$  and  $g_n$ . We can use the DFT to find the convolution  $x_n * g_n$  in three steps, as follows:

- 1. Find the DFTs  $X_r$  and  $G_r$  corresponding to suitably padded  $x_n$  and  $g_n$ .
- 2. Multiply  $X_r$  by  $G_r$ .
- 3. Find the IDFT of  $X_rG_r$ . This procedure of convolution, when implemented by the fast Fourier transform algorithm (discussed later), is known as *fast convolution*.

#### FILTERING

We generally think of filtering in terms of a hardware-oriented solution (e.g., building a circuit with *RLC* components and operational amplifiers). However, filtering also has a software-oriented solution [a computer algorithm that yields the filtered output y(t) for a given input x(t)]. This goal can be conveniently accomplished by using the DFT. If x(t) is the signal to be filtered, then  $X_r$ , the DFT of  $x_n$ , is found. The spectrum  $X_r$  is then shaped (filtered) as desired by multiplying  $X_r$  by  $H_r$ , where  $H_r$  are the samples of  $H(\omega)$  for the filter [ $H_r = H(r\omega_0)$ ]. Finally, we take the IDFT of  $X_rH_r$  to obtain the filtered output  $y_n[y_n = Ty(nT)]$ . This procedure is demonstrated in the following example.

<sup>&</sup>lt;sup>†</sup> We can show that  $c_n = \lim_{T \to 0} x_n * g_n$ ; [see 4]. Error is inherent in any numerical method used to compute convolution of continuous-time signals; since  $T \neq 0$  in practice, there will be some error in this equation.

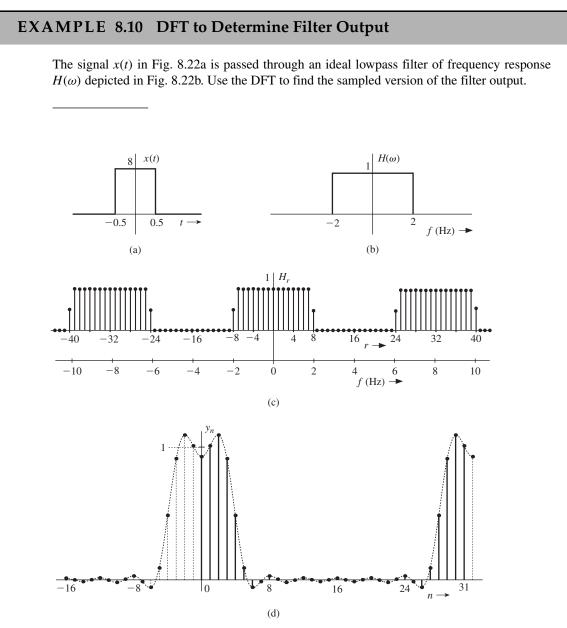

**Figure 8.22** DFT solution for filtering x(t) through  $H(\omega)$ .

We have already found the 32-point DFT of x(t) (see Fig. 8.19d). Next we multiply  $X_r$  by  $H_r$ . To find  $H_r$ , we recall using  $f_0 = 1/4$  in computing the 32-point DFT of x(t). Because  $X_r$  is 32-periodic,  $H_r$  must also be 32-periodic with samples separated by 1/4 Hz. This fact means

that  $H_r$  must be repeated every 8 Hz or 16 $\pi$  rad/s (see Fig. 8.22c). The resulting 32 samples of  $H_r$  over ( $0 \le \omega \le 16\pi$ ) are as follows:

$$H_r = \begin{cases} 1 & 0 \le r \le 7 & \text{and} & 25 \le r \le 31 \\ 0 & 9 \le r \le 23 \\ 0.5 & r = 8,24 \end{cases}$$

We multiply  $X_r$  with  $H_r$ . The desired output signal samples  $y_n$  are found by taking the inverse DFT of  $X_rH_r$ . The resulting output signal is illustrated in Fig. 8.22d.

It is quite simple to verify the results of this filtering example using MATLAB. First, parameters are defined, and MATLAB's fft command is used to compute the DFT of  $x_n$ .

>> T\_0 = 4; N\_0 = 32; T = T\_0/N\_0; n = (0:N\_0-1); r = n; >> x\_n = [ones(1,4) 0.5 zeros(1,23) 0.5 ones(1,3)]'; X\_r = fft(x\_n);

The DFT of the filter's output is just the product of the filter response  $H_r$  and the input DFT  $X_r$ . The output  $y_n$  is obtained using the ifft command and then plotted.

```
>> H_r = [ones(1,8) 0.5 zeros(1,15) 0.5 ones(1,7)]';
>> Y_r = H_r.*X_r; y_n = ifft(Y_r);
>> clf; stem(n,real(y_n),'k.');
>> xlabel('n'); ylabel('y_n'); axis([0 31 -.1 1.1]);
```

The result, shown in Fig. 8.23, matches the earlier result shown in Fig. 8.22d. Recall, this DFT-based approach shows the samples  $y_n$  of the filter output y(t) (sampled in this case at a rate  $T = \frac{1}{8}$ ) over  $0 \le n \le N_0 - 1 = 31$  when the input pulse x(t) is periodically replicated to form samples  $x_n$  (see Fig. 8.19c).

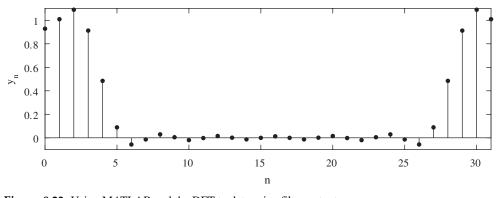


Figure 8.23 Using MATLAB and the DFT to determine filter output.

# **8.6 THE FAST FOURIER TRANSFORM (FFT)**

The number of computations required in performing the DFT was dramatically reduced by an algorithm developed by Cooley and Tukey in 1965 [5]. This algorithm, known as the *fast Fourier* transform (FFT), reduces the number of computations from something on the order of  $N_0^2$  to  $N_0 \log N_0$ . To compute one sample  $X_r$  from Eq. (8.12), we require  $N_0$  complex multiplications and  $N_0 - 1$  complex additions. To compute  $N_0$  such values ( $X_r$  for  $r = 0, 1, ..., N_0 - 1$ ), we require a total of  $N_0^2$  complex multiplications and  $N_0(N_0 - 1)$  complex additions. For a large  $N_0$ , these computations can be prohibitively time-consuming, even for a high-speed computer. The FFT algorithm is what made the use of Fourier transform accessible for digital signal processing.

#### HOW DOES THE FFT REDUCE THE NUMBER OF COMPUTATIONS?

It is easy to understand the magic of the FFT. The secret is in the linearity of the Fourier transform and also of the DFT. Because of linearity, we can compute the Fourier transform of a signal x(t) as a sum of the Fourier transforms of segments of x(t) of shorter duration. The same principle applies to the computation of the DFT. Consider a signal of length  $N_0 = 16$  samples. As seen earlier, DFT computation of this sequence requires  $N_0^2 = 256$  multiplications and  $N_0(N_0 - 1) = 240$  additions. We can split this sequence into two shorter sequences, each of length 8. To compute DFT of each of these segments, we need 64 multiplications and 56 additions. Thus, we need a total of 128 multiplications and 112 additions. Suppose, we split the original sequence in four segments of length 4 each. To compute the DFT of each segment, we require 16 multiplications and 12 additions. Hence, we need a total of 64 multiplications and 48 additions. If we split the sequence in eight segments of length 2 each, we need 4 multiplications and 2 additions for each segment, resulting in a total of 32 multiplications and 8 additions. Thus, we have been able to reduce the number of multiplications from 256 to 32 and the number of additions from 240 to 8. Moreover, some of these multiplications turn out to be multiplications by 1 or -1. All this fantastic economy in the number of computations is realized by the FFT without any approximation! The values obtained by the FFT are identical to those obtained by the DFT. In this example, we considered a relatively small value of  $N_0 = 16$ . The reduction in the number of computations is much more dramatic for higher values of  $N_0$ .

The FFT algorithm is simplified if we choose  $N_0$  to be a power of 2, although such a choice is not essential. For convenience, we define

$$W_{N_0} = e^{-(j2\pi/N_0)} = e^{-j\Omega_0}$$

so that

$$X_r = \sum_{n=0}^{N_0 - 1} x_n W_{N_0}^{nr} \qquad 0 \le r \le N_0 - 1$$
(8.21)

and

$$x_n = \frac{1}{N_0} \sum_{r=0}^{N_0 - 1} X_r W_{N_0}^{-nr} \qquad 0 \le n \le N_0 - 1$$
(8.22)

Although there are many variations of the Tukey–Cooley algorithm, these can be grouped into two basic types: *decimation in time* and *decimation in frequency*.

#### THE DECIMATION-IN-TIME ALGORITHM

Here we divide the  $N_0$ -point data sequence  $x_n$  into two  $(N_0/2)$ -point sequences consisting of evenand odd-numbered samples, respectively, as follows:

$$\underbrace{x_{0,x_{2},x_{4},\ldots,x_{N_{0}-2}}_{\text{sequence }g_{n}},\underbrace{x_{1,x_{3},x_{5},\ldots,x_{N_{0}-1}}_{\text{sequence }h_{n}}}_{\text{sequence }h_{n}}$$

Then, from Eq. (8.21),

$$X_r = \sum_{n=0}^{(N_0/2)-1} x_{2n} W_{N_0}^{2nr} + \sum_{n=0}^{(N_0/2)-1} x_{2n+1} W_{N_0}^{(2n+1)r}$$

Also, since

$$W_{N_0/2} = W_{N_0}^2$$

we have

$$X_{r} = \sum_{n=0}^{(N_{0}/2)-1} x_{2n} W_{N_{0}/2}^{nr} + W_{N_{0}}^{r} \sum_{n=0}^{(N_{0}/2)-1} x_{2n+1} W_{N_{0}/2}^{nr}$$
  
=  $G_{r} + W_{N_{0}}^{r} H_{r}$   $0 \le r \le N_{0} - 1$  (8.23)

where  $G_r$  and  $H_r$  are the  $(N_0/2)$ -point DFTs of the even- and odd-numbered sequences,  $g_n$  and  $h_n$ , respectively. Also,  $G_r$  and  $H_r$ , being the  $(N_0/2)$ -point DFTs, are  $(N_0/2)$  periodic. Hence,

$$G_{r+(N_0/2)} = G_r$$
 and  $H_{r+(N_0/2)} = H_r$  (8.24)

Moreover,

$$W_{N_0}^{r+(N_0/2)} = W_{N_0}^{N_0/2} W_{N_0}^r = e^{-j\pi} W_{N_0}^r = -W_{N_0}^r$$
(8.25)


From Eqs. (8.23), (8.24), and (8.25), we obtain

$$X_{r+(N_0/2)} = G_r - W_{N_0}^r H_r aga{8.26}$$

This property can be used to reduce the number of computations. We can compute the first  $N_0/2$  points  $(0 \le n \le (N_0/2) - 1)$  of  $X_r$  by using Eq. (8.23) and the last  $N_0/2$  points by using Eq. (8.26) as

$$X_r = G_r + W_{N_0}^r H_r \qquad 0 \le r \le \frac{N_0}{2} - 1$$
  

$$X_{r+(N_0/2)} = G_r - W_{N_0}^r H_r \qquad 0 \le r \le \frac{N_0}{2} - 1$$
(8.27)

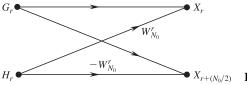



826

CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

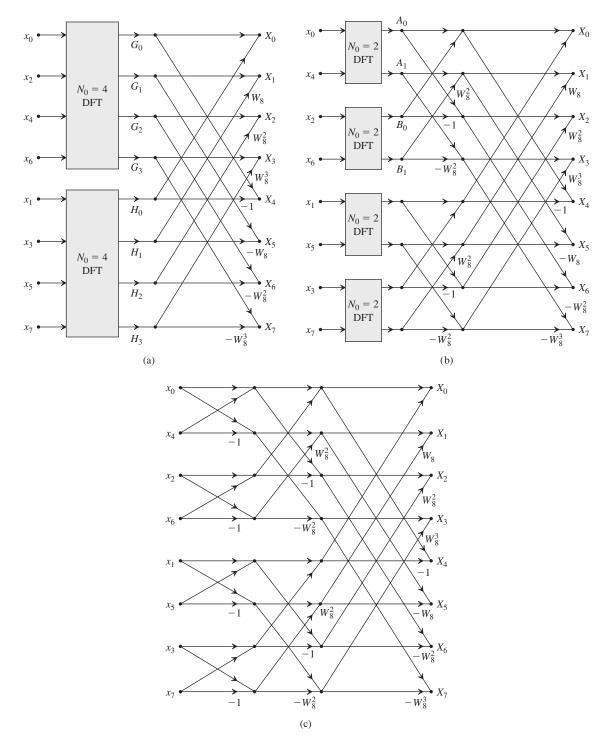


Figure 8.25 Successive steps in an 8-point FFT.

Thus, an  $N_0$ -point DFT can be computed by combining the two  $(N_0/2)$ -point DFTs, as in Eq. (8.27). These equations can be represented conveniently by the *signal flow* graph depicted in Fig. 8.24. This structure is known as a *butterfly*. Figure 8.25a shows the implementation of Eq. (8.24) for the case of  $N_0 = 8$ .

The next step is to compute the  $(N_0/2)$ -point DFTs  $G_r$  and  $H_r$ . We repeat the same procedure by dividing  $g_n$  and  $h_n$  into two  $(N_0/4)$ -point sequences corresponding to the even- and odd-numbered samples. Then we continue this process until we reach the one-point DFT. These steps for the case of  $N_0 = 8$  are shown in Figs. 8.25a, 8.25b, and 8.25c. Figure 8.25c shows that the two-point DFTs require no multiplication.

To count the number of computations required in the first step, assume that  $G_r$  and  $H_r$  are known. Equation (8.27) clearly shows that to compute all the  $N_0$  points of the  $X_r$ , we require  $N_0$  complex additions and  $N_0/2$  complex multiplications<sup>†</sup> (corresponding to  $W_{N_0}^r H_r$ ).

In the second step, to compute the  $(N_0/2)$ -point DFT  $G_r$  from the  $(N_0/4)$ -point DFT, we require  $N_0/2$  complex additions and  $N_0/4$  complex multiplications. We require an equal number of computations for  $H_r$ . Hence, in the second step, there are  $N_0$  complex additions and  $N_0/2$  complex multiplications. The number of computations required remains the same in each step. Since a total of  $\log_2 N_0$  steps is needed to arrive at a one-point DFT, we require, conservatively, a total of  $N_0 \log_2 N_0$  complex additions and  $(N_0/2) \log_2 N_0$  complex multiplications, to compute the  $N_0$ -point DFT. Actually, as Fig. 8.25c shows, many multiplications are multiplications by 1 or -1, which further reduces the number of computations.

The procedure for obtaining IDFT is identical to that used to obtain the DFT except that  $W_{N_0} = e^{i(2\pi/N_0)}$  instead of  $e^{-j(2\pi/N_0)}$  (in addition to the multiplier  $1/N_0$ ). Another FFT algorithm, the *decimation-in-frequency* algorithm, is similar to the decimation-in-time algorithm. The only difference is that instead of dividing  $x_n$  into two sequences of even- and odd-numbered samples, we divide  $x_n$  into two sequences formed by the first  $N_0/2$  and the last  $N_0/2$  samples, proceeding in the same way until a single-point DFT is reached in  $\log_2 N_0$  steps. The total number of computations in this algorithm is the same as that in the decimation-in-time algorithm.

# **8.7 MATLAB: THE DISCRETE FOURIER TRANSFORM**

As an idea, the discrete Fourier transform (DFT) has been known for hundreds of years. Practical computing devices, however, are responsible for bringing the DFT into common use. MATLAB is capable of DFT computations that would have been impractical just a few decades ago.

#### 8.7-1 Computing the Discrete Fourier Transform

The MATLAB command fft(x) computes the DFT of a vector x that is defined over  $(0 \le n \le N_0 - 1)$  (Problem 8.7-1 considers how to scale the DFT to accommodate signals that do not begin at n = 0.) As its name suggests, the function fft uses the computationally more efficient fast Fourier transform algorithm when it is appropriate to do so. The inverse DFT is easily computed by using the ifft function.

<sup>&</sup>lt;sup>†</sup> Actually,  $N_0/2$  is a conservative figure because some multiplications corresponding to the cases of  $W_{N_0}^r = 1, j$ , and so on, are eliminated.

To illustrate MATLAB's DFT capabilities, consider 50 points of a 10 Hz sinusoid sampled at  $f_s = 50$  Hz and scaled by  $T = 1/f_s$ .

```
>> T = 1/50; N_0 = 50; n = (0:N_0-1);
>> x = T*cos(2*pi*10*n*T);
```

In this case, the vector x contains exactly 10 cycles of the sinusoid. The fft command computes the DFT.

>> X = fft(x);

Since the DFT is both discrete and periodic, fft needs to return only the  $N_0$  discrete values contained in the single period  $(0 \le f < f_s)$ .

While  $X_r$  can be plotted as a function of r, it is more convenient to plot the DFT as a function of frequency f. A frequency vector, in hertz, is created by using  $N_0$  and T.

>> f = (0:N\_0-1)/(T\*N\_0); stem(f,abs(X),'k.');
>> axis([0 50 -0.05 0.55]); xlabel('f [Hz]'); ylabel('|X(f)|');

As expected, Fig. 8.26 shows content at a frequency of 10 Hz. Since the time-domain signal is real, X(f) is conjugate symmetric. Thus, content at 10 Hz implies equal content at -10 Hz. The content visible at 40 Hz is an alias of the -10 Hz content.


Often, it is preferred to plot a DFT over the principal frequency range  $(-f_s/2 \le f < f_s/2)$ . The MATLAB function fftshift properly rearranges the output of fft to accomplish this task.

```
>> stem(f-1/(T*2),fftshift(abs(X)),'k.');
>> axis([-25 25 -0.05 0.55]); xlabel('f [Hz]'); ylabel('|X(f)|');
```


When we use fftshift, the conjugate symmetry that accompanies the DFT of a real signal becomes apparent, as shown in Fig. 8.27.

Since DFTs are generally complex-valued, the magnitude plots of Figs. 8.26 and 8.27 offer only half the picture; the signal's phase spectrum, shown in Fig. 8.28, completes it.


```
>> stem(f-1/(T*2),fftshift(angle(X)),'k.');
>> axis([-25 25 -1.1*pi 1.1*pi]); xlabel('f [Hz]'); ylabel('\angle X(f)');
```

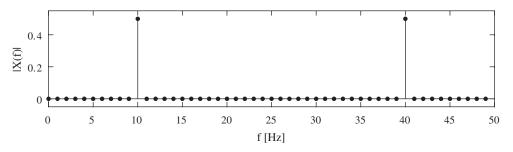

**Figure 8.26** |X(f)| computed over  $(0 \le f < 50)$  by using fft.

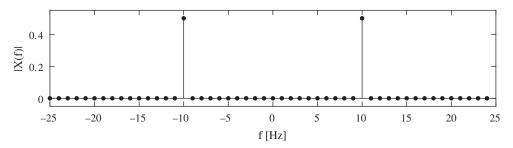

**Figure 8.27** |X(f)| displayed over  $(-25 \le f < 25)$  by using fftshift.

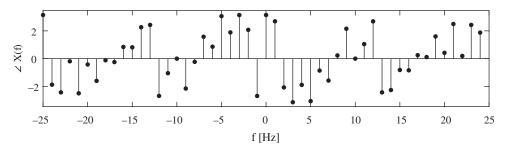

**Figure 8.28**  $\angle X(f)$  displayed over  $(-25 \le f < 25)$ .

Since the signal is real, the phase spectrum necessarily has odd symmetry. Additionally, the phase at  $\pm 10$  Hz is zero, as expected for a zero-phase cosine function. More interesting, however, are the phase values found at the remaining frequencies. Does a simple cosine really have such complicated phase characteristics? The answer, of course, is no. The magnitude plot of Fig. 8.27 helps identify the problem: there is zero content at frequencies other than  $\pm 10$  Hz. Phase computations are not reliable at points where the magnitude response is zero. One way to remedy this problem is to assign a phase of zero when the magnitude response is near or at zero.


## 8.7-2 Improving the Picture with Zero Padding

DFT magnitude and phase plots paint a picture of a signal's spectrum. At times, however, the picture can be somewhat misleading. Given a sampling frequency  $f_s = 50$  Hz and a sampling interval  $T = 1/f_s$ , consider the signal


$$v[n] = Te^{j2\pi (10\frac{1}{3})nT}$$

This complex-valued, periodic signal contains a single positive frequency at  $10\frac{1}{3}$  Hz. Let us compute the signal's DFT using 50 samples.

```
>> y = T*exp(j*2*pi*(10+1/3)*n*T); Y = fft(y);
>> stem(f-25,fftshift(abs(Y)),'k.');
>> axis([-25 25 -0.05 1.05]); xlabel('f [Hz]'); ylabel('|Y(f)|');
```

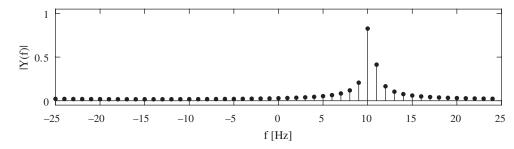

**Figure 8.29** |Y(f)| using 50 data points.

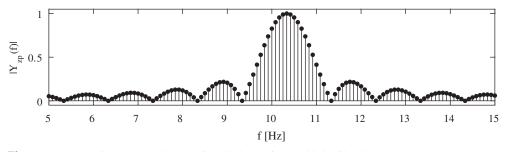

**Figure 8.30**  $|Y_{zp}(f)|$  over  $5 \le f \le 15$  using 50 data points padded with 550 zeros.

In this case, the vector y contains a noninteger number of cycles. Figure 8.29 shows the significant frequency leakage that results. Also notice that since y[n] is not real, the DFT is not conjugate symmetric.

In this example, the discrete DFT frequencies do not include the actual  $10\frac{1}{3}$  Hz frequency of the signal. Thus, it is difficult to determine the signal's frequency from Fig. 8.29. To improve the picture, the signal is zero-padded to 12 times its original length.

```
>> y_zp = [y,zeros(1,11*length(y))]; Y_zp = fft(y_zp);
>> f_zp = (0:12*N_0-1)/(T*12*N_0);
>> stem(f_zp-25,fftshift(abs(Y_zp)),'k.');
>> axis([-25 25 -0.05 1.05]); xlabel('f [Hz]'); ylabel('|Y_{zp}(f)|');
```

Figure 8.30, zoomed in to  $5 \le f \le 15$ , correctly shows the peak frequency at  $10\frac{1}{3}$  Hz and better represents the signal's spectrum.

It is important to keep in mind that zero padding does not increase the resolution or accuracy of the DFT. To return to the picket fence analogy, zero padding increases the number of pickets in our fence but cannot change what is behind the fence. More formally, the characteristics of the sinc function, such as main beam width and sidelobe levels, depend on the fixed width of the pulse, not on the number of zeros that follow. Adding zeros cannot change the characteristics of the sinc function and thus cannot change the resolution or accuracy of the DFT. Adding zeros simply allows the sinc function to be sampled more finely.

#### 8.7-3 Quantization

A *B*-bit analog-to-digital converter (ADC) samples an analog signal and quantizes amplitudes by using  $2^B$  discrete levels. This quantization results in signal distortion that is particularly noticeable for small *B*. Typically, quantization is classified as symmetric or asymmetric and as either rounding or truncating. Let us investigate rounding-type quantizers.

The quantized output  $x_q$  of an asymmetric rounding converter is given as<sup>†</sup>

$$x_{q} = \frac{x_{\max}}{2^{B-1}} \lfloor \frac{x}{x_{\max}} 2^{B-1} + \frac{1}{2} \rfloor$$

The quantized output  $x_q$  of a symmetric rounding converter is given as

$$x_{q} = \frac{x_{\max}}{2^{B-1}} \left( \lfloor \frac{x}{x_{\max}} 2^{B-1} \rfloor + \frac{1}{2} \right)$$

Program CH8MP1 quantizes a signal using one of these two rounding quantizer rules and also ensures no more than  $2^{B}$  output levels.

```
function [xq] = CH8MP1(x,xmax,B,method)
% CH8MP1.m : Chapter 8, MATLAB Program 1
% Function M-file quantizes x over (-xmax,xmax) using 2<sup>b</sup> levels.
% Uses rounding rule, supports symmetric and asymmetric quantization
% INPUTS:
            x = input signal
%
            xmax = maximum magnitude of signal to be quantized
%
            B = number of quantization bits
%
            method = default 'sym' for symmetrical, 'asym' for asymmetrical
% OUTPUTS: xq = quantized signal
if (nargin<3),
    disp('Insufficient number of inputs.'); return
elseif (nargin==3),
    method = 'sym';
elseif (nargin>4),
    disp('Too many inputs.'); return
end
x(abs(x)>xmax)=xmax*sign(x(abs(x)>xmax)); % Limit amplitude to xmax
switch lower(method)
    case 'asym'
        xq = xmax/(2^{(B-1)})*floor(x*2^{(B-1)}/xmax+1/2);
        xq(xq>=xmax)=xmax*(1-2^{(1-B)});
                                        % Ensure only 2^B levels
    case 'sym'
        xq = xmax/(2^{(B-1)})*(floor(x*2^{(B-1)}/xmax)+1/2);
        xq(xq>=xmax)=xmax*(1-2^(1-B)/2); % Ensure only 2^B levels
```

<sup>&</sup>lt;sup>†</sup> Large values of x may return quantized values  $x_q$  outside the  $2^B$  allowable levels. In such cases,  $x_q$  should be clamped to the nearest permitted level.

```
otherwise
disp('Unrecognized quantization method.'); return
```

end

Several MATLAB commands require discussion. First, the nargin function returns the number of input arguments. In this program, nargin is used to ensure that a correct number of inputs is supplied. If the number of inputs supplied is incorrect, an error message is displayed and the function terminates. If only three input arguments are detected, the quantization type is not explicitly specified and the program assigns the default symmetric method.

As with many high-level languages such as C, MATLAB supports general switch/case structures  $^{\dagger}$ :

```
switch switch_expr,
case case_expr,
    statements;
...
otherwise,
    statements;
```

end

CH8MP1 switches among cases of the string method. In this way, method-specific parameters are easily set. The command lower is used to convert a string to all lowercase characters. In this way, strings such as SYM, Sym, and sym are all indistinguishable. Similar to lower, the MATLAB command upper converts a string to all uppercase.

The floor command rounds input values to the nearest integer toward minus infinity. Mathematically, it computes  $\lfloor \cdot \rfloor$ . To accommodate different types of rounding, MATLAB supplies three other rounding commands: ceil, round, and fix. The ceil command rounds input values to the nearest integers toward infinity, ([\cdot]); the round command rounds input values toward the nearest integer; the fix command rounds input values to the nearest integer toward zero. For example, if  $x = \lfloor -0.5 \ 0.5 \rfloor$ ; floor(x) yields [-1 0], ceil(x) yields [0 1], round(x) yields [-1 1], and fix(x) yields [0 0]. Finally, CH8MP1 checks and, if necessary, corrects large values of  $x_a$  that may be outside the allowable  $2^B$  levels.

To verify operation, CH8MP1 is used to determine the transfer characteristics of a symmetric 3-bit quantizer operating over (-10,10).

```
>> x = (-10:.0001:10); xsq = CH8MP1(x,10,3,'sym');
```

```
>> plot(x,xsq,'k'); axis([-10 10 -10.5 10.5]); grid on;
```

>> xlabel('Quantizer input'); ylabel('Quantizer output');

Figure 8.31 shows the results. Clearly, the quantized output is limited to  $2^B = 8$  levels. Zero is not a quantization level for symmetric quantizers, so half of the levels occur above zero and half of the levels occur below zero. In fact, *symmetric quantizers* get their name from the symmetry in quantization levels above and below zero.

By changing the method in CH8MP1 from 'sym' to 'asym', we obtain the transfer characteristics of an asymmetric 3-bit quantizer, as shown in Fig. 8.32. Again, the quantized output is limited to  $2^{B} = 8$  levels, and zero is now one of the included levels. With zero as a quantization

<sup>&</sup>lt;sup>†</sup> A functionally equivalent structure can be written by using if, elseif, and else statements.

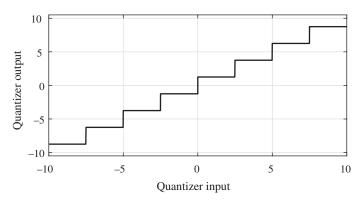


Figure 8.31 Transfer characteristics of a symmetric 3-bit quantizer.

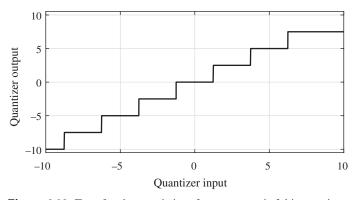


Figure 8.32 Transfer characteristics of an asymmetric 3-bit quantizer.

level, we need one fewer quantization level above zero than there are levels below. Not surprisingly, *asymmetric quantizers* get their name from the asymmetry in quantization levels above and below zero.

There is no doubt that quantization can change a signal. It follows that the spectrum of a quantized signal can also change. While these changes are difficult to characterize mathematically, they are easy to investigate by using MATLAB. Consider a 1 Hz cosine sampled at  $f_s = 50$  Hz over 1 second.

>> x = cos(2\*pi\*n\*T); X = fft(x); T = 1/50; N\_0 = 50; n = (0:N\_0-1);

Upon quantizing by means of a 2-bit asymmetric rounding quantizer, both the signal and spectrum are substantially changed.

```
>> xaq = CH8MP1(x,1,2,'asym'); Xaq = fft(xaq);
>> subplot(2,2,1); stem(n,x,'k'); axis([0 49 -1.1 1.1]);
>> xlabel('n');ylabel('x[n]');
>> subplot(2,2,2); stem(f-25,fftshift(abs(X)),'k'); axis([-25,25 -1 26])
>> xlabel('f');ylabel('|X(f)|');
>> subplot(2,2,3); stem(n,xaq,'k');axis([0 49 -1.1 1.1]);
```

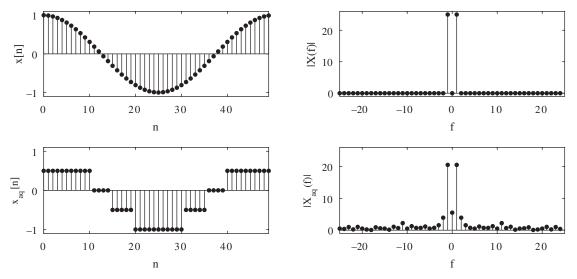


Figure 8.33 Signal and spectrum effects of quantization.

```
>> xlabel('n');ylabel('x_{aq}[n]');
```

```
>> subplot(2,2,4); stem(f-25,fftshift(abs(fft(xaq))),'k'); axis([-25,25 -1 26]);
```

```
>> xlabel('f');ylabel('|X_{aq}(f)|');
```

The results are shown in Fig. 8.33. The original signal x[n] appears sinusoidal and has pure spectral content at  $\pm 1$  Hz. The asymmetrically quantized signal  $x_{aq}[n]$  is significantly distorted. The corresponding magnitude spectrum  $|X_{aq}(f)|$  is spread over a broad range of frequencies.

# 8.8 SUMMARY

A signal bandlimited to *B* Hz can be reconstructed exactly from its samples if the sampling rate  $f_s > 2B$  Hz (the sampling theorem). Such a reconstruction, although possible theoretically, poses practical problems such as the need for ideal filters, which are unrealizable or are realizable only with infinite delay. Therefore, in practice, there is always an error in reconstructing a signal from its samples. Moreover, practical signals are not bandlimited, which causes an additional error (aliasing error) in signal reconstruction from its samples. When a signal is sampled at a frequency  $f_s$  Hz, samples of a sinusoid of frequency  $(f_s/2) + x$  Hz appear as samples of a lower frequency  $(f_s/2) - x$  Hz. This phenomenon, in which higher frequencies appear as lower frequencies, is known as aliasing. Aliasing error can be reduced by bandlimiting a signal to  $f_s/2$ Hz (half the sampling frequency). Such bandlimiting, done prior to sampling, is accomplished by an anti-aliasing filter that is an ideal lowpass filter of cutoff frequency  $f_s/2$  Hz.

The sampling theorem is very important in signal analysis, processing, and transmission because it allows us to replace a continuous-time signal with a discrete sequence of numbers. Processing a continuous-time signal is therefore equivalent to processing a discrete sequence of numbers. This leads us directly into the area of digital filtering (discrete-time systems). In the field of communication, the transmission of a continuous-time message reduces to the transmission of a sequence of numbers. This opens doors to many new techniques of communicating continuous-time signals by pulse trains.

The dual of the sampling theorem states that for a signal timelimited to  $\tau$  seconds, its spectrum  $X(\omega)$  can be reconstructed from the samples of  $X(\omega)$  taken at uniform intervals not greater than  $1/\tau$  Hz. In other words, the spectrum should be sampled at a rate not less than  $\tau$  samples/Hz.

To compute the direct or the inverse Fourier transform numerically, we need a relationship between the samples of x(t) and  $X(\omega)$ . The sampling theorem and its dual provide such a quantitative relationship in the form of a discrete Fourier transform (DFT). The DFT computations are greatly facilitated by a fast Fourier transform (FFT) algorithm, which reduces the number of computations from something on the order of  $N_0^2$  to  $N_0 \log N_0$ .

#### REFERENCES

- 1. Linden, D. A. A discussion of sampling theorem. Proceedings of the IRE, vol. 47, pp. 1219–1226, July 1959.
- Siebert, W. M. Circuits, Signals, and Systems. MIT/McGraw-Hill, New York, 1986. 2.
- 3. Bennett, W. R. Introduction to Signal Transmission. McGraw-Hill, New York, 1970.
- 4. Lathi, B. P. Linear Systems and Signals. Berkeley-Cambridge Press, Carmichael, CA, 1992.
- Cooley, J. W., and Tukey, J. W. An algorithm for the machine calculation of complex Fourier series. 5. Mathematics of Computation, vol. 19, pp. 297-301, April 1965.

# PROBLEMS

[Note: In many problems, the plots of spectra are shown as functions of frequency f Hz for convenience, although we have labeled them as functions of  $\omega$  as  $X(\omega)$ ,  $Y(\omega)$ , etc.]

- If  $f_s$  is the Nyquist rate for signal x(t), determine 8.1-1 the Nyquist rate for each of the following signals:
  - (a)  $y_a(t) = \frac{d}{dt}x(t)$
  - (b)  $y_{b}(t) = x(t)\cos(2\pi f_{0}t)$
  - (c)  $y_c(t) = x(t+a) + x(t-b)$ , for real constants a and b
  - (d)  $y_d(t) = x(at)$ , for real a > 0

- 8.1-2 Figure P8.1-2 shows Fourier spectra of signals  $x_1(t)$  and  $x_2(t)$ . Determine the Nyquist sampling rates for signals  $x_1(t), x_2(t), x_1^2(t), x_2^3(t)$ , and  $x_1(t)x_2(t)$ .
- 8.1-3 A signal x(t) has a bandwidth of B = 1000 Hz. For a positive integer N, what is the Nyquist rate for the signal  $y(t) = x^{N}(t)$ ?
- 8.1-4 Determine the Nyquist sampling rate and the Nyquist sampling interval for the signals: (a)  $sinc^2(100\pi t)$ (b)  $0.01 \operatorname{sinc}^2(100\pi t)$

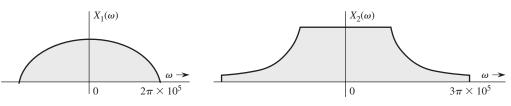


Figure P8.1-2

#### 836 CHAPTER 8 SAMPLING: THE BRIDGE FROM CONTINUOUS TO DISCRETE

- (c)  $\operatorname{sinc}(100\pi t) + 3\operatorname{sinc}^2(60\pi t)$
- (d)  $\operatorname{sinc}(50\pi t)\operatorname{sinc}(100\pi t)$
- 8.1-5 (a) Sketch  $|X(\omega)|$ , the amplitude spectrum of a signal  $x(t) = 3\cos 6\pi t + \sin 18\pi t + 2\cos (28 - \epsilon)\pi t$ , where  $\epsilon$  is a very small number  $\rightarrow 0$ . Determine the minimum sampling rate required to be able to reconstruct x(t) from these samples.
  - (b) Sketch the amplitude spectrum of the sampled signal when the sampling rate is 25% above the Nyquist rate (show the spectrum over the frequency range  $\pm 50$  Hz only). How would you reconstruct x(t) from these samples?
- **8.1-6** (a) Derive the sampling theorem by considering the fact that the sampled signal  $\overline{x}(t) = x(t)\delta_T(t)$ , and using the frequency-convolution property in Eq.(7.34).
  - (b) For a sampling train consisting of shifted unit impulses at instants  $nT + \tau$  instead of at nT (for all positive and negative integer values of *n*), find the spectrum of the sampled signal.
- **8.1-7** A signal is bandlimited to 12 kHz. The band between 10 and 12 kHz has been so corrupted by excessive noise that the information in this band is nonrecoverable. Determine the minimum sampling rate for this signal so that the uncorrupted portion of the band can be recovered. If we were to filter out the corrupted

spectrum prior to sampling, what would be the minimum sampling rate?

- **8.1-8** A continuous-time signal  $x(t) = \Delta((t-1)/2)$  is sampled at three rates: 10, 2, and 1 Hz. Sketch the resulting sampled signals. Because x(t) is timelimited, its bandwidth is infinite. However, most of its energy is concentrated in a small band. Determine a reasonable minimum sampling rate that will allow reconstruction of this signal with a small error. The answer is not unique. Make a reasonable assumption of what you define as a "negligible" or "small" error.
- **8.1-9** (a) A signal  $x(t) = 5 \operatorname{sinc}^2 (5\pi t) + \cos 20\pi t$ is sampled at a rate of 10 Hz. Find the spectrum of the sampled signal. Can x(t)be reconstructed by lowpass filtering the sampled signal?
  - (b) Repeat part (a) for a sampling frequency of 20 Hz. Can you reconstruct the signal from this sampled signal? Explain.
  - (c) If  $x(t) = 5 \operatorname{sinc}^2 (5\pi t) + \sin 20\pi t$ , can you reconstruct x(t) from the samples of x(t) at a rate of 20 Hz? Explain your answer with spectral representation(s).
  - (d) For  $x(t) = 5 \operatorname{sinc}^2 (5\pi t) + \sin 20\pi t$ , can you reconstruct x(t) from the samples of x(t) at a rate of 21 Hz? Explain your answer with spectral representation(s). Comment on your results.
- **8.1-10** (a) The highest frequency in the spectrum  $X(\omega)$  (Fig. P8.1-10a) of a bandpass signal x(t)

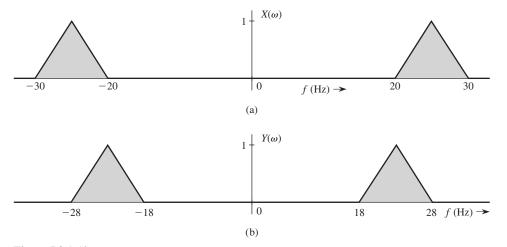


Figure P8.1-10

is 30 Hz. Hence, the minimum sampling frequency needed to sample x(t) is 60 Hz. Show the spectrum of the signal sampled at a rate of 60 Hz. Can you reconstruct x(t) from these samples? How?

- (b) A certain busy student looks at X(ω), concludes that its bandwidth is really 10 Hz, and decides that the sampling rate 20 Hz is adequate for sampling x(t). Sketch the spectrum of the signal sampled at a rate of 20 Hz. Can x(t) be reconstructed from these samples?
- (c) The same student, using the same reasoning, looks at Y(ω) in Fig. P8.1-10b, the spectrum of another bandpass signal y(t), and concludes that the sampling rate of 20 Hz can be used to sample y(t). Sketch the spectrum of the signal y(t) sampled at a rate of 20 Hz. Can y(t) be reconstructed from these samples?
- **8.1-11** A signal x(t) whose spectrum  $X(\omega)$ , as shown in Fig. P8.1-11, is sampled at a frequency  $f_s = f_1 + f_2$  Hz. Find all the sample values of x(t)merely by inspection of  $X(\omega)$ .
- **8.1-12** As described in Sec. 8.1-1, practical sampling can be achieved by multiplying a signal x(t) by a periodic train of pulses  $p_T(t)$ . The pulse train  $p_T(t)$  can be created by the periodic replication of some pulse p(t) as

$$p_T(t) = \sum_{k=-\infty}^{\infty} p(t - kT)$$

It is desired to sample a signal at a rate  $f_s = 100$  Hz, and two pulses are under consideration:

$$p_{a}(t) = -\frac{1}{4}u(t) + \frac{5}{4}u(t - \frac{2T}{20}) + \frac{5}{4}u(t - \frac{3T}{20}) + \frac{1}{4}u(t - \frac{5T}{20})$$

and

$$p_{\rm b}(t) = e^{-t/T} \left[ u(t) - u(t - 1.5T) \right]$$

- (a) Plot  $p_T(t)$  using  $p_a(t)$  over  $0 \le t \le 4T$ .
- (b) Plot  $p_T(t)$  using  $p_b(t)$  over  $0 \le t \le 4T$ .
- (c) Which pulse,  $p_a(t)$  or  $p_b(t)$ , is more suitable as a sampling pulse? Carefully explain your answer.
- 8.1-13 In digital data transmission over a communication channel, it is important to know the upper theoretical limit on the rate of digital pulses that can be transmitted over a channel of bandwidth B Hz. In digital transmission, the relative shape of the pulse is not important. We are interested in knowing only the amplitude represented by the pulse. For instance, in binary communication, we are interested in knowing whether the received pulse amplitude is 1 or -1 (positive or negative). Thus, each pulse represents one piece of information. Consider one independent amplitude value (not necessarily binary) as one piece of information. Show that 2B independent pieces of information per second can be transmitted correctly (assuming no noise) over a channel of bandwidth B Hz. This important principle in communication theory states that 1 Hz of bandwidth can transmit two independent pieces of information per second. It represents the upper rate of pulse transmission over a channel without any error in reception in the absence of noise. [Hint: According to the interpolation formula [Eq. (8.6)], a continuous-time signal of bandwidth B Hz can be constructed from 2Bpieces of information/second.]
- **8.1-14** This example is one of those interesting situations leading to a curious result in the category of defying gravity. The sinc function can be recovered from its samples taken at extremely low frequencies in apparent defiance of the sampling theorem.

Consider a sinc pulse  $x(t) = \operatorname{sinc}(4\pi t)$  for which  $X(\omega) = (1/4) \operatorname{rect}(\omega/8\pi)$ . The bandwidth of x(t) is B = 2 Hz, and its Nyquist rate is 4 Hz.

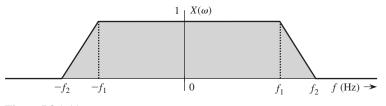


Figure P8.1-11

- (a) Sample x(t) at a rate 4 Hz and sketch the spectrum of the sampled signal.
- (b) To recover x(t) from its samples, we pass the sampled signal through an ideal lowpass filter of bandwidth B = 2 Hz and gain G = T = 1/4. Sketch this system and show that for this system  $H(\omega) = (1/4) \operatorname{rect}(\omega/8\pi)$ . Show also that when the input is the sampled x(t) at a rate 4 Hz, the output of this system is indeed x(t), as expected.
- (c) Now sample x(t) at half the Nyquist rate, at 2 Hz. Apply this sampled signal at the input of the lowpass filter used in part (b). Find the output.
- (d) Repeat part (c) for the sampling rate 1 Hz.
- (e) Show that the output of the lowpass filter in part (b) is x(t) to the sampled x(t) if the sampling rate is 4/N, where N is any positive integer. This means that we can recover x(t) from its samples taken at an arbitrarily small rate by letting  $N \rightarrow \infty$ .
- (f) The mystery may be clarified a bit by examining the problem in the time domain. Find the samples of x(t) when the sampling rate is 2/N (*N* integer).
- **8.2-1** A signal  $x(t) = \operatorname{sinc} (200\pi t)$  is sampled (multiplied) by a periodic pulse train  $p_T(t)$  represented in Fig. P8.2-1. Find and sketch the spectrum of the sampled signal. Explain whether you will be able to reconstruct x(t) from these samples. Find the filter output if the sampled signal is passed through an ideal lowpass filter of bandwidth 100 Hz and unit gain. What is the filter output if its bandwidth *B* Hz is between 100 and 150 Hz? What happens if the bandwidth exceeds 150 Hz?
- **8.2-2** Show that the circuit in Fig. P8.2-2 is a realization of the causal ZOH (zero-order hold) circuit. You can do this by showing that the unit impulse response h(t) of this circuit is indeed equal to that in Eq. (8.5) delayed by T/2 seconds to make it causal.

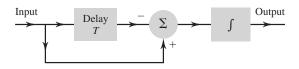


Figure P8.2-2

- 8.2-3 (a) A first-order hold circuit (FOH) can also be used to reconstruct a signal x(t) from its samples. The impulse response of this circuit is  $h(t) = \Delta(t/2T)$ , where *T* is the sampling interval. Consider a typical sampled signal  $\bar{x}(t)$  and show that this circuit performs the linear interpolation. In other words, the filter output consists of sample tops connected by straight-line segments. Follow the procedure discussed in Sec. 8.2 (Fig. 8.5c).
  - (b) Determine the frequency and magnitude responses of this filter, and compare it with (i) the ideal filter required for signal reconstruction and (ii) a ZOH circuit.
  - (c) This filter, being noncausal, is unrealizable. By delaying its impulse response, the filter can be made realizable. What is the minimum delay required to make it realizable? How would this delay affect the reconstructed signal and the filter frequency response?
  - (d) Show that the causal FOH circuit in part (c) can be realized by the ZOH circuit depicted in Fig. P8.2-2 followed by an identical filter in cascade.
- **8.2-4** Suppose signal  $x(t) = \sin(2\pi t/8) (u(t) u(t-8))$  is sampled at a rate  $f_s = 1$  Hz to generate signal x[n].
  - (a) Sketch x(t) and x[n].
  - (b) Has aliasing occurred in sampling x(t) to produce x[n]? Explain.
  - (c) Sketch the output  $\hat{x}(t)$  produced when x[n] is applied to the causal ZOH reconstructor of Prob. 8.2-2. How does  $\hat{x}(t)$  compare with x(t)?

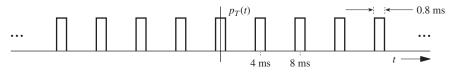


Figure P8.2-1

- (d) Sketch the output \$\hat{x}(t)\$ produced when \$x[n]\$ is applied to the FOH reconstructor of Prob. 8.2-3. How does \$\hat{x}(t)\$ compare with \$x(t)\$?
- 8.2-5 Repeat Prob. 8.2-4 for the signal  $x(t) = \cos(2\pi t/8) (u(t) u(t-8)).$
- **8.2-6** Is it possible to sample a physically realizable (nonzero) signal x(t) with a physically realizable system without aliasing? If possible, explain what conditions must be met. If not possible, explain why not.
- **8.2-7** In the text, for sampling purposes, we used timelimited narrow pulses such as impulses or rectangular pulses of width less than the sampling interval *T*. Show that it is not necessary to restrict the sampling pulse width. We can use sampling pulses of arbitrarily large duration and still be able to reconstruct the signal x(t) as long as the pulse rate is no less than the Nyquist rate for x(t).

Consider x(t) to be bandlimited to *B* Hz. The sampling pulse to be used is an exponential  $e^{-at}u(t)$ . We multiply x(t) by a periodic train of exponential pulses of the form  $e^{-at}u(t)$  spaced *T* seconds apart. Find the spectrum of the sampled signal, and show that x(t) can be reconstructed from this sampled signal provided the sampling rate is no less than 2*B* Hz or T < 1/2B. Explain how you would reconstruct x(t) from the sampled signal.

- **8.2-8** In Ex. 8.2, the sampling of a signal x(t) was accomplished by multiplying the signal by a pulse train  $p_T(t)$ , resulting in the sampled signal depicted in Fig. 8.4d. This procedure is known as the *natural sampling*. Figure P8.2-8 shows the so-called *flat-top sampling* of the same signal  $x(t) = \operatorname{sinc}^2(5\pi t)$ .
  - (a) Show that the signal x(t) can be recovered from flat-top samples if the sampling rate is no less than the Nyquist rate.
  - (b) Explain how you would recover *x*(*t*) from the flat-top samples.
  - (c) Find the expression for the sampled signal spectrum  $\overline{X}(\omega)$  and sketch it roughly.
- **8.2-9** A sinusoid of frequency  $f_0$  Hz is sampled at a rate  $f_s = 20$  Hz. Find the apparent frequency of the sampled signal if  $f_0$  is:
  - (a) 8 Hz
  - (b) 12 Hz

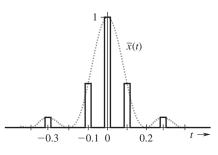


Figure P8.2-8

- (c) 20 Hz
- (d) 22 Hz
- (e) 32 Hz
- **8.2-10** A sinusoid of unknown frequency  $f_0$  is sampled at a rate 60 Hz. The apparent frequency of the samples is 20 Hz. Determine  $f_0$  if it is known that  $f_0$  lies in the range:
  - (a) 0-30 Hz
  - (b) 30–60 Hz
  - (c) 60–90 Hz
  - (d) 90–120 Hz
- **8.2-11** A signal  $x(t) = 3\cos 6\pi t + \cos 16\pi t + 2\cos 20\pi t$  is sampled at a rate 25% above the Nyquist rate. Sketch the spectrum of the sampled signal. How would you reconstruct x(t) from these samples? If the sampling frequency is 25% below the Nyquist rate, what are the frequencies of the sinusoids present in the output of the filter with cutoff frequency equal to the folding frequency? Do not write the actual output; give just the frequencies of the sinusoids present in the output.
- **8.2-12** A complex signal x(t) has a spectrum given as

$$X(\omega) = \begin{cases} \omega & 0 \le \omega \le 2\pi 10\\ 0 & \text{otherwise} \end{cases}$$

Let x(t) be sampled at rate  $f_s = 24$  Hz to produce signal  $\overline{x}(t)$  with spectrum  $\overline{X}(\omega)$ .

- (a) Sketch  $\overline{X}(\omega)$ .
- (b) Has aliasing occurred in sampling x(t) to produce x
  (t)? Explain.
- (c) Can x(t) be exactly recovered from  $\overline{x}(t)$ ? Explain.
- **8.2-13** Repeat Prob. 8.2-12 for the sampling rate  $f_s = 16$  Hz.

- **8.2-14** Repeat Prob. 8.2-12 for the sampling rate  $f_s = 8$  Hz.
- **8.2-15** (a) Show that the signal x(t), reconstructed from its samples x(nT), using Eq. (8.6) has a bandwidth  $B \le 1/2T$  Hz.
  - (b) Show that x(t) is the smallest bandwidth signal that passes through samples x(nT). [*Hint:* Use the *reductio ad absurdum* method.]
- 8.2-16 In digital communication systems, the efficient use of channel bandwidth is ensured by transmitting digital data encoded by means of bandlimited pulses. Unfortunately, bandlimited pulses are non-timelimited; that is, they have infinite duration, which causes pulses representing successive digits to interfere and cause errors in the reading of true pulse values. This difficulty can be resolved by shaping a pulse p(t) in such a way that it is bandlimited, yet causes zero interference at the sampling instants. To transmit R pulses per second, we require a minimum bandwidth R/2 Hz (see Prob. 8.1-13). The bandwidth of p(t) should be R/2 Hz, and its samples, in order to cause no interference at all other sampling instants, must satisfy the condition

$$p(nT) = \begin{cases} 1 & n = 0 & T = \frac{1}{K} \\ 0 & n \neq 0 \end{cases}$$

Because the pulse rate is *R* pulses per second, the sampling instants are located at intervals of 1/R seconds. Hence, the foregoing condition ensures that any given pulse will not interfere with the amplitude of any other pulse at its center. Find p(t). Is p(t) unique in the sense that no other pulse satisfies the given requirements?

**8.2-17** The problem of pulse interference in digital data transmission was outlined in Prob. 8.2-16, where we found a pulse shape p(t) to eliminate the interference. Unfortunately, the pulse found is not only noncausal, (and unrealizable) but also has a serious drawback: because of its slow decay (as 1/t), it is prone to severe interference due to small parameter deviation. To make the pulse decay rapidly, Nyquist proposed relaxing the bandwidth requirement from R/2 Hz to kR/2 Hz with  $1 \le k \le 2$ . The pulse must still have a property of noninterference with other pulses, for example,

$$p(nT) = \begin{cases} 1 & n=0 & T = \frac{1}{R} \\ 0 & n \neq 0 \end{cases}$$

Show that this condition is satisfied only if the pulse spectrum  $P(\omega)$  has an odd symmetry about the set of dotted axes, as shown in Fig. P8.2-17. The bandwidth of  $P(\omega)$  is kR/2 Hz ( $1 \le k \le 2$ ).


**8.2-18** The Nyquist samples of a signal x(t) bandlimited to *B* Hz are

$$x(nT) = \begin{cases} 1 & n = 0, 1 \\ 0 & \text{all } n \neq 0, 1 \end{cases} \quad T = \frac{1}{2B}$$

Show that

$$x(t) = \frac{\operatorname{sinc}(2\pi Bt)}{1 - 2Bt}$$

This pulse, known as the *duobinary pulse*, is used in digital transmission applications.

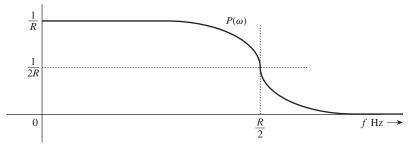

**Figure P8.2-17** 

**8.2-19** A signal bandlimited to *B* Hz is sampled at a rate  $f_s = 2B$  Hz. Show that

$$\int_{-\infty}^{\infty} x(t) dt = T \sum_{-\infty}^{\infty} x(nT)$$
$$\int_{-\infty}^{\infty} |x(t)|^2 dt = T \sum_{-\infty}^{\infty} |x(nT)|^2$$

[*Hint:* Use the orthogonality property of the sinc function in Prob. 7.6-6.]

- **8.2-20** Prove that a signal cannot be simultaneously timelimited and bandlimited. [*Hint:* Show that a contrary assumption leads to contradiction. Assume a signal to be simultaneously timelimited and bandlimited so that  $X(\omega) = 0$  for  $|\omega| \ge 2\pi B$ . In this case,  $X(\omega) = X(\omega) \operatorname{rect}(\omega/4\pi B')$  for B' > B. This fact means that x(t) is equal to  $x(t) * 2B' \operatorname{sinc}(2\pi B't)$ . The latter cannot be timelimited because the sinc function tail extends to infinity.]
- **8.3-1** Physically implementable digital systems, such as smartphones and computers, require that signals be both time-sampled and amplitude-quantized.
  - (a) Why is time sampling necessary? When does time sampling result in unrecoverable changes to the signal?
  - (b) Why is amplitude-quantization necessary? When does amplitude quantization result in unrecoverable changes to the signal?
- **8.3-2** Typical analog-to-digital converters (ADCs) operate over a range of input amplitudes  $[-V_{ref}, V_{ref}]$ . Why is it desirable to condition the input x(t) to an ADC so that its maximum magnitude is close to, but does not exceed,  $V_{ref}$ ? What happens if the maximum magnitude of x(t) is greater than  $V_{ref}$ ? What happens if the maximum magnitude of x(t) is much smaller than  $V_{ref}$ ?
- **8.3-3** A compact disc (CD) records audio signals digitally by means of a binary code. Assume an audio signal bandwidth of 15 kHz.
  - (a) What is the Nyquist rate?
  - (b) If the Nyquist samples are quantized into 65,536 levels (L = 65,536) and then binary-coded, what number of binary digits is required to encode a sample?

- (c) Determine the number of binary digits per second (bits/s) required to encode the audio signal.
- (d) For practical reasons discussed in the text, signals are sampled at a rate well above the Nyquist rate. Practical CDs use 44,100 samples/s. If L = 65,536, determine the number of pulses per second required to encode the signal.
- **8.3-4** A TV signal (video and audio) has a bandwidth of 4.5 MHz. This signal is sampled, quantized, and binary-coded.
  - (a) Determine the sampling rate if the signal is to be sampled at a rate 20% above the Nyquist rate.
  - (b) If the samples are quantized into 1024 levels, what number of binary pulses is required to encode each sample?
  - (c) Determine the binary pulse rate (bits/s) of the binary-coded signal.
- 8.3-5 (a) In a certain A/D scheme, there are 16 quantization levels. Give one possible binary code and one possible quaternary (4-ary) code. For the quaternary code, use 0, 1, 2, and 3 as the four symbols. Use the minimum number of digits in your code.
  - (b) To represent a given number of quantization levels *L*, we require a minimum of  $b_M$  digits for an *M*-ary code. Show that the ratio of the number of digits in a binary code to the number of digits in a quaternary (4-ary) code is 2, that is,  $b_2/b_4 = 2$ .
- **8.3-6** Five telemetry signals, each of bandwidth 1 kHz, are quantized and binary-coded. These signals are time-division multiplexed (signal bits interleaved). Choose the number of quantization levels so that the maximum error in sample amplitudes is no greater than 0.2% of the peak signal amplitude. The signals must be sampled at least 20% above the Nyquist rate. Determine the data rate (bits per second) of the multiplexed signal.
- **8.4-1** A triangle function  $x(t) = \Delta(t/5)$  has spectrum  $X(\omega)$ . Sketch the corresponding time-domain signal  $x_{T_0}(t)$  if  $X(\omega)$  is sampled at the following rates:
  - (a)  $f_0 = 10$  samples/Hz
  - (b)  $f_0 = 5$  samples/Hz

- (c)  $f_0 = 4$  samples/Hz
- (d)  $f_0 = 2.5$  samples/Hz
- **8.4-2** The Fourier transform of a signal x(t), bandlimited to *B* Hz, is  $X(\omega)$ . The signal x(t) is repeated periodically at intervals *T*, where T = 1.25/B. The resulting signal y(t) is

$$y(t) = \sum_{-\infty}^{\infty} x(t - nT)$$

Show that y(t) can be expressed as

$$y(t) = C_0 + C_1 \cos(1.6\pi Bt + \theta_1)$$

where

$$C_0 = \frac{1}{T}X(0)$$
$$C_1 = \frac{2}{T} \left| X\left(\frac{2\pi}{T}\right) \right|$$

and

$$\theta_1 = \angle X\left(\frac{2\pi}{T}\right)$$


Recall that a bandlimited signal is not timelimited, and hence has infinite duration. The periodic repetitions are all overlapping.


- **8.5-1** For a signal x(t) that is timelimited to 10 ms and has an essential bandwidth of 10 kHz, determine  $N_0$ , the number of signal samples necessary to compute a power-of-2 FFT with a frequency resolution  $f_0$  of at least 50 Hz. Explain whether any zero padding is necessary.
- **8.5-2** To compute the DFT of signal x(t) in Fig. P8.5-2, write the sequence  $x_n$  (for n = 0 to  $N_0 1$ ) if the frequency resolution  $f_0$  must be at least 0.25 Hz. Assume the essential bandwidth (the folding frequency) of x(t) to be at least 3 Hz. Do not compute the DFT; just write the appropriate sequence  $x_n$ .
- **8.5-3** Suppose we want to sample a finite-duration signal x(t) that occupies  $0 \le t \le T$ .

- (a) Devise a way to use the DFT to help select a suitable sampling rate f<sub>s</sub> for signal x(t). [*Hint:* Consider the characteristics of an oversampled signal's DFT spectrum.]
- (b) Test the method you devised in part (a) using the signal  $x(t) = \Delta(\frac{t-1}{2})$ . Use MAT-LAB to compute any needed DFTs. What value  $f_s$  seems reasonable for this signal?
- **8.5-4** Choose appropriate values for  $N_0$  and T and compute the DFT of the signal  $e^{-t}u(t)$ . Use two different criteria for determining the effective bandwidth of  $e^{-t}u(t)$ . As the bandwidth, use the frequency at which the amplitude response drops to 1% of its peak value (at  $\omega = 0$ ). Next, use the 99% energy criterion for determining the bandwidth (see Ex. 7.20).
- **8.5-5** Repeat Prob. 8.5-4 for the signal

$$x(t) = \frac{2}{t^2 + 1}$$

- **8.5-6** For the signals x(t) and g(t) represented in Fig. P8.5-6, write the appropriate sequences  $x_n$  and  $g_n$  necessary for the computation of the convolution of x(t) and g(t) using DFT. Use T = 1/8.
- **8.5-7** For this problem, interpret the *N*-point DFT as an *N*-periodic function of *r*. To stress this fact, we shall change the notation  $X_r$  to X(r). Are the following frequency-domain signals valid DFTs? Answer yes or no. For each valid DFT, determine the size *N* of the DFT and whether the time-domain signal is real.
  - (a)  $X(r) = j \pi$
  - (b)  $X(r) = \sin(r/10)$
  - (c)  $X(r) = \sin(\pi r/10)$
  - (d)  $X(r) = [(1+j)/\sqrt{2}]^{r}$
  - (e)  $X(r) = \langle r + \pi \rangle_{10}$  where  $\langle \cdot \rangle_{10}$  denotes the modulo-*N* operation.
- 8.7-1 MATLAB's fft command computes the DFT of a vector x assuming the first sample occurs at time n = 0. Given that X = fft(x) has already

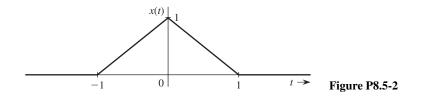

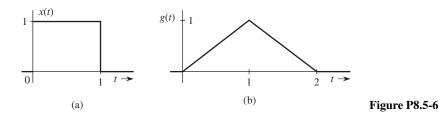

been computed, derive a method to correct X to reflect an arbitrary starting time  $n = n_0$ .

- **8.7-2** Consider a complex signal composed of two closely spaced complex exponentials:  $x_1[n] = e^{j2\pi n30/100} + e^{j2\pi n33/100}$ . For each of the following cases, plot the length-*N* DFT magnitude as a function of frequency  $f_r$ , where  $f_r = r/N$ .
  - (a) Compute and plot the DFT of x₁[n] using 10 samples (0 ≤ n ≤ 9). From the plot, can both exponentials be identified? Explain.
  - (b) Zero-pad the signal from part (a) with 490 zeros and then compute and plot the 500-point DFT. Does this improve the picture of the DFT? Explain.
  - (c) Compute and plot the DFT of x₁[n] using 100 samples (0 ≤ n ≤ 99). From the plot, can both exponentials be identified? Explain.
  - (d) Zero-pad the signal from part (c) with 400 zeros and then compute and plot the 500-point DFT. Does this improve the picture of the DFT? Explain.
- 8.7-3 Repeat Prob. 8.7-2, using the complex signal  $x_2[n] = e^{j2\pi n 30/100} + e^{j2\pi n 31.5/100}$ .
- **8.7-4** Consider a complex signal composed of a dc term and two complex exponentials:  $y_1[n] = 1 + e^{i2\pi n 30/100} + 0.5 * e^{i2\pi n 43/100}$ . For each of the following cases, plot the length-*N* DFT magnitude as a function of frequency  $f_r$ , where  $f_r = r/N$ .
  - (a) Use MATLAB to compute and plot the DFT of  $y_1[n]$  with 20 samples ( $0 \le n \le 19$ ). From the plot, can the two non-dc exponentials be identified? Given the amplitude relation between the two, the lower-frequency peak should be twice as large as the higher-frequency peak. Is this the case? Explain.
  - (b) Zero-pad the signal from part (a) to a total length of 500. Does this improve locating the two non-dc exponential components? Is

the lower-frequency peak twice as large as the higher-frequency peak? Explain.

- (c) MATLAB's signal-processing toolbox function window allows window functions to be easily generated. Generate a length-20 Hanning window and apply it to y<sub>1</sub>[n]. Using this windowed function, repeat parts (a) and (b). Comment on whether the window function helps or hinders the analysis.
- 8.7-5 Repeat Prob. 8.7-4, using the complex signal  $y_2[n] = 1 + e^{j2\pi n 30/100} + 0.5 e^{j2\pi n 38/100}$ .
- **8.7-6** This problem investigates the idea of zero padding applied in the frequency domain. When asked, plot the length-*N* DFT magnitude as a function of frequency  $f_r$ , where  $f_r = r/N$ .
  - (a) In MATLAB, create a vector x that contains one period of the sinusoid x[n] = cos((π/2)n). Plot the result. How "sinusoidal" does the signal appear to be?
  - (b) Use the fft command to compute the DFT X of vector x. Plot the magnitude of the DFT coefficients. Do they make sense?
  - (c) Zero-pad the DFT vector to a total length of 100 by inserting the appropriate number of zeros in the middle of the vector X. Call this zero-padded DFT sequence Y. Why are zeros inserted in the middle rather than the end? Take the inverse DFT of Y and plot the result. What similarities exist between the new signal y and the original signal x? What are the differences between x and y? What is the effect of zero padding in the frequency domain? How is this type of zero padding similar to zero padding in the time domain?
  - (d) Derive a general modification to the procedure of zero padding in the frequency domain to ensure that the amplitude of the resulting time-domain signal is left unchanged.

- (e) Consider one period of a square wave described by the length-8 vector [1 1 1 1 -1 -1 -1 -1]. Zero-pad the DFT of this vector to a length of 100, and call the result S. Scale S according to part (d), take the inverse DFT, and plot the result. Does the new time-domain signal *s*[*n*] look like a square wave? Explain.
- **8.7-7** The quantized output  $x_q$  of a truncating asymmetric converter is given as

$$x_{\mathbf{q}} = \frac{x_{\max}}{2^{B-1}} \lfloor \frac{x}{x_{\max}} 2^{B-1} \frac{1}{2} \rfloor$$

Any values outside the  $2^B$  allowable levels should be clamped to the nearest level.

- (a) Similar to Fig. 8.31, plot the transfer characteristics for a 3-bit version of this quantizer.
- (b) Apply 3-bit truncating asymmetric quantization to a 1 Hz cosine sampled at  $f_s = 50$  Hz over 1 second. Plot the original signal

x(t), the quantized signal  $x_q(t)$ , and the magnitude spectra of both. How does truncating asymmetric quantization compare to the results of asymmetric rounding quantization shown in Fig. 8.33?

**8.7-8** The quantized output  $x_q$  of a symmetric truncating converter is given as

$$x_{\mathbf{q}} = \frac{x_{\max}}{2^{B-1}} \left( \lfloor \frac{x}{x_{\max}} 2^{B-1} - \frac{1}{2} \rfloor + \frac{1}{2} \right)$$

Any values outside the  $2^B$  allowable levels should be clamped to the nearest level.

- (a) Similar to Fig. 8.31, plot the transfer characteristics for a 3-bit version of this quantizer.
- (b) Apply 3-bit truncating symmetric quantization to a 1 Hz cosine sampled at  $f_s =$ 50 Hz over 1 second. Plot the original signal x(t), the quantized signal  $x_q(t)$ , and the magnitude spectra of both. How does truncating symmetric quantization compare to the results of asymmetric rounding quantization shown in Fig. 8.33?



# FOURIER ANALYSIS OF DISCRETE-TIME SIGNALS

In Chs. 6 and 7, we studied the ways of representing a continuous-time signal as a sum of sinusoids or exponentials. In this chapter we shall discuss similar development for discrete-time signals. Our approach is parallel to that used for continuous-time signals. We first represent a periodic x[n] as a Fourier series formed by a discrete-time exponential (or sinusoid) and its harmonics. Later we extend this representation to an aperiodic signal x[n] by considering x[n] as a limiting case of a periodic signal with the period approaching infinity.

# 9.1 DISCRETE-TIME FOURIER SERIES (DTFS)

A continuous-time sinusoid  $\cos \omega t$  is a periodic signal regardless of the value of  $\omega$ . Such is not the case for the discrete-time sinusoid  $\cos \Omega n$  (or exponential  $e^{i\Omega n}$ ). A sinusoid  $\cos \Omega n$  is periodic only if  $\Omega/2\pi$  is a rational number. This can be proved by observing that if this sinusoid is  $N_0$  periodic, then

$$\cos\Omega\left(n+N_0\right)=\cos\Omega n$$

This is possible only if

 $\Omega N_0 = 2\pi m$  m integer

Here, both *m* and  $N_0$  are integers. Hence,  $\Omega/2\pi = m/N_0$  is a rational number. Thus, a sinusoid  $\cos \Omega n$  (or exponential  $e^{j\Omega n}$ ) is periodic only if

$$\frac{\Omega}{2\pi} = \frac{m}{N_0}$$
 a rational number

When this condition  $(\Omega/2\pi \text{ a rational number})$  is satisfied, the period  $N_0$  of the sinusoid  $\cos \Omega n$  is given by

$$N_0 = m\left(\frac{2\pi}{\Omega}\right) \tag{9.1}$$

To compute  $N_0$ , we must choose the smallest value of *m* that will make  $m(2\pi/\Omega)$  an integer. For example, if  $\Omega = 4\pi/17$ , then the smallest value of *m* that will make  $m(2\pi/\Omega) = m(17/2)$  an

integer is 2. Therefore,

$$N_0 = m\left(\frac{2\pi}{\Omega}\right) = 2\left(\frac{17}{2}\right) = 17$$

However, a sinusoid  $\cos(0.8n)$  is not a periodic signal because  $0.8/2\pi$  is not a rational number.

### 9.1-1 Periodic Signal Representation by Discrete-Time Fourier Series

A continuous-time periodic signal of period  $T_0$  can be represented as a trigonometric Fourier series consisting of a sinusoid of the fundamental frequency  $\omega_0 = 2\pi/T_0$ , and all its harmonics. The exponential form of the Fourier series consists of exponentials  $e^{j0t}$ ,  $e^{\pm j\omega_0 t}$ ,  $e^{\pm \omega_0 t}$ ,

A discrete-time periodic signal can be represented by a discrete-time Fourier series using a parallel development. Recall that a periodic signal x[n] with period  $N_0$  is characterized by the fact that

$$x[n] = x[n+N_0]$$

The smallest value of  $N_0$  for which this equation holds is the *fundamental period*. The *fundamental frequency* is  $\Omega_0 = 2\pi/N_0$  rad/sample. An  $N_0$ -periodic signal x[n] can be represented by a discrete-time Fourier series made up of sinusoids of fundamental frequency  $\Omega_0 = 2\pi/N_0$  and its harmonics. As in the continuous-time case, we may use a trigonometric or an exponential form of the Fourier series. Because of its compactness and ease of mathematical manipulations, the exponential form is preferable to the trigonometric. For this reason, we shall bypass the trigonometric form and go directly to the exponential form of the discrete-time Fourier series.

The exponential Fourier series consists of the exponentials  $e^{j0n}$ ,  $e^{\pm j\Omega_0 n}$ ,  $e^{\pm j2\Omega_0 n}$ , ...,  $e^{\pm jn\Omega_0 n}$ , ..., and so on. There would be an infinite number of harmonics, except for the property proved in Sec. 5.5-1, that discrete-time exponentials whose frequencies are separated by  $2\pi$  (or integer multiples of  $2\pi$ ) are identical because

$$e^{j(\Omega \pm 2\pi m)n} = e^{j\Omega n} e^{\pm 2\pi mn} = e^{j\Omega n}$$
 *m* integer

The consequence of this result is that the *r*th harmonic is identical to the  $(r + N_0)$ th harmonic. To demonstrate this, let  $g_n$  denote the *n*th harmonic  $e^{in\Omega_0 n}$ . Then

$$g_{r+N_0} = e^{j(r+N_0)\Omega_0 n} = e^{j(r\Omega_0 n + 2\pi n)} = e^{jr\Omega_0 n} = g_r$$

and

$$g_r = g_{r+N_0} = g_{r+2N_0} = \cdots = g_{r+mN_0}$$
 *m* integer

Thus, the first harmonic is identical to the  $(N_0 + 1)$ th harmonic, the second harmonic is identical to the  $(N_0 + 2)$ th harmonic, and so on. In other words, there are only  $N_0$  independent harmonics, and their frequencies range over an interval  $2\pi$  (because the harmonics are separated by  $\Omega_0 = 2\pi/N_0$ ). This means that, unlike the continuous-time counterpart, the discrete-time Fourier series has only a finite number  $(N_0)$  of terms. This result is consistent with our observation in Sec. 5.5-1 that all discrete-time signals are bandlimited to a band from  $-\pi$  to  $\pi$ . Because the harmonics are separated by  $\Omega_0 = 2\pi/N_0$ , there can only be  $N_0$  harmonics in this band. We also saw that this band can be taken from 0 to  $2\pi$  or any other contiguous band of width  $2\pi$ . This means we may

846

choose the  $N_0$  independent harmonics  $e^{ir\Omega_0 n}$  over  $0 \le r \le N_0 - 1$ , or over  $-1 \le r \le N_0 - 2$ , or over  $1 \le r \le N_0$ , or over any other suitable choice for that matter. Every one of these sets will have the same harmonics, although in different order.

Let us consider the first choice, which corresponds to exponentials  $e^{ir\Omega_0 n}$  for  $r = 0, 1, 2, ..., N_0 - 1$ . The Fourier series for an  $N_0$ -periodic signal x[n] consists of only these  $N_0$  harmonics, and can be expressed as

$$x[n] = \sum_{r=0}^{N_0 - 1} \mathcal{D}_r e^{jr\Omega_0 n} \qquad \Omega_0 = \frac{2\pi}{N_0}$$

To compute coefficients  $\mathcal{D}_r$ , we multiply both sides by  $e^{-jm\Omega_0 n}$  and sum over *n* from n = 0 to  $(N_0 - 1)$ .

$$\sum_{n=0}^{N_0-1} x[n] e^{-jm\Omega_0 n} = \sum_{n=0}^{N_0-1} \sum_{r=0}^{N_0-1} \mathcal{D}_r e^{j(r-m)\Omega_0 n}$$
(9.2)

The right-hand sum, after interchanging the order of summation, results in

$$\sum_{r=0}^{N_0-1} \mathcal{D}_r \left[ \sum_{n=0}^{N_0-1} e^{j(r-m)\Omega_0 n} \right]$$

The inner sum, according to Eq. (8.15) in Sec. 8.5, is zero for all values of  $r \neq m$ . It is nonzero with a value  $N_0$  only when r = m. This fact means the outside sum has only one term  $\mathcal{D}_m N_0$  (corresponding to r = m). Therefore, the right-hand side of Eq. (9.2) is equal to  $\mathcal{D}_m N_0$ , and

$$\sum_{n=0}^{N_0-1} x[n]e^{-jm\Omega_0 n} = \mathcal{D}_m N_0$$

and

$$\mathcal{D}_{m} = \frac{1}{N_{0}} \sum_{n=0}^{N_{0}-1} x[n] e^{-jm\Omega_{0}n}$$

We now have a discrete-time Fourier series (DTFS) representation of an  $N_0$ -periodic signal x[n] as

$$x[n] = \sum_{r=0}^{N_0 - 1} \mathcal{D}_r e^{jr\Omega_0 n}$$
(9.3)

where

$$\mathcal{D}_r = \frac{1}{N_0} \sum_{n=0}^{N_0 - 1} x[n] e^{-jr\Omega_0 n} \qquad \Omega_0 = \frac{2\pi}{N_0}$$
(9.4)

Observe that DTFS Eqs. (9.3) and (9.4) are identical (within a scaling constant) to the DFT Eqs. (8.13) and (8.12).<sup> $\dagger$ </sup> Therefore, we can use the efficient FFT algorithm to compute the DTFS coefficients.

<sup>&</sup>lt;sup>†</sup> If we let  $x[n] = N_0 x_k$  and  $\mathcal{D}_r = X_r$ , Eqs. (9.3) and (9.4) are identical to Eqs. (8.13) and (8.12), respectively.

### 9.1-2 Fourier Spectra of a Periodic Signal *x*[*n*]

The Fourier series consists of  $N_0$  components

848

$$\mathcal{D}_0, \mathcal{D}_1 e^{j\Omega_0 n}, \mathcal{D}_2 e^{j2\Omega_0 n}, \ldots, \mathcal{D}_{N_0-1} e^{j(N_0-1)\Omega_0 n}$$

The frequencies of these components are  $0, \Omega_0, 2\Omega_0, \ldots, (N_0 - 1)\Omega_0$ , where  $\Omega_0 = 2\pi/N_0$ . The amount of the *r*th harmonic is  $\mathcal{D}_r$ . We can plot this amount  $\mathcal{D}_r$  (the Fourier coefficient) as a function of index *r* or frequency  $\Omega$ . Such a plot, called the *Fourier spectrum* of x[n], gives us, at a glance, the graphical picture of the amounts of various harmonics of x[n].

In general, the Fourier coefficients  $D_r$  are complex, and they can be represented in the polar form as

$$\mathcal{D}_r = |\mathcal{D}_r| e^{j \angle \mathcal{D}_r}$$

The plot of  $|\mathcal{D}_r|$  versus  $\Omega$  is called the amplitude spectrum and that of  $\mathcal{L}_r$  versus  $\Omega$  is called the angle (or phase) spectrum. These two plots together are the frequency spectra of x[n]. Knowing these spectra, we can reconstruct or synthesize x[n] according to Eq. (9.3). Therefore, the Fourier (or frequency) spectra, which are an alternative way of describing a periodic signal x[n], are in every way equivalent (in terms of the information) to the plot of x[n] as a function of n. The Fourier spectra of a signal constitute the *frequency-domain* description of x[n], in contrast to the time-domain description, where x[n] is specified as a function of index n (representing time).

The results are very similar to the representation of a continuous-time periodic signal by an exponential Fourier series except that, generally, the continuous-time signal spectrum bandwidth is infinite and consists of an infinite number of exponential components (harmonics). The spectrum of the discrete-time periodic signal, in contrast, is bandlimited and has at most  $N_0$  components.

### PERIODIC EXTENSION OF FOURIER SPECTRUM

We now show that if  $\phi[r]$  is an  $N_0$ -periodic function of r, then

$$\sum_{r=0}^{N_0-1} \phi[r] = \sum_{r=\langle N_0 \rangle} \phi[r]$$
(9.5)

where  $r = \langle N_0 \rangle$  indicates summation over any  $N_0$  consecutive values of r. Because  $\phi[r]$  is  $N_0$  periodic, the same values repeat with period  $N_0$ . Hence, the sum of any set of  $N_0$  consecutive values of  $\phi[r]$  must be the same no matter the value of r at which we start summing. Basically, it represents the sum over one cycle.

To apply this result to the DTFS, we observe that  $e^{-jr\Omega_0 n}$  is  $N_0$  periodic because

$$e^{-jr\Omega_0(n+N_0)} = e^{-jr\Omega_0 n}e^{-j2\pi r} = e^{-jr\Omega_0 n}$$

Therefore, if x[n] is  $N_0$  periodic,  $x[n]e^{-jr\Omega_0 n}$  is also  $N_0$  periodic. Hence, from Eq. (9.4), it follows that  $\mathcal{D}_r$  is also  $N_0$  periodic, as is  $\mathcal{D}_r e^{jr\Omega_0 n}$ . Now, because of Eq. (9.5), we can express Eqs. (9.3) and (9.4) as

$$x[n] = \sum_{r=\langle N_0 \rangle} \mathcal{D}_r e^{jr\Omega_0 n}$$
(9.6)

9.1 Discrete-Time Fourier Series (DTFS) 849

and

$$\mathcal{D}_r = \frac{1}{N_0} \sum_{n = \langle N_0 \rangle} x[n] e^{-jr\Omega_0 n} \tag{9.7}$$

If we plot  $\mathcal{D}_r$  for all values of r (rather than only  $0 \le r \le N_0 - 1$ ), then the spectrum  $\mathcal{D}_r$  is  $N_0$ periodic. Moreover, Eq. (9.6) shows that x[n] can be synthesized not only by the  $N_0$  exponentials corresponding to  $0 \le r \le N_0 - 1$ , but also by any successive  $N_0$  exponentials in this spectrum, starting at any value of r (positive or negative). For this reason, it is customary to show the spectrum  $\mathcal{D}_r$  for all values of r (not just over the interval  $0 \le r \le N_0 - 1$ ). Yet we must remember that to synthesize x[n] from this spectrum, we need to add only  $N_0$  consecutive components. All these observations are consistent with our discussion in Ch. 5, where we showed that a sinusoid of a given frequency is equivalent to multitudes of sinusoids, all separated by integer multiple of  $2\pi$ in frequency.

Along the  $\Omega$  scale,  $\mathcal{D}_r$  repeats every  $2\pi$  intervals, and along the r scale,  $\mathcal{D}_r$  repeats at intervals of  $N_0$ . Equations (9.6) and (9.7) show that both x[n] and its spectrum  $\mathcal{D}_r$  are  $N_0$  periodic and both have exactly the same number of components  $(N_0)$  over one period.

Equation (9.7) shows that  $\mathcal{D}_r$  is complex in general, and  $\mathcal{D}_{-r}$  is the conjugate of  $\mathcal{D}_r$  if x[n] is real. Thus,

$$|\mathcal{D}_r| = |\mathcal{D}_{-r}|$$
 and  $\angle \mathcal{D}_r = -\angle \mathcal{D}_{-r}$ 

so that the amplitude spectrum  $|\mathcal{D}_r|$  is an even function , and  $\mathcal{L}_r$  is an odd function of r (or  $\Omega$ ). All these concepts will be clarified by the examples to follow. The first example is rather trivial and serves mainly to familiarize the reader with the basic concepts of DTFS.

### **EXAMPLE 9.1** Discrete-Time Fourier Series of a Sinusoid

Find the discrete-time Fourier series (DTFS) for  $x[n] = \sin 0.1\pi n$  (Fig. 9.1a). Sketch the amplitude and phase spectra.


In this case, the sinusoid sin  $0.1\pi n$  is periodic because  $\Omega/2\pi = 1/20$  is a rational number and the period  $N_0$  is [see Eq. (9.1)]

$$N_0 = m\left(\frac{2\pi}{\Omega}\right) = m\left(\frac{2\pi}{0.1\pi}\right) = 20m$$

The smallest value of *m* that makes 20m an integer is m = 1. Therefore, the period  $N_0 = 20$  so that  $\Omega_0 = 2\pi / N_0 = 0.1\pi$ , and from Eq. (9.6),

$$x[n] = \sum_{r=\langle 20\rangle} \mathcal{D}_r e^{j0.1\pi rn}$$

where the sum is performed over any 20 consecutive values of r. We shall select the range  $-10 \le r < 10$  (values of r from -10 to 9). This choice corresponds to synthesizing x[n] using

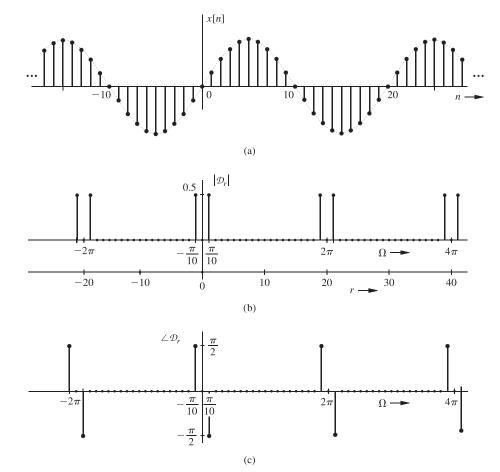

**Figure 9.1** Discrete-time sinusoid sin  $0.1\pi n$  and its Fourier spectra.

the spectral components in the fundamental frequency range  $(-\pi \le \Omega < \pi)$ . Thus,

$$x[n] = \sum_{r=-10}^{9} \mathcal{D}_r e^{j0.1\pi rn}$$

where, according to Eq. (9.7),

$$\mathcal{D}_{r} = \frac{1}{20} \sum_{n=-10}^{9} \sin 0.1\pi n e^{-j0.1\pi m}$$
$$= \frac{1}{20} \sum_{n=-10}^{9} \frac{1}{2j} (e^{j0.1\pi n} - e^{-j0.1\pi n}) e^{-j0.1\pi m}$$
$$= \frac{1}{40j} \left[ \sum_{n=-10}^{9} e^{j0.1\pi n(1-r)} - \sum_{n=-10}^{9} e^{-j0.1\pi n(1+r)} \right]$$

In these sums, *r* takes on all values between -10 and 9. From Eq. (8.15), it follows that the first sum on the right-hand side is zero for all values of *r* except r = 1, when the sum is equal to  $N_0 = 20$ . Similarly, the second sum is zero for all values of *r* except r = -1, when it is equal to  $N_0 = 20$ . Therefore,

$$\mathcal{D}_1 = \frac{1}{2j}$$
 and  $\mathcal{D}_{-1} = -\frac{1}{2j}$ 

and all other coefficients are zero. The corresponding Fourier series is given by

$$x[n] = \sin 0.1\pi n = \frac{1}{2j} (e^{j0.1\pi n} - e^{-j0.1\pi n})$$
(9.8)

Here the fundamental frequency  $\Omega_0 = 0.1\pi$ , and there are only two nonzero components:

$$\mathcal{D}_1 = \frac{1}{2j} = \frac{1}{2}e^{-j\pi/2}$$
 and  $\mathcal{D}_{-1} = -\frac{1}{2j} = \frac{1}{2}e^{j\pi/2}$ 

Therefore,

$$|\mathcal{D}_1| = |\mathcal{D}_{-1}| = \frac{1}{2}$$
 and  $\angle \mathcal{D}_1 = -\frac{\pi}{2}, \ \angle \mathcal{D}_{-1} = \frac{\pi}{2}$ 

Sketches of  $\mathcal{D}_r$  for the interval  $(-10 \le r < 10)$  appear in Figs. 9.1b and 9.1c. According to Eq. (9.8), there are only two components corresponding to r = 1 and -1. The remaining 18 coefficients are zero. The *r*th component  $\mathcal{D}_r$  is the amplitude of the frequency  $r\Omega_0 = 0.1r\pi$ . Therefore, the frequency interval corresponding to  $-10 \le r < 10$  is  $-\pi \le \Omega < \pi$ , as depicted in Figs. 9.1b and 9.1c. This spectrum over the range  $-10 \le r < 10$  (or  $-\pi \le \Omega < \pi$ ) is sufficient to specify the frequency-domain description (Fourier series), and we can synthesize x[n] by adding these spectral components. Because of the periodicity property discussed in this section, the spectrum  $\mathcal{D}_r$  is a periodic function of r with period  $N_0 = 20$ . For this reason, we repeat the spectrum with period  $N_0 = 20$  (or  $\Omega = 2\pi$ ), as illustrated in Figs. 9.1b and 9.1c, which are periodic extensions of the spectrum in the range  $-10 \le r < 10$ . Observe that the amplitude spectrum is an even function and the angle or phase spectrum is an odd function of r (or  $\Omega$ ), as expected.

The result [Eq. (9.8)] is a trigonometric identity and could have been obtained immediately without the formality of finding the Fourier coefficients. We have intentionally chosen this trivial example to introduce the reader gently to the new concept of the discrete-time Fourier series and its periodic nature. The Fourier series is a way of expressing a periodic signal x[n] in terms of exponentials of the form  $e^{jr\Omega_0 n}$  and its harmonics. The result in Eq. (9.8) is merely a statement of the (obvious) fact that  $\sin 0.1\pi n$  can be expressed as a sum of two exponentials  $e^{j0.1\pi n}$  and  $e^{-j0.1\pi n}$ .

Because of the periodicity of the discrete-time exponentials  $e^{jr\Omega_0 n}$ , the Fourier series components can be selected in any range of length  $N_0 = 20$  (or  $\Omega = 2\pi$ ). For example, if

we select the frequency range  $0 \le \Omega < 2\pi$  (or  $0 \le r < 20$ ), we obtain the Fourier series as

$$x[n] = \sin 0.1\pi n = \frac{1}{2j} (e^{j0.1\pi n} - e^{j1.9\pi n})$$

This series is equivalent to that in Eq. (9.8) because the two exponentials  $e^{j1.9\pi n}$  and  $e^{-j0.1\pi n}$  are equivalent. This follows from the fact that  $e^{j1.9\pi n} = e^{j1.9\pi n} \times e^{-j2\pi n} = e^{-j0.1\pi n}$ .

We could have selected the spectrum over any other range of width  $\Omega = 2\pi$  in Figs. 9.1b and 9.1c as a valid discrete-time Fourier series. The reader may verify this by proving that such a spectrum starting anywhere (and of width  $\Omega = 2\pi$ ) is equivalent to the same two components on the right-hand side of Eq. (9.8).

### **DRILL 9.1 DTFS Spectra on Alternate Intervals**

From the spectra in Fig. 9.1, write the Fourier series corresponding to the interval  $-10 \ge r > -30$  (or  $-\pi \ge \Omega > -3\pi$ ). Show that this Fourier is equivalent to that in Eq. (9.8).

### DRILL 9.2 Discrete-Time Fourier Series of a Sum of Sinusoids

Find the period and the DTFS for

 $x[n] = 4\cos 0.2\pi n + 6\sin 0.5\pi n$ 

over the interval  $0 \le r \le 19$ . Use Eq. (9.4) to compute  $\mathcal{D}_r$ .

### ANSWERS

852


 $N_0 = 20$  and  $x[n] = 2e^{j0.2\pi n} + (3e^{-j\pi/2})e^{j0.5\pi n} + (3e^{j\pi/2})e^{j1.5\pi n} + 2e^{j1.8\pi n}$ 

### **DRILL 9.3 Fundamental Period of Discrete-Time Sinusoids**

Find the fundamental periods  $N_0$ , if any, for: (a)  $\sin(301\pi n/4)$  and (b)  $\cos 1.3n$ .

### ANSWERS

(a)  $N_0 = 8$ , (b)  $N_0$  does not exist because the sinusoid is not periodic.

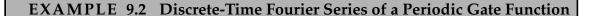

Compute and plot the discrete-time Fourier series for the periodic sampled gate function shown in Fig. 9.2a.

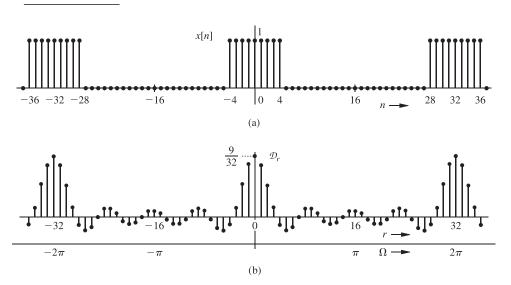


Figure 9.2 (a) Periodic sampled gate pulse and (b) its Fourier spectrum.

In this case,  $N_0 = 32$  and  $\Omega_0 = 2\pi/32 = \pi/16$ . Therefore,

$$x[n] = \sum_{r=\langle 32 \rangle} \mathcal{D}_r e^{jr(\pi/16)n}$$

where

$$\mathcal{D}_r = \frac{1}{32} \sum_{n = \langle 32 \rangle} x[n] e^{-jr(\pi/16)r}$$

For our convenience, we shall choose the interval  $-16 \le n \le 15$  for this summation, although any other interval of the same width (32 points) would give the same result.<sup>†</sup>

$$\mathcal{D}_r = \frac{1}{32} \sum_{n=-16}^{15} x[n] e^{-jr(\pi/16)n}$$

<sup>&</sup>lt;sup>†</sup> In this example we have used the same equations as those for the DFT in Ex. 8.9, within a scaling constant. In the present example, the values of x[n] at n = 4 and -4 are taken as 1 (full value), whereas in Ex. 8.9 these values are 0.5 (half the value). This is the reason for the slight difference in spectra in Figs. 9.2b and 8.19d. Unlike continuous-time signals, discontinuity is a meaningless concept in discrete-time signals.

Now, x[n] = 1 for  $-4 \le n \le 4$  and is zero for all other values of *n*. Therefore,

$$\mathcal{D}_r = \frac{1}{32} \sum_{n=-4}^{4} e^{-jr(\pi/16)n}$$
(9.9)

This is a geometric progression with a common ratio  $e^{-j(\pi/16)r}$ . Therefore (see Sec. B.8-3),<sup>†</sup>

$$\mathcal{D}_{r} = \frac{1}{32} \left[ \frac{e^{-j(5\pi r/16)} - e^{j(4\pi r/16)}}{e^{-j(\pi r/16)} - 1} \right]$$

$$= \left(\frac{1}{32}\right) \frac{e^{-j(0.5\pi r/16)} \left[e^{-j(4.5\pi r/16)} - e^{j(4.5\pi r/16)}\right]}{e^{-j(0.5\pi r/16)} \left[e^{-j(0.5\pi r/16)} - e^{j(0.5\pi r/16)}\right]}$$

$$= \left(\frac{1}{32}\right) \frac{\sin\left(\frac{4.5\pi r}{16}\right)}{\sin\left(\frac{0.5\pi r}{16}\right)}$$

$$= \left(\frac{1}{32}\right) \frac{\sin\left(4.5r\Omega_{0}\right)}{\sin\left(0.5r\Omega_{0}\right)} \qquad \Omega_{0} = \frac{\pi}{16}$$
(9.10)

This spectrum (with its periodic extension) is depicted in Fig. 9.2b.

### DISCRETE-TIME FOURIER SERIES USING MATLAB

Let us confirm our results by using MATLAB to directly compute the DTFS according to Eq. (9.4).

```
>> N_0 = 32; n = (0:N_0-1); Omega_0 = 2*pi/N_0;
>> x_n = [ones(1,5) zeros(1,23) ones(1,4)];
>> for r = 0:N_0-1,
>> X_r(r+1) = sum(x_n.*exp(-j*r*Omega_0*n))/N_0;
>> end
>> r = n; stem(r,real(X_r),'k.');
>> xlabel('r'); ylabel('X_r'); axis([0 31 -.1 0.3]);
```

The MATLAB result, shown in Fig. 9.3, matches Fig. 9.2b. Alternatively, scaling the FFT by  $N_0$  produces the exact same result (Fig. 9.3).


>> X\_r = fft(x\_n)/N\_0; stem(r,real(X\_r),'k.');

```
>> xlabel('r'); ylabel('X_r'); axis([0 31 -.1 0.3]);
```

$$\frac{1}{32} \sum_{n=-4}^{4} x[n] = \frac{9}{32}$$

Fortunately, the value of  $\mathcal{D}_0$ , as computed from Eq. (9.10), also happens to be 9/32. Hence, Eq. (9.10) is valid for all *r*.

<sup>&</sup>lt;sup>†</sup> Strictly speaking, the geometric progression sum formula applies only if the common ratio  $e^{-j(\pi/16)r} \neq 1$ . When r = 0, this ratio is unity. Hence, Eq. (9.10) is valid for values of  $r \neq 0$ . For the case r = 0, the sum in Eq. (9.9) is given by

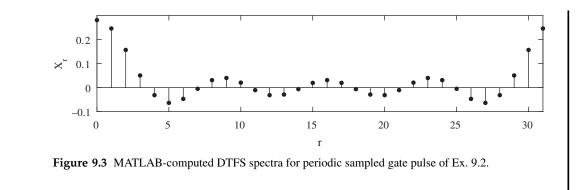

# 9.2 APERIODIC SIGNAL REPRESENTATION BY FOURIER INTEGRAL

In Sec. 9.1 we succeeded in representing periodic signals as a sum of (everlasting) exponentials. In this section we extend this representation to aperiodic signals. The procedure is identical conceptually to that used in Ch. 7 for continuous-time signals.

Applying a limiting process, we now show that an aperiodic signal x[n] can be expressed as a continuous sum (integral) of everlasting exponentials. To represent an aperiodic signal x[n] such as the one illustrated in Fig. 9.4a by everlasting exponential signals, let us construct a new periodic signal  $x_{N_0}[n]$  formed by repeating the signal x[n] every  $N_0$  units, as shown in Fig. 9.4b. The period  $N_0$  is made large enough to avoid overlap between the repeating cycles ( $N_0 \ge 2N + 1$ ). The periodic signal  $x_{N_0}[n]$  can be represented by an exponential Fourier series. If we let  $N_0 \to \infty$ , the signal

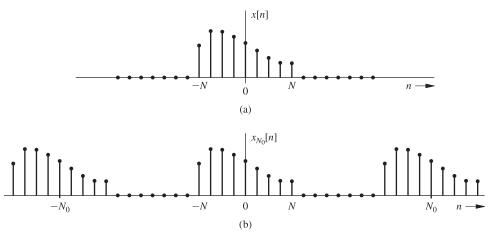


Figure 9.4 Generation of a periodic signal by periodic extension of a signal x[n].

x[n] repeats after an infinite interval, and therefore,

$$\lim_{N_0\to\infty} x_{N_0}[n] = x[n]$$

Thus, the Fourier series representing  $x_{N_0}[n]$  will also represent x[n] in the limit  $N_0 \to \infty$ . The exponential Fourier series for  $x_{N_0}[n]$  is given by

$$x_{N_0}[n] = \sum_{r = \langle N_0 \rangle} \mathcal{D}_r e^{jr\Omega_0 n} \qquad \Omega_0 = \frac{2\pi}{N_0}$$
(9.11)

where

$$\mathcal{D}_r = \frac{1}{N_0} \sum_{n=-\infty}^{\infty} x[n] e^{-jr\Omega_0 n}$$
(9.12)

The limits for the sum on the right-hand side of Eq. (9.12) should be from -N to N. But because x[n] = 0 for |n| > N, it does not matter if the limits are taken from  $-\infty$  to  $\infty$ .

It is interesting to see how the nature of the spectrum changes as  $N_0$  increases. To understand this behavior, let us define  $X(\Omega)$ , a continuous function of  $\Omega$ , as

$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}$$
(9.13)

From this definition and Eq. (9.12), we have

$$\mathcal{D}_r = \frac{1}{N_0} X(r\Omega_0) \tag{9.14}$$

This result shows that the Fourier coefficients  $\mathcal{D}_r$  are  $1/N_0$  times the samples of  $X(\Omega)$  taken every  $\Omega_0$  rad/s.<sup>†</sup> Therefore,  $(1/N_0)X(\Omega)$  is the envelope for the coefficients  $\mathcal{D}_r$ . We now let  $N_0 \to \infty$  by doubling  $N_0$  repeatedly. Doubling  $N_0$  halves the fundamental frequency  $\Omega_0$ , with the result that the spacing between successive spectral components (harmonics) is halved, and there are now twice as many components (samples) in the spectrum. At the same time, by doubling  $N_0$ , the envelope of the coefficients  $\mathcal{D}_r$  is halved, as seen from Eq. (9.14). If we continue this process of doubling  $N_0$  repeatedly, the number of components doubles in each step; the spectrum progressively becomes denser, while its magnitude  $\mathcal{D}_r$  becomes smaller. Note, however, that the relative shape of the fundamental frequency  $\Omega_0 \to 0$ , and  $\mathcal{D}_r \to 0$ . The separation between successive harmonics, which is  $\Omega_0$ , is approaching zero (infinitesimal), and the spectrum becomes so dense that it appears to be continuous. But as the number of harmonics increases indefinitely, the harmonic amplitudes  $\mathcal{D}_r$  become vanishingly small (infinitesimal). We discussed an identical situation in Sec. 7.1.

We follow the procedure in Sec. 7.1 and let  $N_0 \rightarrow \infty$ . According to Eq. (9.13),

$$X(r\Omega_0) = \sum_{n=-\infty}^{\infty} x[n] e^{-jr\Omega_0 n}$$

<sup>&</sup>lt;sup>†</sup> For the sake of simplicity we assume  $\mathcal{D}_r$  and therefore  $X(\Omega)$  to be real. The argument, however, is also valid for complex  $\mathcal{D}_r$  [or  $X(\Omega)$ ].

Using Eq. (9.14), we can express Eq. (9.11) as

$$x_{N_0}[n] = \frac{1}{N_0} \sum_{r = \langle N_0 \rangle} X(r\Omega_0) e^{jr\Omega_0 n} = \sum_{r = \langle N_0 \rangle} X(r\Omega_0) e^{jr\Omega_0 n} \left(\frac{\Omega_0}{2\pi}\right)$$

In the limit as  $N_0 \to \infty$ ,  $\Omega_0 \to 0$  and  $x_{N_0}[n] \to x[n]$ . Therefore,

$$x[n] = \lim_{\Omega_0 \to 0} \sum_{r = \langle N_0 \rangle} \left[ \frac{X(r\Omega_0)\Omega_0}{2\pi} \right] e^{jr\Omega_0 n}$$
(9.15)

Because  $\Omega_0$  is infinitesimal, it will be appropriate to replace  $\Omega_0$  with an infinitesimal notation  $\Delta\Omega$ :

$$\Delta \Omega = \frac{2\pi}{N_0} \tag{9.16}$$

Equation (9.15) can be expressed as

$$x[n] = \lim_{\Delta\Omega \to 0} \frac{1}{2\pi} \sum_{r = \langle N_0 \rangle} X(r\Delta\Omega) e^{jr\Delta\Omega n} \Delta\Omega$$
(9.17)

The range  $r = \langle N_0 \rangle$  implies the interval of  $N_0$  number of harmonics, which is  $N_0 \Delta \Omega = 2\pi$  according to Eq. (9.16). In the limit, the right-hand side of Eq. (9.17) becomes the integral

$$x[n] = \frac{1}{2\pi} \int_{2\pi} X(\Omega) e^{jn\Omega} d\Omega$$
(9.18)

where  $\int_{2\pi}$  indicates integration over any continuous interval of  $2\pi$ . The spectrum  $X(\Omega)$  is given by [Eq. (9.13)]

$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}$$
(9.19)

The integral on the right-hand side of Eq. (9.18) is called the *Fourier integral*. We have now succeeded in representing an aperiodic signal x[n] by a Fourier integral (rather than a Fourier series). This integral is basically a Fourier series (in the limit) with fundamental frequency  $\Delta\Omega \rightarrow 0$ , as seen in Eq. (9.17). The amount of the exponential  $e^{ir\Delta\Omega n}$  is  $X(r\Delta\Omega)\Delta\Omega/2\pi$ . Thus, the function  $X(\Omega)$  given by Eq. (9.19) acts as a spectral function, which indicates the relative amounts of various exponential components of x[n].

We call  $X(\Omega)$  the (direct) discrete-time Fourier transform (DTFT) of x[n], and x[n] the inverse discrete-time Fourier transform (IDTFT) of  $X(\Omega)$ . This nomenclature can be represented as

$$X(\Omega) = \text{DTFT}\{x[n]\}$$
 and  $x[n] = \text{IDTFT}\{X(\Omega)\}$ 

The same information is conveyed by the statement that x[n] and  $X(\Omega)$  are a (discrete-time) Fourier transform pair. Symbolically, this is expressed as

$$x[n] \Longleftrightarrow X(\Omega)$$

The Fourier transform  $X(\Omega)$  is the frequency-domain description of x[n].

### 9.2-1 Nature of Fourier Spectra

We now discuss several important features of the discrete-time Fourier transform and the spectra associated with it.

### Fourier Spectra Are Continuous Functions of $\Omega$

Although x[n] is a discrete-time signal,  $X(\Omega)$ , its DTFT is a continuous function of  $\Omega$  for the simple reason that  $\Omega$  is a continuous variable, which can take any value over a continuous interval from  $-\infty$  to  $\infty$ .

# Fourier Spectra Are Periodic Functions of $\Omega$ with Period $2\pi$

From Eq. (9.19), it follows that

$$X(\Omega+2\pi) = \sum_{n=-\infty}^{\infty} x[n]e^{-j(\Omega+2\pi)n} = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}e^{-j2\pi n} = X(\Omega)$$

Clearly, the spectrum  $X(\Omega)$  is a continuous, periodic function of  $\Omega$  with period  $2\pi$ . We must remember, however, that to synthesize x[n], we need to use the spectrum over a frequency interval of only  $2\pi$ , starting at any value of  $\Omega$  [see Eq. (9.18)]. As a matter of convenience, we shall choose this interval to be the fundamental frequency range  $(-\pi, \pi)$ . It is, therefore, not necessary to show discrete-time-signal spectra beyond the fundamental range, although we often do so.

The reason for the periodic behavior of  $X(\Omega)$  was discussed in Ch. 5, where we showed that, in a basic sense, the discrete-time frequency  $\Omega$  is bandlimited to  $|\Omega| \le \pi$ . However, all discrete-time sinusoids with frequencies separated by an integer multiple of  $2\pi$  are identical. This is why the spectrum is  $2\pi$  periodic.

### CONJUGATE SYMMETRY OF $X(\Omega)$

From Eq. (9.19), we obtain the DTFT of  $x^*[n]$  as

$$\text{DTFT}\{x^*[n]\} = \sum_{n=-\infty}^{\infty} x^*[n]e^{-j\Omega n} = X^*(-\Omega)$$

In other words,

$$x^*[n] \Longleftrightarrow X^*(-\Omega) \tag{9.20}$$

For real x[n], Eq. (9.20) reduces to  $x[n] \iff X^*(-\Omega)$ , which implies that for real x[n]

$$X(\Omega) = X^*(-\Omega)$$

Therefore, for real x[n],  $X(\Omega)$  and  $X(-\Omega)$  are conjugates. Since  $X(\Omega)$  is generally complex, we have both amplitude and angle (or phase) spectra

$$X(\Omega) = |X(\Omega)|e^{j \angle X(\Omega)}$$

Because of conjugate symmetry of  $X(\Omega)$ , it follows that for real x[n],

$$|X(\Omega)| = |X(-\Omega)|$$
 and  $\angle X(\Omega) = -\angle X(-\Omega)$ 

Therefore, the amplitude spectrum  $|X(\Omega)|$  is an even function of  $\Omega$  and the phase spectrum  $\angle X(\Omega)$  is an odd function of  $\Omega$  for real x[n].

# PHYSICAL APPRECIATION OF THE DISCRETE-TIME FOURIER TRANSFORM

In understanding any aspect of the Fourier transform, we should remember that Fourier representation is a way of expressing a signal x[n] as a sum of everlasting exponentials (or sinusoids). The Fourier spectrum of a signal indicates the relative amplitudes and phases of the exponentials (or sinusoids) required to synthesize x[n].

A detailed explanation of the nature of such sums over a continuum of frequencies is provided in Sec. 7.1-1.

### EXISTENCE OF THE DTFT

Because  $|e^{-j\Omega n}| = 1$ , from Eq. (9.19), it follows that the existence of  $X(\Omega)$  is guaranteed if x[n] is absolutely summable; that is,

$$\sum_{n=-\infty}^{\infty} |x[n]| < \infty \tag{9.21}$$

This shows that the condition of absolute summability is a sufficient condition for the existence of the DTFT representation. This condition also guarantees its uniform convergence. The inequality

$$\left[\sum_{n=-\infty}^{\infty} |x[n]|\right]^2 \ge \sum_{n=-\infty}^{\infty} |x[n]|^2$$

shows that the energy of an absolutely summable sequence is finite. However, not all finite-energy signals are absolutely summable. Signal  $x[n] = \operatorname{sinc}(n)$  is such an example. For such signals, the DTFT converges, not uniformly, but in the mean.<sup>†</sup>

To summarize,  $X(\Omega)$  exists under a weaker condition

1

$$\sum_{n=-\infty}^{\infty} |x[n]|^2 < \infty \tag{9.22}$$

The DTFT under this condition is guaranteed to converge in the mean. Thus, the DTFT of the exponentially growing signal  $\gamma^n u[n]$  does not exist when  $|\gamma| > 1$  because the signal violates Eqs. (9.21) and (9.22). But the DTFT exists for the signal sinc(*n*), which violates Eq. (9.21) but does satisfy Eq. (9.22) (see later, Ex. 9.6). In addition, if the use of  $\delta(\Omega)$ , the continuous-time impulse function, is permitted, we can even find the DTFT of some signals that violate both Eq. (9.21) and Eq. (9.22). Such signals are not absolutely summable, nor do they have finite energy. For example, as seen from pairs 11 and 12 of Table 9.1, the DTFT of x[n] = 1 for all *n* and  $x[n] = e^{j\Omega_0 n}$  exist, although they violate Eqs. (9.21) and (9.22).

$$\lim_{M \to \infty} \int_{-\pi}^{\pi} \left| X(\Omega) - \sum_{n=-M}^{M} x[n] e^{-j\Omega n} \right|^2 d\Omega = 0$$

<sup>&</sup>lt;sup>†</sup>This means

No.	x[n]	$X(\mathbf{\Omega})$
1	$\delta[n-k]$	$e^{-jk\Omega}$ Integer k
2	$\gamma^n u[n]$	$\frac{e^{j\Omega}}{e^{j\Omega} - \gamma} \qquad  \gamma  < 1$
3	$-\gamma^n u[-(n+1)]$	$\frac{e^{j\Omega}}{e^{j\Omega} - \gamma} \qquad \qquad  \gamma  > 1$
4	$\gamma^{ n }$	$\frac{1 - \gamma^2}{1 - 2\gamma \cos \Omega + \gamma^2} \qquad  \gamma  < 1$
5	$n\gamma^n u[n]$	$\frac{\gamma e^{i\Omega}}{(e^{j\Omega} - \gamma)^2} \qquad  \gamma  < 1$
6	$\gamma^n \cos{(\Omega_0 n + \theta)} u[n]$	$\frac{e^{j\Omega}[e^{j\Omega}\cos\theta - \gamma\cos\left(\Omega_0 - \theta\right)]}{e^{j2\Omega} - (2\gamma\cos\Omega_0)e^{j\Omega} + \gamma^2} \qquad  \gamma  < 1$
7	u[n] - u[n - M]	$\frac{\sin(M\Omega/2)}{\sin(\Omega/2)} e^{-j\Omega(M-1)/2}$
8	$\frac{\Omega_c}{\pi} \operatorname{sinc}\left(\Omega_c n\right)$	$\sum_{k=-\infty}^{\infty} \operatorname{rect}\left(\frac{\Omega - 2\pi k}{2\Omega_c}\right) \qquad \qquad \Omega_c \le \pi$
9	$\frac{\Omega_c}{2\pi}\operatorname{sinc}^2\left(\frac{\Omega_c n}{2}\right)$	$\sum_{k=-\infty}^{\infty} \Delta\left(\frac{\Omega - 2\pi k}{2\Omega_c}\right) \qquad \qquad \Omega_c \le \pi$
10	<i>u</i> [ <i>n</i> ]	$\frac{e^{j\Omega}}{e^{j\Omega}-1} + \pi \sum_{k=-\infty}^{\infty} \delta(\Omega - 2\pi k)$
11	1 for all <i>n</i>	$2\pi \sum_{k=-\infty}^{\infty} \delta(\Omega - 2\pi k)$
12	$e^{j\Omega_0 n}$	$2\pi \sum_{k=-\infty}^{\infty} \delta(\Omega - \Omega_0 - 2\pi k)$
13	$\cos \Omega_0 n$	$\pi \sum_{k=-\infty}^{\infty} \delta(\Omega - \Omega_0 - 2\pi k) + \delta(\Omega + \Omega_0 - 2\pi k)$
14	$\sin \Omega_0 n$	$j\pi \sum_{k=-\infty}^{\infty} \delta(\Omega + \Omega_0 - 2\pi k) - \delta(\Omega - \Omega_0 - 2\pi k)$
15	$(\cos \Omega_0 n) u[n]$	$\frac{e^{j\Omega} - e^{j\Omega}\cos\Omega_0}{e^{j\Omega} - 2e^{j\Omega}\cos\Omega_0 + 1} + \frac{\pi}{2}\sum_{k=-\infty}^{\infty}\delta(\Omega - 2\pi k - \Omega_0) + \delta(\Omega - 2\pi k + \Omega_0)$
16	$(\sin\Omega_0 n) u[n]$	$\frac{e^{j\Omega}\sin\Omega_0}{e^{j2\Omega}-2e^{j\Omega}\cos\Omega_0+1}+\frac{\pi}{2j}\sum_{k=-\infty}^{\infty}\delta(\Omega-2\pi k-\Omega_0)-\delta(\Omega-2\pi k+\Omega_0)$

**TABLE 9.1** Select Discrete-Time Fourier Transform Pairs

# **EXAMPLE 9.3 DTFT of a Causal Exponential**

Find the DTFT of  $x[n] = \gamma^n u[n]$ .

Using the definition, the DTFT is

$$X(\Omega) = \sum_{n=0}^{\infty} \gamma^n e^{-j\Omega n} = \sum_{n=0}^{\infty} (\gamma e^{-j\Omega})^n$$

This is an infinite geometric series with a common ratio  $\gamma e^{-j\Omega}$ . Therefore (see Sec. B.8-3),

$$X(\Omega) = \frac{1}{1 - \gamma e^{-j\Omega}}$$

provided  $|\gamma e^{-j\Omega}| < 1$ . But because  $|e^{-j\Omega}| = 1$ , this condition implies  $|\gamma| < 1$ . Therefore,

$$X(\Omega) = \frac{1}{1 - \gamma e^{-j\Omega}} \qquad |\gamma| < 1$$

If  $|\gamma| > 1$ ,  $X(\Omega)$  does not converge. This result is in conformity with Eqs. (9.21) and (9.22). To determine magnitude and phase responses, we note that

$$X(\Omega) = \frac{1}{1 - \gamma \cos \Omega + j\gamma \sin \Omega}$$
(9.23)

so

$$|X(\Omega)| = \frac{1}{\sqrt{(1 - \gamma \cos \Omega)^2 + (\gamma \sin \Omega)^2}} = \frac{1}{\sqrt{1 + \gamma^2 - 2\gamma \cos \Omega}}$$


and

$$\angle X(\Omega) = -\tan^{-1}\left[\frac{\gamma\sin\Omega}{1-\gamma\cos\Omega}\right]$$


Figure 9.5 shows  $x[n] = \gamma^n u[n]$  and its spectra for  $\gamma = 0.8$ . Observe that the frequency spectra are continuous and periodic functions of  $\Omega$  with the period  $2\pi$ . As explained earlier, we need to use the spectrum only over the frequency interval of  $2\pi$ . We often select this interval to be the fundamental frequency range  $(-\pi, \pi)$ .

The amplitude spectrum  $|X(\Omega)|$  is an even function and the phase spectrum  $\angle X(\Omega)$  is an odd function of  $\Omega$ .

862

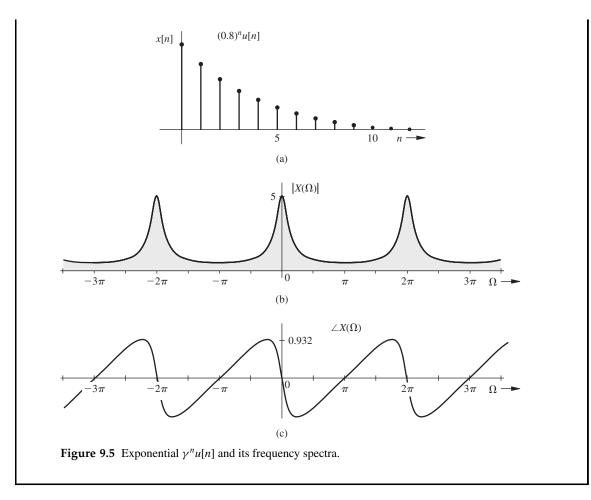

# **EXAMPLE 9.4 DTFT of an Anticausal Exponential**

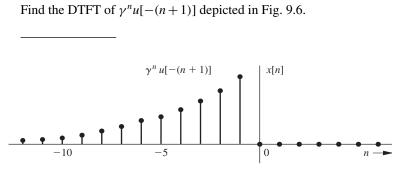

**Figure 9.6** Exponential  $\gamma^n u[-(n+1)]$ .

Using the definition, the DTFT is

$$X(\Omega) = \sum_{n=-\infty}^{\infty} \gamma^n u[-(n+1)] e^{-j\Omega n} = \sum_{n=-1}^{-\infty} (\gamma e^{-j\Omega})^n = \sum_{n=-1}^{-\infty} \left(\frac{1}{\gamma} e^{j\Omega}\right)^{-n}$$

Setting n = -m yields

$$x[n] = \sum_{m=1}^{\infty} \left(\frac{1}{\gamma} e^{j\Omega}\right)^m = \frac{1}{\gamma} e^{j\Omega} + \left(\frac{1}{\gamma} e^{j\Omega}\right)^2 + \left(\frac{1}{\gamma} e^{j\Omega}\right)^3 + \cdots$$

This is a geometric series with a common ratio  $e^{j\Omega}/\gamma$ . Therefore, from Sec. B.8-3,

$$X(\Omega) = \frac{1}{\gamma e^{-j\Omega} - 1} = \frac{1}{(\gamma \cos \Omega - 1) - j\gamma \sin \Omega}, \qquad |\gamma| > 1$$

Therefore,

$$|X(\Omega)| = \frac{1}{\sqrt{1 + \gamma^2 - 2\gamma \cos \Omega}}$$
 and  $\angle X(\Omega) = \tan^{-1} \left[ \frac{\gamma \sin \Omega}{\gamma \cos \Omega - 1} \right]$ 

Except for the change of sign, this Fourier transform (and the corresponding frequency spectra) is identical to that of  $x[n] = \gamma^n u[n]$ . Yet there is no ambiguity in determining the IDTFT of  $X(\Omega) = 1/(\gamma e^{-j\Omega} - 1)$  because of the restrictions on the value of  $\gamma$  in each case. If  $|\gamma| < 1$ , then the inverse transform is  $x[n] = -\gamma^n u[n]$ . If  $|\gamma| > 1$ , it is  $x[n] = \gamma^n [-(n+1)]$ .

# **EXAMPLE 9.5 DTFT of a Rectangular Pulse**

Find the DTFT of the discrete-time rectangular pulse illustrated in Fig. 9.7a. This pulse is also known as the 9-point rectangular window function.

$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n] e^{-j\Omega n} = \sum_{n=-(M-1)/2}^{(M-1)/2} (e^{-j\Omega})^n \qquad M = 9$$

This is a geometric progression with a common ratio  $e^{-j\Omega}$  and (see Sec. B.8-3)

$$X(\Omega) = \frac{e^{-j[(M+1)/2]\Omega} - e^{j[(M-1)/2]\Omega}}{e^{-j\Omega} - 1}$$
$$= \frac{e^{-j\Omega/2} \left( e^{-j(M/2)\Omega} - e^{j(M/2)\Omega} \right)}{e^{-j\Omega/2} \left( e^{-j\Omega/2} - e^{j\Omega/2} \right)}$$

863

$$=\frac{\sin\left(\frac{M}{2}\Omega\right)}{\sin\left(0.5\Omega\right)}\tag{9.24}$$

$$=\frac{\sin(4.5\Omega)}{\sin(0.5\Omega)} \qquad \text{for } M=9 \tag{9.25}$$

Figure 9.7b shows the spectrum  $X(\Omega)$  for M = 9.

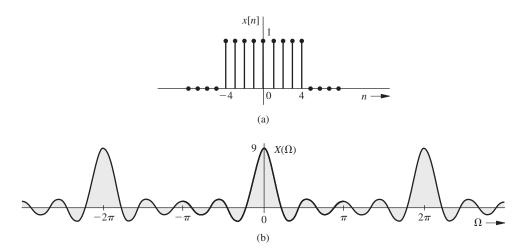


Figure 9.7 (a) Discrete-time gate pulse and (b) its Fourier spectrum.

### DISCRETE-TIME FOURIER TRANSFORM USING MATLAB

Within a scale factor, the DTFS is identical to the DFT and, therefore, the FFT. That is, the DTFS is just the FFT scaled by  $\frac{1}{N_0}$ . Combined with Eq. (9.14), we see that the DFT  $X_r$  of finite-duration signal x[n] (repeated with period  $N_0$  large enough to avoid overlap) is just samples of the DTFT  $X(\Omega)$  taken at  $\Omega = r\Omega_0$ . That is, the length- $N_0$  DFT of signal x[n] yields  $N_0$  samples of its DTFT  $X(\Omega)$  as

$$X_r = X(r\Omega_0),$$
 where  $\Omega_0 = \frac{2\pi}{N_0}$  (9.26)

This relationship provides a way to use MATLAB's fft command to validate our DTFT calculations. By appropriately zero-padding x[n], we can obtain as many samples of  $X(\Omega)$  as are desired. Let us demonstrate the process for the current example using  $N_0 = 64$ . Notice that in taking the DFT, we modulo- $N_0$  shift our rectangular pulse signal to occupy  $0 \le n \le N_0 - 1$ .


```
>> Omega = linspace(0,2*pi,1000);
```

```
>> X = sin(4.5*Omega)./sin(0.5*Omega); X(mod(Omega,2*pi)==0) = 4.5/0.5;
```

```
>> N_0 = 64; M = 9; x = [ones(1, (M+1)/2) zeros(1, N_0-M) ones(1, (M-1)/2)];
```

```
>> Xr = fft(x); Omega_0 = 2*pi/N_0; r = 0:N_0-1;
```

864

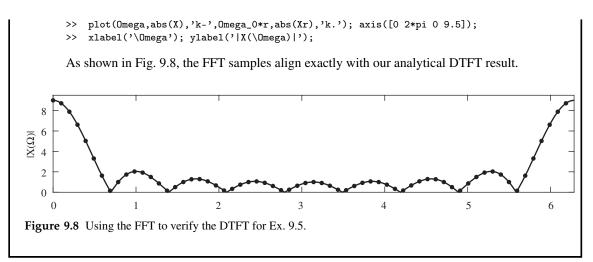

## **EXAMPLE 9.6** Inverse DTFT of a Rectangular Spectrum

Find the inverse DTFT of the rectangular pulse spectrum described over the fundamental band  $(|\Omega| \le \pi)$  by  $X(\Omega) = \text{rect}(\Omega/2\Omega_c)$  for  $\Omega_c \le \pi$ . Because of the periodicity property,  $X(\Omega)$  repeats at the intervals of  $2\pi$ , as shown in Fig. 9.9a.

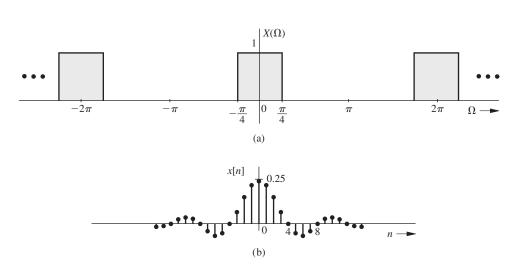


Figure 9.9 Periodic gate spectrum and its inverse discrete-time Fourier transform.

According to Eq. (9.18),

$$x[n] = \frac{1}{2\pi} \int_{-\pi}^{\pi} X(\Omega) e^{jn\Omega} d\Omega = \frac{1}{2\pi} \int_{-\Omega_c}^{\Omega_c} e^{jn\Omega} d\Omega$$
$$= \frac{1}{j2\pi n} e^{jn\Omega} \Big|_{-\Omega_c}^{\Omega_c} = \frac{\sin(\Omega_c n)}{\pi n} = \frac{\Omega_c}{\pi} \operatorname{sinc}(\Omega_c n)$$

The signal x[n] is depicted in Fig. 9.9b (for the case  $\Omega_c = \pi/4$ ).

# **DRILL 9.4** Finding the DTFT

Find the DTFT and sketch the corresponding amplitude and phase spectra for

(a) 
$$x[n] = \gamma^{|k|}$$
 with  $|\gamma| < 1$ 

**(b)** 
$$y[n] = \delta[n+1] - \delta[n-1]$$

### **ANSWERS**

(a) 
$$X(\Omega) = \frac{1 - \gamma^2}{1 - 2\gamma \cos \Omega + \gamma^2}$$
  
(b)  $|Y(\Omega)| = 2|\sin \Omega|$  and  $\angle Y(\omega) = (\pi/2)[1 - \operatorname{sgn}(\sin \Omega)]$ 

### 9.2-2 Connection Between the DTFT and the *z*-Transform

The connection between the (bilateral) *z*-transform and the DTFT is similar to that between the Laplace transform and the Fourier transform. The *z*-transform of x[n], according to Eq. (5.1), is

$$X[z] = \sum_{n=-\infty}^{\infty} x[n] z^{-n}$$
(9.27)

Setting  $z = e^{i\Omega}$  in this equation yields

$$X[e^{j\Omega}] = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}$$

The right-hand side sum defines  $X(\Omega)$ , the DTFT of x[n]. Does this mean that the DTFT can be obtained from the corresponding *z*-transform by setting  $z = e^{j\Omega}$ ? In other words, is it true that  $X[e^{j\Omega}] = X(\Omega)$ ? Yes, it is true in most cases. For example, when  $x[n] = a^n u[n]$ , its *z*-transform is z/(z-a), and  $X[e^{j\Omega}] = e^{j\Omega}/(e^{j\Omega} - a)$ , which is equal to  $X(\Omega)$  (assuming |a| < 1). However, for the unit step function u[n], the *z*-transform is z/(z-1), and  $X[e^{j\Omega}] = e^{j\Omega}/(e^{j\Omega} - 1)$ . As seen from Table 9.1, pair 10, this is not equal to  $X(\Omega)$  in this case.

We obtained  $X[e^{j\Omega}]$  by setting  $z = e^{j\Omega}$  in Eq. (9.27). This implies that the sum on the right-hand side of Eq. (9.27) converges for  $z = e^{j\Omega}$ , which means the unit circle (characterized by  $z = e^{j\Omega}$ ) lies in the region of convergence for X[z]. Hence, the general rule is that setting  $z = e^{j\Omega}$  in X[z] yields the DTFT  $X(\Omega)$  only when the ROC for X[z] includes the unit circle. This applies for all x[n] that are absolutely summable. If the ROC of X[z] excludes the unit circle,  $X[e^{j\Omega}] \neq X(\Omega)$ . This applies to all exponentially growing x[n] and also x[n], which either is constant or oscillates with constant amplitude.

The reason for this peculiar behavior has something to do with the nature of convergence of the *z*-transform and the DTFT.<sup> $\dagger$ </sup>

This discussion shows that although the DTFT may be considered to be a special case of the *z*-transform, we need to circumscribe such a view. This cautionary note is supported by the fact that a periodic signal has the DTFT, but its *z*-transform does not exist.

### 9.3 PROPERTIES OF THE DTFT

A close connection exists between the DTFT and the CTFT (continuous-time Fourier transform). For this reason, which Sec. 9.4 discusses, the properties of the DTFT are very similar to those of the CTFT, as the following discussion shows.

# LINEARITY OF THE DTFT

 $x_1[n] \Longleftrightarrow X_1(\Omega)$  and  $x_2[n] \Longleftrightarrow X_2(\Omega)$ 

then

$$a_1x_1[n] + a_2x_2[n] \iff a_1X_1(\Omega) + a_2X_2(\Omega)$$

The proof is trivial. The result can be extended to any finite sums.

### CONJUGATE SYMMETRY OF $X(\Omega)$

In Eq. (9.20), we proved the *conjugation property* 

$$x^*[n] \Longleftrightarrow X^*(-\Omega) \tag{9.28}$$

<sup>&</sup>lt;sup>†</sup> To explain this point, consider the unit step function u[n] and its transforms. Both the *z*-transform and the DTFT synthesize x[n], using everlasting exponentials of the form  $z^n$ . The value of *z* can be anywhere in the complex *z*-plane for the *z*-transform, but it must be restricted to the unit circle  $(z = e^{j\Omega})$  in the case of the DTFT. The unit step function is readily synthesized in the *z*-transform by a relatively simple spectrum X[z] = z/(z-1), by choosing *z* outside the unit circle (the ROC for u[n] is |z| > 1). In the DTFT, however, we are restricted to values of *z* only on the unit circle  $(z = e^{j\Omega})$ . The function u[n] can still be synthesized by values of *z* on the unit circle, but the spectrum is more complicated than when we are free to choose *z* anywhere, including the region outside the unit circle. In contrast, when x[n] is absolutely summable, the region of convergence for the *z*-transform includes the unit circle, and we can synthesize x[n] by using *z* along the unit circle in both the transforms. This leads to  $X[e^{j\Omega}] = X(\Omega)$ .

We also showed that as a consequence of this, when x[n] is real,  $X(\Omega)$  and  $X(-\Omega)$  are conjugates, that is,

$$X(-\Omega) = X^*(\Omega)$$

This is the *conjugate symmetry* property. Since  $X(\Omega)$  is generally complex, we have both amplitude and angle (or phase) spectra

$$X(\Omega) = |X(\Omega)|e^{j \angle X(\Omega)}$$

Hence, for real x[n], it follows that

$$|X(\Omega)| = |X(-\Omega)|$$
 and  $\angle X(\Omega) = -\angle X(-\Omega)$ 

Therefore, for real x[n], the amplitude spectrum  $|X(\Omega)|$  is an even function of  $\Omega$  and the phase spectrum  $\angle X(\Omega)$  is an odd function of  $\Omega$ .

### TIME AND FREQUENCY REVERSAL

Also called the reflection property, the time and frequency reversal property states that

$$x[-n] \Longleftrightarrow X(-\Omega) \tag{9.29}$$

Demonstration of this property is straightforward. From Eq. (9.19), the DTFT of x[-n] is

$$\text{DTFT}\{x[-n]\} = \sum_{n=-\infty}^{\infty} x[-n]e^{-j\Omega n} = \sum_{m=-\infty}^{\infty} x[m]e^{j\Omega m} = X(-\Omega)$$

# **EXAMPLE 9.7** Using the Reflection Property

Use the time-frequency reversal property of Eq. (9.29) and pair 2 in Table 9.1 to derive pair 4 in Table 9.1.

Pair 2 states that

$$\gamma^{n}u[n] = \frac{e^{i\Omega}}{e^{j\Omega} - \gamma} \qquad |\gamma| < 1$$

Hence, from Eq. (9.29),

$$\gamma^{-n}u[-n] = \frac{e^{-j\Omega}}{e^{-j\Omega} - \gamma} \qquad |\gamma| < 1$$

Moreover,  $\gamma^{|n|}$  could be expressed as a sum of  $\gamma^n u[n]$  and  $\gamma^{-n} u[-n]$ , except that the impulse at n = 0 is counted twice (once from each of the two exponentials). Hence,

$$\gamma^{|n|} = \gamma^n u[n] + \gamma^{-n} u[-n] - \delta[n]$$

Combining these results and invoking the linearity property, we can write

$$\mathrm{DTFT}\left\{\gamma^{|n|}\right\} = \frac{e^{j\Omega}}{e^{j\Omega} - \gamma} + \frac{e^{-j\Omega}}{e^{-j\Omega} - \gamma} - 1 = \frac{1 - \gamma^2}{1 - 2\gamma \cos \Omega + \gamma^2} \qquad |\gamma| < 1$$

which agrees with pair 4 in Table 9.1.

## **DRILL 9.5 Using the Reflection Property**

In Table 9.1, derive pair 13 from pair 15 by using the time-reversal property of Eq. (9.29).

### MULTIPLICATION BY *n*: FREQUENCY DIFFERENTIATION

$$nx[n] \Longleftrightarrow j \frac{dX(\Omega)}{d\Omega}$$
(9.30)

The result follows immediately by differentiating both sides of Eq. (9.19) with respect to  $\Omega$ .

# **EXAMPLE 9.8** Using the Frequency-Differentiation Property

Use the frequency-differentiation property of Eq. (9.30) and pair 2 in Table 9.1 to derive pair 5 in Table 9.1.

Pair 2 states that

$$\gamma^n u[n] = \frac{e^{j\Omega}}{e^{j\Omega} - \gamma} \qquad |\gamma| < 1$$

Hence, from Eq. (9.30),

$$n\gamma^{n}u[n] = j\frac{d}{d\Omega} \left\{ \frac{e^{j\Omega}}{e^{j\Omega} - \gamma} \right\} = \frac{\gamma e^{j\Omega}}{(e^{j\Omega} - \gamma)^{2}} \qquad |\gamma| < 1$$

which agrees with pair 5 in Table 9.1.

# TIME-SHIFTING PROPERTY

$$x[n] \Longleftrightarrow X(\Omega)$$

then

$$x[n-k] \iff X(\Omega)e^{-jk\Omega}$$
 for integer k (9.31)

This property can be proved by direct substitution in the equation defining the direct transform. From Eq. (9.19), we obtain

$$\begin{split} x[n-k] &\longleftrightarrow \sum_{n=-\infty}^{\infty} x[n-k]e^{-j\Omega n} = \sum_{m=-\infty}^{\infty} x[m]e^{-j\Omega[m+k]} \\ &= e^{-j\Omega k} \sum_{n=-\infty}^{\infty} x[m]e^{-j\Omega m} = e^{-jk\Omega} X(\Omega) \end{split}$$

This result shows that delaying a signal by k samples does not change its amplitude spectrum. The phase spectrum, however, is changed by  $-k\Omega$ . This added phase is a linear function of  $\Omega$  with slope -k.

### PHYSICAL EXPLANATION OF LINEAR PHASE

Time delay in a signal causes a linear phase shift in its spectrum. The heuristic explanation of this result is exactly parallel to that for continuous-time signals given in Sec. 7.3 (see Fig. 7.22).

## **EXAMPLE 9.9** Demonstrating Linear Phase

To demonstrate the linear phase associated with a time shift, find the DTFT of  $x[n] = (1/4) \operatorname{sinc} (\pi (n-2)/4)$ , shown in Fig. 9.10a.

In Ex. 9.6, we found that


$$\frac{1}{4}\operatorname{sinc}\left(\frac{\pi n}{4}\right) \Longleftrightarrow \sum_{m=-\infty}^{\infty} \operatorname{rect}\left(\frac{\Omega - 2\pi m}{\pi/2}\right)$$

Use of the time-shifting property [Eq. (9.31)] yields (for integer *k*)

$$\frac{1}{4}\operatorname{sinc}\left(\frac{\pi(n-2)}{4}\right) \Longleftrightarrow \sum_{m=-\infty}^{\infty} \operatorname{rect}\left(\frac{\Omega-2\pi m}{\pi/2}\right) e^{-j2\Omega}$$

The spectrum of the shifted signal is shown in Fig. 9.10b.

870

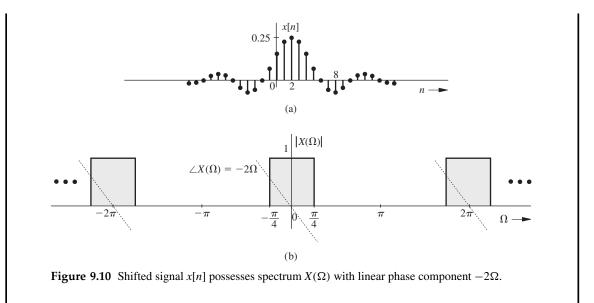

# DRILL 9.6 Using the Time-Shifting Property

Verify the result in Eq. (9.24) from pair 7 in Table 9.1 and the time-shifting property of the DTFT.

# FREQUENCY-SHIFTING PROPERTY If

 $x[n] \Longleftrightarrow X(\Omega)$ 

then

$$x[n]e^{j\Omega_c n} \Longleftrightarrow X(\Omega - \Omega_c) \tag{9.32}$$

This property is the dual of the time-shifting property. To prove the frequency-shifting property, we use Eq. (9.19) as

$$x[n]e^{j\Omega_c n} \longleftrightarrow \sum_{n=-\infty}^{\infty} x[n]e^{j\Omega_c n}e^{-j\Omega n} = \sum_{n=-\infty}^{\infty} x[n]e^{-j(\Omega-\Omega_c)n} = X(\Omega-\Omega_c)$$

From this result, it follows that

$$x[n]e^{-j\Omega_c n} \Longleftrightarrow X(\Omega + \Omega_c)$$

Adding this pair to the pair in Eq. (9.32), we obtain

$$x[n]\cos\left(\Omega_c n\right) \Longleftrightarrow \frac{1}{2} \{X(\Omega - \Omega_c) + X(\Omega + \Omega_c)\}$$
(9.33)

This is the *modulation property*.

Multiplying both sides of pair (9.32) by  $e^{j\theta}$ , we obtain

$$x[n]e^{j(\Omega_c n+\theta)} \iff X(\Omega - \Omega_c)e^{j\theta}$$

Using this pair, we can generalize the modulation property as

$$x[n]\cos\left(\Omega_{c}n+\theta\right) \iff \frac{1}{2}\left\{X(\Omega-\Omega_{c})e^{j\theta}+X(\Omega+\Omega_{c})e^{-j\theta}\right\}$$

### **EXAMPLE 9.10** Modulation Property

A signal  $x[n] = \operatorname{sinc}(\pi n/4)$  modulates a carrier  $\cos \Omega_c n$ . Find and sketch the spectrum of the modulated signal  $x[n] \cos \Omega_c n$  for

- (a)  $\Omega_c = \pi/2$
- **(b)**  $\Omega_c = 7\pi/8 = 0.875\pi$

(a) For  $x[n] = \operatorname{sinc}(\pi n/4)$ , we find (Table 9.1, pair 8)

$$X(\Omega) = 4\sum_{m=-\infty}^{\infty} \operatorname{rect}\left(\frac{\Omega - 2\pi m}{\pi/2}\right)$$

Figure 9.11a shows the DTFT  $X(\Omega)$ . From the modulation property of Eq. (9.33), we obtain

$$x[n]\cos(0.5\pi n) \Longleftrightarrow 2\sum_{m=-\infty}^{\infty} \operatorname{rect}\left(\frac{\Omega - 0.5\pi - 2\pi m}{0.5\pi}\right) + \operatorname{rect}\left(\frac{\Omega + 0.5\pi - 2\pi m}{0.5\pi}\right)$$

Figure 9.11b shows half the  $X(\Omega)$  shifted by  $\pi/2$  and Fig. 9.11c shows half the  $X(\Omega)$  shifted by  $-\pi/2$ . The spectrum of the modulated signal is obtained by adding these two shifted spectra and multiplying by half, as shown in Fig. 9.11d.

(b) Figure 9.12a shows  $X(\Omega)$ , which is the same as that in part (a). For  $\Omega_c = 7\pi/8 = 0.875\pi$ , the modulation property of Eq. (9.33) yields

$$x[n]\cos\left(0.875\pi n\right) \Longleftrightarrow 2\sum_{m=-\infty}^{\infty} \operatorname{rect}\left(\frac{\Omega - 0.875\pi - 2\pi m}{0.5\pi}\right) + \operatorname{rect}\left(\frac{\Omega + 0.875\pi - 2\pi m}{0.5\pi}\right)$$


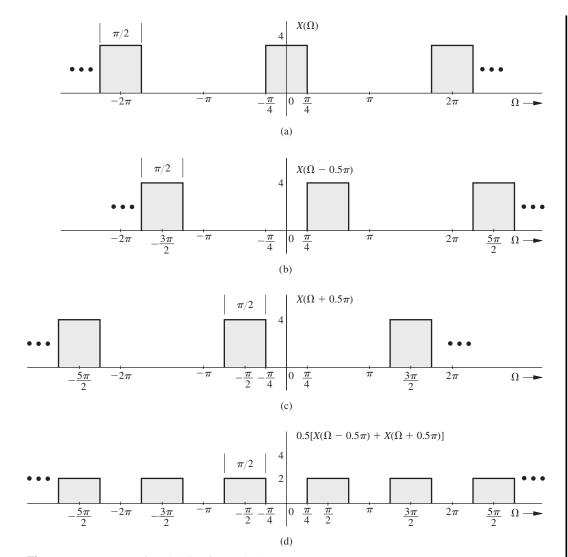


Figure 9.11 Instance of modulation for Ex. 9.10a.

Figure 9.12b shows  $X(\Omega)$  shifted by  $7\pi/8$  and Fig. 9.12c shows  $X(\Omega)$  shifted by  $-7\pi/8$ . The spectrum of the modulated signal is obtained by adding these two shifted spectra and multiplying by half, as shown in Fig. 9.12d. In this case, the two shifted spectra overlap. Since the operation of modulation thus causes aliasing, it does not achieve the desired effect of spectral shifting. In this example, to realize spectral shifting without aliasing requires  $\Omega_c \leq 3\pi/4$ . 874

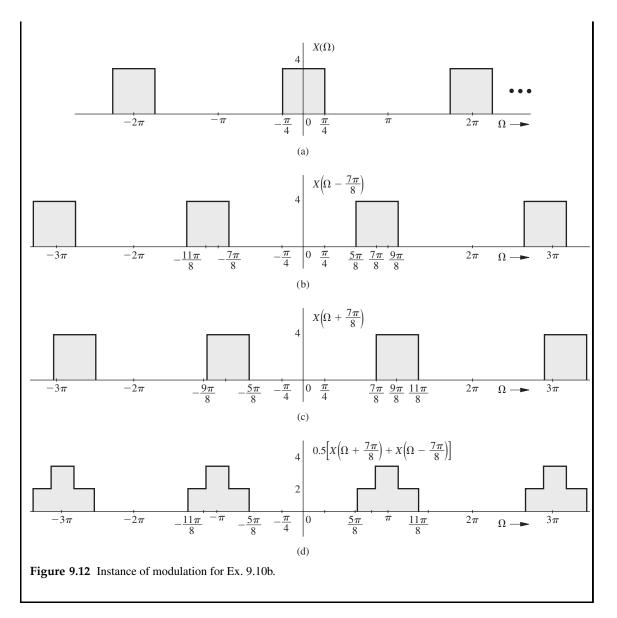

# DRILL 9.7 Using the Frequency-Shifting Property

In Table 9.1, derive pairs 12 and 13 from pair 11 and the frequency-shifting/modulation property.

# TIME- AND FREQUENCY-CONVOLUTION PROPERTY IF

 $x_1[n] \Longleftrightarrow X_1(\Omega)$  and  $x_2[n] \Longleftrightarrow X_2(\Omega)$ 

then

$$x_1[n] * x_2[n] \Longleftrightarrow X_1(\Omega) X_2(\Omega) \tag{9.34}$$

and

$$x_1[n]x_2[n] \iff \frac{1}{2\pi} X_1(\Omega) \circledast X_2(\Omega)$$
 (9.35)

where

$$x_1[n] * x_2[n] = \sum_{m=-\infty}^{\infty} x_1[m] x_2[n-m]$$

For two continuous, periodic signals, we define the periodic convolution, denoted by symbol  $\circledast as^{\dagger}$ 

$$X_1(\Omega) \circledast X_2(\Omega) = \frac{1}{2\pi} \int_{2\pi} X_1(u) X_2(\Omega - u) du$$

The convolution here is not the *linear* convolution used so far. This is a *periodic* (or *circular*) convolution applicable to the convolution of two continuous, periodic functions with the same period. The limit of integration in the convolution extends only to one period.

Proof of the time-convolution property is identical to that given in Sec. 5.2 [Eq. (5.19)]. All we have to do is replace z with  $e^{j\Omega}$ . To prove the frequency-convolution property of Eq. (9.35), we have

$$x_1[n]x_2[n] \Longleftrightarrow \sum_{n=-\infty}^{\infty} x_1[n]x_2[n]e^{-j\Omega n} = \sum_{n=-\infty}^{\infty} x_2[n] \left[\frac{1}{2\pi} \int_{2\pi} X_1(u)e^{-jnu} du\right] e^{-j\Omega n}$$

Interchanging the order of summation and integration, we obtain

$$x_1[n]x_2[n] \longleftrightarrow \frac{1}{2\pi} \int_{2\pi} X_1(u) \left[ \sum_{n=-\infty}^{\infty} x_2[n] e^{-j(\Omega-u)n} \right] du = \frac{1}{2\pi} \int_{2\pi} X_1(u) X_2(\Omega-u) du$$

# **EXAMPLE 9.11 DTFT of an Accumulator System**

If 
$$x[n] \iff X(\Omega)$$
, then show that  $\sum_{k=-\infty}^{n} x[k] \iff \pi X(0) \sum_{k=-\infty}^{\infty} \delta(\Omega - 2\pi k) + \frac{e^{i\Omega}}{e^{i\Omega} - 1} X(\Omega).$ 

<sup>&</sup>lt;sup>†</sup> In Eq. (8.20), we defined periodic convolution for two discrete, periodic sequences in a different way. Although we are using the same symbol  $\circledast$  for both discrete and continuous cases, the meaning will be clear from the context.

To begin, we notice that

$$x[n] * u[n] = \sum_{k=-\infty}^{\infty} x[k]u[n-k] = \sum_{k=-\infty}^{n} x[k]$$

Applying the time-convolution property of Eq. (9.34) and pair 10 in Table 9.1, it follows that

$$\sum_{k=-\infty}^{n} x[k] = x[n] * u[n] \Longleftrightarrow X(\Omega) \left( \pi \sum_{k=-\infty}^{\infty} \delta(\Omega - 2\pi k) + \frac{e^{j\Omega}}{e^{j\Omega} - 1} \right)$$

Because of  $2\pi$  periodicity,  $X(0) = X(2\pi k)$ . Moreover,  $X(\Omega)\delta(\Omega - 2\pi k) = X(2\pi k)\delta(\Omega - 2\pi k) = X(0)\delta(\Omega - 2\pi k)$ . Hence,

$$\sum_{k=-\infty}^{n} x[k] \longleftrightarrow \pi X(0) \sum_{k=-\infty}^{\infty} \delta(\Omega - 2\pi k) + \frac{e^{j\Omega}}{e^{j\Omega} - 1} X(\Omega)$$

# **DRILL 9.8 Using the Frequency-Convolution Property**

In Table 9.1, derive pair 9 from pair 8, assuming  $\Omega_c \leq \pi/2$ . Use the frequency-convolution property.

PARSEVAL'S THEOREM

$$x[n] \iff X(\Omega)$$

then  $E_x$ , the energy of x[n], is given by

$$E_x = \sum_{n=-\infty}^{\infty} |x[n]|^2 = \frac{1}{2\pi} \int_{2\pi} |X(\Omega)|^2 d\Omega$$
(9.36)

To prove this property, we have from Eq. (9.28),

$$X^*(\Omega) = \sum_{n=-\infty}^{\infty} x^*[n] e^{j\Omega n}$$

876

$$\sum_{n=-\infty}^{\infty} |x[n]|^2 = \sum_{n=-\infty}^{\infty} x^*[n]x[n] = \sum_{n=-\infty}^{\infty} x^*[n] \left[ \frac{1}{2\pi} \int_{2\pi} X(\Omega) e^{j\Omega n} d\Omega \right]$$
$$= \frac{1}{2\pi} \int_{2\pi} X(\Omega) \left[ \sum_{n=-\infty}^{\infty} x^*[n] e^{j\Omega n} \right] d\Omega$$
$$= \frac{1}{2\pi} \int_{2\pi} X(\Omega) X^*(\Omega) d\Omega = \frac{1}{2\pi} \int_{2\pi} |X(\Omega)|^2 d\Omega$$

Table 9.2 summarizes Parseval's theorem and the other important properties of the DTFT.

Operation	x[n]	$X(\mathbf{\Omega})$
Linearity	$a_1x_1[n] + a_2x_2[n]$	$a_1 X_1(\Omega) + a_2 X_2(\Omega)$
Conjugation	$x^*[n]$	$X^*(-\Omega)$
Scalar multiplication	ax[n]	$aX(\Omega)$
Multiplication by <i>n</i>	nx[n]	$j rac{dX(\Omega)}{d\Omega}$
Time reversal	x[-n]	$X(-\Omega)$
Time shifting	x[n-k]	$X(\Omega)e^{-jk\Omega}$ k integer
Frequency shifting	$x[n]e^{j\Omega_c n}$	$X(\Omega - \Omega_c)$
Time convolution	$x_1[n] * x_2[n]$	$X_1(\Omega)X_2(\Omega)$
Frequency convolution	$x_1[n]x_2[n]$	$\frac{1}{2\pi}\int_{2\pi}X_1[u]X_2[\Omega-u]du$
Parseval's theorem	$E_x = \sum_{n = -\infty}^{\infty}  x[n] ^2$	$E_x = \frac{1}{2\pi} \int_{2\pi}  X(\Omega) ^2  d\Omega$

**TABLE 9.2**Properties of the DTFT

# EXAMPLE 9.12 Using Parseval's Theorem to Find Signal Energy

Find the energy of  $x[n] = \operatorname{sinc} (\Omega_c n)$ , assuming  $\Omega_c < \pi$ .

From pair 8, Table 9.1, the fundamental band spectrum of x[n] is

$$\operatorname{sinc}(\Omega_c n) \Longleftrightarrow \frac{\pi}{\Omega_c} \operatorname{rect}\left(\frac{\Omega}{2\Omega_c}\right) \qquad |\Omega| \le \pi$$

From Parseval's theorem [Eq. (9.36)], we have

$$E_x = \frac{1}{2\pi} \int_{-\pi}^{\pi} \frac{\pi^2}{\Omega_c^2} \left[ \operatorname{rect} \left( \frac{\Omega}{2\Omega_c} \right) \right]^2 d\Omega$$

Because rect  $(\Omega/2\Omega_c) = 1$  over  $|\Omega| \le \Omega_c$  and is zero otherwise, the preceding integral yields

$$E_x = \frac{1}{2\pi} \left( \frac{\pi^2}{\Omega_c^2} \right) (2\Omega_c) = \frac{\pi}{\Omega_c}$$

# 9.4 LTI DISCRETE-TIME SYSTEM ANALYSIS BY DTFT

Consider a linear, time-invariant, discrete-time system with the unit impulse response h[n]. We shall find the (zero-state) system response y[n] for the input x[n]. Let

$$x[n] \Longleftrightarrow X(\Omega)$$
  $y[n] \Longleftrightarrow Y(\Omega)$  and  $h[n] \Longleftrightarrow H(\Omega)$ 

Because y[n] = x[n] \* h[n], it follows from Eq. (9.34) that

$$Y(\Omega) = X(\Omega)H(\Omega) \tag{9.37}$$

This result is similar to that obtained for continuous-time systems. Let us examine the role of  $H(\Omega)$ , the DTFT of the unit impulse response h[n].

Equation (9.37) holds for BIBO-stable systems and also for marginally stable systems if the input does not contain the system's natural mode(s). In other cases, the response grows with n and is not Fourier-transformable. Moreover, the input x[n] also has to be DTF-transformable. For cases where Eq. (9.37) does not apply, we use the *z*-transform for system analysis.

Equation (9.37) shows that the output signal frequency spectrum is the product of the input signal frequency spectrum and the frequency response of the system. From this equation, we obtain

 $|Y(\Omega)| = |X(\Omega)| |H(\Omega)|$  and  $\angle Y(\Omega) = \angle X(\Omega) + \angle H(\Omega)$ 

This result shows that the output amplitude spectrum is the product of the input amplitude spectrum and the amplitude response of the system. The output phase spectrum is the sum of the input phase spectrum and the phase response of the system.

We can also interpret Eq. (9.37) in terms of the frequency-domain viewpoint, which sees a system in terms of its frequency response (system response to various exponential or sinusoidal

components). The frequency domain views a signal as a sum of various exponential or sinusoidal components. The transmission of a signal through a (linear) system is viewed as transmission of various exponential or sinusoidal components of the input signal through the system. This concept can be understood by displaying the input–output relationships by a directed arrow as follows:

$$e^{j\Omega n} \Longrightarrow H(\Omega)e^{j\Omega n}$$

which shows that the system response to  $e^{j\Omega n}$  is  $H(\Omega)e^{j\Omega n}$ , and

$$x[n] = \frac{1}{2\pi} \int_{2\pi} X(\Omega) e^{j\Omega n} d\Omega$$

which shows x[n] as a sum of everlasting exponential components. Invoking the linearity property, we obtain

$$y[n] = \frac{1}{2\pi} \int_{2\pi} X(\Omega) H(\Omega) e^{j\Omega n} d\Omega$$

which gives y[n] as a sum of responses to all input components and is equivalent to Eq. (9.37). Thus,  $X(\Omega)$  is the input spectrum and  $Y(\Omega)$  is the output spectrum, given by  $X(\Omega)H(\Omega)$ .

### **EXAMPLE 9.13 LTID System Analysis by the DTFT**

An LTID system is specified by the equation y[n] - 0.5y[n - 1] = x[n]. Find  $H(\Omega)$ , the frequency response of this system. Determine the (zero-state) response y[n] if the input  $x[n] = (0.8)^n u[n]$ .

Let  $x[n] \iff X(\Omega)$  and  $y[n] \iff Y(\Omega)$ . Taking the DTFT of the system's difference equation yields

$$(1 - 0.5e^{-j\Omega})Y(\Omega) = X(\Omega)$$

According to Eq. (9.37),

$$H(\Omega) = \frac{Y(\Omega)}{X(\Omega)} = \frac{1}{1 - e^{-j\Omega}} = \frac{e^{j\Omega}}{e^{j\Omega} - 0.5}$$

Also,  $x[n] = (0.8)^n u[n]$ . Hence,

$$X(\Omega) = \frac{e^{j\Omega}}{e^{j\Omega} - 0.8}$$

and

$$Y(\Omega) = X(\Omega)H(\Omega) = \frac{2e^{i\Omega}}{(e^{i\Omega} - 0.8)(e^{i\Omega} - 0.5)}$$

We can express the right-hand side as a sum of two first-order terms (modified partial fraction expansion as discussed in Sec. B.5-6) as follows<sup> $\dagger$ </sup>:

$$\frac{Y(\Omega)}{e^{j\Omega}} = \frac{e^{j\Omega}}{(e^{j\Omega} - 0.5)(e^{j\Omega} - 0.8)} = \frac{-\frac{5}{3}}{e^{j\Omega} - 0.5} + \frac{\frac{8}{3}}{e^{j\Omega} - 0.8}$$

Consequently,

$$Y(\Omega) = -\left(\frac{5}{3}\right) \frac{e^{j\Omega}}{e^{j\Omega} - 0.5} + \left(\frac{8}{3}\right) \frac{e^{j\Omega}}{e^{j\Omega} - 0.8}$$
$$= -\left(\frac{5}{3}\right) \frac{1}{1 - 0.5e^{-j\Omega}} + \left(\frac{8}{3}\right) \frac{1}{1 - 0.8e^{-j\Omega}}$$

From entry 2 of Table 9.1, the inverse DTFT of this equation is

$$y[n] = \left[-\frac{5}{3}(0.5)^n + \frac{8}{3}(0.8)^n\right]u[n]$$

This example demonstrates the procedure for using the DTFT to determine an LTID system response. It is similar to the Fourier transform method in the analysis of LTIC systems. As in the case of the Fourier transform, this method can be used only if the system is asymptotically or BIBO-stable and if the input signal is DTF-transformable.<sup>‡</sup> We shall not belabor this method further because it is clumsier and more restrictive than the *z*-transform method discussed in Ch. 5.

### 9.4-1 Distortionless Transmission

In several applications, digital signals are passed through LTI systems, and we require that the output waveform be a replica of the input waveform. As in the continuous-time case, transmission is said to be distortionless if the input x[n] and the output y[n] satisfy the condition

$$y[n] = G_0 x[n - n_d]$$

Here,  $n_d$ , the delay (in samples), is assumed to be integer. Taking the Fourier transform yields

$$Y(\Omega) = G_0 X(\Omega) e^{-j\Omega n_d}$$

But

$$Y(\Omega) = X(\Omega) H(\Omega)$$

<sup>&</sup>lt;sup>†</sup> Here,  $Y(\Omega)$  is a function of variable  $e^{j\Omega}$ . Hence,  $x = e^{j\Omega}$  for the purpose of comparison with the expression in Sec. B.5-6.

<sup>&</sup>lt;sup> $\ddagger$ </sup> It can also be applied to marginally stable systems if the input does not contain natural mode(s) of the system.

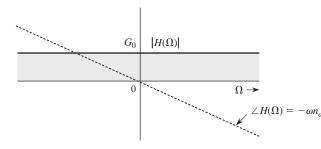


Figure 9.13 LTI system frequency response for distortionless transmission.

Therefore,

$$H(\Omega) = G_0 e^{-j\Omega n_c}$$

This is the frequency response required for distortionless transmission. From this equation, it follows that

$$|H(\Omega)| = G_0$$
 and  $\angle H(\Omega) = -\Omega n_d$  (9.38)

Thus, for distortionless transmission, the amplitude response  $|H(\Omega)|$  must be a constant, and the phase response  $\angle H(\Omega)$  must be a linear function of  $\Omega$  with slope  $-n_d$ , where  $n_d$  is the delay in the number of samples with respect to input (Fig. 9.13). These are precisely the characteristics of an ideal delay of  $n_d$  samples with a gain of  $G_0$  [see Eq. (9.31)].

### MEASURE OF DELAY VARIATION

For distortionless transmission, we require a *linear phase* characteristic. In practice, many systems have a phase characteristic that may be only approximately linear. A convenient way of judging phase linearity is to plot the slope of  $\angle H(\Omega)$  as a function of frequency. This slope is constant for the ideal linear phase (ILP) system, but it may vary with  $\Omega$  in the general case. The slope can be expressed as

$$n_g(\Omega) = -\frac{d}{d\Omega} \angle H(\Omega) \tag{9.39}$$

If  $n_g(\Omega)$  is constant, all the components are delayed by  $n_g$  samples. But if the slope is not constant, the delay  $n_g$  varies with frequency. This variation means that different frequency components undergo different amounts of delay, and consequently, the output waveform will not be a replica of the input waveform. As in the case of LTIC systems,  $n_g(\Omega)$ , as defined in Eq. (9.39), plays an important role in bandpass systems and is called the *group delay* or *envelope* delay. Observe that constant  $n_d$  implies constant  $n_g$ . Note that  $\angle H(\Omega) = \phi_0 - \Omega n_d$  also has a constant  $n_g$ . Thus, constant group delay is a more relaxed condition.

### DISTORTIONLESS TRANSMISSION OVER BANDPASS SYSTEMS

As in the case of continuous-time systems, the distortionless transmission conditions can be relaxed for discrete-time bandpass systems. For lowpass systems, the phase characteristic should not only be linear over the band of interest, it should also pass through the origin [Eq. (9.38)]. For bandpass systems, the phase characteristic should be linear over the band of interest, but it need not pass through the origin ( $n_g$  should be constant). The amplitude response is required to

### 882 CHAPTER 9 FOURIER ANALYSIS OF DISCRETE-TIME SIGNALS

be constant over the passband. Thus, for distortionless transmission over a bandpass system, the frequency response for positive range of  $\Omega$  is of the form<sup>†</sup>

$$H(\Omega) = G_0 e^{j(\phi_0 - \Omega n_g)} \qquad \Omega > 0$$

The proof is identical to that for the continuous-time case in Sec. 7.4-2 and will not be repeated. In using Eq. (9.39) to compute  $n_g$ , we should ignore jump discontinuities in the phase function.

### 9.4-2 Ideal and Practical Filters

Ideal filters allow distortionless transmission of a certain band of frequencies and suppress all the remaining frequencies. The general ideal lowpass filter shown in Fig. 9.14 for  $|\Omega| \le \pi$  allows all components below the cutoff frequency  $\Omega = \Omega_c$  to pass without distortion and suppresses all components above  $\Omega_c$ . Figure 9.15 illustrates ideal highpass and bandpass filter characteristics.

The ideal lowpass filter in Fig. 9.14a has a linear phase of slope  $-n_d$ , which results in a delay of  $n_d$  samples for all its input components of frequencies below  $\Omega_c$  rad/sample. Therefore, if the input is a signal x[n] bandlimited to  $\Omega_c$ , the output y[n] is x[n] delayed by  $n_d$ ; that is,

$$y[n] = x[n - n_d]$$

The signal x[n] is transmitted by this system without distortion, but with delay of  $n_d$  samples. For this filter,

$$H(\Omega) = \sum_{m=-\infty}^{\infty} \operatorname{rect}\left(\frac{\Omega - 2\pi m}{2\Omega_c}\right) e^{-j\Omega n_c}$$

The unit impulse response h[n] of this filter is obtained from pair 8 (Table 9.1) and the time-shifting property

$$h[n] = \frac{\Omega_c}{\pi} \operatorname{sinc} \left[\Omega_c(n - n_d)\right]$$

Because h[n] is the system response to impulse input  $\delta[n]$ , which is applied at n = 0, it must be causal (i.e., it must not start before n = 0) for a realizable system. Figure 9.14b shows h[n] for

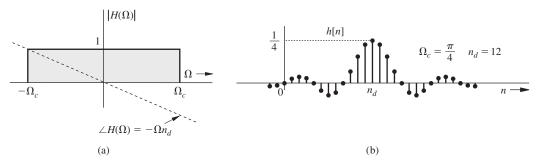


Figure 9.14 Ideal lowpass filter: its frequency response and impulse response.

<sup>&</sup>lt;sup>†</sup> Because the phase function is an odd function of  $\Omega$ , if  $\angle H(\Omega) = \phi_0 - \Omega n_g$  for  $\Omega \ge 0$ , over the band 2W (centered at  $\Omega_c$ ), then  $\angle H(\Omega) = -\phi_0 - \Omega n_g$  for  $\Omega < 0$  over the band 2W (centered at  $-\Omega_c$ ).


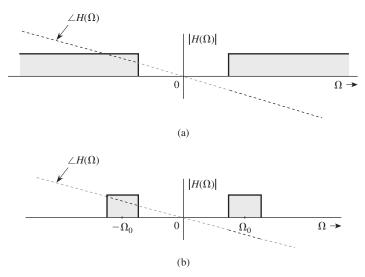


Figure 9.15 Ideal highpass and bandpass filter frequency response.

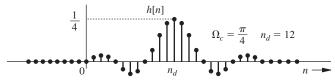

**Figure 9.16** Approximate realization of an ideal lowpass filter by truncation of its impulse response.

 $\Omega_c = \pi/4$  and  $n_d = 12$ . This figure also shows that h[n] is noncausal, hence unrealizable. Similarly, one can show that other ideal filters (such as the ideal highpass or and bandpass filters depicted in Fig. 9.15) are also noncausal and therefore physically unrealizable.

One practical approach to realize an ideal lowpass filter approximately is to truncate both tails (positive and negative) of h[n] so that it has a finite length and then delay sufficiently to make it causal (Fig. 9.16). We now synthesize a system with this truncated (and delayed) impulse response. For closer approximation, the truncating window has to be correspondingly wider. The delay required also increases correspondingly. Thus, the price of closer realization is higher delay in the output; this situation is common in noncausal systems.

## 9.5 DTFT CONNECTION WITH THE CTFT

Consider a continuous-time signal  $x_c(t)$  (Fig. 9.17a) with the Fourier transform  $X_c(\omega)$  bandlimited to *B* Hz (Fig. 9.17b). This signal is sampled with a sampling interval *T*. The sampling rate is at least equal to the Nyquist rate; that is,  $T \le 1/2B$ . The sampled signal  $\bar{x}_c(t)$  (Fig. 9.17c) can be

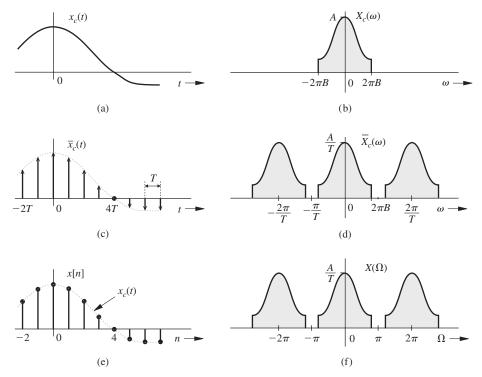


Figure 9.17 Connection between the DTFT and the Fourier transform.

expressed as

$$\bar{x}_c(t) = \sum_{n=-\infty}^{\infty} x_c(nT) \,\delta(t - nT)$$

The continuous-time Fourier transform of the foregoing equation yields

$$\overline{X}_{c}(\omega) = \sum_{n=-\infty}^{\infty} x_{c}(nT) e^{-jnT\omega}$$
(9.40)

In Sec. 8.1 (Fig. 8.1f), we showed that  $\overline{X}_c(\omega)$  is  $X_c(\omega)/T$  repeating periodically with a period  $\omega_s = 2\pi/T$ , as illustrated in Fig. 9.17d. Let us construct a discrete-time signal x[n] such that its *n*th sample value is equal to the value of the *n*th sample of  $x_c(t)$ , as depicted in Fig. 9.17e, that is,

$$x[n] = x_c(nT) \tag{9.41}$$

Now,  $X(\Omega)$ , the DTFT of x[n], is given by

$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n] e^{-jn\Omega} = \sum_{n=-\infty}^{\infty} x_c(nT) e^{-jn\Omega}$$

884

Comparison of this equation with Eq. (9.40) shows that letting  $\omega T = \Omega$  in  $\overline{X}_c(\omega)$  yields  $X(\Omega)$ , that is,

$$X(\Omega) = X_c(\omega)|_{\omega T = \Omega}$$

Alternately,  $X(\Omega)$  can be obtained from  $\overline{X}_c(\omega)$  by replacing  $\omega$  with  $\Omega/T$ , that is,

$$X(\Omega) = \overline{X}_c \left(\frac{\Omega}{T}\right) \tag{9.42}$$

Therefore,  $X(\Omega)$  is identical to  $\overline{X}_c(\omega)$ , frequency-scaled by factor *T*, as shown in Fig. 9.17f. Thus,  $\omega = 2\pi/T$  in Fig. 9.17d corresponds to  $\Omega = 2\pi$  in Fig. 9.17f.

### 9.5-1 Use of DFT and FFT for Numerical Computation of the DTFT

The discrete Fourier transform (DFT), as discussed in Ch. 8, is a tool for computing the samples of the continuous-time Fourier transform (CTFT). Because of the close connection between CTFT and DTFT, as seen in Eq. (9.42), we can also use this same DFT to compute DTFT samples.

In Ch. 8, Eqs. (8.12) and (8.13) relate an  $N_0$ -point sequence  $x_n$  to another  $N_0$ -point sequence  $X_r$ . Changing the notation  $x_n$  to x[n] in these equations, we obtain

$$X_r = \sum_{n=0}^{N_0 - 1} x[n] e^{-jr\Omega_0 n}$$
(9.43)

and

$$x[n] = \frac{1}{N_0} \sum_{r=0}^{N_0 - 1} X_r e^{jr\Omega_0 n}$$
(9.44)

where  $\Omega_0 = \frac{2\pi}{N_0}$ . Comparing Eq. (9.19) with Eq. (9.43), we recognize that  $X_r$  is the sample of  $X(\Omega)$  at  $\Omega = r\Omega_0$ , that is,

$$X_r = X(r\Omega_0) \qquad \Omega_0 = \frac{2\pi}{N_0}$$

Hence, DFT Eqs. (9.43) and (9.44) can be viewed to relate an  $N_0$ -point sequence x[n] to the  $N_0$ -point samples of corresponding  $X(\Omega)$ . We can now use the efficient algorithm FFT (discussed in Ch. 8) to compute  $X_r$  from x[n], and vice versa.

If x[n] is not timelimited, we can still find the approximate values of  $X_r$  by suitably windowing x[n]. To reduce the error, the window should be tapered and should have sufficient width to satisfy error specifications. In practice, the numerical computation of signals, which are generally non-timelimited, is performed in this manner because of the computational economy of the DFT, especially for signals of long duration.

### COMPUTATION OF DISCRETE-TIME FOURIER SERIES (DTFS)

The discrete-time Fourier series (DTFS) equations [(9.3) and (9.4)] are identical to the DFT equations [(8.13) and (8.12)] within a scaling constant  $N_0$ . If we let  $x[n] = N_0 x_n$  and  $\mathcal{D}_r = X_r$ 

#### CHAPTER 9 FOURIER ANALYSIS OF DISCRETE-TIME SIGNALS

in Eqs. (9.4) and (9.3), we obtain

$$X_r = \sum_{n=0}^{N_0 - 1} x_n e^{-jr\Omega_0 n}$$
 and  $x_n = \frac{1}{N_0} \sum_{r=0}^{N_0 - 1} X_r e^{jr\Omega_0 n}$ 

This is precisely the DFT and IDFT of Eqs. (8.12) and (8.13). For instance, to compute the DTFS for the periodic signal in Fig. 9.2a, we use the values of  $x_n = x[n]/N_0$  as

$$x_n = \begin{cases} \frac{1}{32} & 0 \le n \le 4 \text{ and } 28 \le n \le 31 \\ 0 & 5 \le n \le 27 \end{cases}$$

Numerical computations in modern digital signal processing are conveniently performed with the discrete Fourier transform, introduced in Sec. 8.5. The DFT computations can be very efficiently executed by using the fast Fourier transform (FFT) algorithm discussed in Sec. 8.6. The DFT is indeed the workhorse of modern digital signal processing. The discrete-time Fourier transform (DTFT) and the inverse discrete-time Fourier transform (IDTFT) can be computed by using the DFT. For an  $N_0$ -point signal x[n], its DFT yields exactly  $N_0$  samples of  $X(\Omega)$  at frequency intervals of  $2\pi/N_0$ . We can obtain a larger number of samples of  $X(\Omega)$  by padding a sufficient number of zero-valued samples to x[n]. The  $N_0$ -point DFT of x[n] gives exact values of the DTFT samples if x[n] has a finite length  $N_0$ . If the length of x[n] is infinite, we need to use the appropriate window function to truncate x[n].

Because of the convolution property, we can use the DFT to compute the convolution of two signals x[n] and h[n], as discussed in Sec. 8.5. This procedure, known as fast convolution, requires padding both signals by a suitable number of zeros, to make the linear convolution of the two signals identical to the circular (or periodic) convolution of the padded signals. Large blocks of data may be processed by sectioning the data into smaller blocks and processing such smaller blocks in sequence. Such a procedure requires smaller memory and reduces the processing time [1].

# **9.6 GENERALIZATION OF THE DTFT TO THE** *z***-TRANSFORM**

LTID systems can be analyzed by using the DTFT. This method, however, has the following limitations.

- 1. Existence of the DTFT is guaranteed only for absolutely summable signals. The DTFT does not exist for exponentially or even linearly growing signals. This means that the DTFT method is applicable only for a limited class of inputs.
- 2. Moreover, this method can be applied only to asymptotically or BIBO-stable systems; it cannot be used for unstable or even marginally stable systems.

These are serious limitations in the study of LTID system analysis. Actually, it is the first limitation that is also the cause of the second limitation. Because the DTFT is incapable of

handling growing signals, it is incapable of handling unstable or marginally stable systems.<sup>†</sup> Our goal is, therefore, to extend the DTFT concept so that it can handle exponentially growing signals.

We may wonder what causes this limitation on DTFT so that it is incapable of handling exponentially growing signals. Recall that in the DTFT, we are using sinusoids or exponentials of the form  $e^{j\Omega n}$  to synthesize an arbitrary signal x[n]. These signals are sinusoids with constant amplitudes. They are incapable of synthesizing exponentially growing signals no matter how many such components we add. Our hope, therefore, lies in trying to synthesize x[n] by using exponentially growing sinusoids or exponentials. This goal can be accomplished by generalizing the frequency variable  $j\Omega$  to  $\sigma + j\Omega$ , that is, by using exponentials of the form  $e^{(\sigma+j\Omega)n}$  instead of exponentials  $e^{j\Omega n}$ . The procedure is almost identical to that used in extending the Fourier transform to the Laplace transform.

Let us define a new variable  $\hat{X}(j\Omega) = X(\Omega)$ . Hence,

$$\hat{X}(j\Omega) = \sum_{n=-\infty}^{\infty} x[n] e^{-j\Omega n}$$
(9.45)

and

$$x[n] = \frac{1}{2\pi} \int_{-\pi}^{\pi} \hat{X}(j\Omega) e^{j\Omega n} d\Omega$$

Consider now the DTFT of  $x[n]e^{-\sigma n}$  ( $\sigma$  real):

DTFT {
$$x[n]e^{-\sigma n}$$
} =  $\sum_{n=-\infty}^{\infty} x[n]e^{-\sigma n}e^{-j\Omega n} = \sum_{n=-\infty}^{\infty} x[n]e^{-(\sigma+j\Omega)n}$ 

It follows from Eq. (9.45) that this sum is  $\hat{X}(\sigma + j\Omega)$ . Thus,

DTFT {
$$x[n]e^{-\sigma n}$$
} =  $\sum_{n=-\infty}^{\infty} x[n]e^{-(\sigma+j\Omega)n} = \hat{X}(\sigma+j\Omega)$  (9.46)

Hence, the inverse DTFT of  $\hat{X}(\sigma + j\Omega)$  is  $x[n]e^{-\sigma n}$ . Therefore,

$$x[n]e^{-\sigma n} = \frac{1}{2\pi} \int_{-\pi}^{\pi} \hat{X}(\sigma + j\Omega) e^{j\Omega n} d\Omega$$

Multiplying both sides by  $e^{\sigma n}$  yields

$$x[n] = \frac{1}{2\pi} \int_{-\pi}^{\pi} \hat{X}(\sigma + j\Omega) e^{(\sigma + j\Omega)n} d\Omega$$
(9.47)

Let us define a new variable z as

$$z = e^{\sigma + j\Omega}$$
 so that  $\ln z = \sigma + j\Omega$  and  $\frac{1}{z}dz = jd\Omega$ 

<sup>&</sup>lt;sup>†</sup> Recall that the output of an unstable system grows exponentially. Also, the output of a marginally stable system to characteristic mode input grows with time.

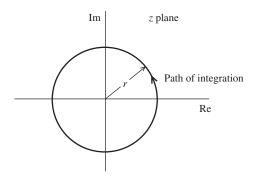


Figure 9.18 Contour of integration for the z-transform.

Because  $z = e^{\sigma + j\Omega}$  is complex, we can express it as  $z = re^{j\Omega}$ , where  $r = e^{\sigma}$ . Thus, z lies on a circle of radius r, and as  $\Omega$  varies from  $-\pi$  to  $\pi$ , z circumambulates along this circle, completing exactly one counterclockwise rotation, as illustrated in Fig. 9.18. Changing to variable z in Eq. (9.47) vields

$$x[n] = \frac{1}{2\pi j} \oint \hat{X}(\ln z) z^{n-1} dz$$
(9.48)

and from Eq. (9.46) we obtain

$$\hat{X}(\ln z) = \sum_{n=-\infty}^{\infty} x[n] z^{-n}$$
(9.49)

where the integral  $\oint$  indicates a contour integral around a circle of radius r in the counterclockwise direction.

Equations (9.48) and (9.49) are the desired extensions. They are, however, in a clumsy form. For the sake of convenience, we make another notational change by observing that  $\hat{X}(\ln z)$  is a function of z. Let us denote it by a simpler notation X[z]. Thus, Eq. (9.48) becomes

$$x[n] = \frac{1}{2\pi j} \oint X[z] z^{n-1} dz$$
(9.50)

and Eq. (9.49) becomes

$$X[z] = \sum_{n=-\infty}^{\infty} x[n] z^{-n}$$
(9.51)

This is the (bilateral) z-transform pair. Equation (9.50) expresses x[n] as a continuous sum of exponentials of the form  $z^n = e^{(\sigma + j\Omega)n} = r^n e^{j\Omega n}$ . Thus, by selecting a proper value for r (or  $\sigma$ ), we can make the exponential grow (or decay) at any exponential rate we desire.

If we let  $\sigma = 0$ , we have  $z = e^{j\Omega}$  and

$$X[z]|_{z=e^{j\Omega}} = \hat{X}(\ln z)\Big|_{z=e^{j\Omega}} = \hat{X}(j\Omega) = X(\Omega)$$

Thus, the familiar DTFT is just a special case of the z-transform X[z] obtained by letting  $z = e^{j\Omega}$ and assuming that the sum on the right-hand side of Eq. (9.51) converges when  $z = e^{j\Omega}$ . This also implies that the ROC for X[z] includes the unit circle.

# 9.7 MATLAB: WORKING WITH THE DTFS AND THE DTFT

This section investigates various methods to compute the discrete-time Fourier series (DTFS). Performance of these methods is assessed by using MATLAB's stopwatch and profiling functions. Additionally, the discrete-time Fourier transform (DTFT) is applied to the important topic of finite impulse response (FIR) filter design.

### 9.7-1 Computing the Discrete-Time Fourier Series

Within a scale factor, the DTFS is identical to the DFT. Thus, methods to compute the DFT can be readily used to compute the DTFS. Specifically, the DTFS is the DFT scaled by  $1/N_0$ . As an example, consider a 50 Hz sinusoid sampled at 1000 Hz over one-tenth of a second.

```
>> T = 1/1000; N_0 = 100; n = (0:N_0-1)';
>> x = cos(2*pi*50*n*T);
```

The DTFS is obtained by scaling the DFT.

- >>  $X = fft(x)/N_0; f = (0:N_0-1)/(T*N_0);$
- >> stem(f-1/(2\*T),fftshift(abs(X)),'k.');
- >> axis([-500 500 -0.05 0.55]); xlabel('f [Hz]'); ylabel('|X(f)|');

Figure 9.19 shows a peak magnitude of 0.5 at  $\pm$ 50 Hz. This result is consistent with Euler's representation

$$\cos\left(2\pi 50nT\right) = \frac{1}{2}e^{j2\pi 50nT} + \frac{1}{2}e^{-j2\pi 50nT}$$

Lacking the  $1/N_0$  scale factor, the DFT would have a peak amplitude 100 times larger.

The inverse DTFS is obtained by scaling the inverse DFT by  $N_0$ .

>> x = real(ifft(X)\*N\_0); stem(n,x,'k.');
>> axis([0 99 -1.1 1.1]); xlabel('n'); ylabel('x[n]');

Figure 9.20 confirms that the sinusoid x[n] is properly recovered. Although the result is theoretically real, computer round-off errors produce a small imaginary component, which the real command removes.

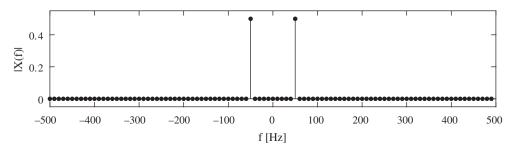


Figure 9.19 DTFS computed by scaling the DFT.

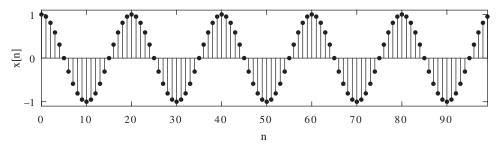


Figure 9.20 Inverse DTFS computed by scaling the inverse DFT.

Although MATLAB's fft command provides an efficient method to compute the DTFS, other important computational methods exist. A matrix-based approach is one popular way to implement Eq. (9.4). Although not as efficient as an FFT-based algorithm, matrix-based approaches provide insight into the DTFS and serve as an excellent model for solving similarly structured problems.

To begin, define  $W_{N_0} = e^{i\Omega_0}$ , which is a constant for a given  $N_0$ . Substituting  $W_{N_0}$  into Eq. (9.4) yields

$$\mathcal{D}_r = \frac{1}{N_0} \sum_{n=0}^{N_0 - 1} x[n] W_{N_0}^{-nr}$$

An inner product of two vectors computes  $\mathcal{D}_r$ .

$$\mathcal{D}_{r} = \frac{1}{N_{0}} \begin{bmatrix} 1 & W_{N_{0}}^{-r} & W_{N_{0}}^{-2r} & \dots & W_{N_{0}}^{-(N_{0}-1)r} \end{bmatrix} \begin{bmatrix} x[0] \\ x[1] \\ x[2] \\ \vdots \\ x[N_{0}-1] \end{bmatrix}$$

Stacking the results for all r yields

$$\begin{bmatrix} \mathcal{D}_{0} \\ \mathcal{D}_{1} \\ \mathcal{D}_{2} \\ \vdots \\ \mathcal{D}_{N_{0}-1} \end{bmatrix} = \frac{1}{N_{0}} \begin{bmatrix} 1 & 1 & 1 & \cdots & 1 \\ 1 & W_{N_{0}}^{-1} & W_{N_{0}}^{-2} & \cdots & W_{N_{0}}^{-(N_{0}-1)} \\ 1 & W_{N_{0}}^{-2} & W_{N_{0}}^{-4} & \cdots & W_{N_{0}}^{-2(N_{0}-1)} \\ \vdots & \vdots & \vdots & \cdots & \vdots \\ 1 & W_{N_{0}}^{-(N_{0}-1)} & W_{N_{0}}^{-2(N_{0}-1)} & \cdots & W_{N_{0}}^{-(N_{0}-1)^{2}} \end{bmatrix} \begin{bmatrix} x[0] \\ x[1] \\ x[2] \\ \vdots \\ x[N_{0}-1] \end{bmatrix}$$

In matrix notation, this equation is compactly written as

$$\mathcal{D} = \frac{1}{N_0} \mathbf{W}_{N_0} \mathbf{x}$$

Since it is also used to compute the DFT, matrix  $W_{N_0}$  is often called a DFT matrix.

Let us create an anonymous function to compute the  $N_0$ -by- $N_0$  DFT matrix  $\mathbf{W}_{N_0}$ . Although not used here, the signal-processing toolbox function dftmtx computes the same DFT matrix, although in a less obvious but more efficient fashion.

>> W = @(N\_0) (exp(-j\*2\*pi/N\_0)).^((0:N\_0-1)'\*(0:N\_0-1));

While less efficient than FFT-based methods, the matrix approach correctly computes the DTFS.

```
>> X = W(N_0)*x/N_0; stem(f-1/(2*T),fftshift(abs(X)),'k.');
>> axis([-500 500 -0.05 0.55]); xlabel('f [Hz]'); ylabel('|X(f)|');
```

The resulting plot is indistinguishable from Fig. 9.19. Problem 9.7-1 investigates a matrix-based approach to compute Eq. (9.3), the inverse DTFS.

### 9.7-2 Measuring Code Performance

Writing efficient code is important, particularly if the code is frequently used, requires complicated operations, involves large data sets, or operates in real time. MATLAB provides several tools for assessing code performance. When properly used, the profile function provides detailed statistics that help assess code performance. MATLAB help thoroughly describes the use of the sophisticated profile command.

A simpler method of assessing code efficiency is to measure execution time and compare it with a reference. The MATLAB command tic starts a stopwatch timer. The toc command reads the timer. Sandwiching instructions between tic and toc returns the elapsed time. For example, the execution time of the 100-point matrix-based DTFS computation is

```
>> tic; W(N_0)*x/N_0; toc
Elapsed time is 0.004417 seconds.
```

Different machines operate at different speeds with different operating systems and with different background tasks. Therefore, elapsed-time measurements can vary considerably from machine to machine and from execution to execution. For relatively simple and short events like the present case, execution times can be so brief that MATLAB may report unreliable times or fail to register an elapsed time at all.

To increase the elapsed time and therefore the accuracy of the time measurement, a loop is used to repeat the calculation.

```
>> tic; for i=1:100, W(N_0)*x/N_0; end; toc
Elapsed time is 0.173388 seconds.
```

This elapsed time suggests that each 100-point DTFS calculation takes a little under 2 milliseconds. What exactly does this mean, however? Elapsed time is only meaningful relative to some reference. Let us see what difference occurs by precomputing the DFT matrix, rather than repeatedly using our anonymous function.

```
>> W100 = W(100); tic; for i=1:100, W100*x/N_0; end; toc
Elapsed time is 0.001199 seconds.
```

### 892 CHAPTER 9 FOURIER ANALYSIS OF DISCRETE-TIME SIGNALS

Amazingly, this small change makes a hundredfold change in our computational efficiency! Clearly, it is much better to precompute the DFT matrix.

To provide another example, consider the time it takes to compute the same DTFS using the FFT-based approach.

>> tic; for i=1:100, fft(x)/N\_0; end; toc
Elapsed time is 0.000399 seconds.

With this as a reference, our fastest matrix-based computations appear to be several times slower than the FFT-based computations. This difference becomes more dramatic as  $N_0$  is increased. Since the two methods provide identical results, there is little incentive to use the slower matrix-based approach, and the FFT-based algorithm is generally preferred. Even so, the FFT can exhibit curious behavior: adding a few data points, even the artificial samples introduced by zero padding, can dramatically increase or decrease execution times. The tic and toc commands illustrate this strange result. Consider computing the DTFS of 1015 random data points 100 times.

```
>> x1 = rand(1015,1); tic; for i=1:100; fft(x1)/1015; end; T1 = toc
T1 = 0.0067
```

Next, pad the sequence with four zeros.

>> x2 = [x1;zeros(4,1)]; tic; for i=1:100; fft(x2)/1019; end; T2 = toc T2 = 0.0134

The ratio of the two elapsed times indicates that adding four points to an already long sequence increases the computation time by a factor of 2. Next, the sequence is zero-padded to a length of  $N_0 = 1024$ .

>> x3 = [x2;zeros(5,1)]; tic; for i=1:100; fft(x3)/1024; end; T3 = toc
T3 = 0.0017

In this case, the added data decrease the original execution time by a factor of 4 and the second execution time by a factor of 8! These results are particularly surprising when it is realized that the lengths of y1, y2, and y3 differ by less than 1%.

As it turns out, the efficiency of the fft command depends on the factorability of  $N_0$ . With the factor command, 1015 = (5)(7)(29), 1019 is prime, and  $1024 = (2)^{10}$ . The most factorable length, 1024, results in the fastest execution, while the least factorable length, 1019, results in the slowest execution. To ensure the greatest factorability and fastest operation, vector lengths are ideally a power of 2.

### 9.7-3 FIR Filter Design by Frequency Sampling

Finite impulse response (FIR) digital filters are flexible, always stable, and relatively easy to implement. These qualities make FIR filters a popular choice among digital filter designers. The difference equation of a length-*N* causal FIR filter is conveniently expressed as

$$y[n] = h_0 x[n] + h_1 x[n-1] + \dots + h_{N-1} x[n-(N-1)] = \sum_{k=0}^{N-1} h_k x[n-k]$$

The filter coefficients, or tap weights as they are sometimes called, are expressed by using the variable h to emphasize that the coefficients themselves represent the impulse response of the filter.

The filter's frequency response is

$$H(\Omega) = \frac{Y(\Omega)}{X(\Omega)} = \sum_{k=0}^{N-1} h_k e^{-j\Omega k}$$

Since  $H(\Omega)$  is a  $2\pi$ -periodic function of the continuous variable  $\Omega$ , it is sufficient to specify  $H(\Omega)$  over a single period  $(0 \le \Omega < 2\pi)$ .

In many filtering applications, the desired magnitude response  $|H_d(\Omega)|$  is known but not the filter coefficients h[n]. The question, then, is one of determining the filter coefficients from the desired magnitude response.

Consider the design of a lowpass filter with cutoff frequency  $\Omega_c = \pi/4$ . An anonymous function represents the desired ideal frequency response.

Since the inverse DTFT of  $H_d(\Omega)$  is a sampled sinc function, it is impossible to perfectly achieve the desired response with a causal, finite-length FIR filter. A realizable FIR filter is necessarily an approximation, and an infinite number of possible solutions exist. Thought of another way,  $H_d(\Omega)$  specifies an infinite number of points, but the FIR filter only has N unknown tap weights. In general, we expect a length-N filter to match only N points of the desired response over  $(0 \le \Omega < 2\pi)$ . Which frequencies should be chosen?

A simple and sensible method is to select N frequencies uniformly spaced on the interval  $(0 \le \Omega < 2\pi)$ ,  $(0, 2\pi/N, 4\pi/N, 6\pi/N, ..., (N-1)2\pi/N)$ . By choosing uniformly spaced frequency samples, the N-point inverse DFT can be used to determine the tap weights h[n]. Program CH9MP1 illustrates this procedure.

```
function [h] = CH9MP1(N,H_d);
% CH9MP1.m : Chapter 9, MATLAB Program 1
% Function M-file designs a length-N FIR filter by sampling the desired
% magnitude response H_d. Phase response is left as zero.
% INPUTS: N = desired FIR filter length
% H_d = anonymous function that defines the desired magnitude response
% OUTPUTS: h = impulse response (FIR filter coefficients)
% Create N equally spaced frequency samples:
Omega = linspace(0,2*pi*(1-1/N),N)';
% Sample the desired magnitude response and create h[n]:
H = 1.0*H_d(Omega); h = real(ifft(H));
```

To complete the design, the filter length must be specified. Small values of N reduce the filter's complexity but also reduce the quality of the filter's response. Large values of N improve the approximation of  $H_d(\Omega)$  but also increase complexity. A balance is needed. We choose an intermediate value of N = 21 and use CH9MP1 to design the filter.

>> N = 21; h = CH9MP1(N,H\_d);

To assess the filter quality, the frequency response is computed by means of program CH5MP1.

```
>> Omega = linspace(0,2*pi,1000); samples = linspace(0,2*pi*(1-1/N),N)';
```

```
>> H = CH5MP1(h, 1, Omega);
```

```
>> subplot(2,1,1); stem([0:N-1],h,'k.'); xlabel('n'); ylabel('h[n]');
```

- >> subplot(2,1,2);
- >> plot(samples,H\_d(samples),'k.',Omega,H\_d(Omega),'k:',Omega,abs(H),'k');
- >> axis([0 2\*pi -0.1 1.6]); xlabel('\Omega'); ylabel('|H(\Omega)|');
- >> legend('Samples','Desired','Actual','Location','North');

As shown in Fig. 9.21, the filter's frequency response intersects the desired response at the sampled values of  $H_d(\Omega)$ . The overall response, however, has significant ripple between sample points that renders the filter practically useless. Increasing the filter length does not alleviate the ripple problems. Figure 9.22 shows the case N = 41.

To understand the poor behavior of filters designed with CH9MP1, remember that the impulse response of an ideal lowpass filter is a sinc function with the peak centered at zero. Thought of another way, the peak of the sinc is centered at n = 0 because the phase of  $H_d(\Omega)$  is zero. Constrained to be causal, the impulse response of the designed filter still has a peak at n = 0 but cannot include values for negative n. As a result, the sinc function is split in an unnatural way with sharp discontinuities on both ends of h[n]. Sharp discontinuities in the time domain appear as high-frequency oscillations in the frequency domain, which is why  $H(\Omega)$  has significant ripple.

To improve the filter behavior, the peak of the sinc is moved to n = (N - 1)/2, the center of the length-N filter response. In this way, the peak is not split, no large discontinuities are present, and frequency response ripple is consequently reduced. From DFT properties, a cyclic shift of (N - 1)/2 in the time domain requires a scale factor of  $e^{-j\Omega(N-1)/2}$  in the frequency

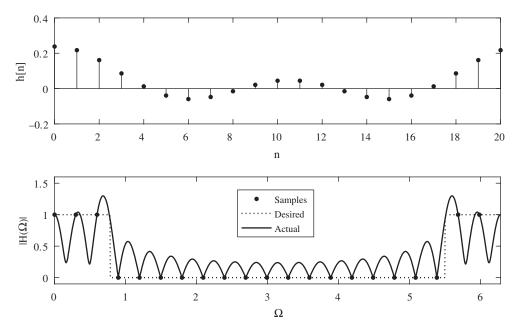


Figure 9.21 Length-21 FIR lowpass filter using zero phase.

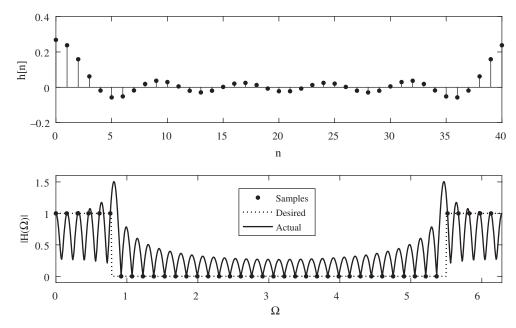


Figure 9.22 Length-41 FIR lowpass filter using zero phase.

domain.<sup>†</sup> Notice that the scale factor  $e^{-j\Omega(N-1)/2}$  affects only phase, not magnitude, and results in a linear phase filter. Program CH9MP2 implements the procedure.

```
function [h] = CH9MP2(N,H_d);
% CH9MP2.m : Chapter 9, MATLAB Program 2
\% Function M-file designs a length-N FIR filter by sampling the desired
\% magnitude response H_d. Phase is defined to shift h[n] by (N-1)/2.
% INPUTS:
           N = desired FIR filter length
%
            H_d = anonymous function that defines the desired magnitude response
% OUTPUTS:
           h = impulse response (FIR filter coefficients)
% Create N equally spaced frequency samples and use to sample H_d:
Omega = linspace(0,2*pi*(1-1/N),N)'; H = H_d(Omega);
% Define phase to shift h[n] by (N-1)/2:
H = H.*exp(-j*Omega*((N-1)/2));
H(fix(N/2)+2:N,1) = H(fix(N/2)+2:N,1)*((-1)^{(N-1)});
h = real(ifft(H));
```

<sup>&</sup>lt;sup>†</sup> Technically, the shift property requires (N-1)/2 to be an integer, which occurs only for odd-length filters. The next-to-last line of program CH9MP2 implements a correction factor, of sorts, required to accommodate the fractional shifts desired for even-length filters. The mathematical derivation of this correction is nontrivial and is not included here. Those hesitant to use this correction factor have an alternative: simply round (N-1)/2 to the nearest integer. Although the rounded shift is slightly off-center for even-length filters, there is usually little or no appreciable difference in the characteristics of the filter. Even so, true centering is desirable because the resulting impulse response is symmetric, which can reduce by half the number of multiplies required to implement the filter.

896

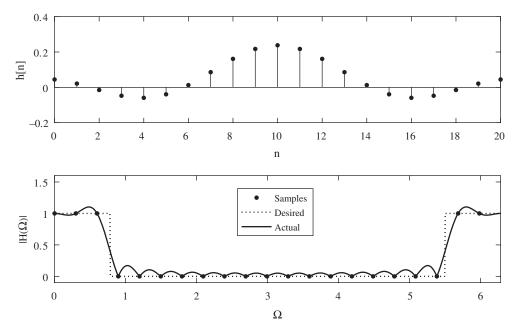


Figure 9.23 Length-21 FIR lowpass filter using linear phase.

Figure 9.23 shows the results for the N = 21 case using CH9MP2 to compute h[n]. As hoped, the impulse response looks like a sinc function with the peak centered at n = 10. Additionally, the frequency response ripple is greatly reduced. With CH9MP2, increasing N improves the quality of the filter, as shown in Fig. 9.24 for the case N = 41. While the magnitude response is needed to establish the general shape of the filter response, it is the proper selection of phase that ensures the acceptability of the filter's behavior.

To illustrate the flexibility of the design method, consider a bandpass filter with passband  $(\pi/4 < |\Omega| < \pi/2)$ .

```
>> H_d = @(Omega) (mod(Omega,2*pi)>pi/4)&(mod(Omega,2*pi)<pi/2)+...
```

```
>> (mod(Omega,2*pi)>3*pi/2)&(mod(Omega,2*pi)<7*pi/4);</pre>
```

Figure 9.25 shows the results for N = 50. Notice that this even-length filter uses a fractional shift and is symmetric about n = 24.5.

Although FIR filter design by means of frequency sampling is very flexible, it is not always appropriate. Extreme care is needed for filters, such as digital differentiators and Hilbert transformers, that require special phase characteristics for proper operation. Additionally, if frequency samples occur near jump discontinuities of  $H_d(\Omega)$ , rounding errors may, in rare cases, disrupt the desired symmetry of the sampled magnitude response. Such cases are corrected by slightly adjusting the location of problematic jump discontinuities or by changing the value of N.

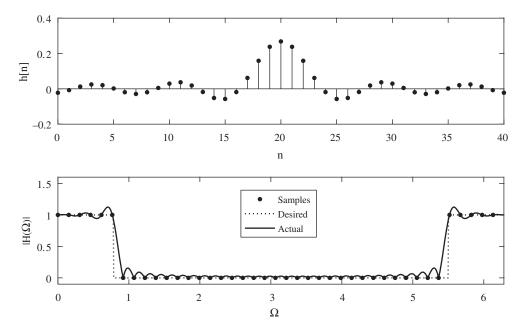


Figure 9.24 Length-41 FIR lowpass filter using linear phase.

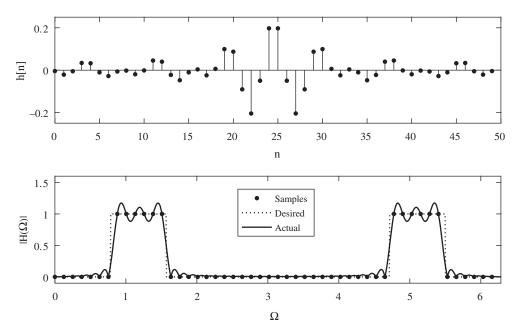


Figure 9.25 Length-50 FIR bandpass filter using linear phase.

### 9.8 SUMMARY

This chapter deals with the analysis and processing of discrete-time signals. For analysis, our approach is parallel to that used in continuous-time signals. We first represent a periodic x[n] as a Fourier series formed by a discrete-time exponential and its harmonics. Later we extend this representation to an aperiodic signal x[n] by considering x[n] to be a limiting case of a periodic signal with period approaching infinity.

Periodic signals are represented by discrete-time Fourier series (DTFS); aperiodic signals are represented by the discrete-time Fourier integral. The development, although similar to that of continuous-time signals, also reveals some significant differences. The basic difference in the two cases arises because a continuous-time exponential  $e^{j\omega t}$  has a unique waveform for every value of  $\omega$  in the range  $-\infty$  to  $\infty$ . In contrast, a discrete-time exponential  $e^{j\Omega n}$  has a unique waveform only for values of  $\Omega$  in a continuous interval of  $2\pi$ . Therefore, if  $\Omega_0$  is the fundamental frequency, then at most  $2\pi/\Omega_0$  exponentials in the Fourier series are independent. Consequently, the discrete-time exponential Fourier series has only  $N_0 = 2\pi/\Omega_0$  terms.

The discrete-time Fourier transform (DTFT) of an aperiodic signal is a continuous function of  $\Omega$  and is periodic with period  $2\pi$ . We can synthesize x[n] from spectral components of  $X(\Omega)$  in any band of width  $2\pi$ . In a basic sense, the DTFT has a finite spectral width of  $2\pi$ , which makes it bandlimited to  $\pi$  radians.

Linear, time-invariant, discrete-time (LTID) systems can be analyzed by means of the DTFT if the input signals are DTF-transformable and if the system is stable. Analysis of unstable (or marginally stable) systems and/or exponentially growing inputs can be handled by the *z*-transform, which is a generalized DTFT. The relationship of the DTFT to the *z*-transform is similar to that of the Fourier transform to the Laplace transform. Whereas the *z*-transform is superior to the DTFT for analysis of LTID systems, the DTFT is preferable in signal analysis.

If  $H(\Omega)$  is the DTFT of the system's impulse response h[n], then  $|H(\Omega)|$  is the amplitude response, and  $\angle H(\Omega)$  is the phase response of the system. Moreover, if  $X(\Omega)$  and  $Y(\Omega)$  are the DTFTs of the input x[n] and the corresponding output y[n], then  $Y(\Omega) = H(\Omega)X(\Omega)$ . Therefore, the output spectrum is the product of the input spectrum and the system's frequency response.

Because of the similarity between the DFT and DTFT relationships, numerical computations of the DTFT of finite-length signals can be handled by using the DFT and the FFT, introduced in Secs. 8.5 and 8.6. For signals of infinite length, we use a window of suitable length to truncate the signal so that the final results are within a given error tolerance.

### REFERENCE

1. Mitra, S. K. *Digital Signal Processing: A Computer-Based Approach*, 2nd ed. McGraw-Hill, New York, 2001.

# PROBLEMS

**9.1-1** Find the discrete-time Fourier series (DTFS) and sketch their spectra  $|\mathcal{D}_r|$  and  $\angle \mathcal{D}_r$  for  $0 \le r \le N_0 - 1$  for the following periodic signal:

 $x[n] = 4\cos 2.4\pi n + 2\sin 3.2\pi n$ 

- **9.1-2** Repeat Prob. 9.1-1 for  $x[n] = \cos 2.2\pi n \cos 3.3\pi n$ .
- **9.1-3** Repeat Prob. 9.1-1 for  $x[n] = 2\cos 3.2\pi (n-3)$ .
- **9.1-4** Determine and sketch the DTFS spectrum  $D_r$  of a 7-periodic signal x[n] that over  $0 \le n \le 6$  is given by

$$[0, 1, -2, 3, -4, 5, -6]$$

How does the spectrum  $D_r$  change if x[n] is time reversed?

- **9.1-5** Find the discrete-time Fourier series and the corresponding amplitude and phase spectra for the x[n] shown in Fig. P9.1-5.
- **9.1-6** Repeat Prob. 9.1-5 for the x[n] depicted in Fig. P9.1-6.
- **9.1-7** Repeat Prob. 9.1-5 for the x[n] illustrated in Fig. P9.1-7.
- **9.1-8** An  $N_0$ -periodic signal x[n] is represented by its DTFS, as in Eq. (9.3). Prove Parseval's theorem

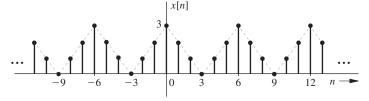


Figure P9.1-5

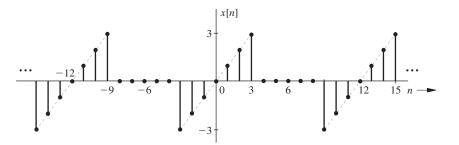


Figure P9.1-6

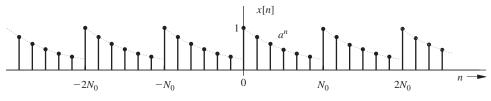


Figure P9.1-7

(for the DTFS), which states that

$$\frac{1}{N_0} \sum_{n = \langle N_0 \rangle} |x[n]|^2 = \sum_{r = \langle N_0 \rangle} |\mathcal{D}_r|^2$$

In the text [Eq. (9.36)], we obtain Parseval's theorem for the DTFT. [*Hint:* If *w* is complex, then  $|w|^2 = ww^*$  and use Eq. (8.15).]

- **9.1-9** Answer yes or no, and justify your answers with an appropriate example or proof.
  - (a) Is a sum of aperiodic discrete-time sequences ever periodic?
  - (b) Is a sum of periodic discrete-time sequences ever aperiodic?
- **9.2-1** Show that for a real x[n], Eq. (9.18) can be expressed as

$$x[n] = \frac{1}{\pi} \int_0^{\pi} |X(\Omega)| \cos\left(\Omega n + \angle X(\Omega)\right) d\Omega$$

This is the trigonometric form of the DTFT.

**9.2-2** A signal x[n] can be expressed as the sum of even and odd components (Sec. 1.5-1):

$$x[n] = x_e[n] + x_o[n]$$

(a) If  $x[n] \iff X(\Omega)$ , show that for real x[n],

$$x_e[n] \iff \operatorname{Re}[X(\Omega)]$$

and

$$x_o[n] \iff j \operatorname{Im}[X(\Omega)]$$

- (b) Verify these results by finding the DTFT of the even and odd components of the signal (0.8)<sup>n</sup>u[n].
- **9.2-3** For the following signals, find the DTFT directly, using the definition in Eq. (9.19). Assume  $|\gamma| < 1$ .

(a)  $\delta[n]$ 

(b) 
$$\delta[n-k]$$

- (c)  $\gamma^n u[n-1]$
- (d)  $\gamma^n u[n+1]$
- (e)  $(-\gamma)^n u[n]$
- (f)  $\gamma^{|n|}$
- 9.2-4 Use Eq. (9.18) to find the inverse DTFT for the following spectra, given only over the interval |Ω| ≤ π. Assume Ω<sub>c</sub> and Ω<sub>0</sub> < π.</li>
  (a) e<sup>jkΩ</sup> integerk
  - (b)  $\cos k\Omega$  integer k
  - (c)  $\cos^2(\Omega/2)$

(d) 
$$\Delta\left(\frac{\Omega}{2\Omega}\right)$$

- (e)  $2\pi \dot{\delta}(\Omega \Omega_0)$
- (f)  $\pi[\delta(\Omega \Omega_0) + \delta(\Omega + \Omega_0)]$
- **9.2-5** (a) Determine and plot the DTFT  $X(\Omega)$  of the triangular signal x[n] shown in Fig. P9.2-5.
  - (b) Using Ex. 9.5 as a guide, use MATLAB and the FFT to validate the DTFT calculations and plot of part (a).

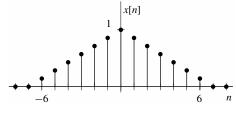
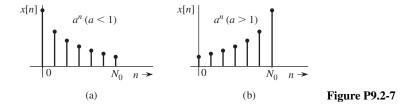


Figure P9.2-5

- **9.2-6** Using Eq. (9.18), show that the inverse DTFT of rect( $(\Omega \pi/4)/\pi$ ) is 0.5 sinc( $\pi n/2$ )  $e^{j\pi n/4}$ .
- **9.2-7** Using Eq. (9.19), find the DTFT of the signals x[n] in Fig. P9.2-7.
- **9.2-8** Using Eq. (9.19), find the DTFT of the signals depicted in Fig. P9.2-8.
- **9.2-9** Use Eq. (9.18) to find the inverse DTFT of the spectra (shown only for  $|\Omega| \le \pi$ ) in Fig. P9.2-9.




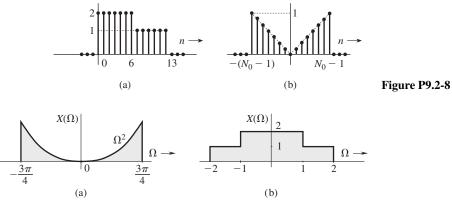


Figure P9.2-9

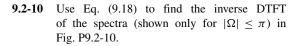

**9.2-11** Find the DTFT for the signals shown in Fig. P9.2-11.


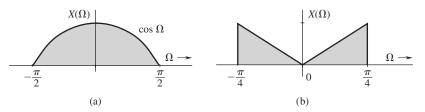


Figure P9.2-10

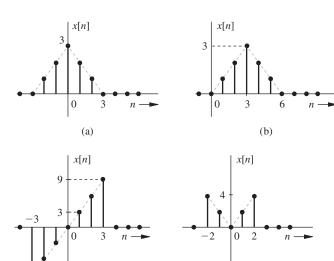

(c)



Figure P9.2-11

- **9.2-12** Find the inverse DTFT of  $X(\Omega)$  (shown only for  $|\Omega| \le \pi$ ) for the spectra illustrated in Fig. P9.2-12. [*Hint*:  $X(\Omega) = |X(\Omega)|e^{j \angle X(\Omega)}$ . This problem illustrates how different phase spectra (both with the same amplitude spectrum) represent entirely different signals.]
- **9.2-13** (a) Show that time-expanded signal  $x_e[n]$  in Eq. (3.2) can also be expressed as

$$x_e[n] = \sum_{k=-\infty}^{\infty} x[k]\delta[n-Lk]$$

- (b) Find the DTFT of x<sub>e</sub>[n] by finding the DTFT of the right-hand side of the equation in part (a).
- (c) Use the result in part (b) and Table 9.1 to find the DTFT of z[n], shown in Fig. P9.2-13.
- **9.2-14** (a) A glance at Eq. (9.18) shows that the inverse DTFT equation is identical to the inverse (continuous-time) Fourier transform Eq. (7.10) for a signal x(t) bandlimited to  $\pi$  rad/s. Hence, we should be able to use the continuous-time Fourier transform


Table 7.1 to find DTFT pairs that correspond to continuous-time transform pairs for bandlimited signals. Use this fact to derive DTFT pairs 8, 9, 11, 12, 13, and 14 in Table 9.1 by means of the appropriate pairs in Table 7.1.


- (b) Can this method be used to derive pairs 2, 3, 4, 5, 6, 7, 10, 15, and 16 in Table 9.1? Justify your answer with specific reason(s).
- **9.2-15** Are the following frequency-domain signals valid DTFT's? Answer yes or no, and justify your answers.
  - (a)  $X(\Omega) = \Omega + \pi$
  - (b)  $X(\Omega) = j + \pi$
  - (c)  $X(\Omega) = \sin(10\Omega)$
  - (d)  $X(\Omega) = \sin(\Omega/10)$
  - (e)  $X(\Omega) = \delta(\Omega)$
- **9.3-1** Using only pairs 2 and 5 (Table 9.1) and the time-shifting property of Eq. (9.31), find the DTFT of the following signals, assuming |a| < 1.
  - (a) u[n] u[n-9]

(b) 
$$a^{n-m}u[n-m]$$

 $|X(\Omega)|$ 

(c)  $a^{n-3}(u[n] - u[n-10])$ 

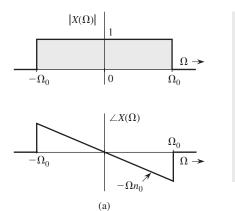

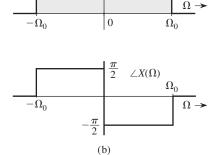



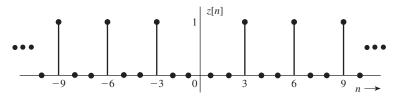


Figure P9.2-13

- (d)  $a^{n-m}u[n]$ (e)  $a^{n}u[n-m]$
- (f)  $(n-m)a^{n-m}u[n-m]$
- (g)  $(n-m)a^nu[n]$
- (h)  $na^{n-m}u[n-m]$
- **9.3-2** The triangular pulse x[n] shown in Fig. P9.3-2a is given by

$$X(\Omega) = \frac{4e^{j6\Omega} - 5e^{j5\Omega} + e^{j\Omega}}{(e^{j\Omega} - 1)^2}$$

Use this information and the DTFT properties to find the DTFT of the signals  $x_1[n], x_2[n], x_3[n]$ , and  $x_4[n]$  shown in Figs. P9.3-2b, P9.3-2c, P9.3-2d, and P9.3-2e, respectively.

**9.3-3** Suppose signal  $x[n] = \operatorname{sinc}^2(\pi n/2)$  modulates a carrier  $\cos(\Omega_c n)$  to produce signal  $y[n] = x[n]\cos(\Omega_c n)$ . Find and sketch the DTFT of:

(a) *x*[*n*]

- (b) y[n] for  $\Omega_c = \pi/2$
- (c) y[n] for  $\Omega_c = 3\pi/4$
- (d) y[n] for  $\Omega_c = \pi$

**9.3-4** Show that periodic convolution  $X(\Omega) \circledast Y(\Omega) = 2\pi X(\Omega)$  if

$$X(\Omega) = \sum_{k=0}^{4} a_k e^{-jk\Omega}$$


and

$$Y(\Omega) = \frac{\sin(5\Omega/2)}{\sin(\Omega/2)} e^{-j2\Omega}$$

where  $a_k$  is a set of arbitrary constants.

- **9.3-5** Using only pair 2 (Table 9.1) and properties of DTFT, find the DTFT of the following signals, assuming |a| < 1 and  $\Omega_0 < \pi$ .
  - (a)  $a^n \cos \Omega_0 n u[n]$
  - (b)  $n^2 a^n u[n]$
  - (c)  $(n-k)a^{2n}u[n-m]$
- **9.3-6** Use pair 10 in Table 9.1, and suitable properties of the DTFT, to derive pairs 11, 12, 13, 14, 15, and 16.
- 9.3-7 Use the time-shifting property to show that

$$x[n+k] + x[n-k] \iff 2X(\Omega) \cos k\Omega$$

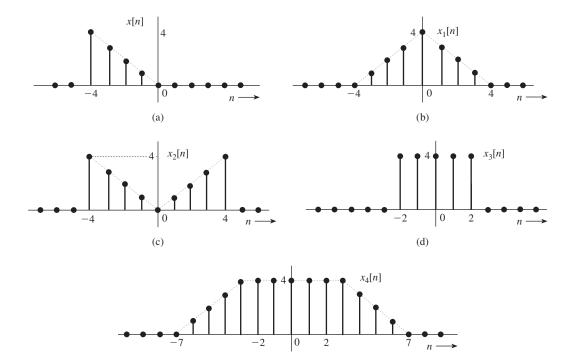


(e)

Figure P9.3-2



Figure P9.3-7

904

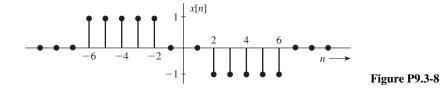

Use this result to find the DTFT of the signals shown in Fig. P9.3-7.

9.3-8 Use the time-shifting property to show that

$$x[n+k] - x[n-k] \Longleftrightarrow 2jX(\Omega) \sin k\Omega$$

Use this result to find the DTFT of the signal shown in Fig. P9.3-8.

**9.3-9** Suppose signal x[n] has spectrum  $X(\Omega)$  that is bandlimited to  $\pi/2$  rad/sample. Next, define signal y[n] as

$$y[n] = \begin{cases} x[n] & n \text{ even} \\ 0 & n \text{ odd} \end{cases}$$

Determine the spectrum of  $Y(\Omega)$  in terms of  $X(\Omega)$ . Sketch  $Y(\Omega)$  if, over  $-\pi \le \Omega \le \pi$ ,

$$Y(\Omega) = \begin{cases} |2\Omega/\pi| & -\pi/2 \le \Omega \le \pi/2\\ 0 & \text{otherwise} \end{cases}$$

**9.3-10** Repeat Prob. 9.3-9 if y[n] is instead defined as

$$y[n] = \begin{cases} x[n] & n \text{ odd} \\ 0 & n \text{ even} \end{cases}$$

- **9.3-11** Using only pair 2 in Table 9.1 and the convolution property, find the inverse DTFT of  $X(\Omega) = e^{2j\Omega}/(e^{j\Omega} \gamma)^2$ .
- **9.3-12** In Table 9.1, you are given pair 1. From this information and using suitable properties of the DTFT, derive pairs 2, 3, 4, 5, 6, and 7 of Table 9.1. For example, starting with pair 1, derive pair 2. From pair 2, use suitable properties

of the DTFT to derive pair 3. From pairs 2 and 3, derive pair 4, and so on.

- **9.3-13** From the pair  $e^{j(\Omega_0/2)n} \iff 2\pi\delta(\Omega (\Omega_0/2))$  over the fundamental band, and the frequency-convolution property, find the DTFT of  $e^{j\Omega_0 n}$ . Assume  $\Omega_0 < \pi/2$ .
- **9.3-14** From the definition and properties of the DTFT, show that

(a) 
$$\sum_{n=-\infty}^{\infty} \operatorname{sinc} (\Omega_c n) = \frac{\pi}{\Omega_c} \quad \Omega_c < \pi$$
  
(b) 
$$\sum_{n=-\infty}^{\infty} (-1)^n \operatorname{sinc} (\Omega_c n) = 0 \quad \Omega_c < \pi$$
  
(c) 
$$\sum_{n=-\infty}^{\infty} \operatorname{sinc}^2(\Omega_c n) = \frac{\pi}{\Omega_c} \quad \Omega_c < \pi/2$$
  
(d) 
$$\sum_{n=-\infty}^{\infty} (-1)^n \operatorname{sinc}^2(\Omega_c n) = 0 \quad \Omega_c < \pi/2$$
  
(e) 
$$\int_{-\pi}^{\pi} \frac{\sin(M\Omega/2)}{\sin(\Omega/2)} = 2\pi \quad \operatorname{odd} M$$

(f) 
$$\sum_{n=-\infty} |\operatorname{sinc} (\Omega_c n)|^4 = 2\pi/3\Omega_c \quad \Omega_c < \pi/2$$

**9.3-15** Show that the energy of signal  $x_c(t)$  specified in Eq. (9.41) is identical to *T* times the energy of the discrete-time signal x[n], assuming  $x_c(t)$  is bandlimited to  $B \le 1/2T$  Hz. [*Hint*: Recall that

$$\int_{-\infty}^{\infty} \operatorname{sinc} \left[ \pi(t-m) \right] \operatorname{sinc} \left[ \pi(t-n) \right] dt$$
$$= \begin{cases} 0 & m \neq n \\ 1 & m = n \end{cases}$$

That is, sinc functions are orthogonal.]

**9.4-1** Use the DTFT method to find the zero-state response y[n] of a causal system with frequency response

$$H(\Omega) = \frac{e^{j\Omega} + 0.32}{e^{j2\Omega} + e^{j\Omega} + 0.16}$$

and the input  $x[n] = (-0.5)^n u[n]$ .

9.4-2 Repeat Prob. 9.4-1 for

$$H(\Omega) = \frac{e^{j\Omega} + 0.32}{e^{j2\Omega} + e^{j\Omega} + 0.16}$$

and input x[n] = u[n].

**9.4-3** Repeat Prob. 9.4-1 for

$$H(\Omega) = \frac{e^{j\Omega}}{e^{j\Omega} - 0.5}$$

and

$$x[n] = 0.8^{n}u[n] + 2(2)^{n}u[-(n+1)]$$

**9.4-4** Determine and sketch the magnitude and phase response for an LTID system specified by the equation

$$y[n] + 0.5y[n-1] = x[n] - 0.9x[n-1]$$

Determine the system output y[n] for the input  $x[n] = \cos(\frac{\pi n}{2} + 0.5)$ .

**9.4-5** Repeat Prob. 9.4-4 if the LTID system is instead specified by the equation

$$y[n] - 0.5y[n-1] = x[n] + 0.9x[n-1]$$

**9.4-6** An accumulator system has the property that an input x[n] results in the output

$$y[n] = \sum_{k=-\infty}^{n} x[k]$$

- (a) Find the unit impulse response h[n] and the frequency response H(Ω) for the accumulator.
- (b) Use the results of part (a) to find the DTFT of *u*[*n*].
- **9.4-7** A noncausal 7-point moving average is described by the equation

$$y[n] = \frac{1}{7} \sum_{k=-3}^{3} x[n-k]$$

- (a) Find and sketch the magnitude and phase responses of the system.
- (b) How can this system be made causal? Plot the magnitude and phase responses of the causal system, and comment on any differences from part (a).
- **9.4-8** An LTID system frequency response over  $|\Omega| \le \pi$  is

$$H(\Omega) = \operatorname{rect}\left(\frac{\Omega}{\pi}\right) e^{-j2\Omega}$$


Find the output y[n] of this system, if the input x[n] is given by

- (a) sinc  $(\pi n/2)$
- (b) sinc  $(\pi n)$
- (c)  $sinc^2(\pi n/4)$
- **9.4-9** (a) If  $x[n] \iff X(\Omega)$ , then, show that  $(-1)^n x[n] \iff X(\Omega \pi)$ .
  - (b) Sketch γ<sup>n</sup>u[n] and (-γ)<sup>n</sup>u[n] for γ = 0.8; see the spectra for γ<sup>n</sup>u[n] in Figs. 9.5b and 9.5c. From these spectra, sketch the spectra for (-γ)<sup>n</sup>u[n].
  - (c) An ideal lowpass filter of cutoff frequency  $\Omega_c$  is specified by the frequency response  $H(\Omega) = \text{rect}(\Omega/2\Omega_c)$ . Find its impulse response h[n]. Find the frequency response of a filter whose impulse response is  $(-1)^n h[n]$ . Sketch the frequency response of this filter. What kind of filter is this?
- **9.4-10** An analog differentiator  $y(t) = \frac{d}{dt}x(t)$  can be approximated using a backward difference system described as

$$y[n] = \frac{x[n] - x[n-1]}{T}$$

Find and sketch the magnitude and phase responses of this DT system. For what frequencies does the system most behave as a differentiator? For what frequencies does the system least behave as a differentiator?

**9.4-11** A filter with impulse response h[n] is modified as shown in Fig. P9.4-11. Determine the resulting filter impulse response  $h_1[n]$ . Find also the resulting filter frequency response  $H_1(\Omega)$  in terms of the frequency response  $H(\Omega)$ . How are  $H(\Omega)$  and  $H_1(\Omega)$  related?

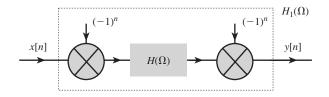

- **9.4-12** (a) Consider an LTID system  $S_1$ , specified by a difference equation of the form of Eqs. (3.15) or (3.16) or (3.20) in Ch. 3. We construct another system  $S_2$  by replacing coefficients  $a_i$  (i=0,1,2,...,N) by coefficients  $(-1)^i a_i$  and replacing all coefficients  $b_i$  (i=0,1,2,...,N) with coefficients  $(-1)^i b_i$ . How are the frequency responses of the two systems related?
  - (b) If  $S_1$  represents a lowpass filter, what kind of filter is specified by  $S_2$ ?
  - (c) What type of filter (lowpass, highpass, etc.) is specified by the difference equation

$$y[n] - 0.8y[n-1] = x[n]$$

What kind of filter is specified by the following difference equation?

$$y[n] + 0.8y[n-1] = x[n]$$

**9.4-13** (a) The system shown in Fig. P9.4-13 contains two identical LTID filters with frequency response  $H_0(\Omega)$  and corresponding impulse response  $h_0[n]$ . It is easy to see that the system is linear. Show that this system is also time-invariant. Do this by finding the

Figure P9.4-11

response of the system to input  $\delta[n-k]$  in terms of  $h_0[n]$ .

- (b) If  $H_0(\Omega) = \operatorname{rect}(\Omega/2W)$  over the fundamental band, and  $\Omega_c + W \le \pi$ , find  $H(\Omega)$ , the frequency response of this system. What kind of filter is this?
- **9.5-1** Determine the DTFT of  $x[n] = \sin(\Omega_0 n)$  from the CTFT of  $x_c(t) = \sin(\omega_0 t)$ .
- **9.5-2** A CT signal x(t), bandlimited to 25 kHz, is sampled at 50 kHz to produce

$$x[n] = \delta[n+4] - 2\delta[n+2] + \delta[n+1] - 3\delta[n] - \delta[n-1] - 2\delta[n-2] - \delta[n-4]$$

Determine the CTFT  $X(\omega)$ .

- **9.7-1** This problem uses a matrix-based approach to investigate the computation of the inverse DTFS.
  - (a) Implement Eq. (9.3), the inverse DTFS, using a matrix-based approach.
  - (b) Compare the execution speed of the matrix-based approach to the IFFT-based approach for input vectors of sizes 10, 100, and 1000.

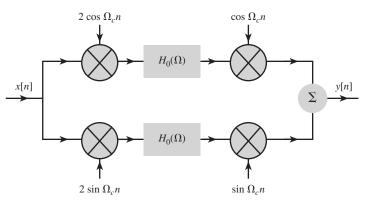


Figure P9.4-13

- (c) What is the result of multiplying the DFT matrix  $\mathbf{W}_{N_0}$  by the inverse DTFS matrix? Discuss your result.
- **9.7-2** A stable, first-order highpass IIR digital filter has transfer function


$$H[z] = \left(\frac{1+\alpha}{2}\right) \left(\frac{1-z^{-1}}{1-\alpha z^{-1}}\right)$$

- (a) Derive an expression relating  $\alpha$  to the 3 dB cutoff frequency  $\Omega_c$ .
- (b) Test your expression from part (a) in the following manner. First, compute  $\alpha$  to achieve a 3 dB cutoff frequency of 1 kHz, assuming a sampling rate of  $\mathcal{F}_s = 5$  kHz. Determine a difference equation description of the system, and verify that the system is stable. Next, compute and plot the magnitude response of the resulting filter. Verify that the filter is highpass and has the correct cutoff frequency.
- (c) Holding α constant, what happens to the cutoff frequency Ω<sub>c</sub> as F<sub>s</sub> is increased to 50 kHz? What happens to the cutoff frequency f<sub>c</sub> as F<sub>s</sub> is increased to 50 kHz?
- (d) Is there a well-behaved inverse filter to *H*[*z*]? Explain.
- (e) Determine  $\alpha$  for  $\Omega_c = \pi/2$ . Comment on the resulting filter, particularly h[n].
- **9.7-3** Using the frequency sampling method, design a length-35 linear phase FIR highstop filter that has cutoff frequency  $\Omega_c = 2\pi/3$ . Plot the resulting filter's impulse response h[n] and magnitude response  $|H(\Omega)|$ .
- 9.7-4 Using the frequency-sampling method, design a length-71 linear phase FIR bandstop filter that has stopband  $(\pi/3 < |\Omega| < \pi/2)$ . Plot the resulting filter's impulse response h[n] and magnitude response  $|H(\Omega)|$ .
- **9.7-5** Figure P9.7-5 provides the desired magnitude response  $|H(\Omega)|$  of a real filter. Mathematically,

$$H(\Omega)| = \begin{cases} \frac{4\Omega}{\pi} & 0 \le \Omega < \frac{\pi}{4} \\ 2 - \frac{4\Omega}{\pi} & \frac{\pi}{4} \le \Omega < \frac{\pi}{2} \\ 0 & \frac{\pi}{2} \le \Omega \le \pi \end{cases}$$

Since the digital filter is real,  $|H(\Omega)| = |H(-\Omega)|$ and  $|H(\Omega)| = |H(\Omega + 2\pi)|$  for all  $\Omega$ .

- (a) Can a realizable filter have this exact magnitude response? Explain your answer.
- (b) Use the frequency-sampling method to design an FIR filter with this magnitude response (or a reasonable approximation). Use MATLAB to plot the magnitude response of your filter.

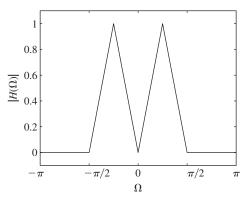



- **9.7-6** A real FIR comb filter is needed that has magnitude response  $|H(\Omega)| = [0,3,0,3,0,3,0,3]$  for  $\Omega = [0,\pi/4,\pi/2,3\pi/4,\pi,5\pi/4,3\pi/2,7\pi/4]$ , respectively. Provide the impulse response h[n] of a filter that accomplishes these specifications.
- 9.7-7 A permutation matrix P has a single one in each row and column with the remaining elements all zero. Permutation matrices are useful for reordering the elements of a vector; the operation Px reorders the elements of a column vector x based on the form of P.
  - (a) Fully describe an  $N_0 \times N_0$  permutation matrix named  $\mathbf{R}_{N_0}$  that reverses the order of the elements of a column vector **x**.
  - (b) Given DFT matrix  $\mathbf{W}_{N_0}$ , verify that  $(\mathbf{W}_{N_0})(\mathbf{W}_{N_0}) = \mathbf{W}_{N_0}^2$  produces a scaled permutation matrix. How does  $\mathbf{W}_{N_0}^2 \mathbf{x}$  reorder the elements of  $\mathbf{x}$ ?
  - (c) What is the result of  $(\mathbf{W}_{N_0}^2)(\mathbf{W}_{N_0}^2)\mathbf{x} = \mathbf{W}_{N_0}^4\mathbf{x}$ ?



# **STATE-SPACE ANALYSIS**

In Sec. 1.10, basic notions of *state variables* were introduced. In this chapter, we shall discuss state variables in more depth.

Most of this book deals with an external (input–output) description of systems. As noted in Ch. 1, such a description may be inadequate in some cases, and we need a systematic way of finding a system's *internal description*. State-space analysis of systems meets this need. In this method, we first select a set of key variables, called the *state variables*, in the system. Every possible signal or variable in the system at any instant *t* can be expressed in terms of the state variables and the input(s) at that instant *t*. If we know all the state variables as a function of *t*, we can determine every possible signal or variable in the system at any instant with a relatively simple relationship. The system description in this method consists of two parts:

- 1. A set of equations relating the state variables to the inputs (*the state equation*).
- 2. A set of equations relating outputs to the state variables and the inputs (*the output equation*).

The analysis procedure, therefore, consists of solving the state equation first, and then solving the output equation. The state-space description is capable of determining every possible system variable (or output) from knowledge of the input and the initial state (conditions) of the system. For this reason, it is an *internal description* of the system.

By its nature, state variable analysis is eminently suited for multiple-input, multiple-output (MIMO) systems. A single-input, single output (SISO) system is a special case of MIMO systems. In addition, the state-space techniques are useful for several other reasons, mentioned in Sec. 1.10, and repeated here.

- The state equations of a system provide a mathematical model of great generality that can describe not just linear systems, but also nonlinear systems; not just time-invariant systems, but also time-varying parameter systems; not just SISO systems, but also MIMO systems. Indeed, state equations are ideally suited for analysis, synthesis, and optimization of MIMO systems.
- 2. Compact matrix notation along with powerful techniques of linear algebra greatly facilitates complex manipulations. Without such features, many important results of

modern system theory would have been difficult to obtain. State equations can yield a great deal of information about a system even when they are not solved explicitly.

- 3. State equations lend themselves readily to digital computer simulation of complex systems of high order, with or without nonlinearities, and with multiple inputs and outputs.
- 4. For second-order systems (N = 2), a graphical method called *phase-plane analysis* can be used on state equations, whether they are linear or nonlinear.

### **10.1 MATHEMATICAL PRELIMINARIES**

This chapter requires some understanding of matrix algebra. Section B.6 introduces basic concepts of matrix algebra, but misses a few needed mathematical concepts, which we present next.

### 10.1-1 Derivatives and Integrals of a Matrix

Elements of a matrix need not be constants; they may be functions of a variable. For example, if

$$\mathbf{A} = \begin{bmatrix} e^{-2t} & \sin t \\ e^t & e^{-t} + e^{-2t} \end{bmatrix}$$
(10.1)

then the matrix elements are functions of t. Here, it is helpful to denote A by A(t). Next, we define the derivative and integral of A(t).

The derivative of a matrix A(t) (with respect to *t*) is defined as a matrix whose *ij*th element is the derivative (with respect to *t*) of the *ij*th element of the matrix **A**. Thus, if

$$\mathbf{A}(t) = [a_{ij}(t)]_{m \times n}$$

then

$$\frac{d}{dt}[\mathbf{A}(t)] = \left[\frac{d}{dt}a_{ij}(t)\right]_{m \times n} \quad \text{or} \quad \dot{\mathbf{A}}(t) = [\dot{a}_{ij}(t)]_{m \times n}$$

Thus, the derivative of the matrix in Eq. (10.1) is given by

$$\dot{\mathbf{A}}(t) = \begin{bmatrix} -2e^{-2t} & \cos t \\ e^t & -e^{-t} - 2e^{-2t} \end{bmatrix}$$

Similarly, we define the integral of A(t) (with respect to *t*) as a matrix whose *ij*th element is the integral (with respect to *t*) of the *ij*th element of the matrix **A**:

$$\int \mathbf{A}(t) \, dt = \left( \int a_{ij}(t) \, dt \right)_{m \times n}$$

Thus, for the matrix  $\mathbf{A}$  in Eq. (10.1), we have

$$\int \mathbf{A}(t) dt = \begin{bmatrix} \int e^{-2t} dt & \int \sin dt \\ \int e^t dt & \int (e^{-t} + 2e^{-2t}) dt \end{bmatrix}$$

### 910 CHAPTER 10 STATE-SPACE ANALYSIS

Since differentiation is a linear operation, it is easy to show that

$$\frac{d}{dt}(\mathbf{A} + \mathbf{B}) = \frac{d\mathbf{A}}{dt} + \frac{d\mathbf{B}}{dt}$$
 and  $\frac{d}{dt}(c\mathbf{A}) = c\frac{d\mathbf{A}}{dt}$ 

The derivative of a matrix product is given as

$$\frac{d}{dt}(\mathbf{AB}) = \frac{d\mathbf{A}}{dt}\mathbf{B} + \mathbf{A}\frac{d\mathbf{B}}{dt} = \dot{\mathbf{A}}\mathbf{B} + \mathbf{A}\dot{\mathbf{B}}$$
(10.2)

We can prove Eq. (10.2) as follows. Let **A** be an  $m \times n$  matrix and **B** an  $n \times p$  matrix. Then, if

 $\mathbf{C} = \mathbf{A}\mathbf{B}$ 

from Eq. (B.33), we have

$$c_{ik} = \sum_{j=1}^{n} a_{ij} b_{jk}$$

and

$$\dot{c}_{ik} = \underbrace{\sum_{j=1}^{n} \dot{a}_{ij} b_{jk}}_{d_{ik}} + \underbrace{\sum_{j=1}^{n} a_{ij} \dot{b}_{jk}}_{e_{ik}} \quad \text{or} \quad \dot{c}_{ik} = d_{ik} + e_{ik}$$
(10.3)

Equation (10.3) along with the multiplication rule clearly indicates that  $d_{ik}$  is the *ik*th element of matrix  $\dot{AB}$  and  $e_{ik}$  is the *ik*th element of matrix  $\dot{AB}$ . Equation (10.2) then follows.

If we let  $\mathbf{B} = \mathbf{A}^{-1}$  in Eq. (10.2), we obtain

$$\frac{d}{dt}(\mathbf{A}\mathbf{A}^{-1}) = \frac{d\mathbf{A}}{dt}\mathbf{A}^{-1} + \mathbf{A}\frac{d}{dt}\mathbf{A}^{-1}$$

But since

$$\frac{d}{dt}(\mathbf{A}\mathbf{A}^{-1}) = \frac{d}{dt}\mathbf{I} = 0$$

we have

$$\frac{d}{dt}(\mathbf{A}^{-1}) = -\mathbf{A}^{-1}\frac{d\mathbf{A}}{dt}\mathbf{A}^{-1}$$

# **10.1-2** The Characteristic Equation of a Matrix: The Cayley–Hamilton Theorem

For an  $(n \times n)$  square matrix **A**, any vector **x**  $(\mathbf{x} \neq 0)$  that satisfies the equation

$$\mathbf{A}\mathbf{x} = \lambda \mathbf{x} \tag{10.4}$$

is an *eigenvector* (or *characteristic vector*), and  $\lambda$  is the corresponding *eigenvalue* (or *characteristic value*) of **A**. Equation (10.4) can be expressed as

$$(\mathbf{A} - \lambda \mathbf{I})\mathbf{x} = 0$$
 or  $(\lambda \mathbf{I} - \mathbf{A})\mathbf{x} = 0$ 

The solution for this set of homogeneous equations exists if and only if

$$|\lambda \mathbf{I} - \mathbf{A}| = \begin{vmatrix} \lambda - a_{11} & -a_{12} & \cdots & -a_{1n} \\ -a_{21} & \lambda - a_{22} & \cdots & -a_{2n} \\ \vdots & \vdots & \ddots & \vdots \\ -a_{n1} & -a_{n2} & \cdots & \lambda - a_{nn} \end{vmatrix} = 0$$
(10.5)

Equation (10.5) is known as the characteristic equation of matrix A and can be expressed as

$$Q(\lambda) = |\lambda \mathbf{I} - \mathbf{A}| = \lambda^n + a_{n-1}\lambda^{n-1} + \dots + a_1\lambda + a_0\lambda^0 = 0$$
(10.6)

 $Q(\lambda)$  is called the *characteristic polynomial* of matrix **A**. The *n* zeros of the characteristic polynomial are the eigenvalues of **A** and, corresponding to each eigenvalue, there is an eigenvector that satisfies Eq. (10.4).

The *Cayley–Hamilton theorem* states that every  $n \times n$  matrix **A** satisfies its own characteristic equation. In other words, Eq. (10.6) is valid if  $\lambda$  is replaced by **A**:

$$\mathbf{Q}(\mathbf{A}) = \mathbf{A}^{n} + a_{n-1}\mathbf{A}^{n-1} + \dots + a_{1}\mathbf{A} + a_{0}\mathbf{A}^{0} = 0$$
(10.7)

### FUNCTIONS OF A MATRIX

We now demonstrate the use of the Cayley–Hamilton theorem [Eq. (10.7)] to evaluate functions of an  $n \times n$  square matrix **A**.

Consider a function  $f(\lambda)$  in the form of an infinite power series:

$$f(\lambda) = \alpha_0 + \alpha_1 \lambda + \alpha_2 \lambda_2^2 + \dots = \sum_{i=0}^{\infty} \alpha_i \lambda^i$$
(10.8)

Since  $\lambda$ , being an eigenvalue (characteristic root) of **A**, satisfies the characteristic equation [Eq. (10.6)], we can write

$$\lambda^{n} = -a_{n-1}\lambda^{n-1} - a_{n-2}\lambda^{n-2} - \dots - a_{1}\lambda - a_{0}$$
(10.9)

If we multiply both sides by  $\lambda$ , the left-hand side is  $\lambda^{n+1}$ , and the right-hand side contains the terms  $\lambda^n$ ,  $\lambda^{n-1}$ , ...,  $\lambda$ . Using Eq. (10.9), we substitute  $\lambda^n$  in terms of  $\lambda^{n-1}$ ,  $\lambda^{n-2}$ , ...,  $\lambda$  so that the highest power on the right-hand side is reduced to n - 1. Continuing in this way, we see that  $\lambda^{n+k}$  can be expressed in terms of  $\lambda^{n-1}$ ,  $\lambda^{n-2}$ , ...,  $\lambda$  for any k. Hence, the infinite series on the right-hand side of Eq. (10.8) can always be expressed in terms of  $\lambda^{n-1}$ ,  $\lambda^{n-2}$ , ...,  $\lambda$  and a constant as

$$f(\lambda) = \beta_0 + \beta_1 \lambda + \beta_2 \lambda^2 + \dots + \beta_{n-1} \lambda^{n-1}$$
(10.10)

If we assume that there are *n* distinct eigenvalues  $\lambda_1, \lambda_2, \ldots, \lambda_n$ , then Eq. (10.10) holds for these *n* values of  $\lambda$ . The substitution of these values in Eq. (10.10) yields *n* simultaneous equations

$$\begin{bmatrix} f(\lambda_1) \\ f(\lambda_2) \\ \vdots \\ f(\lambda_n) \end{bmatrix} = \begin{bmatrix} 1 & \lambda_1 & \lambda_1^2 & \cdots & \lambda_1^{n-1} \\ 1 & \lambda_2 & \lambda_2^2 & \cdots & \lambda_2^{n-1} \\ \vdots & \vdots & \vdots & \cdots & \vdots \\ 1 & \lambda_n & \lambda_n^2 & \cdots & \lambda_n^{n-1} \end{bmatrix} \begin{bmatrix} \beta_0 \\ \beta_1 \\ \vdots \\ \beta_{n-1} \end{bmatrix}$$

### 912 CHAPTER 10 STATE-SPACE ANALYSIS

Solving for the  $\beta$  coefficients yields

$$\begin{bmatrix} \beta_0 \\ \beta_1 \\ \vdots \\ \beta_{n-1} \end{bmatrix} = \begin{bmatrix} 1 & \lambda_1 & \lambda_1^2 & \cdots & \lambda_1^{n-1} \\ 1 & \lambda_2 & \lambda_2^2 & \cdots & \lambda_2^{n-1} \\ \vdots & \vdots & \vdots & \ddots & \vdots \\ 1 & \lambda_n & \lambda_n^2 & \cdots & \lambda_n^{n-1} \end{bmatrix}^{-1} \begin{bmatrix} f(\lambda_1) \\ f(\lambda_2) \\ \vdots \\ f(\lambda_n) \end{bmatrix}$$
(10.11)

Since A also satisfies Eq. (10.9), we may advance a similar argument to show that if f(A) is a function of a square matrix A expressed as an infinite power series in A, then

$$f(\mathbf{A}) = \alpha_0 \mathbf{I} + \alpha_1 \mathbf{A} + \alpha_2 \mathbf{A}^2 + \dots = \sum_{i=0}^{\infty} \alpha_i \mathbf{A}^i$$

and, as argued earlier, the right-hand side can be expressed by using terms of power less than or equal to n - 1,

$$f(\mathbf{A}) = \beta_0 \mathbf{I} + \beta_1 \mathbf{A} + \beta_2 \mathbf{A}^2 + \dots + \beta_{n-1} \mathbf{A}^{n-1} = \sum_{i=0}^{n-1} \beta_i \mathbf{A}^i$$
(10.12)

in which the coefficients  $\beta_i$ s are found from Eq. (10.11). If some of the eigenvalues are repeated (multiple roots), the results are somewhat modified.

We shall demonstrate the utility of this result with the following two examples.

## 10.1-3 Computation of an Exponential and a Power of a Matrix

Let us compute  $e^{\mathbf{A}t}$  defined by

$$e^{\mathbf{A}t} = \mathbf{I} + \mathbf{A}t + \frac{\mathbf{A}^2 t^2}{2!} + \dots + \frac{\mathbf{A}^n t^n}{n!} + \dots = \sum_{k=0}^{\infty} \frac{\mathbf{A}^k t^k}{k!}$$

From Eq. (10.12), we can express

$$e^{\mathbf{A}t} = \sum_{i=1}^{n-1} \beta_i(\mathbf{A})^i$$

in which the  $\beta_i$ s are given by Eq. (10.11), with  $f(\lambda_i) = e^{\lambda_i t}$ .

# **EXAMPLE 10.1** Computing the Exponential of a Matrix

Compute  $e^{At}$  for the case

$$\mathbf{A} = \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix}$$

The characteristic equation is

$$|\lambda \mathbf{I} - \mathbf{A}| = \begin{vmatrix} \lambda & -1 \\ 2 & \lambda + 3 \end{vmatrix} = \lambda^2 + 3\lambda + 2 = (\lambda + 1)(\lambda + 2) = 0$$

Hence, the eigenvalues are  $\lambda_1 = -1$ ,  $\lambda_2 = -2$ , and

$$e^{\mathbf{A}t} = \beta_0 \mathbf{I} + \beta_1 \mathbf{A}$$

in which

$$\begin{bmatrix} \beta_0 \\ \beta_1 \end{bmatrix} = \begin{bmatrix} 1 & -1 \\ 1 & -2 \end{bmatrix}^{-1} \begin{bmatrix} e^{-t} \\ e^{-2t} \end{bmatrix} = \begin{bmatrix} 2 & -1 \\ 1 & -1 \end{bmatrix} \begin{bmatrix} e^{-t} \\ e^{-2t} \end{bmatrix} = \begin{bmatrix} 2e^{-t} - e^{-2t} \\ e^{-t} - e^{-2t} \end{bmatrix}$$

and

$$e^{\mathbf{A}t} = (2e^{-t} - e^{-2t}) \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix} + (e^{-t} - e^{-2t}) \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix}$$
$$= \begin{bmatrix} 2e^{-t} - e^{-2t} & e^{-t} - e^{-2t} \\ -2e^{-t} + 2e^{-2t} & -e^{-t} + 2e^{-2t} \end{bmatrix}$$
(10.13)

## COMPUTATION OF $A^k$

As Eq. (10.12) indicates, we can express  $\mathbf{A}^k$  as

$$\mathbf{A}^{k} = \beta_0 \mathbf{I} + \beta_1 \mathbf{A} + \dots + \beta_{n-1} \mathbf{A}^{n-1}$$

in which the  $\beta_i$ s are given by Eq. (10.11) with  $f(\lambda_i) = \lambda_i^k$ . For a completed example of the computation of  $\mathbf{A}^k$  by this method, see Ex. 10.13.

## **10.2 INTRODUCTION TO STATE SPACE**

From the discussion in Ch. 1, we know that to determine a system's response(s) at any instant t, we need to know the system's inputs during its entire past, from  $-\infty$  to t. If the inputs are known only for  $t > t_0$ , we can still determine the system output(s) for any  $t > t_0$ , provided we know certain initial conditions in the system at  $t = t_0$ . These initial conditions collectively are called the *initial state* of the system (at  $t = t_0$ ).

The state variables  $q_1(t), q_2(t), \ldots, q_N(t)$  are the minimum number of system variables such that their initial values at any instant  $t_0$  are sufficient to determine the behavior of the system for all time  $t \ge t_0$  when the input(s) to the system is known for  $t \ge t_0$ . This statement implies that an output of a system at any instant is determined completely from a knowledge of the values of the system state and the input at that instant.

Initial conditions of a system can be specified in many different ways. Consequently, the system state can also be specified in many different ways. This means that state variables are not unique.

### 914 CHAPTER 10 STATE-SPACE ANALYSIS

This discussion is also valid for multiple-input, multiple-output (MIMO) systems, where every possible system output at any instant t is determined completely from a knowledge of the system state and the input(s) at the instant t. These ideas should become clear from the following example of an *RLC* circuit.

# **EXAMPLE 10.2** State-Space Description and Output Equations of an *RLC* Circuit

Find a state-space description of the *RLC* circuit shown in Fig. 10.1. Verify that all possible system outputs at some instant t can be determined from knowledge of the system state and the input at that instant t.

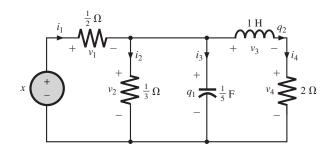


Figure 10.1 Circuit for Ex. 10.2.

It is known that inductor currents and capacitor voltages in an *RLC* circuit can be used as one possible choice of state variables. For this reason, we shall choose  $q_1$  (the capacitor voltage) and  $q_2$  (the inductor current) as our state variables.

The node equation at the intermediate node is

$$i_3 = i_1 - i_2 - q_2$$

but  $i_3 = 0.2\dot{q}_1$ ,  $i_1 = 2(x - q_1)$ ,  $i_2 = 3q_1$ . Hence,

$$0.2\dot{q}_1 = 2(x - q_1) - 3q_1 - q_2$$

or

$$\dot{q}_1 = -25q_1 - 5q_2 + 10x$$

This is the first state equation. To obtain the second state equation, we sum the voltages in the extreme right loop formed by C, L, and the  $2\Omega$  resistor so that they are equal to zero:

$$-q_1 + \dot{q}_2 + 2q_2 = 0$$

$$\dot{q}_2 = q_1 - 2q_2$$

Thus, the two state equations are

$$\dot{q}_1 = -25q_1 - 5q_2 + 10x \\ \dot{q}_2 = q_1 - 2q_2$$

Every possible output can now be expressed as a linear combination of  $q_1$ ,  $q_2$ , and x. From Fig. 10.1, we have

$$v_{1} = x - q_{1}$$

$$i_{1} = 2(x - q_{1})$$

$$v_{2} = q_{1}$$

$$i_{2} = 3q_{1}$$

$$i_{3} = i_{1} - i_{2} - q_{2} = 2(x - q_{1}) - 3q_{1} - q_{2} = -5q_{1} - q_{2} + 2x$$

$$i_{4} = q_{2}$$

$$v_{4} = 2i_{4} = 2q_{2}$$

$$v_{3} = q_{1} - v_{4} = q_{1} - 2q_{2}$$

This set of equations is known as the *output equation* of the system. It is clear from this set that every possible output at some instant t can be determined from knowledge of  $q_1(t)$ ,  $q_2(t)$ , and x(t), the system state, and the input at the instant t. Once we have solved the state equations to obtain  $q_1(t)$  and  $q_2(t)$ , we can determine every possible output for any given input x(t).

For continuous-time systems, the state equations are N simultaneous first-order differential equations in N state variables  $q_1, q_2, \ldots, q_N$  of the form

$$\dot{q}_i = g_i(q_1, q_2, \dots, q_N, x_1, x_2, \dots, x_i)$$
  $i = 1, 2, \dots, N$ 

where  $x_1, x_2, \ldots, x_j$  are the *j* system inputs. For a linear system, these equations reduce to a simpler linear form

$$\dot{q}_i = a_{i1}q_1 + a_{i2}q_2 + \dots + a_{iN}q_N + b_{i1}x_1 + b_{i2}x_2 + \dots + b_{ii}x_i \qquad i = 1, 2, \dots, N$$
(10.14)

If there are k outputs  $y_1, y_2, \ldots, y_k$ , the k output equations are of the form

$$y_m = c_{m1}q_1 + c_{m2}q_2 + \dots + c_{mN}q_N + d_{m1}x_1 + d_{m2}x_2 + \dots + d_{mi}x_i \qquad m = 1, 2, \dots, k \quad (10.15)$$

The N simultaneous first-order state equations are also known as the *normal-form* equations.

or

These equations can be written more conveniently in matrix form:

$$\begin{bmatrix} \dot{q}_{1} \\ \dot{q}_{2} \\ \vdots \\ \dot{q}_{N} \end{bmatrix} = \begin{bmatrix} a_{11} & a_{12} & \cdots & a_{1N} \\ a_{21} & a_{22} & \cdots & a_{2N} \\ \vdots & \vdots & \cdots & \vdots \\ a_{N1} & a_{N2} & \cdots & a_{NN} \end{bmatrix} \begin{bmatrix} q_{1} \\ q_{2} \\ \vdots \\ q_{N} \end{bmatrix} + \begin{bmatrix} b_{11} & b_{12} & \cdots & b_{1j} \\ b_{21} & b_{22} & \cdots & b_{2j} \\ \vdots & \vdots & \cdots & \vdots \\ b_{N1} & b_{N2} & \cdots & b_{Nj} \end{bmatrix} \begin{bmatrix} x_{1} \\ x_{2} \\ \vdots \\ x_{j} \end{bmatrix}$$

$$= \begin{bmatrix} c_{11} & c_{12} & \cdots & c_{1N} \\ c_{21} & c_{22} & \cdots & c_{2N} \\ \vdots & \vdots & \cdots & \vdots \\ c_{k1} & c_{k2} & \cdots & c_{kN} \end{bmatrix} \begin{bmatrix} q_{1} \\ q_{2} \\ \vdots \\ q_{N} \end{bmatrix} + \begin{bmatrix} d_{11} & d_{12} & \cdots & d_{1j} \\ d_{21} & d_{22} & \cdots & d_{2j} \\ \vdots & \vdots & \cdots & \vdots \\ d_{k1} & d_{k2} & \cdots & d_{kj} \end{bmatrix} \begin{bmatrix} x_{1} \\ x_{2} \\ \vdots \\ x_{j} \end{bmatrix}$$

or

and

 $\dot{\mathbf{q}} = \mathbf{A}\mathbf{q} + \mathbf{B}\mathbf{x} \tag{10.16}$ 

and

$$\mathbf{y} = \mathbf{C}\mathbf{q} + \mathbf{D}\mathbf{x} \tag{10.17}$$

Equation (10.16) is the state equation and Eq. (10.17) is the output equation;  $\mathbf{q}$ ,  $\mathbf{y}$ , and  $\mathbf{x}$  are the state vector, the output vector, and the input vector, respectively.

For discrete-time systems, the state equations are N simultaneous first-order difference equations. Discrete-time systems are discussed in Sec. 10.7.

# **10.3 A Systematic Procedure to Determine State Equations**

We shall discuss here a systematic procedure to determine the state-space description of linear time-invariant systems. In particular, we shall consider systems of two types: (1) *RLC* networks and (2) systems specified by block diagrams or *N*th-order transfer functions.

### **10.3-1 Electrical Circuits**

The method used in Ex. 10.2 proves effective in most of the simple cases. The steps are as follows:

- 1. Choose all independent capacitor voltages and inductor currents to be the state variables.
- 2. Choose a set of loop currents; express the state variables and their first derivatives in terms of these loop currents.
- 3. Write loop equations, and eliminate all variables other than state variables (and their first derivatives) from the equations derived in steps 2 and 3.

## **EXAMPLE 10.3** State Equations of an *RLC* Circuit

Write the state equations for the network shown in Fig. 10.2.

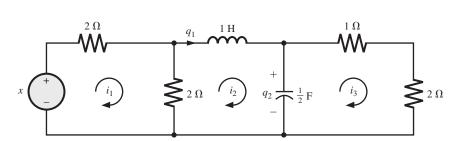


Figure 10.2 Circuit for Ex. 10.3.

**Step 1.** There is one inductor and one capacitor in the network. Therefore, we shall choose the inductor current  $q_1$  and the capacitor voltage  $q_2$  as the state variables.

**Step 2.** The relationship between the loop currents and the state variables can be written by inspection:

$$q_1 = i_2 \tag{10.18}$$

$$\frac{1}{2}\dot{q}_2 = i_2 - i_3 \tag{10.19}$$

Step 3. The loop equations are

$$4i_1 - 2i_2 = x \tag{10.20}$$

$$2(i_2 - i_1) + \dot{q}_1 + q_2 = 0 \tag{10.21}$$

$$-q_2 + 3i_3 = 0 \tag{10.22}$$

Now we eliminate  $i_1$ ,  $i_2$ , and  $i_3$  from the state and loop equations as follows. From Eq. (10.21), we have

$$\dot{q}_1 = 2(i_1 - i_2) - q_2$$

We can eliminate  $i_1$  and  $i_2$  from this equation by using Eqs. (10.18) and (10.20) to obtain

$$\dot{q}_1 = -q_1 - q_2 + \frac{1}{2}x$$

The substitution of Eqs. (10.18) and (10.22) in Eq. (10.19) yields

$$\dot{q}_2 = 2q_1 - \frac{2}{3}q_2$$

These are the desired state equations. We can express them in matrix form as

$$\begin{bmatrix} \dot{q}_1\\ \dot{q}_2 \end{bmatrix} = \begin{bmatrix} -1 & -1\\ 2 & -\frac{2}{3} \end{bmatrix} \begin{bmatrix} q_1\\ q_2 \end{bmatrix} + \begin{bmatrix} \frac{1}{2}\\ 0 \end{bmatrix} x$$
(10.23)

The derivation of state equations from loop equations is facilitated considerably by choosing loops in such a way that only one loop current passes through each of the inductors or capacitors.

## AN ALTERNATIVE PROCEDURE

We can also determine the state equations by the following procedure.

- 1. Choose all independent capacitor voltages and inductor currents to be the state variables.
- 2. Replace each capacitor by a voltage source equal to the capacitor voltage, and replace each inductor by a current source equal to the inductor current. This step will transform the RLC network into a network consisting only of resistors, current sources, and voltage sources.
- 3. Find the current through each capacitor and equate it to  $C\dot{q}_i$ , where  $q_i$  is the capacitor voltage. Similarly, find the voltage across each inductor and equate it to  $L\dot{q}_i$ , where  $q_i$  is the inductor current.

#### **EXAMPLE 10.4** Alternate Procedure to Determine State Equations

Use the three-step alternative procedure just outlined to write the state equations for the network in Fig. 10.2.

In the network in Fig. 10.2, we replace the inductor by a current source of current  $q_1$  and the capacitor by a voltage source of voltage  $q_2$ , as shown in Fig. 10.3. The resulting network consists of four resistors, two voltage sources, and one current source.

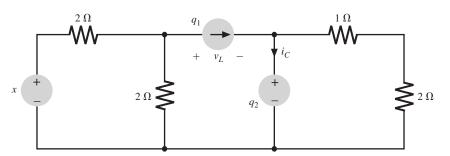


Figure 10.3 Equivalent circuit of the network in Fig. 10.2.

We can determine the voltage  $v_L$  across the inductor and the current  $i_c$  through the capacitor by using the principle of superposition. This step can be accomplished by inspection. For example,  $v_L$  has three components arising from three sources. To compute the component due to x, we assume that  $q_1 = 0$  (open circuit) and  $q_2 = 0$  (short circuit). Under these conditions, the entire network to the right of the 2  $\Omega$  resistor is opened, and the component of  $v_L$  due to x is the voltage across the 2  $\Omega$  resistor. This voltage is clearly (1/2)x. Similarly, to find the component of  $v_L$  due to  $q_1$ , we short x and  $q_2$ . The source  $q_1$  sees an equivalent resistor of 1  $\Omega$  across it, and hence  $v_L = -q_1$ . Continuing the process, we find that the component of  $v_L$  due to  $q_2$  is  $-q_2$ . Hence,

$$v_L = \dot{q}_1 = \frac{1}{2}x - q_1 - q_2$$

Using the same procedure, we find

$$i_c = \frac{1}{2}\dot{q}_2 = q_1 - \frac{1}{3}q_2$$

These equations are identical to the state equations [Eq. (10.23)] obtained earlier.<sup>†</sup>

#### 10.3-2 State Equations from a Transfer Function


It is relatively easy to determine the state equations of a system specified by its transfer function.<sup>\*</sup> Consider, for example, a first-order system with the transfer function

$$H(s) = \frac{1}{s+a}$$

The system realization appears in Fig. 10.4. The integrator output q serves as a natural state variable since, in practical realization, initial conditions are placed on the integrator output. The

<sup>&</sup>lt;sup>†</sup>This procedure requires modification if the system contains all-capacitor and voltage-source tie sets or all-inductor and current-source cut sets. In the case of all-capacitor and voltage-source tie sets, all capacitor voltages cannot be independent. One capacitor voltage can be expressed in terms of the remaining capacitor voltages and the voltage source(s) in that tie set. Consequently, one of the capacitor voltages should not be used as a state variable, and that capacitor should not be replaced by a voltage source. Similarly, in all-inductor and current-source tie sets, one inductor should not be replaced by a current source. If there are all-capacitor tie sets or all-inductor cut sets only, no further complications occur. In all-capacitor voltage-source tie sets and/or all-inductor current-source cut sets, we have additional difficulties in that the terms involving derivatives of the input may occur. This problem can be solved by redefining the state variables. The final state variables will not be capacitor voltages and inductor currents.

<sup>&</sup>lt;sup>‡</sup> We implicitly assume that the system is controllable and observable. This implies that there are no pole-zero cancellations in the transfer function. If such cancellations are present, the state variable description represents only the part of the system that is controllable and observable (the part of the system that is coupled to the input and the output). In other words, the internal description represented by the state equations is no better than the external description represented by the input–output equation.

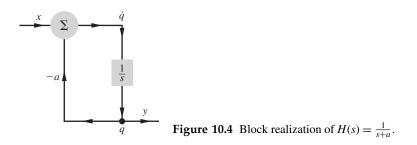

integrator input is naturally  $\dot{q}$ . From Fig. 10.4, we have

 $\dot{q} = -aq + x$  and y = q

In Sec. 4.6 we saw that a given transfer function can be realized in several ways. Consequently, we should be able to obtain different state-space descriptions of the same system by using different realizations. This assertion will be clarified by the following example.

## **EXAMPLE 10.5** State-Space Description from a Transfer Function

Consider a system specified by the transfer function

$$H(s) = \underbrace{\frac{2s+10}{s^3+8s^2+19s+12}}_{\text{direct form}} = \underbrace{\left(\frac{2}{s+1}\right)\left(\frac{s+5}{s+3}\right)\left(\frac{1}{s+4}\right)}_{\text{cascade}} = \underbrace{\frac{\frac{4}{3}}{s+1} - \frac{2}{s+3} + \frac{\frac{2}{3}}{s+4}}_{\text{parallel}}$$

The procedure developed in Sec. 4.6 allows us to realize H(s) as, among others, direct form II (DFII), transpose DFII (TDFII), cascade, and parallel. These realizations are depicted in Fig. 10.5. Determine state-space descriptions for each of these realizations. As mentioned earlier, the output of each integrator serves as a natural state variable.

#### **Direct Form II and Its Transpose**

Here we shall realize the system using the canonical form (direct form II and its transpose) discussed in Sec. 4.6. If we choose the state variables to be the three integrator outputs  $q_1$ ,  $q_2$ , and  $q_3$ , then, according to Fig. 10.5a,

$$\dot{q}_1 = q_2$$
  
 $\dot{q}_2 = q_3$   
 $\dot{q}_3 = -12q_1 - 19q_2 - 8q_3 + x$ 

921

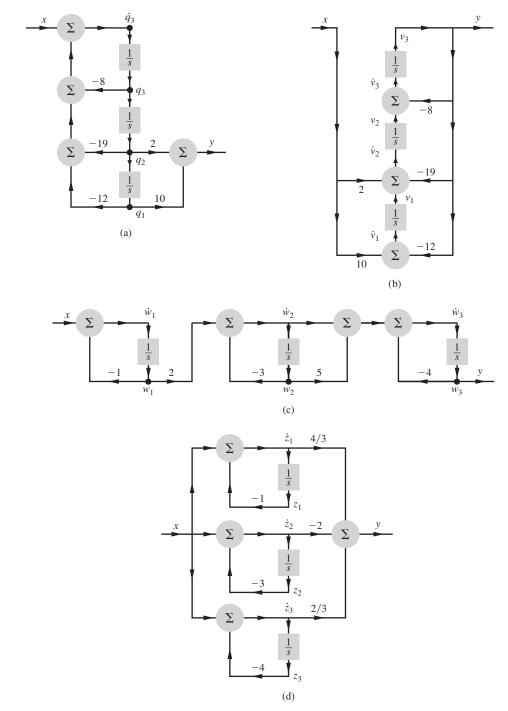


Figure 10.5 (a) DFII, (b) TDFII, (c) cascade, and (d) parallel realizations of *H*(*s*).

#### CHAPTER 10 STATE-SPACE ANALYSIS

Also, the output *y* is given by

$$y = 10q_1 + 2q_2$$

In matrix form, these state and output equations become

$$\begin{bmatrix} \dot{q}_1 \\ \dot{q}_2 \\ \dot{q}_3 \end{bmatrix} = \underbrace{\begin{bmatrix} 0 & 1 & 0 \\ 0 & 0 & 1 \\ -12 & -19 & -8 \end{bmatrix}}_{\mathbf{A}} \begin{bmatrix} q_1 \\ q_2 \\ q_3 \end{bmatrix} + \underbrace{\begin{bmatrix} 0 \\ 0 \\ 1 \end{bmatrix}}_{\mathbf{B}} x$$

and

$$\mathbf{y} = \underbrace{\begin{bmatrix} 10 & 2 & 0 \end{bmatrix}}_{\mathbf{C}} \begin{bmatrix} q_1 \\ q_2 \\ q_3 \end{bmatrix}$$

We can readily verify the state equations of the DFII structure by using MATLAB's tf2ss command:

```
>> num = [2 10]; den = [1 8 19 12];
>> [A,B,C,D] = tf2ss(num,den)
            -19
    A = -8
                   -12
               0
         1
                     0
                     0
         0
               1
    B =
        1
         0
         0
    C = 0
               2
                    10
    D = 0
```

MATLAB's convention for labeling state variables  $q_1, q_2, \ldots, q_n$  in a block diagram, such as shown in Fig. 10.5a, is reversed. That is, MATLAB labels  $q_1$  as  $q_n$ ,  $q_2$  and  $q_{n-1}$ , and so on. Keeping this in mind, we see that MATLAB indeed confirms our earlier results.

It is also possible to determine the transfer function from the state-space representation using the ss2tf and tf commands:

[num,den] = ss2tf(A,B,C,D); H = tf(num,den) >> H = 2 s + 10 \_\_\_\_\_ s^3 + 8 s^2 + 19 s + 12

#### **Transpose Direct Form II**

We can also realize H(s) by using the transpose of the DFII form, as shown in Fig. 10.5b. If we label the output of the three integrators as the state variables  $v_1$ ,  $v_2$ , and  $v_3$ , then, according

922

to Fig. 10.5b,

$$\dot{v}_1 = -12v_3 + 10x \dot{v}_2 = v_1 - 19v_3 + 2x \dot{v}_3 = v_2 - 8v_3$$

and the output *y* is given by

 $y = v_3$ 

The matrix form of these state and output equations become

$$\begin{bmatrix} \dot{v}_1 \\ \dot{v}_2 \\ \dot{v}_3 \end{bmatrix} = \underbrace{\begin{bmatrix} 0 & 0 & -12 \\ 1 & 0 & -19 \\ 0 & 1 & -8 \end{bmatrix}}_{\hat{A}} \begin{bmatrix} v_1 \\ v_2 \\ v_3 \end{bmatrix} + \underbrace{\begin{bmatrix} 10 \\ 2 \\ 0 \end{bmatrix}}_{\hat{B}} x$$

and

$$\mathbf{y} = \underbrace{\begin{bmatrix} 0 & 0 & 1 \end{bmatrix}}_{\hat{\mathbf{c}}} \begin{bmatrix} v_1 \\ v_2 \\ v_3 \end{bmatrix}$$

Observe closely the relationship between the state-space descriptions of H(s) by means of the DFII and TDFII realizations. The **A** matrices in these two cases are the transpose of each other; also, the **B** of one is the transpose of **C** in the other, and vice versa. Hence,

$$(\mathbf{A})^T = \hat{\mathbf{A}}, \qquad (\mathbf{B})^T = \hat{\mathbf{C}}, \qquad \text{and} \qquad (\mathbf{C})^T = \hat{\mathbf{B}}$$

This is no coincidence. This duality relation is generally true [1].

#### **Cascade Realization**

The three integrator outputs  $w_1$ ,  $w_2$ , and  $w_3$  in Fig. 10.5c are the state variables. Writing equations for the summer outputs yields

$$\dot{w}_1 = -w_1 + x$$
,  $\dot{w}_2 = 2w_1 - 3w_2$ , and  $\dot{w}_3 = 5w_2 + \dot{w}_2 - 4w_3$ 

Since  $\dot{w}_2 = 2w_1 - 3w_2$ , we see that  $\dot{w}_3 = 2w_1 + 2w_2 - 4w_3$ . From Fig. 10.5c, we further see that  $y = w_3$ . Put into matrix form, the state and output equations are therefore

$$\begin{bmatrix} \dot{w}_1 \\ \dot{w}_2 \\ \dot{w}_3 \end{bmatrix} = \begin{bmatrix} -1 & 0 & 0 \\ 2 & -3 & 0 \\ 2 & 2 & -4 \end{bmatrix} \begin{bmatrix} w_1 \\ w_2 \\ w_3 \end{bmatrix} + \begin{bmatrix} 1 \\ 0 \\ 0 \end{bmatrix} x$$
$$y = \begin{bmatrix} 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} w_1 \\ w_2 \\ w_3 \end{bmatrix}$$

and

#### 924 CHAPTER 10 STATE-SPACE ANALYSIS

#### Parallel Realization (Diagonal Representation)

The three integrator outputs  $z_1$ ,  $z_2$ , and  $z_3$  in Fig. 10.5d are the state variables. The state equations are

 $\dot{z}_1 = -z_1 + x$  $\dot{z}_2 = -3z_2 + x$  $\dot{z}_3 = -4z_3 + x$ 

and the output equation is

$$y = \frac{4}{3}z_1 - 2z_2 + \frac{2}{3}z_3$$

In matrix form, these equations are

$$\begin{bmatrix} \dot{z}_1 \\ \dot{z}_2 \\ \dot{z}_3 \end{bmatrix} = \begin{bmatrix} -1 & 0 & 0 \\ 0 & -3 & 0 \\ 0 & 0 & -4 \end{bmatrix} \begin{bmatrix} z_1 \\ z_2 \\ z_3 \end{bmatrix} + \begin{bmatrix} 1 \\ 1 \\ 1 \end{bmatrix} x$$
$$y = \begin{bmatrix} \frac{4}{3} & -2 & \frac{2}{3} \end{bmatrix} \begin{bmatrix} z_1 \\ z_2 \\ z_3 \end{bmatrix}$$

## A GENERAL CASE

It is clear that a system has several state-space descriptions. Notable among these are the variables obtained from the DFII, its transpose, and the diagonalized variables (in the parallel realization). State equations in these forms can be written immediately by inspection of the transfer function. Consider the general *N*th-order transfer function

$$H(s) = \frac{b_0 s^N + b_1 s^{N-1} + \dots + b_{N-1} s + b_N}{s^N + a_1 s^{N-1} + \dots + a_{N-1} s + a_N}$$
(10.24)  
$$= \frac{b_0 s^N + b_1 s^{N-1} + \dots + b_{N-1} s + b_N}{(s - \lambda_1)(s - \lambda_2) \cdots (s - \lambda_N)}$$
$$= b_0 + \frac{k_1}{s - \lambda_1} + \frac{k_2}{s - \lambda_2} + \dots + \frac{k_N}{s - \lambda_N}$$
(10.25)

The realizations of H(s) found by using direct form II [Eq. (10.24)] and the parallel form [Eq. (10.25)] appear in Figs. 10.6a and 10.6b, respectively.

The N integrator outputs  $q_1, q_2, \ldots, q_N$  in Fig. 10.6a are the state variables. By inspection of this figure, we obtain

$$\dot{q}_1 = q_2 
\dot{q}_2 = q_3 
\vdots 
\dot{q}_{N-1} = q_N 
\dot{q}_N = -a_N q_1 - a_{N-1} q_2 - \dots - a_2 q_{N-1} - a_1 q_N + x$$

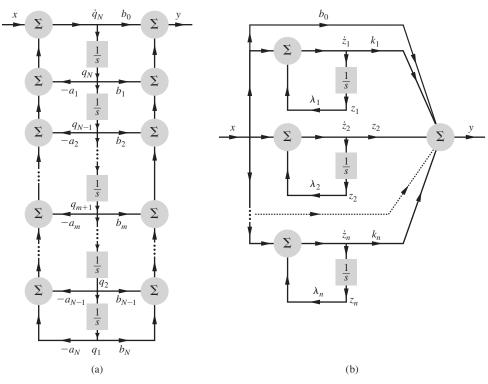


Figure 10.6 (a) Direct form II and (b) parallel realizations for an *N*th-order LTIC system.

and output y is

$$y = b_N q_1 + b_{N-1} q_2 + \dots + b_1 q_N + b_0 \dot{q}_N$$

We can eliminate  $\dot{q}_N$  in this output equation by using the last state equation to yield

$$y = (b_N - b_0 a_N)q_1 + (b_{N-1} - b_0 a_{N-1})q_2 + \dots + (b_1 - b_0 a_1)q_N + b_0 x$$
  
=  $\hat{b}_N q_1 + \hat{b}_{N-1} q_2 + \dots + \hat{b}_1 q_N + b_0 x$ 

where  $\hat{b}_i = b_i - b_0 a_i$ . In matrix form, we obtain

$$\begin{bmatrix} \dot{q}_1 \\ \dot{q}_2 \\ \vdots \\ \dot{q}_{N-1} \\ \dot{q}_N \end{bmatrix} = \begin{bmatrix} 0 & 1 & 0 & \cdots & 0 & 0 \\ 0 & 0 & 1 & \cdots & 0 & 0 \\ \vdots & \vdots & \vdots & \ddots & \vdots & \vdots \\ 0 & 0 & 0 & \cdots & 0 & 1 \\ -a_N & -a_{N-1} & -a_{N-2} & \cdots & -a_2 & -a_1 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \\ \vdots \\ q_{N-1} \\ q_N \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ \vdots \\ 0 \\ 1 \end{bmatrix} x$$

and

$$y = [\hat{b}_N \quad \hat{b}_{N-1} \quad \cdots \quad \hat{b}_1] \begin{bmatrix} q_1 \\ q_2 \\ \vdots \\ q_N \end{bmatrix} + b_0 x$$

In Fig. 10.6b, the N integrator outputs  $z_1, z_2, \ldots, z_N$  are the state variables. By inspection of this figure, we obtain

$$\dot{z}_1 = \lambda_1 z_1 + x$$
$$\dot{z}_2 = \lambda_2 z_2 + x$$
$$\vdots$$
$$\dot{z}_N = \lambda_N z_N + x$$

and

$$y = k_1 z_1 + k_2 z_2 + \dots + k_N z_N + b_0 x$$

or

and

$$\begin{bmatrix} \dot{z}_{1} \\ \dot{z}_{2} \\ \vdots \\ \dot{z}_{N-1} \\ \dot{z}_{N} \end{bmatrix} = \begin{bmatrix} \lambda_{1} & 0 & \cdots & 0 & 0 \\ 0 & \lambda_{2} & \cdots & 0 & 0 \\ \vdots & \vdots & \cdots & \vdots & \vdots \\ 0 & 0 & \cdots & \lambda_{N-1} & 0 \\ 0 & 0 & \cdots & 0 & \lambda_{N} \end{bmatrix} \begin{bmatrix} z_{1} \\ z_{2} \\ \vdots \\ z_{N-1} \\ z_{N} \end{bmatrix} + \begin{bmatrix} 1 \\ 1 \\ \vdots \\ 1 \\ 1 \end{bmatrix} x$$
(10.26)  
$$y = \begin{bmatrix} k_{1} & k_{2} & \cdots & k_{N-1} & k_{N} \end{bmatrix} \begin{bmatrix} z_{1} \\ z_{2} \\ \vdots \\ z_{N-1} \\ z_{N} \end{bmatrix} + b_{0}x$$

Observe that the diagonalized form of the state matrix [Eq. (10.26)] has the transfer function poles as its diagonal elements. The presence of repeated poles in H(s) will modify the procedure slightly. The handling of these cases is discussed in Sec. 4.6.

It is clear from the foregoing discussion that a state-space description is not unique. For any realization of H(s) obtained from integrators, scalar multipliers, and adders, a corresponding state-space description exists. Since there are uncountable possible realizations of H(s), there are uncountable possible state-space descriptions.

The advantages and drawbacks of various types of realization were discussed in Sec. 4.6.

## **10.4 SOLUTION OF STATE EQUATIONS**

The state equations of a linear system are N simultaneous linear differential equations of the first order. We studied the techniques of solving linear differential equations in Chs. 2 and 4. The same techniques can be applied to state equations without any modification. However, it is more convenient to carry out the solution in the framework of matrix notation.

These equations can be solved in both the time and frequency domains (Laplace transform). The latter is relatively easier to deal with than the time-domain solution. For this reason, we shall first consider the Laplace transform solution.

## **10.4-1** Laplace Transform Solution of State Equations

The *i*th state equation [Eq. (10.14)] is of the form

$$\dot{q}_i = a_{i1}q_1 + a_{i2}q_2 + \dots + a_{iN}q_N + b_{i1}x_1 + b_{i2}x_2 + \dots + b_{ij}x_j$$
(10.27)

We shall take the Laplace transform of this equation. Let

$$q_i(t) \iff Q_i(s)$$

so that

$$\dot{q}_i(t) \iff sQ_i(s) - q_i(0)$$

Also, let

$$x_i(t) \iff X_i(s)$$

The Laplace transform of Eq. (10.27) yields

$$sQ_i(s) - q_i(0) = a_{i1}Q_1(s) + a_{i2}Q_2(s) + \dots + a_{iN}Q_N(s) + b_{i1}X_1(s) + b_{i2}X_2(s) + \dots + b_{ii}X_i(s)$$

Taking the Laplace transforms of all N state equations, we obtain

$$s \underbrace{\begin{bmatrix} Q_{1}(s) \\ Q_{2}(s) \\ \vdots \\ Q_{N}(s) \end{bmatrix}}_{\mathbf{q}(s)} - \underbrace{\begin{bmatrix} q_{1}(0) \\ q_{2}(0) \\ \vdots \\ q_{N}(0) \end{bmatrix}}_{\mathbf{q}(0)} = \underbrace{\begin{bmatrix} a_{11} & a_{12} & \cdots & a_{1N} \\ a_{21} & a_{22} & \cdots & a_{2N} \\ \vdots & \vdots & \cdots & \vdots \\ a_{N1} & a_{N2} & \cdots & a_{NN} \end{bmatrix}}_{\mathbf{q}(s)}_{\mathbf{q}(s)} \underbrace{\begin{bmatrix} Q_{1}(s) \\ Q_{2}(s) \\ \vdots \\ Q_{N}(s) \end{bmatrix}}_{\mathbf{q}(s)} + \underbrace{\begin{bmatrix} b_{11} & b_{12} & \cdots & b_{1j} \\ b_{21} & b_{22} & \cdots & b_{2j} \\ \vdots & \vdots & \cdots & \vdots \\ b_{N1} & b_{N2} & \cdots & b_{Nj} \end{bmatrix}}_{\mathbf{B}} \underbrace{\begin{bmatrix} X_{1}(s) \\ X_{2}(s) \\ \vdots \\ X_{j}(s) \end{bmatrix}}_{\mathbf{x}(s)}$$

Defining the vectors, as indicated, we have

$$s\mathbf{Q}(s) - \mathbf{q}(0) = \mathbf{A}\mathbf{Q}(s) + \mathbf{B}\mathbf{X}(s)$$

or

$$s\mathbf{Q}(s) - \mathbf{A}\mathbf{Q}(s) = \mathbf{q}(0) + \mathbf{B}\mathbf{X}(s)$$

and

$$(s\mathbf{I} - \mathbf{A})\mathbf{Q}(s) = \mathbf{x}(0) + \mathbf{B}\mathbf{X}(s)$$

where **I** is the  $N \times N$  identity matrix. Solving for **Q**(*s*), we have

$$\mathbf{Q}(s) = (s\mathbf{I} - \mathbf{A})^{-1}[\mathbf{q}(0) + \mathbf{B}\mathbf{X}(s)]$$
  
=  $\mathbf{\Phi}(s)[\mathbf{q}(0) + \mathbf{B}\mathbf{X}(s)]$  (10.28)

where

$$\mathbf{\Phi}(s) = (s\mathbf{I} - \mathbf{A})^{-1}$$

Thus, from Eq. (10.28),

$$\mathbf{Q}(s) = \mathbf{\Phi}(s)\mathbf{q}(0) + \mathbf{\Phi}(s)\mathbf{B}\mathbf{X}(s)$$

and

$$\mathbf{q}(t) = \underbrace{\mathcal{L}^{-1}[\boldsymbol{\Phi}(s)]\mathbf{q}(0)}_{\text{zero-input response}} + \underbrace{\mathcal{L}^{-1}[\boldsymbol{\Phi}(s)\mathbf{B}\mathbf{X}(s)]}_{\text{zero-state response}}$$
(10.29)

Equation (10.29) gives the desired solution. Observe the two components of the solution. The first component yields  $\mathbf{q}(t)$  when the input x(t) = 0. Hence, the first component is the zero-input response. In a similar manner, we see that the second component is the zero-state response.

## **EXAMPLE 10.6 Laplace Transform Solution to State Equations**

Using the Laplace transform, find the state vector  $\mathbf{q}(t)$  for the system whose state equation is given by

 $\dot{\mathbf{q}} = \mathbf{A}\mathbf{q} + \mathbf{B}\mathbf{x}$ 

where

$$\mathbf{A} = \begin{bmatrix} -12 & \frac{2}{3} \\ -36 & -1 \end{bmatrix} \qquad \mathbf{B} = \begin{bmatrix} \frac{1}{3} \\ 1 \end{bmatrix} \qquad \mathbf{x}(t) = u(t)$$

and the initial conditions are  $q_1(0) = 2$ ,  $q_2(0) = 1$ .

From Eq. (10.28), we have

$$\mathbf{Q}(s) = \mathbf{\Phi}(s)[\mathbf{q}(0) + \mathbf{B}\mathbf{X}(s)]$$

Let us first find  $\Phi(s)$ . We have

$$(s\mathbf{I} - \mathbf{A}) = s \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix} - \begin{bmatrix} -12 & \frac{2}{3} \\ -36 & -1 \end{bmatrix} = \begin{bmatrix} s+12 & -\frac{2}{3} \\ 36 & s+1 \end{bmatrix}$$

and

$$\mathbf{\Phi}(s) = (s\mathbf{I} - \mathbf{A})^{-1} = \begin{bmatrix} \frac{s+1}{(s+4)(s+9)} & \frac{2/3}{(s+4)(s+9)} \\ \frac{-36}{(s+4)(s+9)} & \frac{s+12}{(s+4)(s+9)} \end{bmatrix}$$

Now, 
$$\mathbf{q}(0)$$
 is given as

$$\mathbf{q}(0) = \begin{bmatrix} 2\\1 \end{bmatrix}$$

Also, X(s) = 1/s, and

$$\mathbf{BX}(s) = \begin{bmatrix} \frac{1}{3} \\ 1 \end{bmatrix} \frac{1}{s} = \begin{bmatrix} \frac{1}{3s} \\ \frac{1}{s} \end{bmatrix}$$

Therefore,

$$\mathbf{q}(0) + \mathbf{B}\mathbf{X}(s) = \begin{bmatrix} 2 + \frac{1}{3s} \\ 1 + \frac{1}{s} \end{bmatrix} = \begin{bmatrix} \frac{6s+1}{3s} \\ \frac{s+1}{s} \end{bmatrix}$$

and

$$\begin{aligned} \mathbf{Q}(s) &= \mathbf{\Phi}(s) [\mathbf{q}(0) + \mathbf{B}\mathbf{X}(s)] \\ &= \begin{bmatrix} \frac{s+1}{(s+4)(s+9)} & \frac{2/3}{(s+4)(s+9)} \\ \frac{-36}{(s+4)(s+9)} & \frac{s+12}{(s+4)(s+9)} \end{bmatrix} \begin{bmatrix} \frac{6s+1}{3s} \\ \frac{s+1}{s} \end{bmatrix} \\ &= \begin{bmatrix} \frac{2s^2+3s+1}{s(s+4)(s+9)} \\ \frac{s-59}{(s+4)(s+9)} \\ \frac{s-59}{(s+4)(s+9)} \end{bmatrix} \\ &= \begin{bmatrix} \frac{1/36}{s} - \frac{21/20}{s+4} + \frac{136/45}{s+9} \\ \frac{-63/5}{s+4} + \frac{68/5}{s+9} \end{bmatrix} \end{aligned}$$

The inverse Laplace transform of this equation yields

$$\begin{bmatrix} q_1(t) \\ q_2(t) \end{bmatrix} = \begin{bmatrix} \left(\frac{1}{36} - \frac{21}{20}e^{-4t} + \frac{136}{45}e^{-9t}\right)u(t) \\ \left(-\frac{63}{5}e^{-4t} + \frac{68}{5}e^{-9t}\right)u(t) \end{bmatrix}$$


This result is readily confirmed using MATLAB and its symbolic toolbox.

To create a plot of the state vector, we use MATLAB's subs command to substitute the symbolic variable *t* with a vector of desired values.

#### 930 CHAPTER 10 STATE-SPACE ANALYSIS

>> t = (0:.01:2); q = subs(q); q1 = q(1,:); q2 = q(2,:); >> plot(t,q1,'k',t,q2,'k--'); xlabel('t'); ylabel('Amplitude'); >> legend('q\_1(t)','q\_2(t)','Location','SE');

The resulting plot is shown in Fig. 10.7.

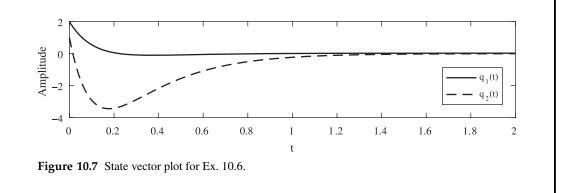

#### THE OUTPUT

The output equation is given by

$$y = Cq + Dx$$

and

$$\mathbf{Y}(s) = \mathbf{C}\mathbf{Q}(s) + \mathbf{D}\mathbf{X}(s)$$

Upon substituting Eq. (10.28) into this equation, we have

$$\mathbf{Y}(s) = \mathbf{C}\{\boldsymbol{\Phi}(s)[\mathbf{q}(0) + \mathbf{B}\mathbf{x}\mathbf{X}(s)]\} + \mathbf{D}\mathbf{X}(s)$$
  
=  $\underbrace{\mathbf{C}\boldsymbol{\Phi}(s)\mathbf{q}(0)}_{\text{zero-input response}} + \underbrace{[\mathbf{C}\boldsymbol{\Phi}(s)\mathbf{B} + \mathbf{D}]\mathbf{X}(s)}_{\text{zero-state response}}$  (10.30)

The zero-state response [i.e., the response  $\mathbf{Y}(s)$  when  $\mathbf{q}(0) = \mathbf{0}$ ] is given by

$$\mathbf{Y}(s) = [\mathbf{C}\mathbf{\Phi}(s)\mathbf{B} + \mathbf{D}]\mathbf{X}(s)$$

Note that the transfer function of a system is defined under the zero-state condition [see Eq. (4.19)]. The matrix  $\mathbf{C} \Phi(s) \mathbf{B} + \mathbf{D}$  is the *transfer function matrix*  $\mathbf{H}(s)$  of the system, which relates the responses  $y_1, y_2, \ldots, y_k$  to the inputs  $x_1, x_2, \ldots, x_j$ :

$$\mathbf{H}(s) = \mathbf{C}\mathbf{\Phi}(s)\mathbf{B} + \mathbf{D} \tag{10.31}$$

and the zero-state response is

$$\mathbf{Y}(s) = \mathbf{H}(s)\mathbf{X}(s)$$

The matrix  $\mathbf{H}(s)$  is a  $k \times j$  matrix (k is the number of outputs and j is the number of inputs). The *ij*th element  $H_{ii}(s)$  of H(s) is the transfer function that relates the output  $y_i(t)$  to the input  $x_i(t)$ .

## **EXAMPLE 10.7** Transfer Function Matrix from State-Space Description

Let us consider a system with a state equation

$$\begin{bmatrix} \dot{q}_1 \\ \dot{q}_2 \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \end{bmatrix} + \begin{bmatrix} 1 & 0 \\ 1 & 1 \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \end{bmatrix}$$

and an output equation

$$\begin{bmatrix} y_1 \\ y_2 \\ y_3 \end{bmatrix} = \begin{bmatrix} 1 & 0 \\ 1 & 1 \\ 0 & 2 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \end{bmatrix} + \begin{bmatrix} 0 & 0 \\ 1 & 0 \\ 0 & 1 \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \end{bmatrix}$$

Determine the transfer function matrix of the system.

In this case,

$$\mathbf{A} = \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix} \qquad \mathbf{B} = \begin{bmatrix} 1 & 0 \\ 1 & 1 \end{bmatrix} \qquad \mathbf{C} = \begin{bmatrix} 1 & 0 \\ 1 & 1 \\ 0 & 2 \end{bmatrix} \qquad \mathbf{D} = \begin{bmatrix} 0 & 0 \\ 1 & 0 \\ 0 & 1 \end{bmatrix}$$
(10.32)

and

$$\mathbf{\Phi}(s) = (s\mathbf{I} - \mathbf{A})^{-1} = \begin{bmatrix} s & -1 \\ 2 & s+3 \end{bmatrix}^{-1} = \begin{bmatrix} \frac{s+3}{(s+1)(s+2)} & \frac{1}{(s+1)(s+2)} \\ \frac{-2}{(s+1)(s+2)} & \frac{s}{(s+1)(s+2)} \end{bmatrix}$$
(10.33)

Hence, the transfer function matrix  $\mathbf{H}(s)$  is given by

$$\mathbf{H}(s) = \mathbf{C}\boldsymbol{\Phi}(s)\mathbf{B} + \mathbf{D}$$

$$= \begin{bmatrix} 1 & 0\\ 1 & 1\\ 0 & 2 \end{bmatrix} \begin{bmatrix} \frac{s+3}{(s+1)(s+2)} & \frac{1}{(s+1)(s+2)}\\ \frac{-2}{(s+1)(s+2)} & \frac{s}{(s+1)(s+2)} \end{bmatrix} \begin{bmatrix} 1 & 0\\ 1 & 1 \end{bmatrix} + \begin{bmatrix} 0 & 0\\ 1 & 0\\ 0 & 1 \end{bmatrix}$$

$$= \begin{bmatrix} \frac{s+4}{(s+1)(s+2)} & \frac{1}{(s+1)(s+2)}\\ \frac{s+4}{s+2} & \frac{1}{s+2}\\ \frac{2(s-2)}{(s+1)(s+2)} & \frac{s^2+5s+2}{(s+1)(s+2)} \end{bmatrix}$$
(10.34)

and the zero-state response is

$$\mathbf{Y}(s) = \mathbf{H}(s)\mathbf{X}(s)$$

Remember that the *ij*th element of the transfer function matrix in Eq. (10.34) represents the transfer function that relates the output  $y_i(t)$  to the input  $x_j(t)$ . For instance, the transfer function that relates the output  $y_3$  to the input  $x_2$  is  $H_{32}(s)$ , where

$$H_{32}(s) = \frac{s^2 + 5s + 2}{(s+1)(s+2)}$$

We can readily verify the transfer function matrix using MATLAB and its symbolic toolbox functions.

>> A = [0 1;-2 -3]; B = [1 0;1 1]; >> C = [1 0;1 1;0 2]; D = [0 0;1 0;0 1]; >> syms s; H = collect(simplify(C\*inv(s\*eye(2)-A)\*B+D)) H = [ (s + 4)/(s<sup>2</sup> + 3\*s + 2), 1/(s<sup>2</sup> + 3\*s + 2)] [ (s + 4)/(s + 2), 1/(s + 2)] [ (2\*s - 4)/(s<sup>2</sup> + 3\*s + 2), (s<sup>2</sup> + 5\*s + 2)/(s<sup>2</sup> + 3\*s + 2)]

Transfer functions relating particular inputs to particular outputs, such as  $H_{32}(s)$ , can be obtained using the ss2tf and tf functions.

#### CHARACTERISTIC ROOTS (EIGENVALUES) OF A MATRIX

It is interesting to observe that the denominator of every transfer function in Eq. (10.34) is (s + 1)(s + 2) except for  $H_{21}(s)$  and  $H_{22}(s)$ , where the factor (s + 1) is canceled. This is no coincidence. We see that the denominator of every element of  $\Phi(s)$  is  $|s\mathbf{I} - \mathbf{A}|$  because  $\Phi(s) = (s\mathbf{I} - \mathbf{A})^{-1}$ , and the inverse of a matrix has its determinant in the denominator. Since **C**, **B**, and **D** are matrices with constant elements, we see from Eq. (10.31) that the denominator of  $\Phi(s)$  will also be the denominator of  $\mathbf{H}(s)$ . Hence, the denominator of every element of  $\mathbf{H}(s)$  is  $|s\mathbf{I} - \mathbf{A}|$ , except for the possible cancellation of the common factors mentioned earlier. In other words, the zeros of the polynomial  $|s\mathbf{I} - \mathbf{A}|$  are also the poles of all transfer functions of the system. Therefore, the zeros of the system are the roots of the equation

$$s\mathbf{I} - \mathbf{A}| = 0 \tag{10.35}$$

Since  $|s\mathbf{I} - \mathbf{A}|$  is an *N*th-order polynomial in *s* with *N* zeros  $\lambda_1, \lambda_2, \ldots, \lambda_N$ , we can write Eq. (10.35) as

$$|s\mathbf{I} - \mathbf{A}| = s^{N} + a_{1}s^{N-1} + \dots + a_{N-1}s + a_{N} = (s - \lambda_{1})(s - \lambda_{2}) \cdots (s - \lambda_{N}) = 0$$

For the system in Ex. 10.7,

$$|s\mathbf{I} - \mathbf{A}| = \begin{vmatrix} s & 0 \\ 0 & s \end{vmatrix} - \begin{vmatrix} 0 & 1 \\ -2 & -3 \end{vmatrix} = \begin{vmatrix} s & -1 \\ 2 & s+3 \end{vmatrix}$$
$$= s^2 + 3s + 2 = (s+1)(s+2)$$

Hence,

$$\lambda_1 = -1$$
 and  $\lambda_2 = -2$ 

Equation (10.35) is known as the *characteristic equation of the matrix*  $\mathbf{A}$ , and  $\lambda_1, \lambda_2, \ldots, \lambda_N$  are the characteristic roots of  $\mathbf{A}$ . The term *eigenvalue*, meaning "characteristic value" in German, is also commonly used in the literature. Thus, we have shown that the characteristic roots of a system are the eigenvalues (characteristic values) of the matrix  $\mathbf{A}$ .

At this point, the reader will recall that if  $\lambda_1, \lambda_2, \ldots, \lambda_N$  are the poles of the transfer function, then the zero-input response is of the form

$$y_0(t) = c_1 e^{\lambda_1 t} + c_2 e^{\lambda_2 t} + \dots + c_N e^{\lambda_N t}$$
(10.36)

This fact is also obvious from Eq. (10.30). The denominator of every element of the zero-input response matrix  $\mathbf{C}\Phi(s)\mathbf{q}(0)$  is  $|s\mathbf{I}-\mathbf{A}| = (s-\lambda_1)(s-\lambda_2)\cdots(s-\lambda_N)$ . Therefore, the partial fraction expansion and the subsequent inverse Laplace transform will yield a zero-input component of the form in Eq. (10.36).

#### **10.4-2** Time-Domain Solution of State Equations

The state equation is

$$\dot{\mathbf{q}} = \mathbf{A}\mathbf{q} + \mathbf{B}\mathbf{x} \tag{10.37}$$

We now show that the solution of the vector differential Eq. (10.37) is

$$\mathbf{q}(t) = e^{\mathbf{A}t}\mathbf{q}(0) + \int_0^t e^{\mathbf{A}(t-\tau)}\mathbf{B}\mathbf{x}(\tau) d\tau$$

Before proceeding further, we must define the matrix exponential  $e^{At}$ . An exponential of a matrix is defined by an infinite series identical to that used in defining an exponential of a scalar. We shall define

$$e^{\mathbf{A}t} = \mathbf{I} + \mathbf{A}t + \frac{\mathbf{A}^{2}t^{2}}{2!} + \frac{\mathbf{A}^{3}t^{3}}{3!} + \dots + \frac{\mathbf{A}^{n}t^{n}}{n!} + \dots = \sum_{k=0}^{\infty} \frac{\mathbf{A}^{k}t^{k}}{k!}$$
(10.38)

For example, if

$$\mathbf{A} = \begin{bmatrix} 0 & 1 \\ 2 & 1 \end{bmatrix}$$

then

$$\mathbf{A}t = \begin{bmatrix} 0 & 1 \\ 2 & 1 \end{bmatrix} t = \begin{bmatrix} 0 & t \\ 2t & t \end{bmatrix}$$

and

$$\frac{\mathbf{A}^2 t^2}{2!} = \begin{bmatrix} 0 & 1 \\ 2 & 1 \end{bmatrix} \begin{bmatrix} 0 & 1 \\ 2 & 1 \end{bmatrix} \frac{t^2}{2} = \begin{bmatrix} 2 & 1 \\ 2 & 3 \end{bmatrix} \frac{t^2}{2} = \begin{bmatrix} t^2 & \frac{t^2}{2} \\ t^2 & \frac{3t^2}{2} \end{bmatrix}$$

and so on.

#### 934 CHAPTER 10 STATE-SPACE ANALYSIS

We can show that the infinite series in Eq. (10.38) is absolutely and uniformly convergent for all values of *t*. Consequently, it can be differentiated or integrated term by term. Thus, to find  $(d/dt)e^{At}$ , we differentiate the series on the right-hand side of Eq. (10.38) term by term:

$$\frac{d}{dt}e^{\mathbf{A}t} = \mathbf{A} + \mathbf{A}^{2}t + \frac{\mathbf{A}^{3}t^{2}}{2!} + \frac{\mathbf{A}^{4}t^{3}}{3!} + \cdots$$
$$= \mathbf{A}\left[\mathbf{I} + \mathbf{A}t + \frac{\mathbf{A}^{2}t^{2}}{2!} + \frac{\mathbf{A}^{3}t^{3}}{3!} + \cdots\right] = \mathbf{A}e^{\mathbf{A}t}$$
$$= \left[\mathbf{I} + \mathbf{A}t + \frac{\mathbf{A}^{2}t^{2}}{2!} + \frac{\mathbf{A}^{3}t^{3}}{3!} + \cdots + \cdots\right]\mathbf{A} = e^{\mathbf{A}t}\mathbf{A}$$

Hence,

$$\frac{d}{dt}e^{\mathbf{A}t} = \mathbf{A}e^{\mathbf{A}t} = e^{\mathbf{A}t}\mathbf{A}$$

Also note that from Eq. (10.38), it follows that

 $e^0 = \mathbf{I}$ 

where **I** is just the identity matrix. If we premultiply or postmultiply the infinite series for  $e^{At}$  [Eq. (10.38)] by an infinite series for  $e^{-At}$ , we find that

$$(e^{-\mathbf{A}t})(e^{\mathbf{A}t}) = (e^{\mathbf{A}t})(e^{-\mathbf{A}t}) = \mathbf{I}$$
(10.39)

In Sec. 10.1-1, we showed that

$$\frac{d}{dt}(\mathbf{U}\mathbf{V}) = \frac{d\mathbf{U}}{dt}\mathbf{V} + \mathbf{U}\frac{d\mathbf{V}}{dt}$$

Using this relationship, we observe that

$$\frac{d}{dt}[e^{-\mathbf{A}t}\mathbf{q}] = \left(\frac{d}{dt}e^{-\mathbf{A}t}\right)\mathbf{q} + e^{-\mathbf{A}t}\dot{\mathbf{q}}$$
$$= -e^{-\mathbf{A}t}\mathbf{A}\mathbf{q} + e^{-\mathbf{A}t}\dot{\mathbf{q}}$$
(10.40)

We now premultiply both sides of Eq. (10.37) by  $e^{-At}$  to yield

$$e^{-\mathbf{A}t}\dot{\mathbf{q}} = e^{-\mathbf{A}t}\mathbf{A}\mathbf{q} + e^{-\mathbf{A}t}\mathbf{B}\mathbf{x}$$

or

$$-e^{-\mathbf{A}t}\mathbf{A}\mathbf{q}+e^{-\mathbf{A}t}\dot{\mathbf{q}}=e^{-\mathbf{A}t}\mathbf{B}\mathbf{x}$$

Substituting this result into Eq. (10.40) yields

$$\frac{d}{dt}[e^{-\mathbf{A}t}\mathbf{q}] = e^{-\mathbf{A}t}\mathbf{B}\mathbf{x}$$

The integration of both sides of this equation from 0 to t yields

$$e^{-\mathbf{A}t}\mathbf{q}\big|_0^t = \int_0^t e^{-\mathbf{A}\tau} \mathbf{B}\mathbf{x}(\tau) d\tau$$

or

$$e^{-\mathbf{A}t}\mathbf{q}(t) - \mathbf{q}(0) = \int_0^t e^{-\mathbf{A}\tau} \mathbf{B}\mathbf{x}(\tau) d\tau$$

Hence,

$$e^{-\mathbf{A}t}\mathbf{q} = \mathbf{q}(0) + \int_0^t e^{-\mathbf{A}\tau} \mathbf{B}\mathbf{x}(\tau) \, d\tau$$

Premultiplying this result by  $e^{At}$  and using Eq. (10.39), we have

$$\mathbf{q}(t) = \underbrace{e^{\mathbf{A}t}\mathbf{q}(0)}_{\text{ZIR}} + \underbrace{\int_{0}^{t} e^{\mathbf{A}(t-\tau)} \mathbf{B}\mathbf{x}(\tau) \, d\tau}_{\text{ZSR}}$$
(10.41)

This is the desired solution. The first term on the right-hand side represents q(t) when the input x(t) = 0. Hence, it is the zero-input component. The second term, by a similar argument, is seen to be the zero-state component.

The results of Eq. (10.41) can be expressed more conveniently in terms of the matrix convolution. We can define the convolution of two matrices in a manner similar to the multiplication of two matrices, except that the multiplication of two elements is replaced by their convolution. For example,

$$\begin{bmatrix} x_1 & x_2 \\ x_3 & x_4 \end{bmatrix} * \begin{bmatrix} g_1 & g_2 \\ g_3 & g_4 \end{bmatrix} = \begin{bmatrix} (x_1 * g_1 + x_2 * g_3) & (x_1 * g_2 + x_2 * g_4) \\ (x_3 * g_1 + x_4 * g_3) & (x_3 * g_2 + x_4 * g_4) \end{bmatrix}$$

By using this definition of matrix convolution, we can express Eq. (10.41) as

$$\mathbf{q}(t) = e^{\mathbf{A}t}\mathbf{q}(0) + e^{\mathbf{A}t} * \mathbf{B}\mathbf{x}(t)$$
(10.42)

Note that the limits of the convolution integral [Eq. (10.41)] are from 0 to t. Hence, all the elements of  $e^{At}$  in the convolution term of Eq. (10.42) are implicitly assumed to be multiplied by u(t).

The result of Eqs. (10.41) and (10.42) can be easily generalized for any initial value of t. It is left as an exercise for the reader to show that the solution of the state equation can be expressed as

$$\mathbf{q}(t) = e^{\mathbf{A}(t-t_0)}\mathbf{q}(t_0) + \int_{t_0}^t e^{\mathbf{A}(t-\tau)}\mathbf{B}\mathbf{x}(\tau) \, d\tau$$

#### DETERMINING $e^{At}$

The exponential  $e^{At}$  required in Eqs. (10.41) and (10.42) can be computed from the definition in Eq. (10.38). Unfortunately, this is an infinite series, and its computation can be quite laborious. Moreover, we may not be able to recognize the closed-form expression for the answer. There are several efficient methods of determining  $e^{At}$  in closed form. It was shown in Sec. 10.1-3 that for an  $N \times N$  matrix **A**,

$$e^{\mathbf{A}t} = \beta_0 \mathbf{I} + \beta_1 \mathbf{A} + \beta_2 \mathbf{A}^2 + \dots + \beta_{N-1} \mathbf{A}^{N-1}$$
(10.43)

where

$$\begin{bmatrix} \beta_0 \\ \beta_1 \\ \vdots \\ \beta_{N-1} \end{bmatrix} = \begin{bmatrix} 1 & \lambda_1 & \lambda_1^2 & \cdots & \lambda_1^{N-1} \\ 1 & \lambda_2 & \lambda_2^2 & \cdots & \lambda_2^{N-1} \\ \vdots & \vdots & \vdots & \cdots & \vdots \\ 1 & \lambda_N & \lambda_N^2 & \cdots & \lambda_N^{N-1} \end{bmatrix}^{-1} \begin{bmatrix} e^{\lambda_1 t} \\ e^{\lambda_2 t} \\ \vdots \\ e^{\lambda_N t} \end{bmatrix}$$

and  $\lambda_1, \lambda_2, \ldots, \lambda_N$  are the *N* characteristic values (eigenvalues) of **A**. We can also determine  $e^{\mathbf{A}t}$  by comparing Eqs. (10.41) and (10.29). It is clear that

$$e^{\mathbf{A}t} = \mathcal{L}^{-1}[\mathbf{\Phi}(s)] = \mathcal{L}^{-1}[(s\mathbf{I} - \mathbf{A})^{-1}]$$
(10.44)

Thus,  $e^{At}$  and  $\Phi(s)$  are a Laplace transform pair. To be consistent with Laplace transform notation,  $e^{At}$  is often denoted by  $\phi(t)$ , the state transition matrix (STM):

 $e^{\mathbf{A}t} = \boldsymbol{\phi}(t)$ 

## **EXAMPLE 10.8 Time-Domain Method to Solve State Equations**

Use the time-domain method to solve Ex. 10.6.

For this case, the characteristic roots are given by

$$|s\mathbf{I} - \mathbf{A}| = \begin{vmatrix} s+12 & -\frac{2}{3} \\ 36 & s+1 \end{vmatrix} = s^2 + 13s + 36 = (s+4)(s+9) = 0$$

The roots are  $\lambda_1 = -4$  and  $\lambda_2 = -9$ , so

$$\begin{bmatrix} \beta_0 \\ \beta_1 \end{bmatrix} = \begin{bmatrix} 1 & -4 \\ 1 & -9 \end{bmatrix}^{-1} \begin{bmatrix} e^{-4t} \\ e^{-9t} \end{bmatrix} = \frac{1}{5} \begin{bmatrix} 9e^{-4t} - 4e^{-9t} \\ e^{-4t} - e^{-9t} \end{bmatrix}$$

and

$$e^{\mathbf{A}t} = \beta_0 \mathbf{I} + \beta_1 \mathbf{A}$$
  
=  $\left(\frac{9}{5}e^{-4t} - \frac{4}{5}e^{-9t}\right) \begin{bmatrix} 1 & 0\\ 0 & 1 \end{bmatrix} + \left(\frac{1}{5}e^{-4t} - \frac{1}{5}e^{-9t}\right) \begin{bmatrix} -12 & \frac{2}{3}\\ -36 & -1 \end{bmatrix}$   
=  $\left[\frac{\left(\frac{-3}{5}e^{-4t} + \frac{8}{5}e^{-9t}\right)}{\frac{2}{15}\left(e^{-4t} - e^{-9t}\right)} \left(\frac{8}{5}e^{-4t} - \frac{3}{5}e^{-9t}\right)\right]$ 

The zero-input response is given by [see Eq. (10.41)]

$$e^{\mathbf{A}t}\mathbf{q}(0) = \begin{bmatrix} \left(-\frac{3}{5}e^{-4t} + \frac{8}{5}e^{-9t}\right) & \frac{2}{15}(e^{-4t} - e^{-9t}) \\ \frac{36}{5}(-e^{-4t} + e^{-9t}) & \left(\frac{8}{5}e^{-4t} - \frac{3}{5}e^{-9t}\right) \end{bmatrix} \begin{bmatrix} 2\\ 1 \end{bmatrix}$$
$$= \begin{bmatrix} \left(\frac{-16}{15}e^{-4t} + \frac{46}{15}e^{-9t}\right)u(t) \\ \left(\frac{-64}{5}e^{-4t} + \frac{69}{5}e^{-9t}\right)u(t) \end{bmatrix}$$

Note here the presence of u(t), indicating that the response begins at t = 0.

The zero-state component is  $e^{\mathbf{A}t} * \mathbf{B}\mathbf{x}$  [see Eq. (10.42)], where

$$\mathbf{B}\mathbf{x} = \begin{bmatrix} \frac{1}{3} \\ 1 \end{bmatrix} u(t) = \begin{bmatrix} \frac{1}{3}u(t) \\ u(t) \end{bmatrix}$$

and

$$e^{\mathbf{A}t} * \mathbf{B}\mathbf{x}(t) = \begin{bmatrix} \left(\frac{-3}{5}e^{-4t} + \frac{8}{5}e^{-9t}\right)u(t) & \frac{2}{15}(e^{-4t} - e^{-9t})u(t) \\ \frac{36}{5}(-e^{-4t} + e^{-9t}u(t)) & \left(\frac{8}{5}e^{-4t} - \frac{3}{5}e^{-9t}\right)u(t) \end{bmatrix} * \begin{bmatrix} \frac{1}{3}u(t) \\ u(t) \end{bmatrix}$$

Note again the presence of the term u(t) in every element of  $e^{At}$ . This is the case because the limits of the convolution integral run from 0 to t [Eq. (10.41)]. Thus,

$$e^{\mathbf{A}t} * \mathbf{B}\mathbf{x}(t) = \begin{bmatrix} \left(-\frac{3}{5}e^{-4t} + \frac{8}{5}e^{-9t}\right)u(t) * \frac{1}{3}u(t) & \frac{2}{15}(e^{-4t} - e^{-9t})u(t) * u(t) \\ \frac{36}{5}(-e^{-4t} + e^{-9t})u(t) * \frac{1}{3}u(t) & \left(\frac{8}{5}e^{-4t} - \frac{3}{5}e^{-9t}\right)u(t) * u(t) \end{bmatrix}$$
$$= \begin{bmatrix} -\frac{1}{15}e^{-4t}u(t) * u(t) + \frac{2}{5}e^{-9t}u(t) * u(t) \\ -\frac{4}{5}e^{-4t}u(t) * u(t) + \frac{9}{5}e^{-9t}u(t) * u(t) \end{bmatrix}$$

Substitution for the preceding convolution integrals from the convolution table (Table 2.1) yields

$$e^{\mathbf{A}t} * \mathbf{B}\mathbf{x}(t) = \begin{bmatrix} -\frac{1}{60}(1 - e^{-4t})u(t) + \frac{2}{45}(1 - e^{-9t})u(t) \\ -\frac{1}{5}(1 - e^{-4t})u(t) + \frac{1}{5}(1 - e^{-9t})u(t) \end{bmatrix}$$
$$= \begin{bmatrix} (\frac{1}{36} + \frac{1}{60}e^{-4t} - \frac{2}{45}e^{-9t})u(t) \\ \frac{1}{5}(e^{-4t} - e^{-9t})u(t) \end{bmatrix}$$

The sum of the two components now gives the desired solution for  $\mathbf{q}(t)$ :

$$\mathbf{q}(t) = \begin{bmatrix} q_1(t) \\ q_2(t) \end{bmatrix} = \begin{bmatrix} \left(\frac{1}{36} - \frac{21}{20}e^{-4t} + \frac{136}{45}e^{-9t}\right)u(t) \\ \left(\frac{-63}{5}e^{-4t} + \frac{68}{5}e^{-9t}\right)u(t) \end{bmatrix}$$

This result confirms the solution obtained by using the frequency-domain method [see Ex. 10.6]. Once the state variables  $q_1$  and  $q_2$  have been found for  $t \ge 0$ , all the remaining variables can be determined from the output equation.

#### THE OUTPUT

The output equation is given by

$$\mathbf{y}(t) = \mathbf{C}\mathbf{q}(t) + \mathbf{D}\mathbf{x}(t)$$

The substitution of the solution for  $\mathbf{q}$  [Eq. (10.42)] in this equation yields

$$\mathbf{y}(t) = \mathbf{C}[e^{\mathbf{A}t}\mathbf{q}(0) + e^{\mathbf{A}t} * \mathbf{B}\mathbf{x}(t)] + \mathbf{D}\mathbf{x}(t)$$

Since the elements of **B** are constants,

$$e^{\mathbf{A}t} * \mathbf{B}\mathbf{x}(t) = e^{\mathbf{A}t}\mathbf{B} * \mathbf{x}(t)$$

#### 938 CHAPTER 10 STATE-SPACE ANALYSIS

With this result, the output equation becomes

$$\mathbf{y}(t) = \mathbf{C}[e^{\mathbf{A}t}\mathbf{q}(0) + e^{\mathbf{A}t}\mathbf{B} * \mathbf{x}(t)] + \mathbf{D}\mathbf{x}(t)$$

Now recall that the convolution of x(t) with the unit impulse  $\delta(t)$  yields x(t). Let us define a  $j \times j$  diagonal matrix  $\delta(t)$  such that all its diagonal terms are unit impulse functions. It is then obvious that

$$\boldsymbol{\delta}(t) \ast \mathbf{x}(t) = \mathbf{x}(t)$$

and the output equation can be expressed as

$$\mathbf{y}(t) = \mathbf{C}[e^{\mathbf{A}t}\mathbf{q}(0) + e^{\mathbf{A}t}\mathbf{B} * \mathbf{x}(t)] + \mathbf{D}\boldsymbol{\delta}(t) * \mathbf{x}(t)$$
$$= \mathbf{C}e^{\mathbf{A}t}\mathbf{q}(0) + [\mathbf{C}e^{\mathbf{A}t}\mathbf{B} + \mathbf{D}\boldsymbol{\delta}(t)] * \mathbf{x}(t)$$

With the notation  $\phi(t)$  for  $e^{At}$ , the output equation may be expressed as

$$\mathbf{y}(t) = \underbrace{\mathbf{C}\boldsymbol{\phi}(t)\mathbf{q}(0)}_{\text{zero-input response}} + \underbrace{[\mathbf{C}\boldsymbol{\phi}(t)\mathbf{B} + \mathbf{D}\boldsymbol{\delta}(t)] * \mathbf{x}(t)}_{\text{zero-state response}}$$

The zero-state response, that is, the response when  $\mathbf{q}(0) = \mathbf{0}$ , is

$$\mathbf{y}(t) = [\mathbf{C}\boldsymbol{\phi}(t)\mathbf{B} + \mathbf{D}\boldsymbol{\delta}(t)] * \mathbf{x}(t) = \mathbf{h}(t) * \mathbf{x}(t)$$

where

$$\mathbf{h}(t) = \mathbf{C}\boldsymbol{\phi}(t)\mathbf{B} + \mathbf{D}\boldsymbol{\delta}(t) \tag{10.45}$$

The matrix  $\mathbf{h}(t)$  is a  $k \times j$  matrix known as the *impulse response matrix*. The reason for this designation is obvious. The *ij*th element of  $\mathbf{h}(t)$  is  $h_{ij}(t)$ , which represents the zero-state response  $y_i$  when the input  $x_j(t) = \delta(t)$  and when all other inputs (and all the initial conditions) are zero. Not surprisingly, vectors  $\mathbf{h}(t)$  and  $\mathbf{H}(s)$  form a Laplace transform pair,

$$\mathcal{L}[\mathbf{h}(t)] = \mathbf{H}(s)$$

## **EXAMPLE 10.9** State Transition Matrix by Inverse Laplace Transform

For the system described in Ex. 10.7, use Eq. (10.44) to determine  $e^{At}$ :

$$\boldsymbol{\phi}(t) = e^{\mathbf{A}t} = \mathcal{L}^{-1} \boldsymbol{\Phi}(s)$$

This problem was solved earlier with frequency-domain techniques. From Eq. (10.33), we have

$$\boldsymbol{\phi}(t) = \mathcal{L}^{-1} \begin{bmatrix} \frac{s+3}{(s+1)(s+2)} & \frac{1}{(s+1)(s+2)} \\ \frac{-2}{(s+1)(s+2)} & \frac{s}{(s+1)(s+2)} \end{bmatrix}$$

$$= \mathcal{L}^{-1} \begin{bmatrix} \frac{2}{s+1} - \frac{1}{s+2} & \frac{1}{s+1} - \frac{1}{s+2} \\ \frac{-2}{s+1} + \frac{2}{s+2} & \frac{-1}{s+1} + \frac{2}{s+2} \end{bmatrix}$$

$$= \begin{bmatrix} 2e^{-t} - e^{-2t} & e^{-t} - e^{-2t} \\ -2e^{-t} + 2e^{-2t} & -e^{-t} + 2e^{-2t} \end{bmatrix}$$

The same result is obtained in Ex. 10.1 (Sec. 10.1-3) by using Eq. (10.43) [see Eq. (10.13)]. Also,  $\delta(t)$  is a diagonal  $i \times i$  or  $2 \times 2$  matrix:

$$\boldsymbol{\delta}(t) = \begin{bmatrix} \delta(t) & 0\\ 0 & \delta(t) \end{bmatrix}$$

Substituting the matrices  $\phi(t)$ ,  $\delta(t)$ , C, D, and B [Eq. (10.32)] into Eq. (10.45), we have

$$\mathbf{h}(t) = \begin{bmatrix} 1 & 0\\ 1 & 1\\ 0 & 2 \end{bmatrix} \begin{bmatrix} 2e^{-t} - e^{-2t} & e^{-t} - e^{-2t}\\ -2e^{-t} + 2e^{-2t} & -e^{-t} + 2e^{-2t} \end{bmatrix} \begin{bmatrix} 1 & 0\\ 1 & 1 \end{bmatrix} + \begin{bmatrix} 0 & 0\\ 1 & 0\\ 0 & 1 \end{bmatrix} \begin{bmatrix} \delta(t) & 0\\ 0 & \delta(t) \end{bmatrix}$$
$$= \begin{bmatrix} 3e^{-t} - 2e^{-2t} & e^{-t} - e^{-2t}\\ \delta(t) + 2e^{-2t} & e^{-2t}\\ -6e^{-t} + 8e^{-2t} & \delta(t) - 2e^{-2t} + 4e^{-2t} \end{bmatrix}$$

As the reader can verify, the Laplace transform of this equation yields the transfer function matrix  $\mathbf{H}(s)$  in Eq. (10.34).

## **10.5 LINEAR TRANSFORMATION OF A STATE VECTOR**

In Sec. 10.2 we saw that the state of a system can be specified in several ways. The sets of all possible state variables are related—in other words, if we are given one set of state variables, we should be able to relate it to any other set. We are particularly interested in a linear type of relationship. Let  $q_1, q_2, \ldots, q_N$  and  $w_1, w_2, \ldots, w_N$  be two different sets of state variables specifying the same system. Let these sets be related by linear equations as

$$w_{1} = p_{11}q_{1} + p_{12}q_{2} + \dots + p_{1N}q_{N}$$
  

$$w_{2} = p_{21}q_{1} + p_{22}q_{2} + \dots + p_{2N}q_{N}$$
  

$$\vdots$$
  

$$w_{N} = p_{N1}q_{1} + p_{N2}q_{2} + \dots + p_{NN}q_{N}$$

or

$\begin{bmatrix} w_1 \\ w_2 \end{bmatrix}$		$p_{11}$ $p_{21}$	$p_{12} \\ p_{22}$	 	$\left. \begin{array}{c} p_{1N} \\ p_{2N} \end{array} \right $	$\begin{bmatrix} q_1 \\ q_2 \end{bmatrix}$	
:	=	:	:		:		
$\lfloor w_N \rfloor$	ĺ	$p_{N1}$	$p_{N2}$	• • •	$p_{NN}$	$\lfloor q_N \rfloor$	ļ
w		P				q	-

Defining the vector  $\mathbf{w}$  and matrix  $\mathbf{P}$  as just shown, we obtain the compact matrix representation

$$\mathbf{w} = \mathbf{P}\mathbf{q} \tag{10.46}$$

and

If

then

and

$$\mathbf{q} = \mathbf{P}^{-1}\mathbf{w} \tag{10.47}$$

Thus, the state vector  $\mathbf{q}$  is transformed into another state vector  $\mathbf{w}$  through the linear transformation in Eq. (10.46).

If we know w, we can determine  $\mathbf{q}$  from  $\mathbf{q} = \mathbf{P}^{-1}\mathbf{w}$ , provided  $\mathbf{P}^{-1}$  exists. This is equivalent to saying that  $\mathbf{P}$  is a nonsingular matrix<sup>†</sup> ( $|\mathbf{P}| \neq 0$ ). Thus, if  $\mathbf{P}$  is a nonsingular matrix, the vector  $\mathbf{w}$  defined by Eq. (10.46) is also a state vector. Consider the state equation of a system

 $\dot{\mathbf{q}} = \mathbf{A}\mathbf{q} + \mathbf{B}\mathbf{x}$ 

 $\dot{\mathbf{q}} = \mathbf{P}^{-1} \dot{\mathbf{w}}$ 

$$\mathbf{w} = \mathbf{P}\mathbf{q}$$
$$\mathbf{q} = \mathbf{P}^{-1}\mathbf{w}$$

Hence, the state equation now becomes

$$\mathbf{P}^{-1}\dot{\mathbf{w}} = \mathbf{A}\mathbf{P}^{-1}\mathbf{w} + \mathbf{B}\mathbf{x}$$

or

$$\dot{\mathbf{w}} = \mathbf{P}\mathbf{A}\mathbf{P}^{-1}\mathbf{w} + \mathbf{P}\mathbf{B}\mathbf{x}$$
$$= \hat{\mathbf{A}}\mathbf{w} + \hat{\mathbf{B}}\mathbf{x}$$
(10.48)

where

$$\hat{\mathbf{A}} = \mathbf{P}\mathbf{A}\mathbf{P}^{-1}$$
 and  $\hat{\mathbf{B}} = \mathbf{P}\mathbf{B}$  (10.49)

Equation (10.48) is a state equation for the same system, but now it is expressed in terms of the state vector  $\mathbf{w}$ .

<sup>&</sup>lt;sup>†</sup> This condition is equivalent to saying that all N equations in Eq. (10.46) are linearly independent; that is, none of the N equations can be expressed as a linear combination of the remaining equations.

The output equation is also modified. Let the original output equation be

$$y = Cq + Dx$$

In terms of the new state variable  $\mathbf{w}$ , this equation becomes

$$\mathbf{y} = \mathbf{C}(\mathbf{P}^{-1}\mathbf{w}) + \mathbf{D}\mathbf{x}$$
$$= \hat{\mathbf{C}}\mathbf{w} + \mathbf{D}\mathbf{x}$$
$$\hat{\mathbf{C}} = \mathbf{C}\mathbf{P}^{-1}$$
(10.50)

**EXAMPLE 10.10** Linear Transformation of the State Vector

The state equations of a certain system are given by

$$\begin{bmatrix} \dot{q}_1 \\ \dot{q}_2 \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \end{bmatrix} + \begin{bmatrix} 1 \\ 2 \end{bmatrix} x(t)$$

Find the state equations for this system when the new state variables  $w_1$  and  $w_2$  are given as

$$\begin{bmatrix} w_1 \\ w_2 \end{bmatrix} = \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \end{bmatrix}$$
(10.51)

According to Eq. (10.48), the state equation for the state variable w is given by

$$\dot{\mathbf{w}} = \hat{\mathbf{A}}\mathbf{w} + \hat{\mathbf{B}}\mathbf{x}$$

where [see Eqs. (10.49) and (10.50)]

$$\hat{\mathbf{A}} = \mathbf{P}\mathbf{A}\mathbf{P}^{-1} = \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix}^{-1}$$
$$= \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix} \begin{bmatrix} \frac{1}{2} & \frac{1}{2} \\ \frac{1}{2} & -\frac{1}{2} \end{bmatrix}$$
$$= \begin{bmatrix} -2 & 0 \\ 3 & -1 \end{bmatrix}$$

and

where

$$\hat{\mathbf{B}} = \mathbf{P}\mathbf{B} = \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \begin{bmatrix} 1 \\ 2 \end{bmatrix} = \begin{bmatrix} 3 \\ -1 \end{bmatrix}$$

Therefore,

$$\begin{bmatrix} \dot{w}_1 \\ \dot{w}_2 \end{bmatrix} = \begin{bmatrix} -2 & 0 \\ 3 & -1 \end{bmatrix} \begin{bmatrix} w_1 \\ w_2 \end{bmatrix} + \begin{bmatrix} 3 \\ -1 \end{bmatrix} x(t)$$

This is the desired state equation for the state vector **w**. The solution of this equation requires a knowledge of the initial state  $\mathbf{w}(0)$ . This can be obtained from the given initial state  $\mathbf{q}(0)$  by using Eq. (10.51).

We can obtain the same result with less effort using MATLAB.

```
>> A = [0 1;-2 -3]; B = [1; 2];
>> P = [1 1;1 -1];
>> Ahat = P*A*inv(P), Bhat = P*B
Ahat = -2 0
3 -1
Bhat = 3
-1
```

#### INVARIANCE OF EIGENVALUES

We have seen that the poles of all possible transfer functions of a system are the eigenvalues of the matrix **A**. If we transform a state vector from **q** to **w**, the variables  $w_1, w_2, \ldots, w_N$  are linear combinations of  $q_1, q_2, \ldots, q_N$  and therefore may be considered to be outputs. Hence, the poles of the transfer functions relating  $w_1, w_2, \ldots, w_N$  to the various inputs must also be the eigenvalues of matrix **A**. On the other hand, the system is also specified by Eq. (10.48). This means that the poles of the transfer functions must be the eigenvalues of  $\hat{\mathbf{A}}$ . Therefore, the eigenvalues of matrix **A** remain unchanged for the linear transformation of variables represented by Eq. (10.46), and the eigenvalues of matrix **A** and matrix  $\hat{\mathbf{A}}(\hat{\mathbf{A}} = \mathbf{P}\mathbf{A}\mathbf{P}^{-1})$  are identical, implying that the characteristic equations of **A** and  $\hat{\mathbf{A}}$  are also identical. This result also can be proved alternately as follows.

Consider the matrix  $\mathbf{P}(s\mathbf{I} - \mathbf{A})\mathbf{P}^{-1}$ . We have

$$\mathbf{P}(s\mathbf{I} - \mathbf{A})\mathbf{P}^{-1} = \mathbf{P}s\mathbf{I}\mathbf{P}^{-1} - \mathbf{P}\mathbf{A}\mathbf{P}^{-1} = s\mathbf{P}\mathbf{I}\mathbf{P}^{-1} - \hat{\mathbf{A}} = s\mathbf{I} - \hat{\mathbf{A}}$$

Taking the determinants of both sides, we obtain

$$|\mathbf{P}||s\mathbf{I} - \mathbf{A}||\mathbf{P}^{-1}| = |s\mathbf{I} - \hat{\mathbf{A}}|$$

The determinants  $|\mathbf{P}|$  and  $|\mathbf{P}^{-1}|$  are reciprocals of each other. Hence,

$$|s\mathbf{I} - \mathbf{A}| = |s\mathbf{I} - \hat{\mathbf{A}}|$$

This is the desired result. We have shown that the characteristic equations of **A** and  $\hat{\mathbf{A}}$  are identical. Hence, the eigenvalues of **A** and  $\hat{\mathbf{A}}$  are identical.

In Ex. 10.10, matrix A is given as

$$\mathbf{A} = \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix}$$

The characteristic equation is

$$|s\mathbf{I} - \mathbf{A}| = \begin{vmatrix} s & -1 \\ 2 & s+3 \end{vmatrix} = s^2 + 3s + 2 = 0$$

Also,

$$\hat{\mathbf{A}} = \begin{bmatrix} -2 & 0\\ 3 & -1 \end{bmatrix}$$

and

$$|s\mathbf{I} - \hat{\mathbf{A}}| = \begin{bmatrix} s+2 & 0\\ -3 & s+1 \end{bmatrix} = s^2 + 3s + 2 = 0$$

This result verifies that the characteristic equations of A and  $\hat{A}$  are identical.

## 10.5-1 Diagonalization of Matrix A

For several reasons, it is desirable to make matrix **A** diagonal. If **A** is not diagonal, we can transform the state variables such that the resulting matrix  $\hat{\mathbf{A}}$  is diagonal.<sup>†</sup> One can show that for any diagonal matrix **A**, the diagonal elements of this matrix must necessarily be  $\lambda_1, \lambda_2, \ldots, \lambda_N$  (the eigenvalues) of the matrix. Consider the diagonal matrix **A**:

$$\mathbf{A} = \begin{bmatrix} a_1 & 0 & 0 & \cdots & 0 \\ 0 & a_2 & 0 & \cdots & 0 \\ \vdots & \vdots & \vdots & \ddots & \vdots \\ 0 & 0 & 0 & \cdots & a_N \end{bmatrix}$$

The characteristic equation is given by

$$|s\mathbf{I} - \mathbf{A}| = \begin{bmatrix} (s - a_1) & 0 & 0 & \cdots & 0 \\ 0 & (s - a_2) & 0 & \cdots & 0 \\ \vdots & \vdots & \vdots & \ddots & \vdots \\ 0 & 0 & 0 & \cdots & (s - a_N) \end{bmatrix} = 0$$

or

$$(s-a_1)(s-a_2)\cdots(s-a_N)=0$$

The nonzero (diagonal) elements of a diagonal matrix are therefore its eigenvalues  $\lambda_1, \lambda_2, \ldots, \lambda_N$ . We shall denote the diagonal matrix by the symbol, **A**:

$$\mathbf{\Lambda} = \begin{bmatrix} \lambda_1 & 0 & 0 & \cdots & 0 \\ 0 & \lambda_2 & 0 & \cdots & 0 \\ \vdots & \vdots & \vdots & \ddots & \vdots \\ 0 & 0 & 0 & \cdots & \lambda_N \end{bmatrix}$$
(10.52)

Let us now consider the transformation of the state vector **A** such that the resulting matrix  $\hat{\mathbf{A}}$  is a diagonal matrix  $\mathbf{A}$ .

<sup>&</sup>lt;sup>†</sup> In this discussion we assume distinct eigenvalues. If the eigenvalues are not distinct, we can reduce the matrix to a modified diagonalized (Jordan) form.

#### 944 CHAPTER 10 STATE-SPACE ANALYSIS

Consider the system

$$\dot{\mathbf{q}} = \mathbf{A}\mathbf{q} + \mathbf{B}\mathbf{x}$$

We shall assume that  $\lambda_1, \lambda_2, \ldots, \lambda_N$ , the eigenvalues of **A**, are distinct (no repeated roots). Let us transform the state vector **q** into the new state vector **z**, using the transformation

$$\mathbf{z} = \mathbf{P}\mathbf{q} \tag{10.53}$$

Then, after the development of Eq. (10.48), we have

$$\dot{\mathbf{z}} = \mathbf{P}\mathbf{A}\mathbf{P}^{-1}\mathbf{z} + \mathbf{P}\mathbf{B}\mathbf{x}$$

We desire the transformation to be such that  $PAP^{-1}$  is a diagonal matrix  $\Lambda$  given by Eq. (10.52), or

 $\mathbf{\Lambda} = \mathbf{P}\mathbf{A}\mathbf{P}^{-1}$ 

$$\dot{\mathbf{z}} = \mathbf{A}\mathbf{z} + \mathbf{B}\mathbf{x} \tag{10.54}$$

Hence,

or

$$\mathbf{AP} = \mathbf{PA} \tag{10.55}$$

We know  $\Lambda$  and A. Equation (10.55) therefore can be solved to determine P.

## **EXAMPLE 10.11** Diagonal Form of the State Equations

Find the diagonalized form of the state equations for the system in Ex. 10.10.

In this case,

$$\mathbf{A} = \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix}$$

We found  $\lambda_1 = -1$  and  $\lambda_2 = -2$ . Hence,

$$\mathbf{\Lambda} = \begin{bmatrix} -1 & 0\\ 0 & -2 \end{bmatrix}$$

and Eq. (10.55) becomes

$$\begin{bmatrix} -1 & 0 \\ 0 & -2 \end{bmatrix} \begin{bmatrix} p_{11} & p_{12} \\ p_{21} & p_{22} \end{bmatrix} = \begin{bmatrix} p_{11} & p_{12} \\ p_{21} & p_{22} \end{bmatrix} \begin{bmatrix} 0 & 1 \\ -2 & -3 \end{bmatrix}$$

Equating the four elements on two sides, we obtain

$$-p_{11} = -2p_{12}$$
$$-p_{12} = p_{11} - 3p_{12}$$
$$-2p_{21} = -2p_{22}$$
$$-2p_{22} = p_{21} - 3p_{22}$$

The reader will immediately recognize that the first two equations are identical and that the last two equations are identical. Hence, two equations may be discarded, leaving us with only two equations  $[p_{11} = 2p_{12} \text{ and } p_{21} = p_{22}]$  and four unknowns. This observation means that there is no unique solution. There is, in fact, an infinite number of solutions. We can assign any value to  $p_{11}$  and  $p_{21}$  to yield one possible solution.<sup>†</sup> If  $p_{11} = k_1$  and  $p_{21} = k_2$ , then we have  $p_{12} = k_1/2$  and  $p_{22} = k_2$ :

$$\mathbf{P} = \begin{bmatrix} k_1 & \frac{k_1}{2} \\ k_2 & k_2 \end{bmatrix}$$

We may assign any values to  $k_1$  and  $k_2$ . For convenience, let  $k_1 = 2$  and  $k_2 = 1$ . This substitution yields

$$\mathbf{P} = \begin{bmatrix} 2 & 1 \\ 1 & 1 \end{bmatrix}$$

The transformed variables [Eq. (10.53)] are

$$\begin{bmatrix} z_1 \\ z_2 \end{bmatrix} = \begin{bmatrix} 2 & 1 \\ 1 & 1 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \end{bmatrix} = \begin{bmatrix} 2q_1 + q_2 \\ q_1 + q_2 \end{bmatrix}$$

This expression relates the new state variables  $z_1$  and  $z_2$  to the original state variables  $q_1$  and  $q_2$ . The system equation with **z** as the state vector is given by [see Eq. (10.54)]

 $\dot{z} = \Lambda z + \hat{B}x$ 

where

$$\hat{\mathbf{B}} = \mathbf{P}\mathbf{B} = \begin{bmatrix} 2 & 1 \\ 1 & 1 \end{bmatrix} \begin{bmatrix} 1 \\ 2 \end{bmatrix} = \begin{bmatrix} 4 \\ 3 \end{bmatrix}$$

Hence,

$$\begin{bmatrix} \dot{z}_1\\ \dot{z}_2 \end{bmatrix} = \begin{bmatrix} -1 & 0\\ 0 & -2 \end{bmatrix} \begin{bmatrix} z_1\\ z_2 \end{bmatrix} + \begin{bmatrix} 4\\ 3 \end{bmatrix} x$$
(10.56)

$$z_1 = \frac{1}{2}q_1 + \frac{1}{4}q_2$$
 and  $z_2 = \frac{1}{3}q_1 + \frac{1}{3}q_2$ 

<sup>&</sup>lt;sup>†</sup> If, however, we want the state equations in diagonalized form, as in Eq. (10.26), where all the elements of  $\hat{\mathbf{B}}$  matrix are unity, there is a unique solution. The reason is that the equation  $\hat{\mathbf{B}} = \mathbf{PB}$ , where all the elements of  $\hat{\mathbf{B}}$  are unity, imposes additional constraints. In the present example, this condition will yield  $p_{11} = 1/2$ ,  $p_{12} = 1/4$ ,  $p_{21} = 1/3$ , and  $p_{22} = 1/3$ . The relationship between  $\mathbf{z}$  and  $\mathbf{q}$  is then

or

946

 $\dot{z}_1 = -z_1 + 4x$  $\dot{z}_2 = -2z_2 + 3x$ 

Note the distinctive nature of these state equations. Each state equation involves only one variable and therefore can be solved by itself. A general state equation has the derivative of one state variable equal to a linear combination of all state variables. Such is not the case with the diagonalized matrix  $\Lambda$ . Each state variable  $z_i$  is chosen so that it is uncoupled from the rest of the variables; hence, a system with N eigenvalues is split into N decoupled systems, each with an equation of the form

 $\dot{z}_i = \lambda_i z_i + (\text{input terms})$ 

This fact also can be readily seen from Fig. 10.8a, which is a realization of the system represented by Eq. (10.56). In contrast, consider the original state equations [see Ex. 10.10]

$$\dot{q}_1 = q_2 + x(t)$$
  
 $\dot{q}_2 = -2q_1 - 3q_2 + 2x(t)$ 

A realization for these equations is shown in Fig. 10.8b. It can be seen from Fig. 10.8a that the states  $z_1$  and  $z_2$  are decoupled, whereas the states  $q_1$  and  $q_2$  (Fig. 10.8b) are coupled. It should be remembered that Figs. 10.8a and 10.8b are realizations of the same system.<sup>†</sup>

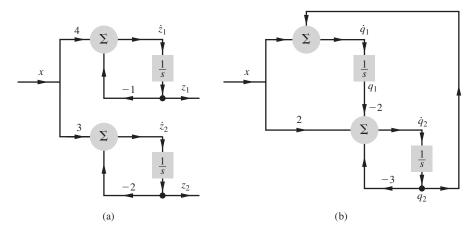


Figure 10.8 Two realizations of the second-order system.

<sup>&</sup>lt;sup>†</sup> Here we have only a simulated state equation; the outputs are not shown. The outputs are linear combinations of state variables (and inputs). Hence, the output equation can be easily incorporated into these diagrams.

#### MATRIX DIAGONALIZATION VIA MATLAB

The key to diagonalizing matrix **A** is to determine a matrix **P** that satisfies  $\mathbf{AP} = \mathbf{PA}$  [Eq. (10.55)], where **A** is a diagonal matrix of the eigenvalues of **A**. This problem is directly related to the classic eigenvalue problem, stated as

#### $AV = V\Lambda$

where V is a matrix of eigenvectors for A. If we can find V, we can take its inverse to determine **P**. That is,  $\mathbf{P} = \mathbf{V}^{-1}$ . This relationship is more fully developed in Sec. 10.8.

MATLAB's built-in function eig can determine the eigenvectors of a matrix and, therefore, can help us determine a suitable matrix  $\mathbf{P}$ . Let us demonstrate this approach for the current case.

```
>> A = [0 1;-2 -3]; B = [1; 2];
>> [V, Lambda] = eig(A);
>> P = inv(V), Lambda, Bhat = P*B
    P =
           2.8284
                     1.4142
           2.2361
                     2.2361
    Lambda =
                -1
                       0
                 0
                      -2
    Bhat =
              5.6569
              6.7082
```

Therefore,

$$\mathbf{z} = \begin{bmatrix} z_1 \\ z_2 \end{bmatrix} = \begin{bmatrix} 2.8284 & 1.4142 \\ 2.2361 & 2.2361 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \end{bmatrix} = \mathbf{P}\mathbf{q}$$

and

$$\dot{\mathbf{z}} = \begin{bmatrix} \dot{z}_1 \\ \dot{z}_2 \end{bmatrix} = \begin{bmatrix} -1 & 0 \\ 0 & -2 \end{bmatrix} \begin{bmatrix} z_1 \\ z_2 \end{bmatrix} + \begin{bmatrix} 5.6569 \\ 6.7082 \end{bmatrix} \mathbf{x}(t) = \mathbf{\Lambda}\mathbf{z} + \hat{\mathbf{B}}\mathbf{x}$$

Recall that neither **P** nor  $\hat{\mathbf{B}}$  are unique, which explains why the MATLAB output does not need to match our previous solution. Still, the MATLAB results do their job and successfully diagonalize matrix **A**.

## **10.6 CONTROLLABILITY AND OBSERVABILITY**

Consider a diagonalized state-space description of a system

$$\dot{\mathbf{z}} = \mathbf{A}\mathbf{z} + \hat{\mathbf{B}}\mathbf{x}$$
 and  $\mathbf{Y} = \hat{\mathbf{C}}\mathbf{z} + \mathbf{D}\mathbf{x}$  (10.57)

We shall assume that all N eigenvalues  $\lambda_1, \lambda_2, \ldots, \lambda_N$  are distinct. The state equations in Eq. (10.57) are of the form

$$\dot{z}_m = \lambda_m z_m + \hat{b}_{m1} x_1 + \hat{b}_{m2} x_2 + \dots + \hat{b}_{mj} x_j$$
  $m = 1, 2, \dots, N$ 

#### 948 CHAPTER 10 STATE-SPACE ANALYSIS

If  $\hat{b}_{m1}, \hat{b}_{m2}, \ldots, \hat{b}_{mi}$  (the *m*th row in matrix  $\hat{\mathbf{B}}$ ) are all zero, then

$$\dot{z}_m = \lambda_m z_m$$

and the variable  $z_m$  is uncontrollable because  $z_m$  is not coupled to any of the inputs. Moreover,  $z_m$  is decoupled from all the remaining (N-1) state variables because of the diagonalized nature of the variables. Hence, there is no direct or indirect coupling of  $z_m$  with any of the inputs, and the system is uncontrollable. In contrast, if at least one element in the *m*th row of  $\hat{\mathbf{B}}$  is nonzero,  $z_m$  is coupled to at least one input and is therefore controllable. *Thus, a system with a diagonalized state* [Eq. (10.57)] is completely controllable if and only if the matrix  $\hat{\mathbf{B}}$  has no row of zero elements.

The outputs [see Eq. (10.57)] are of the form

$$y_i = \hat{c}_{i1}z_1 + \hat{c}_{i2}z_2 + \dots + \hat{c}_{iN}z_N + \sum_{m=1}^j d_{im}x_m \qquad i = 1, 2, \dots, k$$

If  $\hat{c}_{im} = 0$ , then the state  $z_m$  will not appear in the expression for  $y_i$ . Since all the states are decoupled because of the diagonalized nature of the equations, the state  $z_m$  cannot be observed directly or indirectly (through other states) at the output  $y_i$ . Hence, the *m*th mode  $e^{\lambda_m t}$  will not be observed at the output  $y_i$ . If  $\hat{c}_{1m}$ ,  $\hat{c}_{2m}$ , ...,  $\hat{c}_{km}$  (the *m*th column in matrix  $\hat{C}$ ) are all zero, the state  $z_m$  will not be observable at any of the *k* outputs, and the state  $z_m$  is unobservable. In contrast, if at least one element in the *m*th column of  $\hat{C}$  is nonzero,  $z_m$  is observable at least at one output. *Thus, a system* with diagonalized equations of the form in Eq. (10.57) is completely observable if and only if the matrix  $\hat{C}$  has no column of zero elements. In this discussion, we assumed distinct eigenvalues; for repeated eigenvalues, the modified criteria can be found in the literature [1, 2].

If the state-space description is not in diagonalized form, it may be converted into diagonalized form using the procedure in Ex. 10.11. It is also possible to test for controllability and observability even if the state-space description is in undiagonalized form [1, 2].

#### EXAMPLE 10.12 Controllability and Observability

Investigate the controllability and observability of the systems in Fig. 10.9.

In both cases, the state variables are identified as the two integrator outputs,  $q_1$  and  $q_2$ . The state equations for the system in Fig. 10.9a are

$$\dot{q}_1 = q_1 + x$$
  
 $\dot{q}_2 = q_1 - q_2$  (10.58)

and

$$y = \dot{q}_2 - q_2 = q_1 - 2q_2$$

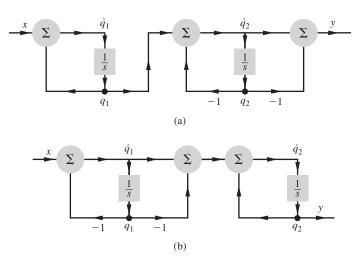


Figure 10.9 Systems for Ex. 10.12.

Hence,

$$\mathbf{A} = \begin{bmatrix} 1 & 0 \\ 1 & -1 \end{bmatrix} \qquad \mathbf{B} = \begin{bmatrix} 1 \\ 0 \end{bmatrix} \qquad \mathbf{C} = \begin{bmatrix} 1 & -2 \end{bmatrix} \qquad \mathbf{D} = 0$$
$$|s\mathbf{I} - \mathbf{A}| = \begin{vmatrix} s - 1 & 0 \\ -1 & s + 1 \end{vmatrix} = (s - 1)(s + 1)$$

Therefore,

$$\lambda_1 = 1$$
 and  $\lambda_2 = -1$ 

and

$$\mathbf{\Lambda} = \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix}$$

We shall now use the procedure in Sec. 10.5-1 to diagonalize this system. According to Eq. (10.55), we have

$$\begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} \begin{bmatrix} p_{11} & p_{12} \\ p_{21} & p_{22} \end{bmatrix} = \begin{bmatrix} p_{11} & p_{12} \\ p_{21} & p_{22} \end{bmatrix} \begin{bmatrix} 1 & 0 \\ 1 & -1 \end{bmatrix}$$

The solution of this equation yields

$$p_{12} = 0$$
 and  $-2p_{21} = p_{22}$ 

Choosing  $p_{11} = 1$  and  $p_{21} = 1$ , we have

$$\mathbf{P} = \begin{bmatrix} 1 & 0 \\ 1 & -2 \end{bmatrix}$$

and

$$\hat{\mathbf{B}} = \mathbf{P}\mathbf{B} = \begin{bmatrix} 1 & 0 \\ 1 & -2 \end{bmatrix} \begin{bmatrix} 1 \\ 0 \end{bmatrix} = \begin{bmatrix} 1 \\ 1 \end{bmatrix}$$

All the rows of  $\hat{\mathbf{B}}$  are nonzero. Hence, the system is controllable. Also,

$$\mathbf{Y} = \mathbf{C}\mathbf{q} = \mathbf{C}\mathbf{P}^{-1}\mathbf{z} = \hat{\mathbf{C}}\mathbf{z}$$

and

$$\hat{\mathbf{C}} = \mathbf{C}\mathbf{P}^{-1} = \begin{bmatrix} 1 & -2 \end{bmatrix} \begin{bmatrix} 1 & 0 \\ 1 & -2 \end{bmatrix}^{-1} = \begin{bmatrix} 1 & -2 \end{bmatrix} \begin{bmatrix} 1 & 0 \\ \frac{1}{2} & -\frac{1}{2} \end{bmatrix} = \begin{bmatrix} 0 & 1 \end{bmatrix}$$

The first column of  $\hat{\mathbf{C}}$  is zero. Hence, the mode  $z_1$  (corresponding to  $\lambda_1 = 1$ ) is unobservable. The system is therefore controllable but not observable. We come to the same conclusion by realizing the system with the diagonalized state variables  $z_1$  and  $z_2$ , whose state equations are

$$\dot{\mathbf{z}} = \mathbf{A}\mathbf{z} + \mathbf{B}\mathbf{x}$$
$$\mathbf{y} = \hat{\mathbf{C}}\mathbf{z}$$

Using our previous calculations, we have

$$\dot{z}_1 = z_1 + x$$
$$\dot{z}_2 = -z_2 + x$$

and

$$y = z_2$$

Figure 10.10a shows a realization of these equations. It is clear that each of the two modes is controllable, but the first mode (corresponding to  $\lambda = 1$ ) is not observable at the output.

The state equations for the system in Fig. 10.9b are

$$\dot{q}_1 = -q_1 + x$$
  
 $\dot{q}_2 = \dot{q}_1 - q_1 + q_2 = -2q_1 + q_2 + x$  (10.59)

and


 $y = q_2$ 


Hence,

$$\mathbf{A} = \begin{bmatrix} -1 & 0 \\ -2 & 1 \end{bmatrix} \qquad \mathbf{B} = \begin{bmatrix} 1 \\ 1 \end{bmatrix} \qquad \mathbf{C} = \begin{bmatrix} 0 & 1 \end{bmatrix} \qquad \mathbf{D} = 0$$
$$|s\mathbf{I} - \mathbf{A}| = \begin{vmatrix} s+1 & 0 \\ -1 & s-1 \end{vmatrix} = (s+1)(s-1)$$
$$\mathbf{A}_2 = 1, \text{ and}$$

so that  $\lambda_1 = -1$ ,  $\lambda_2 = 1$ , and

950

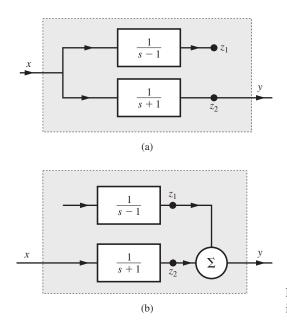

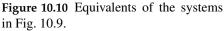

Diagonalizing the matrix, we have

$$\begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} \begin{bmatrix} p_{11} & p_{12} \\ p_{21} & p_{22} \end{bmatrix} = \begin{bmatrix} p_{11} & p_{12} \\ p_{21} & p_{22} \end{bmatrix} \begin{bmatrix} -1 & 0 \\ -2 & 1 \end{bmatrix}$$

The solution of this equation yields  $p_{11} = -p_{12}$  and  $p_{22} = 0$ . Choosing  $p_{11} = -1$  and  $p_{21} = 1$ , we obtain

$$\mathbf{P} = \begin{bmatrix} -1 & 1 \\ 1 & 0 \end{bmatrix}$$

and

$$\hat{\mathbf{B}} = \mathbf{P}\mathbf{B} = \begin{bmatrix} -1 & 1 \\ 1 & 0 \end{bmatrix} \begin{bmatrix} 1 \\ 1 \end{bmatrix} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}$$
$$\hat{\mathbf{C}} = \mathbf{C}\mathbf{P}^{-1} = \begin{bmatrix} 0 & 1 \end{bmatrix} \begin{bmatrix} 0 & 1 \\ 1 & 1 \end{bmatrix} = \begin{bmatrix} 1 & 1 \end{bmatrix}$$

The first row of  $\hat{\mathbf{B}}$  is zero. Hence, the mode corresponding to  $\lambda_1 = 1$  is not controllable. However, since none of the columns of  $\hat{\mathbf{C}}$  vanish, both modes are observable at the output. Hence the system is observable but not controllable.

We reach the same conclusion by realizing the system with the diagonalized state variables  $z_1$  and  $z_2$ . The two state equations are

$$\dot{\mathbf{z}} = \mathbf{A}\mathbf{z} + \mathbf{B}\mathbf{x}$$
  
 $y = \mathbf{\hat{C}}\mathbf{z}$ 

Using our previous calculations, we have

$$\dot{z}_1 = z_1$$
$$\dot{z}_2 = -z_2 + x$$

and thus,

 $y = z_1 + z_2$ 

Figure 10.10b shows a realization of these equations. Clearly, each of the two modes is observable at the output, but the mode corresponding to  $\lambda_1 = 1$  is not controllable.

# USING MATLAB TO DETERMINE CONTROLLABILITY AND OBSERVABILITY

As demonstrated in Ex. 10.11, we can use MATLAB's eig function to determine the matrix **P** that will diagonalize **A**. We can then use **P** to determine  $\hat{\mathbf{B}}$  and  $\hat{\mathbf{C}}$ , from which we can determine the controllability and observability of a system. Let us demonstrate the process for the two present systems.

First, let us use MATLAB to compute  $\hat{\mathbf{B}}$  and  $\hat{\mathbf{C}}$  for the system in Fig. 10.9a.

Since all the rows of  $\hat{\mathbf{B}}$  are nonzero, the system is controllable. However, one column of  $\hat{\mathbf{C}}$  is zero, so one mode is unobservable.

Next, let us use MATLAB to compute  $\hat{\mathbf{B}}$  and  $\hat{\mathbf{C}}$  for the system in Fig. 10.9b.

One of the rows of  $\hat{\mathbf{B}}$  is zero, so one mode is uncontrollable. Since all of the columns of  $\hat{\mathbf{C}}$  are nonzero, the system is observable.

As expected, the MATLAB results confirm our earlier conclusions regarding the controllability and observability of the systems of Fig. 10.9.

#### 10.6-1 Inadequacy of the Transfer Function Description of a System

Example 10.12 demonstrates the inadequacy of the transfer function to describe an LTI system in general. The systems in Figs. 10.9a and 10.9b both have the same transfer function

$$H(s) = \frac{1}{s+1}$$

Yet the two systems are very different. Their true nature is revealed in Figs. 10.10a and 10.10b, respectively. Both the systems are unstable, but their transfer function H(s) = 1/(s+1) does not give any hint of it. Moreover, the systems are very different from the viewpoint of controllability and observability. The system in Fig. 10.9a is controllable but not observable, whereas the system in Fig. 10.9b is observable but not controllable.

The transfer function description of a system looks at a system only from the input and output terminals. Consequently, the transfer function description can specify only the part of the system that is coupled to the input and the output terminals. From Figs. 10.10a and 10.10b, we see that in both cases only a part of the system that has a transfer function H(s) = 1/(s+1) is coupled to the input and the output terminals. This is why both systems have the same transfer function H(s) = 1/(s+1).

The state variable description [Eqs. (10.58) and (10.59)], on the other hand, contains all the information about these systems to describe them completely. The reason is that the state variable description is an internal description, not the external description obtained from the system behavior at external terminals.

Apparently, the transfer function fails to describe these systems completely because the transfer functions of these systems have a common factor s - 1 in the numerator and denominator; this common factor is canceled out in the systems in Fig. 10.9, with a consequent loss of the information. Such a situation occurs when a system is uncontrollable and/or unobservable. If a system is both controllable and observable (which is the case with most of the practical systems) the transfer function describes the system completely. In such a case, the internal and external descriptions are equivalent.

## **10.7 STATE-SPACE ANALYSIS OF DISCRETE-TIME SYSTEMS**

We have shown that an Nth-order differential equation can be expressed in terms of N first-order differential equations. In the following analogous procedure, we show that a general Nth-order difference equation can be expressed in terms of N first-order difference equations.


Consider the *z*-transfer function


$$H[z] = \frac{b_0 z^N + b_1 z^{N-1} + \dots + b_{N-1} z + b_N}{z^N + a_1 z^{N-1} + \dots + a_{N-1} z + a_N}$$

The input x[n] and the output y[n] of this system are related by the difference equation

$$(E^{N} + a_{1}E^{N-1} + \dots + a_{N-1}E + a_{N})y[n] = (b_{0}E^{N} + b_{1}E^{N-1} + \dots + b_{N-1}E + b_{N})x[n]$$

The DFII realization of this equation is illustrated in Fig. 10.11.

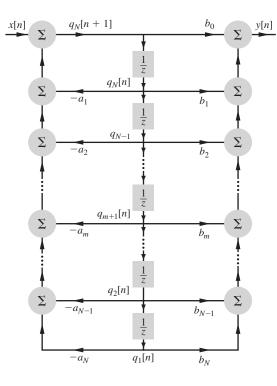

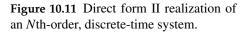

Signals appearing at the outputs of N delay elements are denoted by  $q_1[n], q_2[n], \ldots, q_N[n]$ . The input of the first delay is  $q_N[n+1]$ . We can now write N equations, one at the input of each delay:

$$q_{1}[n+1] = q_{2}[n]$$

$$q_{2}[n+1] = q_{3}[n]$$

$$\vdots$$

$$q_{N-1}[n+1] = q_{N}[n]$$

$$q_{N}[n+1] = -a_{N}q_{1}[n] - a_{N-1}q_{2}[n] - \dots - a_{1}q_{N}[n] + x[n]$$
(10.60)

and

 $y[n] = b_N q_1[n] + b_{N-1} q_2[n] + \dots + b_1 q_N[n] + b_0 q_{N+1}[n]$ 

We can eliminate  $q_{N+1}[n]$  from this equation by using the last equation in Eq. (10.60) to yield

$$y[n] = (b_N - b_0 a_N)q_1[n] + (b_{N-1} - b_0 a_{N-1})q_2[n] + \dots + (b_1 - b_0 a_1)q_N[n] + b_0 x[n]$$
  
=  $\hat{b}_N q_1[n] + \hat{b}_{N-1}q_2[n] + \dots + \hat{b}_1 q_N[n] + b_0 x[n]$  (10.61)

where  $\hat{b}_i = b_i - b_0 a_i$ .

Equation (10.60) shows N first-order difference equations in N variables  $q_1[n], q_2[n], \ldots, q_N[n]$ . These variables should immediately be recognized as state variables, since the specification of the initial values of these variables in Fig. 10.11 will uniquely determine the response y[n] for a

given x[n]. Thus, Eq. (10.60) represents the state equations, and Eq. (10.61) is the output equation. In matrix form, we can write these equations as

$$\underbrace{\begin{bmatrix} q_1[n+1] \\ q_2[n+1] \\ \vdots \\ q_{N-1}[n+1] \\ q_N[n+1] \end{bmatrix}}_{\mathbf{q}[n+1]} = \underbrace{\begin{bmatrix} 0 & 1 & 0 & \cdots & 0 & 0 \\ 0 & 0 & 1 & \cdots & 0 & 0 \\ \vdots & \vdots & \vdots & \cdots & \vdots & \vdots \\ 0 & 0 & 0 & \cdots & 0 & 1 \\ -a_N & -a_{N-1} & -a_{N-2} & \cdots & -a_2 & -a_1 \end{bmatrix}}_{\mathbf{q}[n]} \underbrace{\begin{bmatrix} q_1[n] \\ q_2[n] \\ \vdots \\ q_{N-1}[n] \\ q_N[n] \end{bmatrix}}_{\mathbf{q}[n]} + \underbrace{\begin{bmatrix} 0 \\ 0 \\ \vdots \\ 0 \\ 1 \end{bmatrix}}_{\mathbf{q}[n]} x[n] (10.62)$$

and

$$\mathbf{y}[n] = \underbrace{\begin{bmatrix} \hat{b}_N & \hat{b}_{N-1} & \cdots & \hat{b}_1 \end{bmatrix}}_{\mathbf{c}} \begin{bmatrix} q_1[n] \\ q_2[n] \\ \vdots \\ q_N[n] \end{bmatrix} + \underbrace{b_0}_{\mathbf{b}} x[n]$$
(10.63)

In general,

$$\mathbf{q}[n+1] = \mathbf{A}\mathbf{q}[n] + \mathbf{B}\mathbf{x}[n]$$
$$\mathbf{y}[n] = \mathbf{C}\mathbf{q}[n] + \mathbf{D}\mathbf{x}[n]$$

Here we have represented a discrete-time system with state equations for DFII form. There are several other possible representations, as discussed in Sec. 10.3. We may, for example, use the cascade, parallel, or transpose of DFII forms to realize the system, or we may use some linear transformation of the state vector to realize other forms. In all cases, the output of each delay element qualifies as a state variable. We then write the equation at the input of each delay element. The *N* equations thus obtained are the *N* state equations.

#### 10.7-1 Solution in State Space

Consider the state equation

$$\mathbf{q}[n+1] = \mathbf{A}\mathbf{q}[n] + \mathbf{B}\mathbf{x}[n]$$

From this equation, it follows that

$$\mathbf{q}[n] = \mathbf{A}\mathbf{q}[n-1] + \mathbf{B}\mathbf{x}[n-1]$$

and

$$\mathbf{q}[n-1] = \mathbf{A}\mathbf{q}[n-2] + \mathbf{B}\mathbf{x}[n-2]$$
$$\mathbf{q}[n-2] = \mathbf{A}\mathbf{q}[n-3] + \mathbf{B}\mathbf{x}[n-3]$$
$$\vdots$$
$$\mathbf{q}[1] = \mathbf{A}\mathbf{q}[0] + \mathbf{B}\mathbf{x}[0]$$

#### 956 CHAPTER 10 STATE-SPACE ANALYSIS

Substituting the expression for q[n-1] into that for q[n], we obtain

$$\mathbf{q}[n] = \mathbf{A}^2 \mathbf{q}[n-2] + \mathbf{A} \mathbf{B} \mathbf{x}[n-2] + \mathbf{B} \mathbf{x}[n-1]$$

Substituting the expression for q[n-2] in this equation, we obtain

$$\mathbf{q}[n] = \mathbf{A}^{3}\mathbf{q}[n-3] + \mathbf{A}^{2}\mathbf{B}\mathbf{x}[n-3] + \mathbf{A}\mathbf{B}\mathbf{x}[n-2] + \mathbf{B}\mathbf{x}[n-1]$$

Continuing in this way, we obtain

$$\mathbf{q}[n] = \mathbf{A}^{n} \mathbf{q}[0] + \mathbf{A}^{n-1} \mathbf{B} \mathbf{x}[0] + \mathbf{A}^{n-2} \mathbf{B} \mathbf{x}[1] + \dots + \mathbf{B} \mathbf{x}[n-1]$$
$$= \mathbf{A}^{n} \mathbf{q}[0] + \sum_{m=0}^{n-1} \mathbf{A}^{n-1-m} \mathbf{B} \mathbf{x}[m]$$

The upper limit of this summation is nonnegative. Hence,  $n \ge 1$ , and the summation is recognized as the convolution sum

$$\mathbf{A}^{n-1}u[n-1] * \mathbf{B}\mathbf{x}[n]$$

Consequently,

$$\mathbf{q}[n] = \underbrace{\mathbf{A}^{n} \mathbf{q}[0]}_{\text{zero input}} + \underbrace{\mathbf{A}^{n-1} u[n-1] * \mathbf{B} \mathbf{x}[n]}_{\text{zero state}}$$
(10.64)

and

$$\mathbf{y}[n] = \mathbf{C}\mathbf{q} + \mathbf{D}\mathbf{x}$$
  
=  $\mathbf{C}\mathbf{A}^{n}\mathbf{q}[0] + \sum_{m=0}^{n-1} \mathbf{C}\mathbf{A}^{n-1-m}\mathbf{B}\mathbf{x}[m] + \mathbf{D}\mathbf{x}$   
=  $\mathbf{C}\mathbf{A}^{n}\mathbf{q}[0] + \mathbf{C}\mathbf{A}^{n-1}u[n-1] * \mathbf{B}\mathbf{x}[n] + \mathbf{D}\mathbf{x}$  (10.65)

In Sec. 10.1-3, we showed that

$$\mathbf{A}^{n} = \beta_0 \mathbf{I} + \beta_1 \mathbf{A} + \beta_2 \mathbf{A}^2 + \dots + \beta_{N-1} \mathbf{A}^{N-1}$$
(10.66)

where (assuming N distinct eigenvalues of A)

$$\begin{bmatrix} \beta_0 \\ \beta_1 \\ \vdots \\ \beta_{N-1} \end{bmatrix} = \begin{bmatrix} 1 & \lambda_1 & \lambda_1^2 & \cdots & \lambda_1^{N-1} \\ 1 & \lambda_2 & \lambda_2^2 & \cdots & \lambda_2^{N-1} \\ \vdots & \vdots & \vdots & \cdots & \vdots \\ 1 & \lambda_N & \lambda_N^2 & \cdots & \lambda_N^{N-1} \end{bmatrix}^{-1} \begin{bmatrix} \lambda_1^n \\ \lambda_2^n \\ \vdots \\ \lambda_N^n \end{bmatrix}$$
(10.67)

and  $\lambda_1, \lambda_2, \ldots, \lambda_N$  are the *N* eigenvalues of **A**. We can also determine **A**<sup>*n*</sup> from the *z*-transform formula, which will be derived later, in Eq. (10.71):

$$\mathbf{A}^n = \mathcal{Z}^{-1}[(\mathbf{I} - z^{-1}\mathbf{A})^{-1}]$$

#### EXAMPLE 10.13 State-Space Analysis of a Discrete-Time System

Give a state-space description of the system in Fig. 10.12. Find the output y[n] if the input x[n] = u[n] and the initial conditions are  $q_1[0] = 2$  and  $q_2[0] = 3$ .

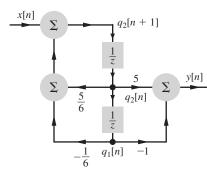


Figure 10.12 System for Ex. 10.13.

Recognizing that  $q_2[n] = q_1[n+1]$ , the state equations are [see Eqs. (10.62) and (10.63)]

$$\begin{bmatrix} q_1[n+1] \\ q_2[n+1] \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ -\frac{1}{6} & \frac{5}{6} \end{bmatrix} \begin{bmatrix} q_1[n] \\ q_2[n] \end{bmatrix} + \begin{bmatrix} 0 \\ 1 \end{bmatrix} x$$

and

$$y[n] = \begin{bmatrix} -1 & 5 \end{bmatrix} \begin{bmatrix} q_1[n] \\ q_2[n] \end{bmatrix}$$

To find the solution [Eq. (10.65)], we must first determine  $A^n$ . The characteristic equation of **A** is

$$|\lambda \mathbf{I} - \mathbf{A}| = \begin{vmatrix} \lambda & -1 \\ \frac{1}{6} & \lambda - \frac{5}{6} \end{vmatrix} = \lambda^2 - \frac{5}{6}\lambda + \frac{1}{6} = \left(\lambda - \frac{1}{3}\right)\left(\lambda - \frac{1}{2}\right) = 0$$

Hence,  $\lambda_1 = 1/3$  and  $\lambda_2 = 1/2$  are the eigenvalues of A and [see Eq. (10.66)]

$$\mathbf{A}^n = \beta_0 \mathbf{I} + \beta_1 \mathbf{A}$$

where [see Eq. (10.67)]

$$\begin{bmatrix} \beta_0 \\ \beta_1 \end{bmatrix} = \begin{bmatrix} 1 & \frac{1}{3} \\ 1 & \frac{1}{2} \end{bmatrix}^{-1} \begin{bmatrix} \left(\frac{1}{3}\right)^n \\ \left(\frac{1}{2}\right)^n \end{bmatrix} = \begin{bmatrix} 3 & -2 \\ -6 & 6 \end{bmatrix} \begin{bmatrix} (3)^{-n} \\ (2)^{-n} \end{bmatrix} = \begin{bmatrix} 3(3)^{-n} - 2(2)^{-n} \\ -6(3)^{-n} + 6(2)^{-n} \end{bmatrix}$$

and

$$\mathbf{A}^{n} = \begin{bmatrix} 3(3)^{-n} - 2(2)^{-n} \end{bmatrix} \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix} + \begin{bmatrix} -6(3)^{-n} + 6(2)^{-n} \end{bmatrix} \begin{bmatrix} 0 & 1 \\ -\frac{1}{6} & \frac{5}{6} \end{bmatrix}$$
$$= \begin{bmatrix} 3(3)^{-n} - 2(2)^{-n} & -6(3)^{-n} + 6(2)^{-n} \\ (3)^{-n} - (2)^{-n} & -2(3)^{-n} + 3(2)^{-n} \end{bmatrix}$$
(10.68)

We can now determine the state vector  $\mathbf{q}[n]$  from Eq. (10.64). Since we are interested in the output y[n], we shall use Eq. (10.65) directly. Note that

$$\mathbf{CA}^n = [-1 \quad 5]\mathbf{A}^n = [2(3)^{-n} - 3(2)^{-n} \quad -4(3)^{-n} + 9(2)^{-n}]$$

and the zero-input response is  $CA^{n}q[0]$ , with

$$\mathbf{q}[0] = \begin{bmatrix} 2\\ 3 \end{bmatrix}$$

Hence, the zero-input response is

$$\mathbf{CA}^{n}\mathbf{q}[0] = -8(3)^{-n} + 21(2)^{-n}$$

The zero-state component is given by the convolution sum of  $CA^{n-1}u[n-1]$  and Bx[n]. We can use the shifting property of the convolution sum [Eq. (3.32)] to obtain the zero-state component by finding the convolution sum of  $CA^nu[n]$  and Bx[n] and then replacing *n* with n-1 in the result. We use this procedure because the convolution sums are listed in Table 3.1 for functions of the type x[n]u[n], rather than x[n]u[n-1].

$$\mathbf{CA}^{n}u[n] * \mathbf{B}x[n] = [2(3)^{-n} - 3(2)^{-n} - 4(3)^{-n} + 9(2)^{-n}] * \begin{bmatrix} 0\\ u[n] \end{bmatrix}$$
$$= -4(3)^{-n} * u[n] + 9(2)^{-n} * u[n]$$

Using Table 3.1 (pair 4), we obtain

$$\mathbf{CA}^{n}u[n] * \mathbf{B}x[n] = -4 \left[ \frac{1 - 3^{-(n+1)}}{1 - \frac{1}{3}} \right] u[n] + 9 \left[ \frac{1 - 2^{-(n+1)}}{1 - \frac{1}{2}} \right] u[n]$$
$$= \left[ 12 + 6 \left( 3^{-(n+1)} \right) - 18 \left( 2^{-(n+1)} \right) \right] u[n]$$

Now the desired (zero-state) response is obtained by replacing n by n - 1. Hence,

$$\mathbf{CA}^{n}u[n] * \mathbf{B}x[n-1] = [12 + 6(3)^{-n} - 18(2)^{-n}]u[n-1]$$

It follows that

$$y[n] = [-8(3)^{-n} + 21(2)^{-n}u[n] + [12 + 6(3)^{-n} - 18(2)^{-n}]u[n-1]$$

This is the desired answer. We can simplify this answer by observing that  $12 + 6(3)^{-n} - 18(2)^{-n} = 0$  for n = 0. Hence, u[n - 1] may be replaced by u[n], and

$$y[n] = [12 - 2(3)^{-n} + 3(2)^{-n}]u[n]$$
(10.69)


958

#### USING MATLAB TO OBTAIN A GRAPHICAL SOLUTION

MATLAB is equipped with tools to simulate digital systems, which makes it easy to obtain a graphical solution to the system. Let us use MATLAB simulation to determine the total system output over  $0 \le n \le 25$ .

- >> A = [0 1; -1/6 5/6]; B = [0; 1]; C = [-1 5]; D = 0;
- >> N = 25; n = (0:N); x = ones(1,N+1); q0 = [2;3];
- >> sys = ss(A,B,C,D,-1); % Discrete-time state space model
- >> [y,q] = lsim(sys,x,n,q0); % Simulate output and state vector
- >> clf; stem(n,y,'k.'); xlabel('n'); ylabel('y[n]'); axis([-.5 25.5 11.5 13.5]);

The MATLAB results, shown in Fig. 10.13, exactly align with the analytical solution derived earlier. Also notice that the zero-input and zero-state responses can be separately obtained using the same code and respectively setting either x or q0 to zero.

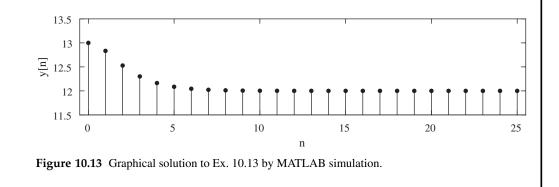

#### 10.7-2 The *z*-Transform Solution

The z-transform of Eq. (10.62) is given by

$$z\mathbf{Q}[z] - z\mathbf{q}[0] = \mathbf{A}\mathbf{Q}[z] + \mathbf{B}\mathbf{X}[z]$$

Therefore,

$$(z\mathbf{I} - \mathbf{A})\mathbf{Q}[z] = z\mathbf{q}[0] + \mathbf{B}\mathbf{X}[z]$$

and

$$\mathbf{Q}[z] = (z\mathbf{I} - \mathbf{A})^{-1}z\mathbf{q}[0] + (z\mathbf{I} - \mathbf{A})^{-1}\mathbf{B}\mathbf{X}[z]$$
  
=  $(\mathbf{I} - z^{-1}\mathbf{A})^{-1}\mathbf{q}[0] + (z\mathbf{I} - \mathbf{A})^{-1}\mathbf{B}\mathbf{X}[z]$ 

Hence,

$$\mathbf{q}[n] = \underbrace{\mathcal{Z}^{-1}[(\mathbf{I} - z^{-1}\mathbf{A})^{-1}]\mathbf{q}[0]}_{\text{zero-input response}} + \underbrace{\mathcal{Z}^{-1}[(z\mathbf{I} - \mathbf{A})^{-1}\mathbf{B}\mathbf{X}[z]]}_{\text{zero-state response}}$$
(10.70)

#### 960 CHAPTER 10 STATE-SPACE ANALYSIS

A comparison of Eq. (10.70) with Eq. (10.64) shows that

$$\mathbf{A}^{n} = \mathcal{Z}^{-1}[(\mathbf{I} - z^{-1}\mathbf{A})^{-1}]$$
(10.71)

The output equation is given by

$$\mathbf{Y}[z] = \mathbf{C}\mathbf{Q}[z] + \mathbf{D}\mathbf{X}[z]$$
  
=  $\mathbf{C}[(\mathbf{I} - z^{-1}\mathbf{A})^{-1}\mathbf{q}[0] + (z\mathbf{I} - \mathbf{A})^{-1}\mathbf{B}\mathbf{X}[z]] + \mathbf{D}\mathbf{X}[z]$   
=  $\mathbf{C}(\mathbf{I} - z^{-1}\mathbf{A})^{-1}\mathbf{q}[0] + [\mathbf{C}(z\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D}]\mathbf{X}[z]$   
=  $\underbrace{\mathbf{C}(\mathbf{I} - z^{-1}\mathbf{A})^{-1}\mathbf{q}[0]}_{\text{zero-input response}} + \underbrace{\mathbf{H}[z]\mathbf{X}[z]}_{\text{zero-state response}}$  (10.72)

where

$$\mathbf{H}[z] = \mathbf{C}(z\mathbf{I} - \mathbf{A})^{-1}\mathbf{B} + \mathbf{D}$$
(10.73)

Note that  $\mathbf{H}[z]$  is the transfer function matrix of the system, and  $H_{ij}[z]$ , the *ij*th element of  $\mathbf{H}[z]$ , is the transfer function relating the output  $y_i[n]$  to the input  $x_j[n]$ . If we define  $\mathbf{h}[n]$  as

$$\mathbf{h}[n] = \mathcal{Z}^{-1}[\mathbf{H}[z]]$$

then  $\mathbf{h}[n]$  represents the unit impulse function response matrix of the system. Thus,  $h_{ij}[n]$ , the *ij*th element of  $\mathbf{h}[n]$ , represents the zero-state response  $y_i[n]$  when the input  $x_j[n] = \delta[n]$  and all other inputs are zero.

#### **EXAMPLE 10.14** *z*-Transform Solution to State Equations

Use the *z*-transform to find the response y[n] for the system in Ex. 10.13.

According to Eq. (10.72),

$$\begin{aligned} \mathbf{Y}[z] &= [-1 \quad 5] \begin{bmatrix} 1 & -\frac{1}{z} \\ \frac{1}{6z} & 1 - \frac{5}{6z} \end{bmatrix}^{-1} \begin{bmatrix} 2 \\ 3 \end{bmatrix} + [-1 \quad 5] \begin{bmatrix} z & -1 \\ \frac{1}{6} & z - \frac{5}{6} \end{bmatrix}^{-1} \begin{bmatrix} 0 \\ \frac{z}{z-1} \end{bmatrix} \\ &= [-1 \quad 5] \begin{bmatrix} \frac{z(6z-5)}{6z^2 - 5z+1} & \frac{6z}{6z^2 - 5z+1} \\ \frac{-z}{6z^2 - 5z+1} & \frac{6z}{6z^2 - 5z+1} \end{bmatrix} \begin{bmatrix} 2 \\ 3 \end{bmatrix} + [-1 \quad 5] \begin{bmatrix} \frac{z}{(z-1)(z^2 - \frac{5}{6}z + \frac{1}{6})} \\ \frac{z^2}{(z-1)(z^2 - \frac{5}{6}z + \frac{1}{6})} \end{bmatrix} \\ &= \frac{13z^2 - 3z}{z^2 - \frac{5}{6}z + \frac{1}{6}} + \frac{(5z-1)z}{(z-1)(z^2 - \frac{5}{6}z + \frac{1}{6})} \\ &= \frac{-8z}{z - \frac{1}{3}} + \frac{21z}{z - \frac{1}{2}} + \frac{12z}{z - 1} + \frac{12z}{z - 1} + \frac{6z}{z - \frac{1}{3}} - \frac{18z}{z - \frac{1}{2}} \end{aligned}$$

Therefore,

$$y[n] = [\underbrace{-8(3)^{-n} + 21(2)^{-n}}_{\text{zero-input response}} + \underbrace{12 + 6(3)^{-n} - 18(2)^{-n}}_{\text{zero-state response}}]u[n]$$

## LINEAR TRANSFORMATION, CONTROLLABILITY, AND OBSERVABILITY

The procedure for linear transformation is parallel to that in the continuous-time case (Sec. 10.5). If  $\mathbf{w}$  is the transformed-state vector given by

 $\mathbf{w} = \mathbf{P}\mathbf{q}$ 

then

$$\mathbf{w}[n+1] = \mathbf{P}\mathbf{A}\mathbf{P}^{-1}\mathbf{w}[n] + \mathbf{P}\mathbf{B}\mathbf{x}$$

and

$$\mathbf{y}[n] = (\mathbf{C}\mathbf{P}^{-1})\mathbf{w} + \mathbf{D}\mathbf{x}$$

Controllability and observability may be investigated by diagonalizing the matrix, as explained in Sec. 10.5-1.

# **10.8 MATLAB: TOOLBOXES AND STATE-SPACE ANALYSIS**

The preceding MATLAB sections provide a comprehensive introduction to the basic MATLAB environment. However, MATLAB also offers a wide range of toolboxes that perform specialized tasks. Once installed, toolbox functions operate no differently from ordinary MATLAB functions. Although toolboxes are purchased at extra cost, they save time and offer the convenience of predefined functions. It would take significant effort to duplicate a toolbox's functionality by using custom user-defined programs.

Three toolboxes are particularly appropriate in the study of signals and systems: the control system toolbox, the signal-processing toolbox, and the symbolic math toolbox. Functions from these toolboxes have been utilized throughout the text in the MATLAB examples as well as certain end-of-chapter problems. This section provides a more formal introduction to a selection of functions, both standard and toolbox, that are appropriate for state-space problems.

#### 10.8-1 z-Transform Solutions to Discrete-Time, State-Space Systems

As with continuous-time systems, it is often more convenient to solve discrete-time systems in the transform domain rather than in the time domain. As given in Ex. 10.13, consider the state-space description of the system shown in Fig. 10.12.

$$\begin{bmatrix} q_1[n+1] \\ q_2[n+1] \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ -\frac{1}{6} & \frac{5}{6} \end{bmatrix} \begin{bmatrix} q_1[n] \\ q_2[n] \end{bmatrix} + \begin{bmatrix} 0 \\ 1 \end{bmatrix} x[n]$$

and

$$y[n] = \begin{bmatrix} -1 & 5 \end{bmatrix} \begin{bmatrix} q_1[n] \\ q_2[n] \end{bmatrix}$$

We are interested in the output y[n] in response to the input x[n] = u[n] with initial conditions  $q_1[0] = 2$  and  $q_2[0] = 3$ .

To describe this system, the state matrices A, B, C, and D are first defined.

>> A = [0 1;-1/6 5/6]; B = [0; 1]; C = [-1 5]; D = 0;

Additionally, the vector of initial conditions is defined.

>> q\_0 = [2;3];

In the transform domain, the solution to the state equation is

$$\mathbf{Q}[z] = (\mathbf{I} - z^{-1}\mathbf{A})^{-1}\mathbf{q}[0] + (z\mathbf{I} - \mathbf{A})^{-1}\mathbf{B}\mathbf{X}[z]$$
(10.74)

The solution is separated into two parts: the zero-input response and the zero-state response.

MATLAB's symbolic toolbox makes possible a symbolic representation of Eq. (10.74). First, a symbolic variable *z* needs to be defined.

>> z = sym('z');

The sym command is used to construct symbolic variables, objects, and numbers. Typing whos confirms that z is indeed a symbolic object. The syms command is a shorthand command for constructing symbolic objects. For example, syms z s is equivalent to the two instructions z = sym('z'); and s = sym('s');.

Next, a symbolic expression for X[z] needs to be constructed for the unit step input, x[n] = u[n]. The z-transform is computed by means of the ztrans command.

>> X = ztrans(sym('1'))
X = z/(z-1)

Several comments are in order. First, the ztrans command assumes a causal signal. For  $n \ge 0$ , u[n] has a constant value of 1. Second, the argument of ztrans needs to be a symbolic expression, even if the expression is a constant. Thus, a symbolic one sym('1') is required. Also note that continuous-time systems use Laplace transforms rather than z-transforms. In such cases, the laplace command replaces the ztrans command.

Construction of  $\mathbf{Q}[z]$  is now trivial.

Unfortunately, not all MATLAB functions work with symbolic objects. Still, the symbolic toolbox overloads many standard MATLAB functions, such as inv, to work with symbolic objects. Recall that overloaded functions have identical names but different behavior; proper function selection is typically determined by context.

The expression Q is somewhat unwieldy. The simplify command uses various algebraic techniques to simplify the result.

The resulting expression is mathematically equivalent to the original but notationally more compact.

Since  $\mathbf{D} = 0$ , the output Y[z] is given by  $Y[z] = \mathbf{CQ}[z]$ .

The corresponding time-domain expression is obtained by using the inverse *z*-transform command iztrans.

Like ztrans, the iztrans command assumes a causal signal, so the result implies multiplication by a unit step. That is, the system output is  $y[n] = (3(1/2)^n - 2(1/3)^n + 12)u[n]$ , which is equivalent to Eq. (10.69) derived in Ex. 10.13. Continuous-time systems use inverse Laplace transforms rather than inverse *z*-transforms. In such cases, the ilaplace command therefore replaces the iztrans command.

Following a similar procedure, it is a simple matter to compute the zero-input response  $y_{zir}[n]$ :

The zero-state response is given by

>> y\_zsr = y - y\_zir y\_zsr = 6\*(1/3)^n - 18\*(1/2)^n + 12

Typing iztrans(simplify(C\*inv(z\*eye(2)-A)\*B\*X)) produces the same result.

MATLAB plotting functions, such as plot and stem, do not directly support symbolic expressions. By using the subs command, however, it is easy to replace a symbolic variable with a vector of desired values.

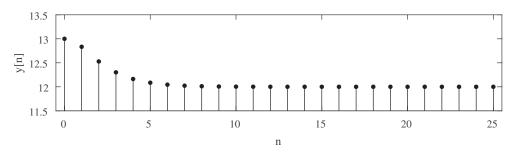


Figure 10.14 Output y[n] computed by using the symbolic math toolbox.

```
>> n = [0:25]; stem(n,subs(y,n),'k.');
>> xlabel('n'); ylabel('y[n]'); axis([-.5 25.5 11.5 13.5]);
```

Figure 10.14 shows the results, which are equivalent to the results obtained in Ex. 10.13. Although there are plotting commands in the symbolic math toolbox such as ezplot that plot symbolic expression, these plotting routines lack the flexibility needed to satisfactorily plot discrete-time functions.

#### **10.8-2** Transfer Functions from State-Space Representations

A system's transfer function provides a wealth of useful information. From Eq. (10.73), the transfer function for the system described in Ex. 10.13 is

```
>> H = collect(simplify(C*inv(z*eye(2)-A)*B+D))
H = (30*z - 6)/(6*z^2 - 5*z + 1)
```

It is also possible to determine the numerator and denominator transfer function coefficients from a state-space model by using the signal-processing toolbox function ss2tf.

>> [num,den] = ss2tf(A,B,C,D)
num = 0 5.0000 -1.0000
den = 1.0000 -0.8333 0.1667

The denominator of H[z] provides the characteristic polynomial

 $\gamma^2 - \frac{5}{6}\gamma + \frac{1}{6}$ 

Equivalently, the characteristic polynomial is the determinant of  $(z\mathbf{I} - \mathbf{A})$ .

```
>> syms gamma; char_poly = subs(det(z*eye(2)-A),z,gamma)
      char_poly = gamma^2 - (5*gamma)/6 + 1/6
```

Here, the subs command replaces the symbolic variable z with the desired symbolic variable gamma.

The roots command does not accommodate symbolic expressions. Thus, the sym2poly command converts the symbolic expression into a polynomial coefficient vector suitable for the roots command.

Taking the inverse z-transform of H[z] yields the impulse response h[n].

>> h = iztrans(H)
h = 18\*(1/2)^n - 12\*(1/3)^n - 6\*kroneckerDelta(n, 0)

As suggested by the characteristic roots, the characteristic modes of the system are  $(1/2)^n$  and  $(1/3)^n$ . Notice that the symbolic math toolbox represents  $\delta[n]$  as kroneckerDelta(n, 0). In general,  $\delta[n-a]$  is represented as kroneckerDelta(n-a, 0). This notation is frequently

encountered. Consider, for example, delaying the input x[n] = u[n] by 2, x[n-2] = u[n-2]. In the transform domain, this is equivalent to  $z^{-2}X[z]$ . Taking the inverse z-transform of  $z^{-2}X[z]$  yields

```
>> iztrans(z^(-2)*X)
ans = 1 - kroneckerDelta(n, 0) - kroneckerDelta(n - 1, 0)
```

That is, MATLAB represents the delayed unit step u[n-2] as  $(-\delta[n-1] - \delta[n-0] + 1)u[n]$ . The transfer function also permits convenient calculation of the zero-state response.

>> y\_zsr = iztrans(H\*X)
y\_zsr = 6\*(1/3)^n - 18\*(1/2)^n + 12

The result agrees with previous calculations.

#### 10.8-3 Controllability and Observability of Discrete-Time Systems

In their controllability and observability, discrete-time systems are analogous to continuous-time systems. For example, consider the LTID system described by the constant coefficient difference equation

$$y[n] + \frac{5}{6}y[n-1] + \frac{1}{6}y[n-2] = x[n] + \frac{1}{2}x[n-1]$$

Figure 10.15 illustrates the direct form II (DFII) realization of this system. The system input is x[n], the system output is y[n], and the outputs of the delay blocks are designated as state variables  $q_1[n]$  and  $q_2[n]$ .

The corresponding state and output equations (see Prob. 10.7-1) are

$$\mathbf{Q}[n+1] = \begin{bmatrix} q_1[n+1] \\ q_2[n+1] \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ -\frac{1}{6} & -\frac{5}{6} \end{bmatrix} \begin{bmatrix} q_1[n] \\ q_2[n] \end{bmatrix} + \begin{bmatrix} 0 \\ 1 \end{bmatrix} x[n] = \mathbf{A}\mathbf{Q}[n] + \mathbf{B}x[n]$$

and

$$\mathbf{y}[n] = \begin{bmatrix} -\frac{1}{6} & -\frac{1}{3} \end{bmatrix} \begin{bmatrix} q_1[n] \\ q_2[n] \end{bmatrix} + \mathbf{1}\mathbf{x}[n] = \mathbf{C}\mathbf{Q}[n] + \mathbf{D}\mathbf{x}[n]$$

To describe this system in MATLAB, the state matrices A, B, C, and D are first defined.

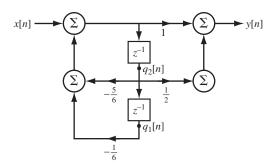


Figure 10.15 Direct form II realization of y[n] + (5/6)y[n-1] + (1/6)y[n-2] = x[n] + (1/2)x[n-1].

To assess the controllability and observability of this system, the state matrix **A** needs to be diagonalized.<sup>†</sup> As shown in Eq. (10.55), this requires a transformation matrix **P** such that

$$\mathbf{P}\mathbf{A} = \mathbf{\Lambda}\mathbf{P} \tag{10.75}$$

where  $\Lambda$  is a diagonal matrix containing the unique eigenvalues of A. Recall, the transformation matrix P is not unique.

To determine a matrix  $\mathbf{P}$ , it is helpful to review the eigenvalue problem. Mathematically, an eigendecomposition of  $\mathbf{A}$  is expressed as

$$AV = V\Lambda$$

where V is a matrix of eigenvectors and  $\Lambda$  is a diagonal matrix of eigenvalues. Pre- and post-multiplying both sides of this equation by V<sup>-1</sup> yields

$$\mathbf{V}^{-1}\mathbf{A}\mathbf{V}\mathbf{V}^{-1} = \mathbf{V}^{-1}\mathbf{V}\mathbf{\Lambda}\mathbf{V}^{-1}$$

Simplification yields

$$\mathbf{V}^{-1}\mathbf{A} = \mathbf{\Lambda}\mathbf{V}^{-1} \tag{10.76}$$

Comparing Eqs. (10.75) and (10.76), we see that a suitable transformation matrix **P** is given by an inverse eigenvector matrix  $V^{-1}$ .

The eig command is used to verify that A has the required distinct eigenvalues as well as compute the needed eigenvector matrix V.

Since the diagonal elements of Lambda are all unique, a transformation matrix P is given by

>> P = inv(V);

The transformed state matrices  $\hat{\mathbf{A}} = \mathbf{P}\mathbf{A}\mathbf{P}^{-1}$ ,  $\hat{\mathbf{B}} = \mathbf{P}\mathbf{B}$ , and  $\hat{\mathbf{C}} = \mathbf{C}\mathbf{P}^{-1}$  are easily computed by using transformation matrix **P**. Notice that matrix **D** is unaffected by state variable transformations.

<sup>&</sup>lt;sup>†</sup> This approach requires that the state matrix **A** have unique eigenvalues. Systems with repeated roots require that state matrix **A** be transformed into a modified diagonal form, also called the Jordan form. The MATLAB function jordan is used in these cases.

```
Bhat =
6.3246
6.7082
Chat =
-0.0527 -0.0000
```

The proper operation of **P** is verified by the correct diagonalization of **A**,  $\hat{\mathbf{A}} = \mathbf{\Lambda}$ . Since no row of  $\hat{\mathbf{B}}$  is zero, the system is controllable. Since, however, at least one column of  $\hat{\mathbf{C}}$  is zero, the system is not observable. These characteristics are no coincidence. The DFII realization, which is more descriptively called the controller canonical form, is always controllable but not always observable.

As a second example, consider the same system realized using the transposed direct form II structure (TDFII), as shown in Fig. 10.16. The system input is x[n], the system output is y[n], and the outputs of the delay blocks are designated as state variables  $v_1[n]$  and  $v_2[n]$ .

The corresponding state and output equations (see Prob. 10.7-2) are

$$\mathbf{V}[n+1] = \begin{bmatrix} v_1[n+1] \\ v_2[n+1] \end{bmatrix} = \begin{bmatrix} 0 & -\frac{1}{6} \\ 1 & -\frac{5}{6} \end{bmatrix} \begin{bmatrix} v_1[n] \\ v_2[n] \end{bmatrix} + \begin{bmatrix} -\frac{1}{6} \\ -\frac{1}{3} \end{bmatrix} x[n] = \mathbf{AV}[n] + \mathbf{B}x[n]$$

and

$$\mathbf{y}[n] = \begin{bmatrix} 0 & 1 \end{bmatrix} \begin{bmatrix} v_1[n] \\ v_2[n] \end{bmatrix} + \mathbf{1}\mathbf{x}[n] = \mathbf{C}\mathbf{V}[n] + \mathbf{D}\mathbf{x}[n]$$

To describe this system in MATLAB, the state matrices A, B, C, and D are defined.

To diagonalize A, a transformation matrix P is created.

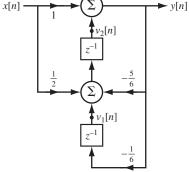


Figure 10.16 Transposed direct form II realization of y[n] + (5/6)y[n-1] + (1/6)y[n-2] = x[n] + (1/2)x[n-1].

The characteristic modes of a system do not depend on implementation, so the eigenvalues of the DFII and TDFII realizations are the same. However, the eigenvectors of the two realizations are quite different. Since the transformation matrix  $\mathbf{P}$  depends on the eigenvectors, different realizations can possess different observability and controllability characteristics.

Using transformation matrix **P**, the transformed state matrices  $\hat{\mathbf{A}} = \mathbf{P}\mathbf{A}\mathbf{P}^{-1}$ ,  $\hat{\mathbf{B}} = \mathbf{P}\mathbf{B}$ , and  $\hat{\mathbf{C}} = \mathbf{C}\mathbf{P}^{-1}$  are computed.

Again, the proper operation of **P** is verified by the correct diagonalization of **A**,  $\hat{\mathbf{A}} = \mathbf{\Lambda}$ . Since no column of  $\hat{\mathbf{C}}$  is zero, the system is observable. However, at least one row of  $\hat{\mathbf{B}}$  is zero, and therefore the system is not controllable. The TDFII realization, which is more descriptively called the observer canonical form, is always observable but not always controllable. It is interesting to note that the properties of controllability and observability are influenced by the particular realization of a system.

#### 10.8-4 Matrix Exponentiation and the Matrix Exponential

Matrix exponentiation is important to many problems, including the solution of discrete-time state-space equations. Equation (10.64), for example, shows that the state response requires matrix exponentiation,  $\mathbf{A}^n$ . For a square  $\mathbf{A}$  and specific *n*, MATLAB happily returns  $\mathbf{A}^n$  by using the  $\uparrow$  operator. From the system in Ex. 10.13 and n = 3, we have

The same result is also obtained by typing A\*A\*A.

Often, it is useful to solve  $\mathbf{A}^n$  symbolically. Noting  $\mathbf{A}^n = \mathcal{Z}^{-1}[(\mathbf{I} - z^{-1}\mathbf{A})^{-1}]$ , the symbolic toolbox can produce a symbolic expression for  $\mathbf{A}^n$ .

```
>> syms z n; An = simplify(iztrans(inv(eye(2)-z^(-1)*A)))
An =
[ 3*(1/3)^n - 2*(1/2)^n, 6*(1/2)^n - 6*(1/3)^n]
[ 1/3^n - 1/2^n, 3/2^n - 2/3^n]
```

Notice that this result is identical to Eq. (10.68), derived earlier. Substituting the case n = 3 into An provides a result that is identical to the one elicited by the previous A^n command.

For continuous-time systems, the matrix exponential  $e^{At}$  is commonly encountered. The expm command can compute the matrix exponential symbolically. Using the system from Ex. 10.8 yields

```
>> syms t; A = [-12 2/3;-36 -1]; eAt = simplify(expm(A*t))
eAt =
   [ -(exp(-9*t)*(3*exp(5*t) - 8))/5, (2*exp(-9*t)*(exp(5*t) - 1))/15]
   [ -(36*exp(-9*t)*(exp(5*t) - 1))/5, (exp(-9*t)*(8*exp(5*t) - 3))/5]
```

This result is identical to the result computed in Ex. 10.8. Similar to the discrete-time case, an identical result is obtained by typing syms s; simplify(ilaplace(inv(s\*eye(2)-A))).

For a specific *t*, the matrix exponential is also easy to compute, either through substitution or direct computation. Consider the case t = 3.

The command expm(A\*3) produces the same result.

#### **10.9 SUMMARY**

An Nth-order system can be described in terms of N key variables—the state variables of the system. The state variables are not unique; rather, they can be selected in a variety of ways. Every possible system output can be expressed as a linear combination of the state variables and the inputs. Therefore, the state variables describe the entire system, not merely the relationship between certain input(s) and output(s). For this reason, the state variable description is an internal description of the system. Such a description is therefore the most general system description, and it contains the information of the external descriptions, such as the impulse response and the transfer function. The state variable description can also be extended to time-varying parameter systems and nonlinear systems. An external description of a system may not characterize the system completely.

The state equations of a system can be written directly from knowledge of the system structure, from the system equations, or from the block diagram representation of the system. State equations consist of a set of N first-order differential equations and can be solved by time-domain or frequency-domain (transform) methods. Suitable procedures exist to transform one given set of state variables into another. Because a set of state variables is not unique, we can have an infinite variety of state-space descriptions of the same system. The use of an appropriate transformation allows us to see clearly which of the system states are controllable and which are observable.

#### REFERENCES

- 1. Kailath, Thomas. Linear Systems. Prentice-Hall, Englewood Cliffs, NJ, 1980.
- 2. Zadeh, L., and C. Desoer. Linear System Theory. McGraw-Hill, New York, 1963.

3Ω

### PROBLEMS

- **10.1-1** Convert each of the following second-order differential equations into a set of two first-order differential equations (state equations). State which of the sets represent non-linear equations.
  - (a)  $\ddot{y} + 10\dot{y} + 2y = x$

 $\frac{1}{2}$ F

Figure P10.2-1

10.2-3

- (b)  $\ddot{y} + 2e^y\dot{y} + \log y = x$
- (c)  $\ddot{y} + \phi_1(y)\dot{y} + \phi_2(y)y = x$
- **10.2-1** Write the state equations for the *RLC* network in Fig. P10.2-1.

10.2-2 Write the state and output equations for the


Write the state and output equations for the

network in Fig. P10.2-2.

network in Fig. P10.2-3.

 $2 \Omega$ 

1 H

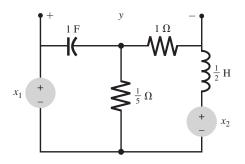



**10.2-4** Write the state and output equations for the electrical network in Fig. P10.2-4.



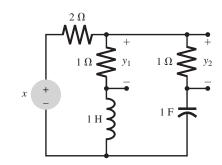


Figure P10.2-4

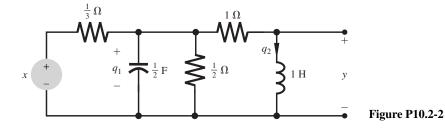

**10.2-5** Write the state and output equations for the network in Fig. P10.2-5.

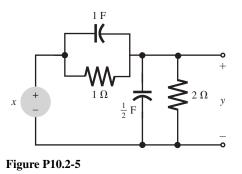

**10.2-6** Write the state and output equations of the system shown in Fig. P10.2-6.

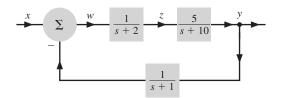


Figure P10.2-6

**10.2-7** Write the state and output equations of the system shown in Fig. P10.2-7.

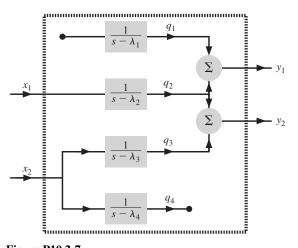


Figure P10.2-7

10.2-8 For a system specified by the transfer function

$$H(s) = \frac{3s+10}{s^2+7s+12}$$

write sets of state equations for DFII and its transpose, cascade, and parallel forms. Also write the corresponding output equations.

10.2-9 Repeat Prob. 10.2-8 for  
(a)  

$$H(s) = \frac{4s}{(s+1)(s+2)^2}$$
  
(b)  
 $H(s) = \frac{s^3 + 7s^2 + 12s}{(s+1)^3(s+2)}$ 

**10.3-1** Find the state vector  $\mathbf{q}(t)$  by using the Laplace transform method if

$$\dot{\mathbf{q}} = \mathbf{A}\mathbf{q} + \mathbf{B}\mathbf{x}$$

where

$$\mathbf{A} = \begin{bmatrix} 0 & 2 \\ -1 & -3 \end{bmatrix} \qquad \mathbf{B} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}$$
$$\mathbf{q}(0) = \begin{bmatrix} 2 \\ 1 \end{bmatrix} \qquad x(t) = 0$$

10.3-2 Repeat Prob. 10.3-1 for

$$\mathbf{A} = \begin{bmatrix} -5 & -6 \\ 1 & 0 \end{bmatrix} \qquad \mathbf{B} = \begin{bmatrix} 1 \\ 0 \end{bmatrix}$$
$$\mathbf{q}(0) = \begin{bmatrix} 5 \\ 4 \end{bmatrix} \qquad x(t) = \sin 100t$$

10.3-3 Repeat Prob. 10.3-1 for

$$\mathbf{A} = \begin{bmatrix} -2 & 0\\ 1 & -1 \end{bmatrix} \qquad \mathbf{B} = \begin{bmatrix} 1\\ 0 \end{bmatrix}$$
$$\mathbf{q}(0) = \begin{bmatrix} 0\\ -1 \end{bmatrix} \qquad x(t) = u(t)$$

10.3-4 Repeat Prob. 10.3-1 for

$$\mathbf{A} = \begin{bmatrix} -1 & 1 \\ 0 & -2 \end{bmatrix} \quad \mathbf{B} = \begin{bmatrix} 1 & 1 \\ 0 & 1 \end{bmatrix}$$
$$\mathbf{q}(0) = \begin{bmatrix} 1 \\ 2 \end{bmatrix} \quad \mathbf{x} = \begin{bmatrix} u(t) \\ \delta(t) \end{bmatrix}$$

**10.3-5** Use the Laplace transform method to find the response *y* for

$$\dot{\mathbf{q}} = \mathbf{A}\mathbf{q} + \mathbf{B}\mathbf{x}(t)$$
  
 $y = \mathbf{C}\mathbf{q} + \mathbf{D}\mathbf{x}(t)$ 

where

$$\mathbf{A} = \begin{bmatrix} -3 & 1 \\ -2 & 0 \end{bmatrix} \qquad \mathbf{B} = \begin{bmatrix} 1 \\ 0 \end{bmatrix}$$
$$\mathbf{C} = \begin{bmatrix} 0 & 1 \end{bmatrix} \qquad \mathbf{D} = 0$$

and

$$x(t) = u(t) \qquad \mathbf{q}(0) = \begin{bmatrix} 2\\ 0 \end{bmatrix}$$

**10.3-6** Repeat Prob. 10.3-5 for

$$\mathbf{A} = \begin{bmatrix} -1 & 1 \\ -1 & -1 \end{bmatrix} \quad \mathbf{B} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}$$
$$\mathbf{C} = \begin{bmatrix} 1 & 1 \end{bmatrix} \quad \mathbf{D} = 1$$
$$x(t) = u(t) \qquad \mathbf{q}(0) = \begin{bmatrix} 2 \\ 1 \end{bmatrix}$$

**10.3-7** The transfer function H(s) in Prob. 10.2-8 is realized as a cascade of  $H_1(s)$  followed by  $H_2(s)$ , where

$$H_1(s) = \frac{1}{s+3}$$
$$H_2(s) = \frac{3s+10}{s+4}$$

Let the outputs of these subsystems be state variables  $q_1$  and  $q_2$ , respectively. Write the state equations and the output equation for this system and verify that  $\mathbf{H}(s) = \mathbf{C}\boldsymbol{\phi}(s)\mathbf{B} + \mathbf{D}$ .

- **10.3-8** Find the transfer function matrix  $\mathbf{H}(s)$  for the system in Prob. 10.3-5.
- **10.3-9** Find the transfer function matrix  $\mathbf{H}(s)$  for the system in Prob. 10.3-6.
- **10.3-10** Find the transfer function matrix  $\mathbf{H}(s)$  for the system

$$\dot{\mathbf{q}} = \mathbf{A}\mathbf{q} + \mathbf{B}\mathbf{x}$$
  
 $y = \mathbf{C}\mathbf{q} + \mathbf{D}\mathbf{x}$ 

where

$$\mathbf{A} = \begin{bmatrix} 0 & 1 \\ -1 & -2 \end{bmatrix} \quad \mathbf{B} = \begin{bmatrix} 0 & 1 \\ 1 & 0 \end{bmatrix} \quad \mathbf{x} = \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix}$$

$$\mathbf{C} = \begin{bmatrix} 1 & 2\\ 4 & 1\\ 1 & 1 \end{bmatrix} \qquad \mathbf{D} = \begin{bmatrix} 0 & 0\\ 0 & 0\\ 1 & 0 \end{bmatrix}$$

- **10.3-11** Repeat Prob. 10.3-1, using the time-domain method.
- **10.3-12** Repeat Prob. 10.3-2, using the time-domain method.
- **10.3-13** Repeat Prob. 10.3-3, using the time-domain method.
- **10.3-14** Repeat Prob. 10.3-4, using the time-domain method.
- **10.3-15** Repeat Prob. 10.3-5, using the time-domain method.
- **10.3-16** Repeat Prob. 10.3-6, using the time-domain method.
- **10.3-17** Find the unit impulse response matrix  $\mathbf{h}(t)$  for the system in Prob. 10.3-7, using Eq. (10.45).
- **10.3-18** Find the unit impulse response matrix  $\mathbf{h}(t)$  for the system in Prob. 10.3-6.
- **10.3-19** Find the unit impulse response matrix  $\mathbf{h}(t)$  for the system in Prob. 10.3-10.
- **10.4-1** The state equations of a certain system are given as

$$\dot{q}_1 = q_2 + 2x$$
$$\dot{q}_2 = -q_1 - q_2 + x$$

Define a new state vector **w** such that

$$w_1 = q_2$$
$$w_2 = q_2 - q_1$$

Find the state equations of the system with  $\mathbf{w}$  as the state vector. Determine the characteristic roots (eigenvalues) of the matrix  $\mathbf{A}$  in the original and the transformed state equations.

**10.4-2** The state equations of a certain system are

$$\dot{q}_1 = q_2$$
  
 $\dot{q}_2 = -2q_1 - 3q_2 + 2x$ 

(a) Determine a new state vector w (in terms of vector q) such that the resulting state equations are in diagonalized form.

(b) For output **y** given by

$$y = Cq + Dx$$

where

$$\mathbf{C} = \begin{bmatrix} 1 & 1 \\ -1 & 2 \end{bmatrix} \qquad \mathbf{D} = 0$$

determine the output **y** in terms of the new state vector **w**.

#### 10.4-3 Given a system

$$\dot{\mathbf{q}} = \begin{bmatrix} 0 & 1 & 0 \\ 0 & 0 & 1 \\ 0 & -2 & -3 \end{bmatrix} \mathbf{q} + \begin{bmatrix} 0 \\ 0 \\ 1 \end{bmatrix} x$$

determine a new state vector  $\mathbf{w}$  such that the state equations are diagonalized.

**10.4-4** The state equations of a certain system are given in diagonalized form as

$$\dot{\mathbf{q}} = \begin{bmatrix} -1 & 0 & 0 \\ 0 & -3 & 0 \\ 0 & 0 & -2 \end{bmatrix} \mathbf{q} + \begin{bmatrix} 1 \\ 1 \\ 1 \end{bmatrix} x$$


The output equation is given by

$$\mathbf{y} = \begin{bmatrix} 1 & 3 & 1 \end{bmatrix} \mathbf{q}$$

Determine the output y for

$$\mathbf{q}(0) = \begin{bmatrix} 1\\2\\1 \end{bmatrix} \qquad x(t) = u(t)$$

10.5-1 Write the state equations for the systems depicted in Fig. P10.5-1. Determine a new state vector w such that the resulting state equations are in diagonalized form. Write the output y in terms of w. Determine in each case whether the system is controllable and observable.

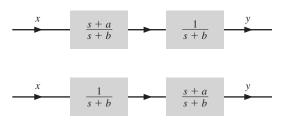

#### Figure P10.5-1

10.6-1 An LTI discrete-time system is specified by

$$\mathbf{A} = \begin{bmatrix} 2 & 0 \\ 1 & 1 \end{bmatrix} \qquad \mathbf{B} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}$$
$$\mathbf{C} = \begin{bmatrix} 0 & 1 \end{bmatrix} \qquad \mathbf{D} = \begin{bmatrix} 1 \end{bmatrix}$$

and

$$\mathbf{q}(0) = \begin{bmatrix} 2\\1 \end{bmatrix} \qquad x[n] = u[n]$$

- (a) Find the output y[n], using the time-domain method.
- (b) Find the output *y*[*n*], using the frequency-domain method.
- **10.6-2** An LTI discrete-time system is specified by the difference equation

$$y[n+2] + y[n+1] + 0.16y[n]$$
  
=  $x[n+1] + 0.32x[n]$ 

- (a) Show the DFII, its transpose, cascade, and parallel realizations of this system.
- (b) Write the state and the output equations from these realizations, using the output of each delay element as a state variable.
- 10.6-3 Repeat Prob. 10.6-2 for

$$y[n+2] + y[n+1] - 6y[n] = 2x[n+2] + x[n+1]$$

- **10.7-1** Verify the state and output equations for the LTID system shown in Fig. 10.15.
- **10.7-2** Verify the state and output equations for the LTID system shown in Fig. 10.16.

### INDEX

Abscissa of convergence, 336 Accumulator systems, 259, 295, 519 discrete-time Fourier transform of, 875-76 Active circuits, 382-85 Adders, 388, 396, 399, 403 Addition of complex numbers, 11-12 of matrices, 38 of sinusoids, 18-20 Additivity, 97-98 Algebra of complex numbers, 5-15 matrix, 38-42 Aliasing, 536-38, 788-95, 805, 811-12, 817, 834 defined, 536 general condition for in sinusoids, 793-96 treachery of, 788-91 verification of in sinusoids, 792-93 Aliasing error, 659, 811 Amplitude, 16 Amplitude modulation, 711-13, 736-49, 762 Amplitude response, 413, 416-17, 421, 424, 435, 437-38, 440-42 Amplitude spectrum, 598, 607, 615-25, 667, 668, 707, 848, 870, 878 Analog filters, 261 Analog signals, 133 defined, 78 digital processing of, 547-54 properties of, 78 Analog systems, 109, 135, 261 Analog-to-digital (A/D) conversion, 799-802, 831 Analog-to-digital converters (ADC) bit number, 801-2 bit rate, 801-2 Angle modulation, 736, 763 Angles electronic calculators in computing, 8-11 principal value of, 9 Angular acceleration, 116 Angular position, 116 Angular velocity, 116

Anti-aliasing filters, 537, 791, 834 Anti-causal exponentials, 862-63 Anti-causal signals, 81 Aperiodic signals, 133 discrete-time Fourier integral and, 855-67 Fourier integral and, 680-89, 762 properties of, 78-82 Apparent frequency, 534-36, 792-96 Ars Magna (Cardano), 2-5 Associative property, 171, 283 Asymptotic stability. See Internal stability. Audio signals, 713-14, 725, 746 Automatic position control system, 406-8 Auxiliary conditions, 153 differential equation solution and, 161 Backward difference system, 258, 295, 519, 568-69 Bandlimited signals, 533, 788, 792, 802 Bandpass filters, 441-43, 542-44, 749, 882-83, 896 group delay and, 726-27 ideal, 730-31, 882-83 poles and zeros of H(s) and, 443 Bandstop filters, 441-42, 445, 545-46 Bandwidth, 628 continuous-time systems and, 208-10 data truncation and, 751-53 essential, 736, 758-59 Fourier transform and, 692, 706, 762-63 Bartlett window, 753-55 Baseband signals, 737-40, 746-47, 749 Basis signals, 651, 655, 668 Basis vectors, 648 Beat effect, 741 Bhaskar, 2 Bilateral Laplace transform, 330, 335-37, 445-55, 467 properties of, 451-55 Bilateral z-transform, 431, 490, 554-63 in discrete-time system analysis, 563 properties of, 559-60 Bilinear transformation, 569-70 Binary digital signals, 799 Black box, 95, 119, 120

Blackman window, 755, 761 Block diagrams, 386-88, 405, 407, 408, 519 Bôcher, M., 620-21 Bode plots, 419-35 constant of, 421 first-order pole and, 424-27 pole at the origin and, 422-23 second-order pole and, 426-35 Bombelli, Raphael, 3 Bonaparte, Napoleon, 347, 610-11 Bounded-input/bounded-output (BIBO) stability, 110, 135, 263 of continuous-time systems, 196-97, 199-203, 222-23 of discrete-time systems, 298-99, 301-4, 314, 526, 527 frequency response and, 412-13 internal stability relationship to, 199-203, 301-4 of the Laplace transform, 371-73 signal transmission and, 721 steady-state response and, 418 of the z-transform, 518 Butterfly signal flow graph, 825 Butterworth filters, 440, 551-54 cascaded second-order sections for Butterworth filter realization, 461-63 MATLAB on, 459-63 transformation of, 571-72

Canonic direct realization. See Direct form II realization Cardano, Gerolamo, 2-5 Cartesian form, 8-15 Cascade realization, 394, 526, 920, 923 Cascade systems, 190, 192, 372-73 Cascaded RC filters, 461-62 Causal exponentials, 861-62 Causal signals, 81, 83, 134 Causal sinusoidal input in continuous-time systems, 418-19 in discrete-time systems, 527 Causal systems, 104-6, 135, 263 properties of, 104-6 zero-state response and, 172, 283 Cayley-Hamilton theorem, 910-12 Characteristic equations of continuous-time systems, 153-55 of discrete-time systems, 271, 273, 309 of a matrix, 910-12, 933 Characteristic functions, 192 Characteristic modes of continuous-time systems, 153-55, 162-65, 167, 170, 196, 198-99, 203-6 of discrete-time systems, 271-74, 278-79, 297-301, 305, 313 Characteristic polynomials of continuous-time systems, 153-56, 164, 166, 202-3, 220 of discrete-time systems, 271, 274-75, 279, 303-4 of the Laplace transform, 371-72 of the z-transform, 518

Characteristic roots of continuous-time systems, 153-56, 162, 166, 198-203, 206, 209, 211-12, 214-17, 222-24 of discrete-time systems, 271, 273-75, 297, 299-301, 303-5, 309.314 invariance of, 942-43 of a matrix, 911, 932-33 Characteristic values. See Characteristic roots Characteristic vectors, 910 Chebyshev filters, 440, 463-66 Circular convolution, 819-20, 821 Clearing fractions, 26-27, 32-33, 342-43 Closed Loop systems. See Feedback systems Coherent demodulation. See Synchronous demodulation Coefficients of Fourier series, computation, 595-98 Column vectors, 36 Commutative property of the convolution integral, 170, 173, 181, 191-92 of the convolution sum, 283 Compact disc (CD), 801 Compact form of Fourier series, 597-98, 599, 600, 604-7 Complex factors of Q(x), 29 Complex frequency, 89-91 Complex inputs, 177, 297 Complex numbers, 1-15, 54 algebra of, 5-15 arithmetical operations for, 12-15 conjugates of, 6-7 historical note, 1-5 logarithms of, 15 origins of, 2-5 standard forms of, 14-15 useful identities, 7-8 working with, 13-14 Complex poles, 395, 432, 497, 542 Complex roots, 154-56, 274-76 Complex signals, 94-95 Conjugate symmetry of the discrete Fourier transform, 818-19 of the discrete-time Fourier transform, 858-59, 867-68 of the Fourier transform, 684, 703 Conjugation, 684, 703 Constants, 54, 98, 100, 103, 130, 422 Constant-parameter systems. See Time-invariant systems Continuous functions, 858 Continuous-time filters, 455-63 Continuous-time Fourier transform (CTFT), 867, 884-85 Continuous-time signals, 107-8, 135 defined, 78 discrete-time systems and, 238 Fourier series and, 593-679 Fourier transform and, 678-769, 680-775 Continuous-time systems, 135, 150-236 analog systems compared with, 261

differential equations of, 161, 196, 213

discrete-time systems compared with, 261 external input, response to, 168-96 frequency response of, 412-18, 732-33 internal conditions, response to, 151-63 intuitive insights into, 189-90, 203-5 Laplace transform, 330-487 Periodic inputs and, 637-641 properties of, 107-8 signal transmission through, 721-29 stability of, 196-203, 222-23 state equations for, 915-16 Control systems, 404-12 analysis of, 406-12 design specifications, 411 step input and, 407-9 Controllability/observability, 123-24 of continuous-time systems, 197, 200-2, 223 of discrete-time systems, 303, 965-68 in state-space analysis, 947-53, 961 Convergence abscissa of, 336 of Fourier series, 613-14 to the mean, 613, 614 region of. See region of convergence Convolution, 507-9 with an impulse, 283 of the bilateral z-transform, 560 circular, 819-20, 821 discrete-time, 311-12 fast, 821, 886 frequency. See Frequency convolution of the Fourier transform, 714-16 linear, 821 periodic, 886 time. See Time convolution Convolution integral, 170-93, 222, 282, 288, 313, 722 explanation for use, 189-90 graphical understanding of, 178-90, 217-20 properties of, 170-72 Convolution sum, 282-86, 313 graphical procedure for, 288-93 properties of, 282-83 from a table, 285-86 Convolution table, 175-76 Cooley, J. W., 824 Corner frequency, 424 Cramer's rule, 23-25, 40, 51, 379, 385 Critically damped systems, 409, 410 Cubic equations, 2-3, 58 Custom filter function, 310-11 Cutoff frequency, 208, 209

Damping coefficient, 115–18 Dashpots linear, 115 torsional, 116 Data truncations, 749-55, 763 Decades, 422 Decibels, 421 Decimation-in-frequency algorithm, 824, 827 Decimation-in-time algorithm, 825-27 Decomposition, 99-100, 151 Delayed impulse, 168 Demodulation, 714 of amplitude modulation, 744-46 of DSB-SC signals, 739-41 synchronous, 743-44 Depressed cubic equation, 58 Derivative formulas, 56 Descartes, René, 2 Detection. See Demodulation Deterministic signals, 82, 134 Diagonal matrices, 37 Difference equations, 259-60, 265-70 causality condition in, 265-66 classical solution of, 298 differential equation kinship with, 260 frequency response, 532 order of, 260 recursive and non-recursive forms of, 259 recursive solution of, 266-70 sinusoidal response of difference equation systems, 528 z-transform solution of, 488, 510-19, 574 Differential equations, 161 classical solution of, 196 difference equation kinship with, 260 Laplace transform solution of, 346-48, 360-73 Differentiators digital, 256-58 ideal, 369-71, 373, 416-17 Digital differentiator example, 258-59 Digital filters, 108, 238, 261-62 Digital integrators, 258-59 Digital processing of analog signals, 547-53 Digital signals, 135, 797-99 advantages of, 261-62 binary, 799-801 defined, 78 L-ary, 799 properties of, 78 See also Analog-to-digital conversion Digital systems, 109, 135, 261 Dirac definition of an impulse, 88, 134 Dirac delta train, 696-97 Dirac, P.A.M., 86 Direct discrete Fourier transform (DFT), 808, 857 Direct form I (DFI) realization Laplace transform and, 390-91, 394 z-transform and, 521 See also Transposed direct form II realization

#### 978 Index

Direct form II (DFII) realization, 920-25, 954, 965, 967 Laplace transform and, 391, 398 z-transform and, 520-22, 525 Direct Fourier transform, 683, 702-3, 762 Direct z-transform, 488-592 Dirichlet conditions, 612, 614, 686 Discrete Fourier transform (DFT), 659, 805-23, 827-34, 835 aliasing and leakage and, 805-6 applications of, 820-23 computing Fourier transform, 812-18 derivation of, 807-10 determining filter output, 822-23 direct. 808, 857 discrete-time Fourier transform and, 885-86, 898 inverse, 808, 835, 857 MATLAB on, 827-34 picket fence effect and, 807 points of discontinuity, 807 properties of, 818-20 zero padding and, 810-11, 829-30 Discrete-time complex exponentials, 252 Discrete-time convolution, 311-12 Discrete-time exponentials, 247-49 Discrete-time Fourier integral, 855-67 Discrete-time Fourier series (DTFS), 845-55 computation of, 885-86 MATLAB on, 889-97 of periodic gate function, 853-55 periodic signals and, 846-47, 898 of sinusoids, 849-52 Discrete-time Fourier transform (DTFT), 857-88 of accumulator systems, 875-76 of anti-causal exponentials, 862-63 of causal exponentials, 861-62 continuous-time Fourier transform and, 883-86 existence of, 859, 886 inverse, 886 linear time-invariant discrete-time system analysis by, 879-80 MATLAB on, 889-97 physical appreciation of, 859 properties of, 867-78 of rectangular pulses, 863-65 table of, 860 z-transform connection with, 866-67, 886-88, 898 Discrete-time signals, 78, 79, 107-8, 133, 237-53 defined, 78 Fourier analysis of, 845-907 inherently bandlimited, 533 size of, 238-40 useful models, 245-53 useful operations, 240-45 Discrete-time systems, 135, 237-329 classification of, 262-64 controllability/observability of, 303, 965-68 difference equations of, 259-60, 265-70, 298

discrete-time Fourier transform analysis of, 878-83 examples of, 253-65 external input, response to, 280-98 frequency response of, 526-38 internal conditions, response to, 270-76 intuitive insights into, 305-6 properties of, 107-8, 264-65 stability of, 263, 298-305, 314 state-space analysis of, 953-64 z-transform analysis of, 488-592 Distinct factors of Q(x), 27 Distortionless transmission, 724-28, 730, 763, 880-82 bandpass systems and, 726-27, 881-82 measure of delay variation, 881 Distributive property, 171, 283 Division of complex numbers, 12-14 Double-sideband, suppressed-carrier (DSB-SC) modulation, 737-41, 742, 746-49 Downsampling, 243-44 Duality, 703-4 Dynamic systems, 103-4, 134-35, 263

Eigenfunctions, 193 Eigenvalues. See Characteristic roots Eigenvectors, 910 Einstein, Albert, 348 Electrical systems, 95-96, 111-14 Laplace transform analysis of, 373-85, 467 state equations for, 916-19 Electromechanical systems, 118-19 Electronic calculators, 8-11 Energy signals, 67, 82, 134, 239-40 Energy spectral density, 734, 763 Envelope delay. See Group delay Envelope detector, 743-45 Equilibrium states, 196, 198 Error signals, 650-51 Error vectors, 642 Essential bandwidth, 736, 758-59 Euler, Leonhard, 2, 3 Euler's formula, 5-6, 45, 252 Even component of a signal, 93-95 Even functions, 92-93, 134 Everlasting exponentials continuous-time systems and, 189, 193-95, 222 discrete-time systems and, 296-97, 313 Fourier series and, 637, 638, 641 Fourier transform and, 687 Laplace transform and, 367-68, 412, 419 Everlasting signals, 81, 134 Exponential Fourier series, 621-37, 661, 803 periodic inputs and, 637-41 reasons for using, 640 symmetry effect on, 630-32

Exponential Fourier spectra, 624-32, 664, 667, 668 Exponential functions, 89-91, 134 Exponential input, 193, 296 Exponentials computation of matrix, 922-913 discrete-time, 247-49 discrete-time complex, 252 everlasting. See Everlasting exponentials matrix. 968-69 monotonic, 20-22, 90, 91, 134 sinusoid varying, 22-23, 90, 134 sinusoids expressed in, 20 Exposition du système du monde (Laplace), 346 External description of a system, 119-20, 135 External input continuous-time system response to, 168-96 discrete-time system response to, 280-98 External stability. See Bounded-input/bounded-output stability Fast convolution, 821, 886 Fast Fourier transform (FFT), 659, 811, 821, 824-27, 835 computations reduced by, 824 discrete-time Fourier series and, 847 discrete-time Fourier transform and, 885-86, 898 Feedback systems Laplace transform and, 386-88, 392-95, 399, 404-12 z-transform and, 521 Feedforward connections, 392-94, 403 Filtering discrete Fourier transform and, 821-23 MATLAB on. 308-10 selective, 748-49 time constant and, 207-8 Filters analog, 261 anti-aliasing, 537, 791, 834 bandpass, 441-43 bandstop, 441-42, 445, 545-46 Butterworth. See Butterworth Filters cascaded RC, 461-62 Chebyshev, 440, 463-66 continuous-time, 455-63 custom function, 310-11 digital, 108, 238, 261-62 finite impulse response, 524, 892-97 first-order hold, 785 frequency response of, 412-18 highpass, 443, 445, 542, 730-31, 882-83 Ideal. See Ideal filters impulse invariance criterion of, 548 infinite impulse response, 524, 565-74 lowpass, 439-41 lowpass. See Lowpass filters notch, 441-43, 540, 545-46

poles and zeros of H(s) and, 436–45 practical, 444-45, 882-83 sharp cutoff, 748 windows in design of, 755 zero-order hold, 785 Final value theorem, 359-61, 508 Finite impulse response (FIR) filters, 524, 892-97 Finite-duration signals, 333 Finite-memory systems, 104 First-order factors, method of, 497 First-order hold filters, 785 Folding frequency, 789-91, 793, 795, 817 For-loops, 216-18 Forced response difference equations and, 298 differential equations and, 198 Forward amplifiers, 405-6 Fourier integral, 722 aperiodic signal and, 680-89, 762 discrete-time, 855-67 Fourier series, 593-679 compact form of, 597-98, 599, 600, 604-7 computing the coefficients of, 595–98 discrete time. See Discrete-time Fourier series existence of, 612-13 exponential. See Exponential Fourier series generalized, 641-59, 668 Legendre, 656-57 limitations of analysis method, 641 trigonometric. See Trigonometric Fourier series waveshaping in, 615-17 Fourier spectrum, 598-607, 777 exponential, 624-32, 664, 667, 668 nature of, 858-59 of a periodic signal, 848-55 Fourier transform, 680-755, 778, 802-3 continuous-time, 867, 883-86 discrete. See Discrete Fourier transform discrete-time. See Discrete-time Fourier transform direct, 683, 702-3, 762 existence of. 685–86 fast. See fast Fourier transform interpolation and, 785 inverse, 683, 693-95, 699, 762, 786-87 physical appreciation of, 687-89 properties of, 701-21 useful functions of, 689-701 Fourier transform pairs, 683, 700 Fourier, Baron Jean-Baptiste-Joseph, 610-12 Fractions, 1-2 clearing, 26-27, 32-34, 342-43 partial. See Partial fractions Frequency apparent, 534-36, 793-94 complex, 89-91

Frequency (continued) corner, 424 cutoff, 208, 209 folding, 789-91, 793, 795, 817 fundamental, 594, 609-10, 846 negative, 626-28 neper, 91 radian, 16, 91, 594 reduction in range, 535 of sinusoids, 16 time delay variation with, 724-25 Frequency convolution of the bilateral Laplace transform, 452 of the discrete-time Fourier transform, 875-76 of the Fourier transform, 714-16 of the Laplace transform, 357 Frequency differentiation, 869 Frequency domain analysis, 368, 722-23, 848 of electrical networks, 374-78 of the Fourier series, 598, 601 two-dimensional view and, 732-33 See also Laplace transform Frequency inversion, 706 Frequency resolution, 807, 810-12, 815, 817 Frequency response, 724 Bode plots and, 419-22 of continuous-time systems, 412-18, 732-33 of discrete-time systems, 526-38 MATLAB on, 456-57, 531-32 periodic nature of, 532-36 from pole-zero location, 538-47 pole-zero plots and, 566-68 poles and zeros of H(s) and, 436–39 transfer function from, 435 Frequency reversal, 868-69 Frequency shifting of the bilateral Laplace transform, 451 of the discrete Fourier transform, 819 of the discrete-time Fourier transform, 871-74 of the Fourier transform, 711-13 of the Laplace transform, 353-54 Frequency spectra, 598, 601 Frequency-division multiplexing (FDM), 714, 749-50 Function M-files, 214-15 Functions characteristic, 193 continuous, 858 even, 92-93, 134 exponential, 89-91, 134 improper, 25-26, 34 interpolation, 690 MATLAB on, 126-33 odd, 92-95, 134 proper, 25-27

rational, 25–29, 338 singularity, 89 Fundamental band, 533, 534, 537, 793 Fundamental frequency, 594, 609–10, 846 Fundamental period, 79, 133, 239–40, 593, 595, 846

Gain enhancement by poles, 437–38 Gauss, Karl Friedrich, 3–4 Generalized Fourier series, 641–59, 668 Generalized linear phase (GLP), 726–27 Gibbs phenomenon, 619–21, 661–63 Gibbs, Josiah Willard, 620–21 Graphical interpretation of convolution integral, 178–90, 217–20 of convolution sum, 288–93 Greatest common factor of frequencies, 609–10 Group delay, 725–28, 881

#### H(s)

filter design and, 436–45 realization of, 548–49 *See also* Transfer functions Half-wave symmetry, 608 Hamming window, 754–55, 761 Hardware realization, 64, 95, 133 Harmonic distortion, 634 Harmonically related frequencies, 609 Heaviside "cover-up" method, 27–30, 33–35, 341, 342–43, 497 Heaviside, Oliver, 347–48, 612 Highpass filters, 443, 445, 542, 745, 747, 882–83 Homogeneity, 97–98

Ideal delay, 369, 416 Ideal differentiators, 369-71, 373, 416-17 Ideal filters, 730-33, 763, 785, 791, 834, 882-83 Ideal integrators, 369, 370, 373, 400, 416-18 Ideal interpolation, 786-87 Ideal linear phase (ILP), 725, 727 Ideal masses, 114 Identity matrices, 37 Identity systems, 109, 192, 263 Imaginary numbers, 1-5 Impedance, 374-77, 379, 380, 382, 384, 387, 399 Improper functions, 25-26, 34 Impulse invariance criterion of filter design, 548 Impulse matching, 164-66 Impulse response matrix, 938 Indefinite integrals, 57 Indicator function. See Relational operators Inertia, moment of, 116-18 Infinite impulse response (IIR) filters, 524, 565-74 Information transmission rate, 209-10

Initial conditions, 97-100, 102, 122, 134, 335 at  $0^{-}$  and  $0^{+}$ , 363-64 continuous-time systems and, 158-61 generators of, 376-83 Initial value theorem, 359-61, 508 Input, 64 complex, 177, 297 exponential, 193, 296 external. See External input in linear systems, 97 multiple, 178, 287-88 ramp, 410-11 sinusoidal. See Sinusoidal input step, 407-10 Input-output description, 111-19 Instantaneous systems, 103-4, 134, 263 Integrals convolution. See Convolutional integral discrete-time Fourier, 855-67 Fourier. See Fourier integral indefinite, 57 of matrices, 909-10 Integrators digital, 258-59 ideal, 369, 370, 373, 400, 416-18 system realization and, 400 Integro-differential equations, 360-73, 466, 488 Interconnected systems continuous-time, 190-93 discrete-time, 294-97 Internal conditions continuous-time system response to, 151-63 discrete-time system response to, 270-76 Internal description of a system, 119-21, 135, 908 See also State-space description of a system Internal stability, 110, 135, 263 BIBO relationship to, 199-203, 301-4 of continuous-time systems, 196-203, 222-23 of discrete-time systems, 298-302, 305, 314, 526, 527 of the Laplace transform, 372 of the z-transform, 518 Interpolation, 785-88 of discrete-time signals, 243-44 ideal, 786-87 simple, 785-86 spectral, 804 Interpolation formula, 779, 787 Interpolation function, 690 Intuitive insights into continuous-time systems, 189-90, 203-12 into discrete-time systems, 305-6 into the Laplace transform, 367-68 Inverse continuous-time systems, 192-93 Inverse discrete Fourier transform (IDFT), 808, 827, 857 Inverse discrete-time Fourier transform (IDTFT), 886 of rectangular spectrum, 865-66 Inverse discrete-time systems, 294-95 Inverse Fourier transform, 683, 693-95, 699, 762, 786-87 Inverse Laplace transform, 333, 335, 445, 549 finding, 338-46 Inverse z-transform, 488-89, 491, 499, 500, 501, 510, 554, 555, 559 finding, 495 Inversion frequency, 706 matrix, 40-42 Invertible systems, 109-10, 135, 263 Irrational numbers, 1–2 Kaiser window, 755, 760-62 Kelvin, Lord, 348 Kennelly-Heaviside atmosphere layer, 348 Kirchhoff's laws, 95 current (KCL), 111, 213, 374 voltage (KVL), 111, 374 Kronecker delta functions, 245 bandlimited interpolation of, 787-88 L-ary digital signals, 799 L'Hôpital's rule, 58, 211, 690 Lagrange, Louis de, 347, 612, 613 Laplace transform, 167, 330-487, 721 bilateral. See Bilateral Laplace transform differential equation solutions and, 346-48, 360-73 electrical network analysis and, 373-85, 467 existence of, 336-37 Fourier transform connection with, 699-701, 866 intuitive interpretation of, 367-69 inverse, 549, 938-39 properties of, 349-62 stability of, 371-74 state equation solutions by, 927-33 system realization and, 388-404 unilateral, 333-36, 337, 338, 345, 360, 445, 467 z-transform connection with, 488, 489, 491, 563-65 Laplace transform pairs, 333 Laplace, Marquis Pierre-Simon de, 346-47, 611, 612, 613 Leakage, 751, 753-55, 763, 805-6 Left half plane (LHP), 91, 198-99, 202, 211, 223, 435 Left shift, 71, 73, 130, 134, 503, 509, 510, 512 Left-sided sequences, 555-56 Legendre Fourier series, 656-57 Leibniz, Gottfried Wilhelm, 801 Linear convolution, 821 Linear dashpots, 115 Linear phase distortionless transmission and, 725, 881 generalized, 726-27 ideal, 725, 727

Linear phase (continued) physical description of, 707-9 physical explanation of, 870-71 Linear springs, 114 Linear systems, 97-101, 134 heuristic understanding of, 722-23 response of, 98-100 Linear time-invariant continuous-time (LTIC) systems. See Continuous-time systems Linear time-invariant discrete-time (LTID) systems. See Discrete-time systems Linear time-invariant (LTI) systems, 103, 194-95 Linear time-invariant discrete-time (LTID) systems, 879-80 Linear time-varying systems, 103 Linear transformation of vectors, 36, 939-47, 961 Linearity of the bilateral Laplace transform, 451 of the bilateral z-transform, 559 concept of, 97-98 of the discrete Fourier transform, 818, 824 of the discrete-time Fourier transform, 867 of discrete-time systems, 262 of the Fourier transform, 686-87, 824 of the Laplace transform, 331-32 of the z-transform, 489 Log magnitude, 27, 422-24 Loop currents continuous-time systems and, 159-63, 175 Laplace transform and, 375 Lower sideband (LSB), 738-39, 747 Lowpass filters, 439-41, 540-42 ideal, 730, 784-85, 788-89, 882-83 poles and zeros of H(s) and, 436–45 M-files, 212-20 function, 214-15 script, 213-14, 218 Maclaurin series, 6, 55 Magnitude response. See Amplitude response Marginally stable systems continuous-time, 198-200, 203, 211, 222-24 discrete-time, 301-2, 304, 314 Laplace transform, 373 signal transmission and, 721 z-transform, 519 Mathematical models of systems, 95-96, 125 MATLAB on Butterworth filters, 459-63 calculator operations in, 43-45 on continuous-time filters, 455-63 on discrete Fourier transform, 827-34

on discrete-time Fourier series and transform, 889–97 on discrete-time systems/signals, 306–12

elementary operations in, 42-53 on filtering, 308-10 Fourier series applications in, 661-67 Fourier transform topics in, 755-62 frequency response plots, 531-32 on functions, 126-33 impulse invariance, 553 impulse response and, 167 on infinite-impulse response filters, 565-74 M-files in, 212-20 matrix operations in, 49-53 multiple magnitude response curves, 544 partial fraction expansion in, 53 periodic functions, 661-63 phase spectrum, 664-67 polynomial roots and, 157 simple plotting in, 46-48 state-space analysis in, 961-69 vector operations in, 45-46 zero-input response and, 157-58 Matrices, 36-42 algebra of, 38-42 characteristic equation of, 909-10, 933 characteristic roots of, 932-33 computing exponential of, 912-13 definitions and properties of, 37-38 derivatives of, 909-10 diagonal, 37 diagonalization of, 943-44 equal, 37 functions of, 911-12 identity, 37 impulse response, 938 integrals of. 909-10 inversion of, 40-42 MATLAB operations, 49-53 nonsingular, 41 square, 36, 37, 41 state transition, 936 symmetric, 37 transpose of, 37-38 zero, 37 Matrix exponentials, 968-69 Matrix exponentiation, 968-69 Mechanical systems, 114-18 Memory, systems and, 104, 263 Memoryless systems. See Instantaneous systems Method of residues, 27 Michelson, Albert, 620-21 Minimum phase systems, 435, 436 Modified partial fractions, 35, 496 Modulation, 713-14, 736-49 amplitude, 711-13, 736, 742-46, 762 angle, 736, 763 of the discrete-time Fourier transform, 872

double-sideband, suppressed-carrier, 737-41, 742, 746-49 pulse-amplitude, 796 pulse-code, 796, 799 pulse-position, 796 pulse-width, 796 single-sideband, 746-49 Moment of inertia, 116-18 Monotonic exponentials, 20-22, 90, 91, 134 Multiple inputs, 178, 287-88 Multiple-input, multiple-output (MIMO) systems, 98, 125,908 Multiplication bilateral z-transform and, 560 of complex numbers, 12-14 discrete-time Fourier transform and, 869 of a function by an impulse, 87 matrix. 38-40 scalar, 38, 400-1, 505 z-transform and, 506-7 Natural binary code (NBC), 799 Natural modes. See Characteristic modes Natural numbers, 1 Natural response difference equations and, 298 differential equations and, 196 Negative feedback, 406 Negative frequency, 626-28 Negative numbers, 1-3, 45 Neper frequency, 91 Neutral equilibrium, 197, 198 Newton, Sir Isaac, 2, 346-47 Noise, 66, 151, 371, 417, 791, 797-99 Nonanticipative systems. See Causal systems Non-bandlimited signals, 792 Noncausal signals, 81 Noncausal systems, 104-7, 135, 263 properties of, 104-6 reasons for studying, 106-7 Non-invertible systems, 109-10, 135, 263 Non-inverting amplifiers, 382 Nonlinear systems, 97-101, 134 Nonsingular matrices, 41 Non-uniqueness, 533 Normal-form equations, 915 Norton theorem, 375 Notch filters, 441-43, 540, 545-46. See also Bandstop filters Numerical integration, 131-33 Nyquist interval, 778, 779 Nyquist rate, 778-81, 788-89, 792, 795, 821 Nyquist samples, 778, 781, 782, 788, 792

Observability. *See* controllability/observability Octave, 422 Odd component of a signals, 93-95 Odd functions, 92-95, 134 Operational amplifiers, 382-83, 399, 467 Ordinary numbers, 1-5 Orthogonal signal space, 649-50 Orthogonal signals, 668 energy of the sum of, 647 signal representation by set, 647-59 Orthogonal vector space, 647-48 Orthogonality, 622 Orthonormal sets, 649 Oscillators, 203 Output, 64, 97 Output equations, 122, 124, 908, 930, 941 Overdamped systems, 409-10 Paley-Wiener criterion, 444, 731-32, 788 Parallel realization, 393-94, 525-26, 921, 924-25 Parallel systems, 190, 387 Parseval's theorem, 632, 651-52, 734-35, 755, 758-59, 876-78 Partial fractions expansion of, 25-35, 53 inverse transform by partial fraction expansion and tables, 495-98 Laplace transform and, 338-39, 341, 344, 362, 394, 395, 419, 454 modified, 35 z-transform, 499 Passbands, 441, 444-45, 748, 755 Peak time, 409-10 Percent overshoot (PO), 409-10 Periodic (circular) convolution, 819-20 of the discrete-time Fourier transform, 875 Periodic extension of the Fourier spectrum, 848-55 properties of, 80-81 Periodic functions Fourier spectra as, 858 MATLAB on, 661-63 Periodic gate function, 853-55 Periodic signals, 133, 637-40 discrete-time Fourier series and, 846-47 Fourier spectra of, 848-55 Fourier transform of, 695-96 properties of, 78-82 and trigonometric Fourier series, 593-612, 661 Periods fundamental, 79, 133, 239-40, 593, 595, 846 sinusoid, 16 Phase response, 413-25, 427-35, 439, 467 Phase spectrum, 598, 607, 617-18, 707, 848 MATLAB on, 664-67 using principal values, 709-10

Phase-plane analysis, 125, 909 Phasors, 18-20 Physical systems. See Causal systems Picket fence effect, 807 Pickoff nodes, 190, 254-55, 396 Pingala, 801 Pointwise convergent series, 613 Polar coordinates, 5-6 Polar form, 8-15 arithmetical operations in, 12-15 sinusoids and, 18 Pole-zero location, 538-47 Pole-zero plots, 566-68 Poles complex, 395, 432, 497, 542 controlling gain by, 540 first-order, 424-27 gain enhancement by, 437-38 H(s), filter design and, 436–45 at the origin, 422-23 repeated, 395, 525, 926 in the right half plane, 371, 435-36 second-order, 426-35 wall of, 439-41, 542 Polynomial expansion, 458-59 Polynomial roots, 157, 572 Positive feedback, 406 Power series, 55 Power signals, 67, 82, 134, 239-40. See also Signal power Power, determining, 68-69 matrix, 912-13 Powers, of complex numbers, 13-16 Practical filters, 730-33, 882-83 Preece, Sir William, 349 Prewarping, 570-71 Principal values of the angle, 9 phase spectrum using, 709-10 Proper functions, 25-27 Pulse-amplitude modulation (PAM), 796 Pulse-code modulation (PCM), 796, 799 Pulse dispersion, 209 Pulse-position modulation (PPM), 796 Pulse-width modulation (PWM), 796 Pupin, M., 348 Pythagoras, 2

Quadratic equations, 58 Quadratic factors, 29–30 for the Laplace transform, 341–42 for the *z*-transform, 497 Quantization, 799, 831–34 Quantized levels, 799 Radian frequency, 16, 91, 594 Random signals, 82, 134 Rational functions, 25-29, 338 Real numbers, 2-7, 43 Real time, 105-6 Rectangular pulses, 863-65 Rectangular spectrum, 865-66 Rectangular windows, 751, 753-55, 763 Reflection property, 868-69 Region of convergence (ROC) for continuous-time systems, 193 for finite-duration signals, 333 for the Laplace transform, 331-33, 337, 347, 448, 449, 454-55, 467 for the z-transform, 489-91, 555-58, 561 Relational operators, 128-29 Repeated factors of Q(x), 31–32 Repeated poles, 395, 525, 926 Repeated roots of continuous-time systems, 154-56, 195, 198, 202, 223 of discrete-time systems, 270, 273-74, 297, 301, 313-14 Resonance phenomenon, 163, 204, 205, 210-12, 305 Right half plane (RHP), 91, 198, 200-3, 223, 371, 435-36 Right shift, 71-72, 131, 134, 501-4, 509, 510 Right-sided sequences, 555-56 Rise time, 206-7, 405, 409-10, 411 RLC networks, 914, 916-18 RMS value, 68-69, 70 Rolloff rate, 753, 754 Roots complex, 154-56, 274-76 of complex numbers, 11-15 polynomial, 157, 572 repeated. See Repeated roots unrepeated, 198, 202, 223, 301, 314 Rotational systems, 116-19 Rotational mass. See Moment of inertia Row vectors, 36, 45, 48-50

Sales estimate example, 255–56 Sallen–Key circuit, 383, 384, 461–62, 463, 466 Sampled continuous-time sinusoids, 527–31 Sampling, 776–844 practical, 781–84 properties of, 87–88, 134 signal reconstruction and, 785–99 spectral, 759–60, 802–4 *See also* Discrete Fourier transform; Fast-Fourier transform Sampling interval, 550–54 Sampling rate, 243–44, 536–37 Sampling theorem, 537, 776–84, 834–35 applications of, 796–99 spectral, 802 Savings account example, 253–55 Scalar multiplication, 38, 400-1, 505, 509, 520 Scaling, 97-98, 130 of the Fourier transform, 705-6, 755, 757, 762 of the Laplace transform, 357 See also Time scaling Script M-files, 213-14, 216, 218 Selective-filtering method, 748-49 Sharp cutoff filters, 748 Shifting of the bilateral z-transform, 559 of the convolution integral, 171-72 of the convolution sum, 283 of discrete-time signals, 240 See also Frequency shifting; Time shifting Sideband, 746-49 sifting. See Sampling Signal distortion, 723-25 Signal energy, 65-66, 70, 131-33, 733-36, 757, 877-78. See also Energy signals Signal power, 65-67, 133. See also Power signals Signal reconstruction, 785-99. See also Interpolation Signal-to-noise power ratio, 66 Signal transmission, 721-29 Signals, 64-91, 133-34 analog. See Analog signals anti-causal, 81 aperiodic. See Aperiodic signals audio, 713-14, 725, 746 bandlimited, 533, 788, 792, 802 baseband, 737-40, 746-47, 749 basis, 651, 655, 668 causal, 81, 83, 134 classification of, 78-82, 133-34 comparison and components of, 643-45 complex, 94-95 continuous time. See continuous-time signals defined, 65 deterministic, 83, 134 digital. See Digital signals discrete time. See Discrete-time signals energy, 82, 134, 239-40 error, 650-51 even components of, 93-95 everlasting, 81, 134 finite-duration, 333 modulating, 711, 737-39 non-bandlimited, 792 noncausal, 81 odd components of, 93-95 orthogonal. See Orthogonal signals periodic. See Periodic signals phantoms of, 189 power, 82, 134, 239-40 random, 82, 134 size of, 64-70, 133

sketching, 20-23 time reversal of, 77 time limited, 802, 805, 807 two-dimensional view of, 732-33 useful models, 82-91 useful operations, 71-78 as vectors, 641-59 video, 725, 749 Sinc function, 757 Single-input, single-output (SISO) systems, 98, 125, 908 Single-sideband (SSB) modulation, 746-49 Singularity functions, 89 Sinusoidal input causal. See Causal sinusoidal input continuous-time systems and, 208 discrete-time systems and, 309 frequency response and, 413-17 steady-state response to causal sinusoidal input, 418-19 Sinusoids, 16-20, 89-91, 134 addition of, 18-20 apparent frequency of sampled, 795-96 compression and expansion, 76 continuous-time, 251-52, 533-37 discrete-time, 251, 527, 528, 533-37 discrete-time Fourier series of, 849-52 in exponential terms, 20 exponentially varying, 22-23, 80, 134 general condition for aliasing in, 793-96 power of a sum of two equal-frequency, 70 sampled continuous-time, 527-31 verification of aliasing in, 792-93 Sketching signals, 20-23 Sliding-tape method, 290-93 Software realization, 64, 95, 133 Spectral density, 688 Spectral folding. See Aliasing Spectral interpolation, 804 Spectral resolution, 807 Spectral sampling, 759-60, 802 Spectral sampling theorem, 802 Spectral spreading, 751-53, 755, 763, 807 Springs linear, 114 torsional, 116-17 Square matrices, 36, 37, 41 Square roots of negative numbers, 2-4 Stability BIBO. See Bounded-input/bounded-output stability of continuous-time systems, 196-203, 222-23 of discrete-time systems, 263, 298-305, 314 of the Laplace transform, 371-74 Internal. See Internal stability of the z-transform, 518-19 marginal. See marginally stable systems

Stable equilibrium, 196-97 Stable systems, 110, 263 State equations, 122-25, 135, 908-9, 969 alternative procedure to determine, 918-19 diagonal form of, 944-47 solution of, 926-39 for the state vector, 941-42 systematic procedure for determining, 913-26 time-domain method to solve, 936-37 State transition matrix (STM), 936 State variables, 121-25, 135, 908, 969 State vectors, 927-30, 961 linear transformation of, 941-42 State-space analysis, 908-73 controllability/observability in, 947-53, 961 of discrete-time systems, 953-64 in MATLAB, 961-69 transfer function and, 920-24 transfer function matrix, 931-32 State-space description of a system, 121-25 Steady-state error, 409-11 Steady-state response in continuous-time systems, 418-19 in discrete-time systems, 527 Stem plots, 306-8 Step input, 407-10 Stiffness of linear springs, 114 of torsional springs, 116-17 Stopbands, 441, 444, 445, 456, 457, 459, 460, 463, 755 Subcarriers, 749 Subtraction of complex numbers, 11-12 Superposition, 98, 99, 100, 123, 134 continuous-time systems and, 168, 170, 178 discrete-time systems and, 287 Symmetric matrices, 37 Symmetry conjugate. See Conjugate symmetry exponential Fourier series and, 630-32 trigonometric Fourier series and, 607-8 Synchronous demodulation, 743-44, 747 System realization, 388-404, 519-25, 567 cascade, 394, 525-26, 919-20, 923 of complex conjugate poles, 395 direct. See Direct form I realization; Direct form II realization differences in performance, 525-26 hardware, 64, 95, 133 parallel. See Parallel realization software, 64, 95, 129 Systems, 95-133, 134-35 accumulator, 259, 295, 519 analog, 109, 135, 261 backward difference, 258, 295, 519, 568-69 BIBO stability, assessing, 110 cascade, 190, 192, 372, 373

causal. See causal systems causality, assessing, 105 classification of, 97-110, 134-35 continuous time. See Continuous-time systems control. See control systems critically damped, 409, 410 data for computing response, 96-97 defined, 64 digital, 78, 135, 261 discrete time. See discrete time systems dynamic, 103-4, 134-35, 263 electrical, 95-96, 111-14 electrical. See Electrical systems electromechanical, 118-19 feedback. See feedback systems finite-memory, 104 identity, 109, 192, 263 input-output description, 111-19 instantaneous, 103-4, 263 interconnected. See interconnected systems invertible, 109-10, 135, 263 linear. See Linear systems mathematical models of, 95-96, 125 mechanical. 114-18 memory and, 104, 263 minimum phase, 435, 436 multiple-input, multiple-output, 98, 125, 908 noncausal, 104-7, 263 non-invertible, 109-10, 135 nonlinear, 97-101, 134 overdamped, 409-10 parallel, 190, 387 phantoms of, 189 properties of, 264-65 rotational, 116-19 single-input, single-output, 98, 125, 908 stable, 110, 263 translational, 114-16 time invariant. See Time-invariant systems time varying. See Time-varying systems two-dimensional view of, 732-33 underdamped, 409 unstable, 110, 263

Tacoma Narrows Bridge failure, 212 Tapered windows, 753–54, 763, 807 Taylor series, 55 *Théorie analytique de la chaleur* (Fourier), 612 Thévenin's theorem, 375, 378, 379 Time constant of continuous-time systems, 205–10, 223 of the exponential, 21–22 filtering and, 207–9 information transmission rate and, 209–10

pulse dispersion and, 209 rise time and, 206–7 Time convolution of the bilateral Laplace transform, 452 of the discrete-time Fourier transform, 875-76 of the Fourier transform, 714-16 of the Laplace transform, 357 of the z-transform, 507-8 Time delay, variation with frequency, 724-25 Time differentiation of the bilateral Laplace transform, 451 of the Fourier transform, 716-18 of the Laplace transform, 354-56 Time integration of the bilateral Laplace transform, 451 of the Fourier transform, 716-18 of the Laplace transform, 356-57 Time inversion, 706 Time reversal, 134 of the bilateral Laplace transform, 452 of the bilateral z-transform, 560 of the convolution integral, 178, 181 described, 76-77 of the discrete-time Fourier transform, 868-69 of discrete-time signals, 242 of the z-transform, 506-7 Time scaling, 77 of the bilateral Laplace transform, 452 described, 73-74 Time shifting, 77, 79 of the bilateral Laplace transform, 451 of the convolution integral, 178 described, 71-73 of the discrete Fourier transform, 819 of the discrete-time Fourier transform, 870 of the Fourier transform, 707 of the Laplace transform, 349-51 of the z-transform, 501-5, 510 Time-division multiplexing (TDM), 749, 797 Time-domain analysis, 723 of continuous-time systems, 150-236 of discrete-time systems, 237-329 of the Fourier series, 598, 601 of interpolation, 785-88 state equation solution in, 933-39 two-dimensional view and, 732-33 Time-frequency duality, 702-3, 723, 753 Time invariant systems, 134 discrete-time, 262 linear. See Linear time-invariant systems properties of, 102-3 Time-varying systems, 134 discrete-time, 262 linear, 103 properties of, 102-3

Time-limited signals, 802, 805, 807 Torque, 116-18 Torsional dashpots, 116 Torsional springs, 116, 117 Total response of continuous-time systems, 195-96 of discrete-time systems, 297-98 Traité de mécanique céleste (Laplace), 346 Transfer functions, 522 analog filter realization with, 548-49 block diagrams and, 386-88 of continuous-time systems, 193-94, 222 of discrete-time systems, 296-97, 314, 514-15, 567-68 from the frequency response, 435 inadequacy for system description, 953 realization of, 389-99, 401, 524-25 state equations from, 916, 919-26 from state-space representations, 964-65 Translational systems, 114-16 Transpose of a matrix, 37-38 Transposed direct form II (TDFII) realization, 398, 967-69 state equations and, 920-24 z-transform and, 520-22, 525-26 Triangular windows, 751 Trigonometric Fourier series, 640, 652, 657-58, 667, 668 exponential, 621-37, 661 periodic signals and, 593-612, 661 sampling and, 777, 782 symmetry effect on, 607-8 Trigonometric identities, 55-56 Tukey, J. W., 824

Underdamped systems, 409 Uniformly convergent series, 613 Unilateral Laplace transform, 333-36, 337, 338, 345, 360, 445, 467 Unilateral z-transform, 489, 491, 492, 495, 554-55, 559 Uniqueness, 335 Unit delay, 517, 520, 521 Unit-gate function, 689 Unit-impulse function, 133 of discrete-time systems, 246-47, 280, 313 as a generalized function, 88-89 properties of, 86-89 Unit-impulse response of continuous-time systems, 163-68, 170, 189-93, 220-21, 222, 731 convolution with, 171 determining, 221 of discrete-time systems, 277-80, 286, 295, 313 Unit matrices, 37 Unit-step function, 84-86, 88-89 of discrete-time systems, 246-47 relational operators and, 128-30

#### 988 Index

Unit-triangle function, 689-90 Unrepeated roots, 198, 202, 223, 301, 314 Unstable equilibrium, 196-97 Unstable systems, 110, 263 Upper sideband (USB), 737-39, 746-48 Upsampling, 243-44 Vectors, 36-37, 641-59 basis, 648 characteristic, 910 column, 36 components of, 642-43 error, 642 MATLAB operations, 45-46 matrix multiplication by, 40 orthogonal space, 647-48 row, 36, 45, 48-50 signals as, 641-59 state, 927-30, 961 Vestigial sideband (VSB), 749 Video signals, 725, 749 Waveshaping, 615-17 Weber-Fechner law, 421 Width of the convolution integral, 172, 187 of the convolution sum, 283 Window functions, 749-55, 760-62 z-transform, 488-592 bilateral. See Bilateral z-transform difference equation solutions of, 488, 510-19, 574 direct, 488-592 discrete-time Fourier transform and, 866-67, 886-88, 898 existence of, 491-95

inverse. See inverse z-transform

properties of, 501-9 stability of, 518-19 state-space analysis and, 956, 959-65 system realization and, 519-25, 567 time-reversal property, 506-7 time-shifting properties, 501-5 unilateral, 489, 491, 492, 495, 554-55, 559 z-domain differentiation property, 506 z-domain scaling property, 505 Zero matrices, 37 Zero padding, 810-11, 829-30 Zero-input response, 119, 123 of continuous-time systems, 151-63, 195-96, 203, 220-22 described, 98-100 of discrete-time systems, 270-76, 297-301, 309-11 insights into behavior of, 161-63 of the Laplace transform, 363, 368 in oscillators, 203 of the z-transform, 512-13 zero-state response independence from, 161 Zero-order hold (ZOH) filters, 785 Zero-state response, 119, 123 alternate interpretation, 515-18 causality and, 172-73 of continuous-time systems, 151, 161, 168-96, 221-22, 512-16 described, 98-101 of discrete-time systems, 280-98, 308-9, 311, 312, 313 of the Laplace transform, 358, 363, 366-67, 369, 370 zero-input response independence from, 161 Zeros controlling gain by, 540 filter design, 436-45 first-order, 424-27 gain suppression by, 439-40 at the origin, 422-23

second-order, 426-35